


ASSEMBLY INSTRUCTIONS

GZHL-V1

FTLFCR-6007

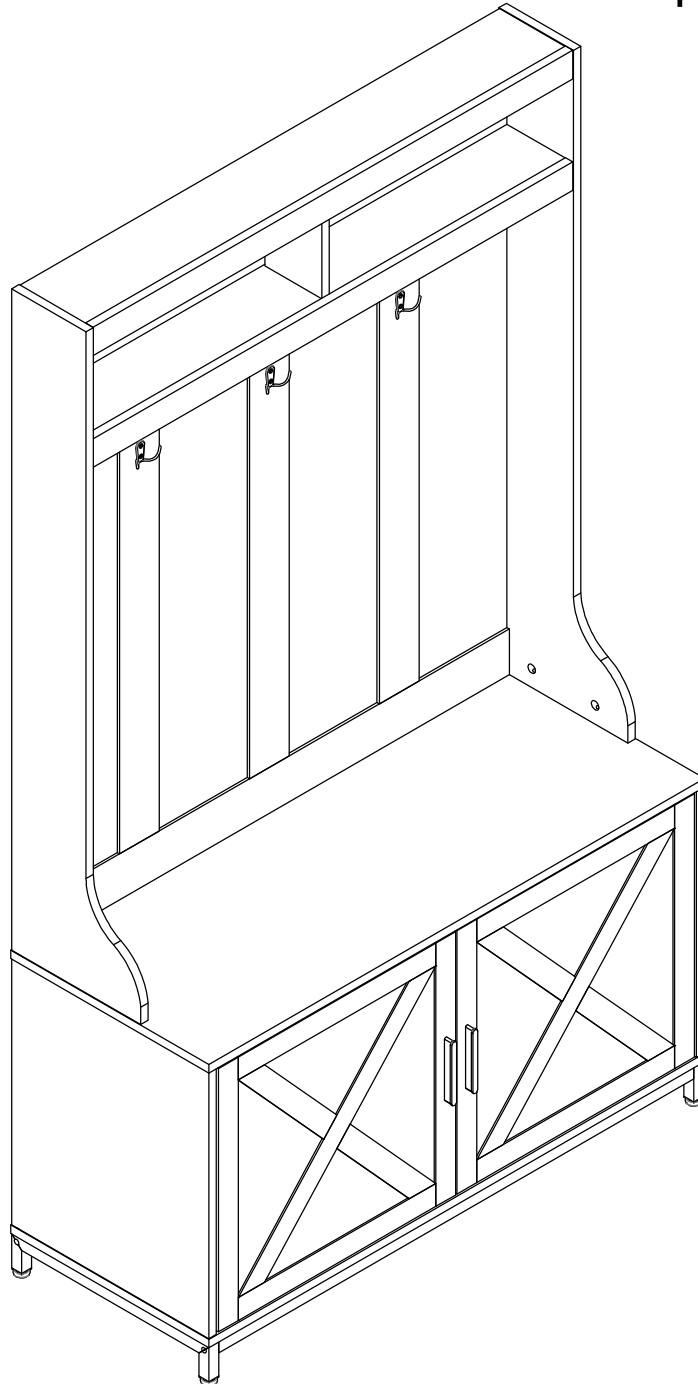


Coat rack


Notice:




1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.

ASSEMBLY INSTRUCTION













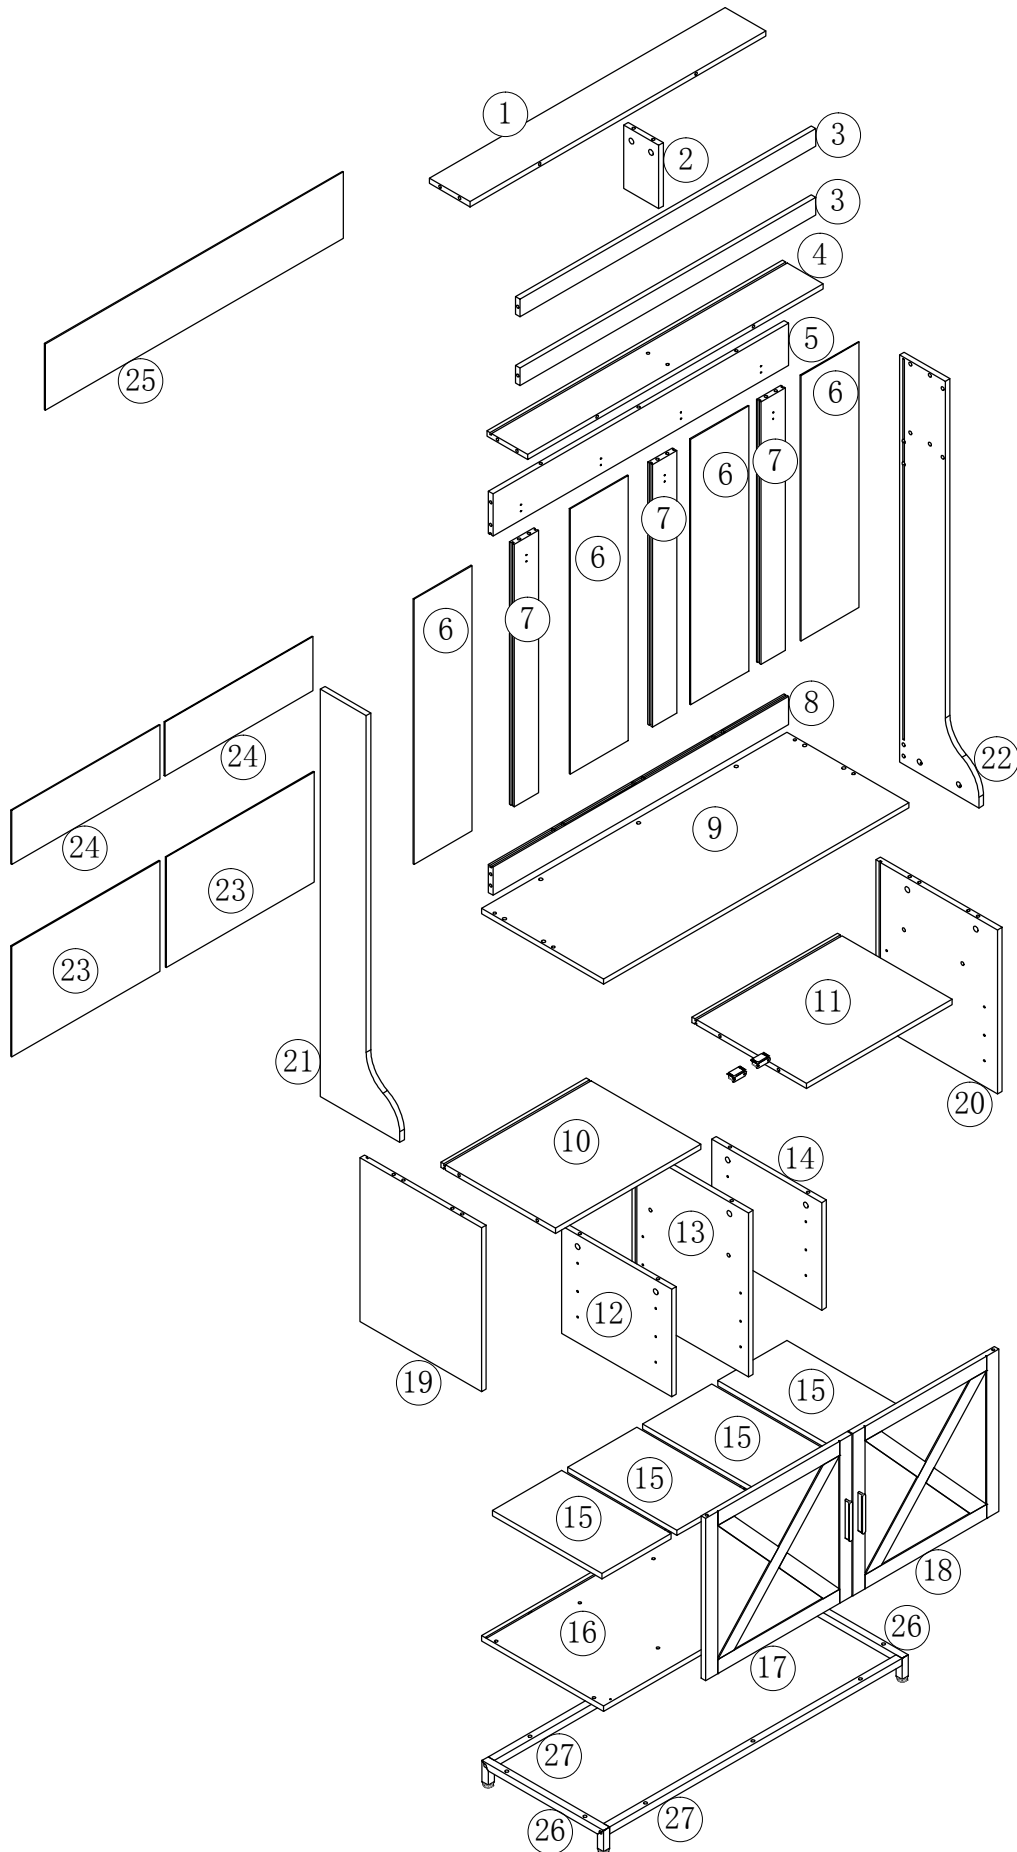


ASSEMBLY INSTRUCTION











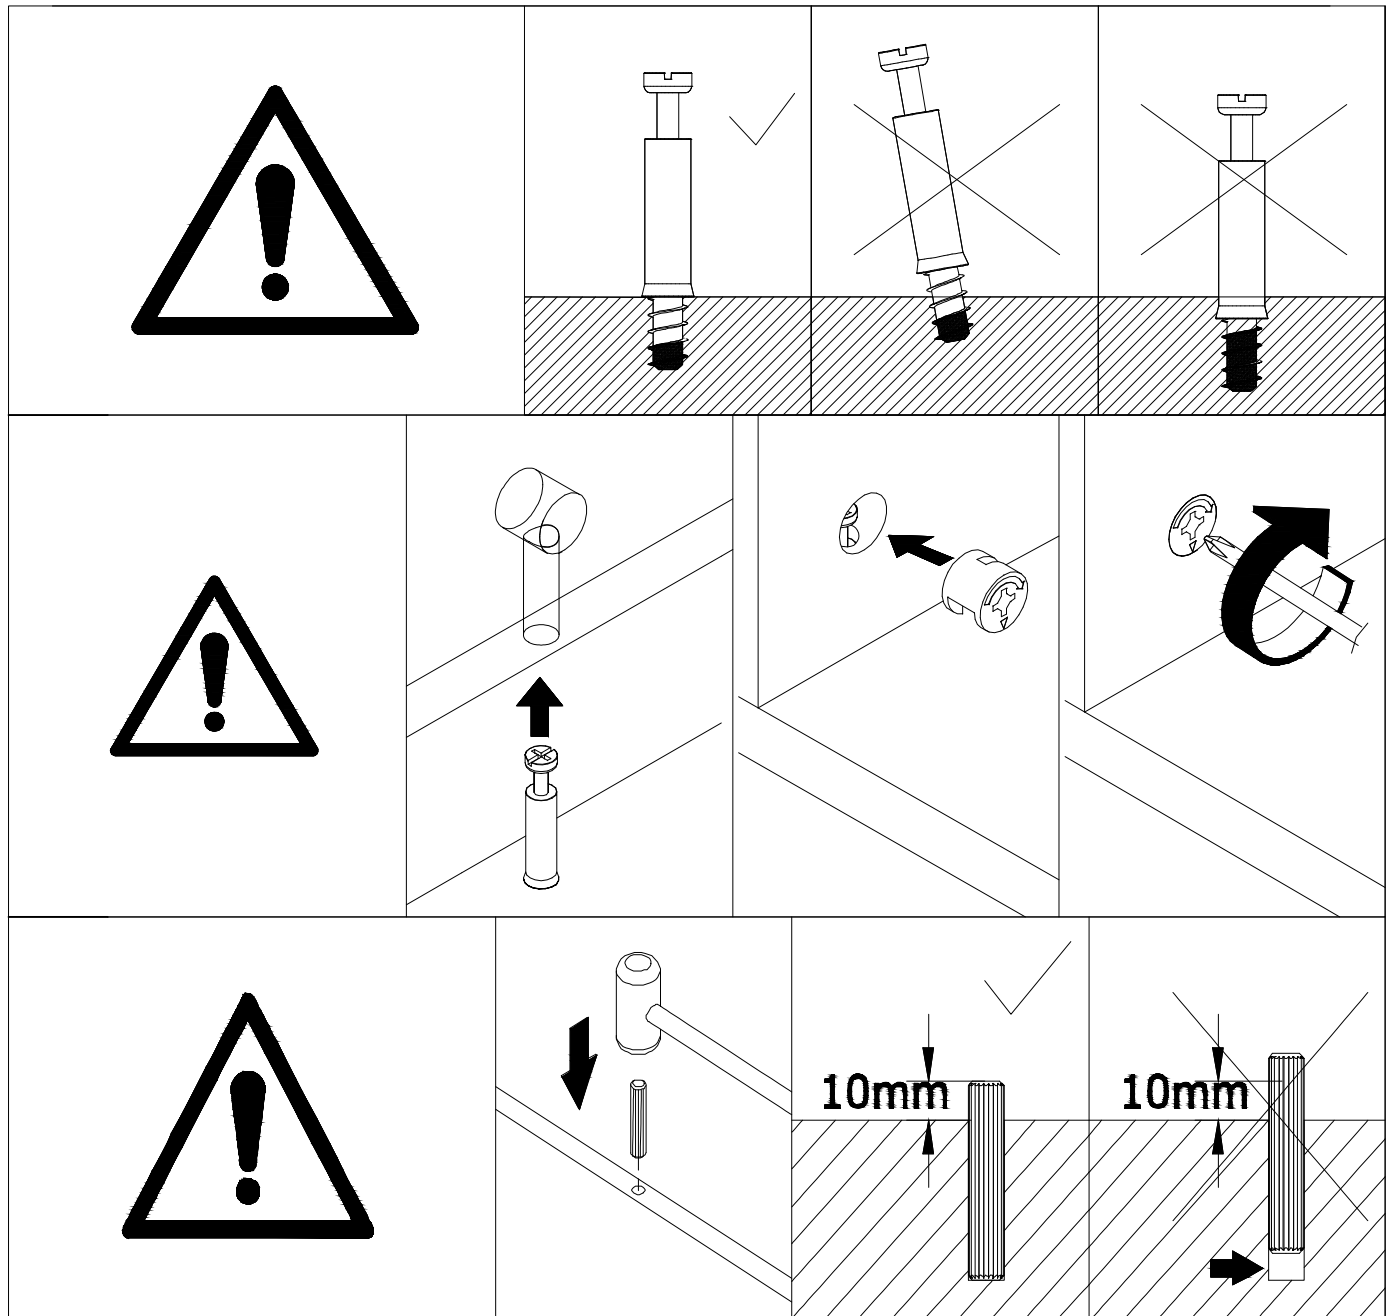


No.	PICTURE		SIZE	QTY	No.	PICTURE		SIZE	QTY		
A			M6*30	10	J				7		
B			M6*40	4	K				16		
C			ST7*40	12	L	 X1	 X1	ST3. 5*14	32		
D	 ∇11	 	M6*40	51	N				4		
E			 ST3. 5*14	14	M	 X2	 X2	 X2	 X2	 X1	1
F			8*35	23							
G			M8	4		 →51				1	
H	 X1	 X4	ST3*14	2							
I	 X1	 X2	M4*18	2		 				1	

ASSEMBLY INSTRUCTION

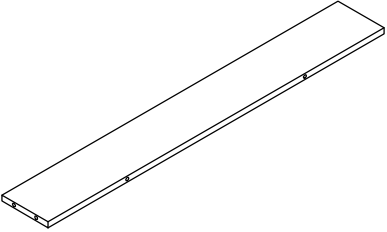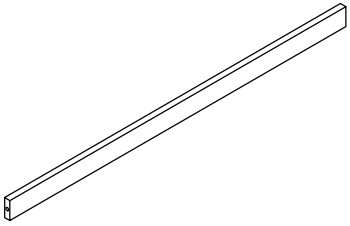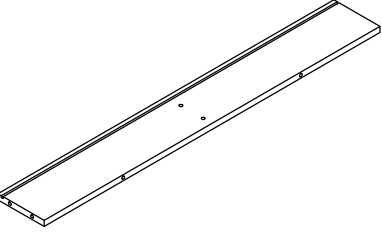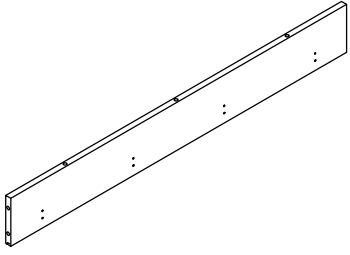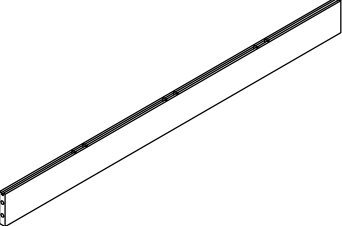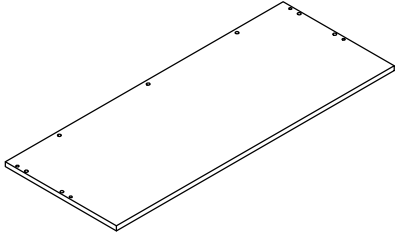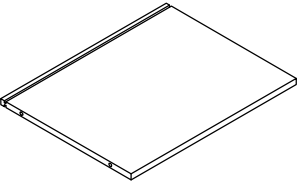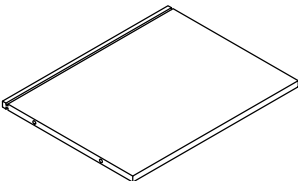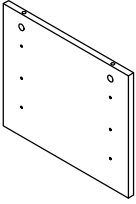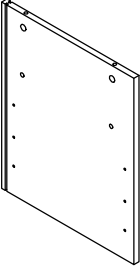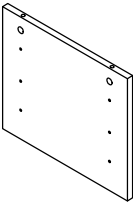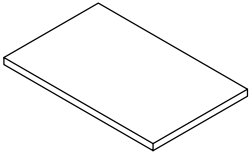
①  X1	②  X1	③  X2
④  X1	⑤  X1	⑥  X4
⑦  X3	⑧  X1	⑨  X1
⑩  X1	⑪  X1	⑫  X1
⑬  X1	⑭  X1	⑮  X4

ASSEMBLY INSTRUCTION

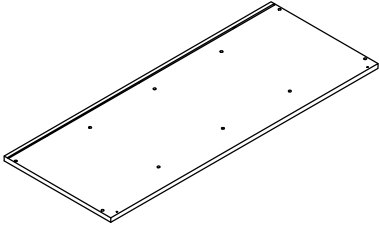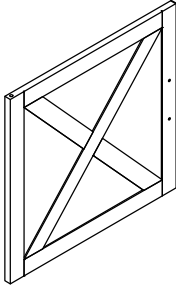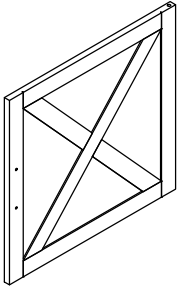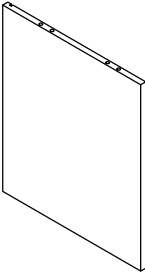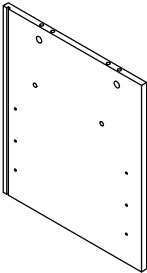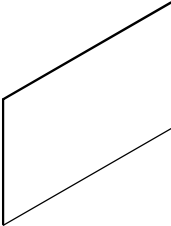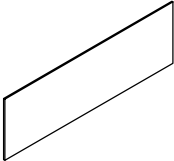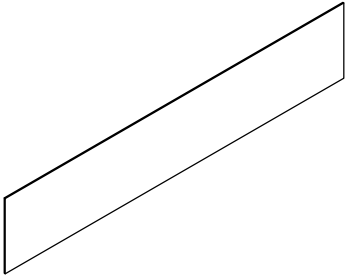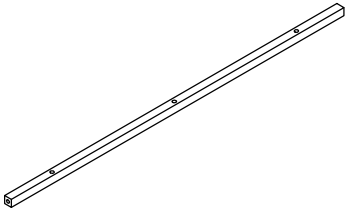16  X1	17  X1	18  X1
19  X1	20  X1	21  X1
22  X1	23  X2	24  X2
25  X1	26  X2	27  X2

ASSEMBLY INSTRUCTION

STEP 1

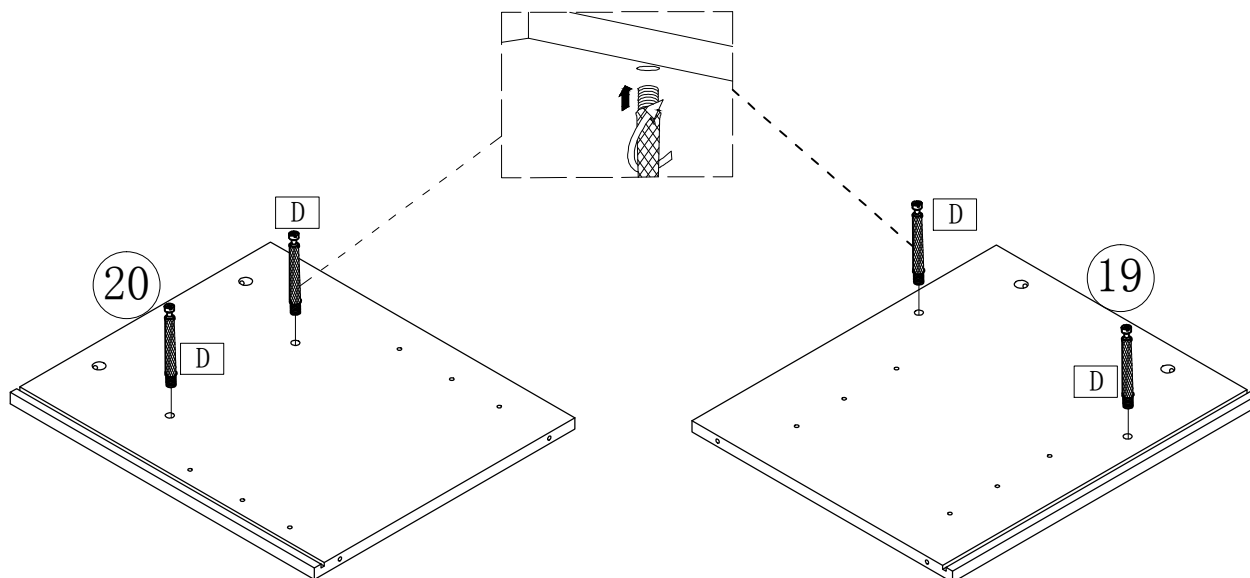


D M6*40



X4

STEP 2

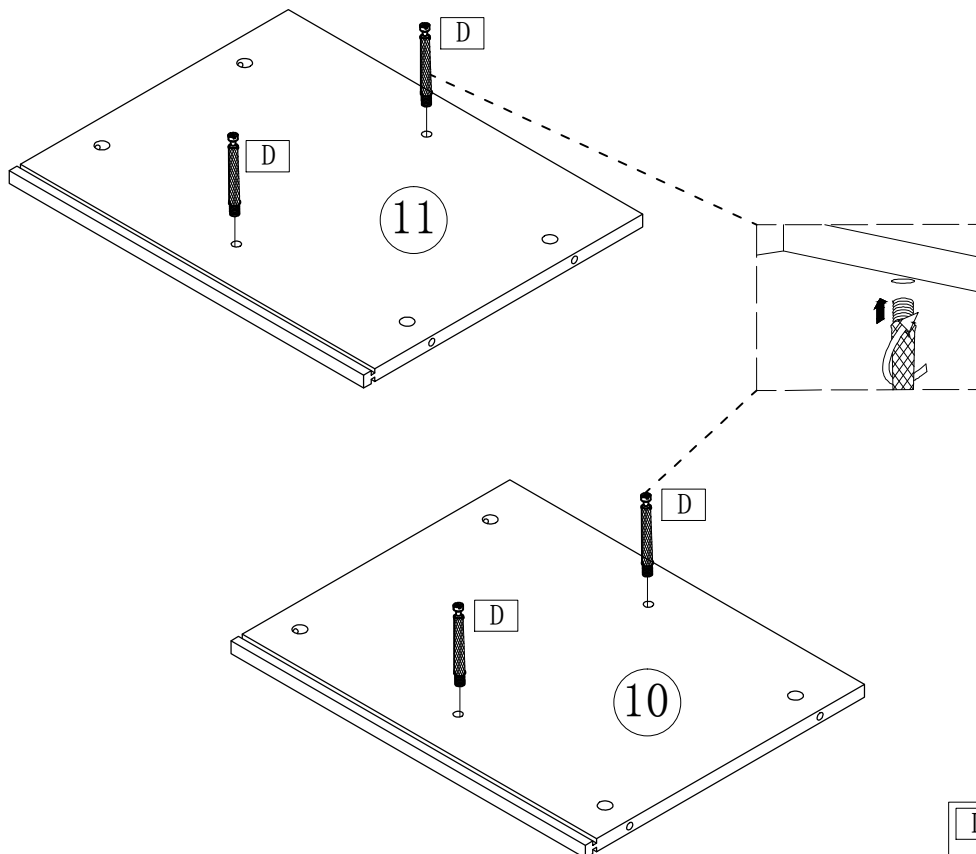

D M6*40




X4


ASSEMBLY INSTRUCTION

STEP 3

When installing the No. 13 board, it should be noted that the reverse side also needs to install D screws at the same time.

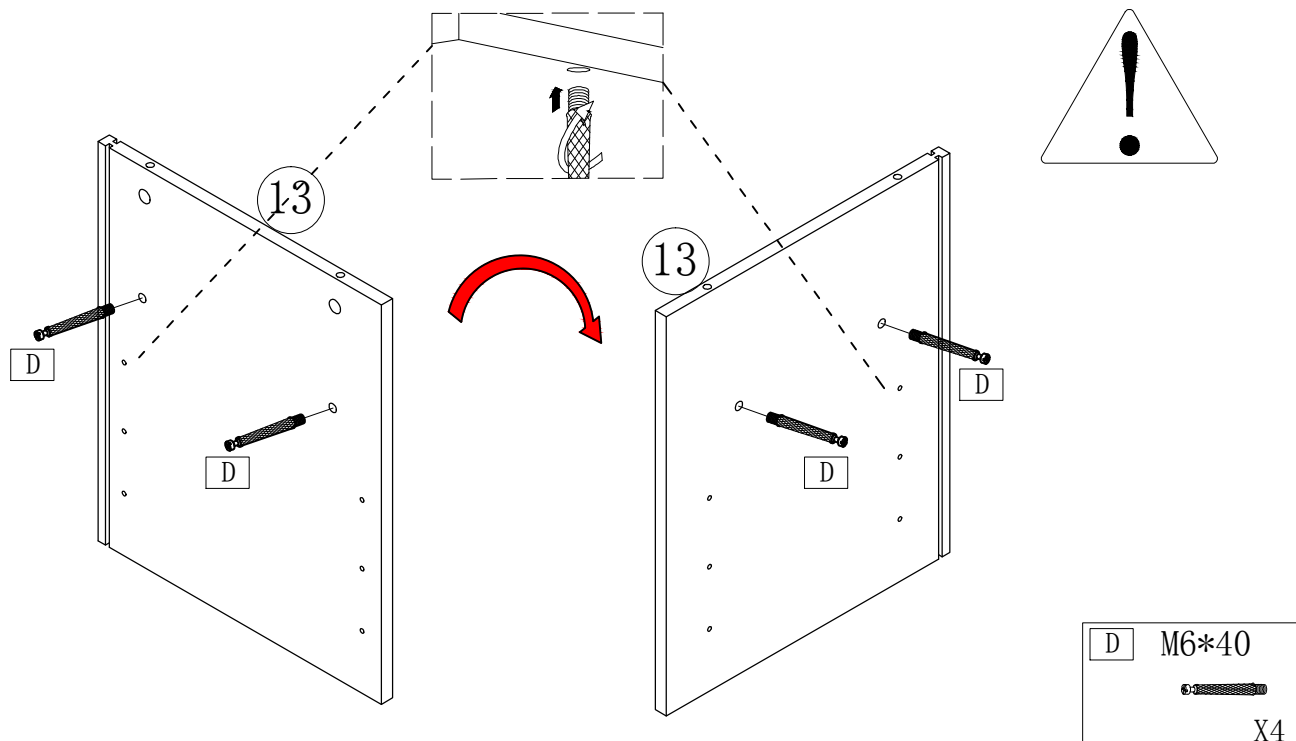


STEP 4

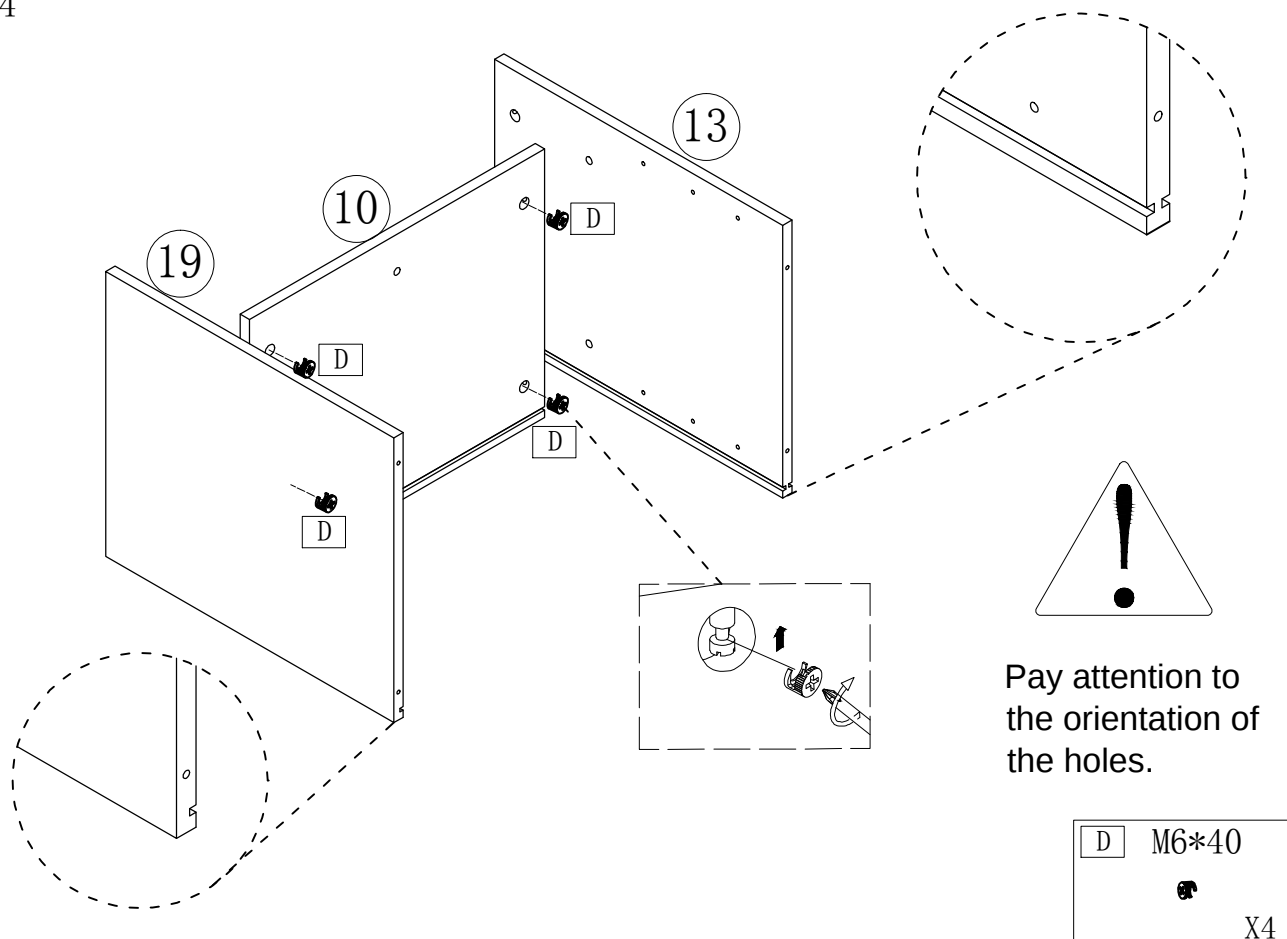


ASSEMBLY INSTRUCTION

STEP 5

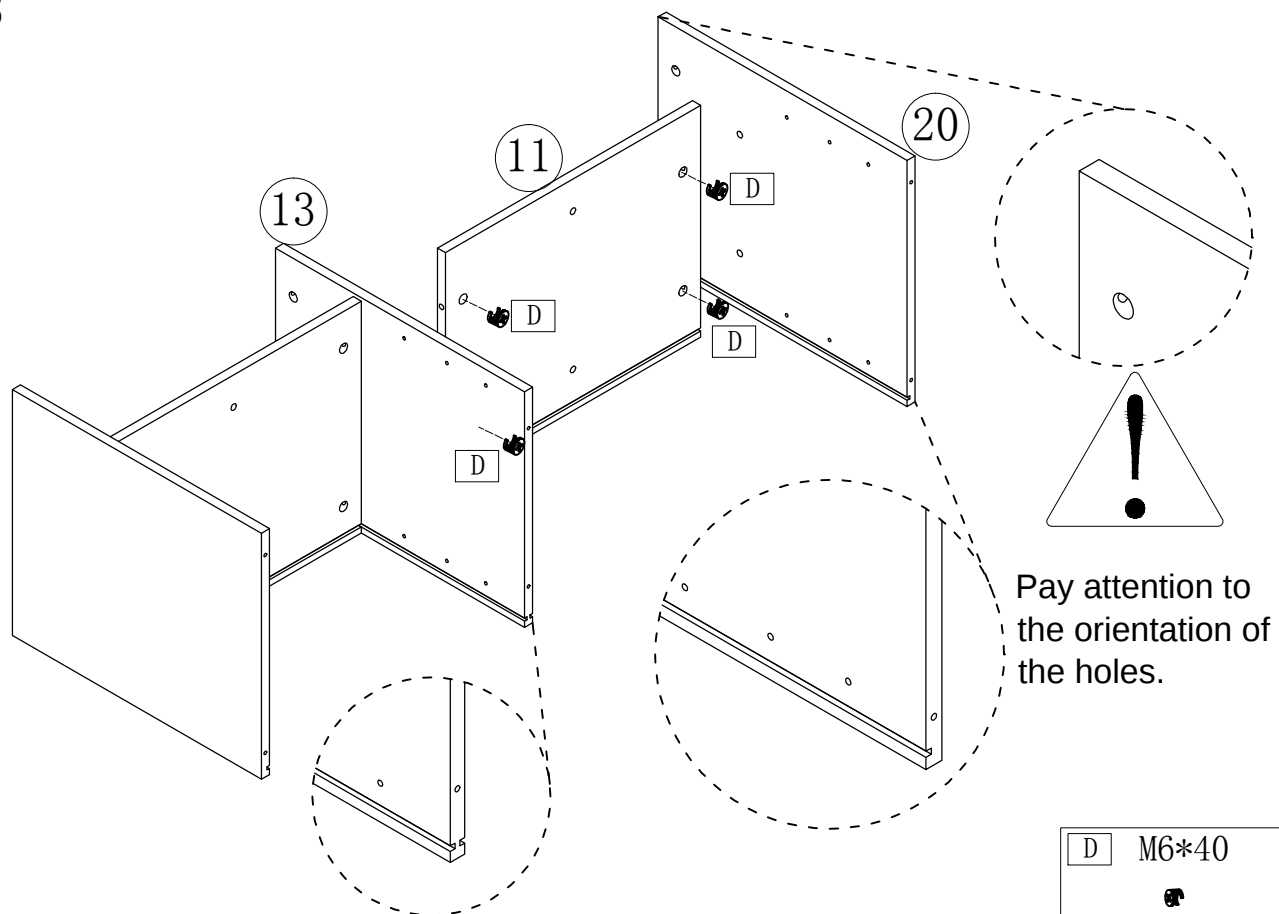


STEP 6

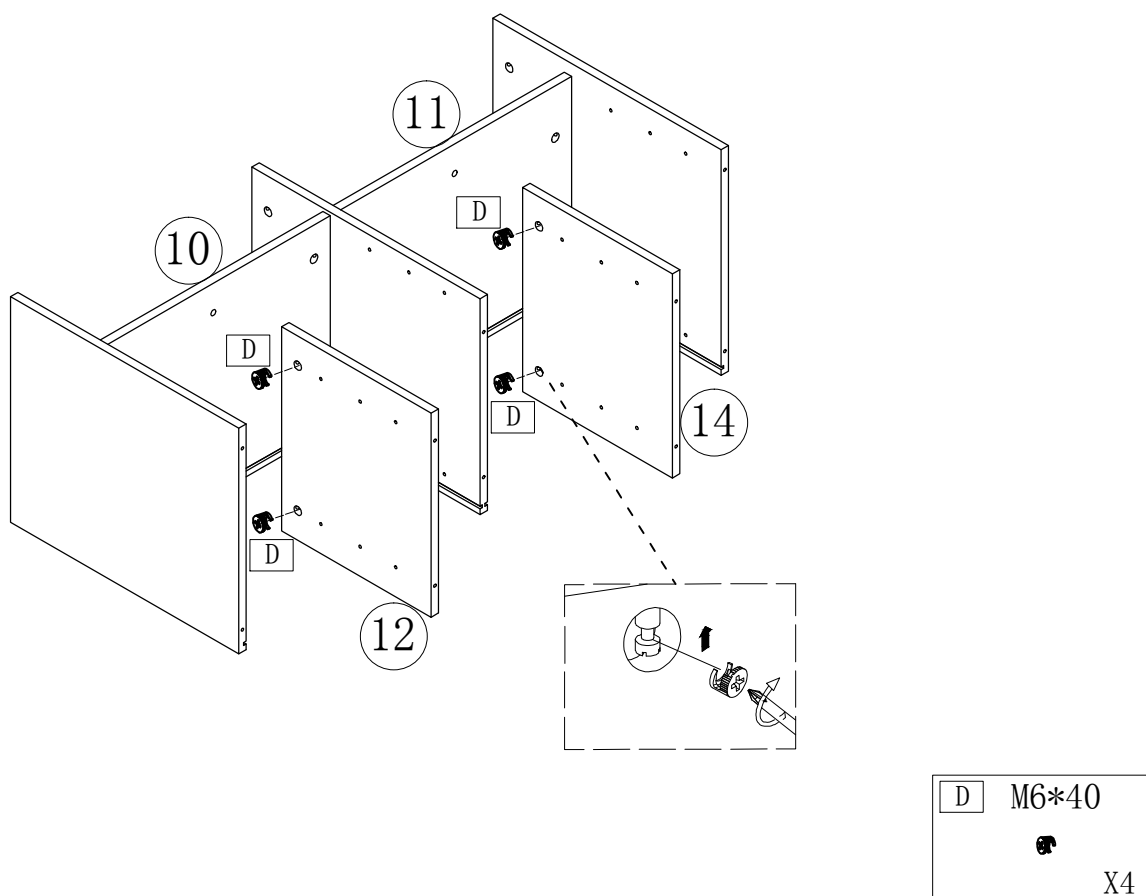


ASSEMBLY INSTRUCTION


STEP 7

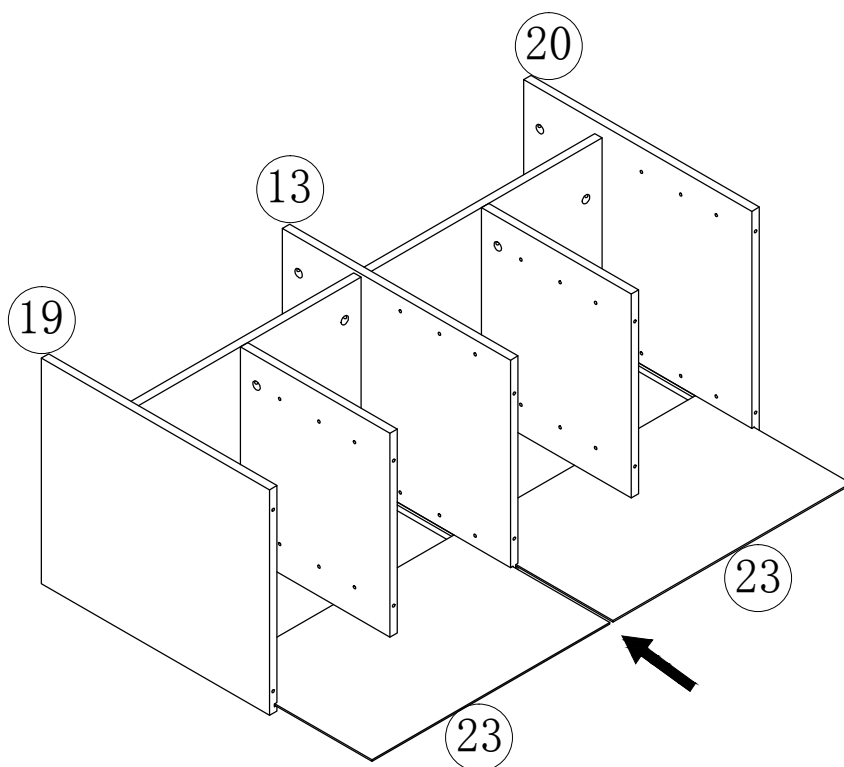

STEP 8

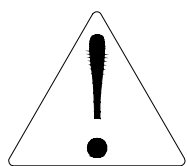


Pay attention to the orientation of the holes.

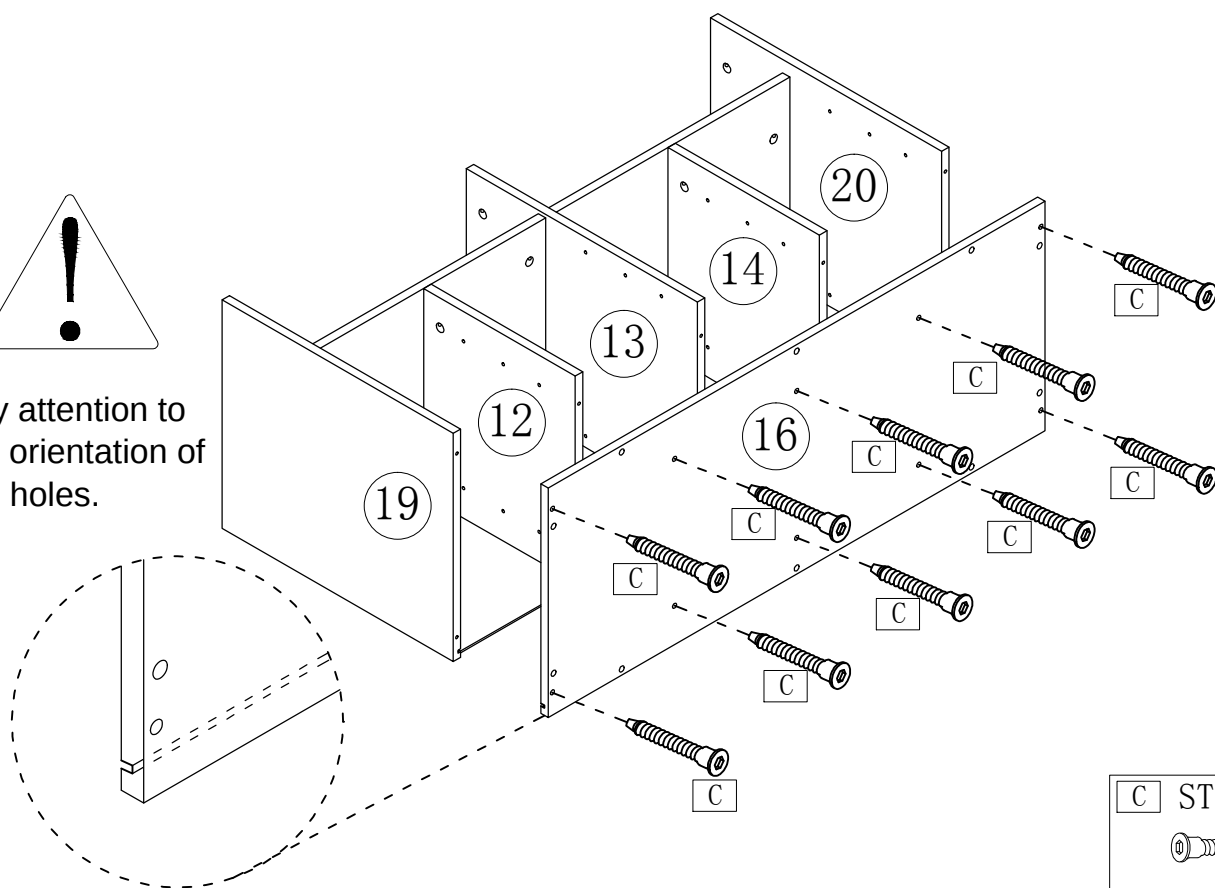


ASSEMBLY INSTRUCTION

STEP 9

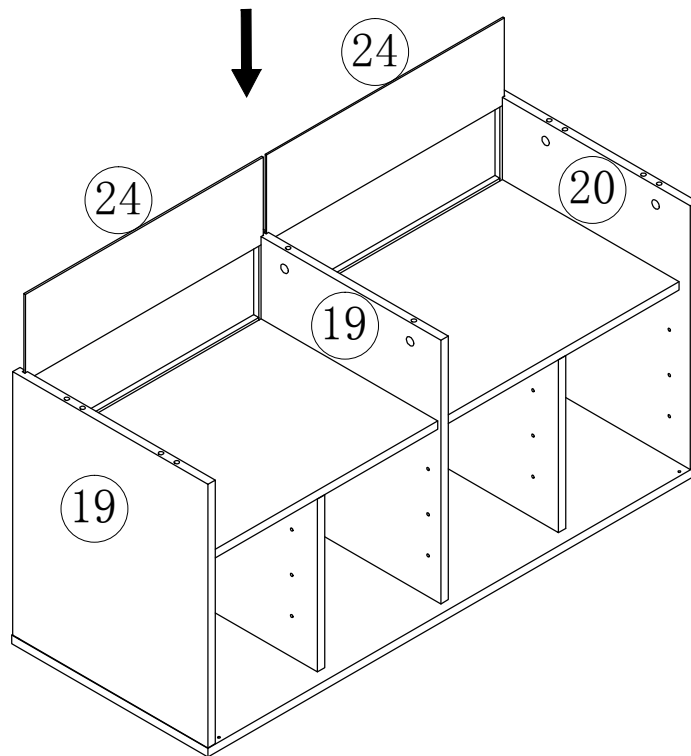


STEP 10

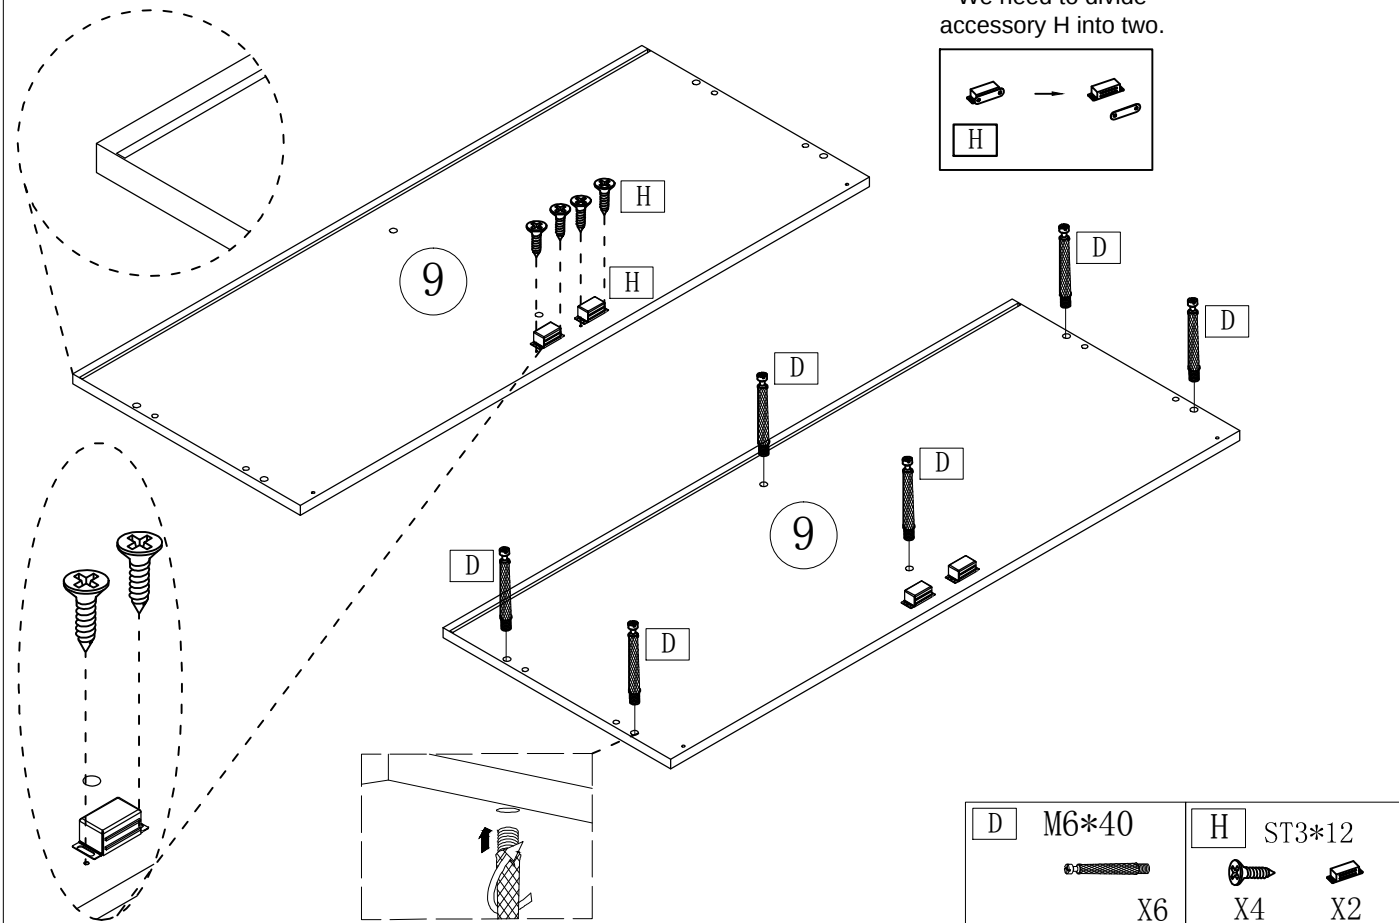


ASSEMBLY INSTRUCTION

STEP 11

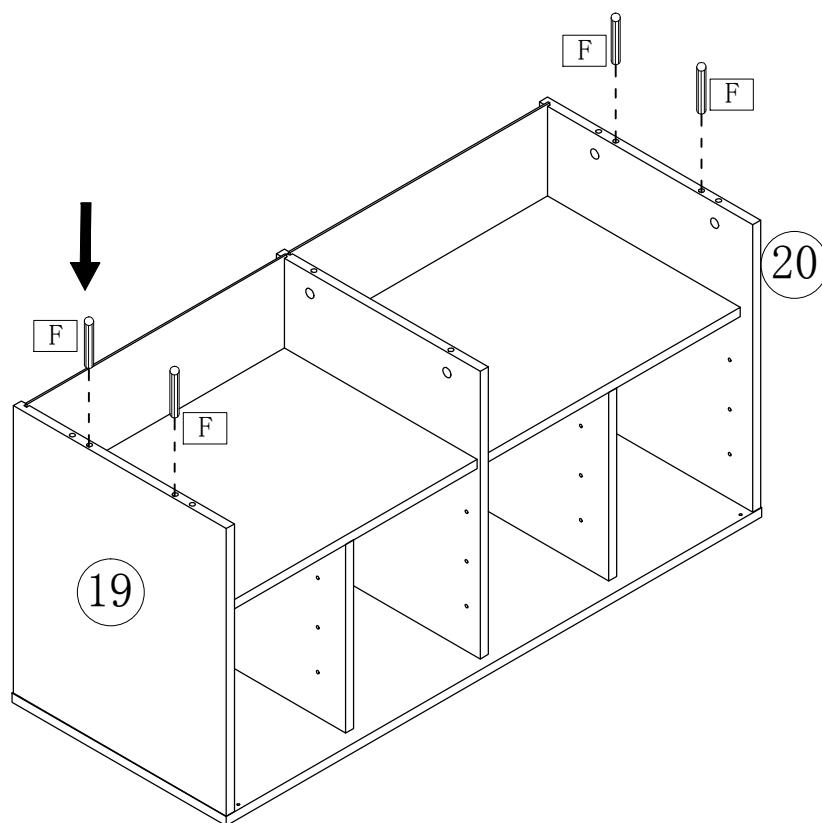

F	8*35
	
X4	


STEP 12

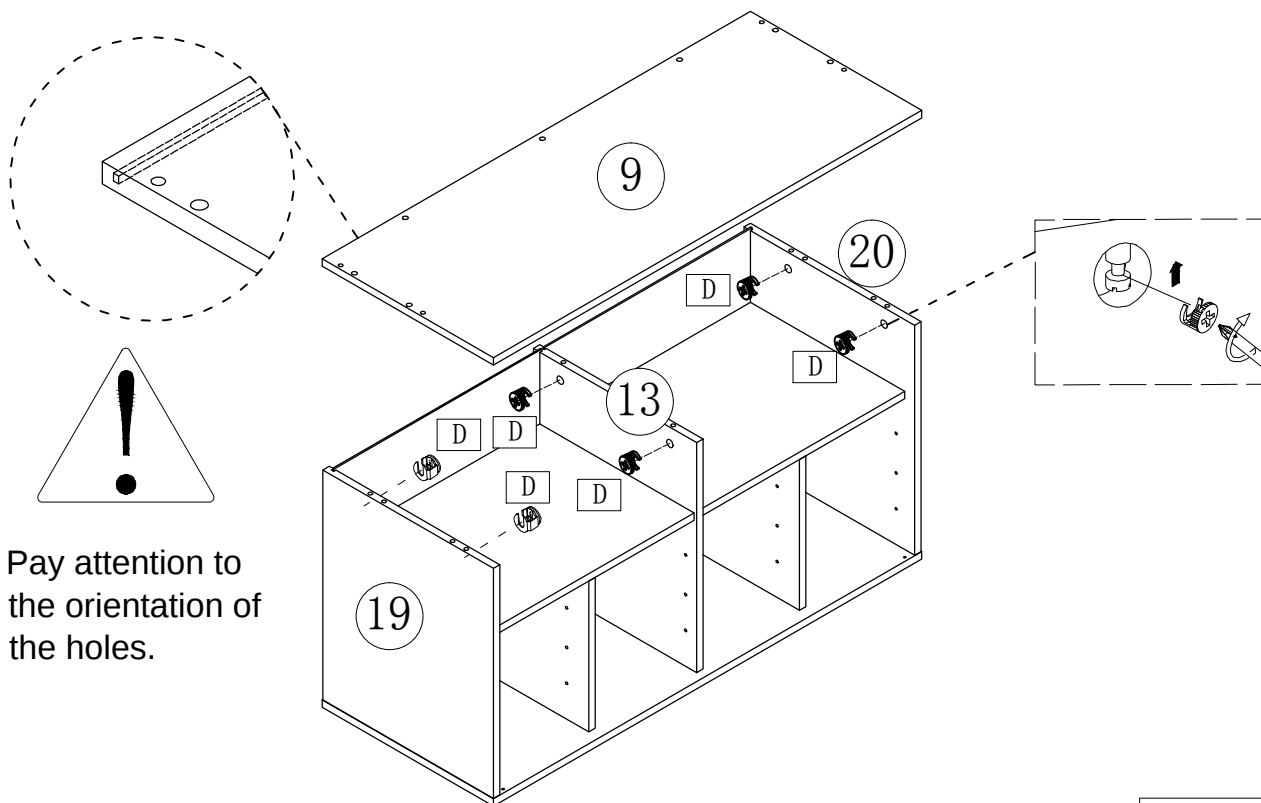


D	M6*40
	
X6	

ASSEMBLY INSTRUCTION

STEP 13

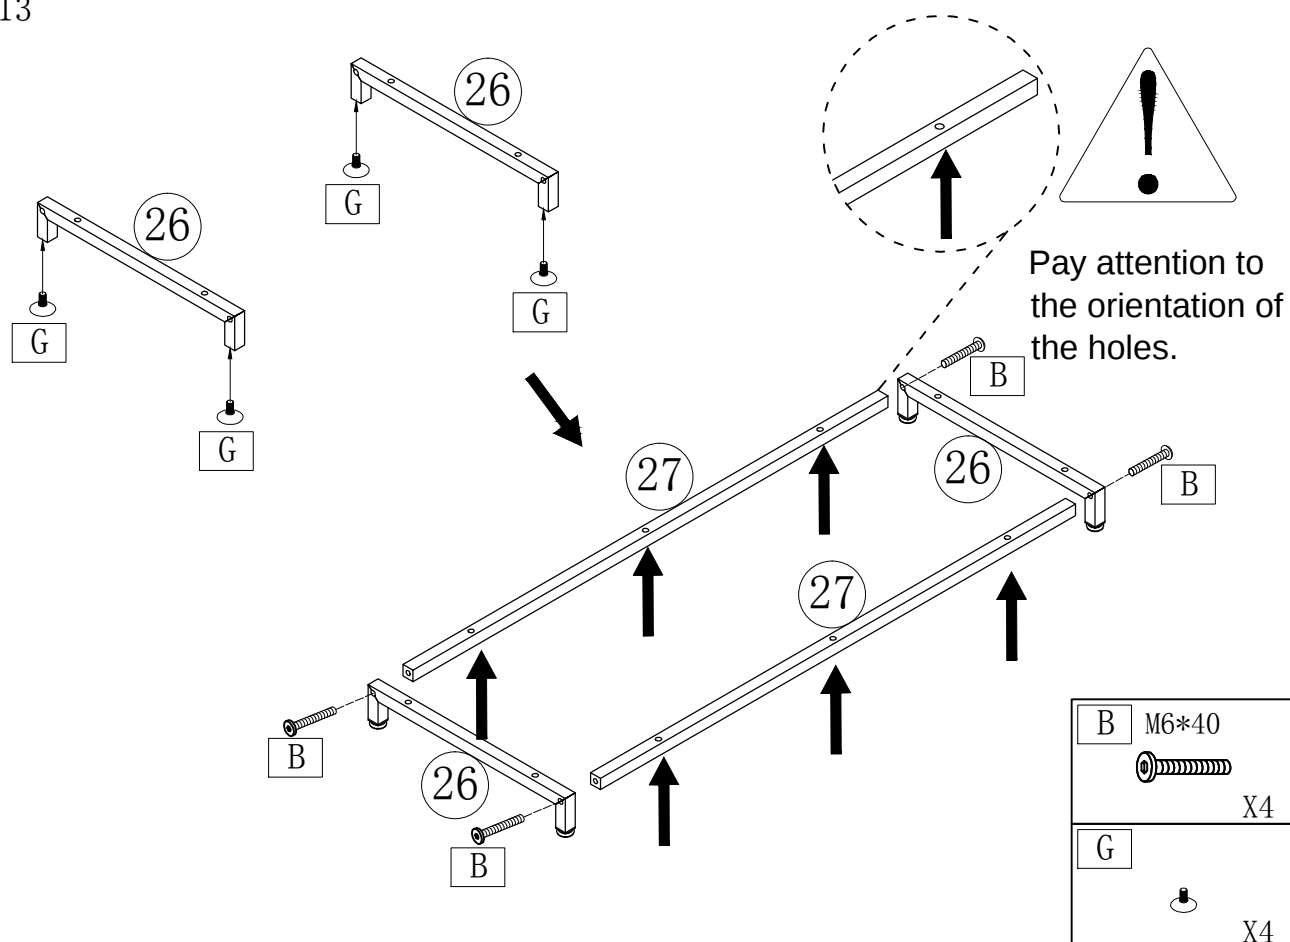


STEP 14

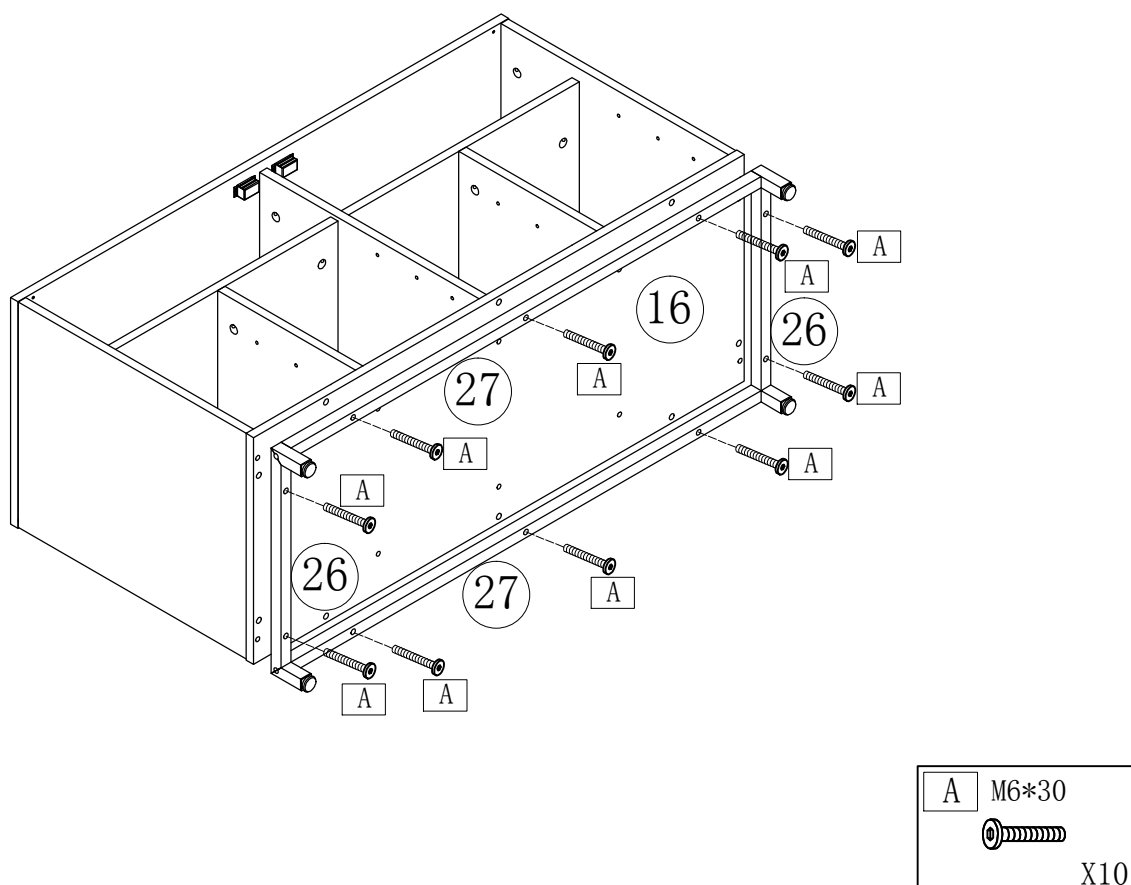


ASSEMBLY INSTRUCTION

STEP 15

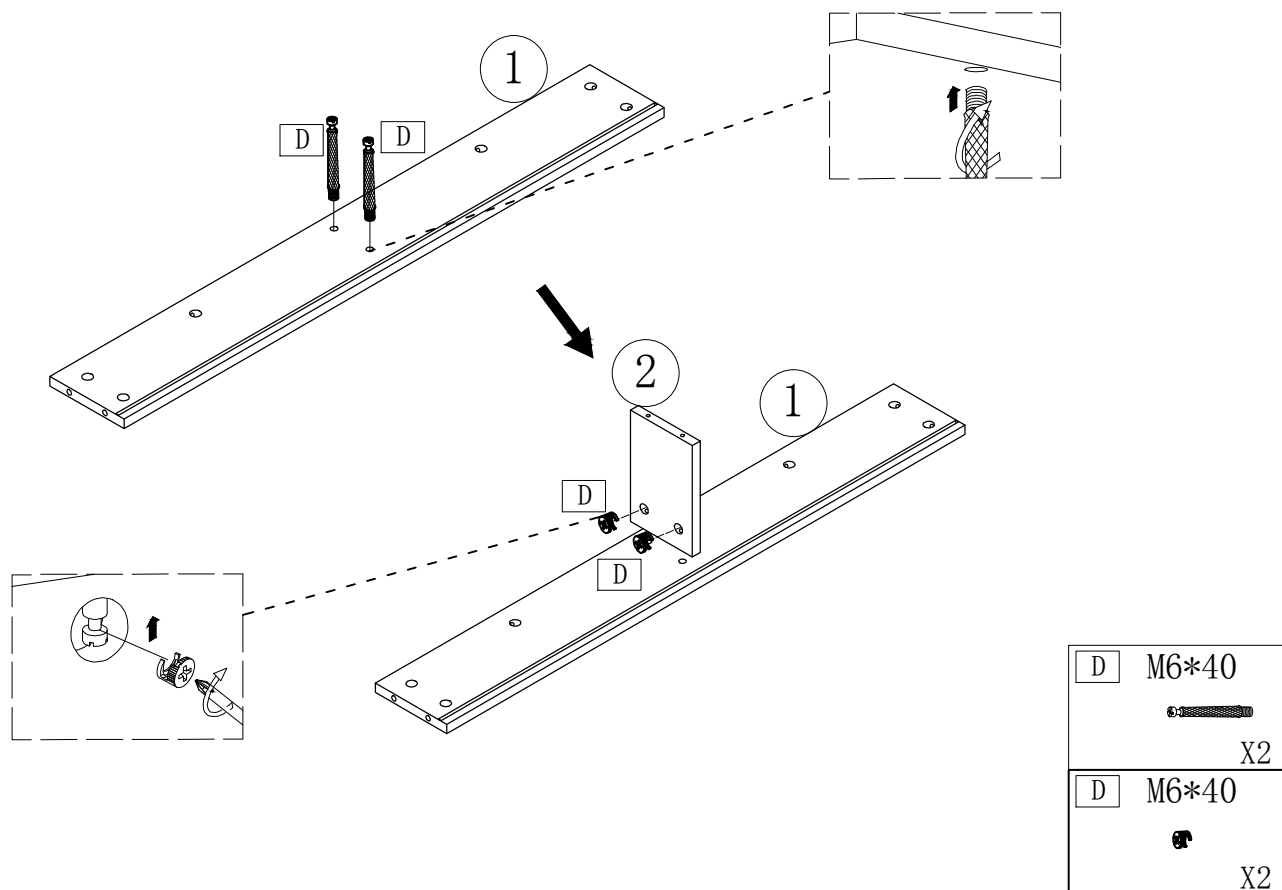


STEP 16

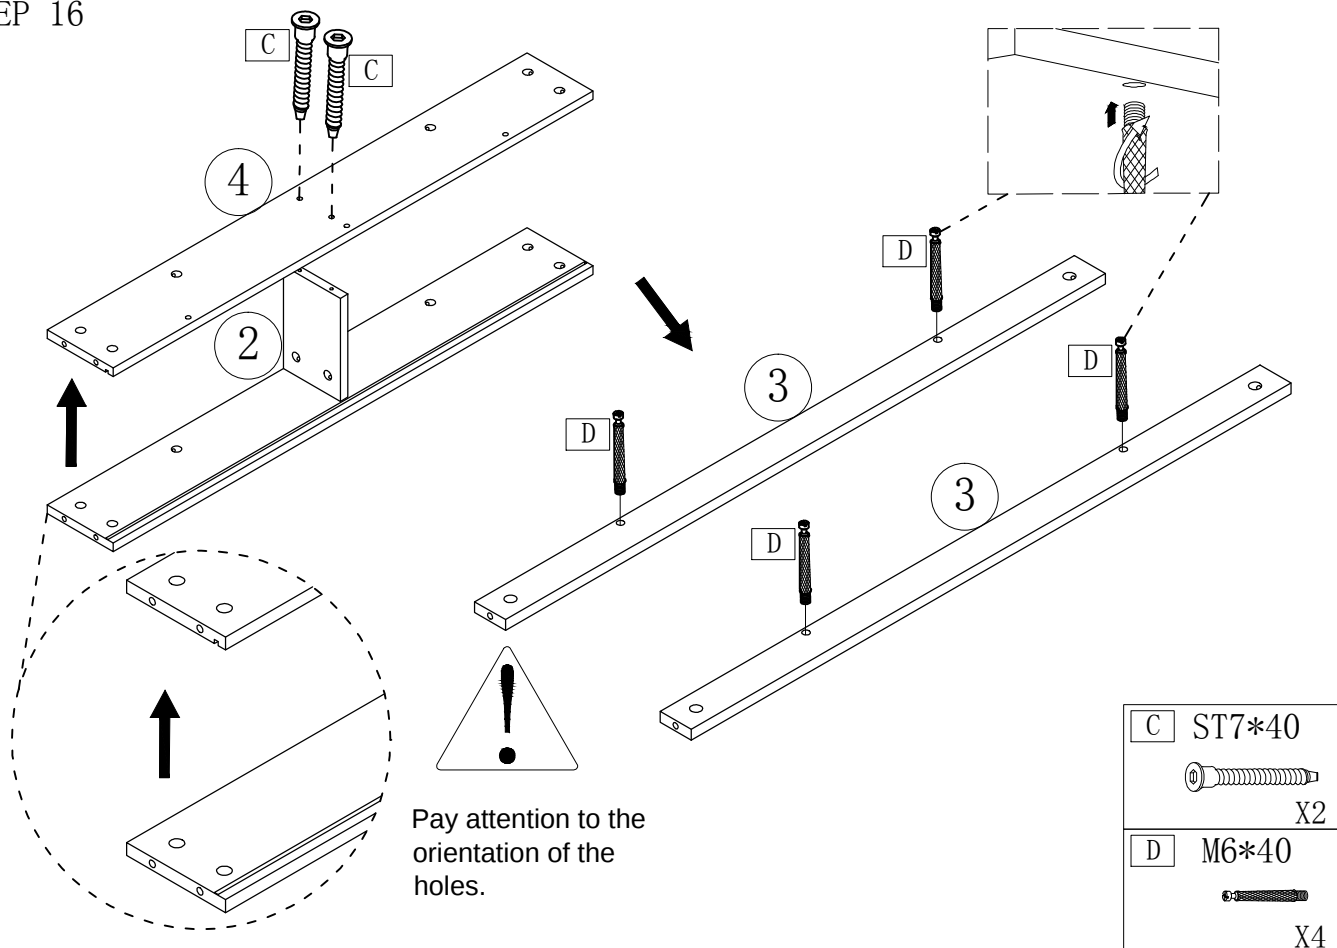

ASSEMBLY INSTRUCTION


STEP 17

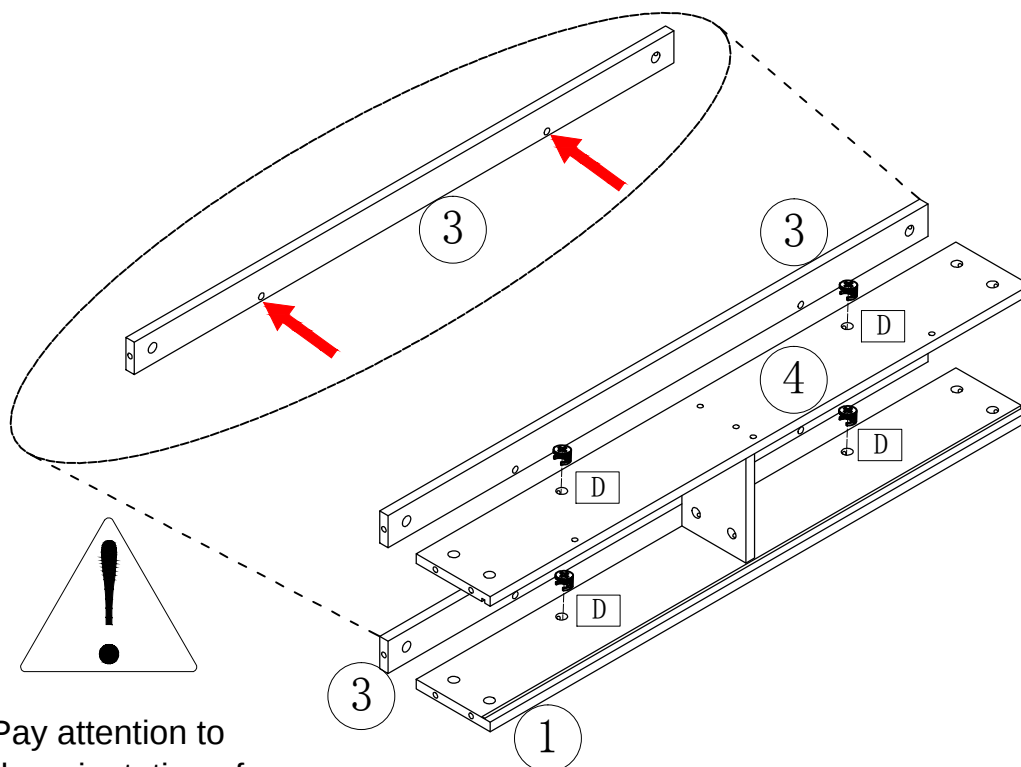

Pay attention to the orientation of the holes.

D	M6*40
	X4

STEP 18


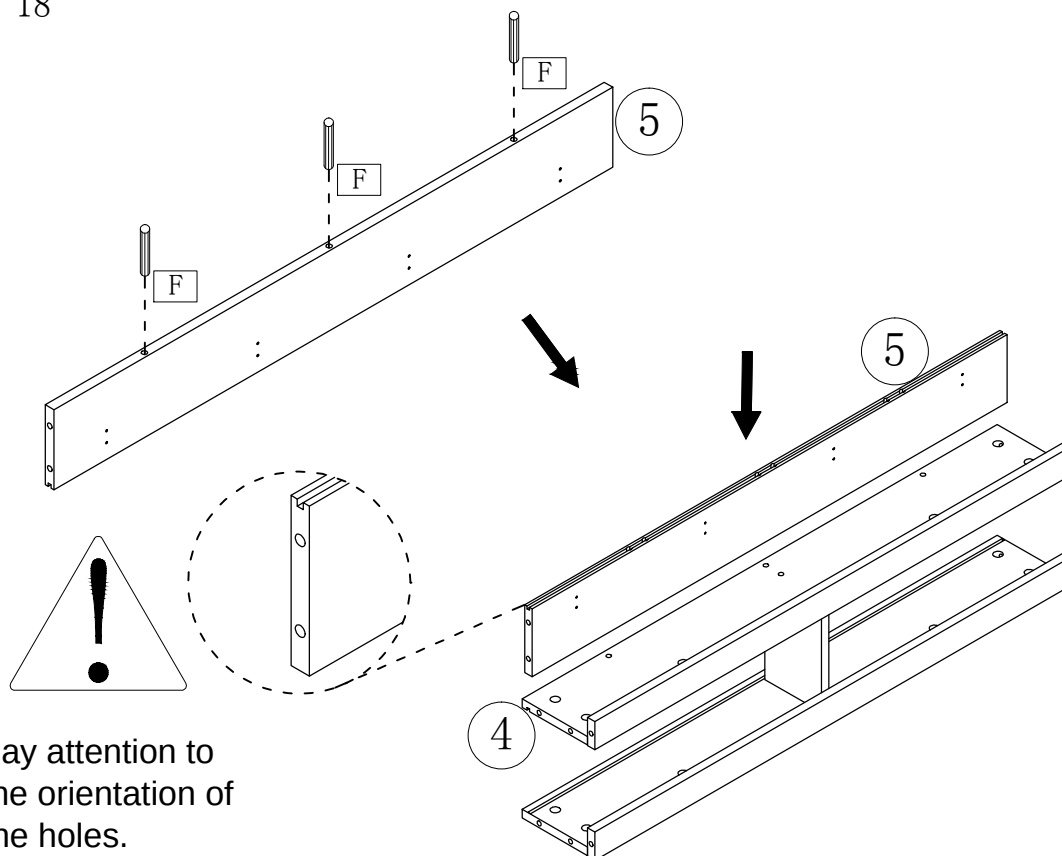


Pay attention to the orientation of the holes.



F	8*35
	X3

ASSEMBLY INSTRUCTION

STEP 19

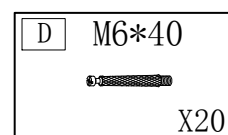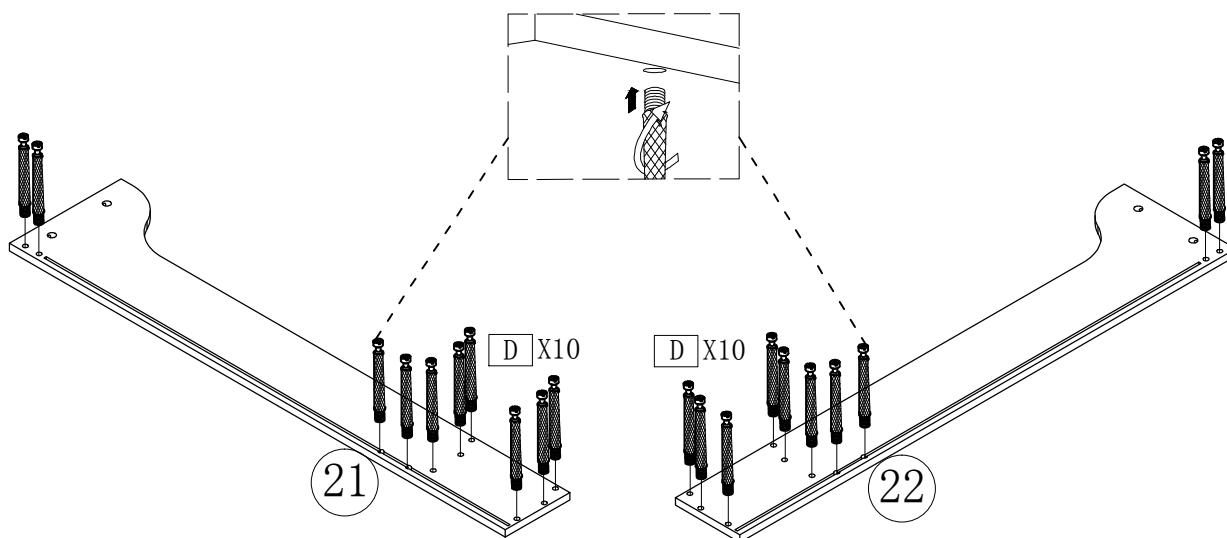


STEP 20

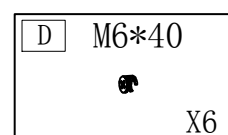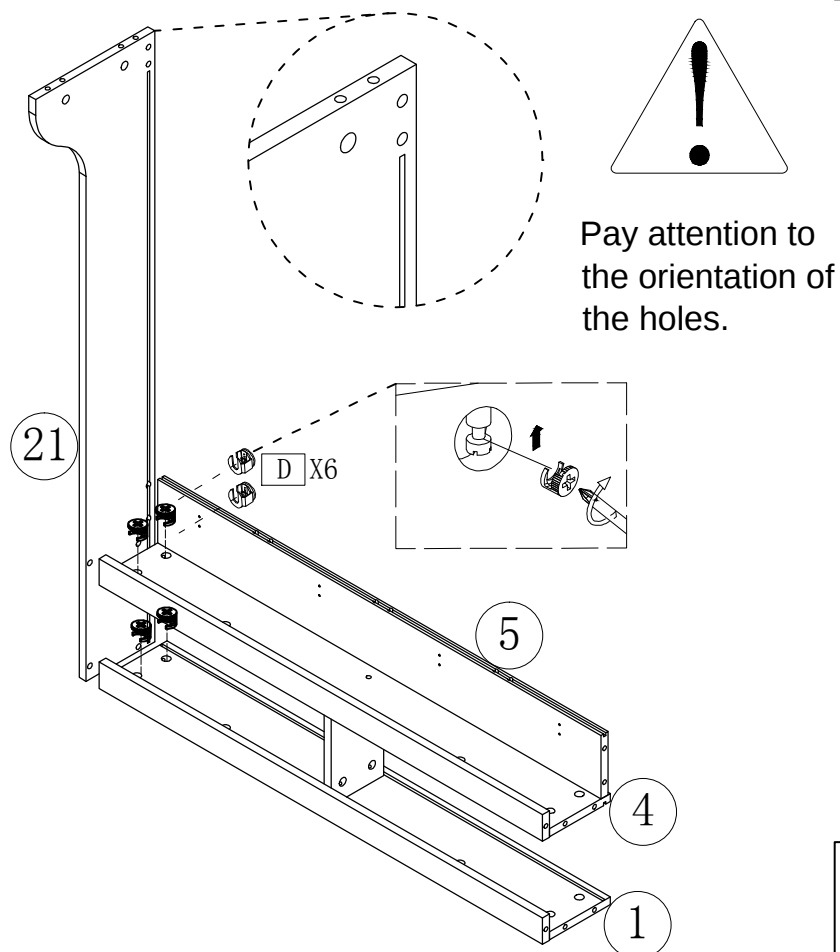


ASSEMBLY INSTRUCTION

STEP 21

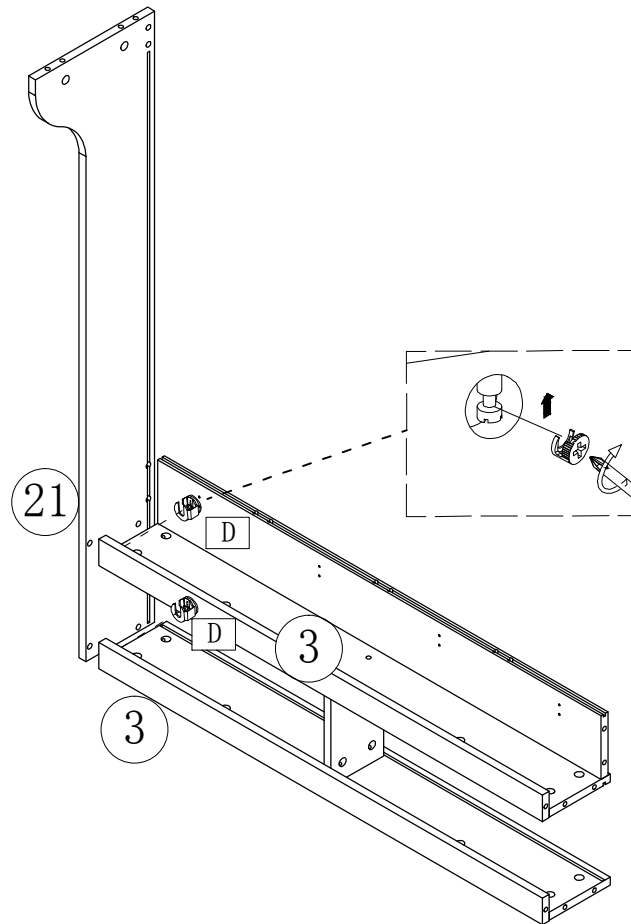


D	M6*40
	X2

STEP 22

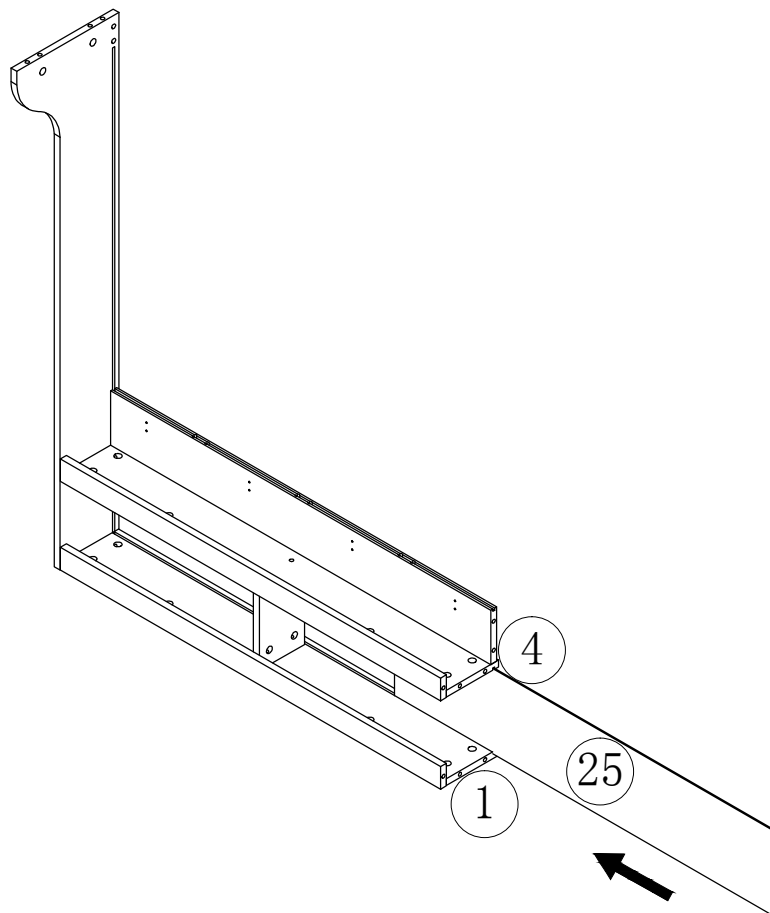


ASSEMBLY INSTRUCTION

STEP 22

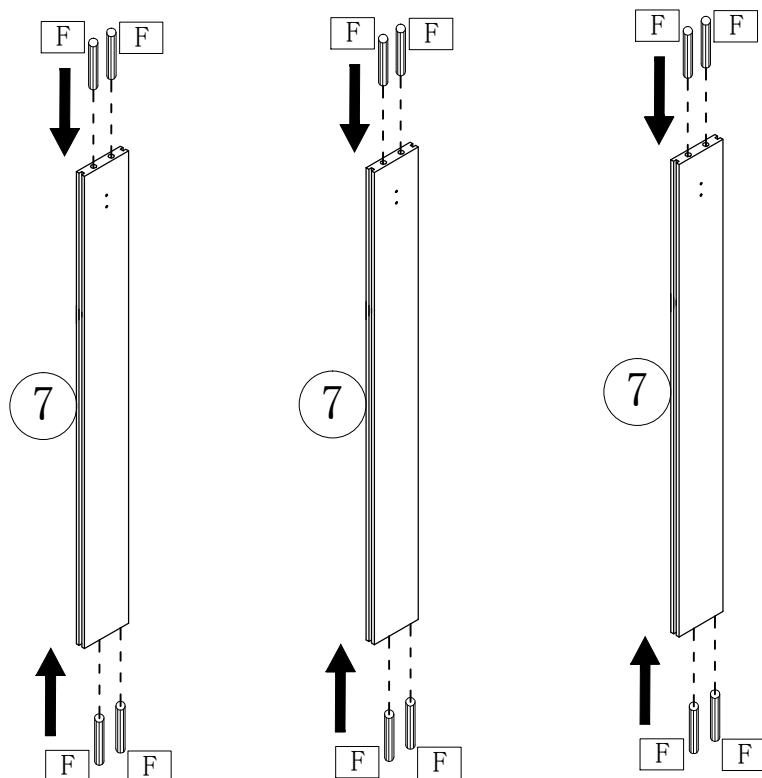


F	8*35
	
X12	

STEP 24

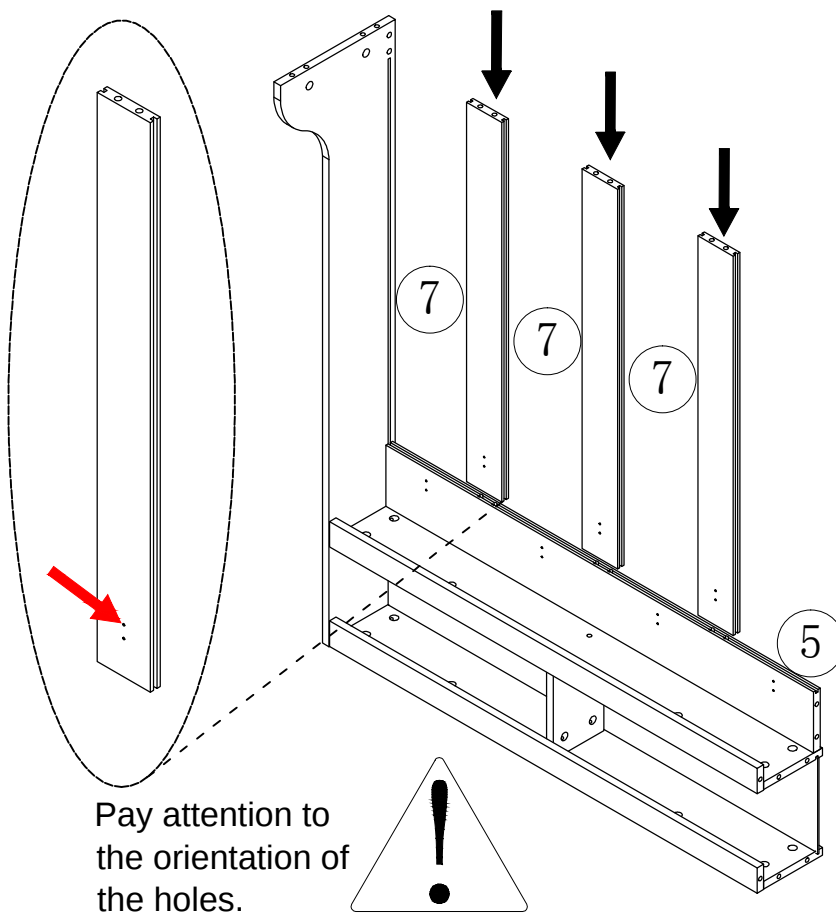


ASSEMBLY INSTRUCTION

STEP 25

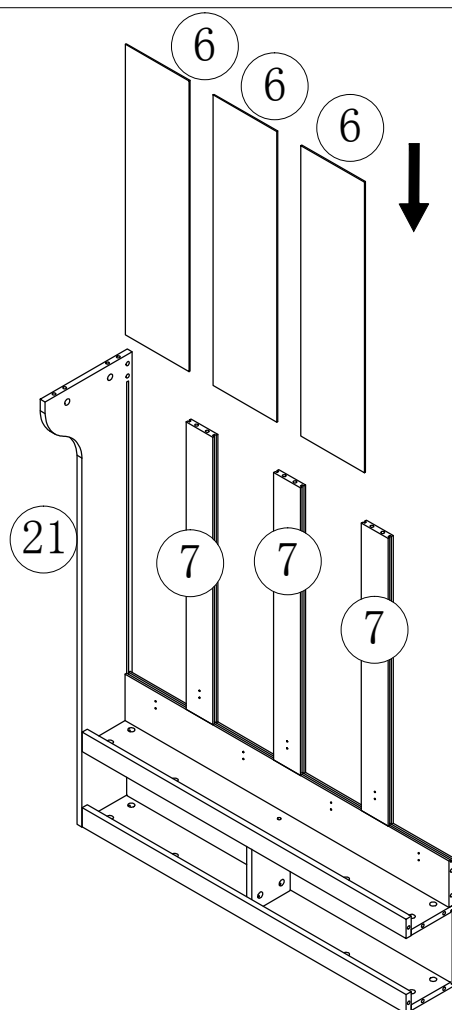


STEP 26

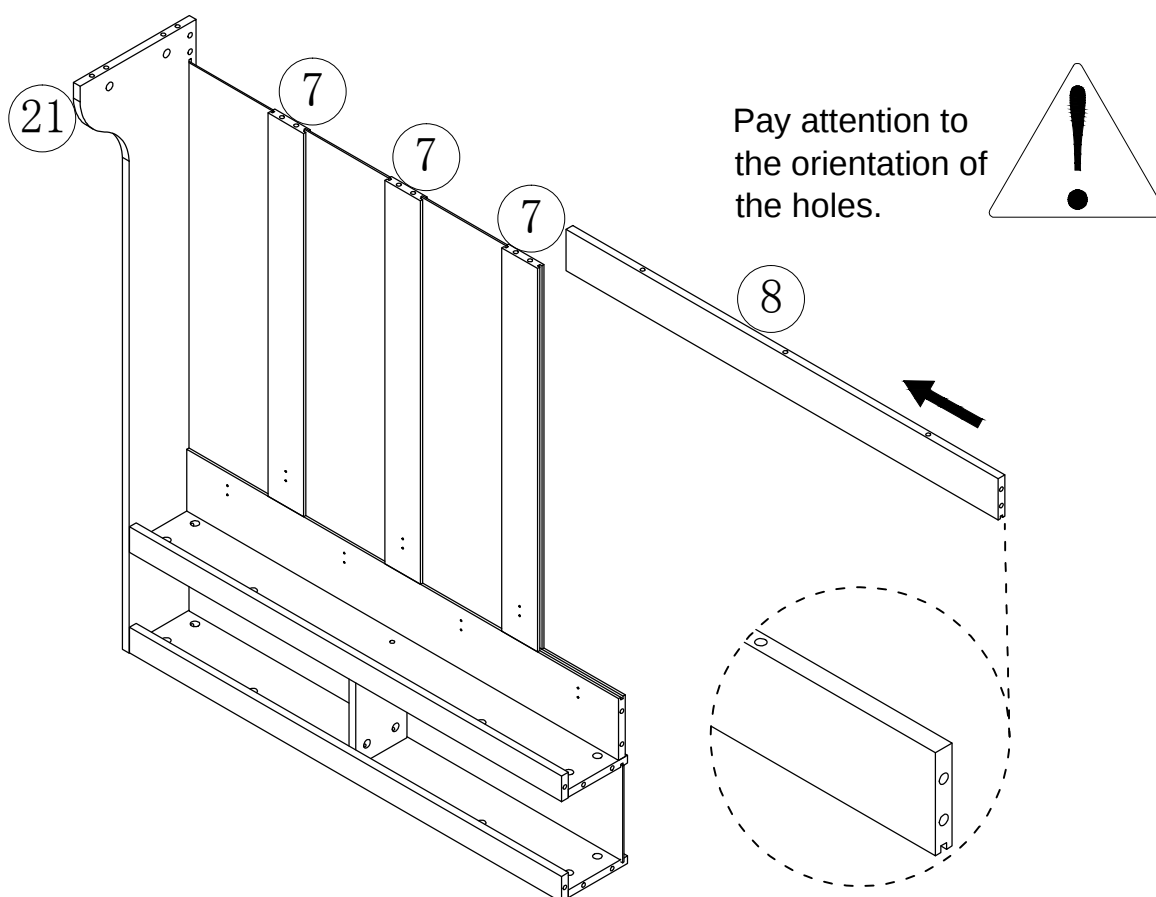


ASSEMBLY INSTRUCTION

STEP 27

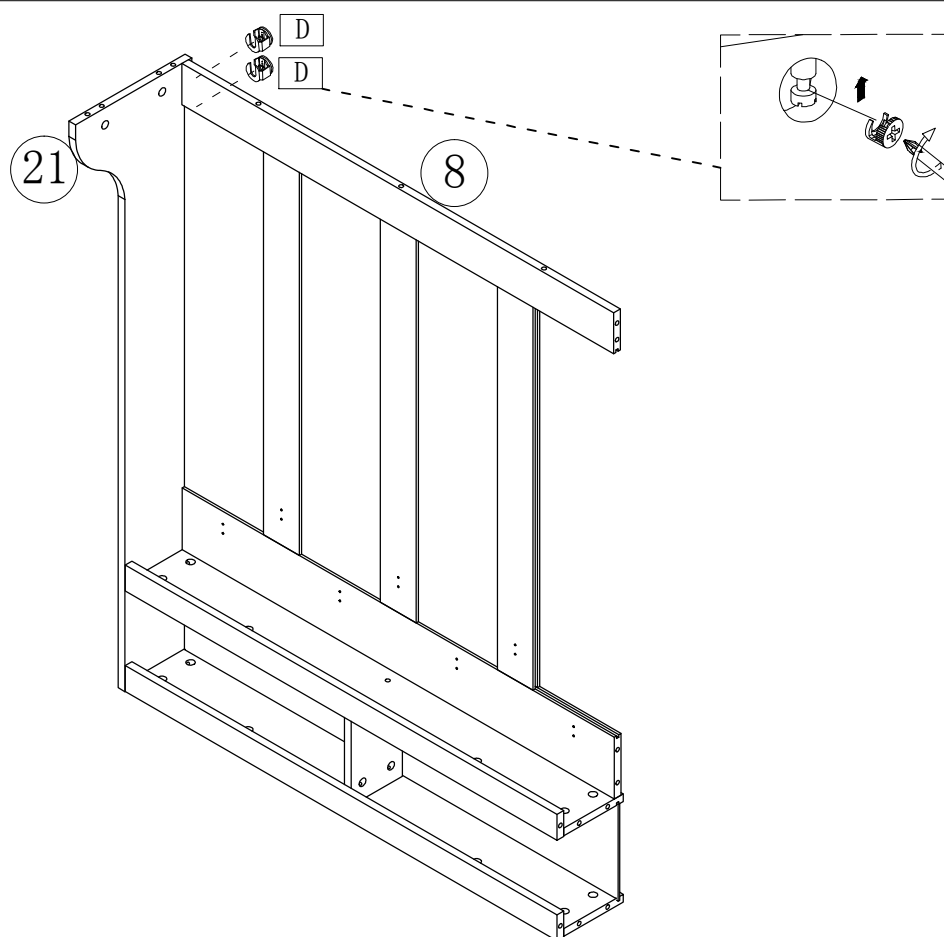


D	M6*40
	X2

STEP 28

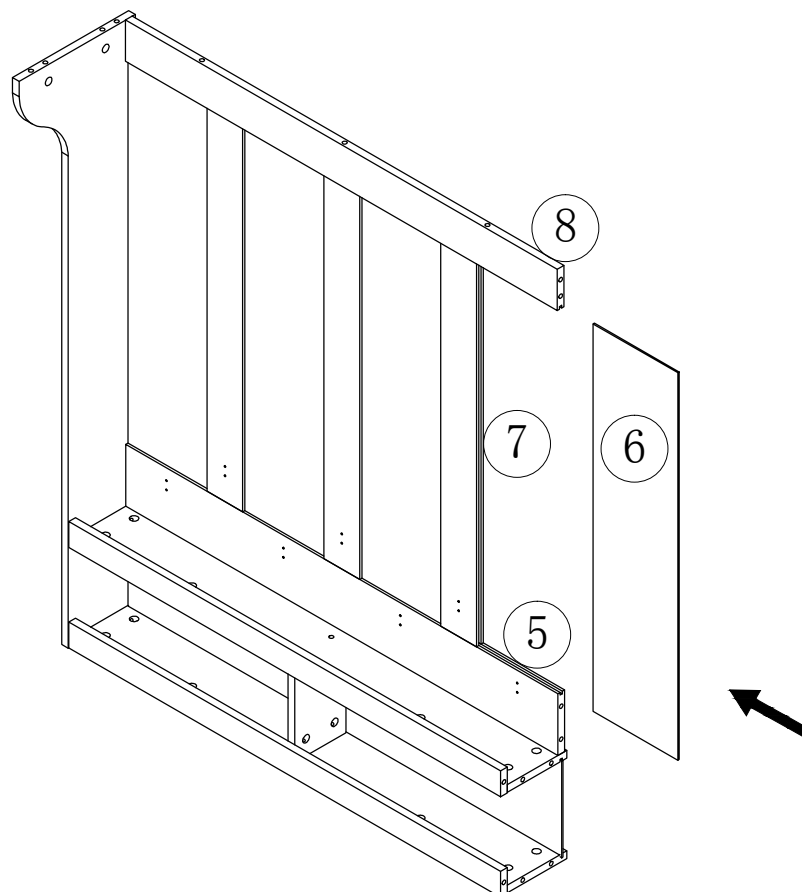


ASSEMBLY INSTRUCTION

STEP 29

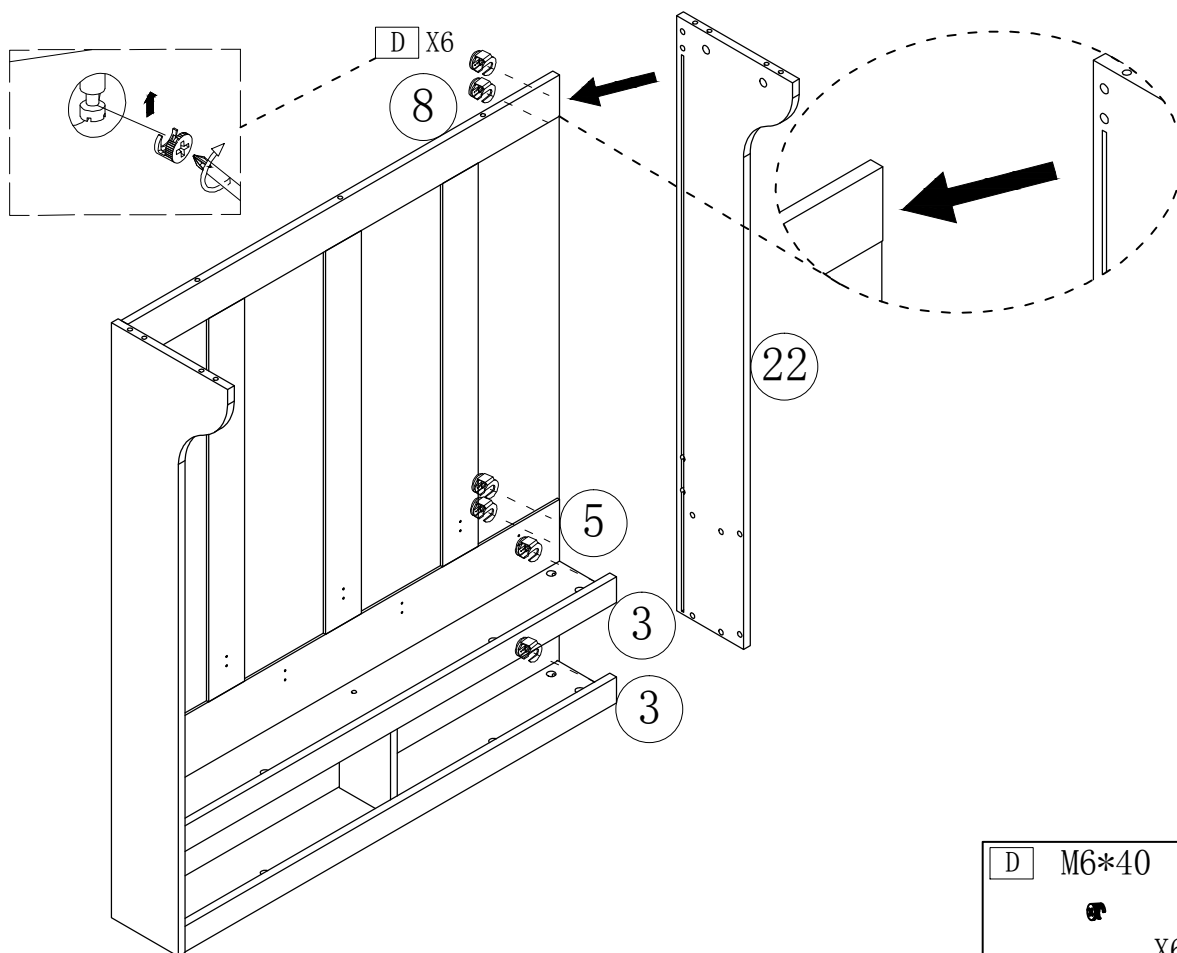


STEP 30

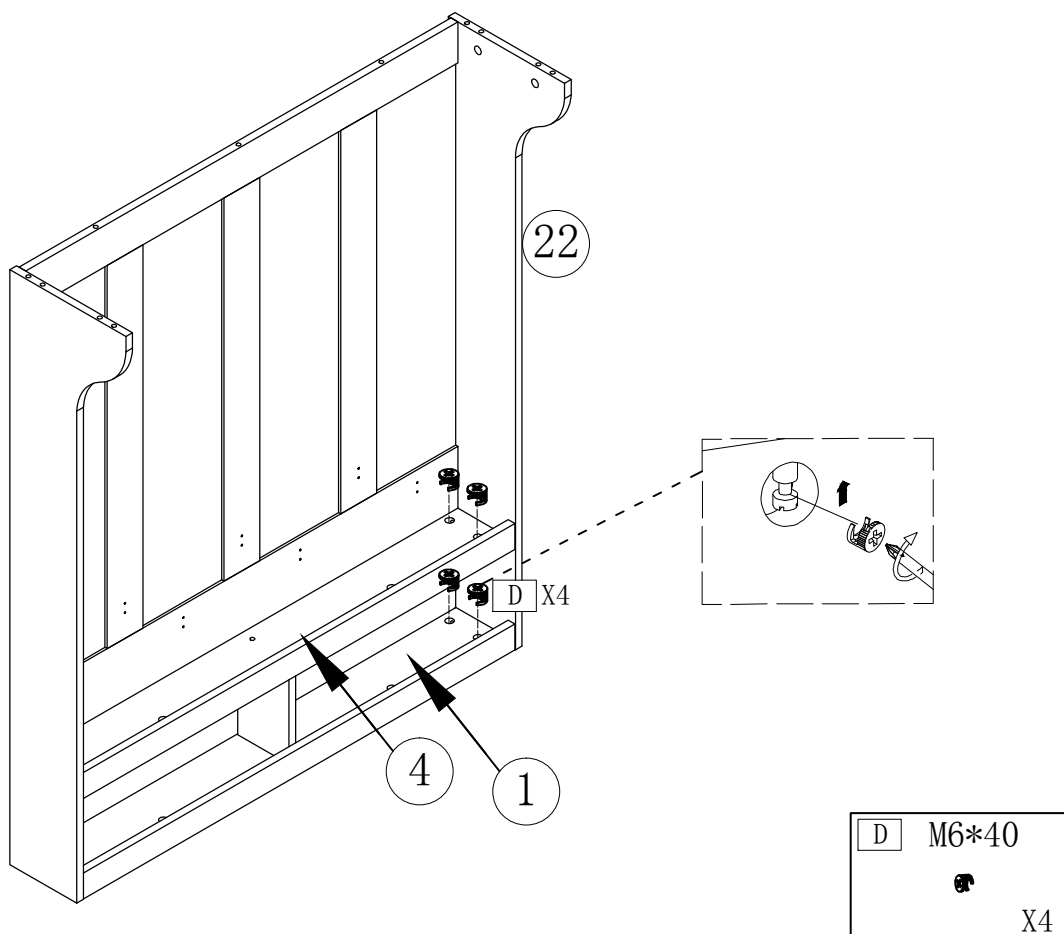


ASSEMBLY INSTRUCTION

STEP 31

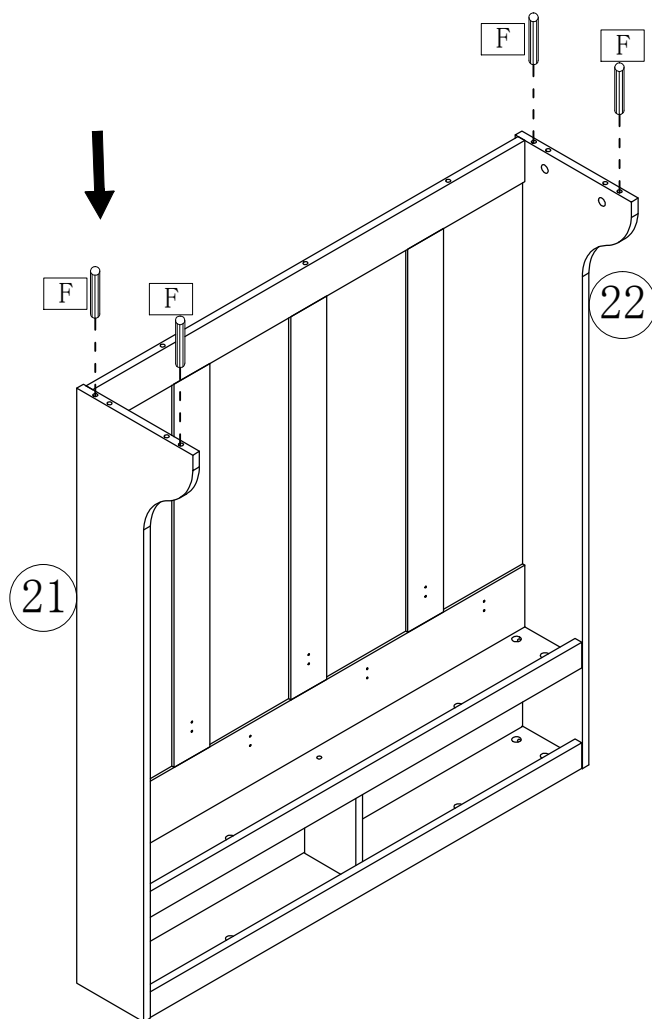

F	8*35
	
X4	


STEP 32

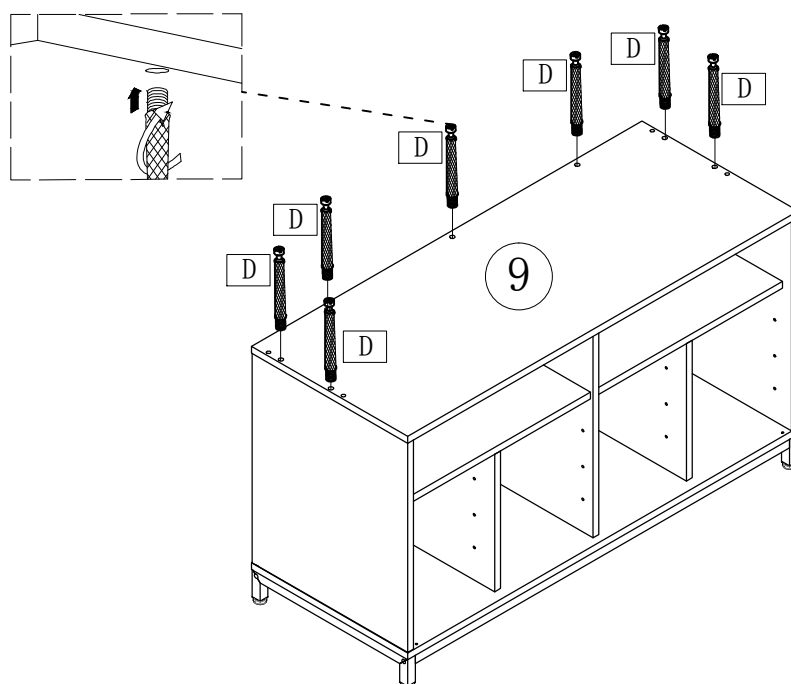

D	M6*40
	
X7	



ASSEMBLY INSTRUCTION

STEP 33

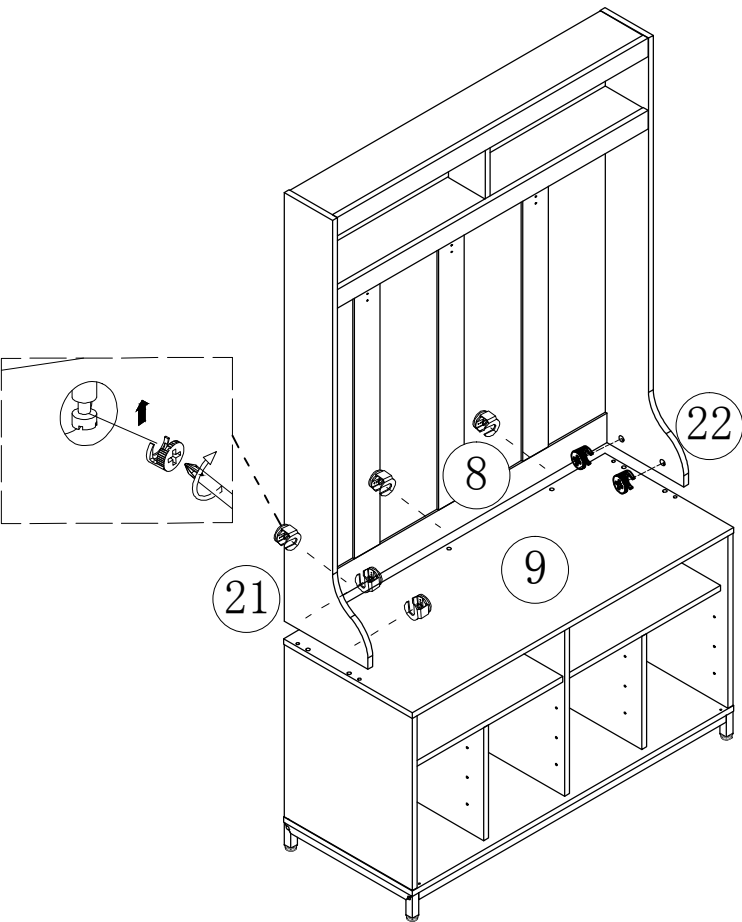

D	M6*40
	
	X7


STEP 34

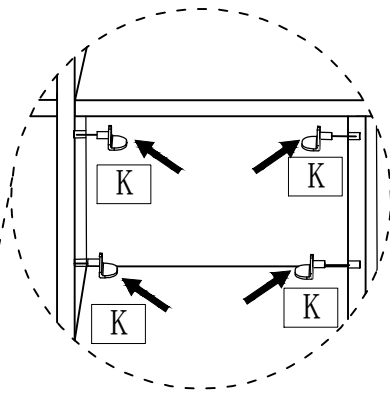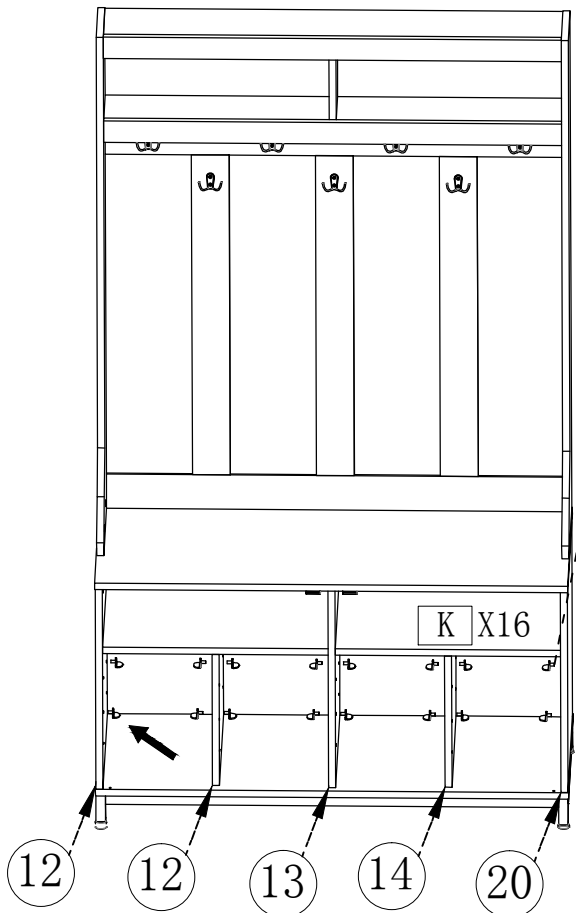


K	M5
	
	X16

ASSEMBLY INSTRUCTION

STEP 35

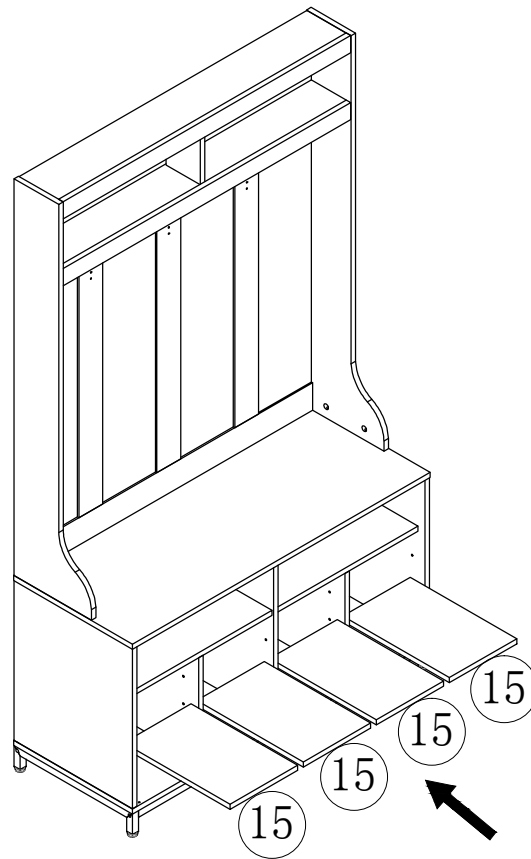


STEP 36

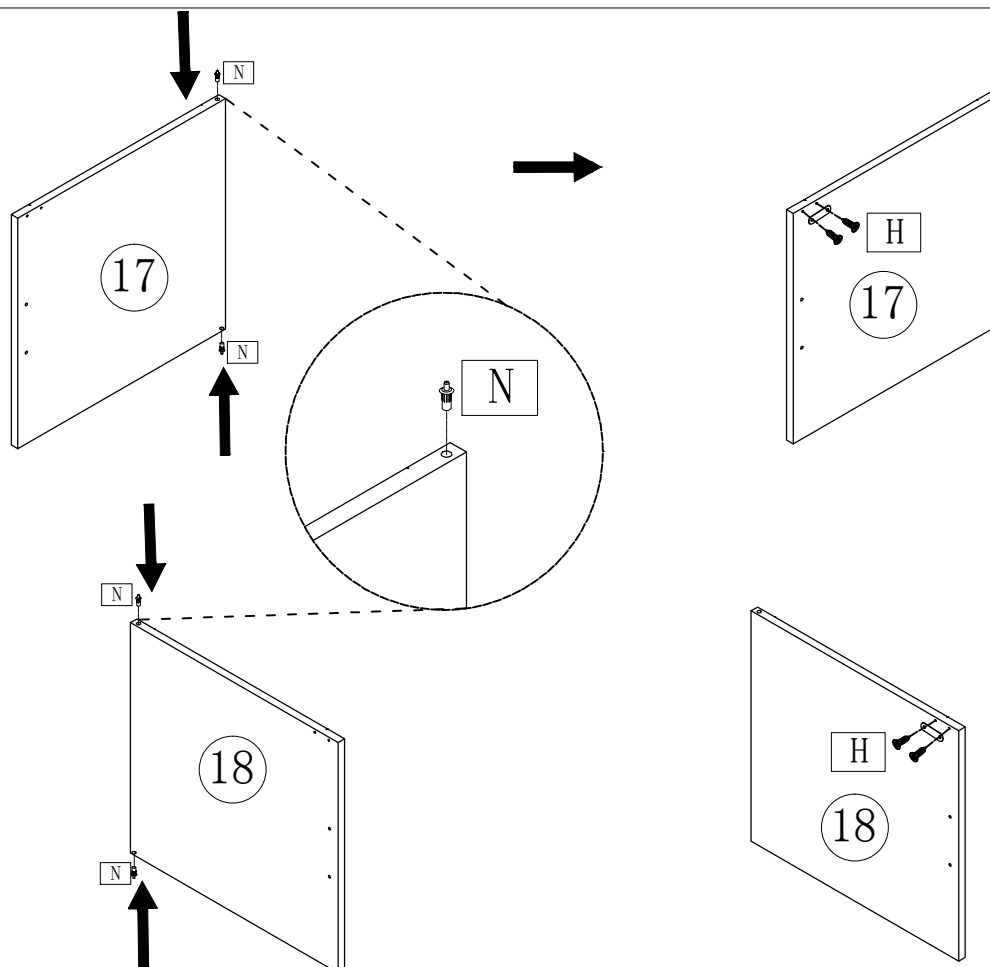

H	ST3*12
X4	X2
N	X4


ASSEMBLY INSTRUCTION

STEP 37

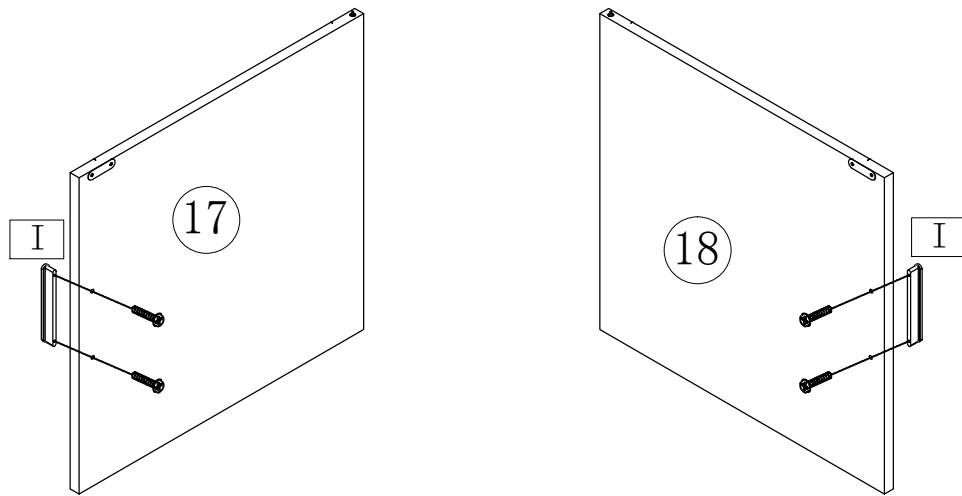


I	M4*18
	
X2	X4

STEP 38

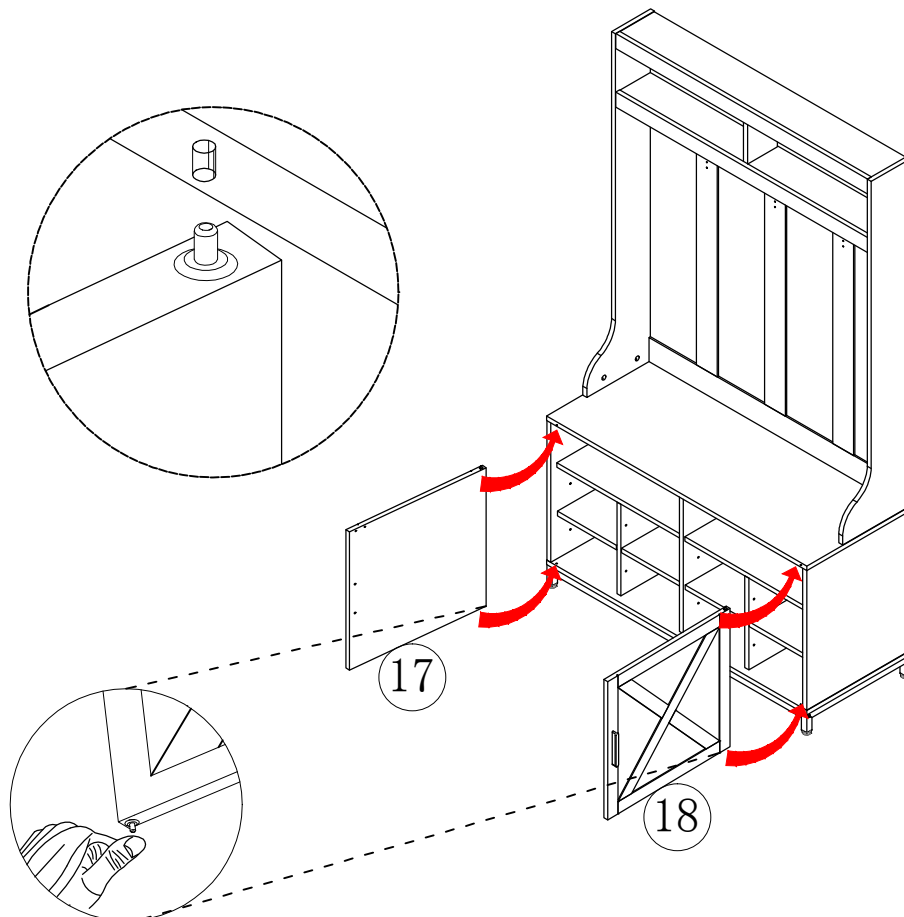


ASSEMBLY INSTRUCTION

STEP 39


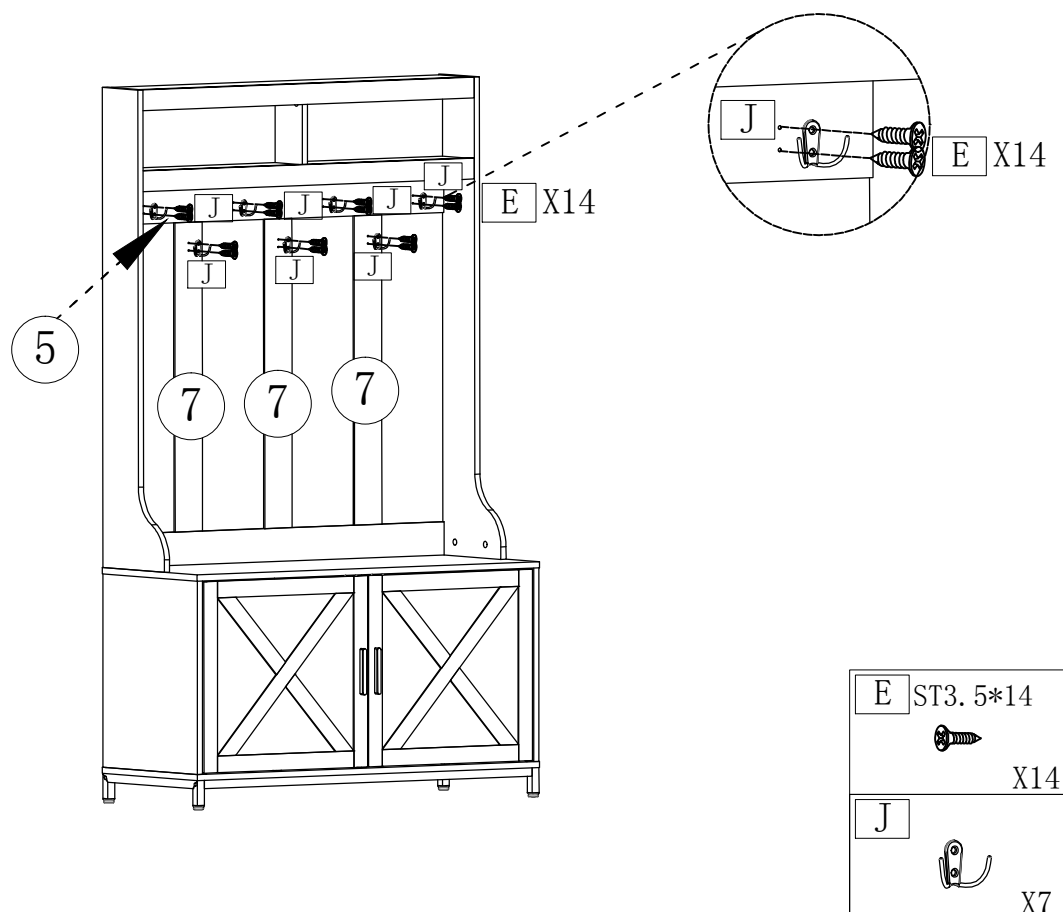


STEP 40


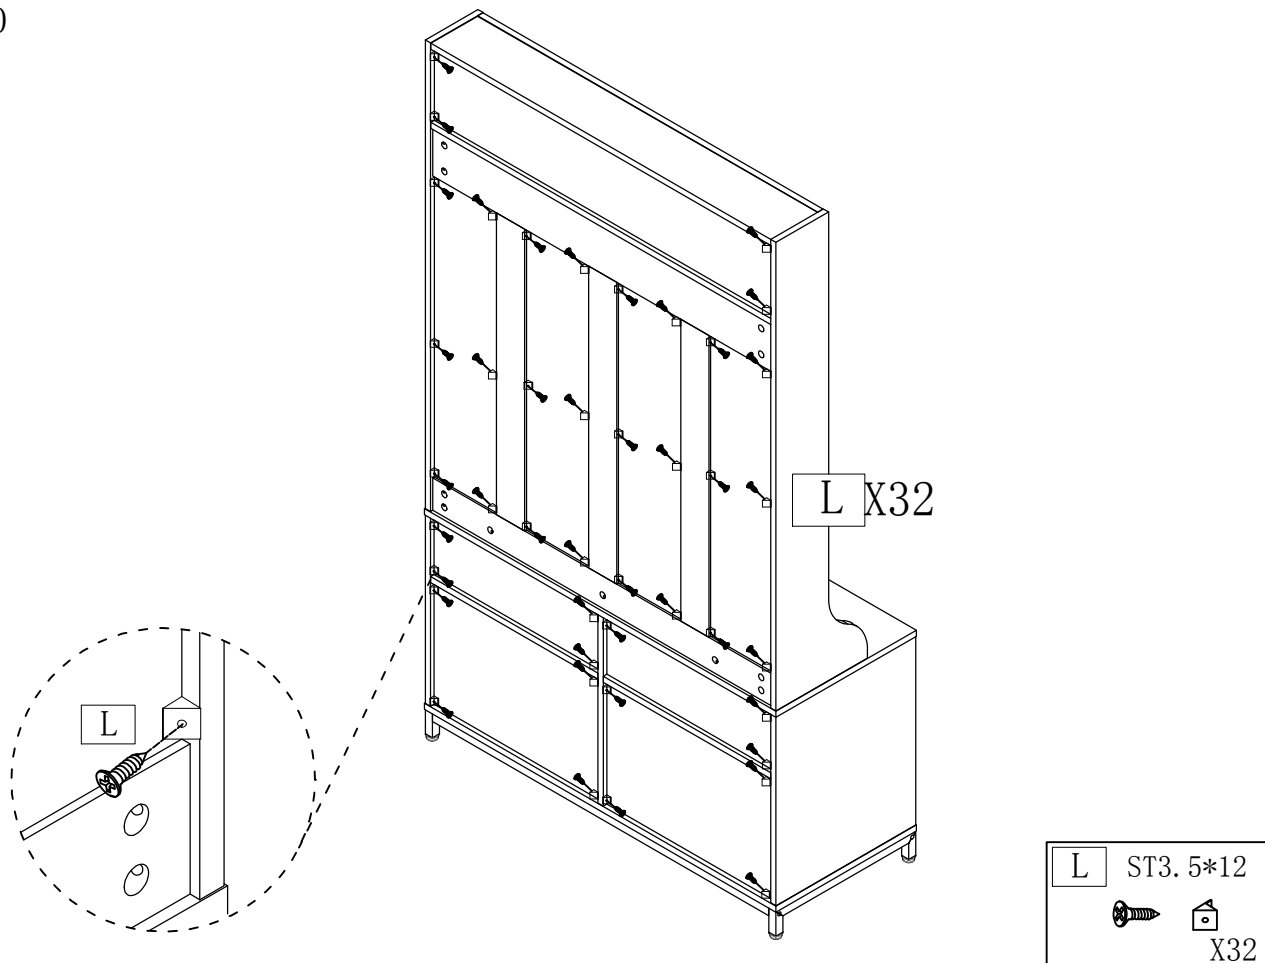


ASSEMBLY INSTRUCTION

STEP 41

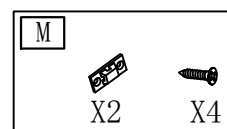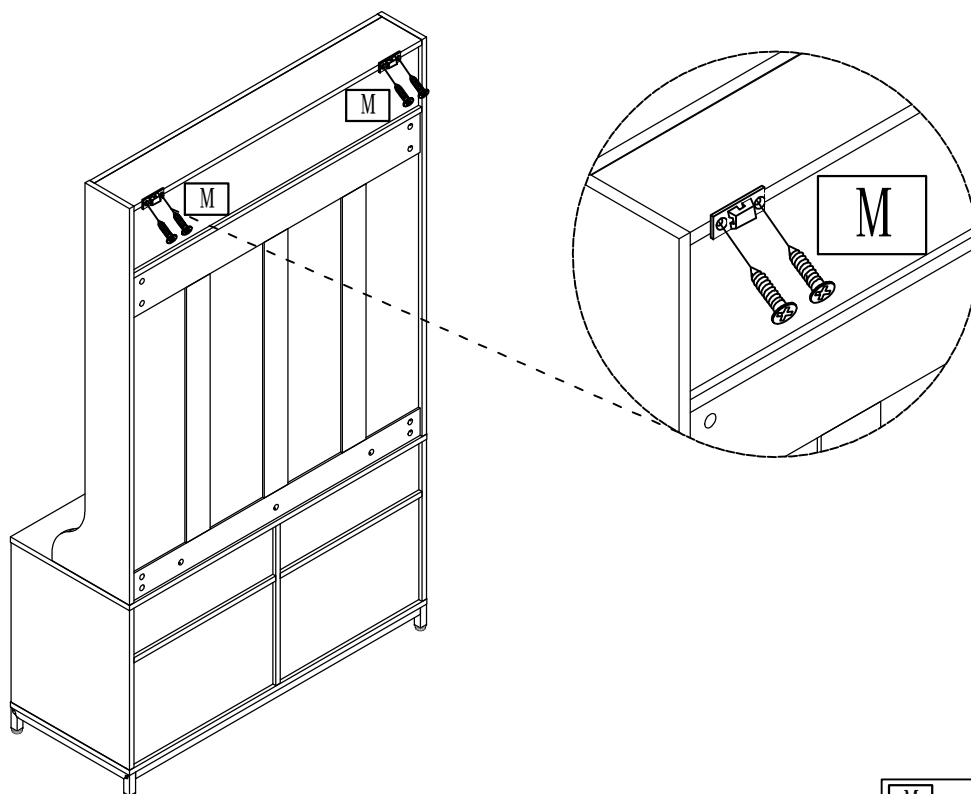


STEP 42

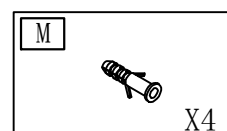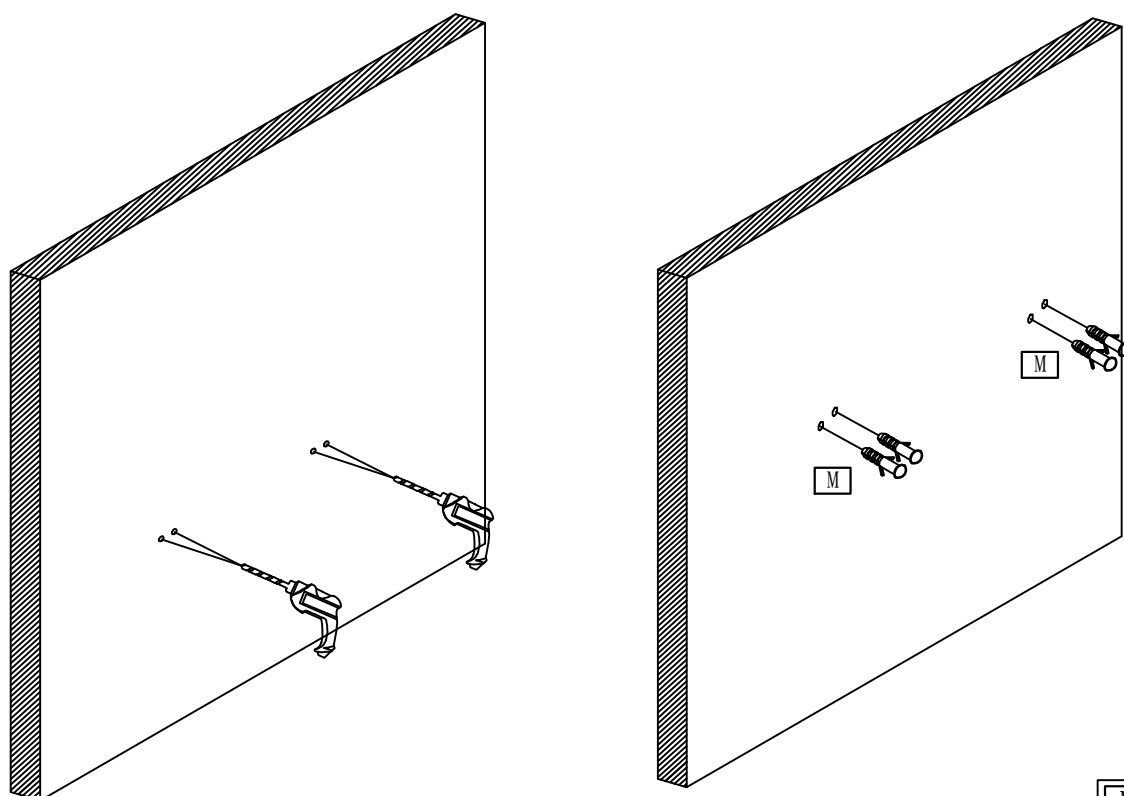

ASSEMBLY INSTRUCTION


STEP 43

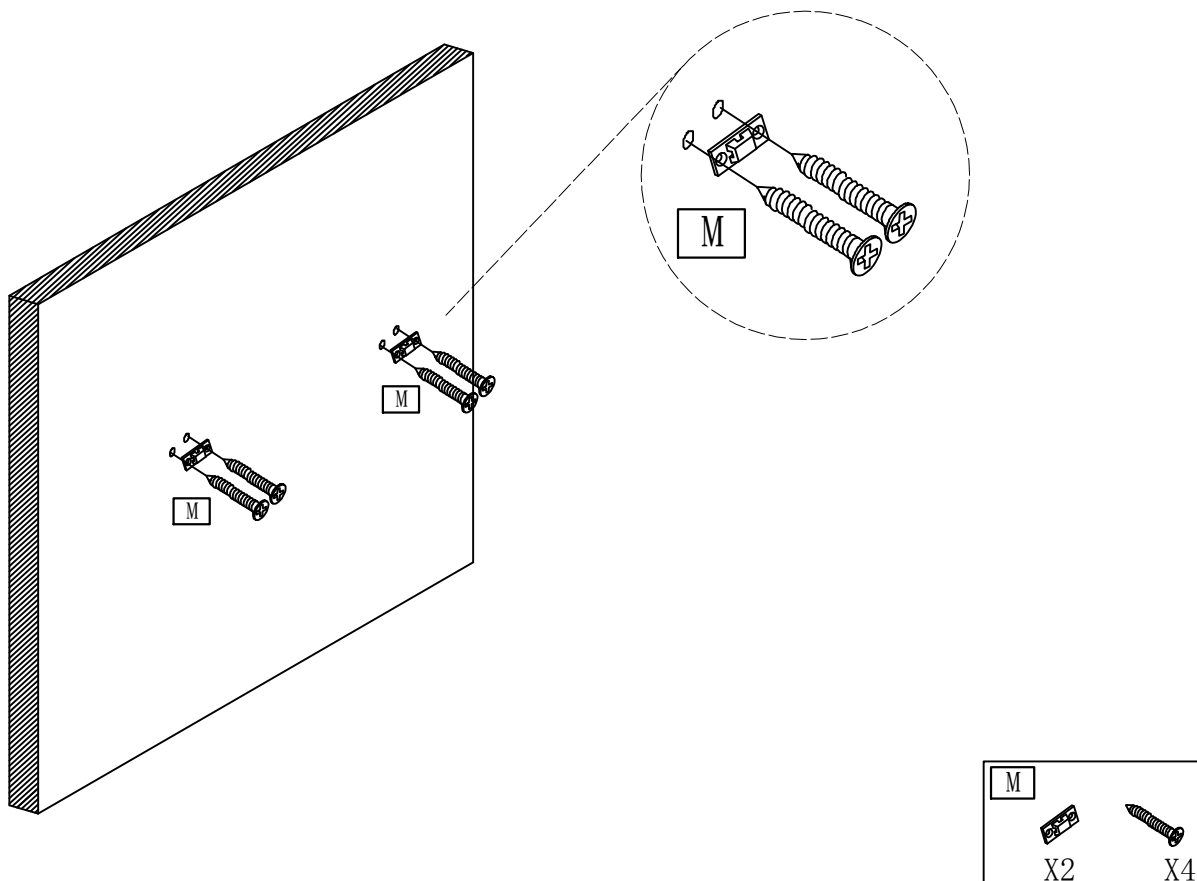

STEP 44



Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

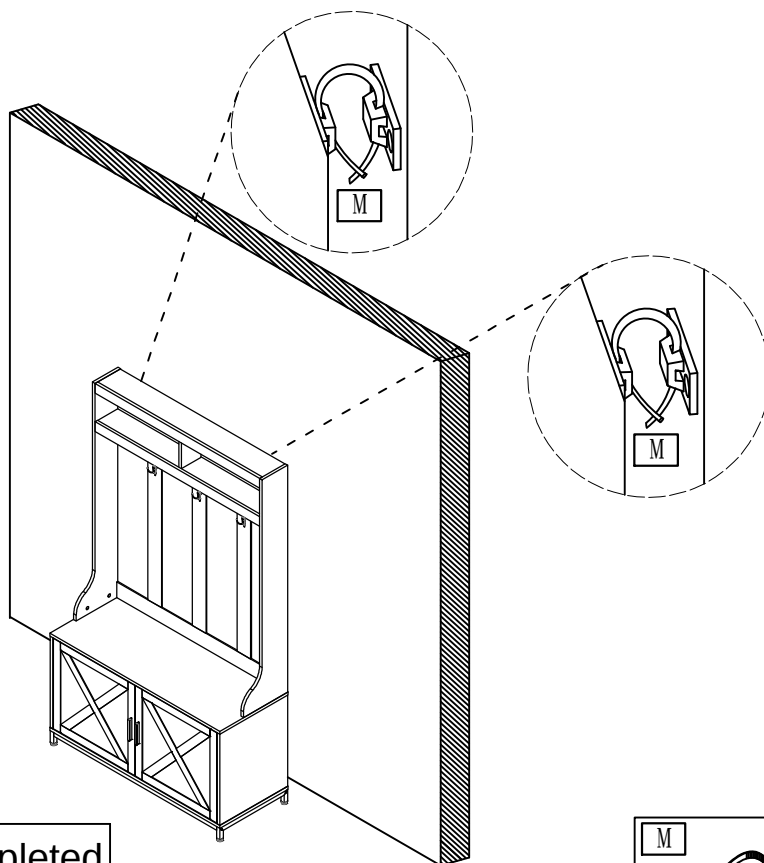

Installation Completed