

Installation instruction


Parts list:

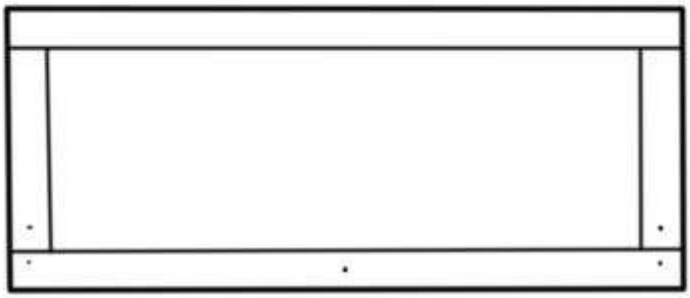

Door panel *3

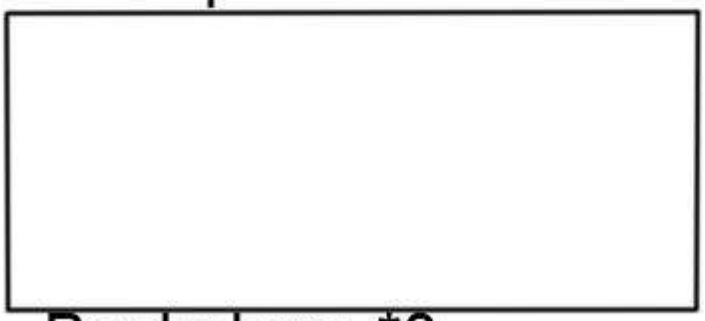


Backplane *3

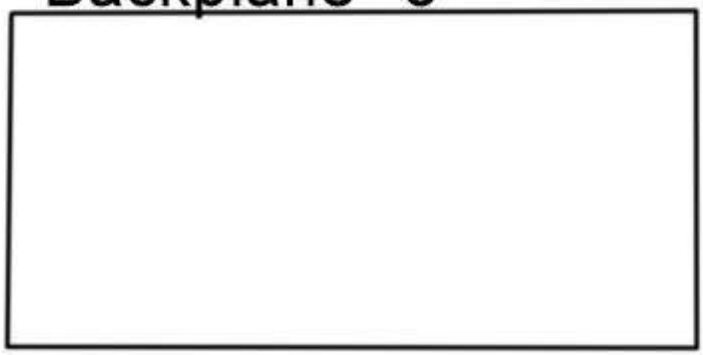


Laminate *4



Top bar *1

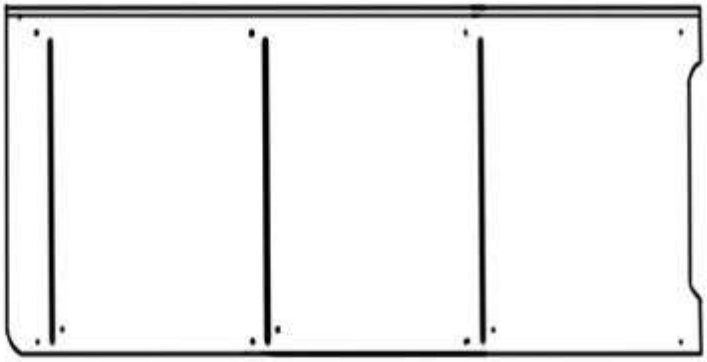

Side bracket left *1

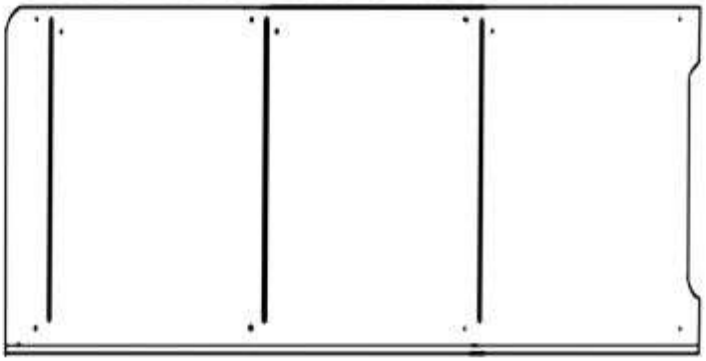

Side bracket right *1



Door handle



Small screw



Medium screw



Large screw



Door stopper



Door mat




Plug




Installation tool


Start installation:

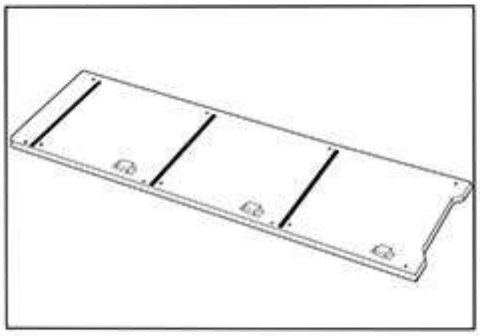


1. Take out the left side bracket and install the door latch with small screws

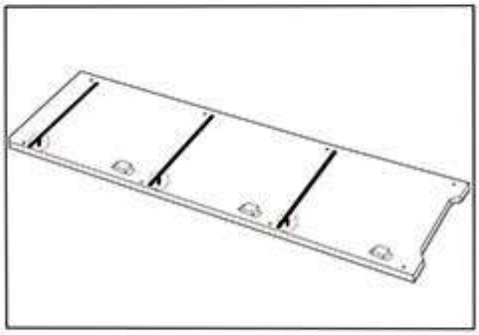


2. Take out the plug and knock it into the hole (pay attention to the position of the hole)

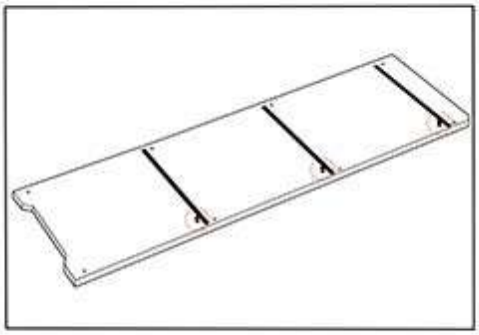


3. Take out the right side bracket and plug, and knock them into the hole

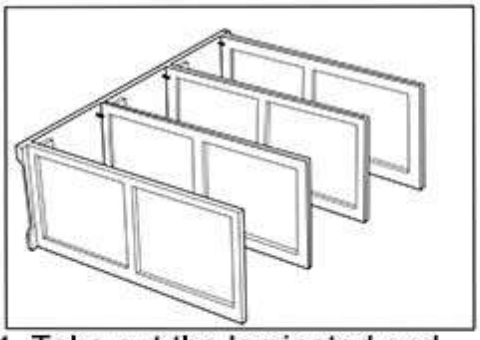


4. Take out the laminated and install it with large screws (pay attention to aligning the bracket with the groove of the laminated board)

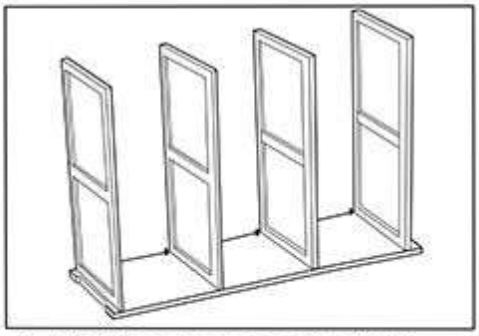


5. Set the shelves straight

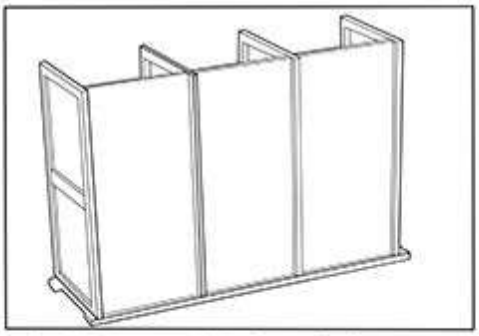


6. Take out the backplane and insert it along the groove

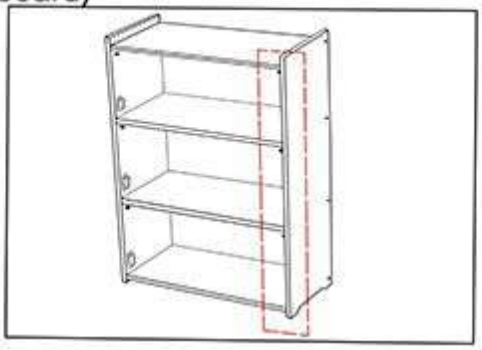


7. Take out the right bracket on the side and install it with large screws

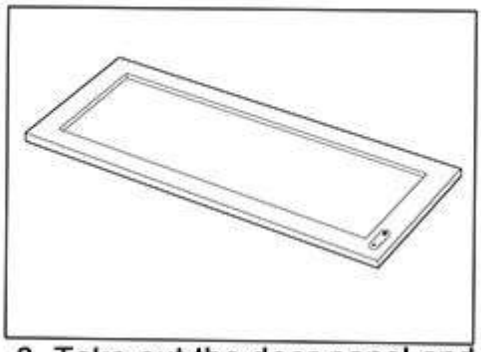


8. Take out the door panel and door mat and install them with small screws

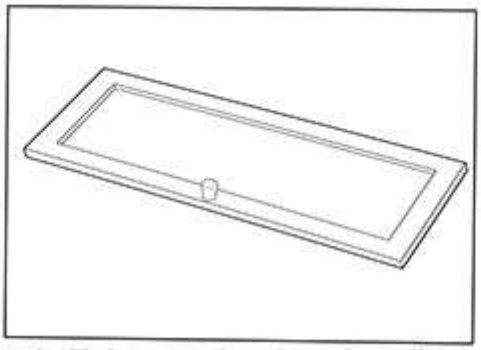

9. Take out the door handle and install it with a middle screw

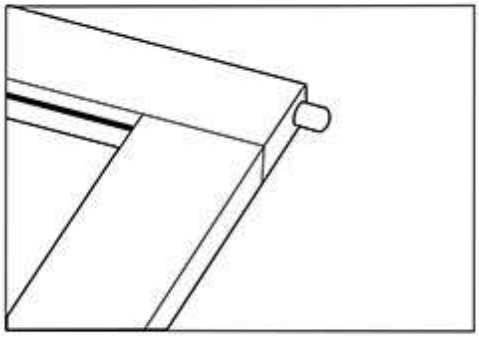

10. Insert plug at both ends of the door panel

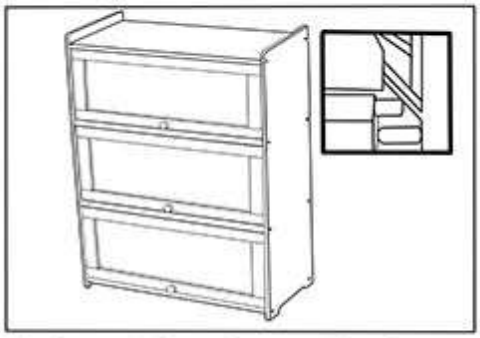

11. Insert the plug on the door panel into the groove of the side bracket, and then tighten the right screw of the side bracket



12. Take out the top stopper and install it with long screws