


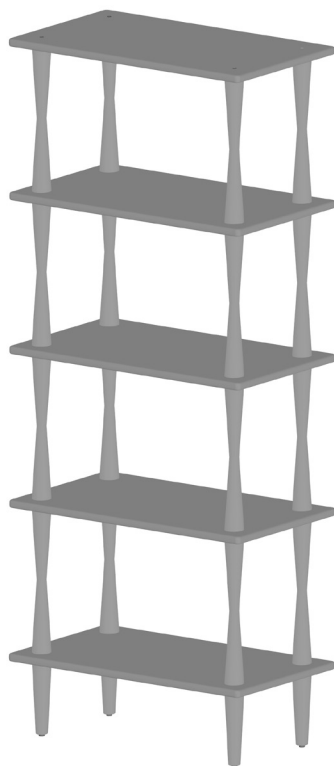

20 : 00

estimated assembly



2 or more

people required

Ok, let's
get started!



- Put on mood music!
- To prevent damage to product, use the clean side of package carton or rug as working surface
- In the event of missing or damaged parts, delivery problems etc., please reach out to our team.
We will be happy to fix the problem!


care guide

- Clean regularly with a soft and dry cloth.
- To protect finish, avoid use of abrasive cleaners.
- Wipe up spills immediately. Please!


ⓘ While assembling the product, tighten the bolts up to 50%. Once all parts are in place, only then fully tighten the bolts.




product parts

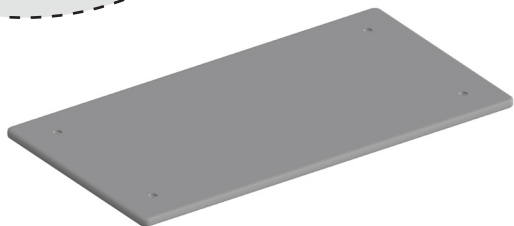

A
Top Shelf
x1

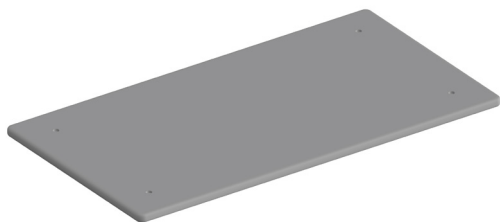

A2
Second Shelf
(Pre-drill for anti tip brackets)
x1

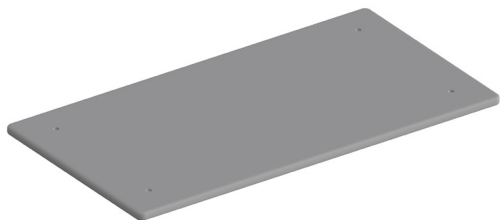

A3
Shelf
x3



B
Middle Leg
x16




C
Bottom Leg
x4

what's included



(D) -Bolt
(8X30)
x4



(E) -Ball Allen Key
(5mm)
x1

assembly instructions


Friendly Tip: Take a deep breath going in. This may be a tricky part, but nothing too overwhelming. Just follow these steps to the T and the outcome will be worth it!



- ⓘ While assembling the product, tighten the bolts up to 50%. Once all parts are in place, only then fully tighten the bolts.


step 1:

Start by holding the top shelf (A1) vertically, and align the middle leg (B) with the slots on the bottom side. Align the bolt (D) with the slot on the top side of the shelf with the middle leg (D).

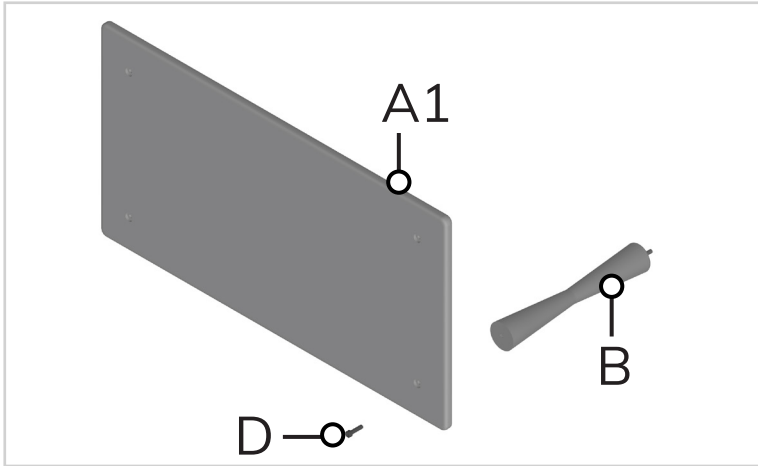


step 2:

Fix it in place using allen key (E). Repeat steps 1 & 2 with the remaining slots on the shelf (A1).

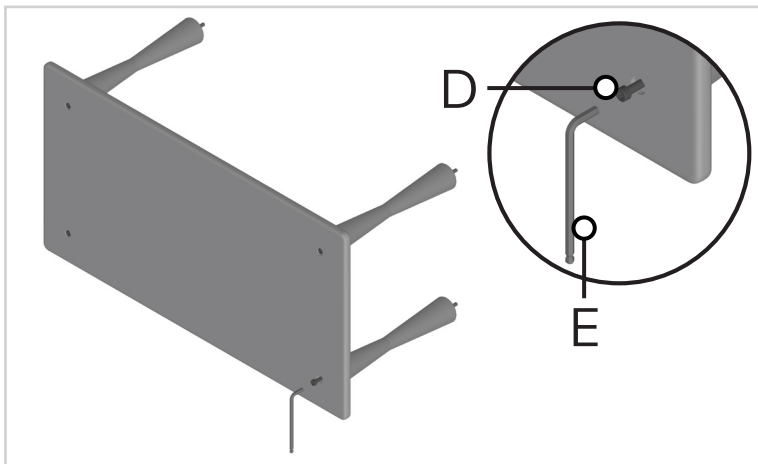

step 3:


Now, take the middle shelf (A2) and align it with the studs on the bottom of the middle legs (B) attached to the top shelf (A1). Use the image below as a reference.

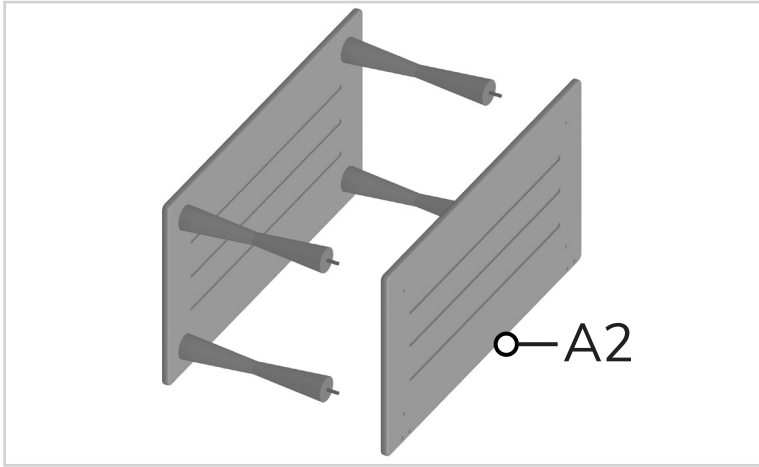

NOTE: Comes with pre-drilled holes on the shelf (A2) for anti-tip brackets.


step 4:

Then, align the middle leg (B) with the studs on the other side of (A2) and rotate it clockwise to tighten; fully tighten it at this stage.

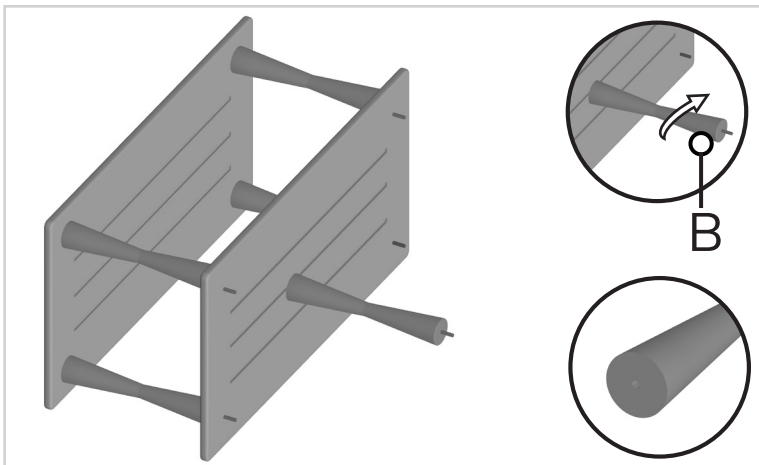


step 5:

Repeat step 4 with the remaining studs.

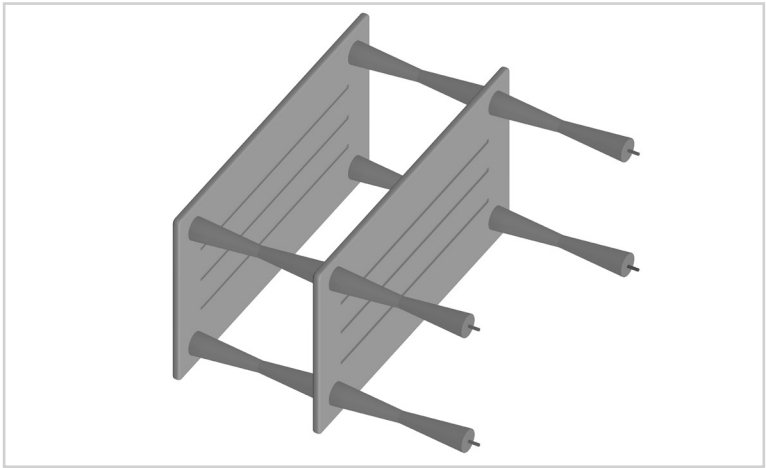


step 6:

Similarly, align the middle shelf (A3) with the studs on the bottom of the middle legs (B) as shown in the image.

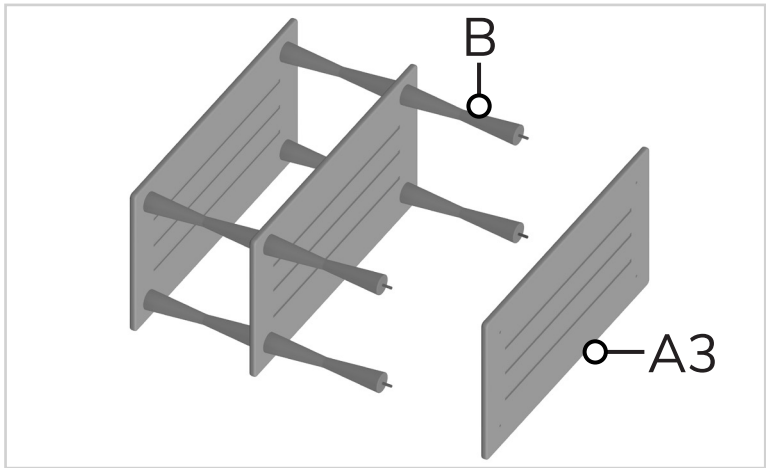


step 7:

Repeat step 4 to attach the remaining legs & shelves.

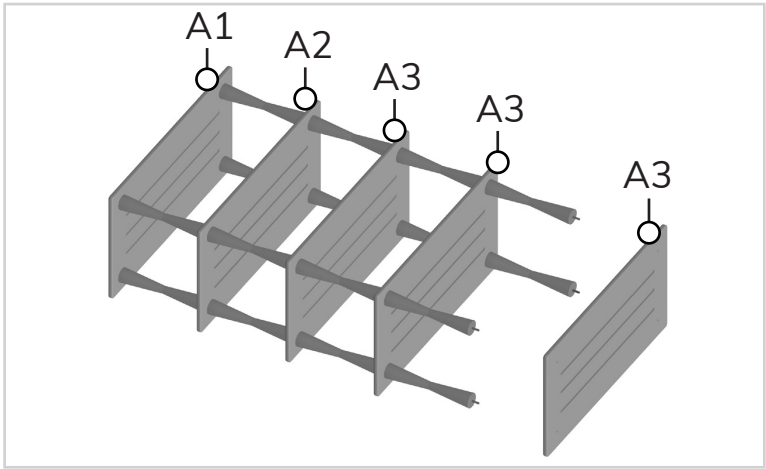


step 8:

Now, with the last shelf (A3), align the bottom leg (C) with the stud, and rotate clockwise to fix it in place.

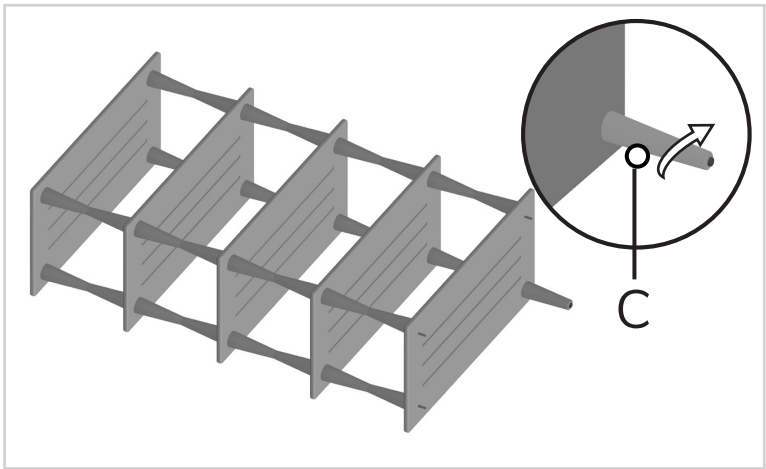


step 9:

Repeat step 8 with the remaining bottom legs (C).

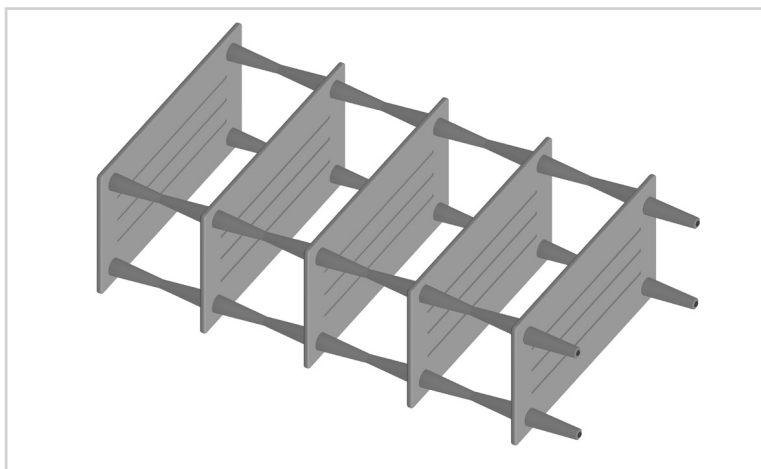

step 10:

Turn the bookcase upright. If required, adjust the levellers according to the floor.

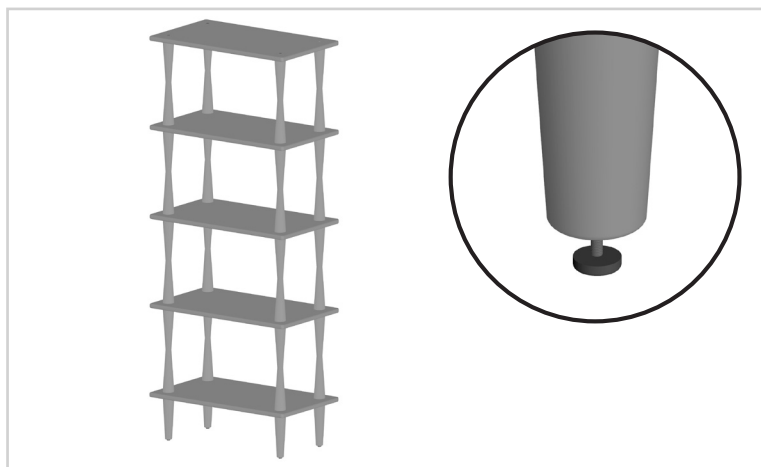

and your shelf is ready for installation

installation instructions



- ⓘ While assembling the product, tighten the bolts up to 50%. Once all parts are in place, only then fully tighten the bolts.

Hardware Included



a X 04
4 X 16mm



b X 04
4 X 30mm





c X 04



d X 04



e X 02

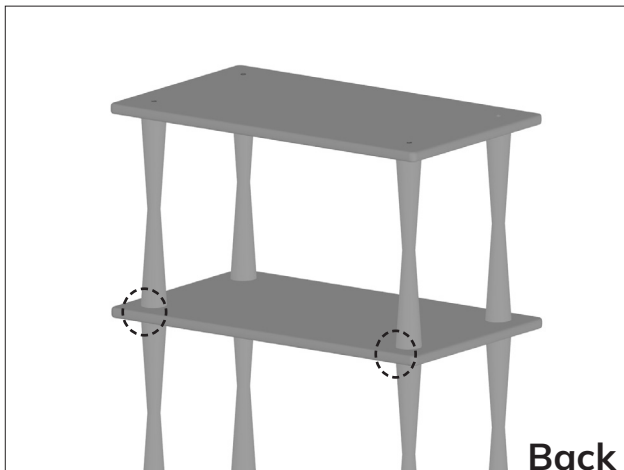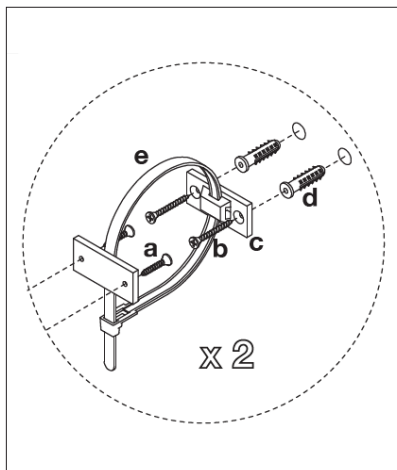

Wall Mounting Instructions

1. Using screws provided and a screwdriver, secure mounting plate(s) to the back of product.
2. Noting the location of the product's mounting plate(s), mark and drill holes on the wall for mounting plate(s). Drill pilot holes into marked positions and into a wall stud. NOTE: if wall studs are not available, drill holes slightly smaller than the drywall anchors and insert each anchor until its flange is flush with the wall.
3. Using a screwdriver, secure mounting bracket(s) to the wall stud or drywall anchors with screws provided.
4. Position product in final location, and secure to the wall by lacing one end of plastic tie(s) through both the and product mounting plates, and through the other end, pulling tightly to remove slack. Do not over tighten.

Voila! Your bookcase is now assembled and secure!

you've
got
a home
with us

