



vanity table

**T68M-W, T68M-B, T68M-W-L, T68M-B-L,
T68M-W-LS, T68M-B-LS**

INSTALLATION MANUAL

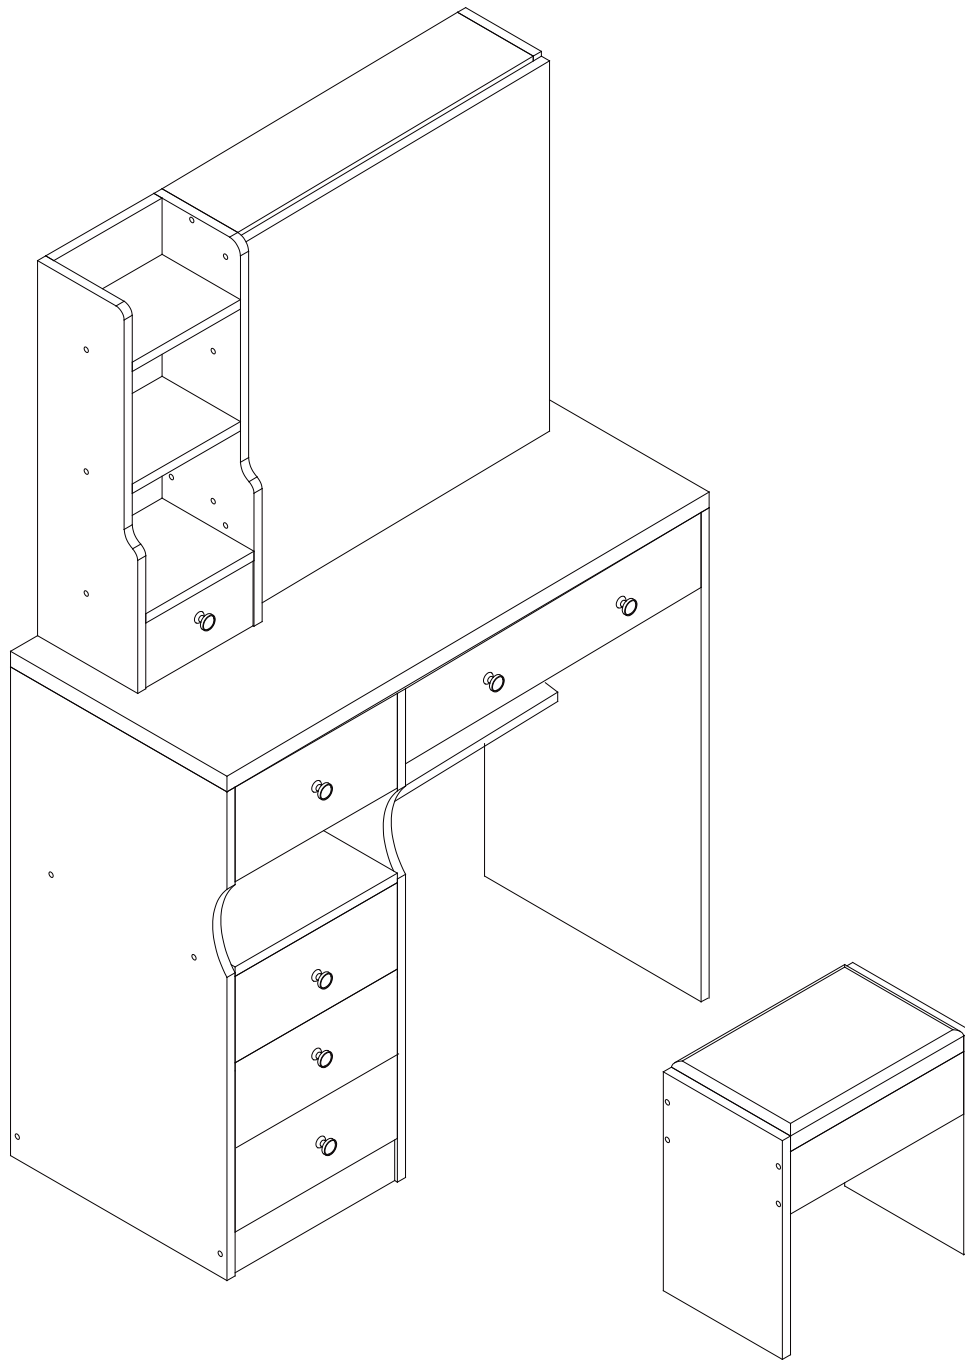


T68 is the model name, M is middle size, W is white, B is black, L represents with mirror light, S represents with built-in socket and hair dryer holder. If your product model is T68M-W, T68M-B, then the product does not come with a mirror light, built-in socket, and hair dryer stand. If your product is T68M-W-L or T68M-B-L, it does not come with a built-in socket and hair dryer stand.

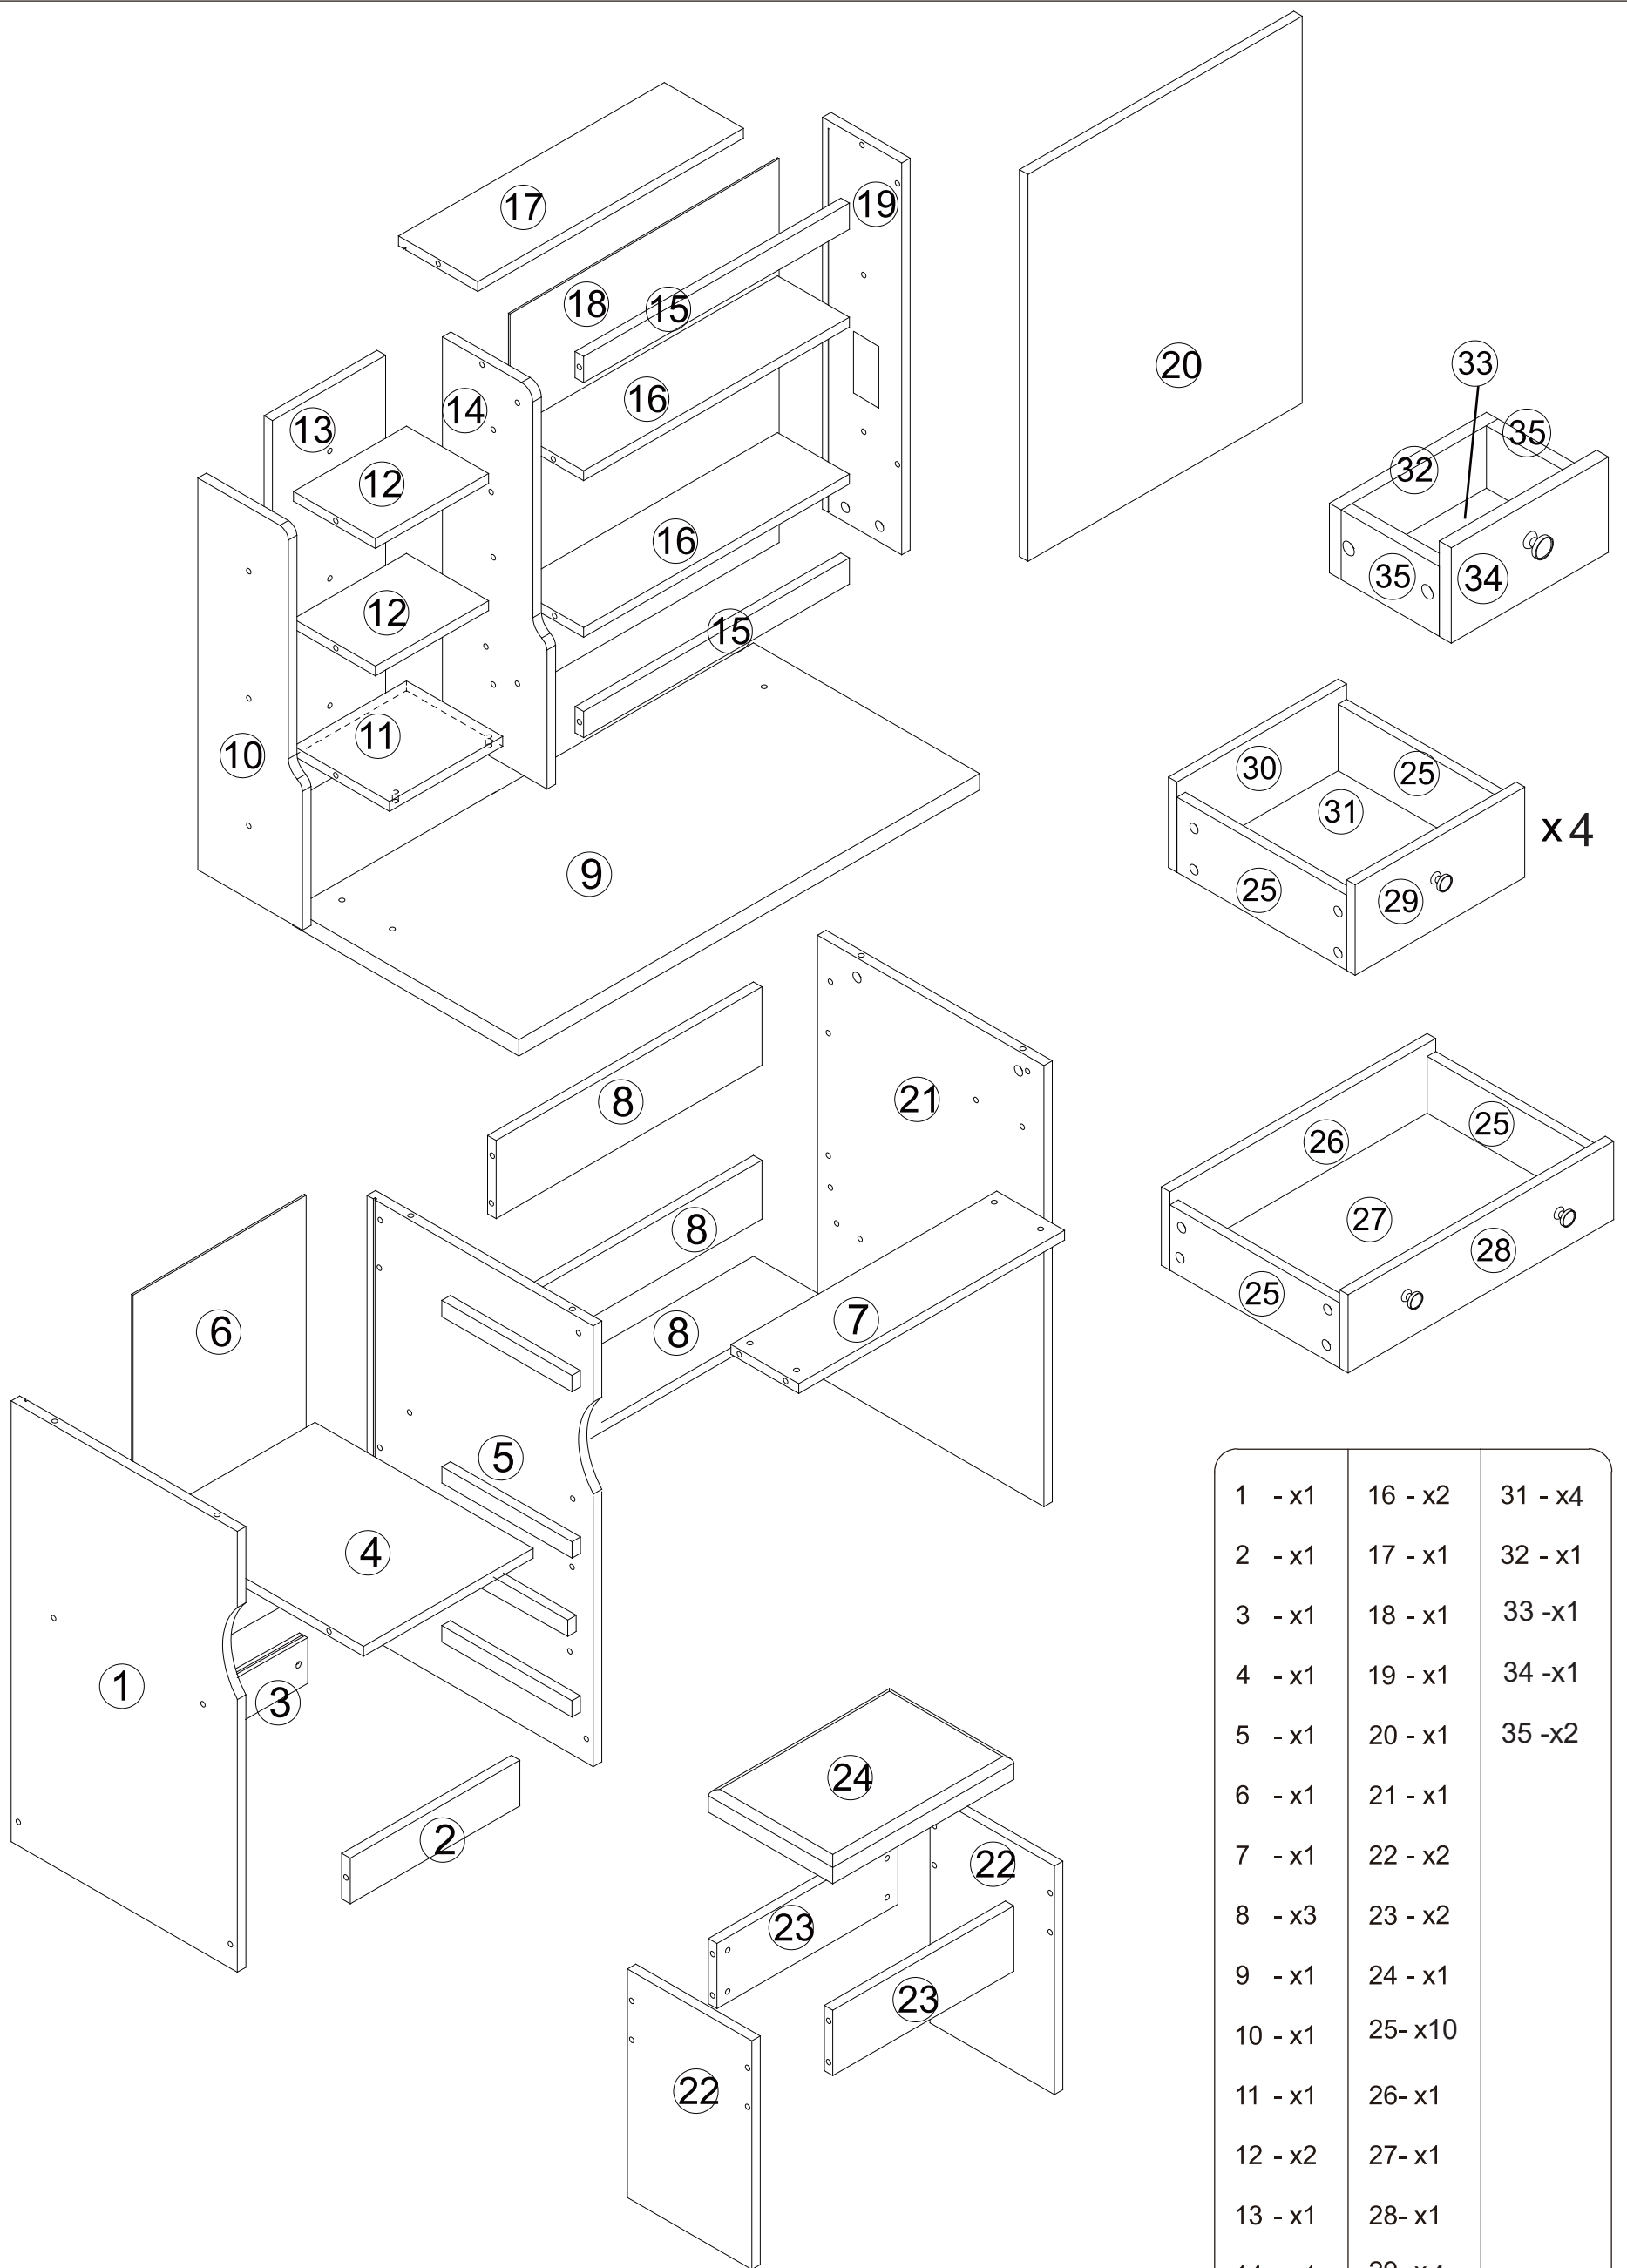

1 - x1	16 - x2	31 - x4
2 - x1	17 - x1	32 - x1
3 - x1	18 - x1	33 - x1
4 - x1	19 - x1	34 - x1
5 - x1	20 - x1	35 - x2
6 - x1	21 - x1	
7 - x1	22 - x2	
8 - x3	23 - x2	
9 - x1	24 - x1	
10 - x1	25 - x10	
11 - x1	26 - x1	
12 - x2	27 - x1	
13 - x1	28 - x1	
14 - x1	29 - x4	
15 - x2	30 - x 4	

Before installation, please find a marker pen with erasable marks, distinguish each accessory based on the shape of the board and the position of the holes, and then write the corresponding numbers on the board.

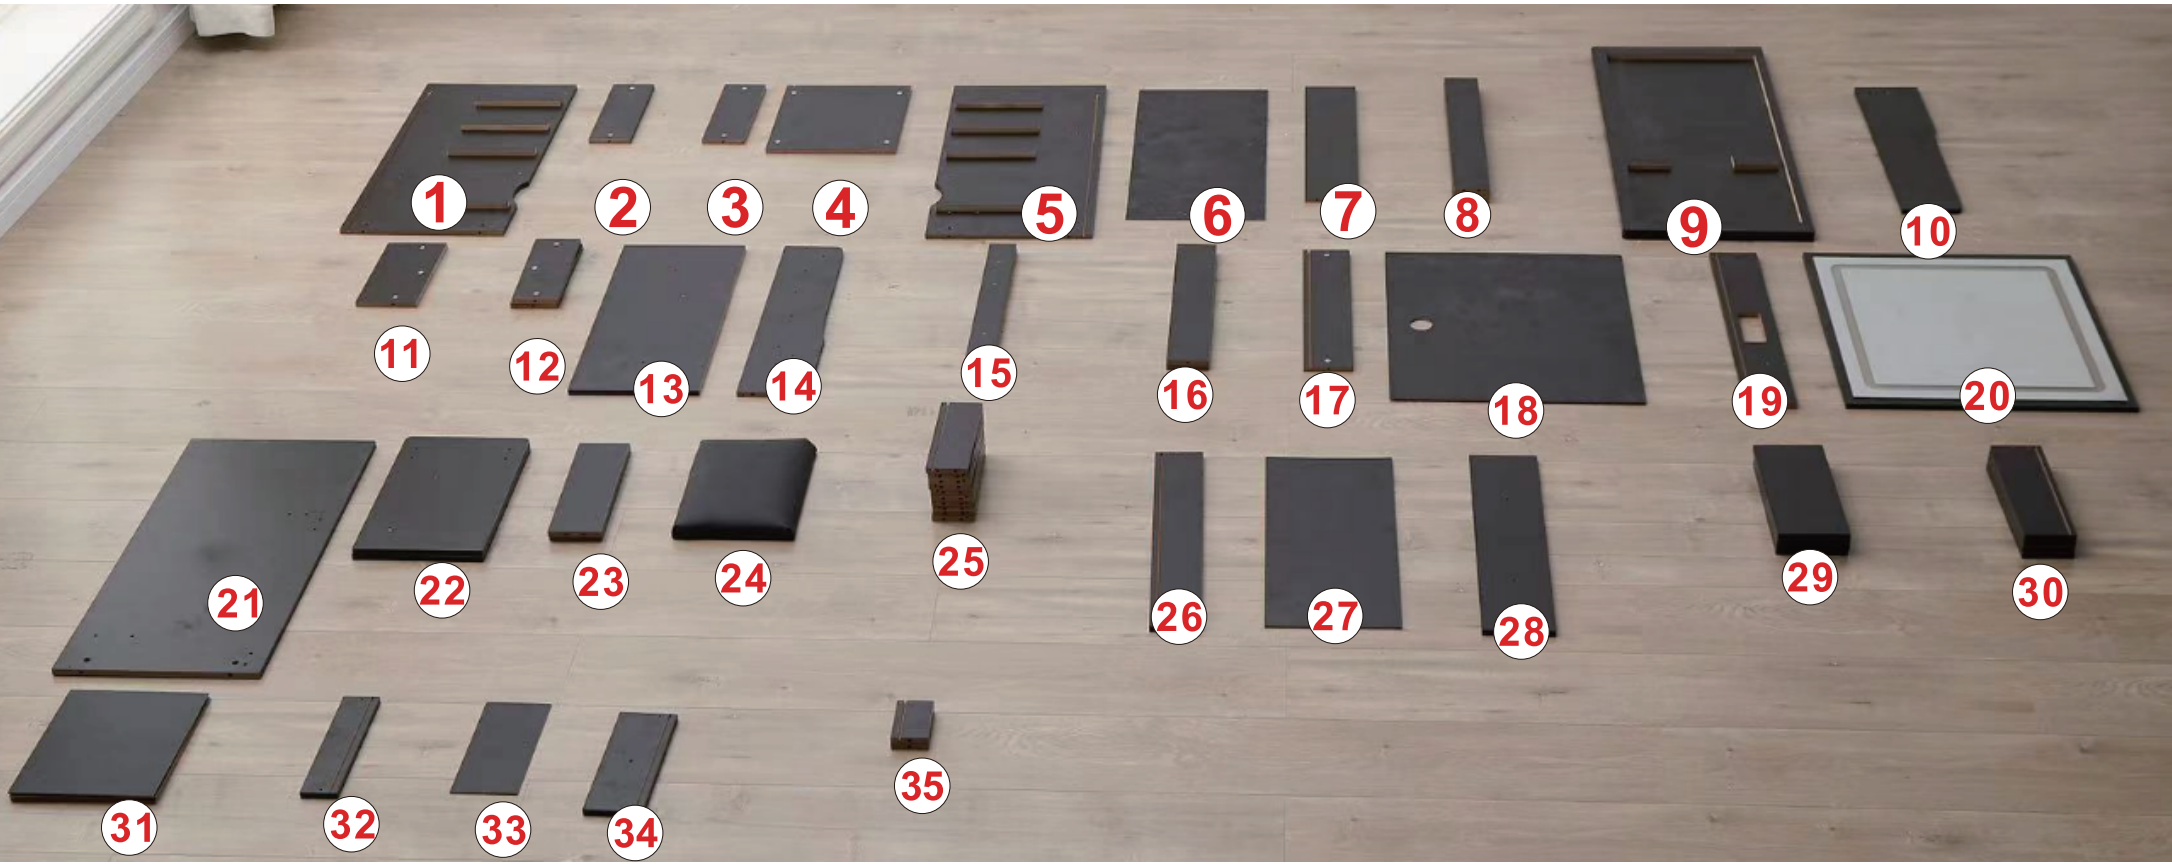



1 -x1



2 -x1




3 -x1



4 -x1



5 -x1

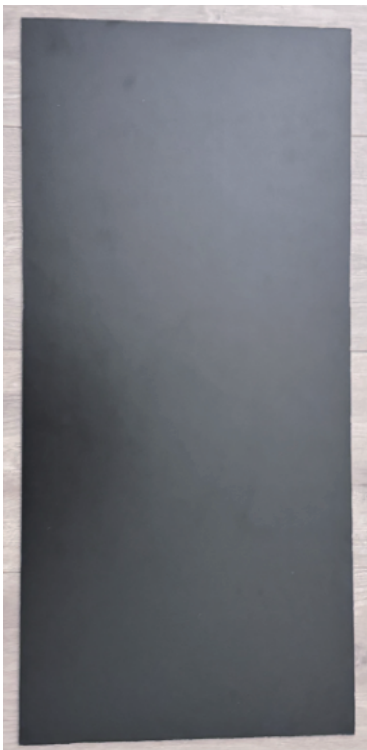

6 -x1



7 -x1



8 -x3



9 -x1



10 -x1



11 -x1



12 -x2



13 -x1



14 -x1



15 -x2



16 -x2



17 -x1



18 -x1



19 -x1



20 -x1



21 -x1



22 -x2



23 -x2



24 -x1



25 -x10



26 -x1



27 -x1



28 -x1



29 -x4



30 -x4



31 -x4



32 -x1



33 -x1



34 -x1



35 -x2

hardware



A	3 IN 1 SCREW	x 58
---	--------------	------



B	3 IN 1 LOCK	x 58
---	-------------	------



C	12MM SCREW	x16
---	------------	-----



D	GUIDE RAIL	x2
---	------------	----




E	HANDLE SCREW	x7
---	--------------	----



F	L PLATE	x2
---	---------	----




G	DRAWER POSITIONING SCREW	x10
---	--------------------------	-----

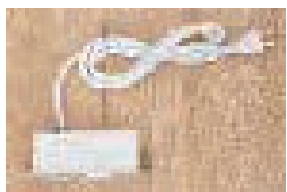

H	SOCKET	x1
---	--------	----


Only for LS

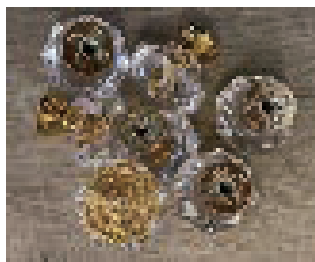

L	DRAWER HANDLE	x7
---	---------------	----



J	2 IN 1 SCREW	x48
---	--------------	-----

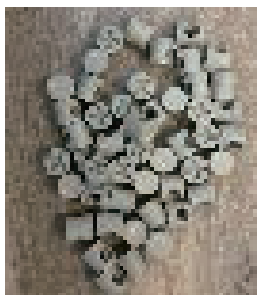

K	2 IN 1 LOCK	x48
---	-------------	-----



I	HAIR DRYER STAND	x1
---	------------------	----

Only for LS




M	16MM SCRAE	x2
---	------------	----

For fixing the socket


1. Screw installation method

When the screw is installed, please keep it in line with the board, and do not tighten it too tightly

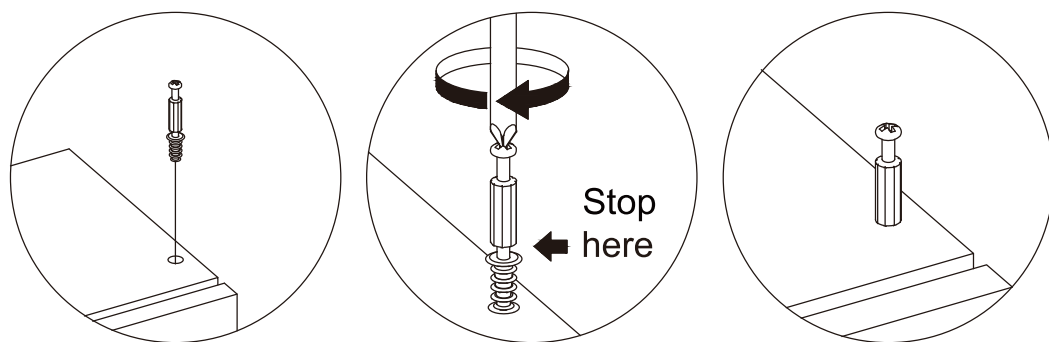


2. Check the Nut direction



This direction of the marked nut is consistent with the direction in which the screw is inserted

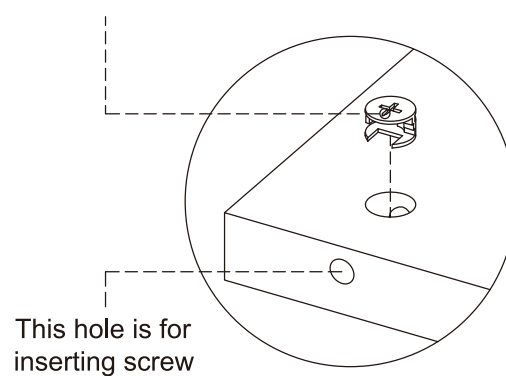

3. Installation on the board with fixing screws

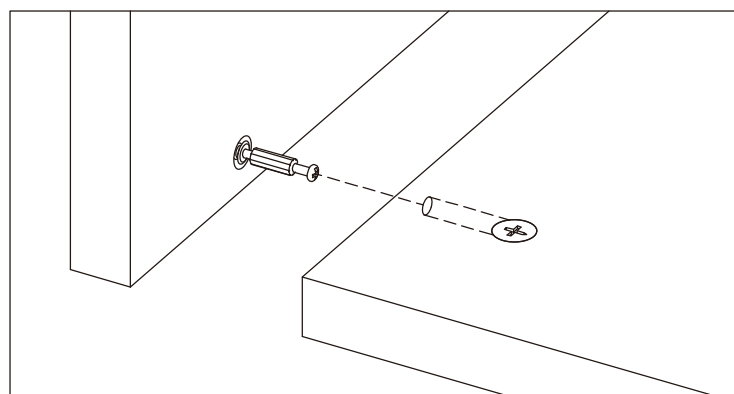


3. Rotate slowly until it stops

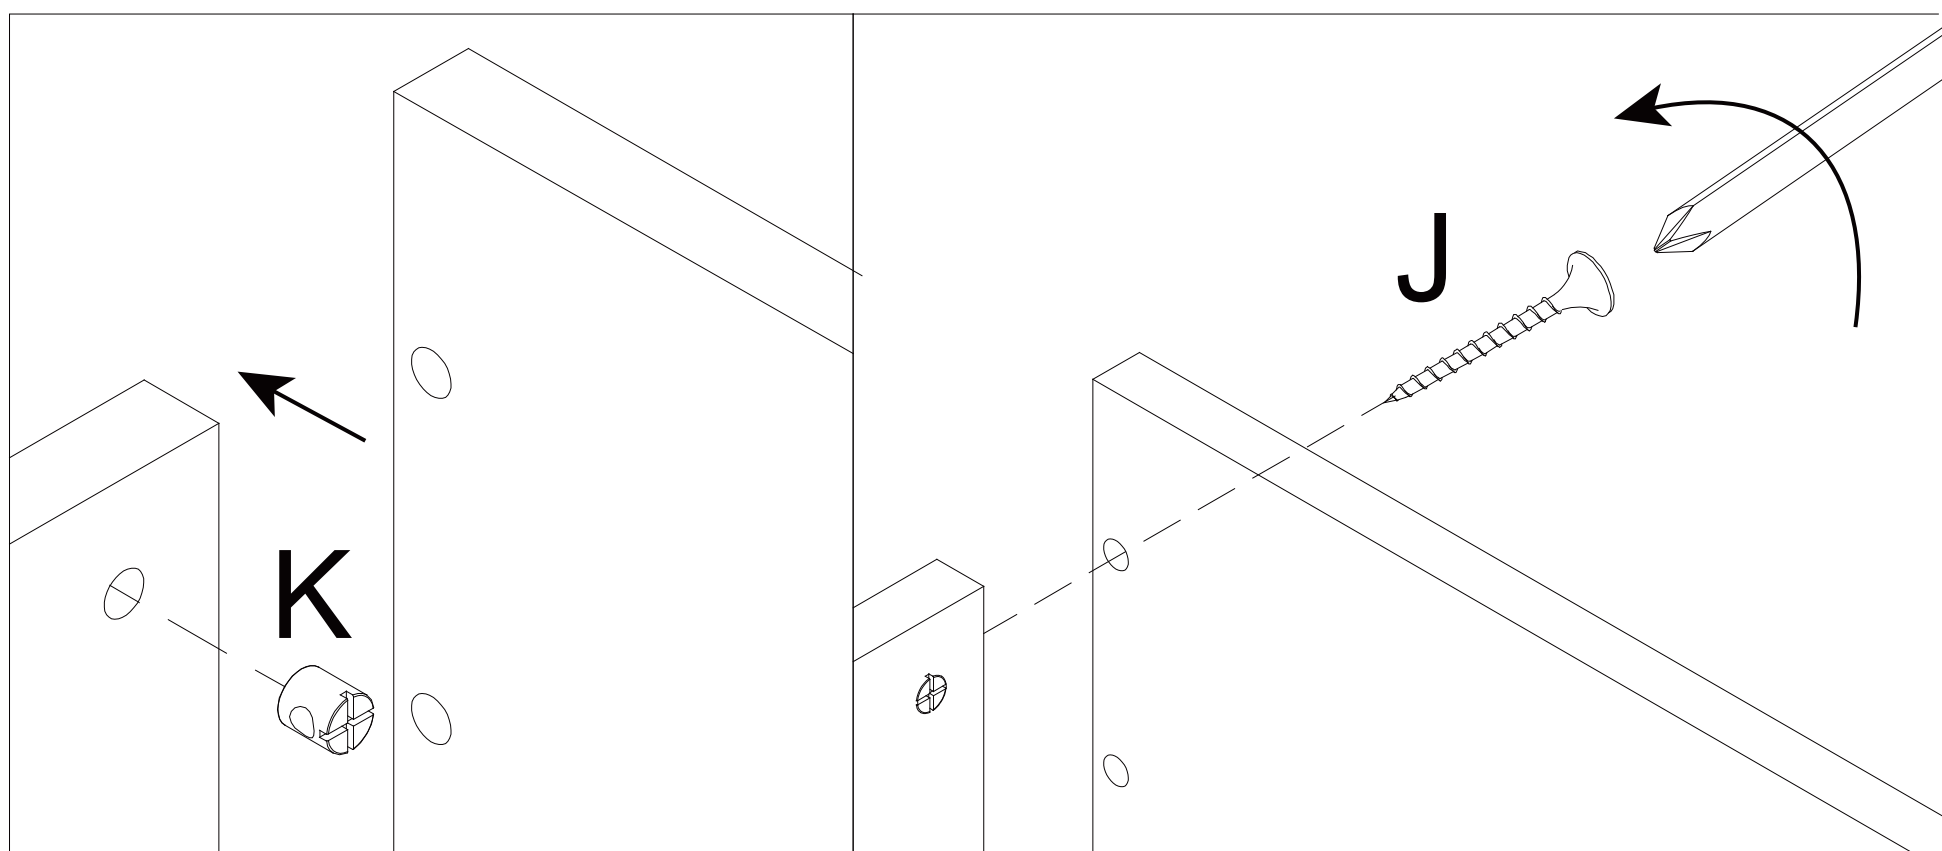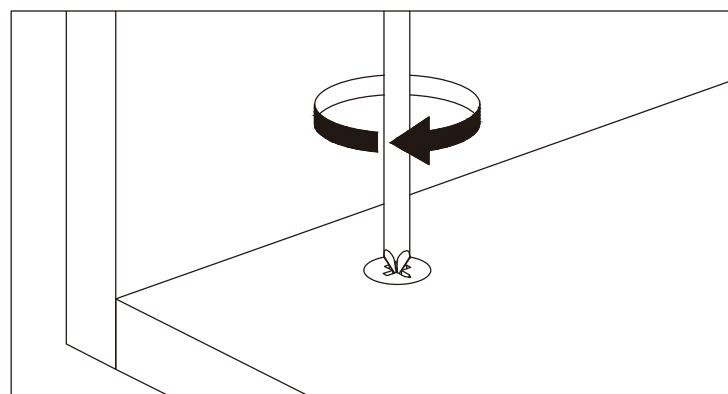


Step 01


pick up (26)x1, (27)x1, (28)x1, (25)x2 and (29)x4, (30)x4, (31)x4, (25)x8
(32)x1, (33)x1, (34)x1, (35)x2

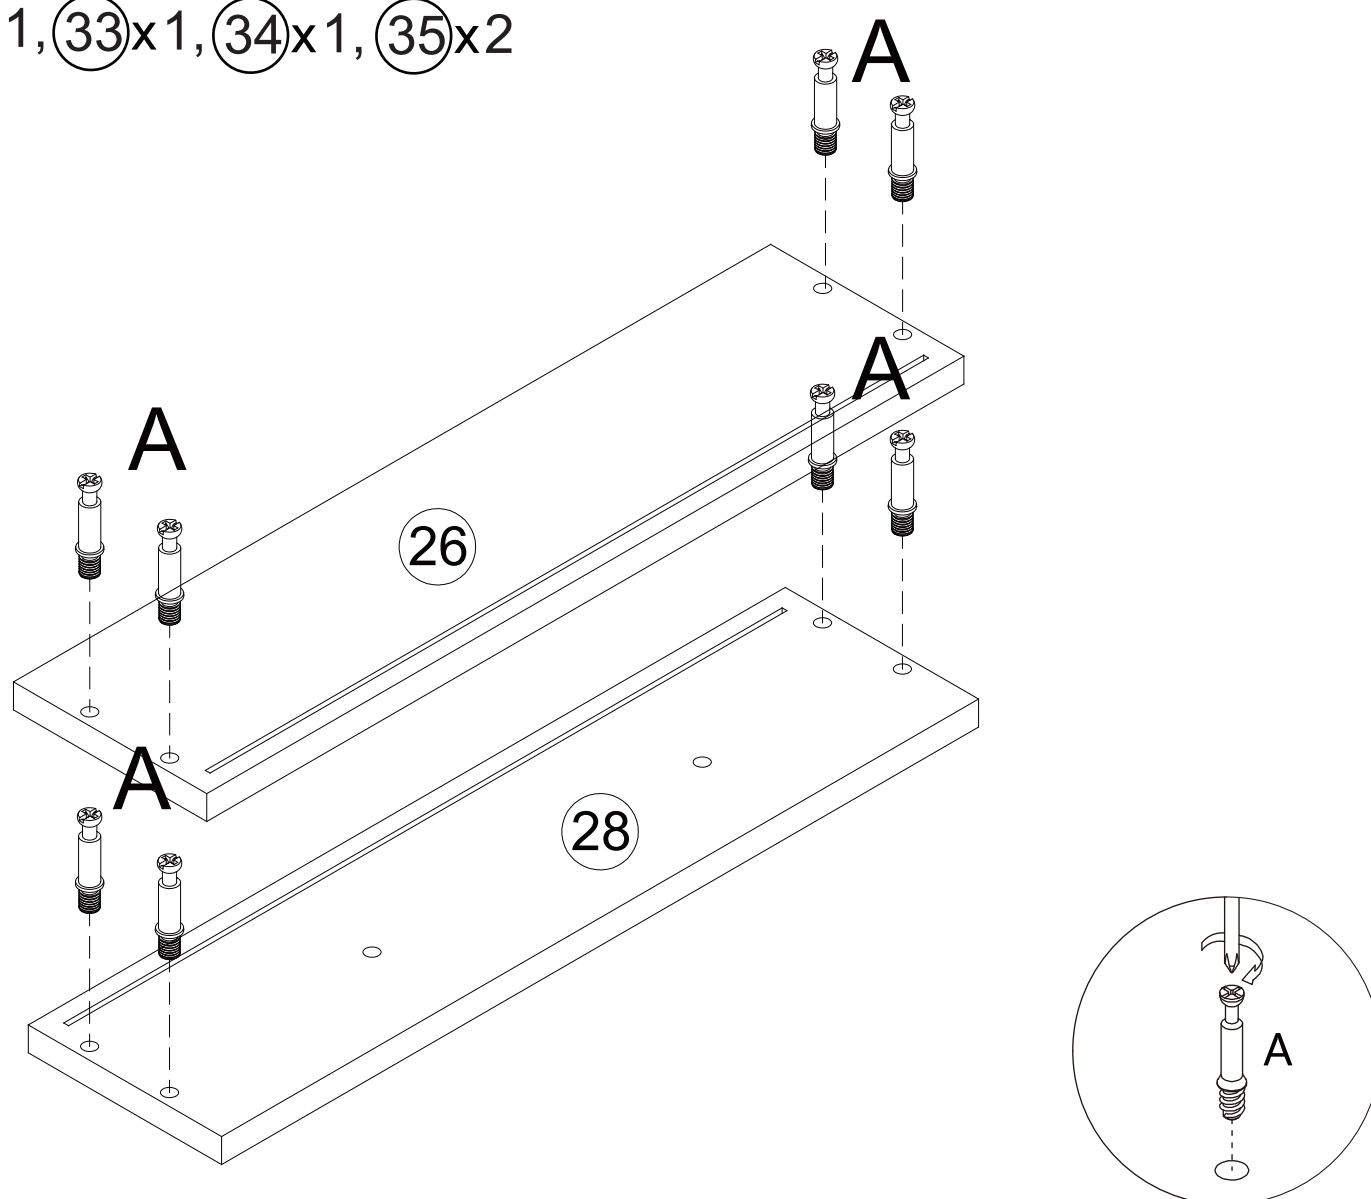


Step 02

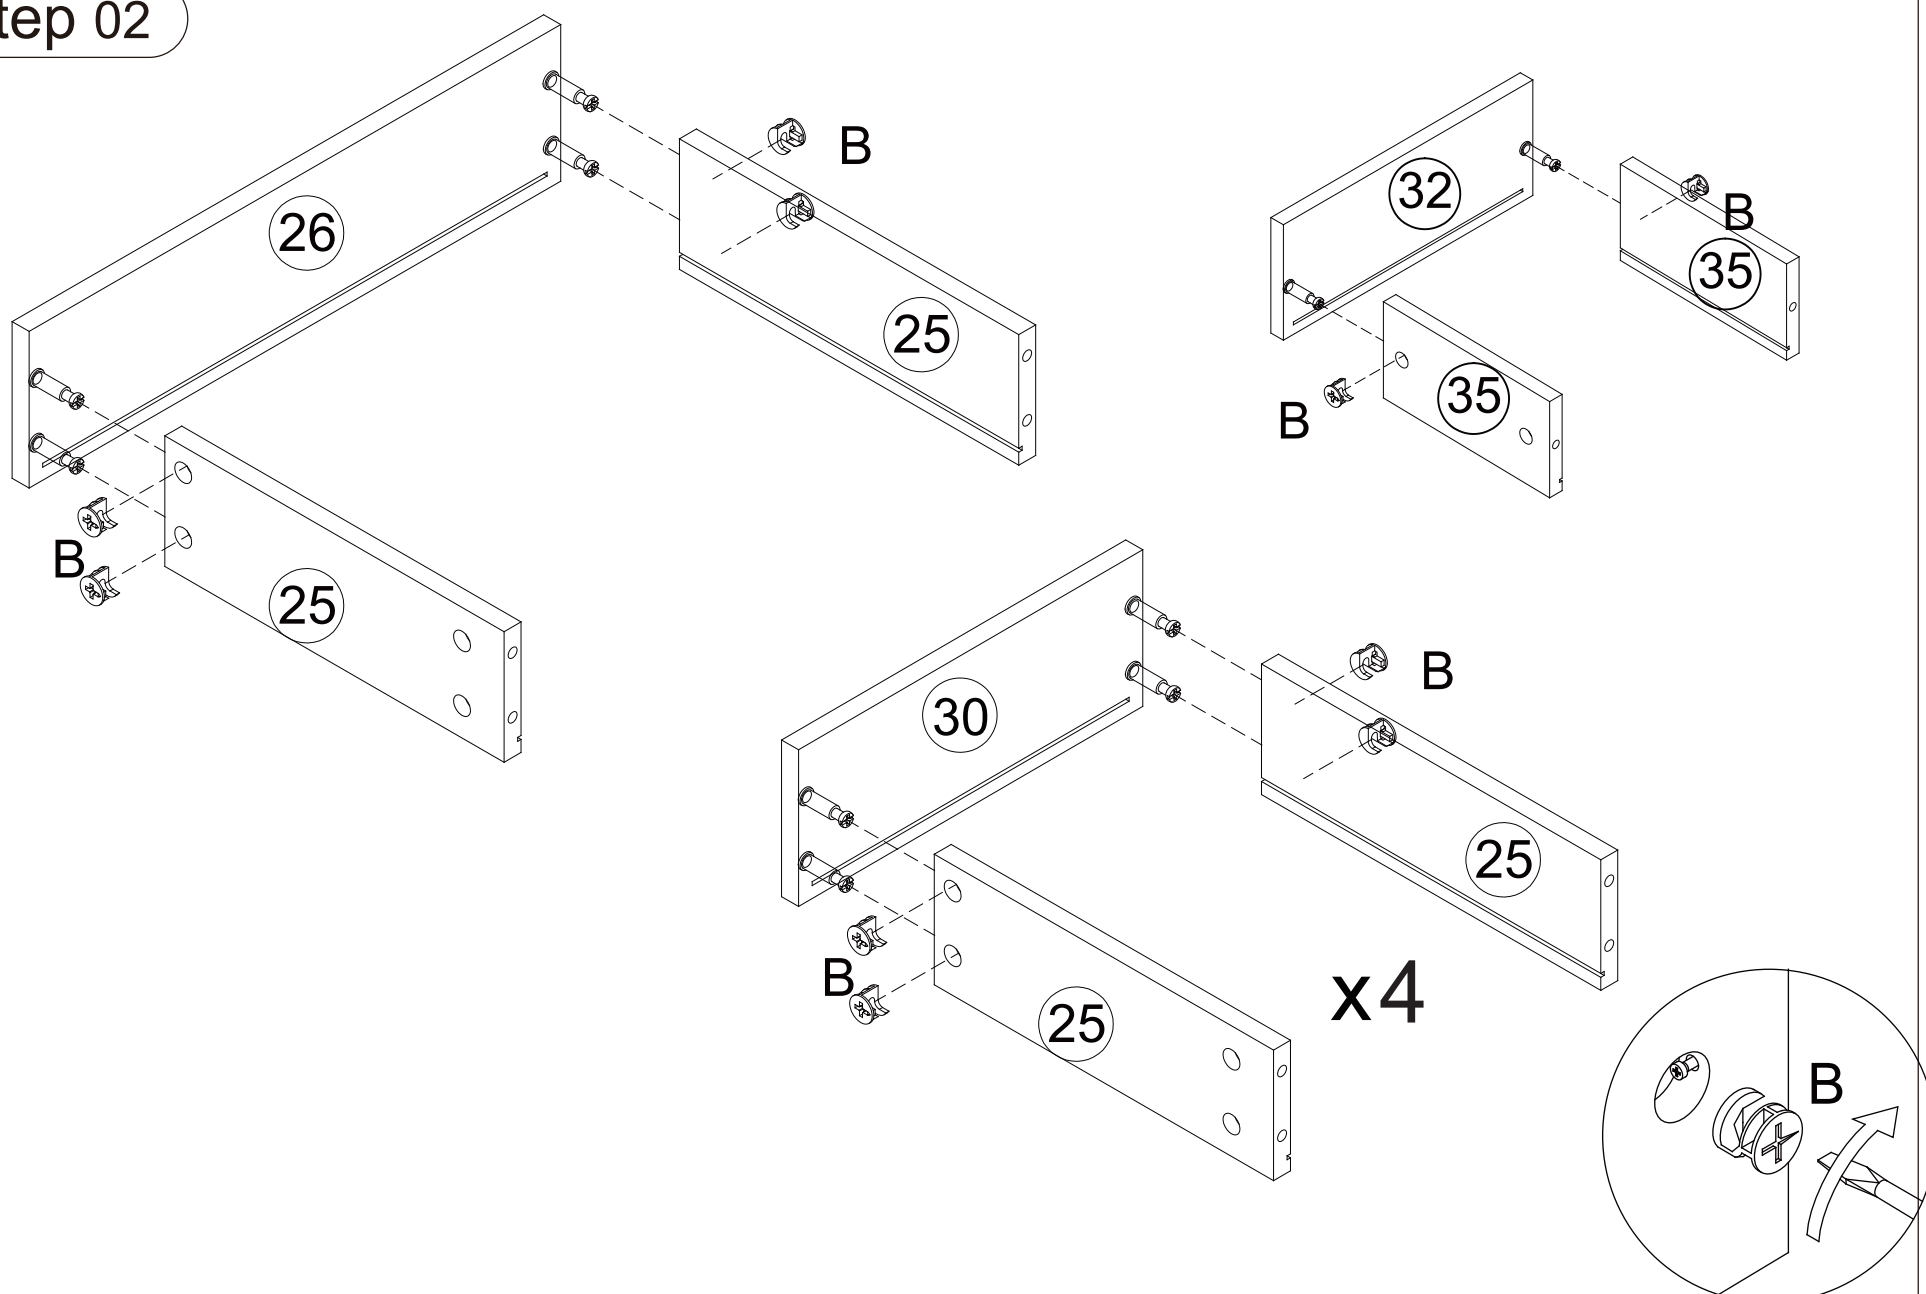

Step 03

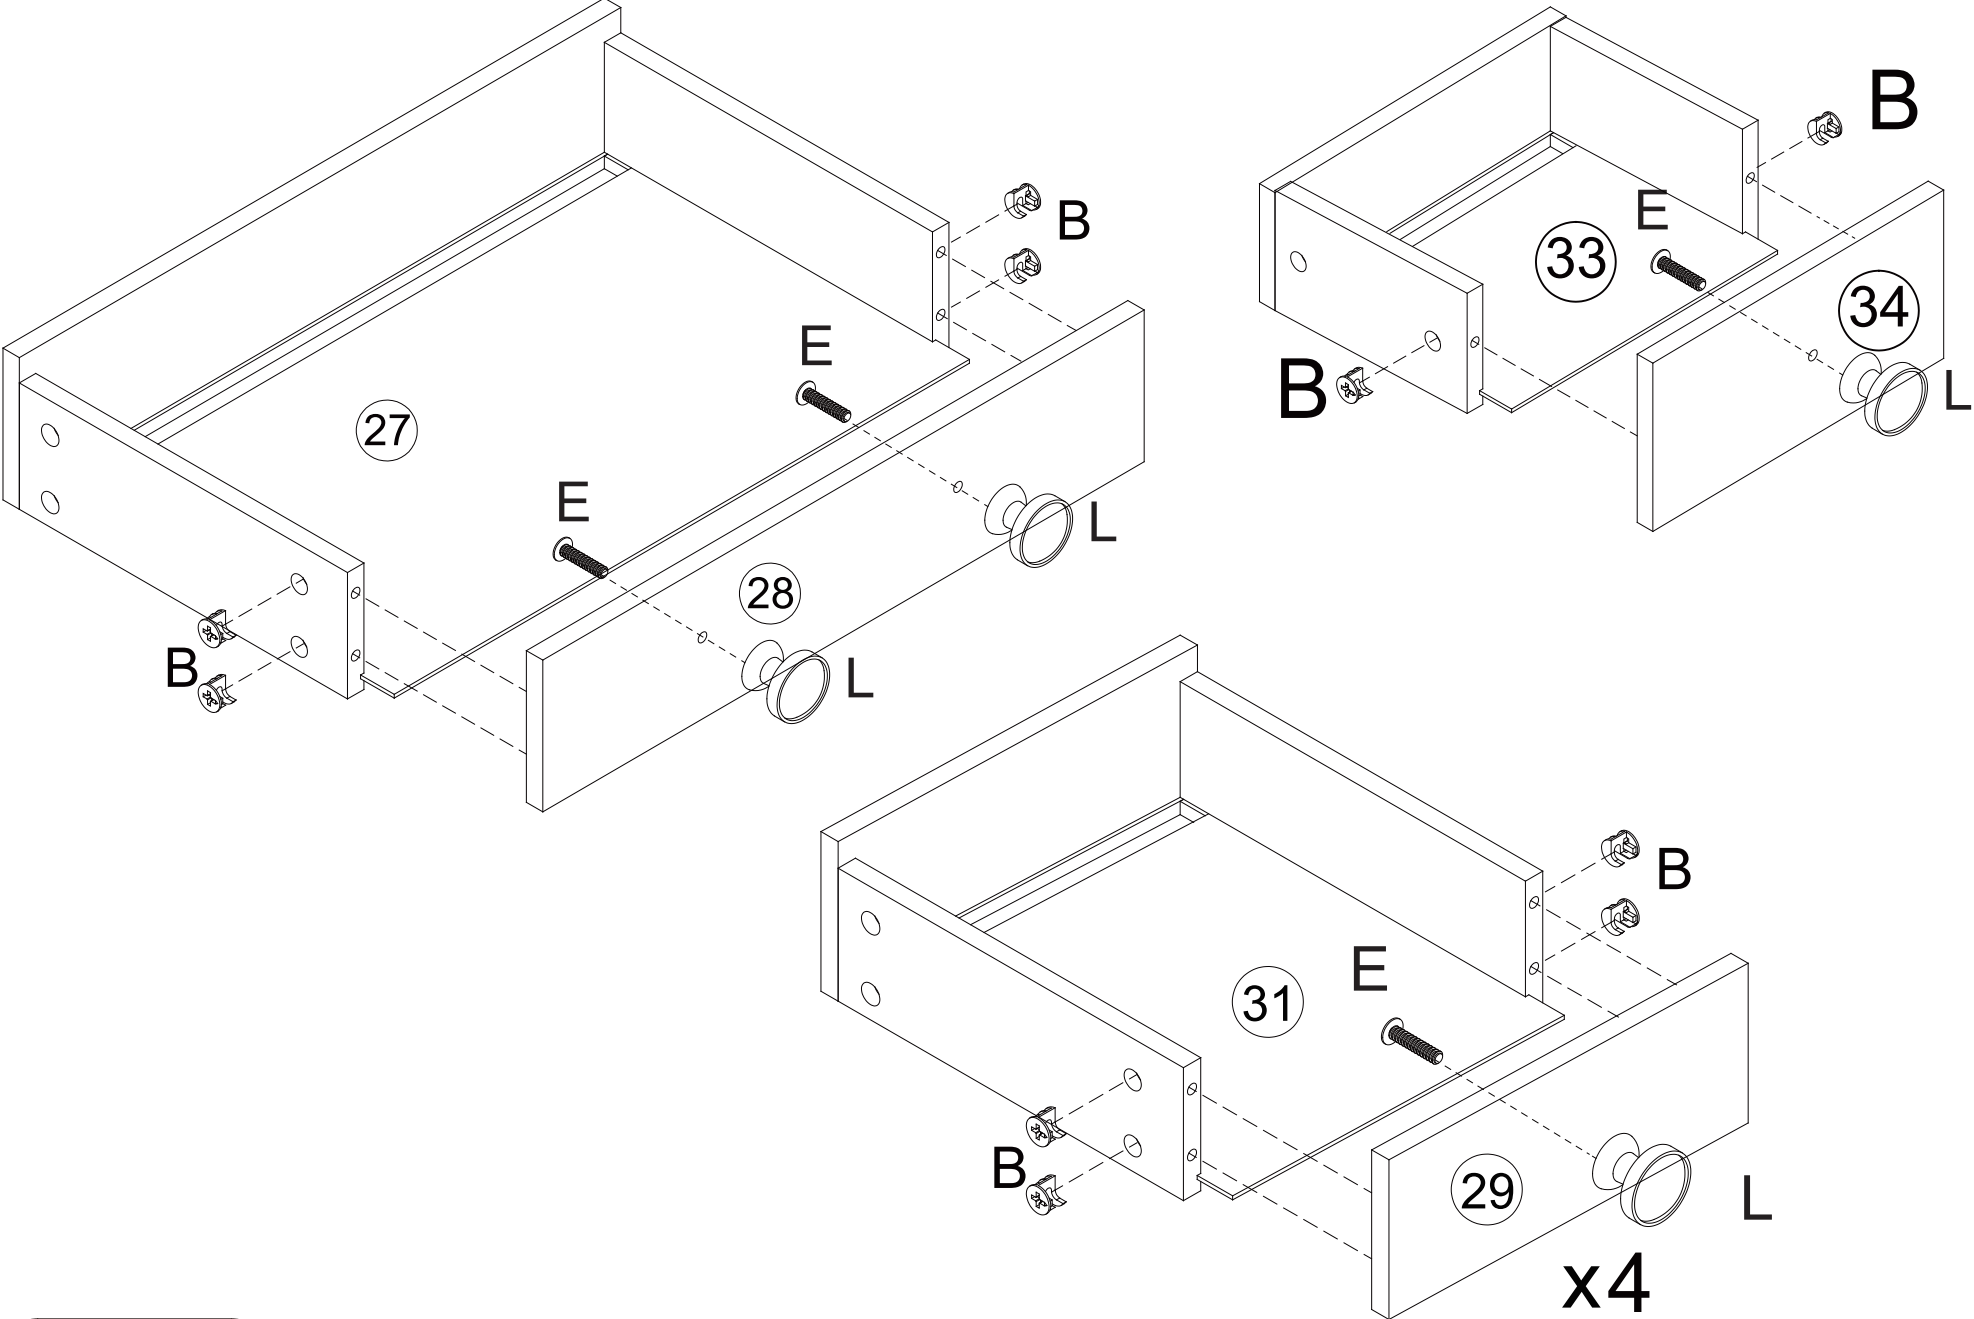


Step 04

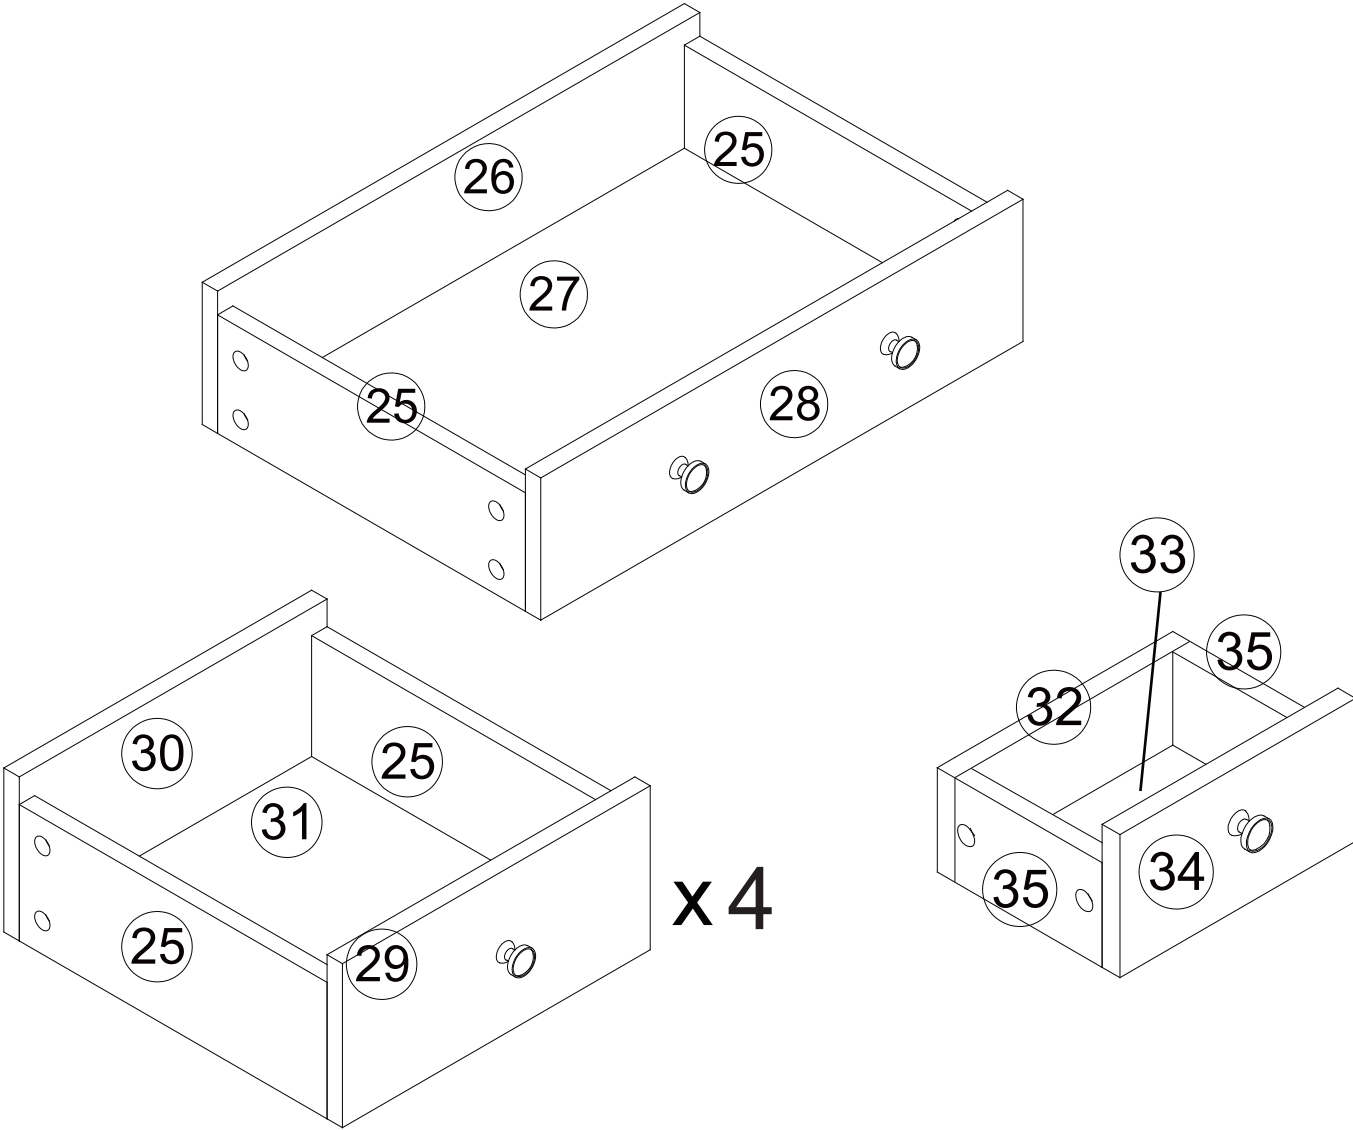


Step 05


pick up ①x1, ②x1, ③x1, ⑤x1, ⑥x1, ④x1

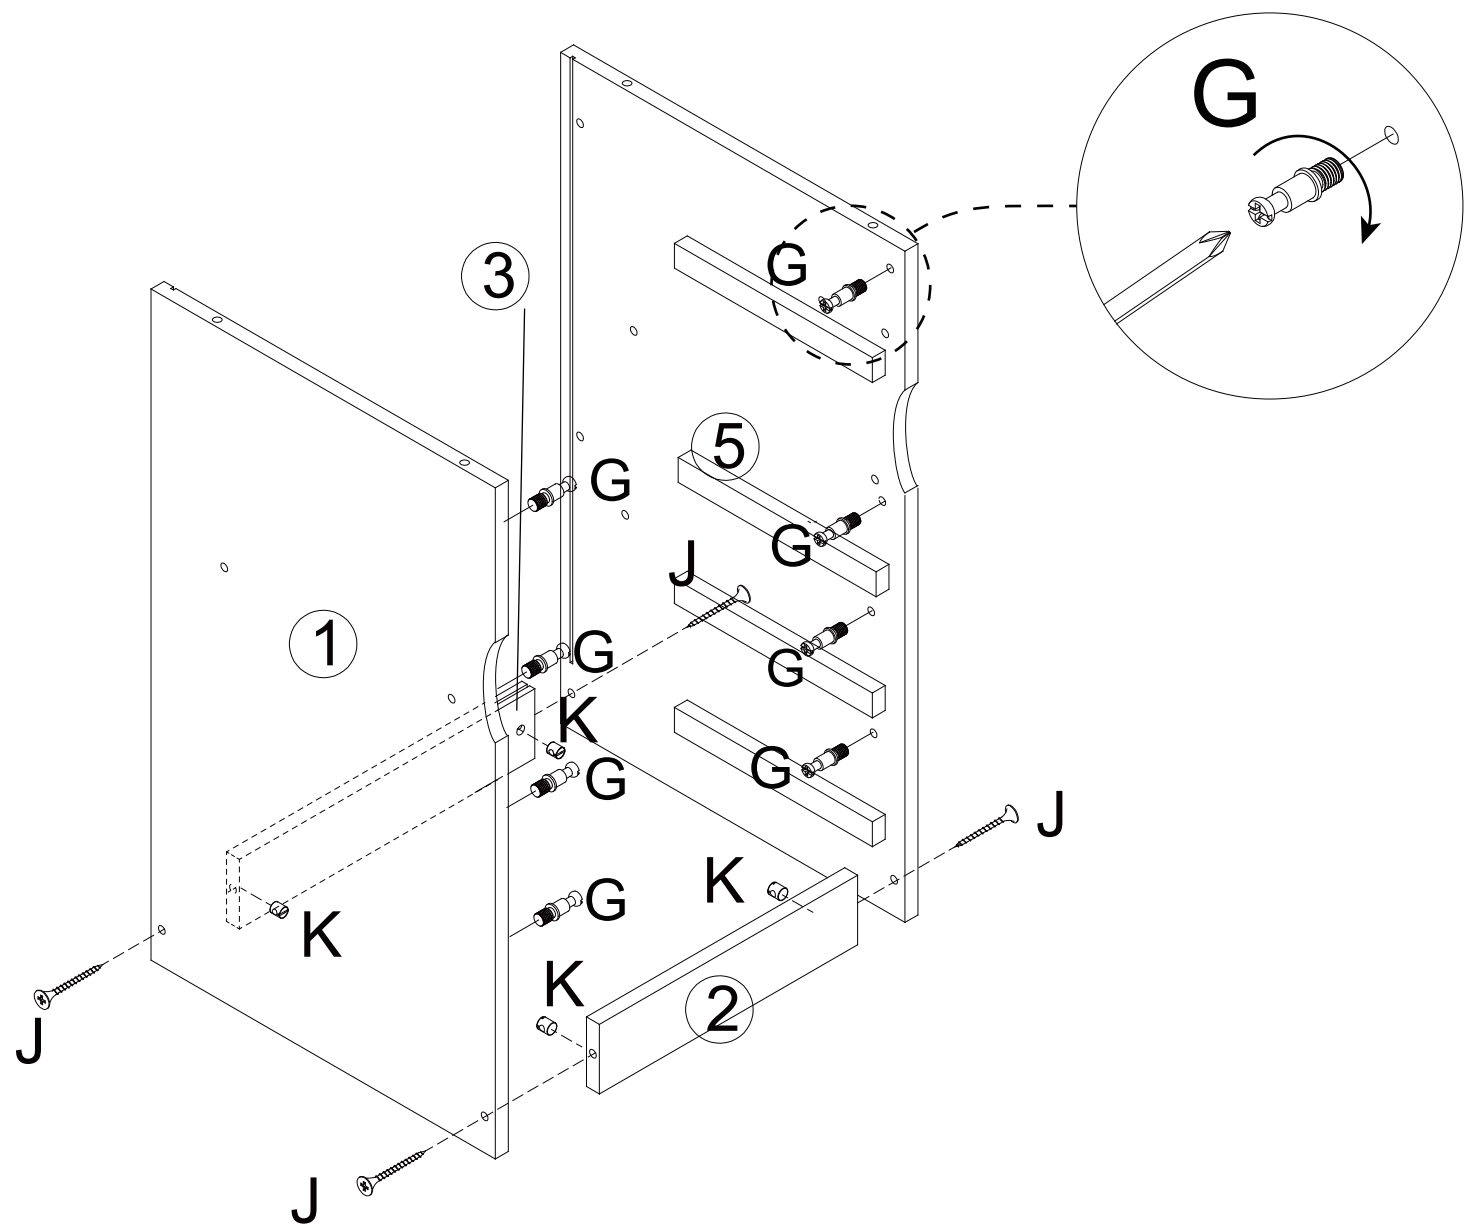

Step 06

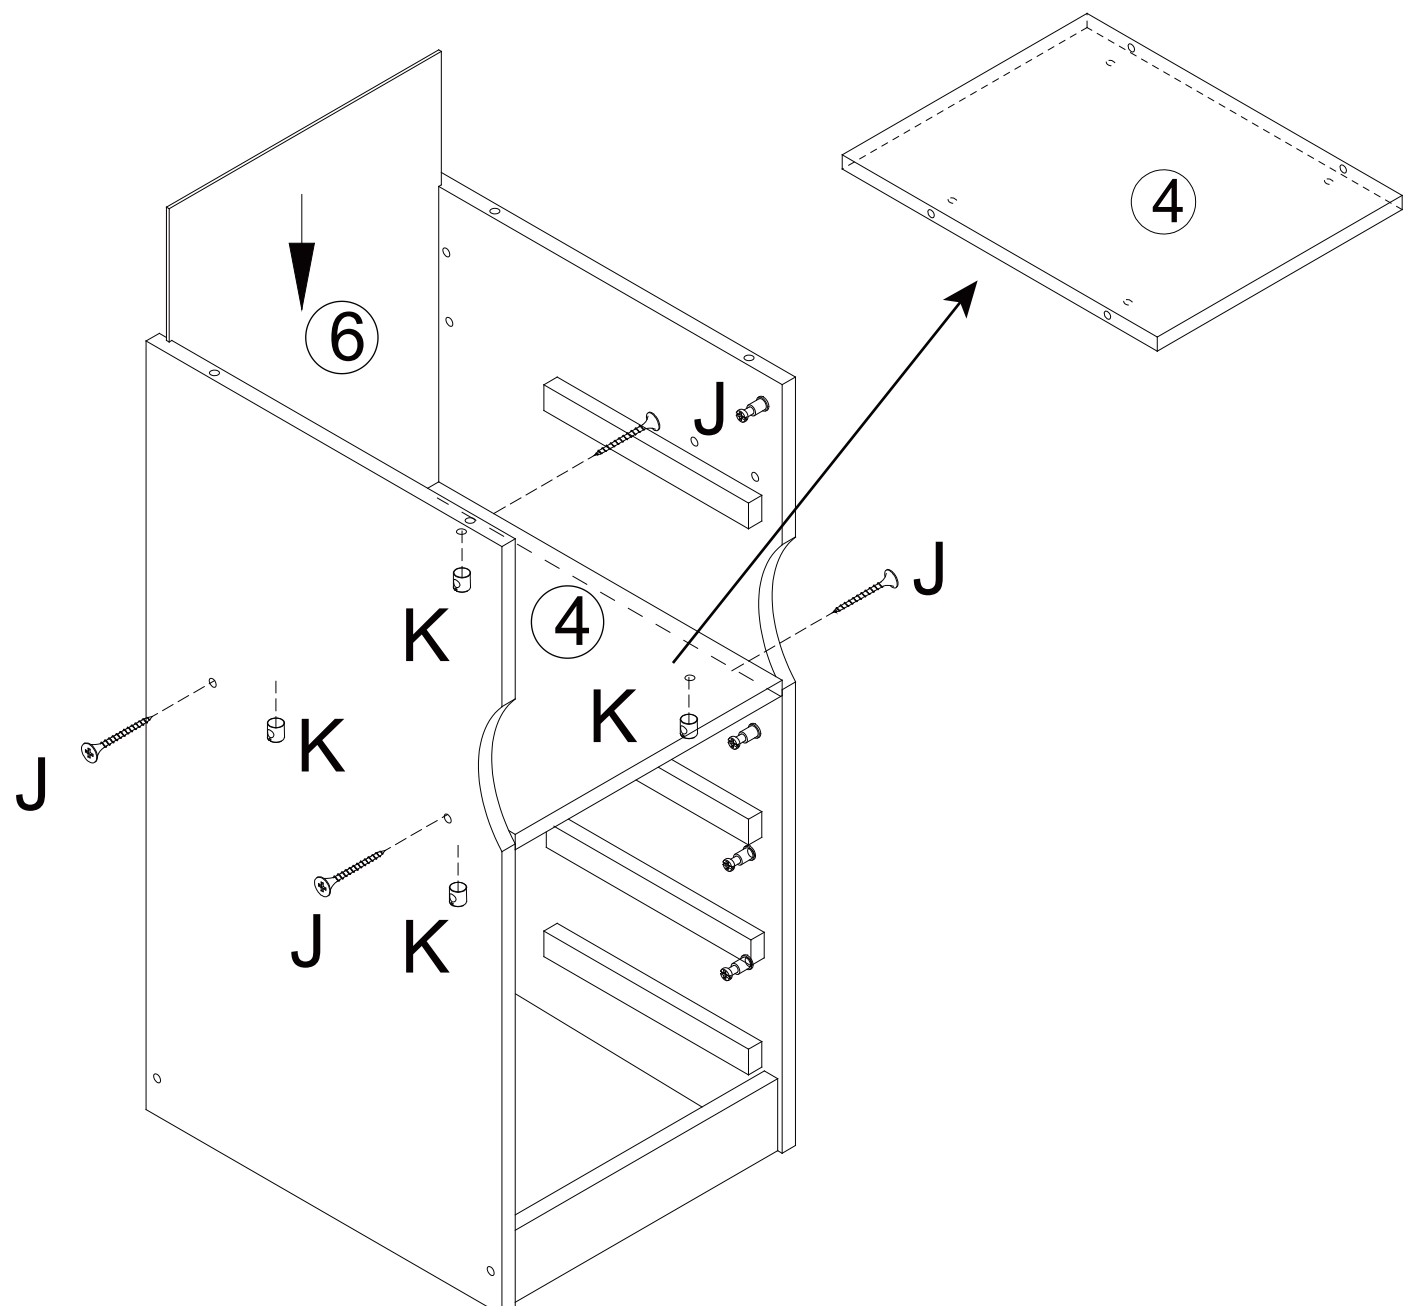


Step 07

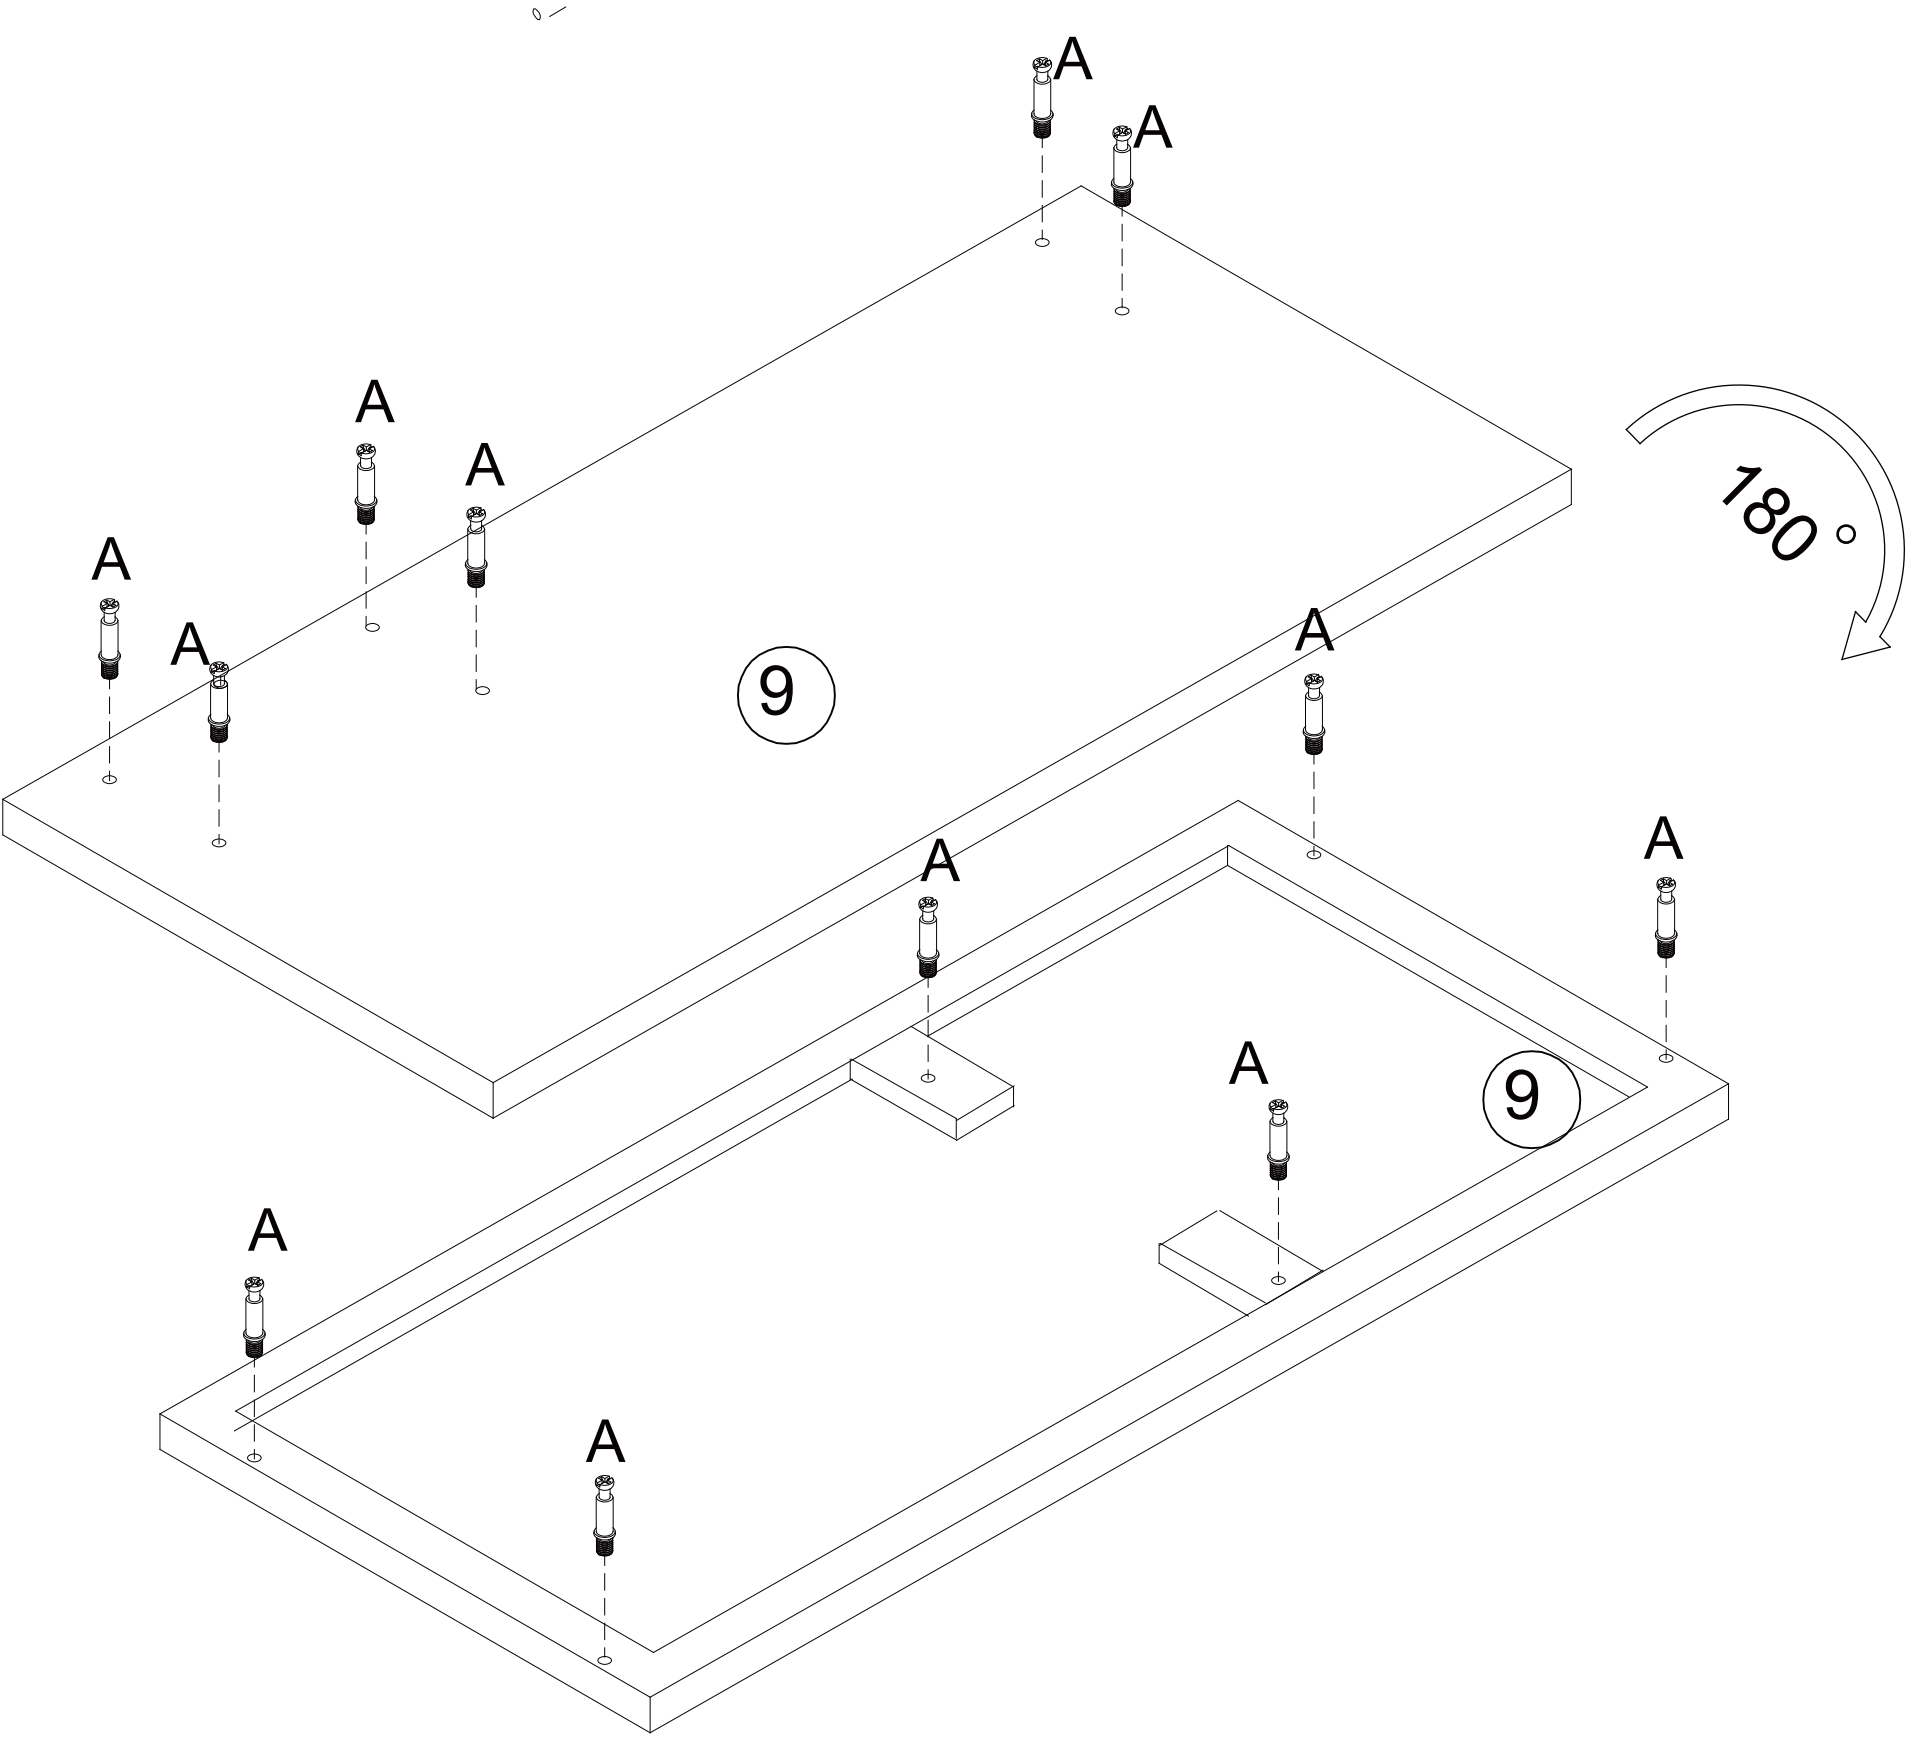


Step 08


pick up ⑦x1, ⑧x3, ②① x1, ⑨x1

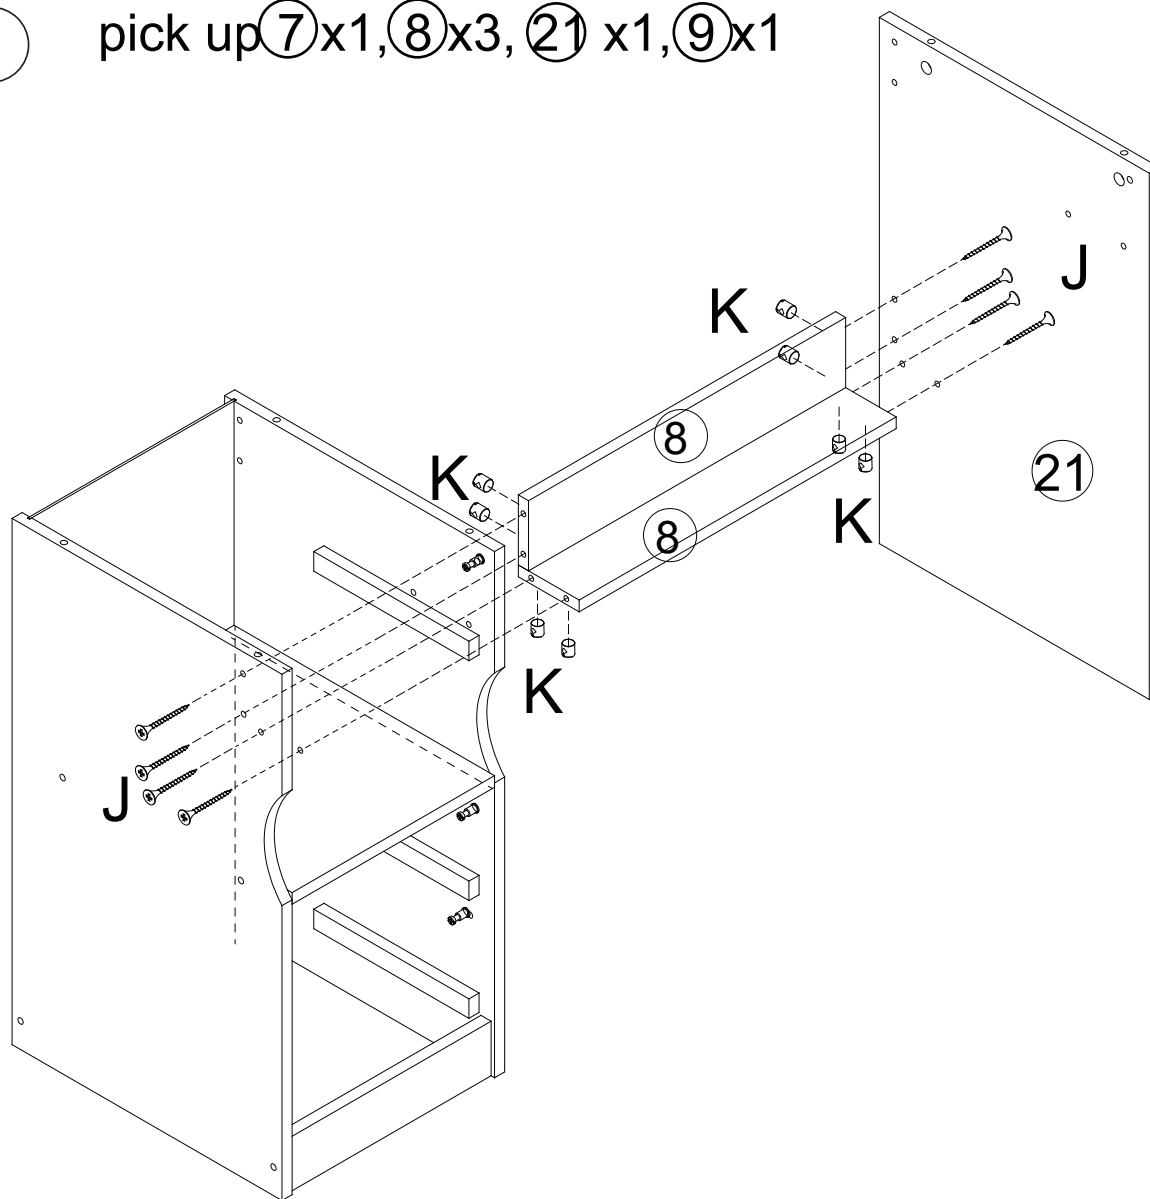

Step 09

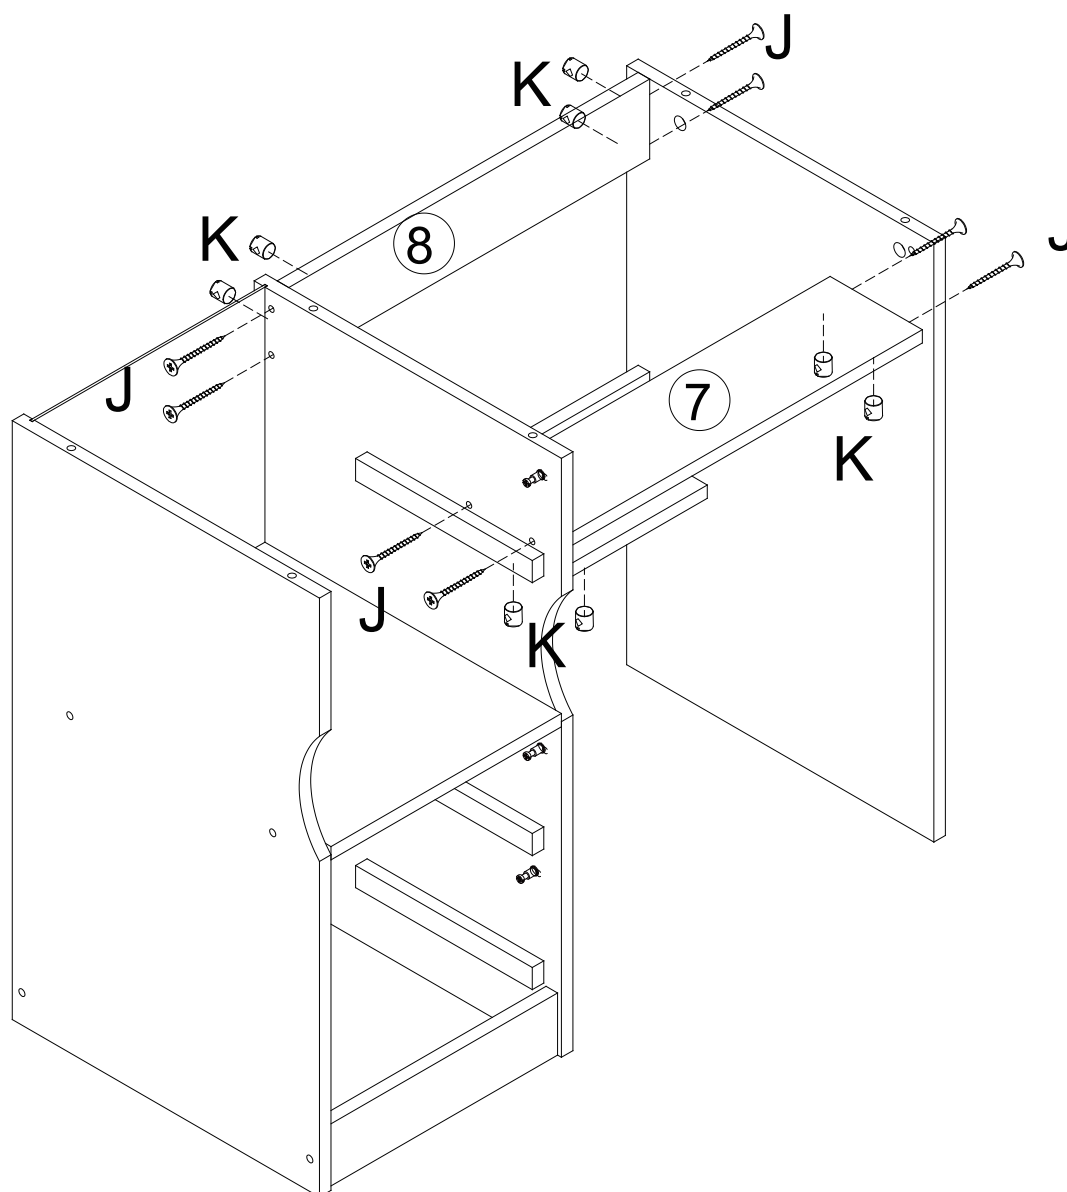


Step 10

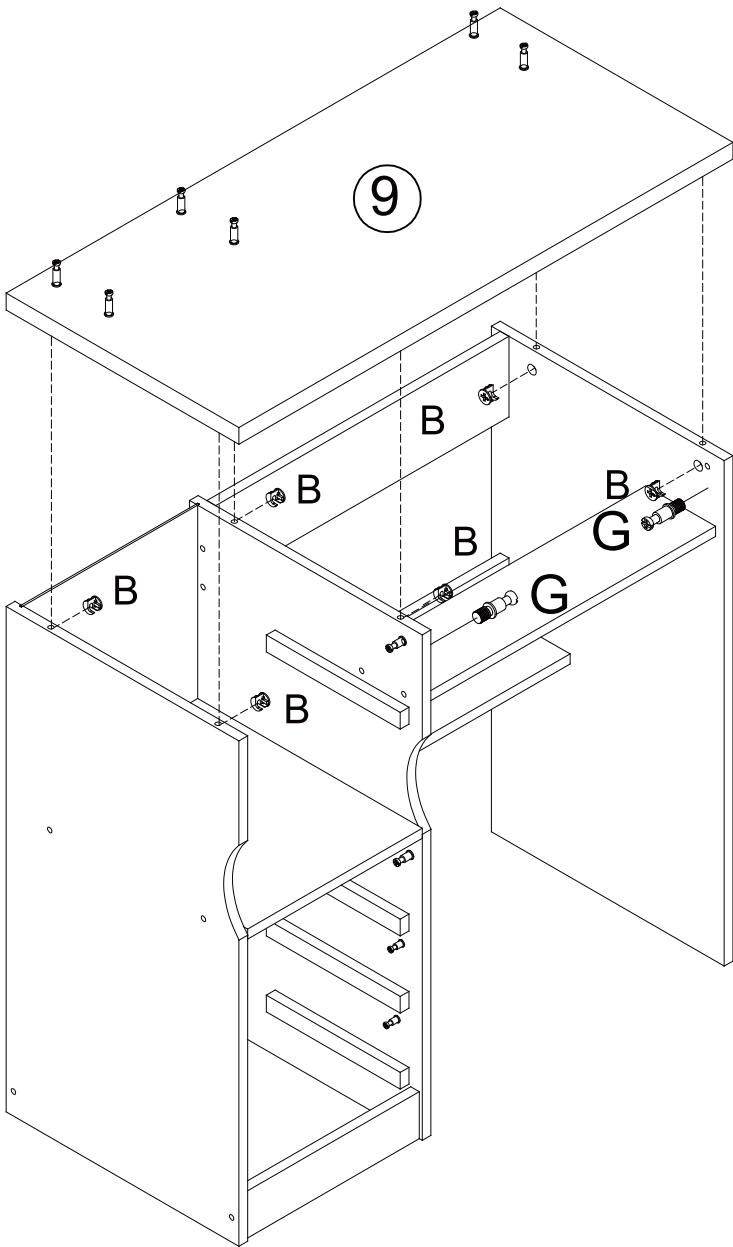


Step 11

pich up ⑩ x1, ⑪ x1, ⑫ x2, ⑬ x1

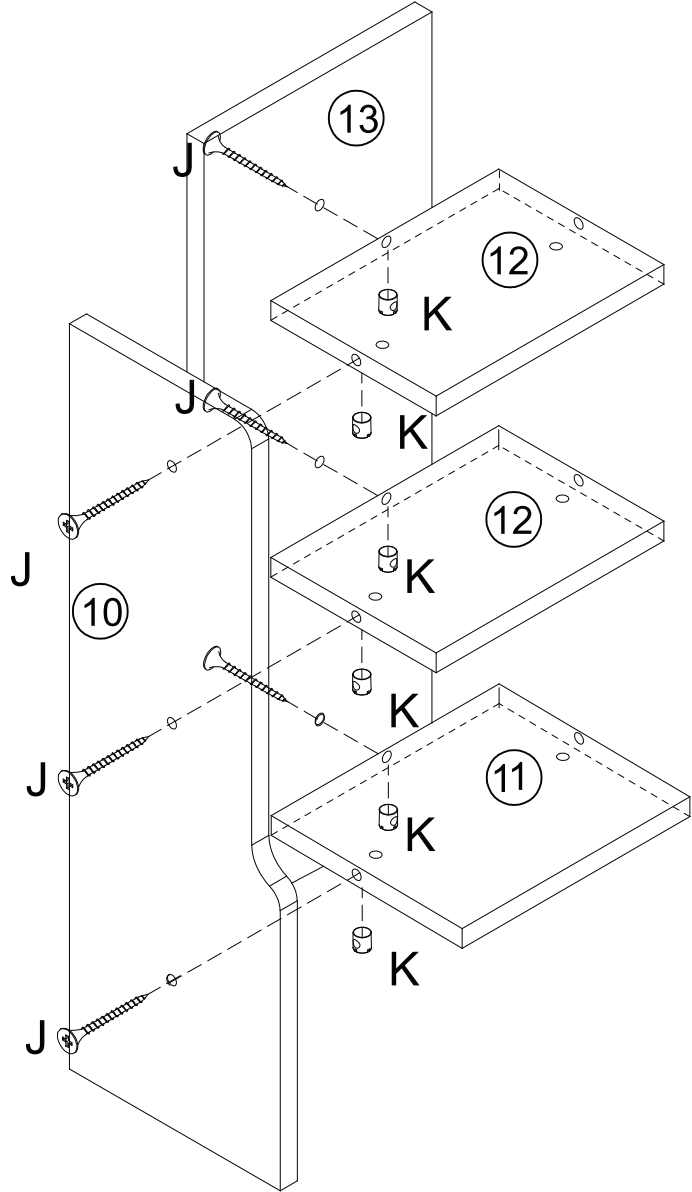


Step 12


pick up ⑭ x1, ⑰ x1, ⑮ x2, ⑯ x2, ⑰ x1, ⑱ x1

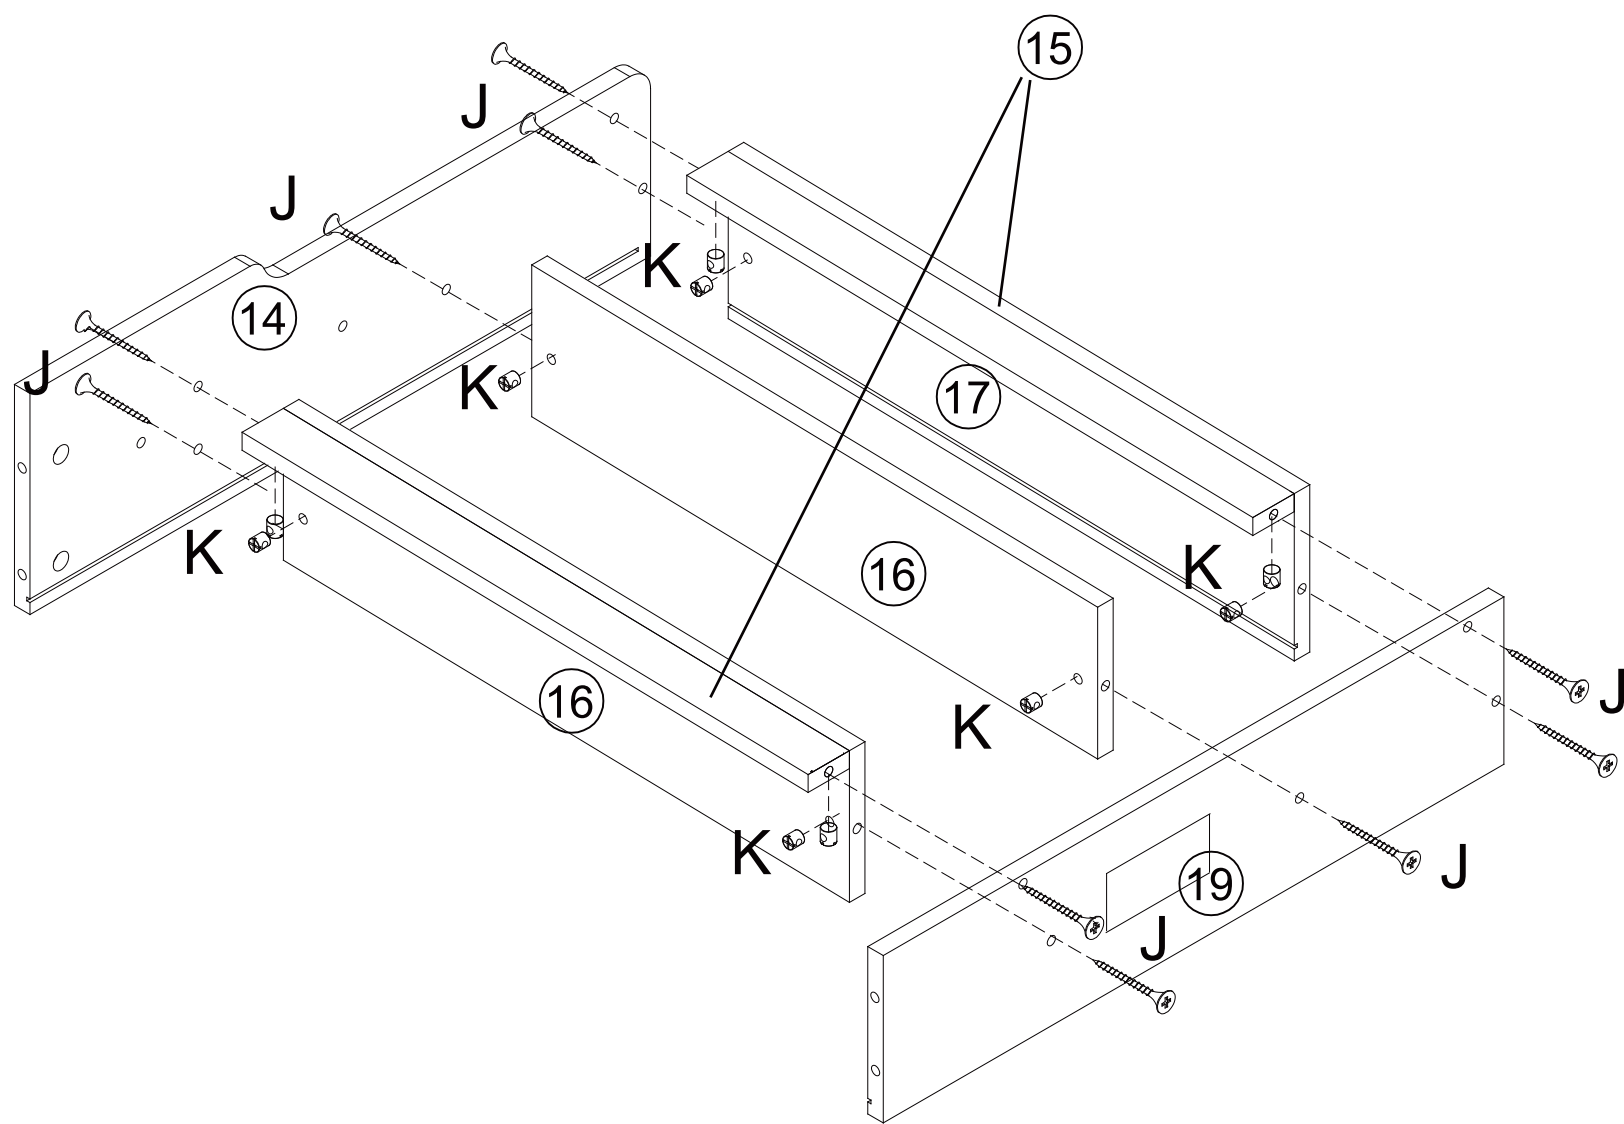


Step 13

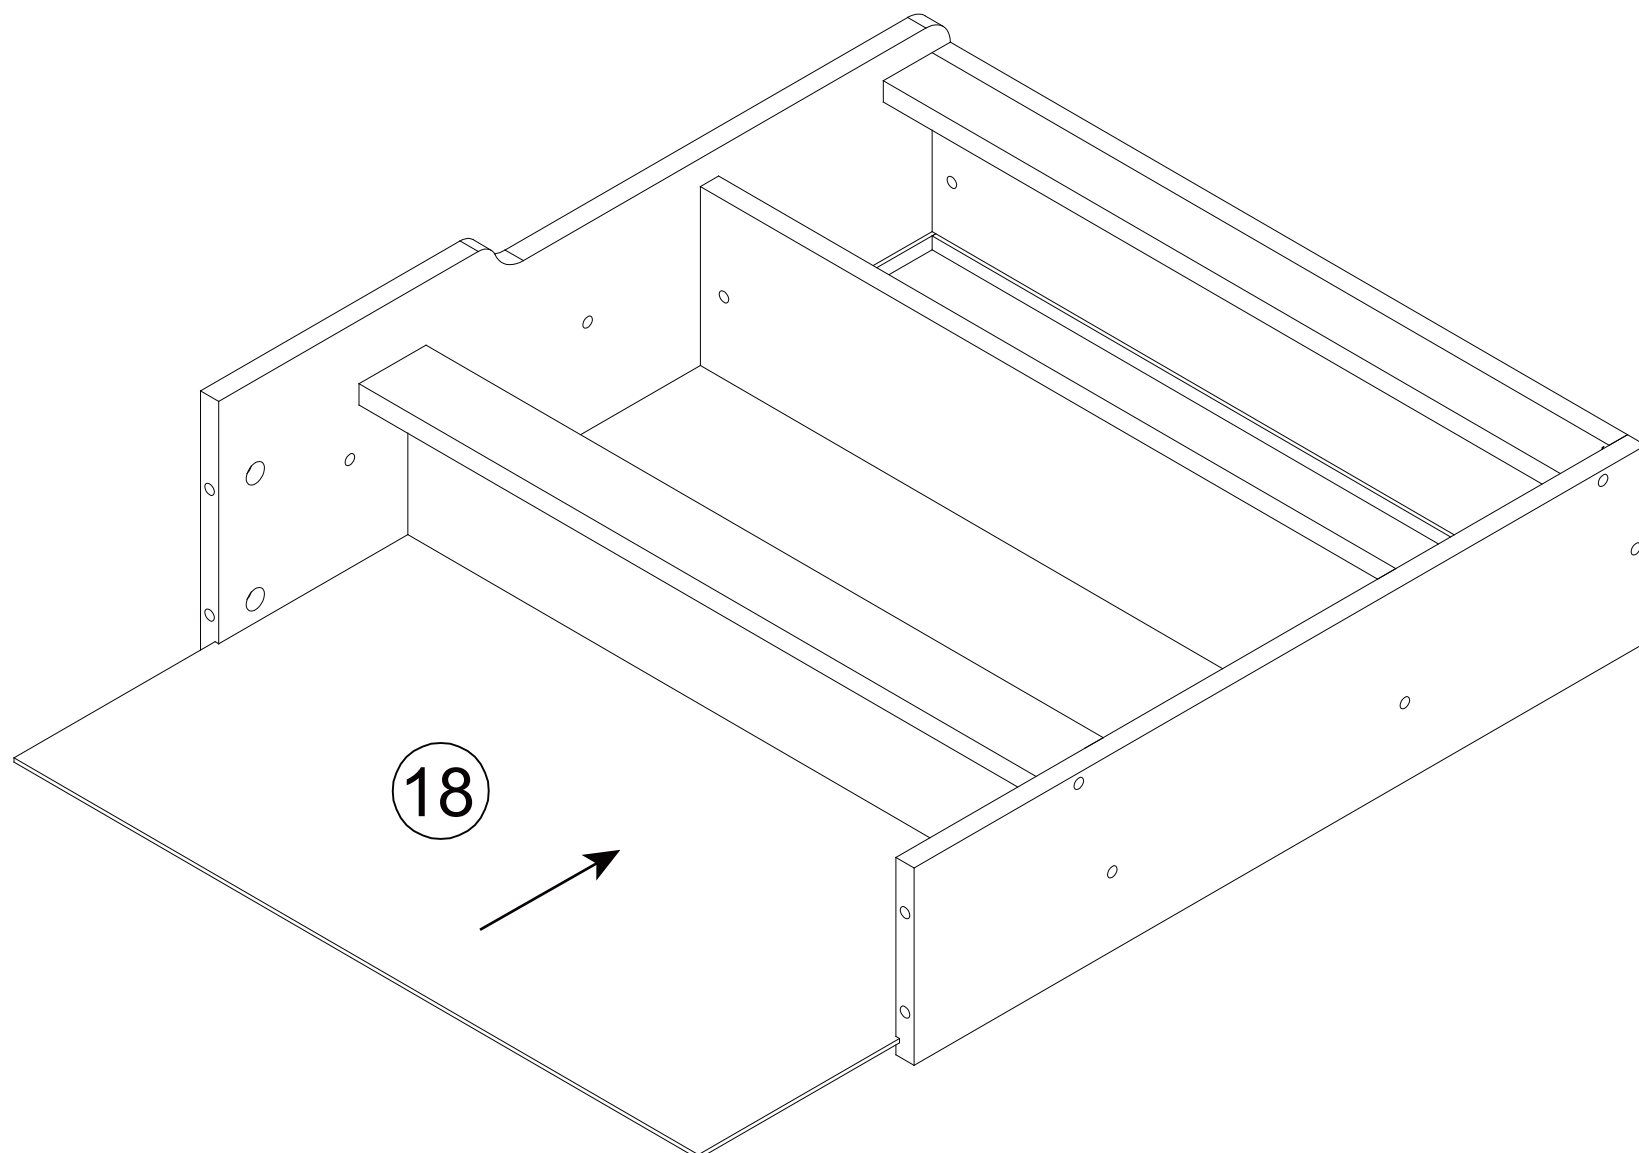

Step 14






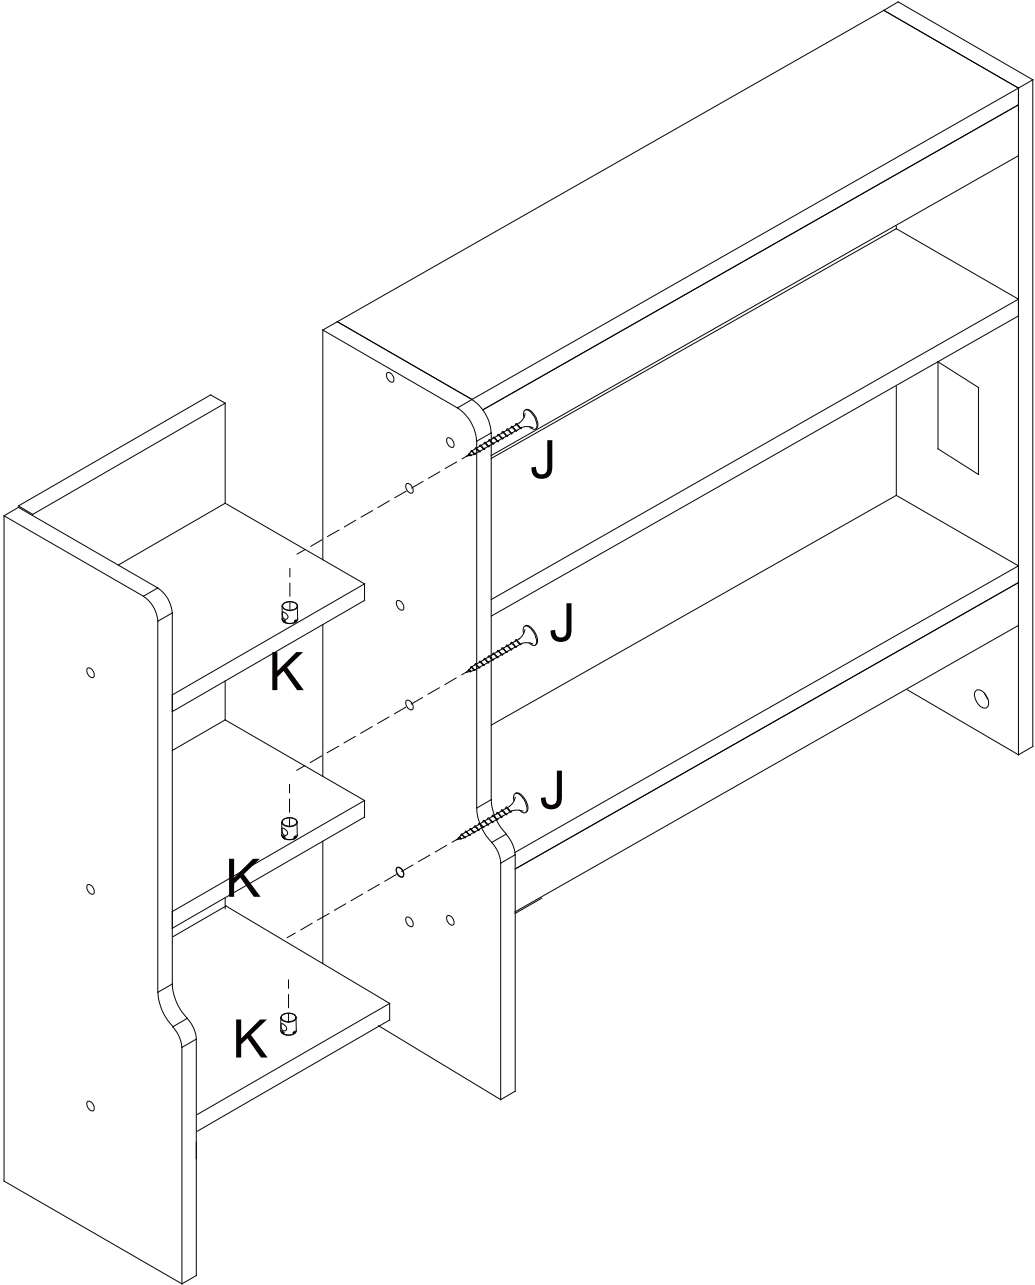


Step 15

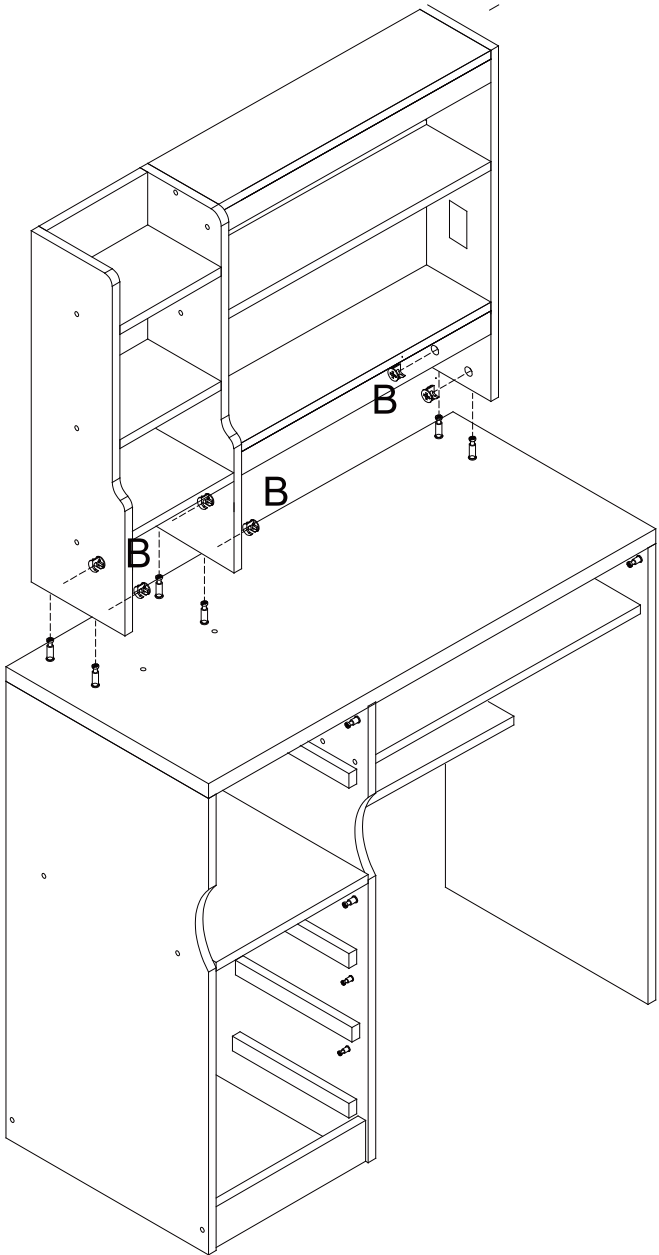



Step 16

For vanity table with light

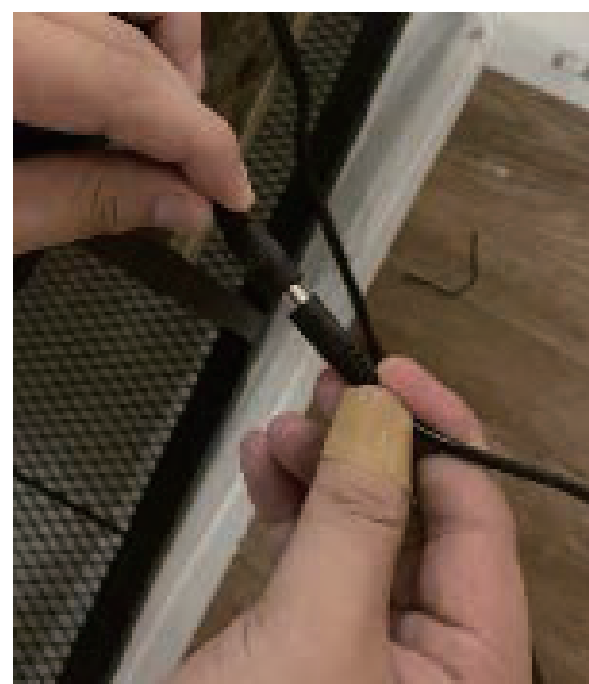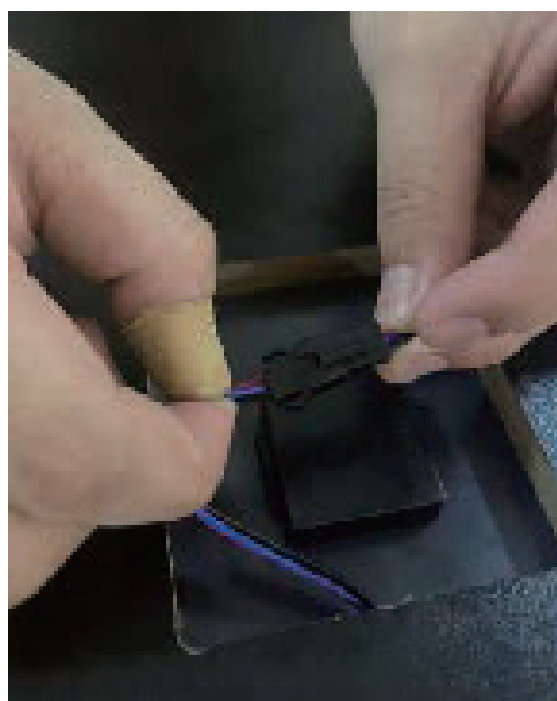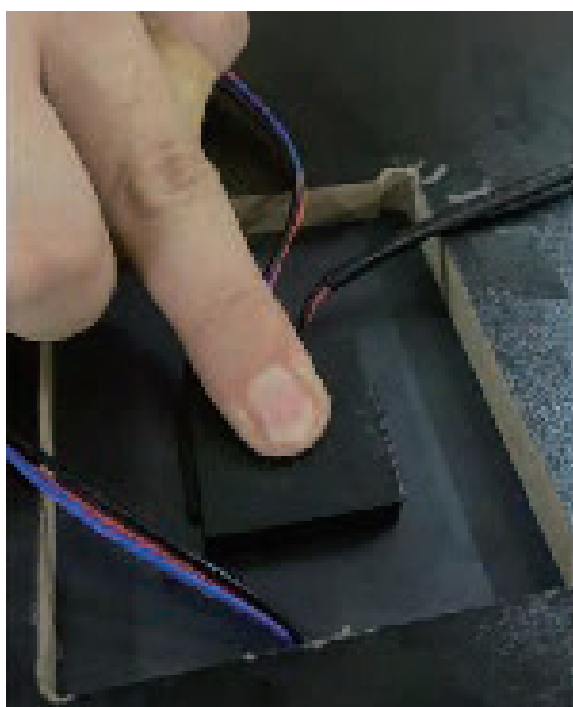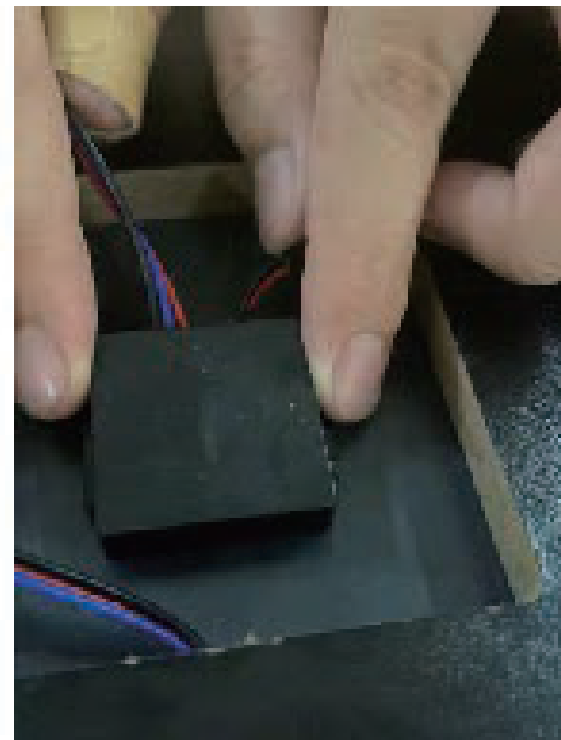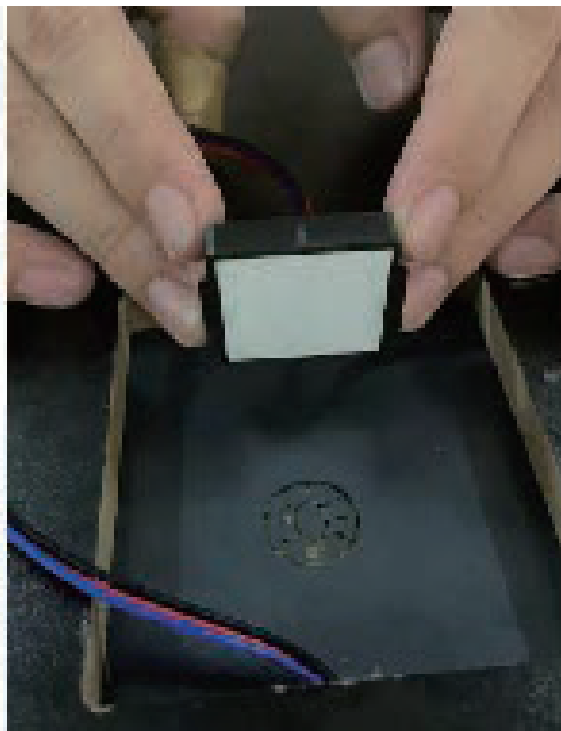
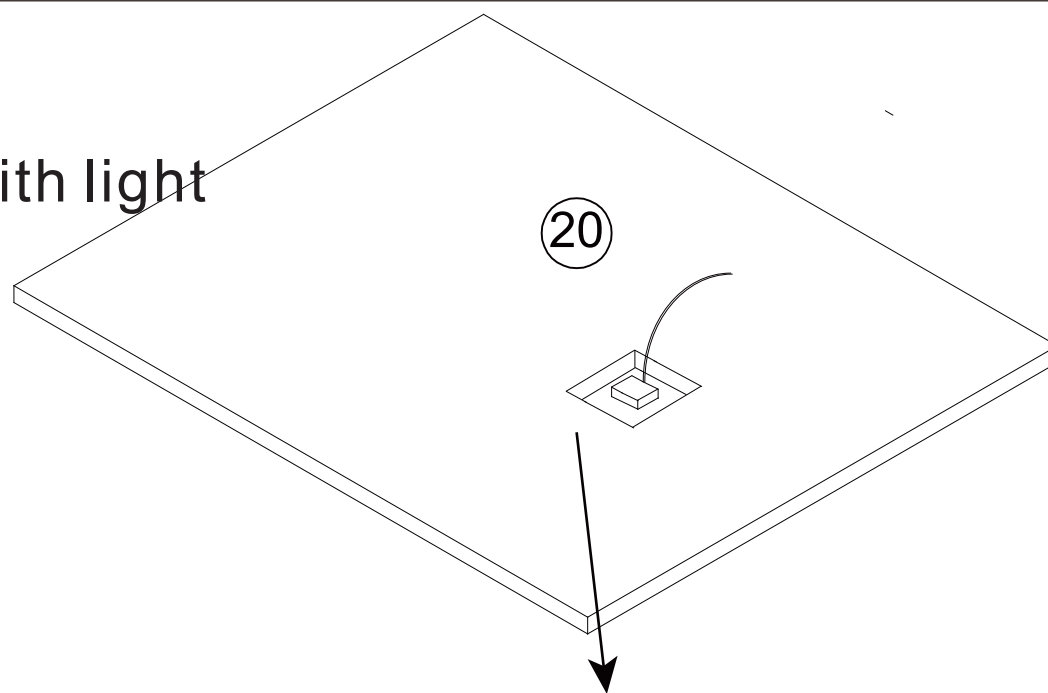


If your vanity table include a LED mirror light, please test the light in this step. Touch the switch botton on the mirror to turn on the mirror light, click the switch botton to change the color of the light, and long press the switch botton to adjust the brightness. If the switch botton is not sensitive, you can check whether the touch switch is tightly attached to the mirror back as shown in the diagram. If it is not tightly attached, please use your fingers to press the touch switch to the designated position and check if the connecting wire is OK.


Step 17

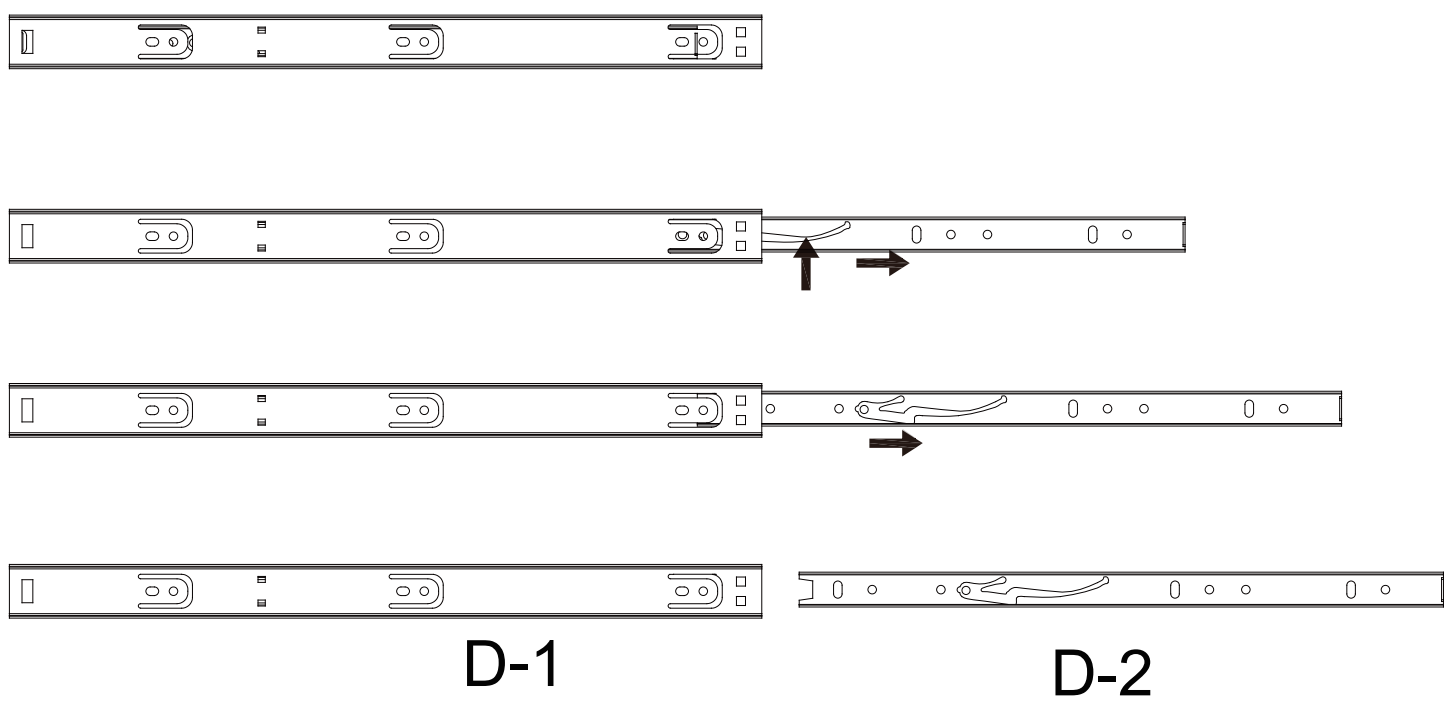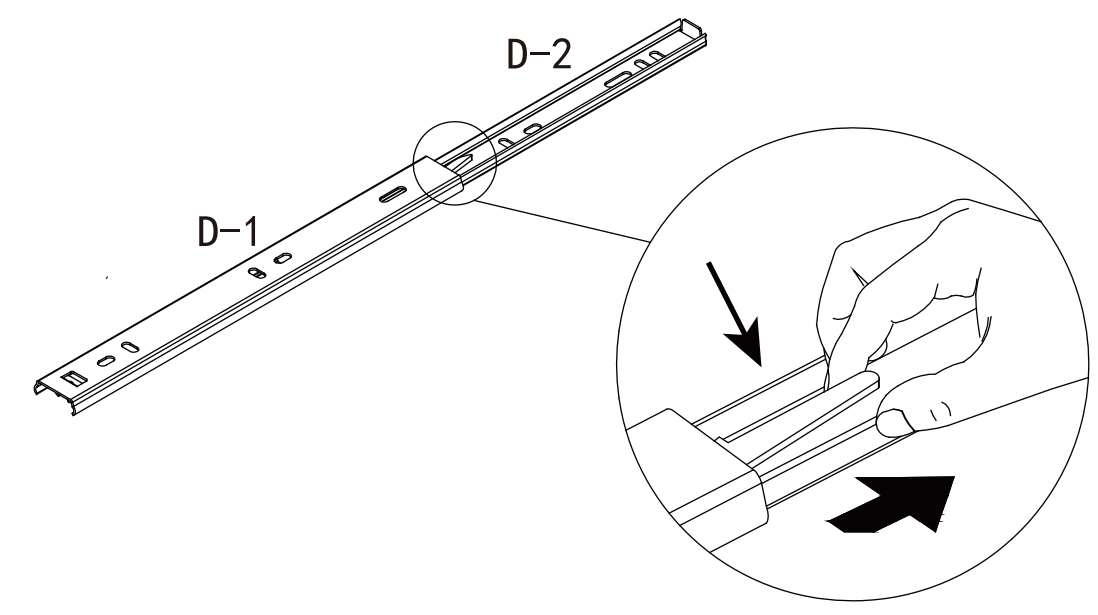




Step 18

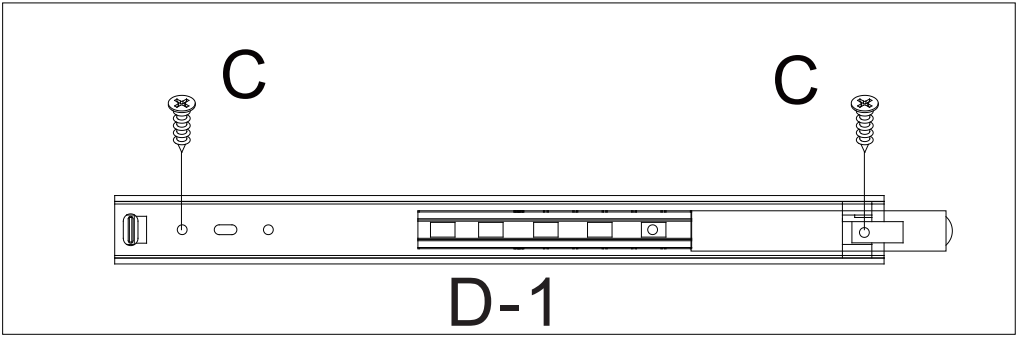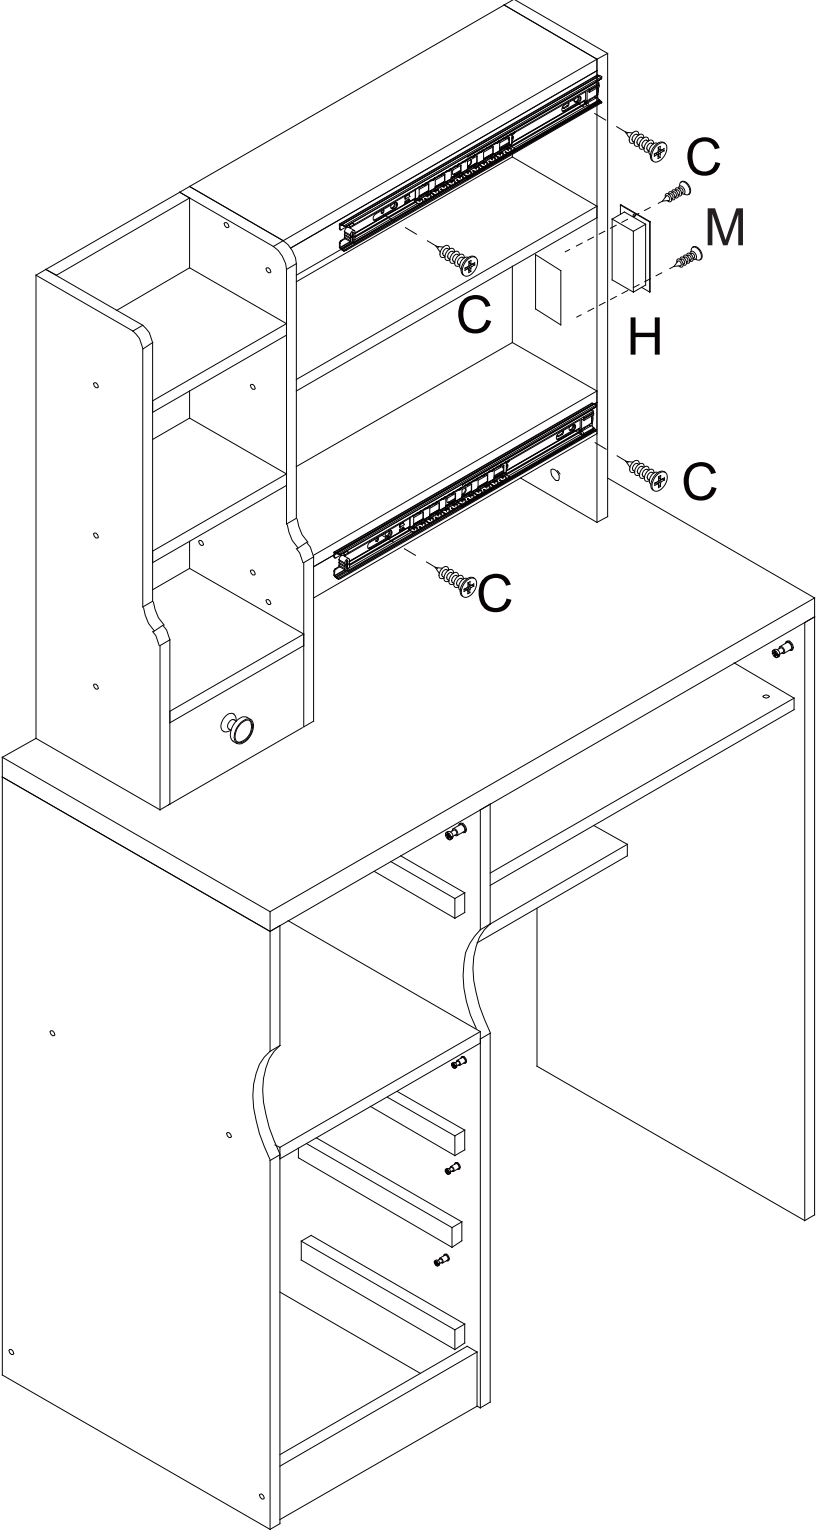

Step 19

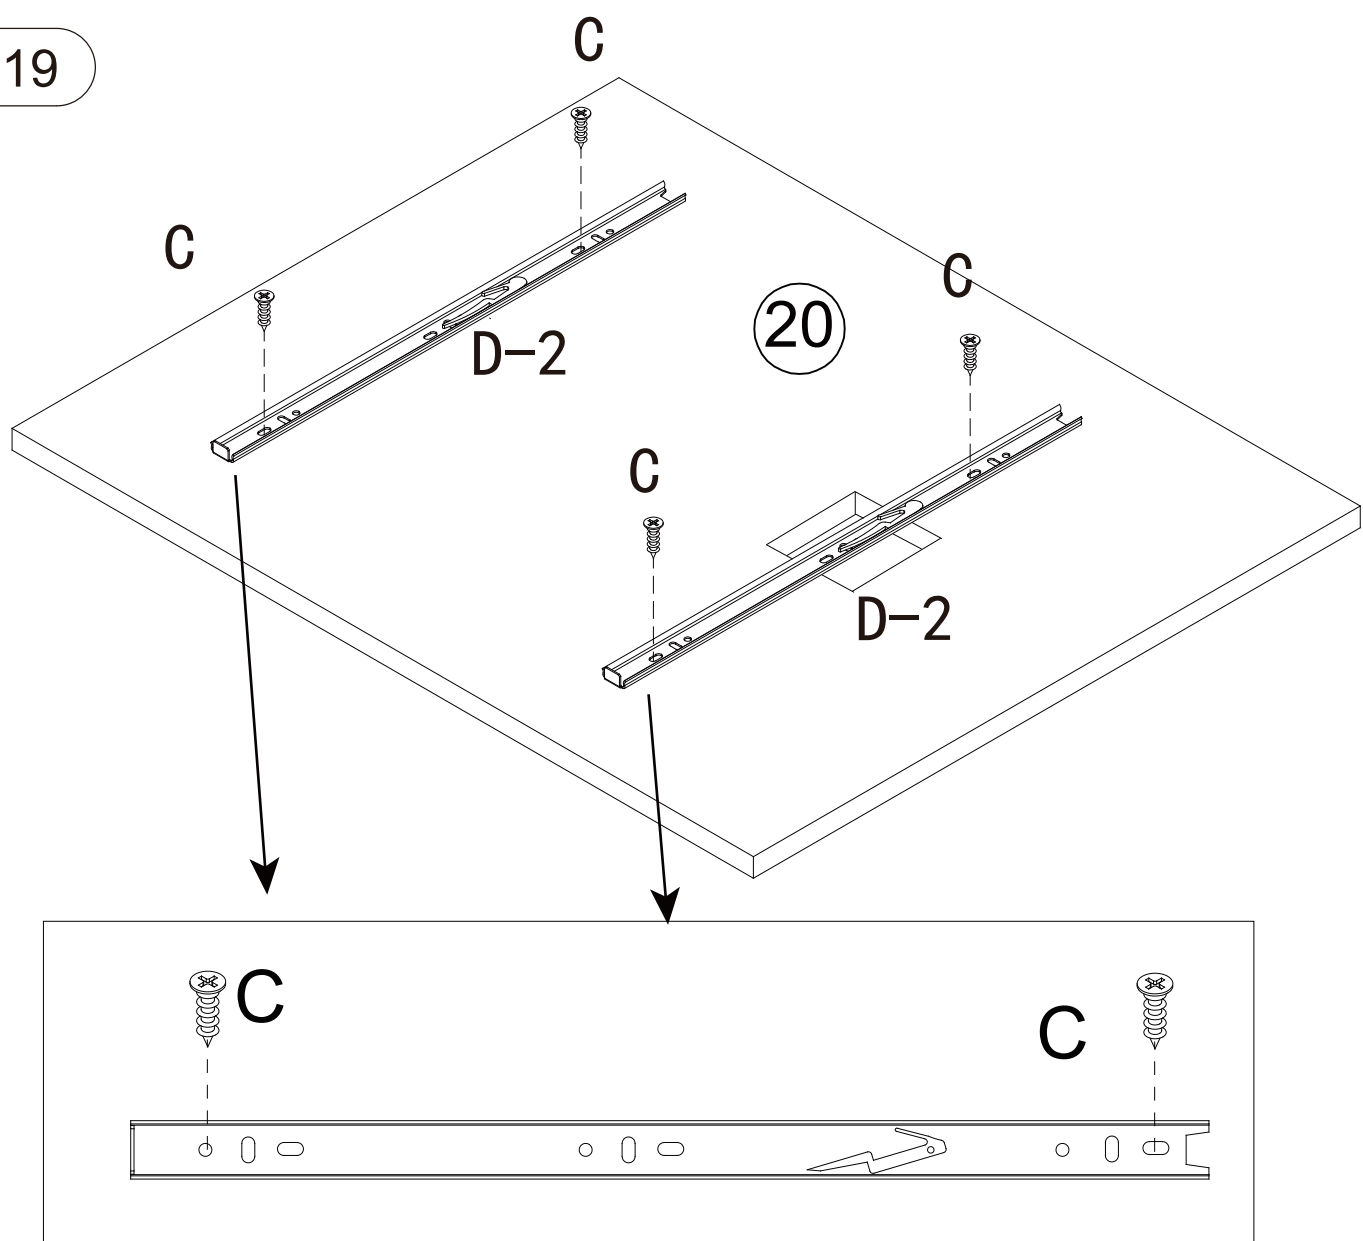


Step 20

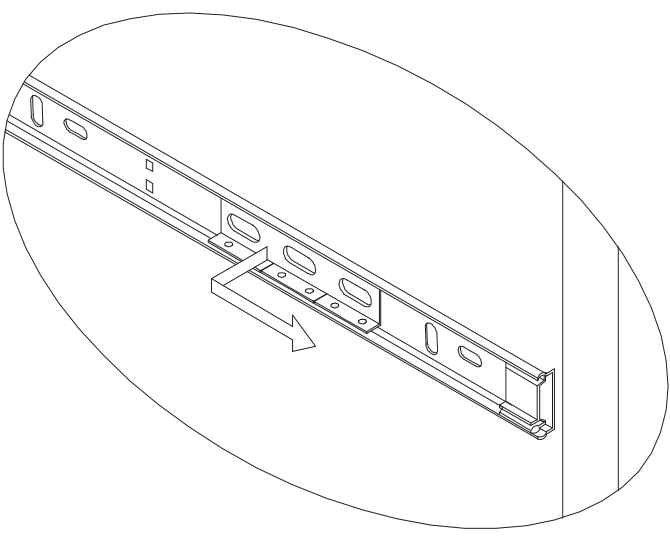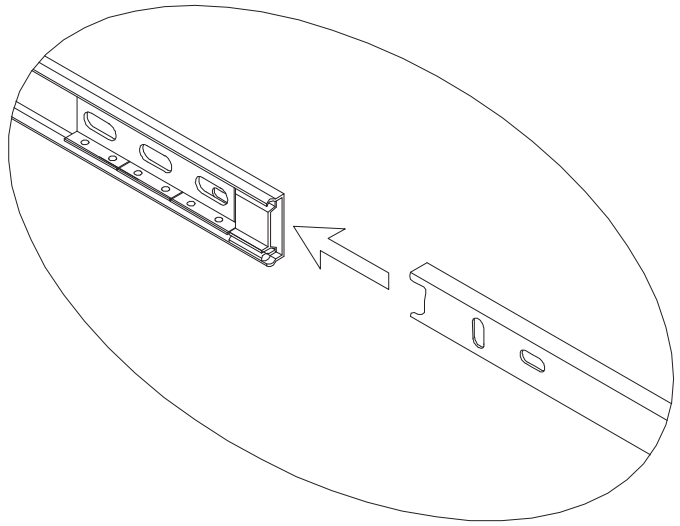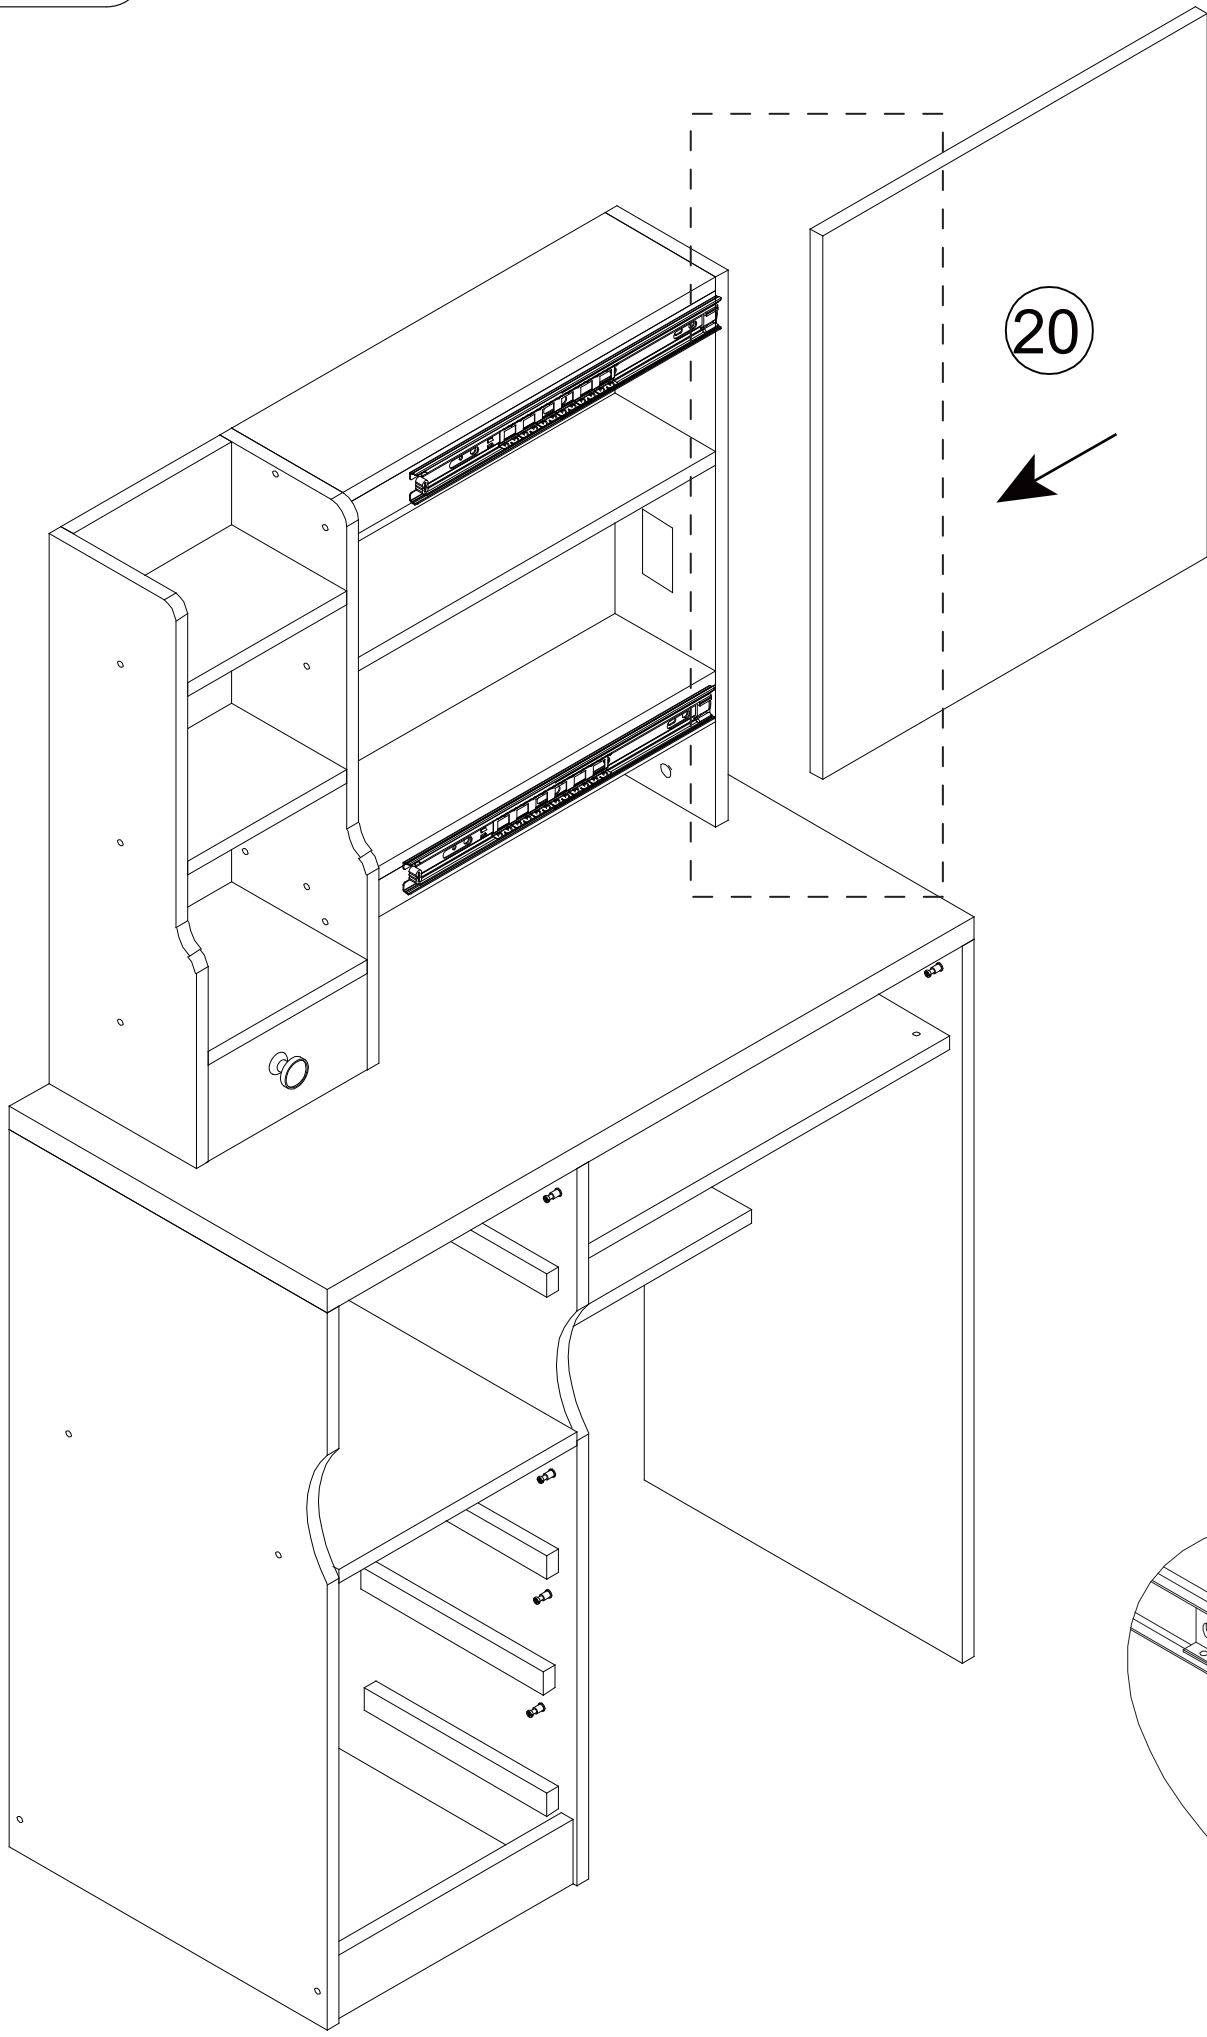

Step 21




Step 22

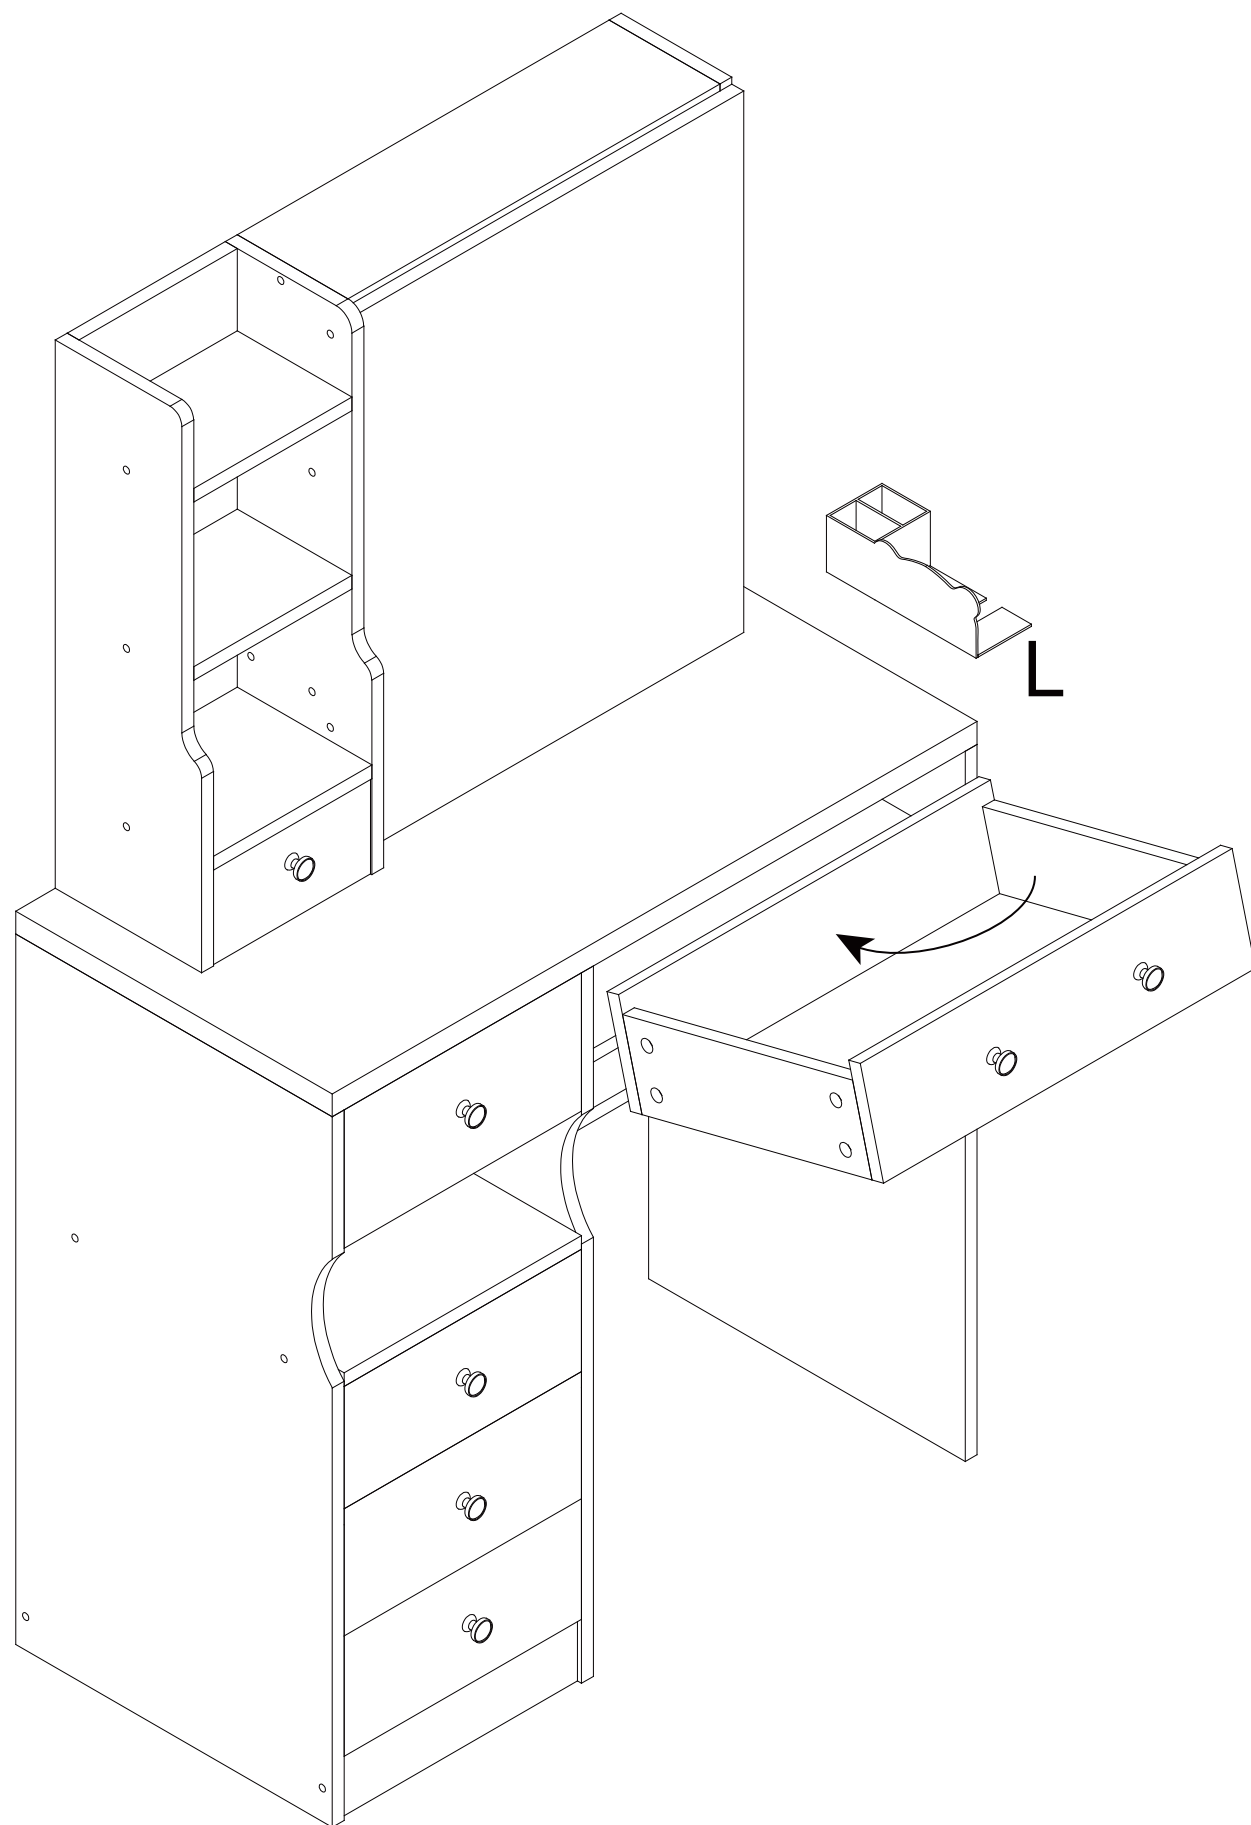

Please note that when placing the drawer in, the drawer positioning pin will block the drawer. Therefore, please follow the diagram to first insert the inner edge of the drawer using a concave method, and then push the drawer flat.




Only for vanity table with hair dryer
bracket and built-in socket

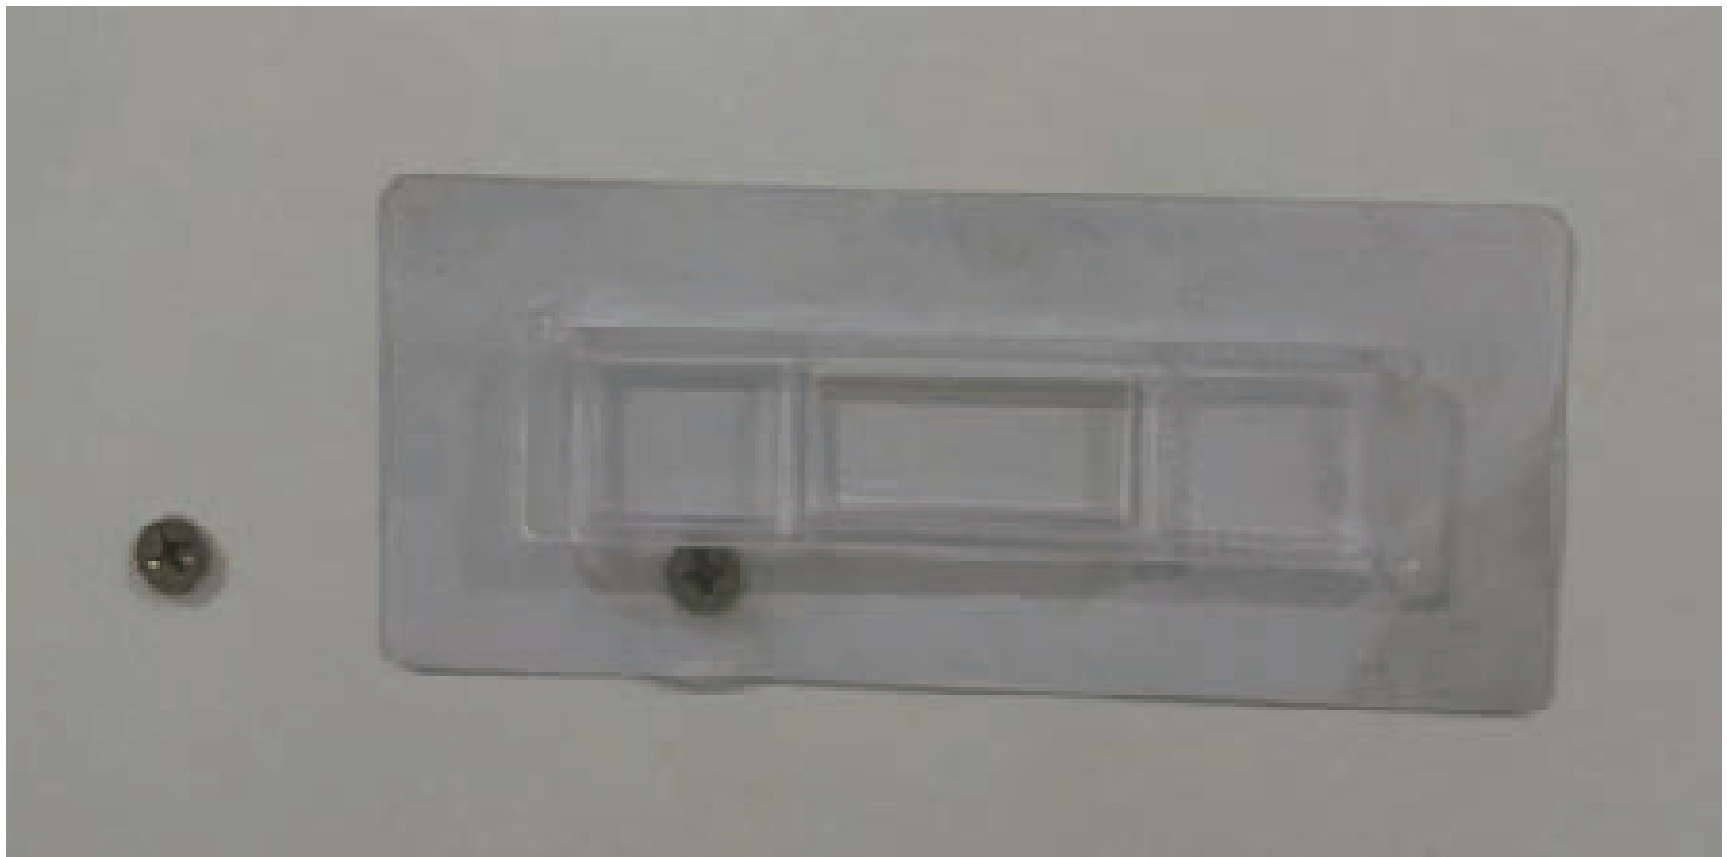

Only for vanity table with hair dryer
bracket and built-in socket

Step 23

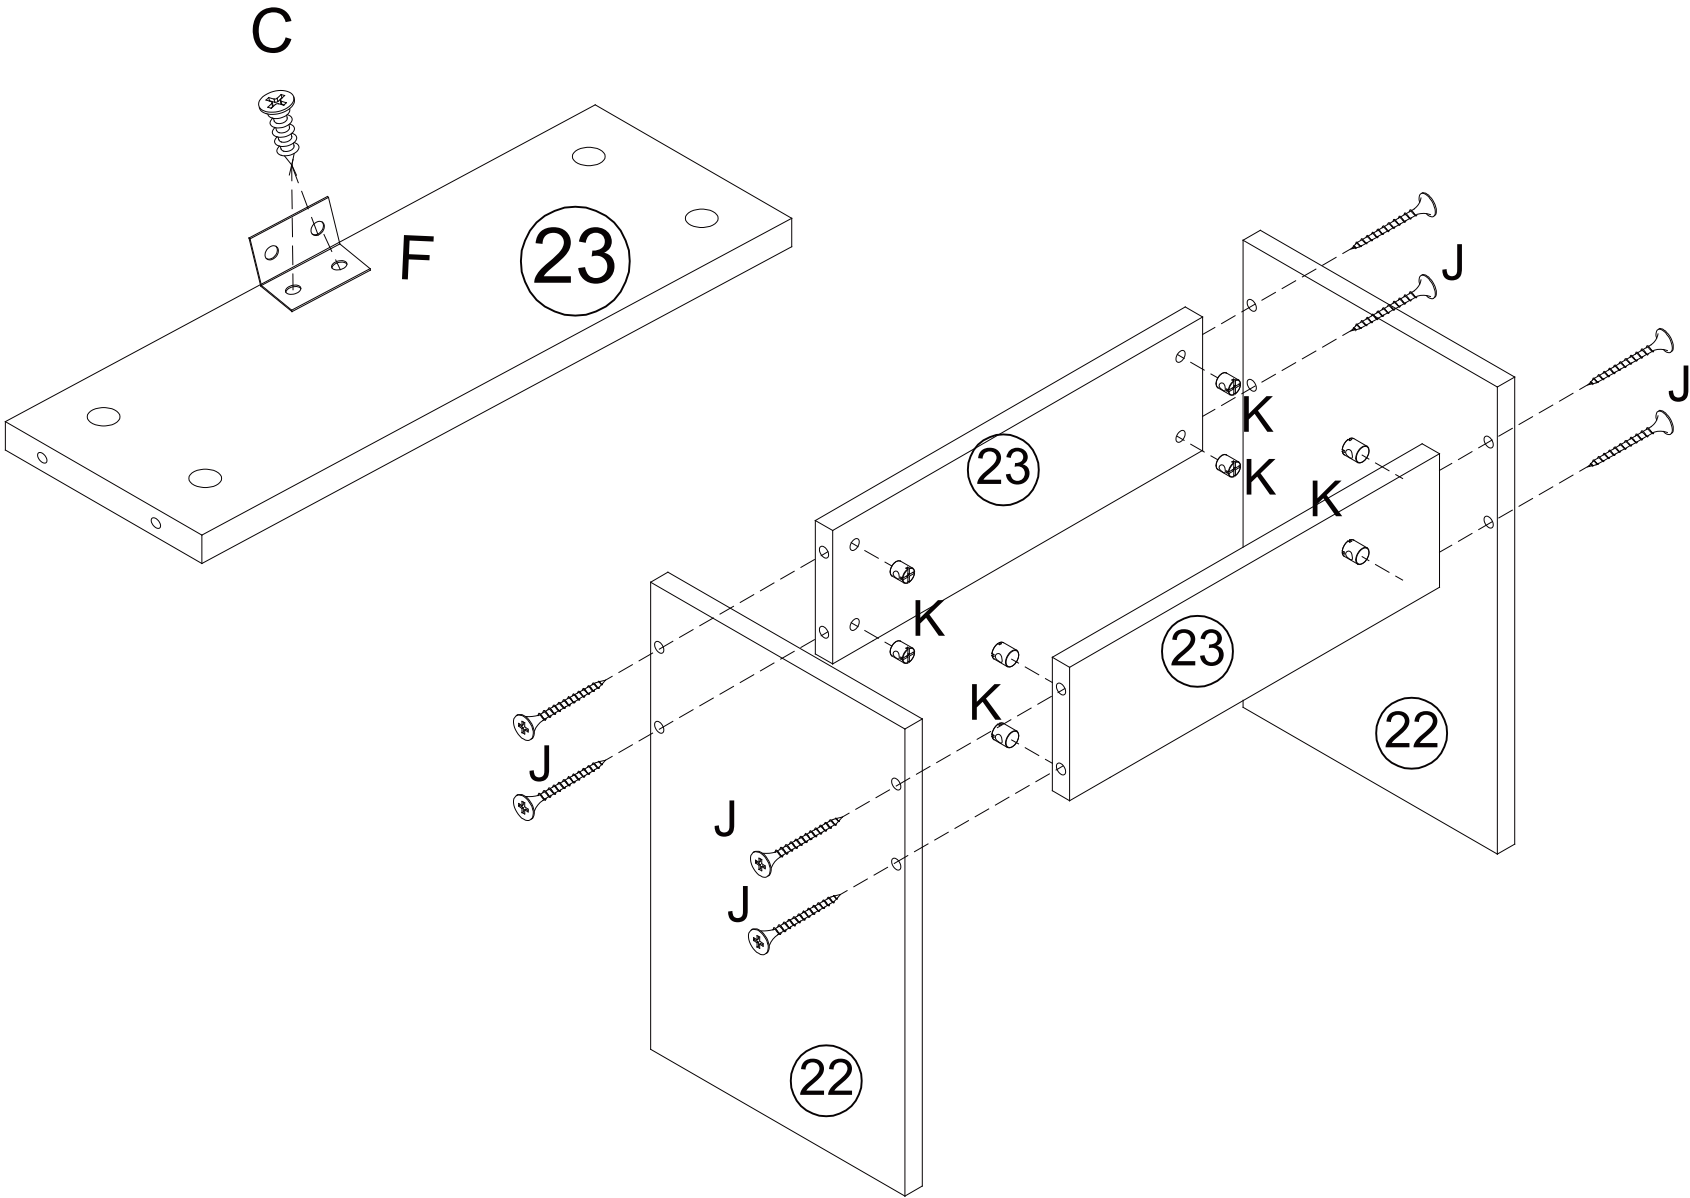

Step 24

