



INSTALLATION INSTRUCTION

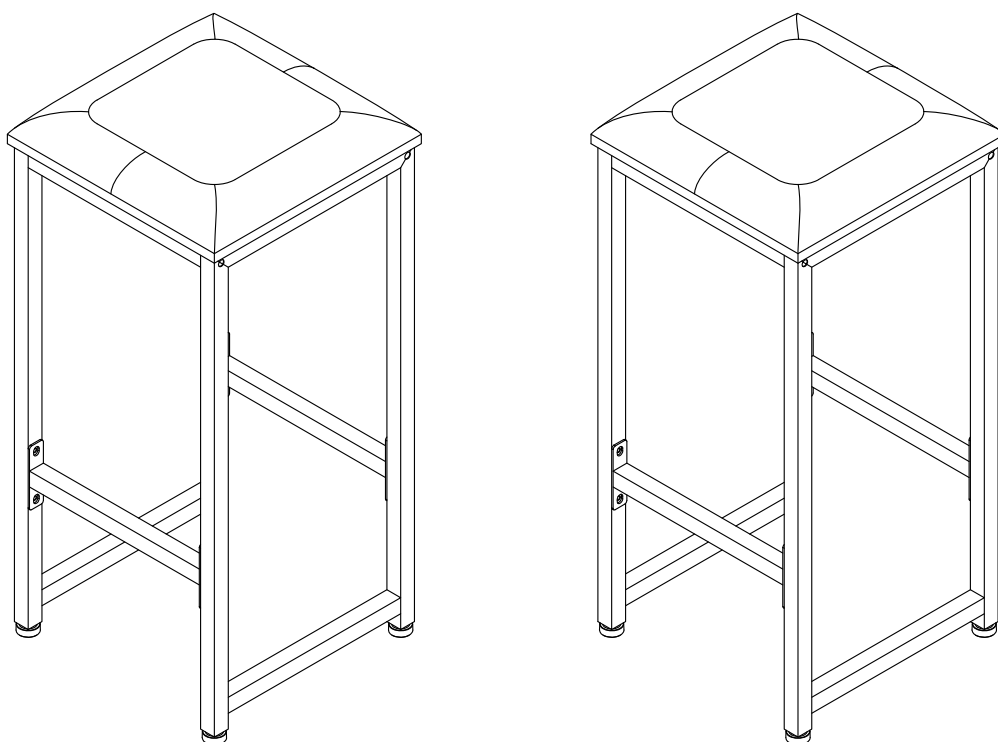


INSTALLATION INSTRUCTION

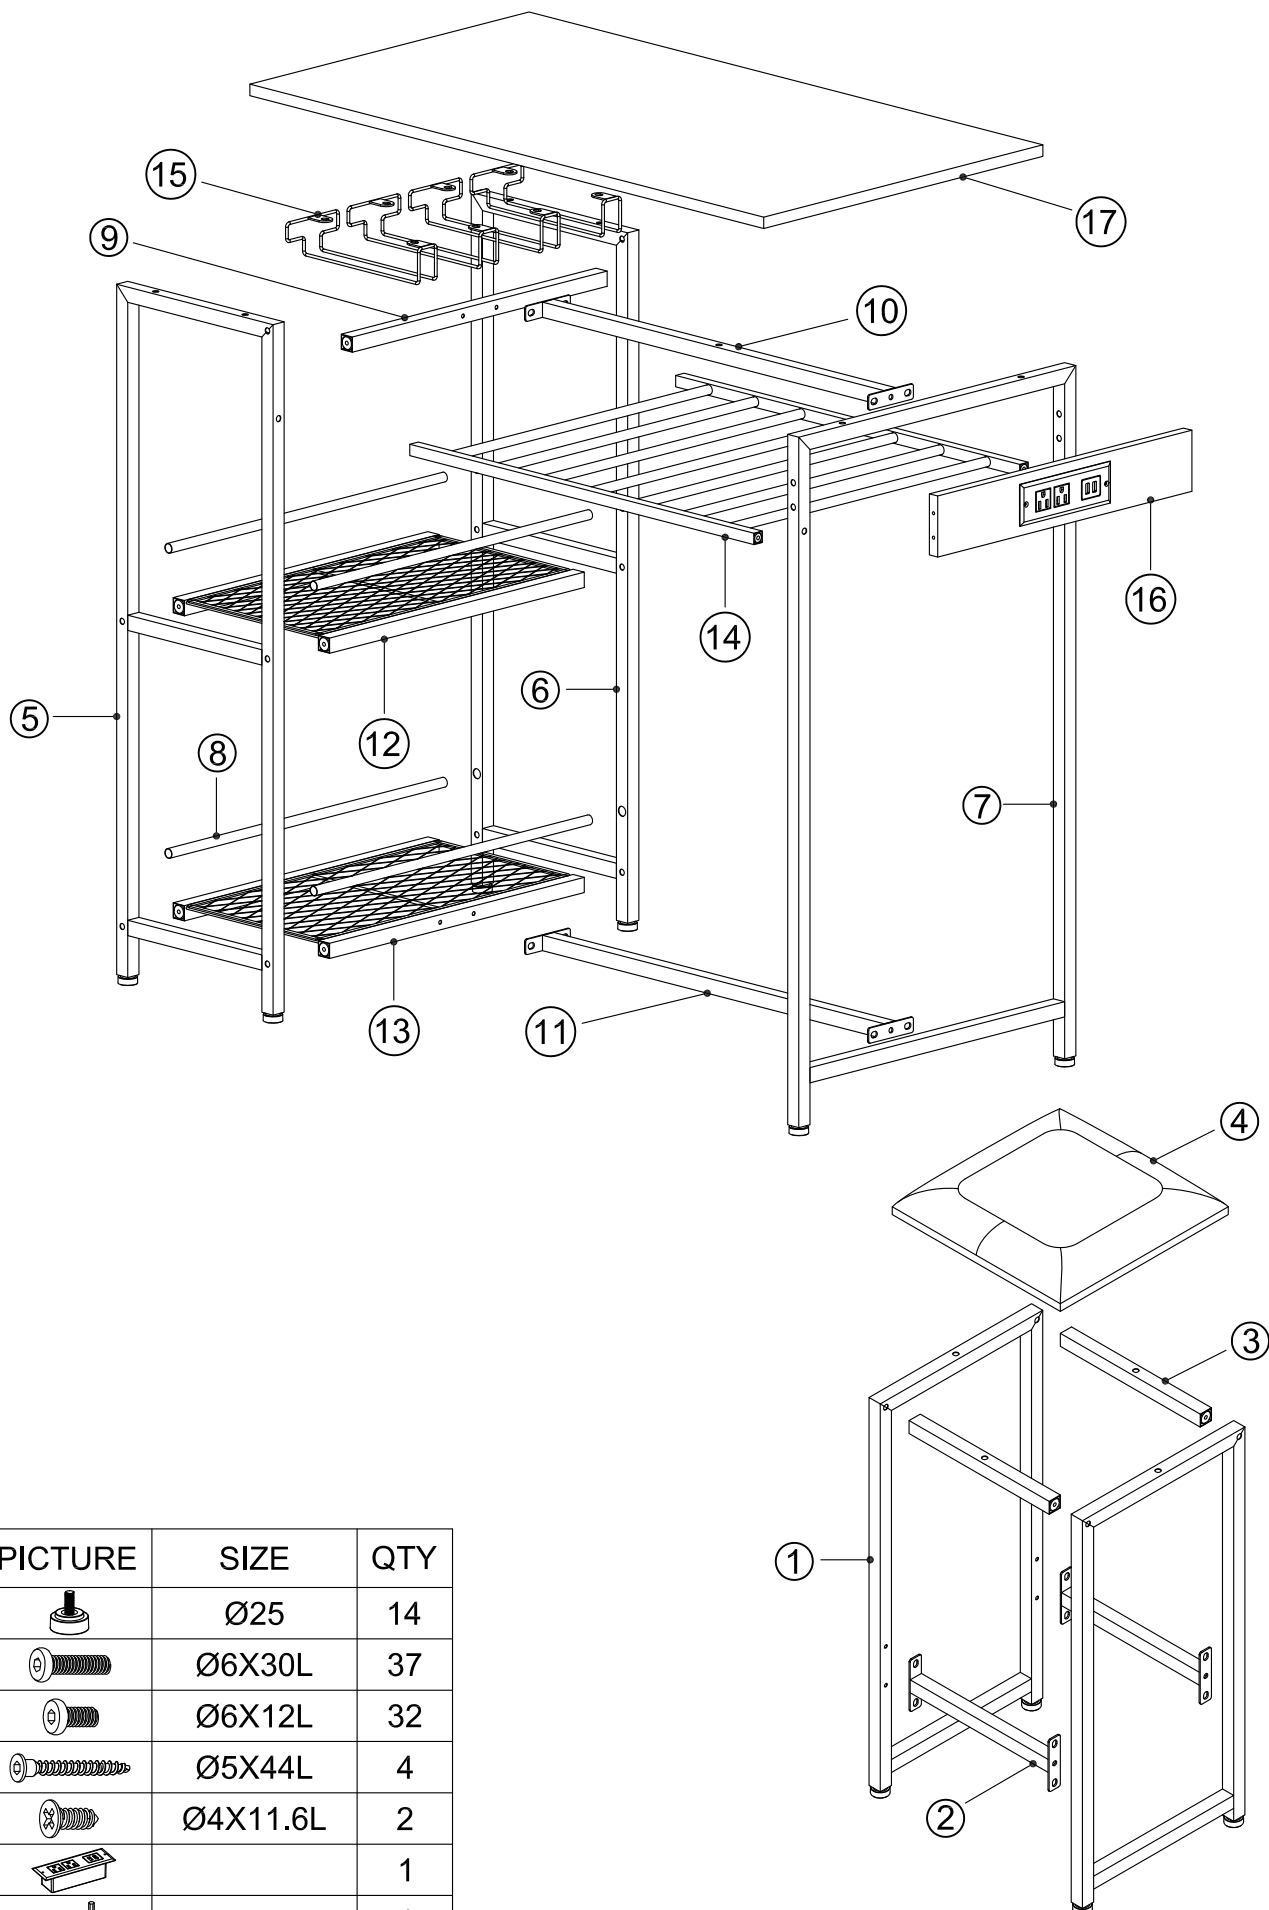


ASSEMBLY INSTRUCTION

①

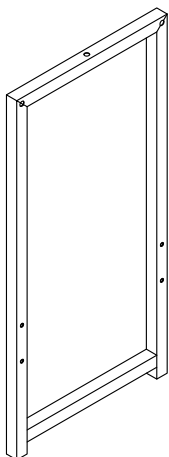


X4

②




X4

③




X4

④

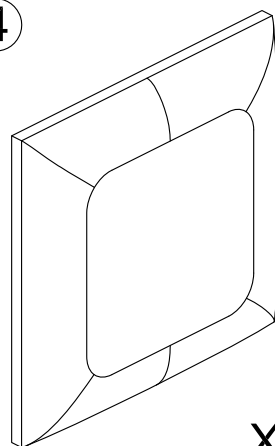


X2

⑤




X1

⑥



X1

⑦

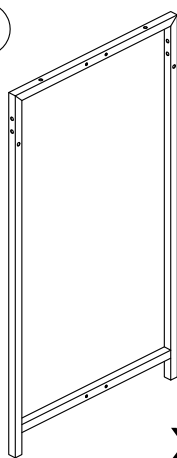

X1

⑧




X4

⑨




X1

⑩




X1

⑪




X1

⑫

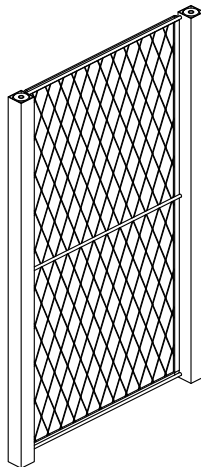


X1

⑬

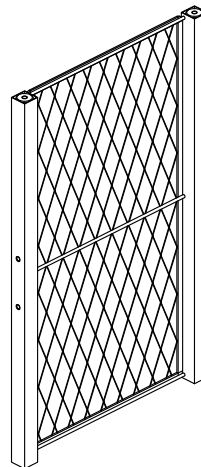


X1

⑭

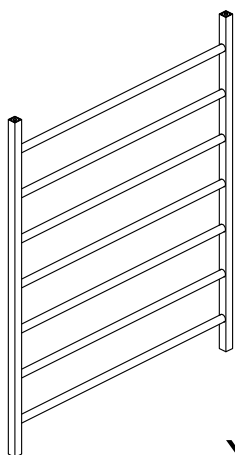


X1

⑮

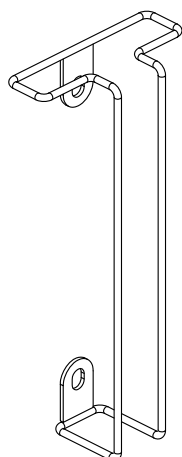


X4

⑯



X1


⑰

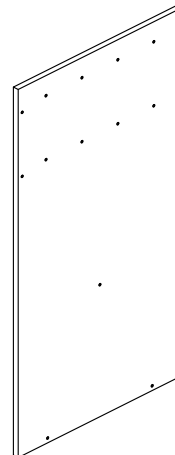


X1

INSTALLATION INSTRUCTION

STEP 1

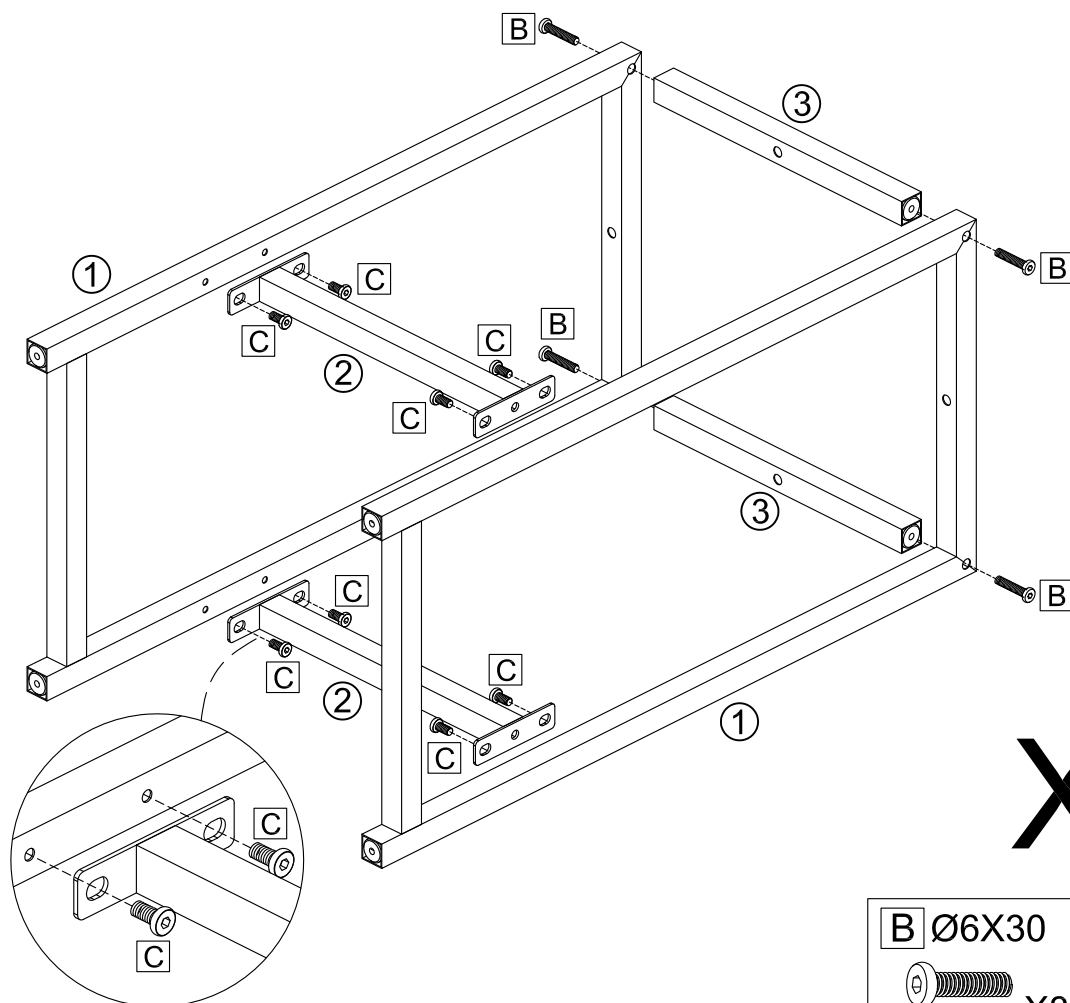

B Ø6X30




X8

C Ø6X12



X16

STEP 2

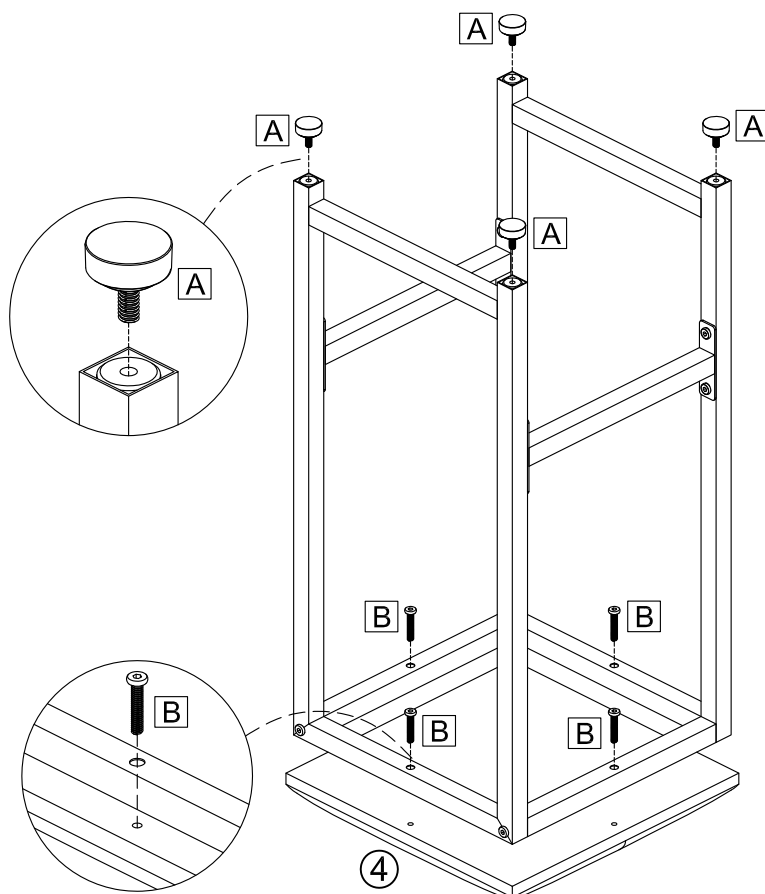


A Ø25



X8


B Ø6X30



X8

INSTALLATION INSTRUCTION


STEP 3

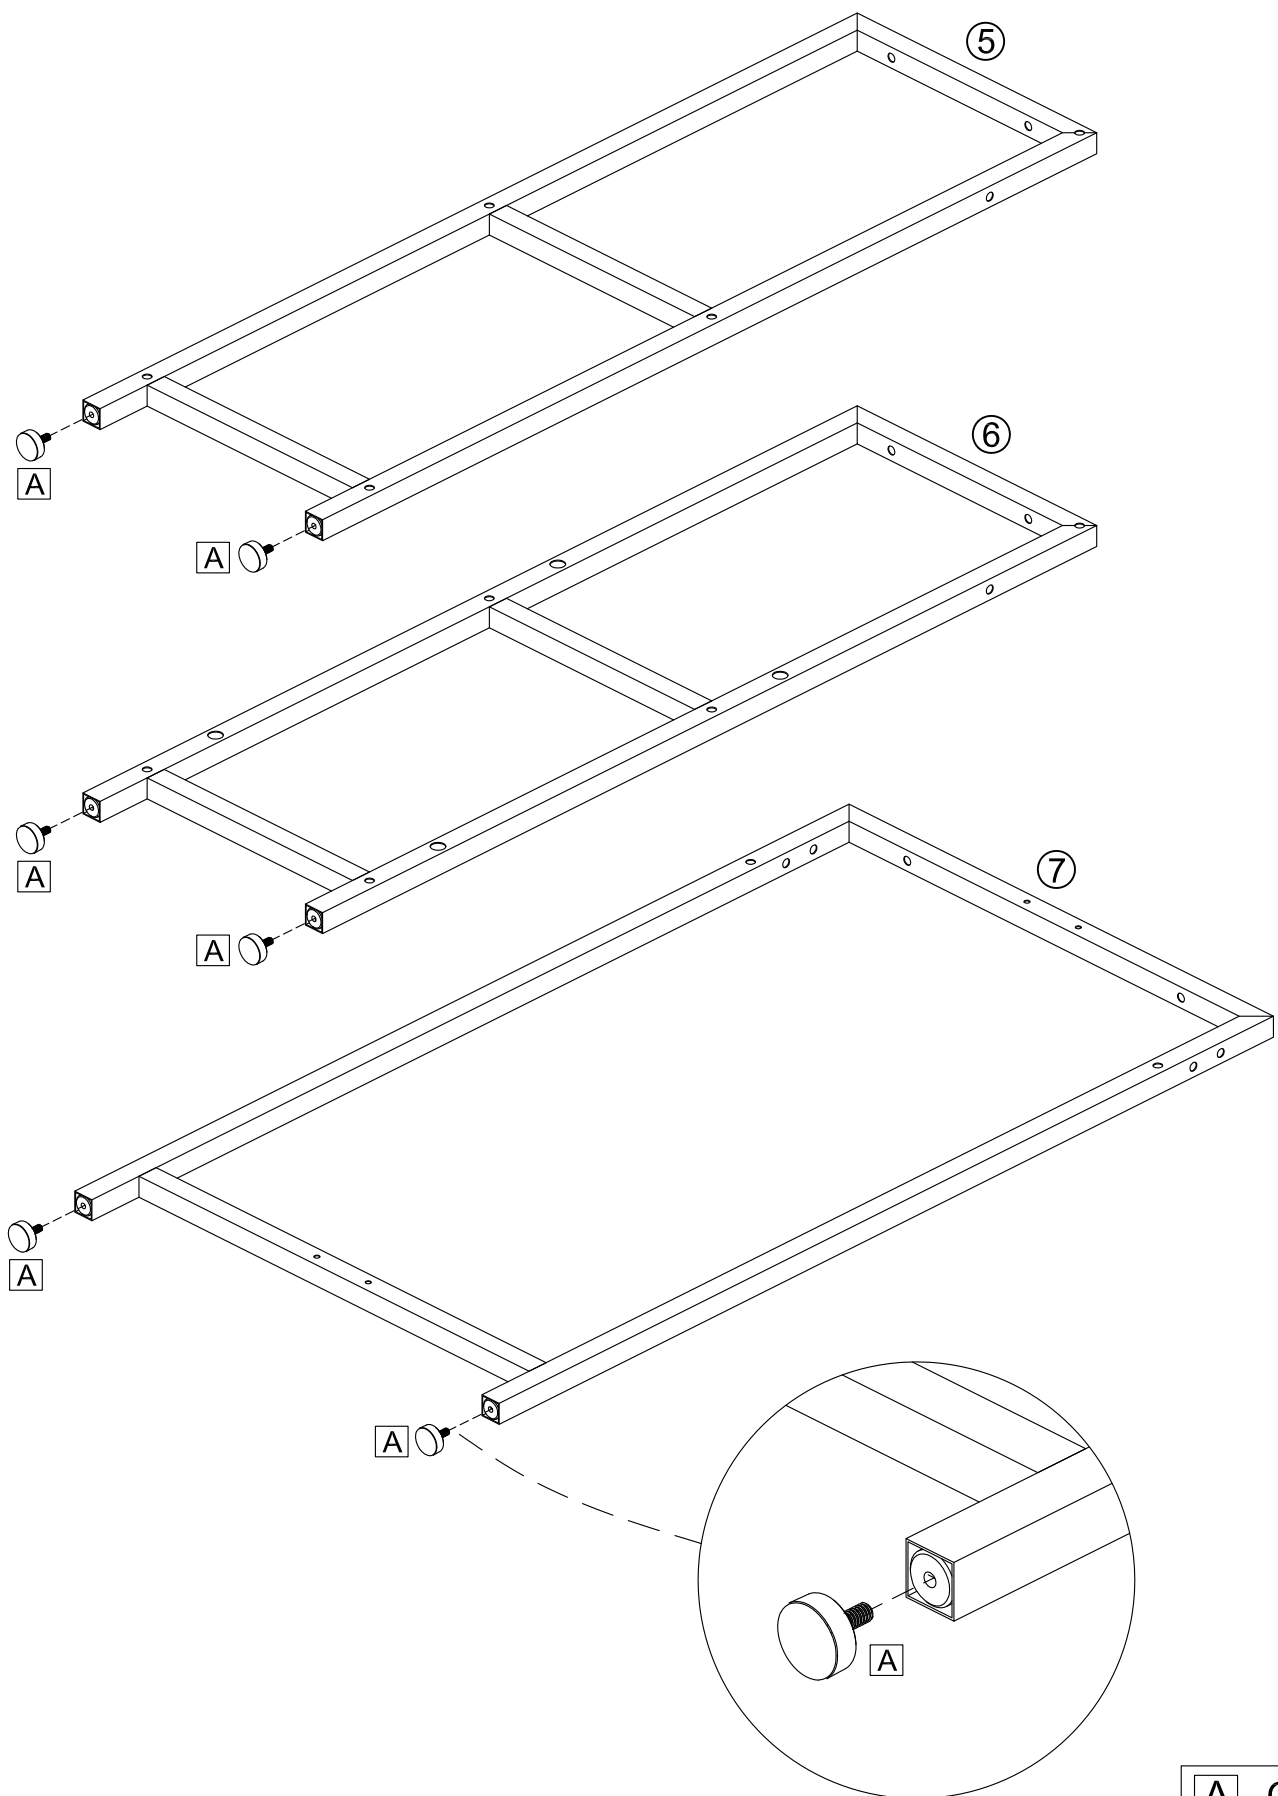


A Ø25
X6

INSTALLATION INSTRUCTION

STEP 4

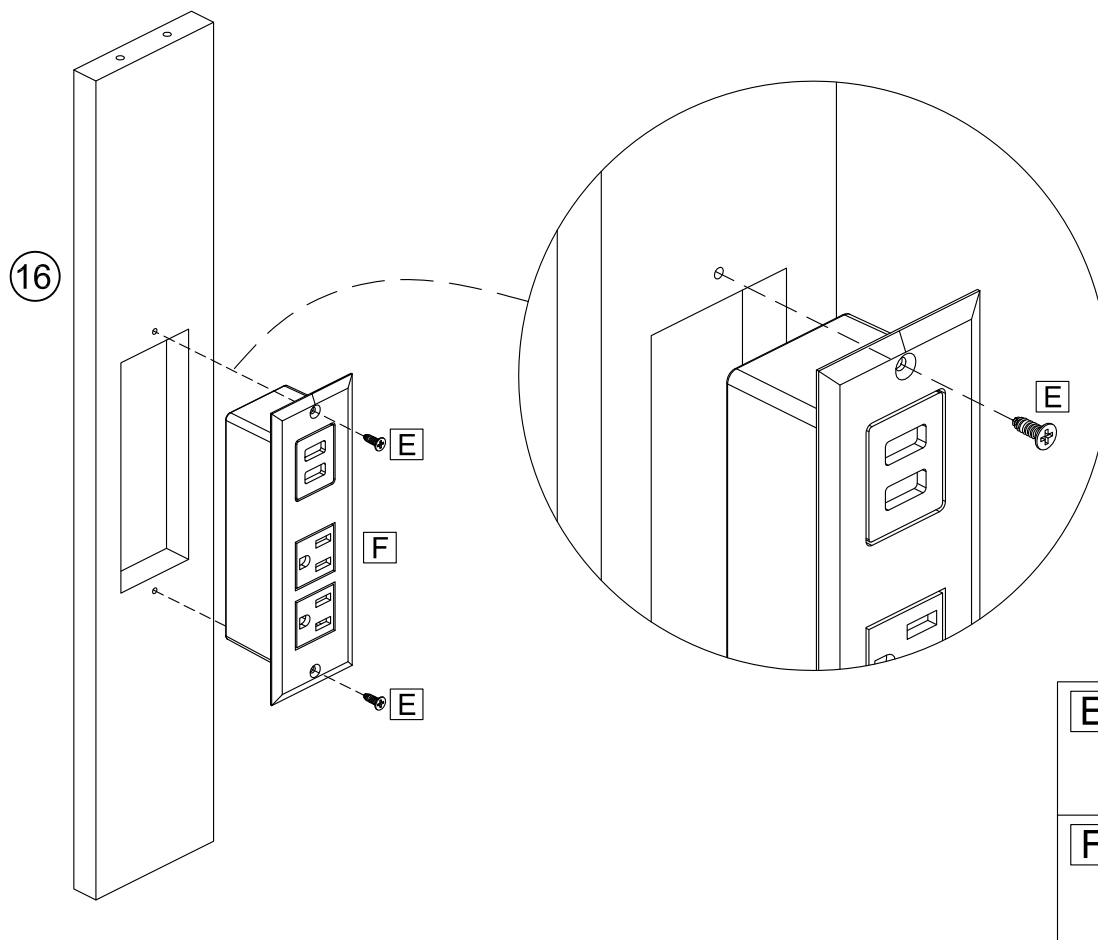


STEP 5

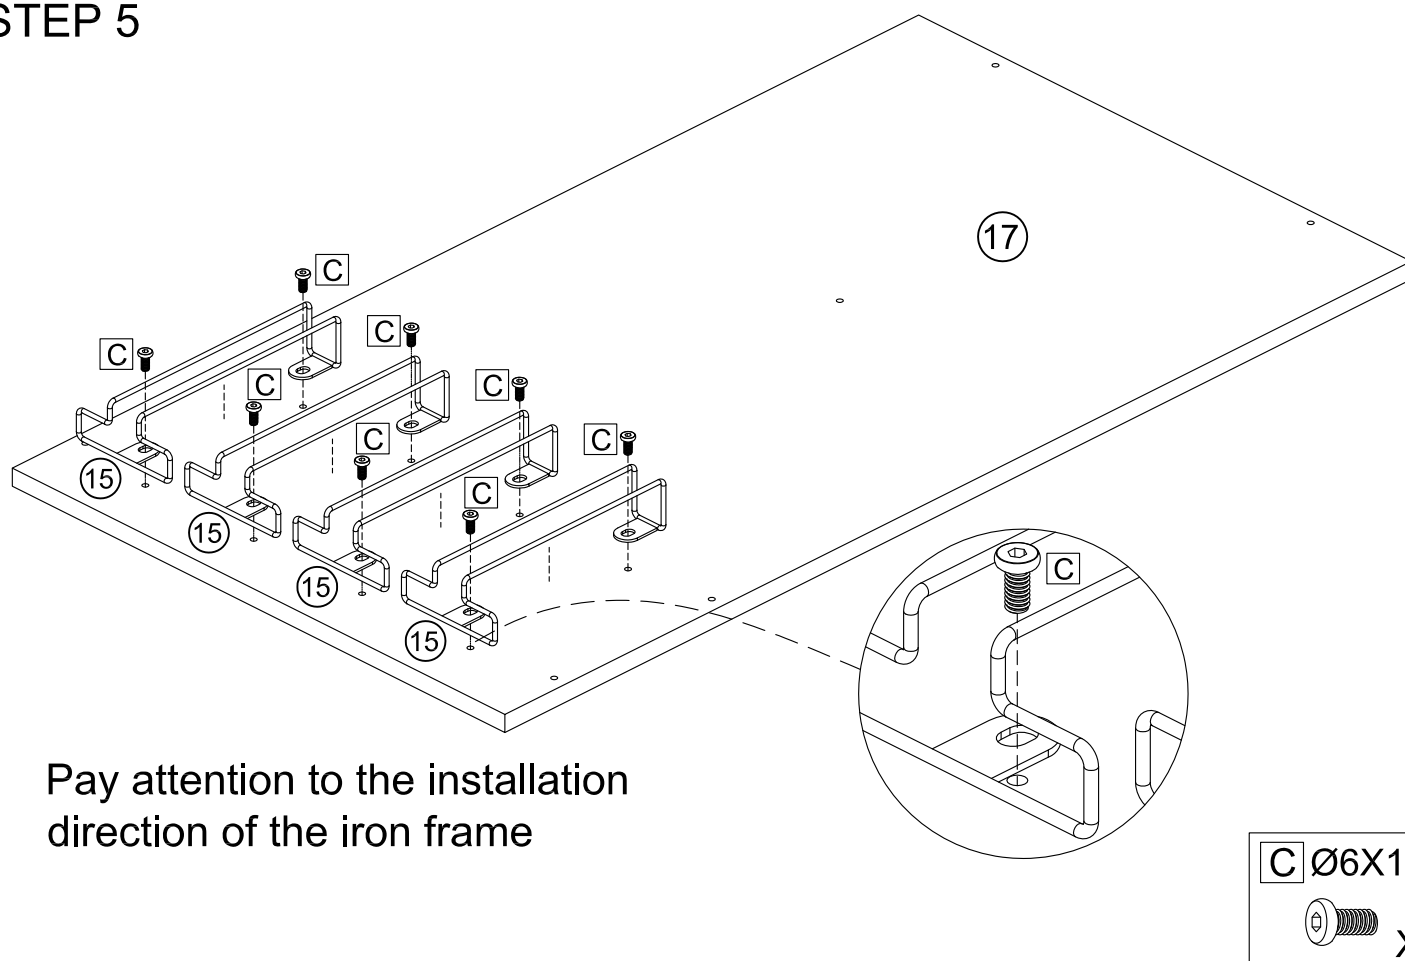


INSTALLATION INSTRUCTION

STEP 6

Note: Hole 3 facing up

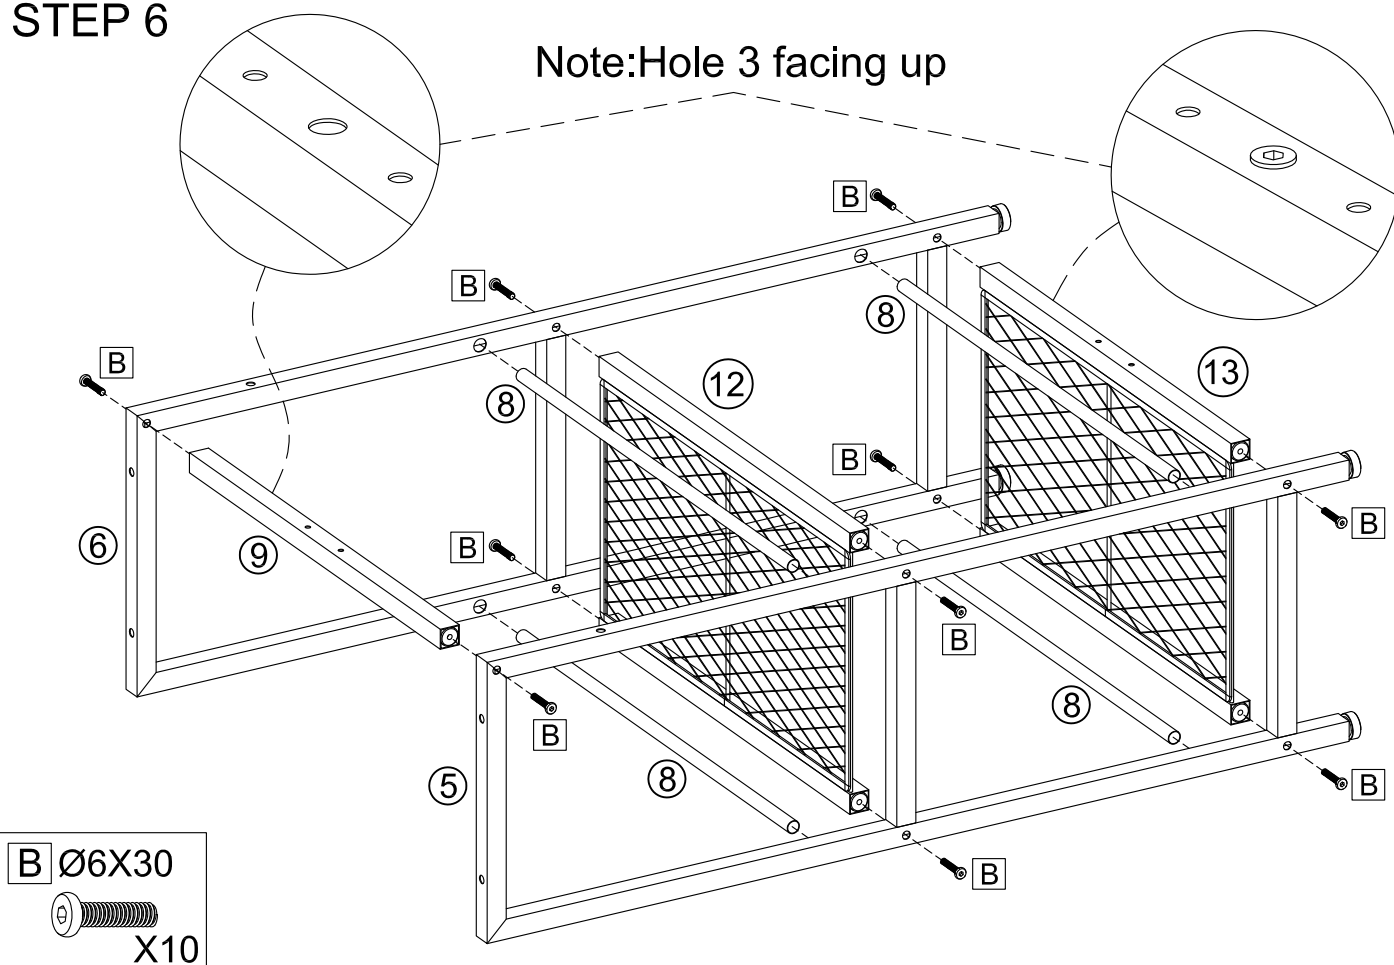


STEP 7

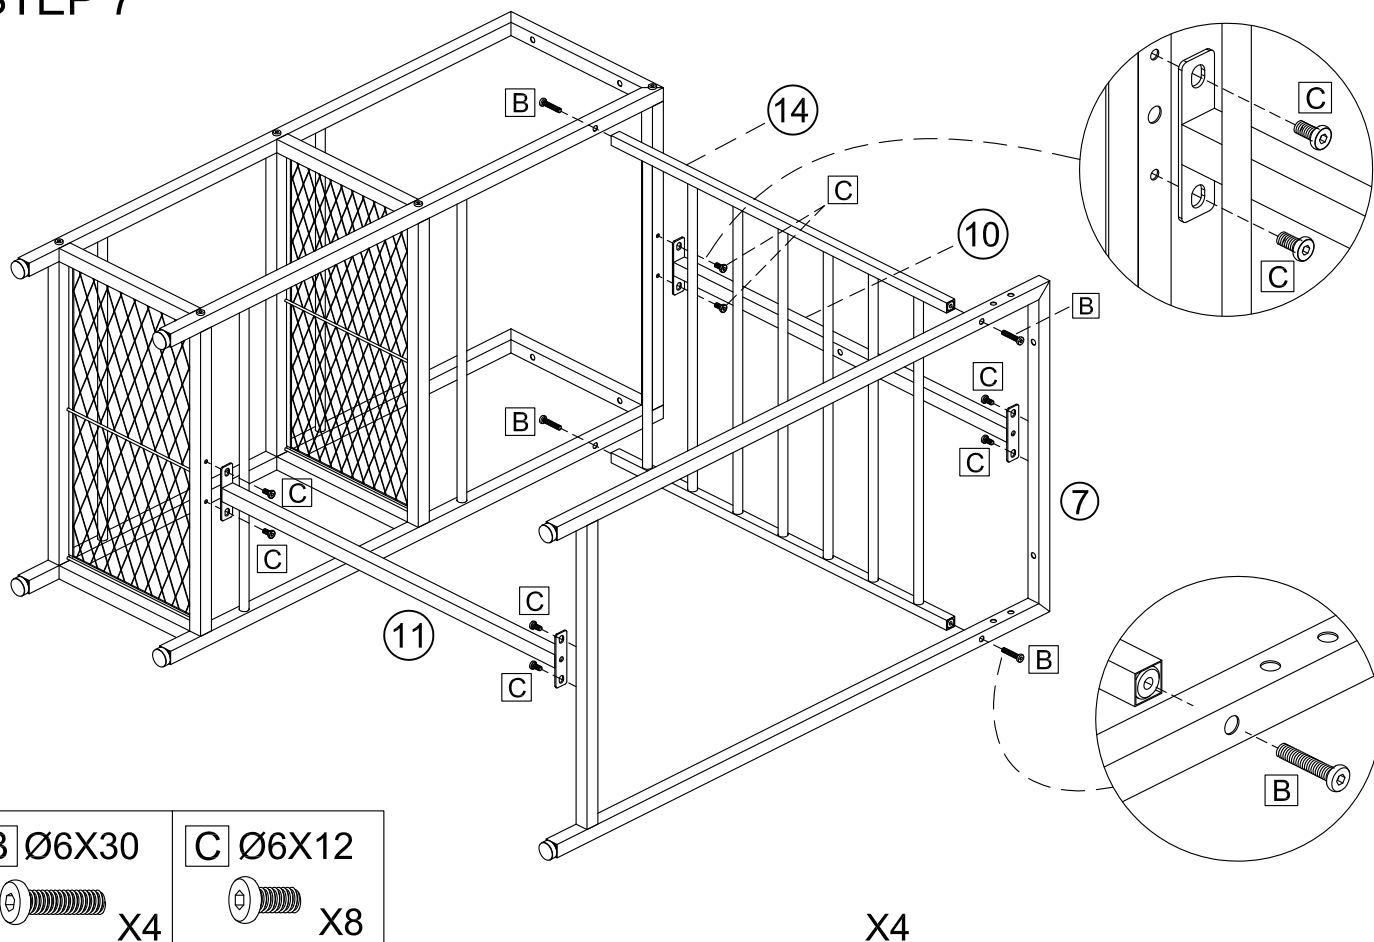

INSTALLATION INSTRUCTION

STEP 8

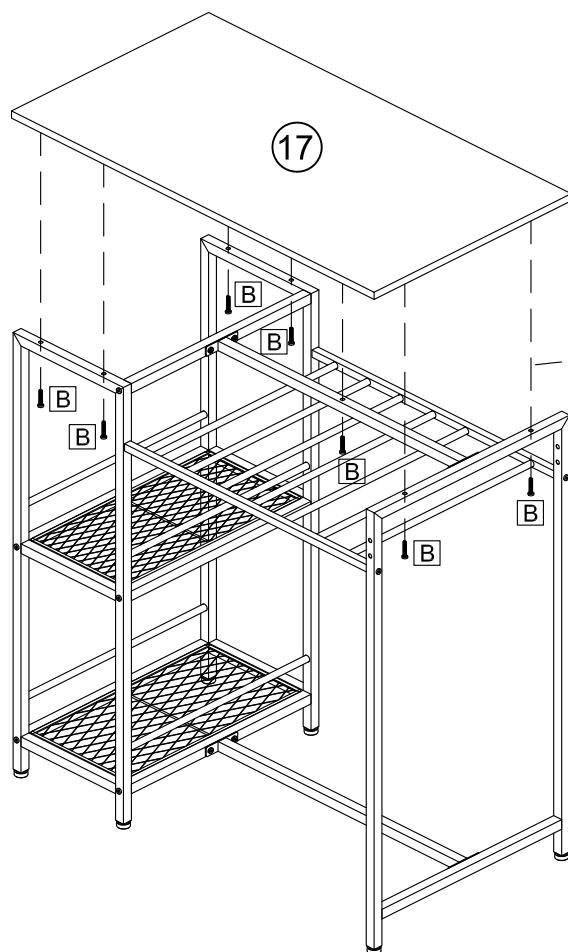


B Ø6X30




X7

STEP 9

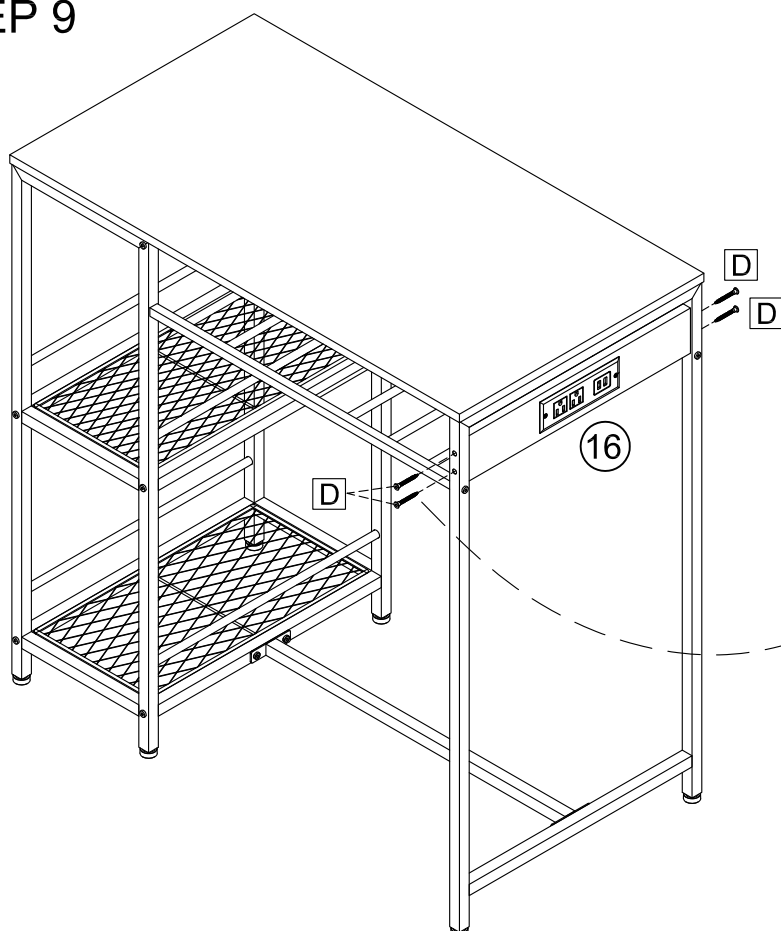

D Ø5X44



X4