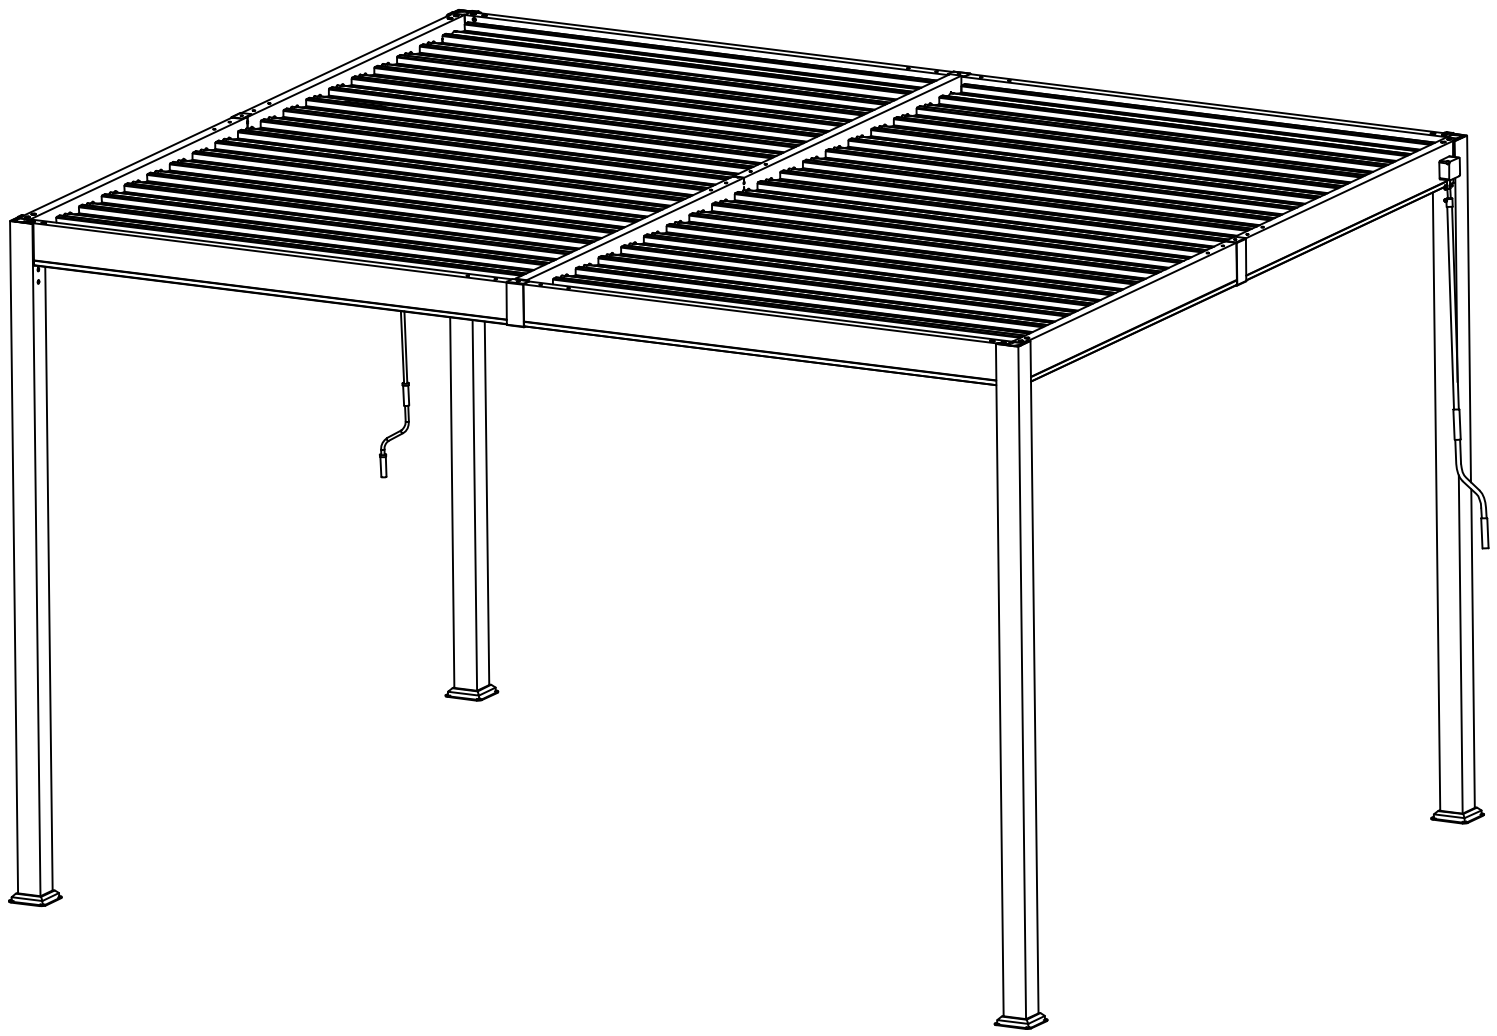
INSTALLATION INSTRUCTIONS

10x12 ft Pergolas

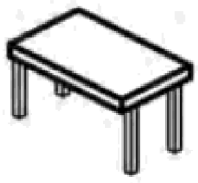


EASYHAWKservice @outlook.com

Our t eam is available 24/ 7 t o help with any product questions. Cont act us any time!

Recommended to wear gloves to avoid scratches.
Please read the instructions COMPLETELY before assembly.

REQUIRED TOOLS





















Tools			
			
	Gloves	Table	Ladder
			
	Power drill	Screw drive	Tape Measure


ASSEMBLYTIPS

1. Clear a working area to allow access on all four sides. A raised worksurface will make assembly easier. It is easier to install the wall panel on the table.
2.All parts are identified, so when working through the instructions pageby page, the diagrams show where each part is positioned.
3.Before starting, to avoid any accidental injury, we recommend the use of gloves to protect your hands
4.Please keep children away from your construction site.
5.Most assembly can be completed by one person, but assistance maybe needed when you reach the erection stage.
6.Please note: Some local government authorities have rules & regulations on shed installation, and you may need approval to erect this shed.




ASSEMBLYSTEPS

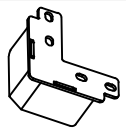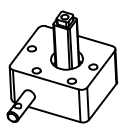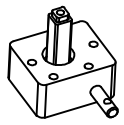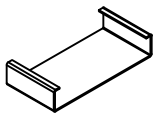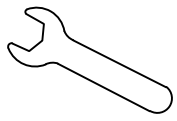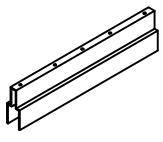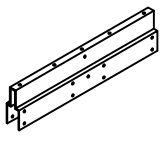
1.Unpack all components from the carton and lay them out beside your work area. Check parts against the parts list
2.Work through the assembly instructions page by page
3.Once assembly is completed, place the shed in position and fix theanchor to the ground.
4.Clean up all metal pieces and screws.

Part No	Diagram	Qty	Part No	Diagram	Qty	Part No	Diagram	Qty
A		4	L		4	M615	M6*15 	38
B1		1	M		4	M625	M6*25 	2
B2		1	N		4	20M616	Ø19*20/M6*16 	8
C1		1	O		4	M810	M8*10 	16
C2		1	P		4	M815	M8*15 	16
D1		2	Q1		1	EB	M8*100 	16
D2		2	Q2		1	ST4208		144
E1		1	R		2	AK5	 M5	1
E2		1	S		2	AK6	 M6	1
F		38	T		2	AK8	 M8	1
G		4	U		2	SEM5	M5 	1
H		1	M510	M5*10 	4	SEM8	M8 	1
I1		4	M525	M5*25 	6	SD		1
I2		1	LNM5	M5	2	WT	Waterproof Tape	6
J		2	M606	M6*6	8	PB		1
K		4	M610	M6*10	99			







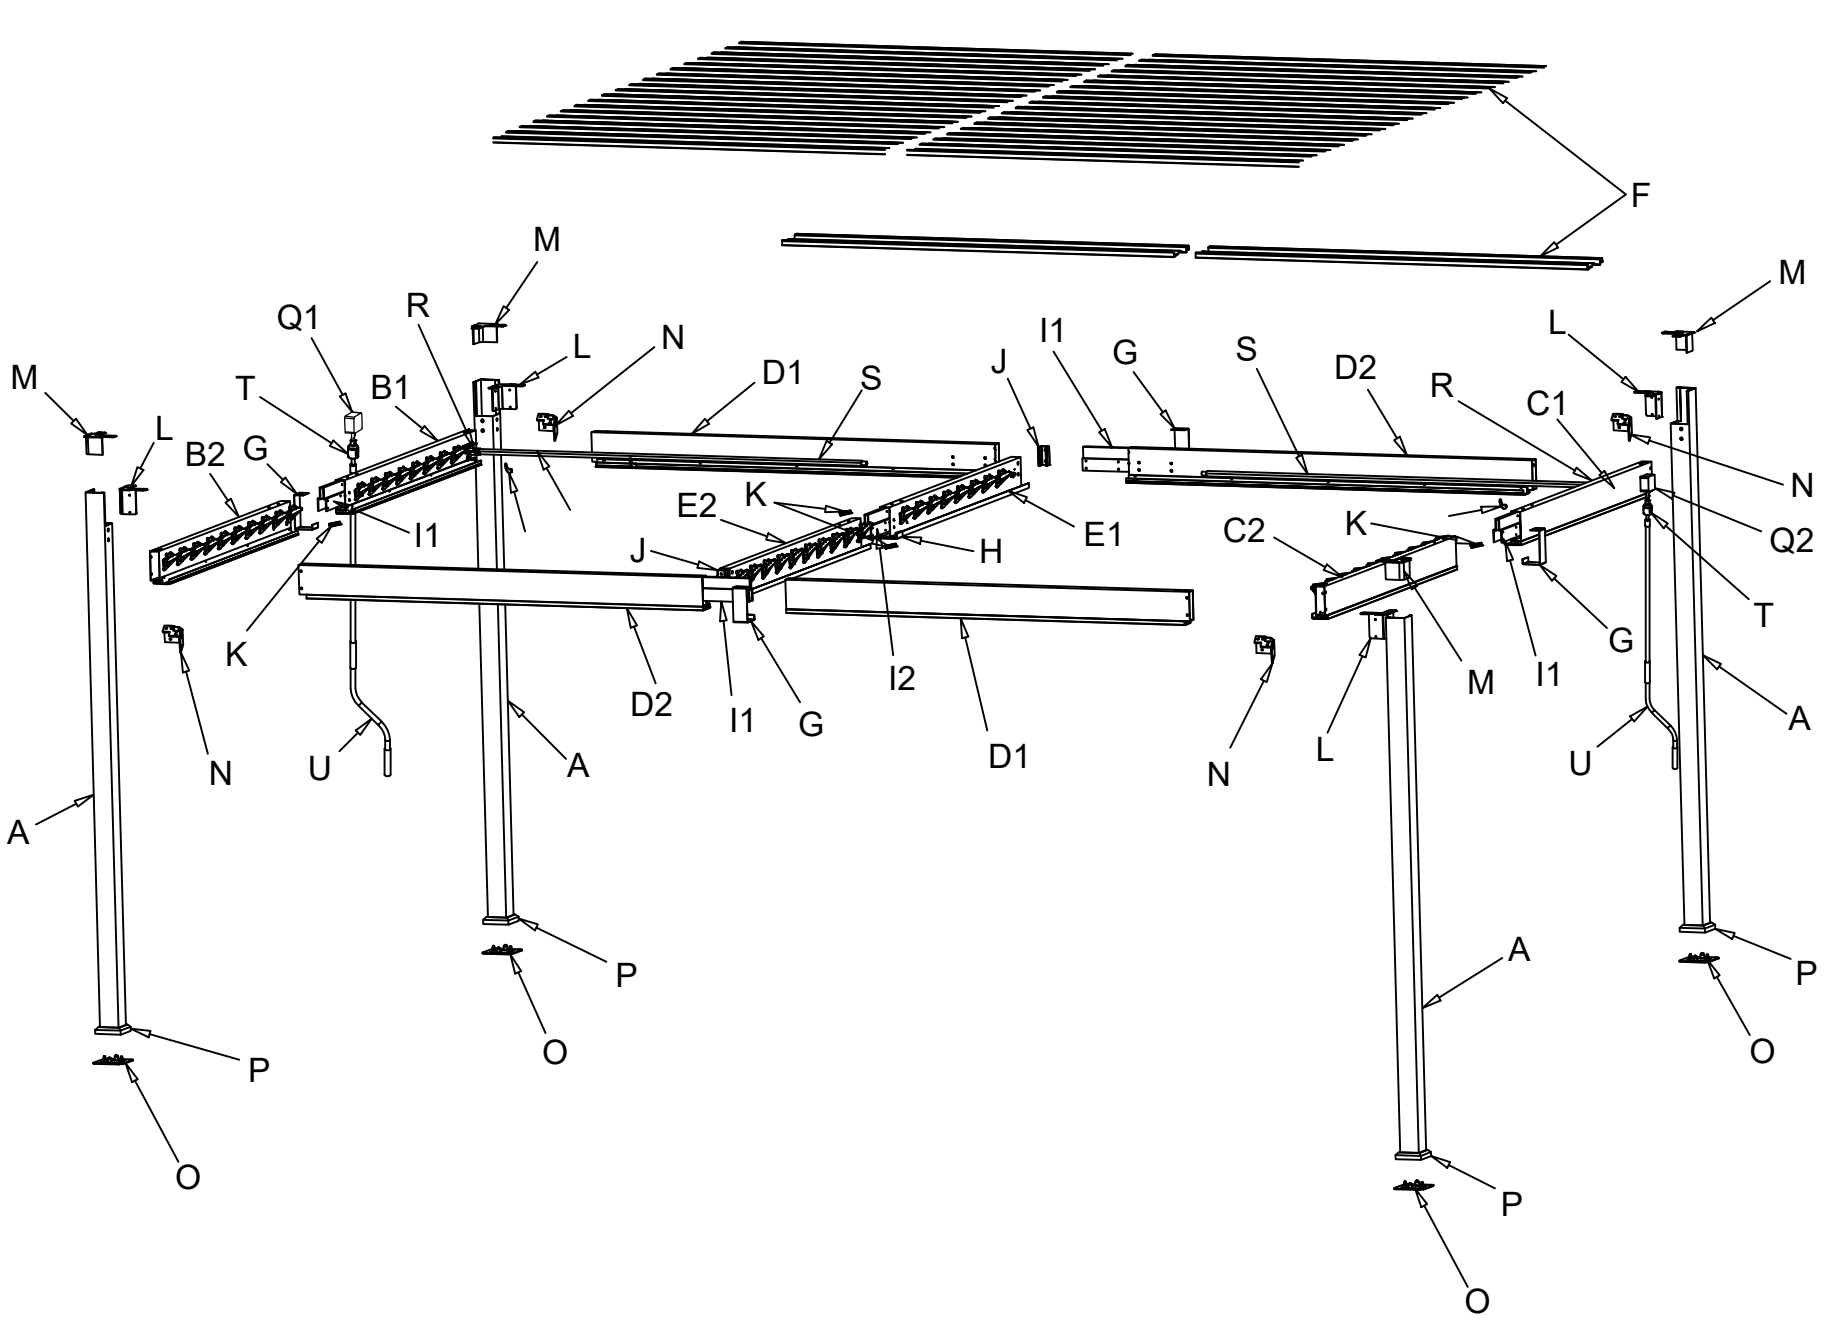

F
M
Q1
R
L
N
D1
S
J
I1
G
S
D2
M
L
M
T
B1
L
B2
G
E2
K
I1
E1
J
H
C2
K
R
C1
N
Q2
T
K
D2
I1
G
I2
D1
M
I1
G
N
U
A
N
L
U
A
A
P
O
P
O
A
P
O

STEP 1


A		4	O		4	P		4
M615	M6*10 	16	AK6	 M6	1			

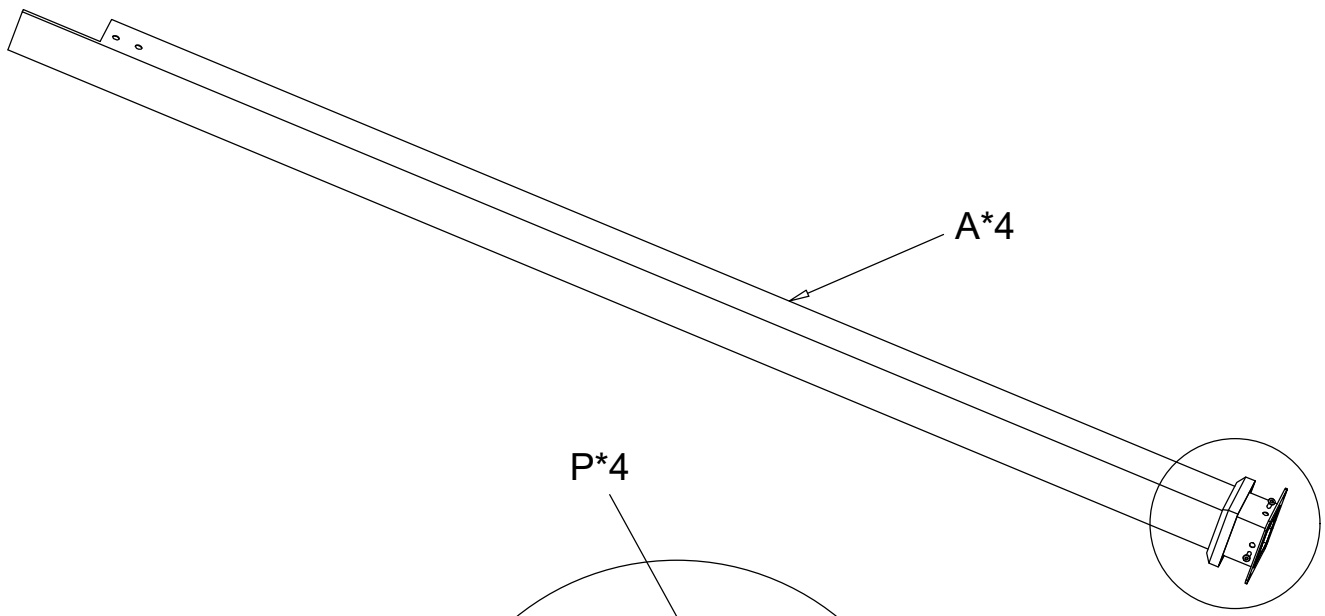

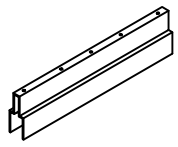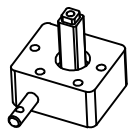
STEP 2-1

B1		1	B2		1	I1		1
G		1	K		1	Q1		1
R		1	M610	M6*10 	13	M606	M6*6 	2
20M616	Ø19*20/M6*16 	4	M510	M5*10 	1	M615	M6*15 	1
AK5	 M5	1	AK6	 M6	1	WT	 Waterproof Tape	1







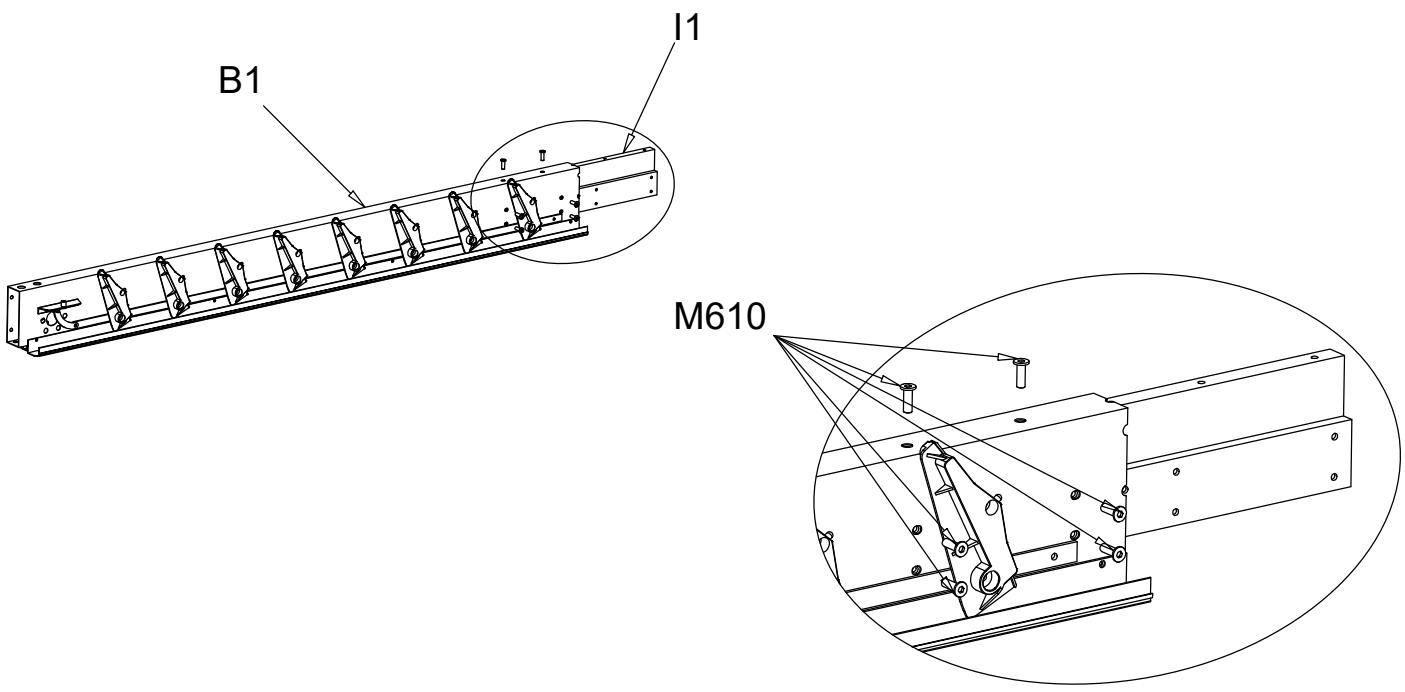
1.



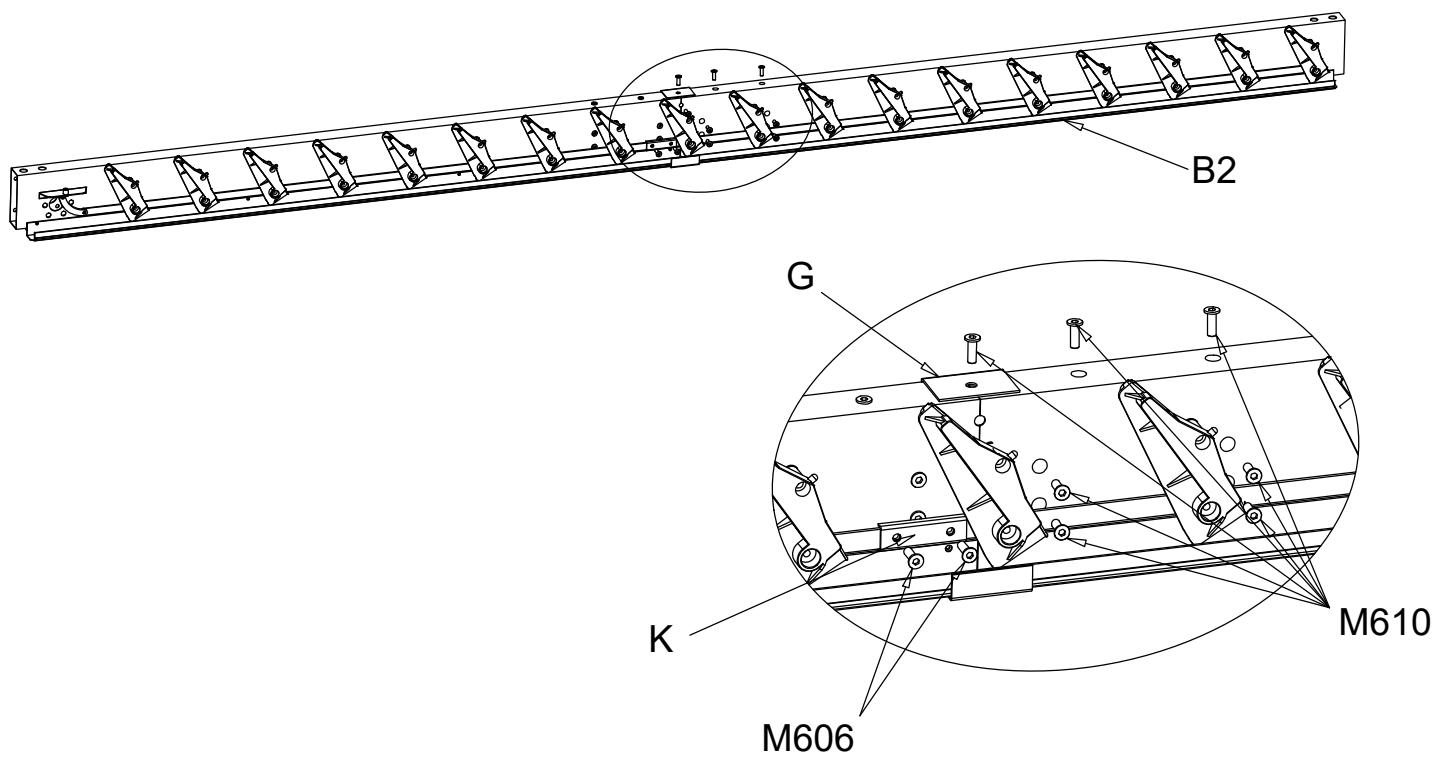
2.



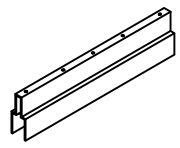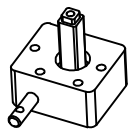
STEP 2-2

B1		1	B2		1	I1		1
G		1	K		1	Q1		1
R		1	M610	M6*10 	13	M606	M6*6 	2
20M616	Ø19*20/M6*16 	4	M510	M5*10 	1	M615	M6*15 	1
AK5	 M5	1	AK6	 M6	1	WT	 Waterproof Tape	1








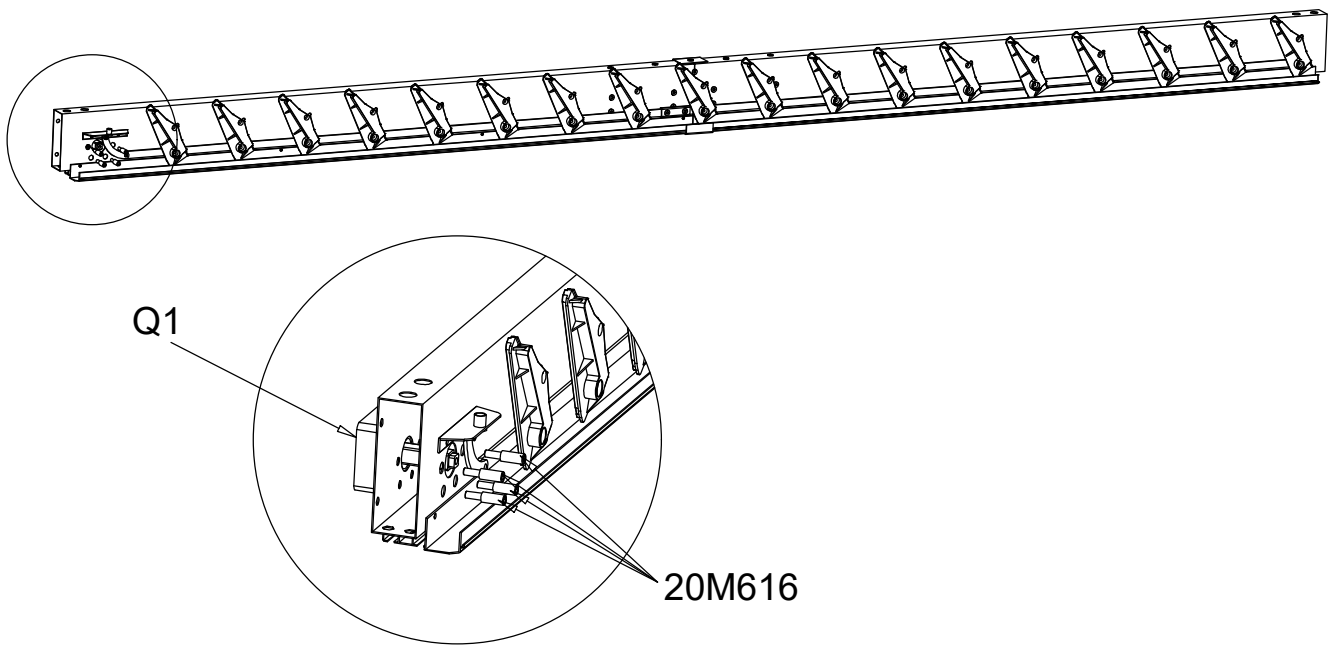
3.



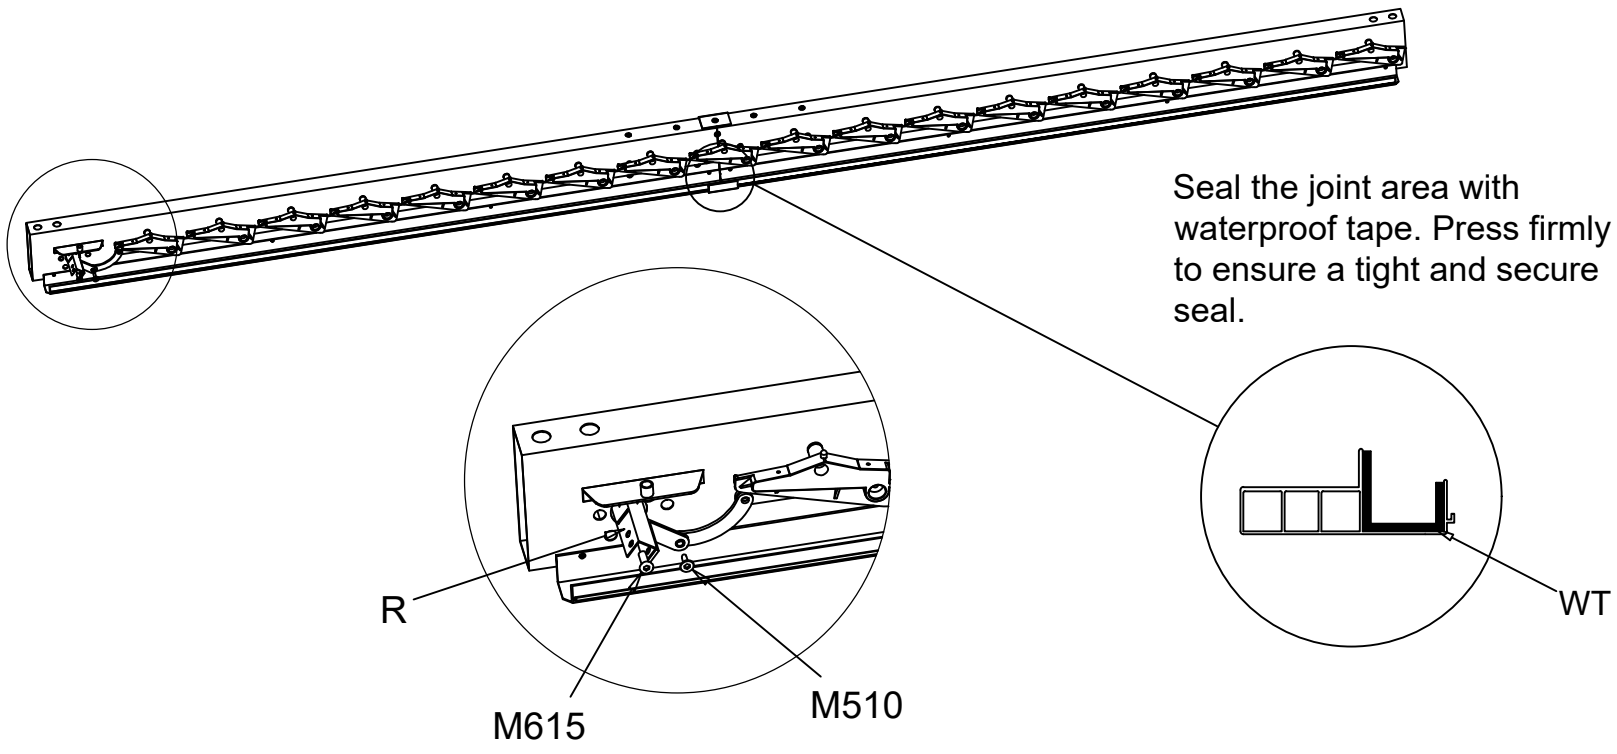
4.



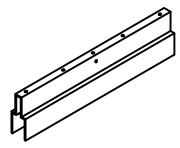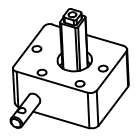
STEP 3-1

C1		1	C2		1	I1		1
G		1	K		1	Q2		1
R		1	M610	M6*10 	13	M606	M6*6 	2
20M616	Ø19*20/M6*16 	4	M510	M5*10 	1	M615	M6*15 	1
AK5	 M5	1	AK6	 M6	1	WT	 Waterproof Tape	1








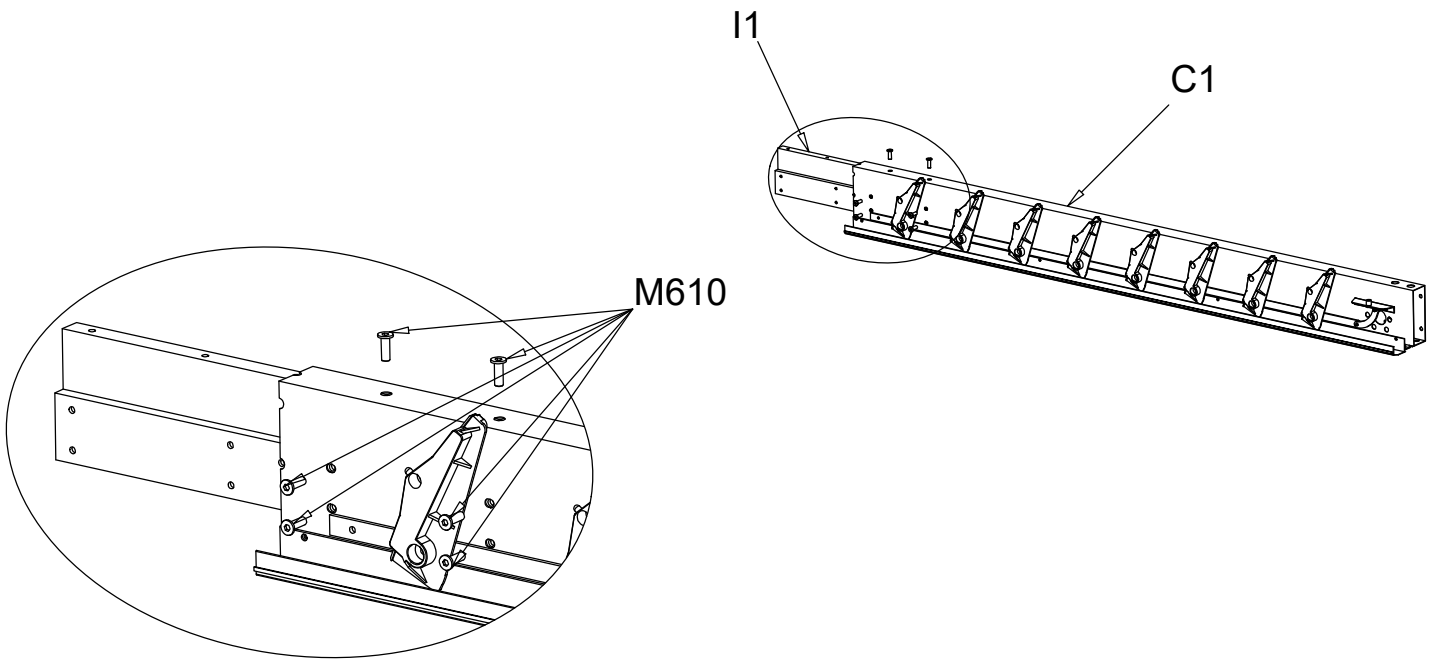
1.



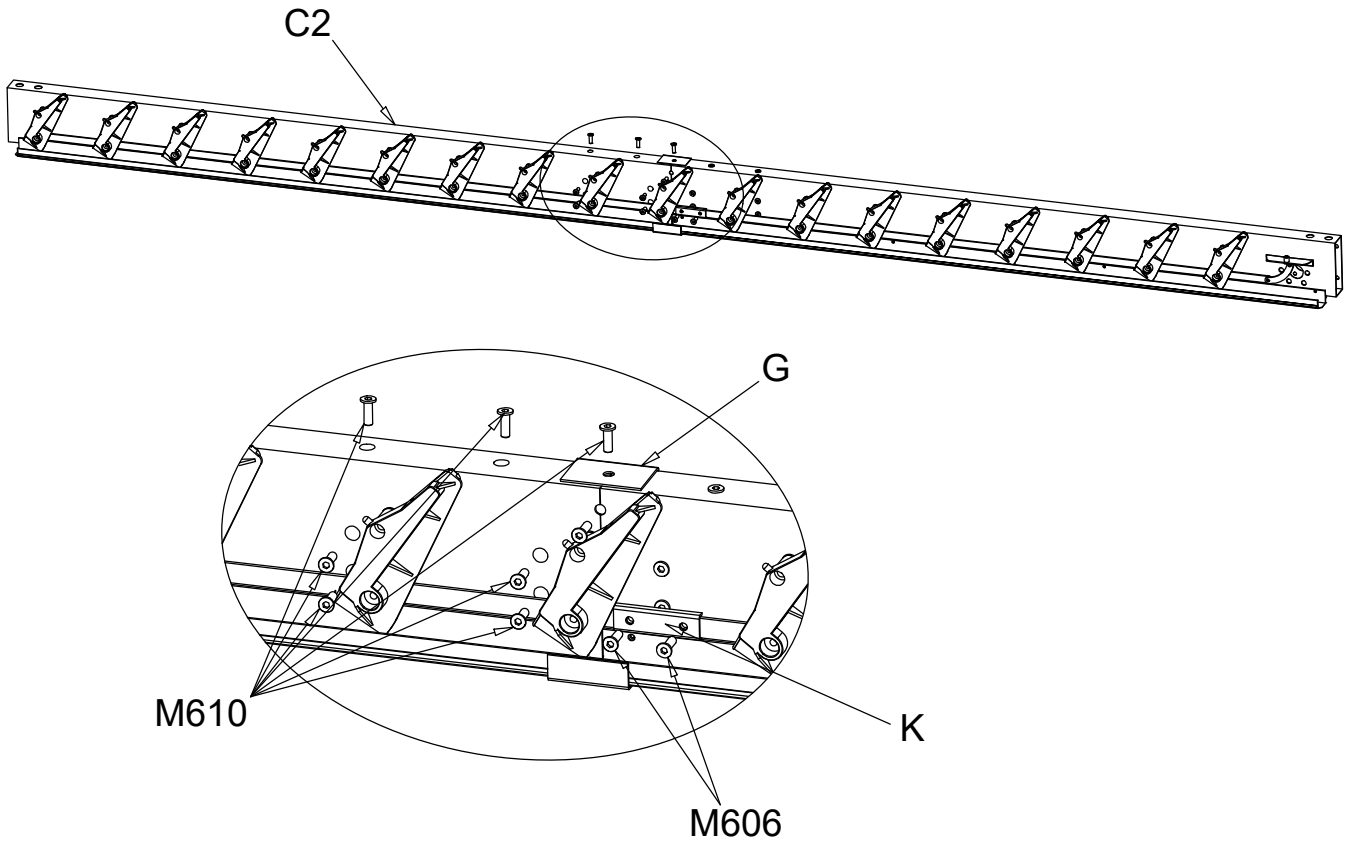
2.



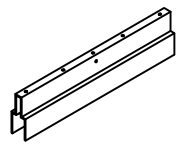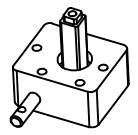
STEP 3-2

C1		1	C2		1	I1		1
G		1	K		1	Q2		1
R		1	M610	M6*10 	13	M606	M6*6 	2
20M616	Ø19*20/M6*16 	4	M510	M5*10 	1	M615	M6*15 	1
AK5	 M5	1	AK6	 M6	1	WT	 Waterproof Tape	1

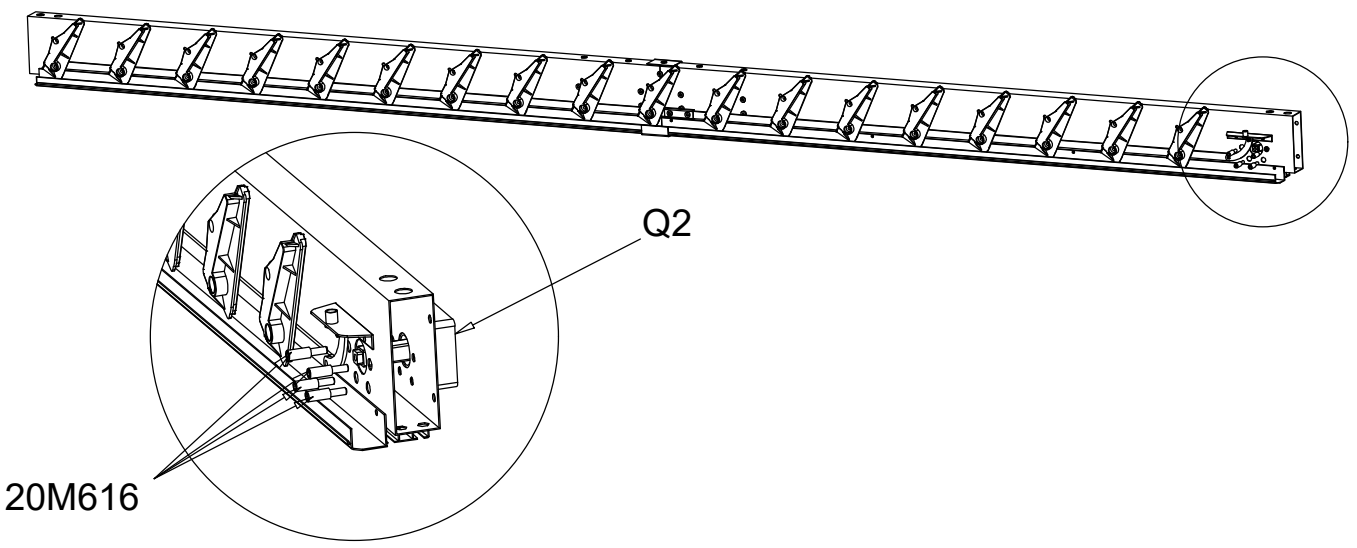
3.




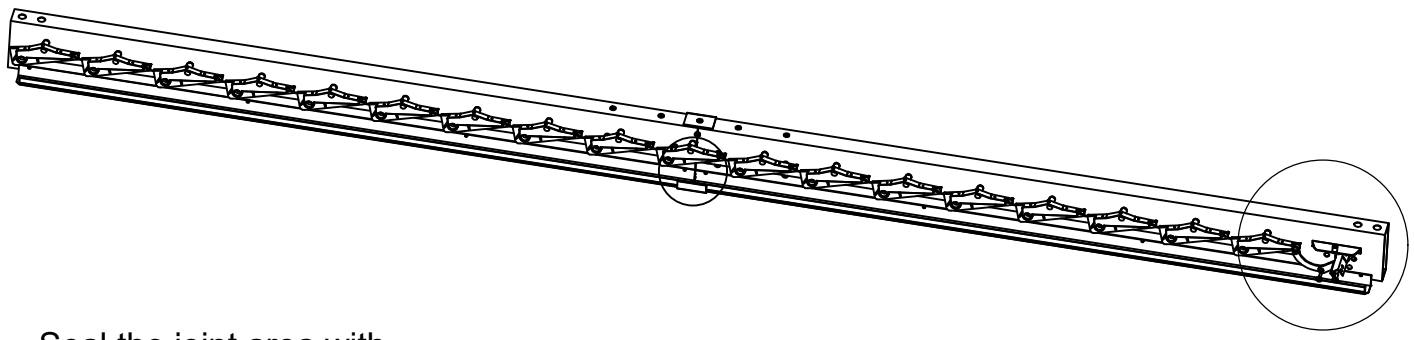4.







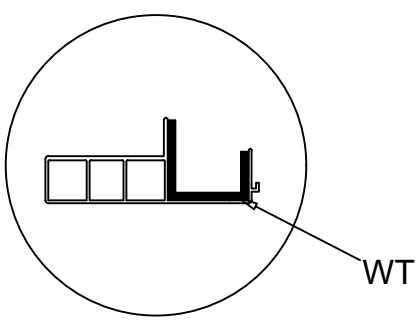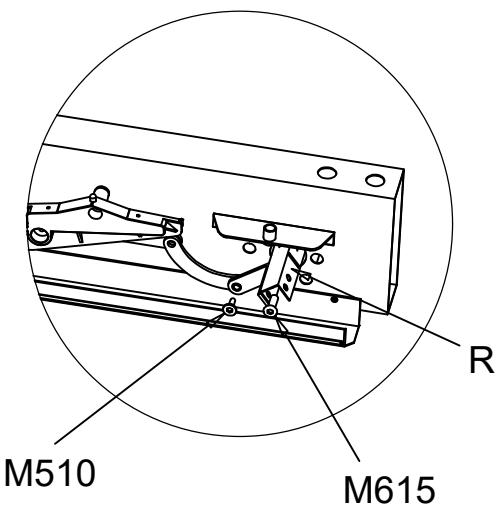Seal the joint area with waterproof tape. Press firmly to ensure a tight and secure seal.







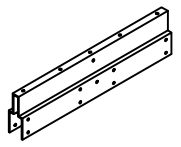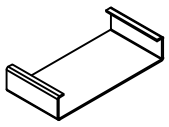STEP 4-1





E1		1	E2		1	I2		1
H		1	K		1	M606	M6*6 	4
M610	M6*10 	21	AK6	 M6	1	WT	 Waterproof Tape	1

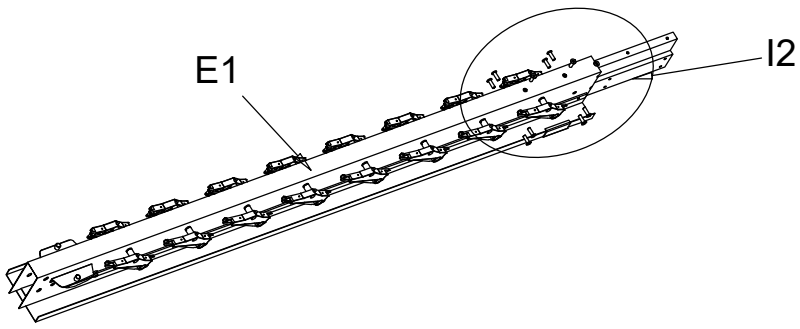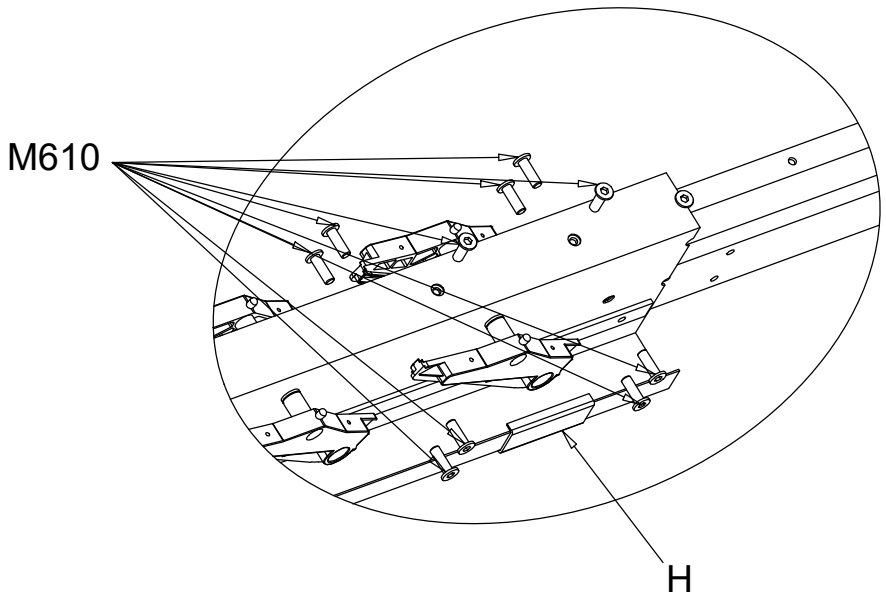1.






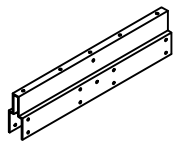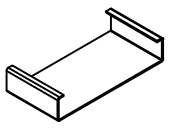
STEP 4-2


E1		1	E2		1	I2		1
H		1	K		1	M606	M6*6 	4
M610	M6*10 	21	AK6	 M6	1	WT	 Waterproof Tape	1

2.





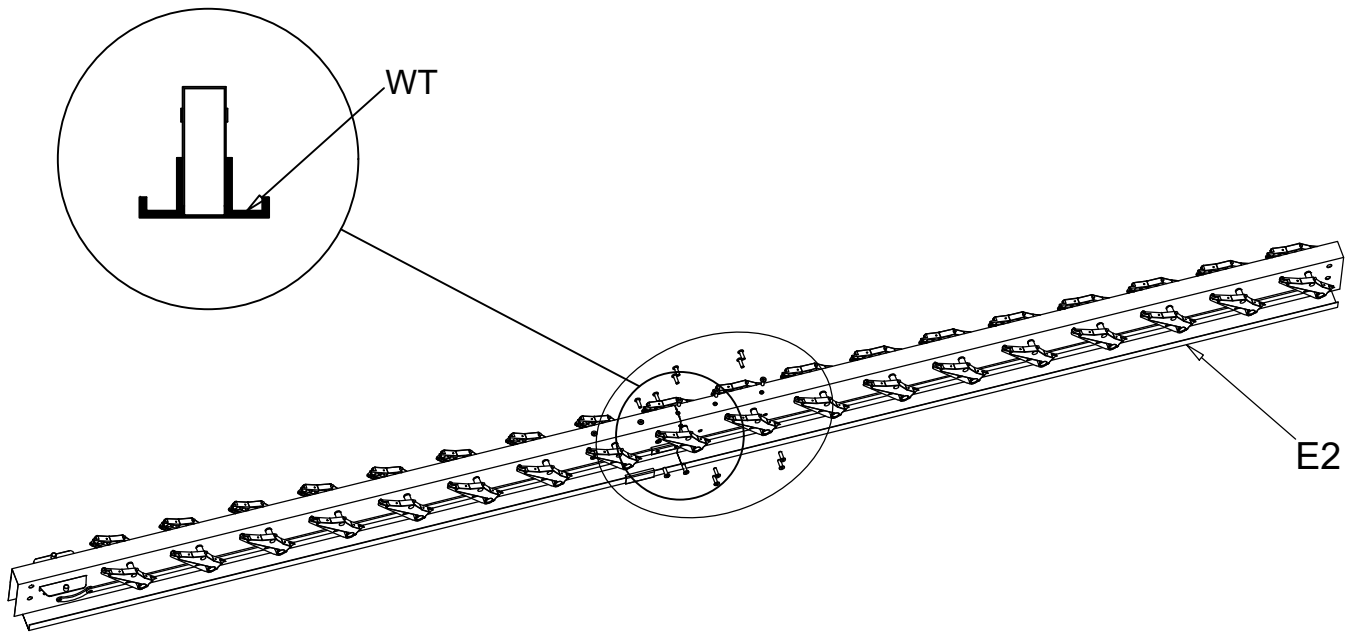
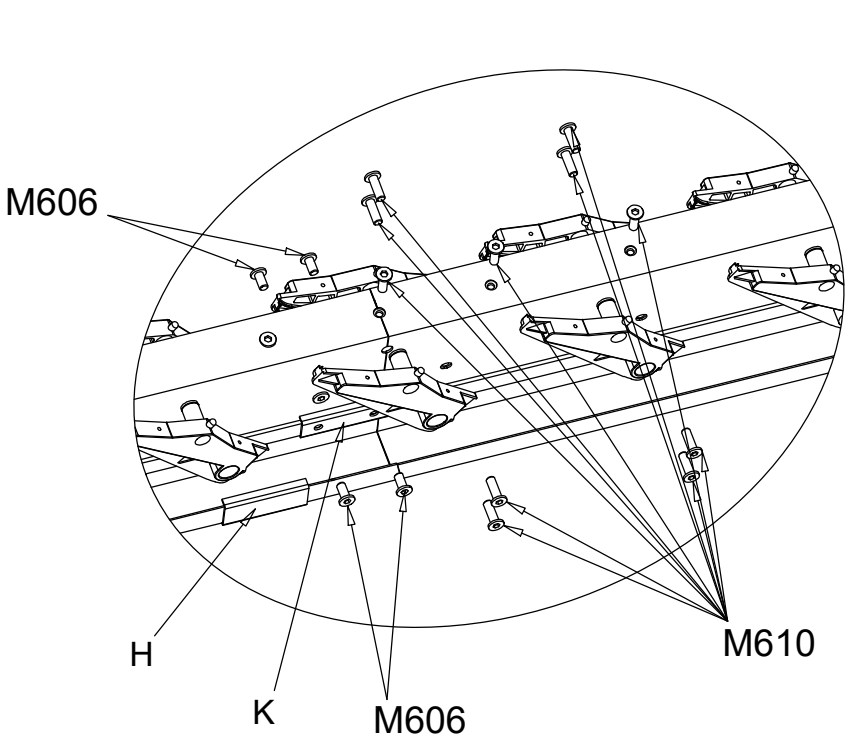
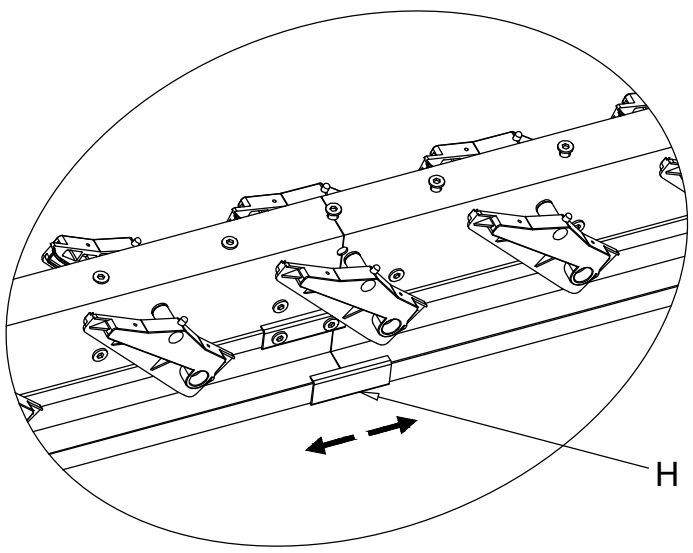
Seal the joint area with waterproof tape. Press firmly to ensure a tight and secure seal.








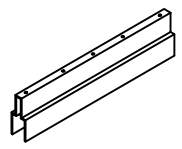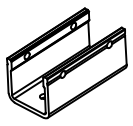
STEP 5

D1		1	D2		1	I1		1
J		1	L		2	G		1
M610	M6*10 	14	M615	M6*15 	4	M620	M6*20 	1
AK6	 M6	1	AK8	 M8	1	WT	 Waterproof Tape	1







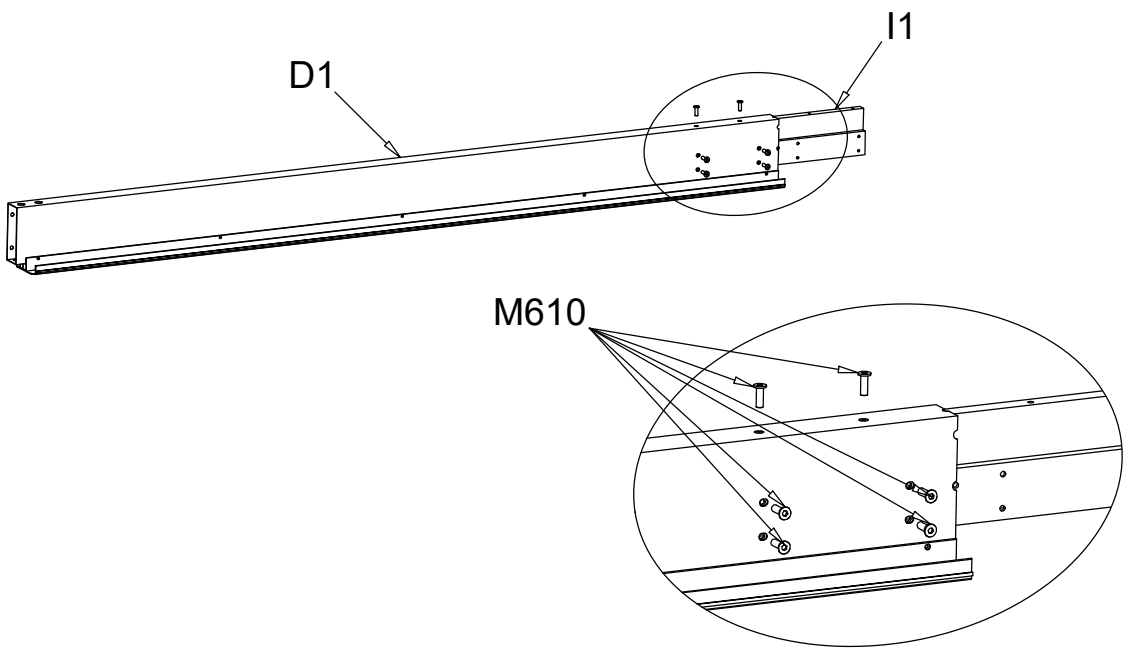
1.



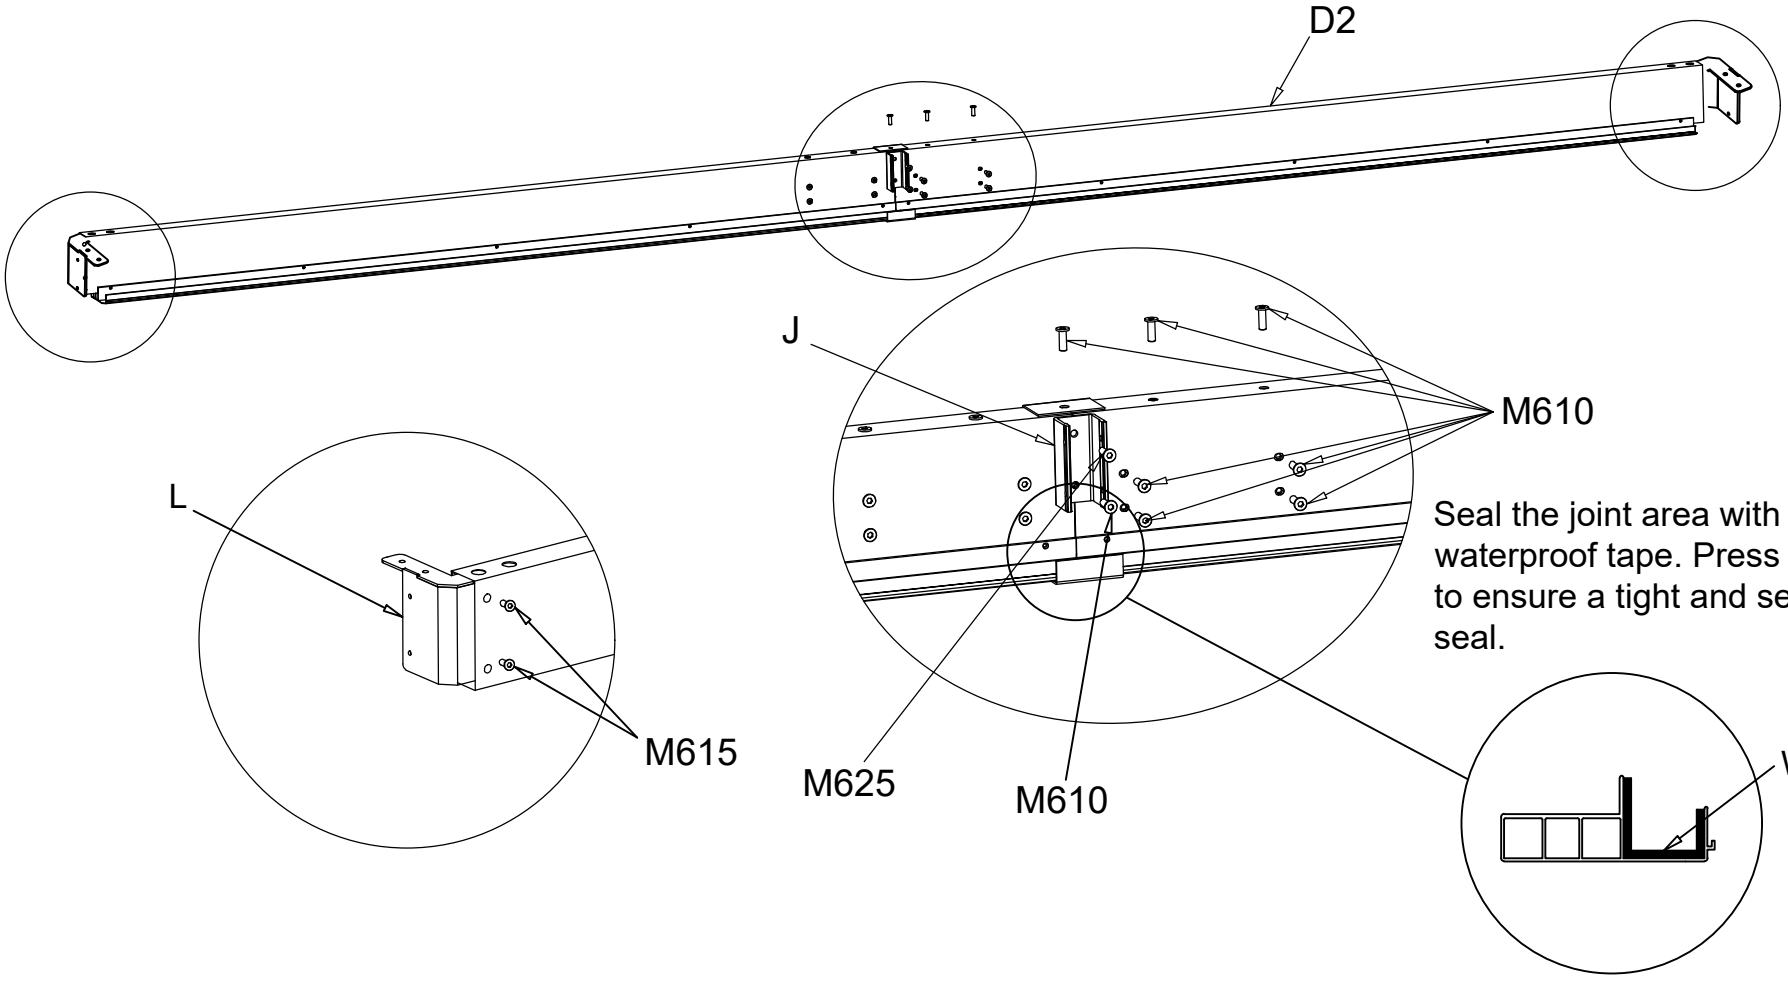
2.



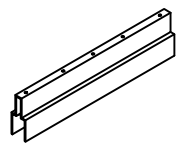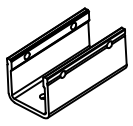
STEP 6

D1		1	D2		1	I1		1
J		1	L		2	G		1
M610	M6*10 	14	M615	M6*15 	4	M620	M6*20 	1
AK6	 M6	1	AK8	 M8	1	WT	 Waterproof Tape	1

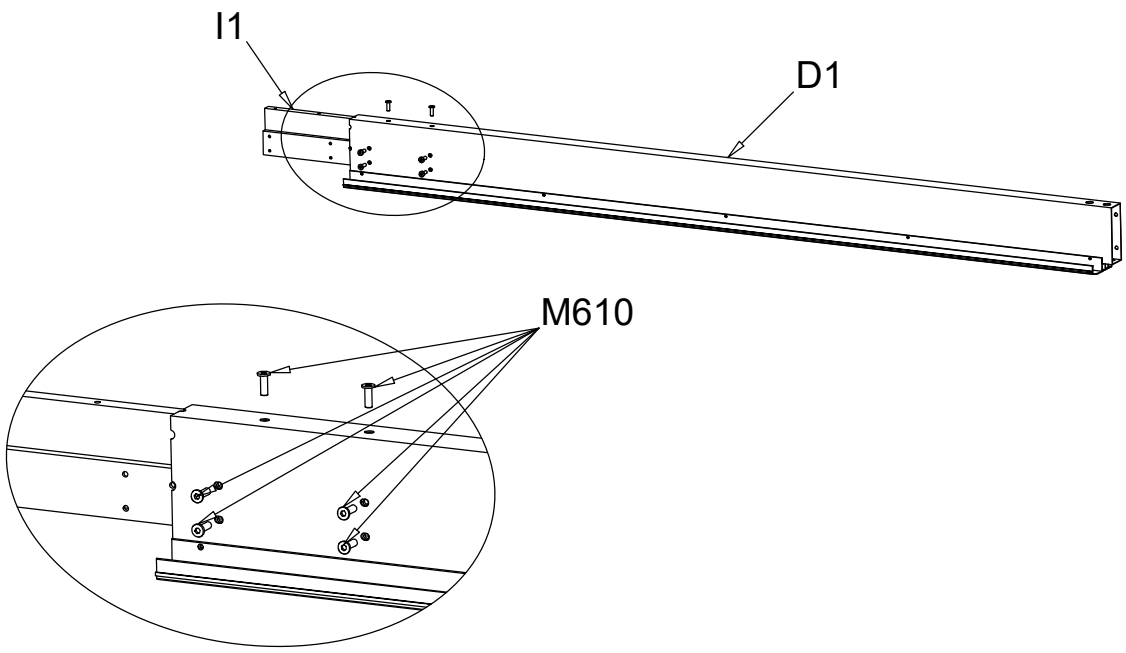1.





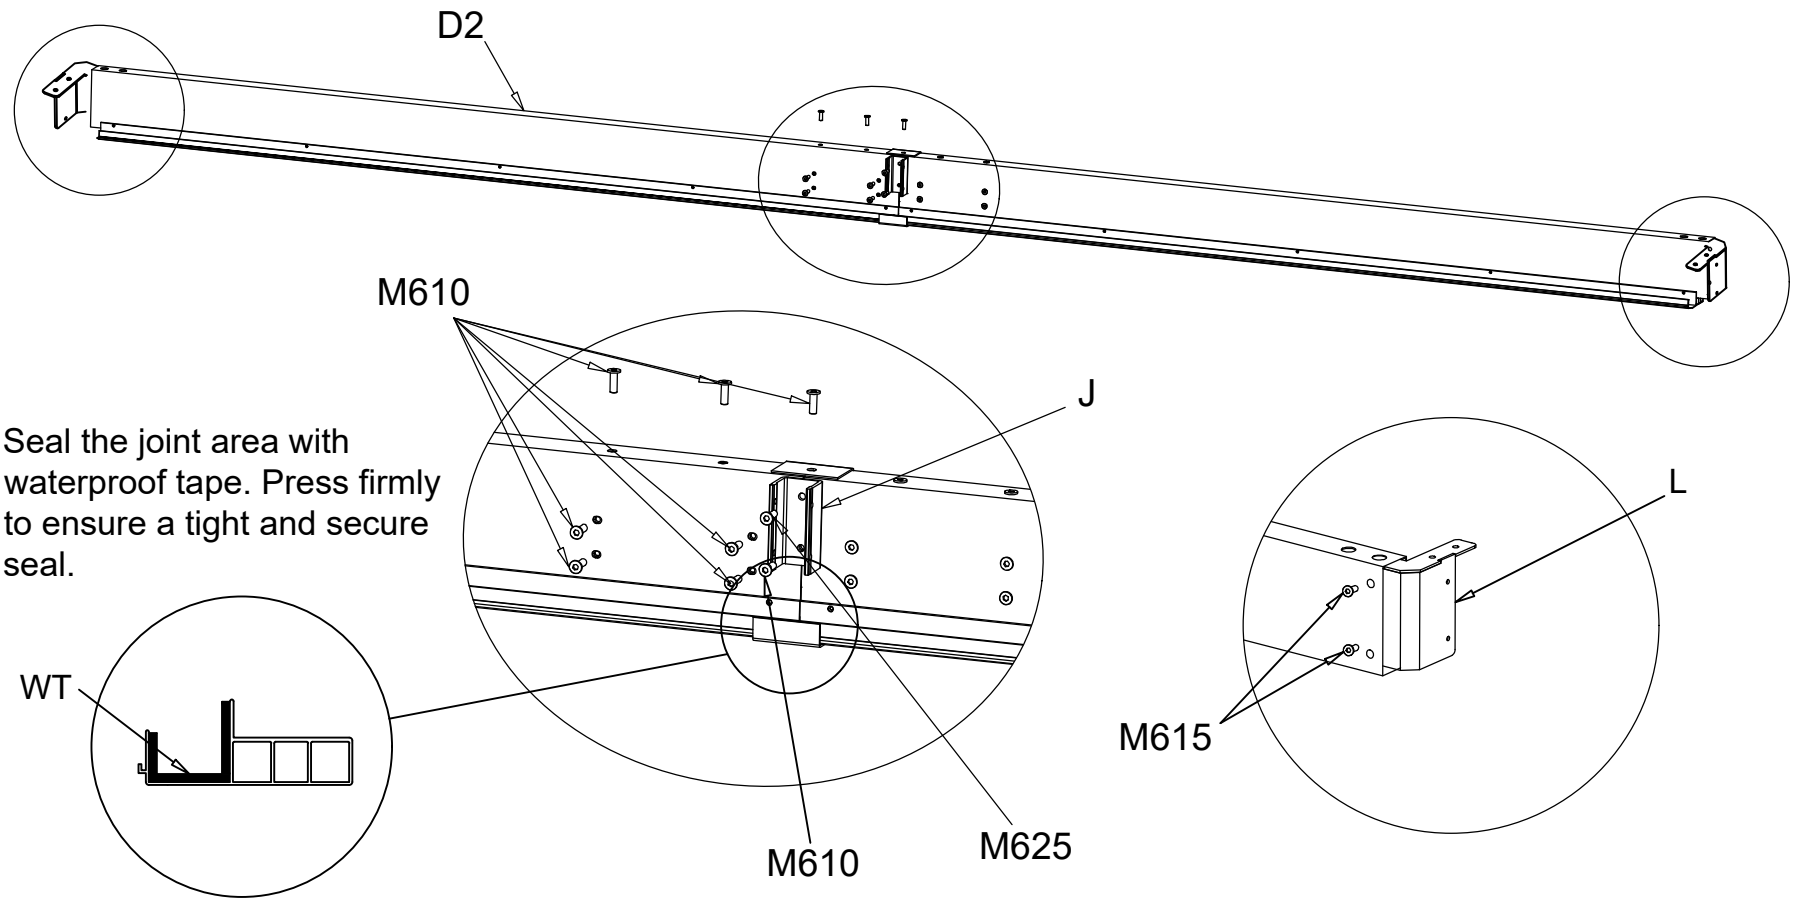
2.





Seal the joint area with waterproof tape. Press firmly to ensure a tight and secure seal.


STEP 7

M610	 M6*10	4	M615	 M6*15	4	AK6	 M6	1




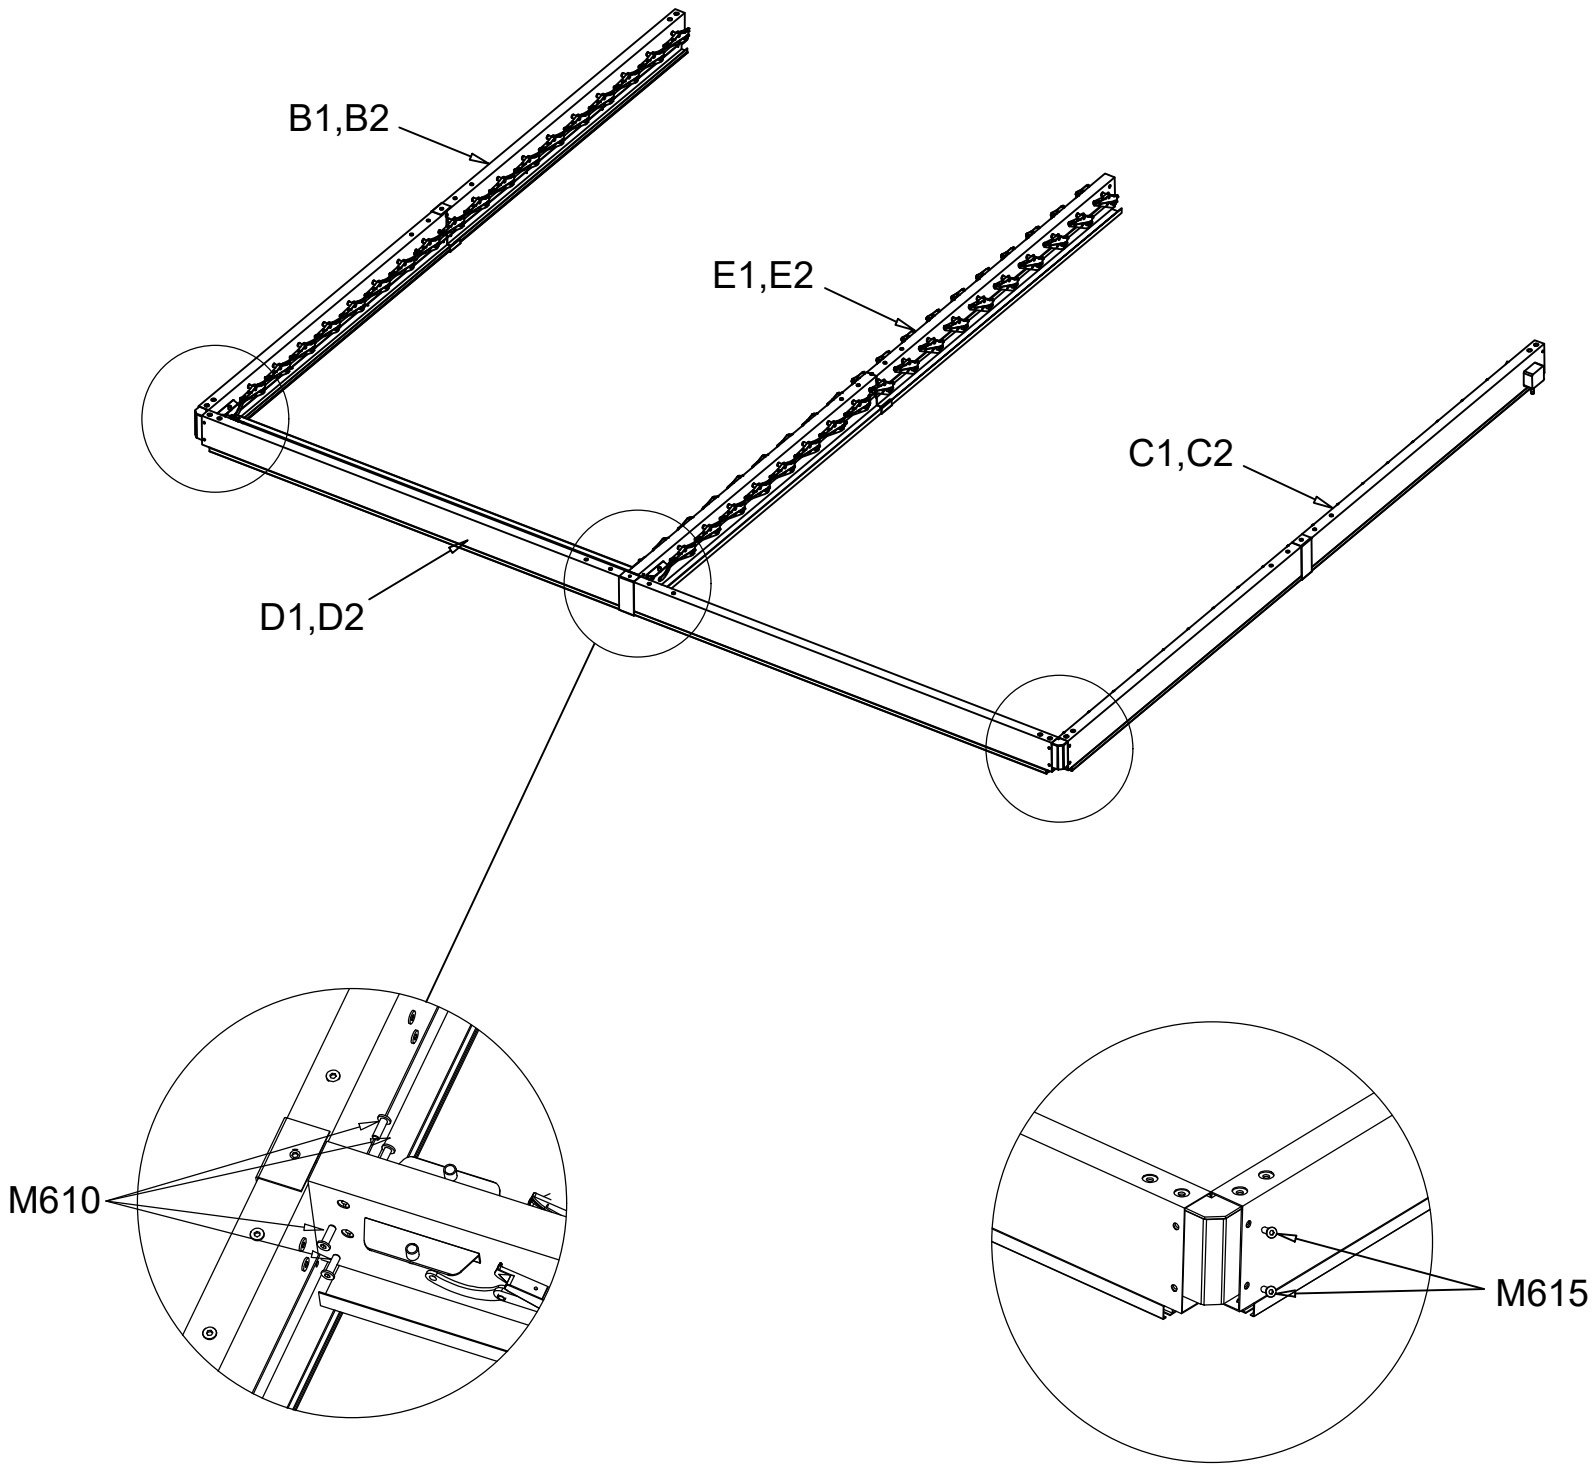



STEP 8


M610	 M6*10	4	M615	 M6*15	4	AK6	 M6	1

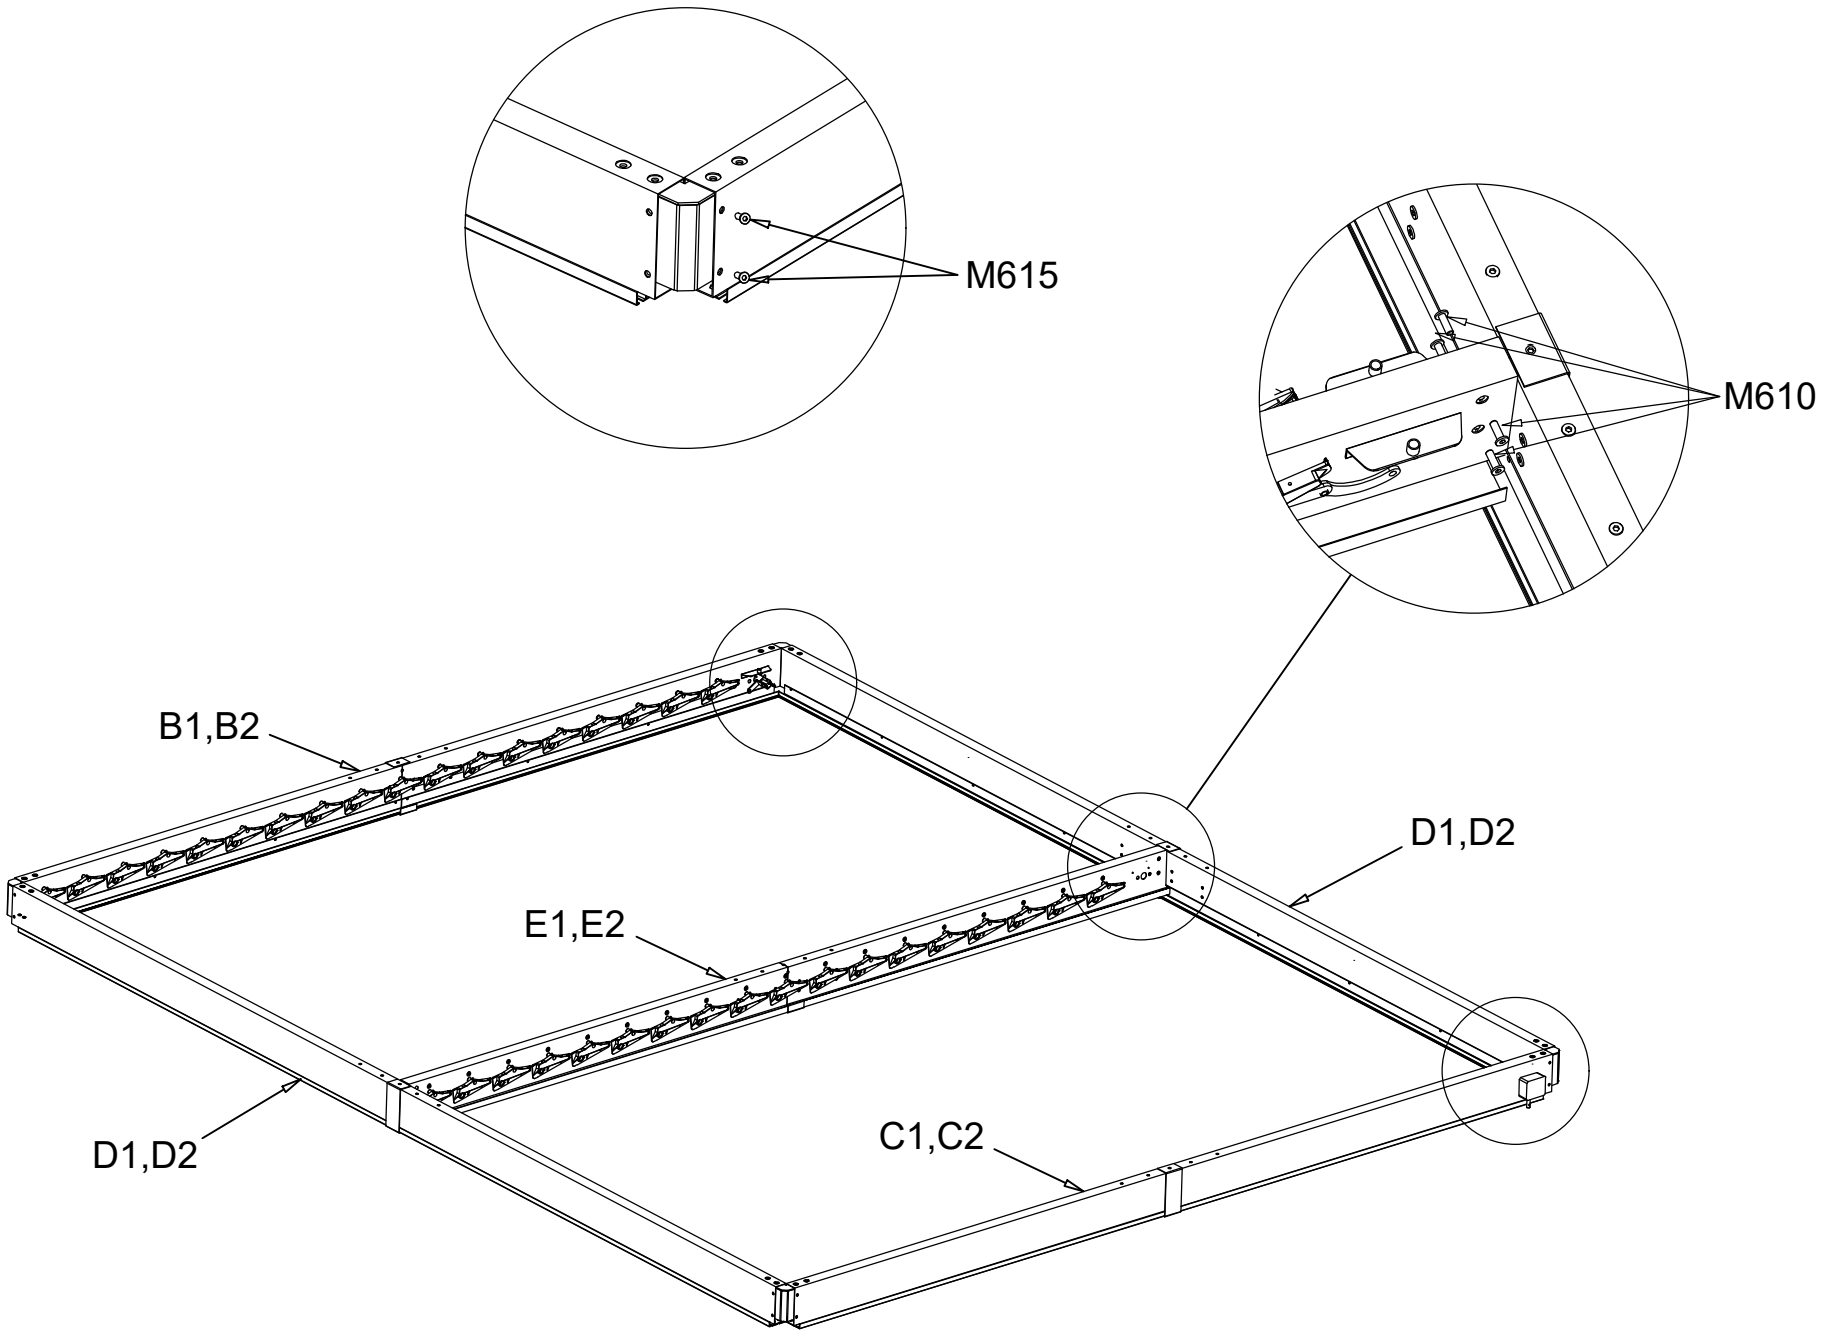


STEP 9

N		4	T		2	M615	 M6*15	16
M525	 M5*25	2	LNM5	 M5	2	AK6	 M6	1
AK5	 M5	1	SEM5	 M5	1			

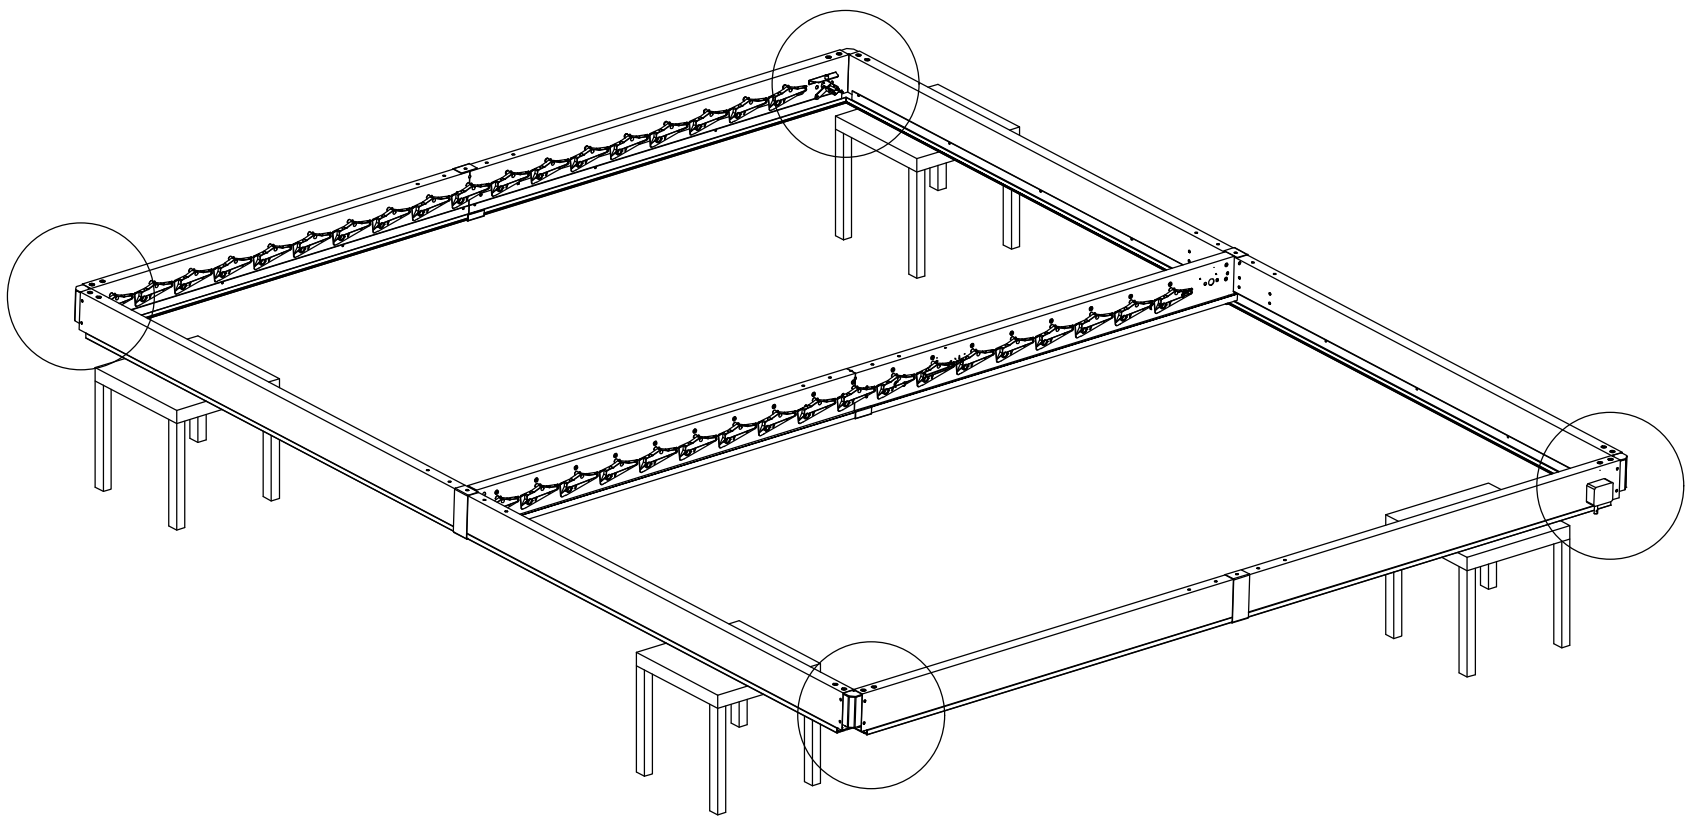


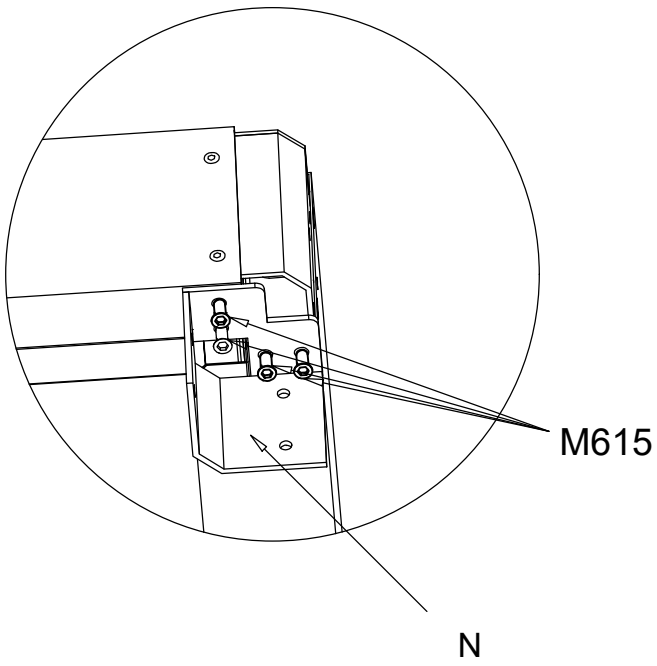

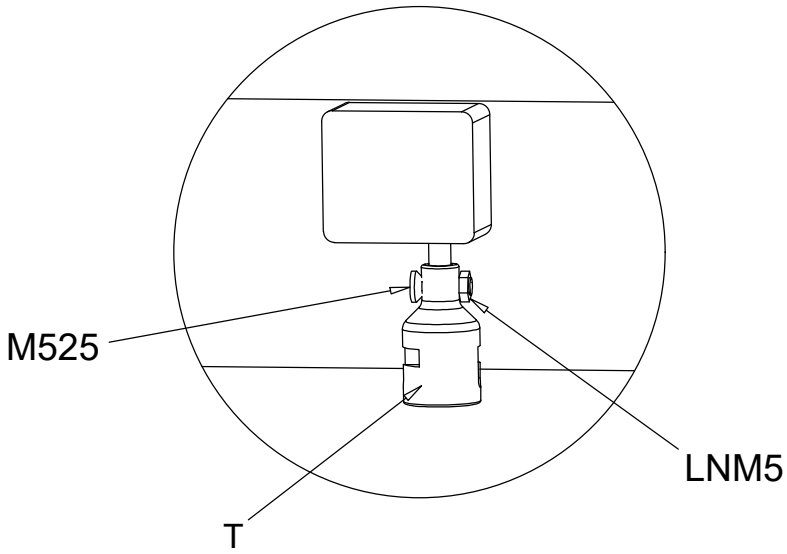


STEP 10


S		2	M525	 M5*25	4	M510	 M5*10	2
AK5	M5	1						

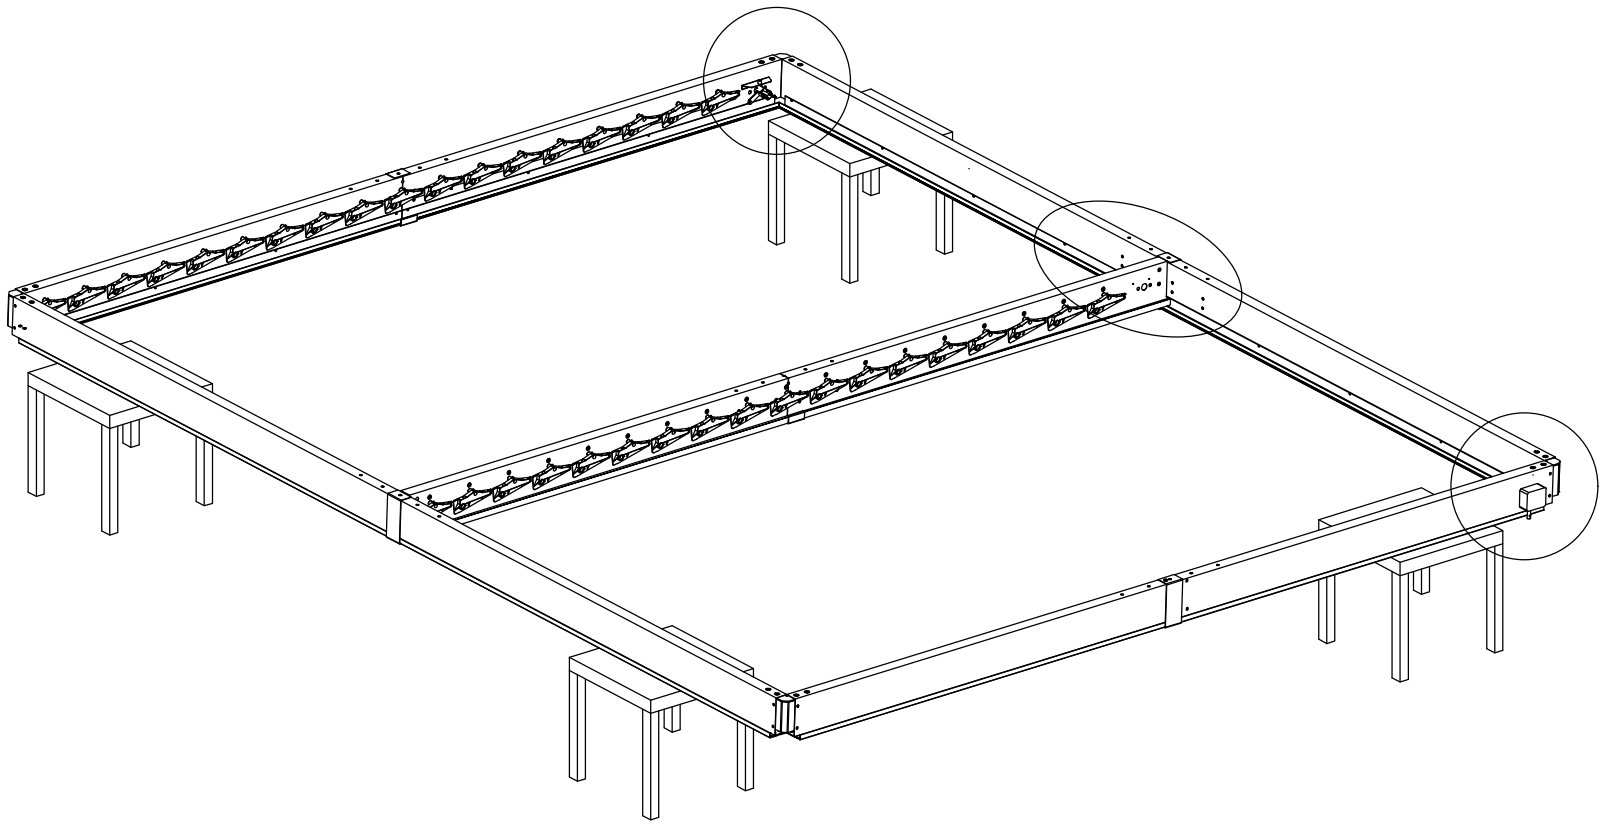




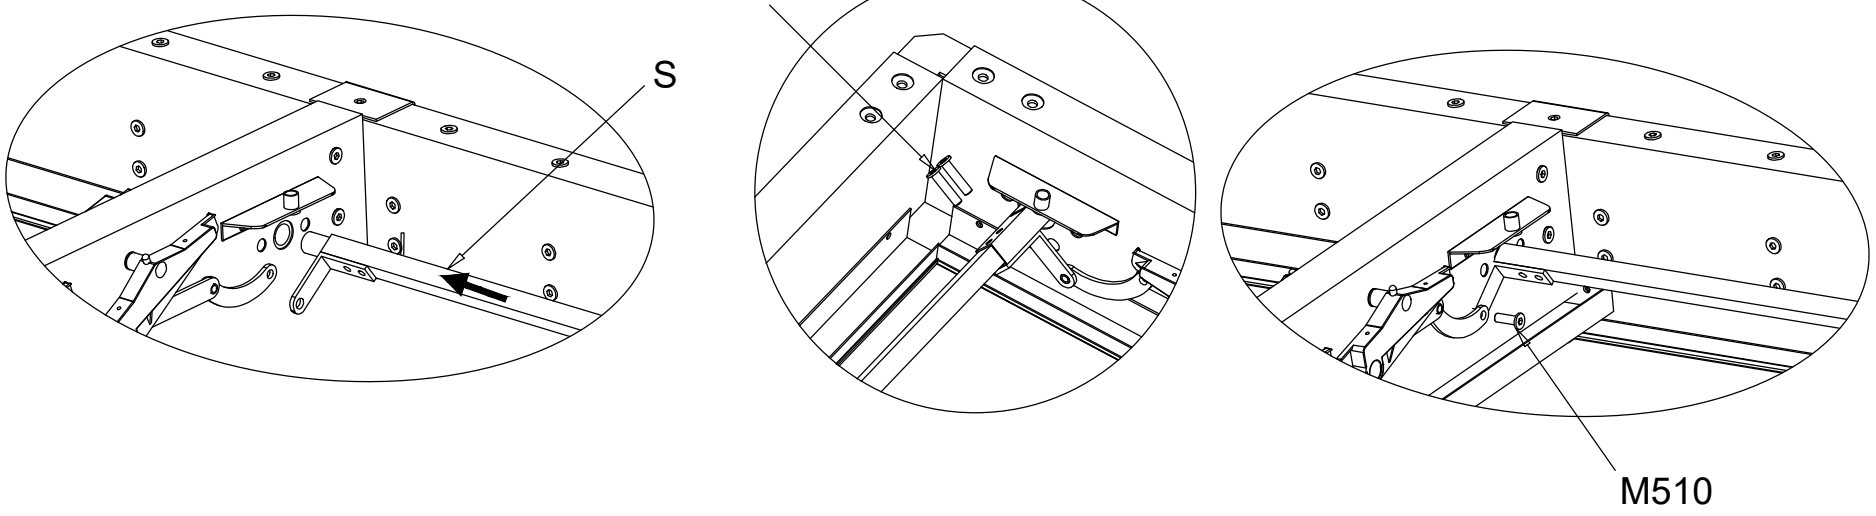
1.



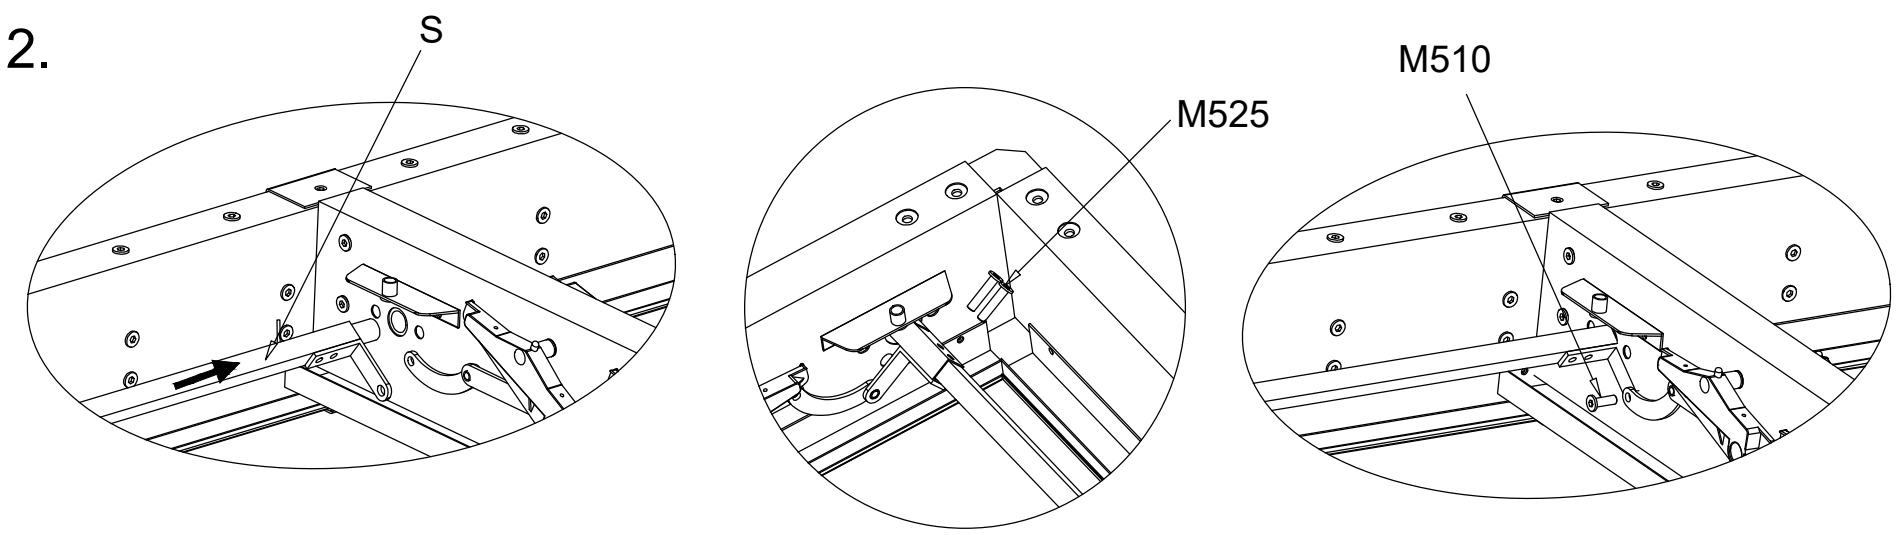
2.




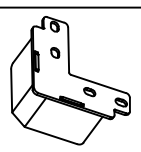
STEP 11-1


M		4	U		2	M810	 M8*10	16
M815	 M8*15	16	AK8	 M8	1			

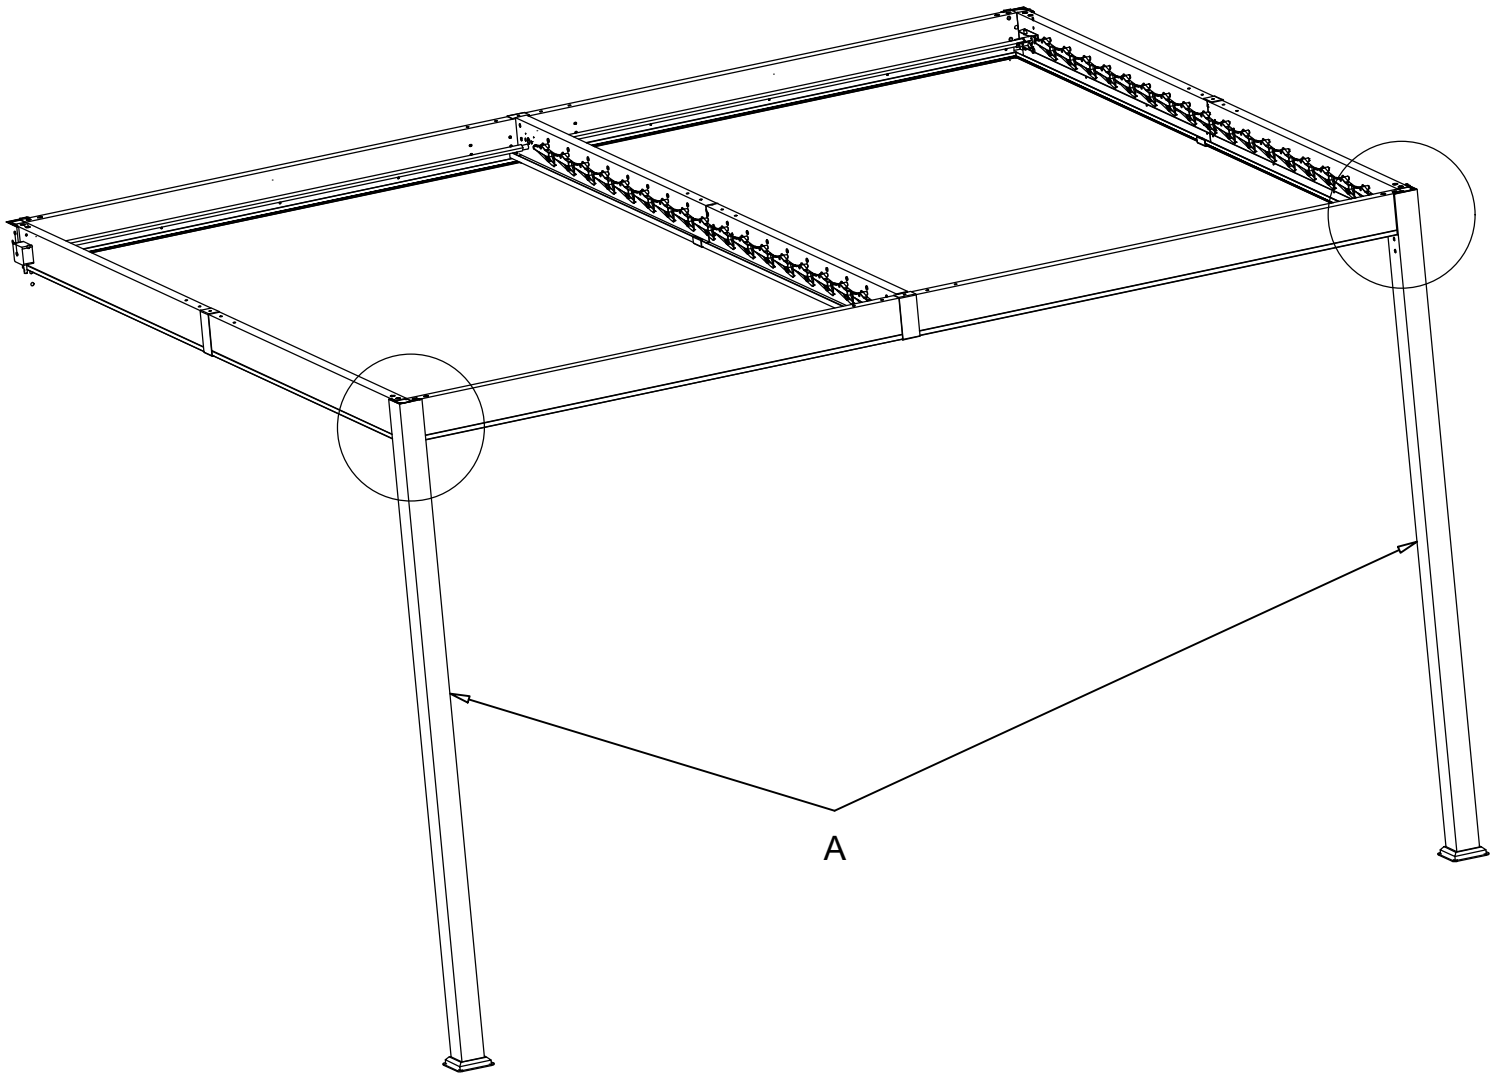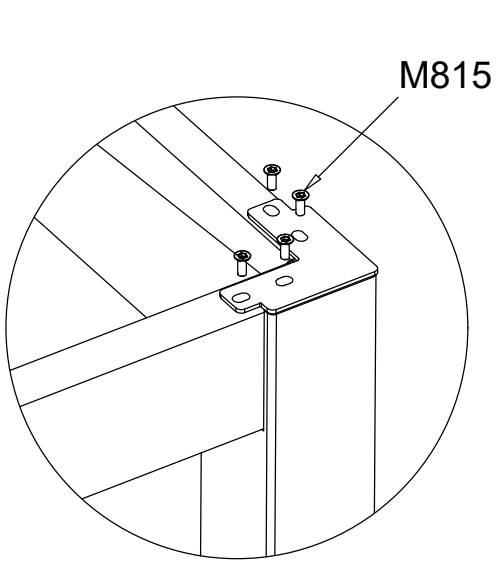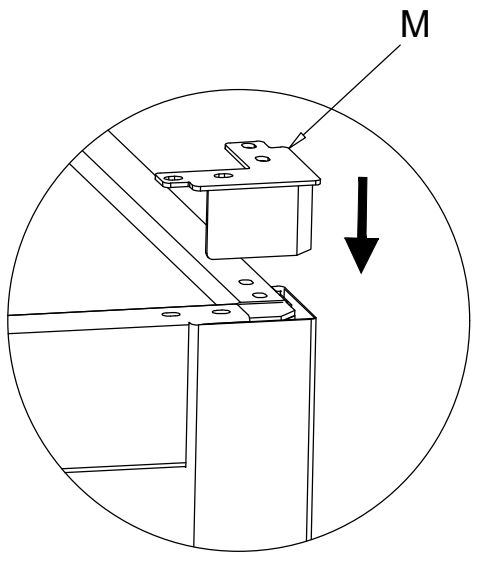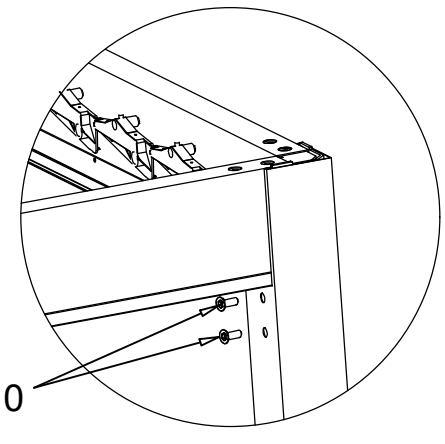1.















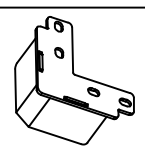
STEP 11-2


M		4	U		2	M810	 M8*10	16
M815	 M8*15	16	AK8	 M8	1			

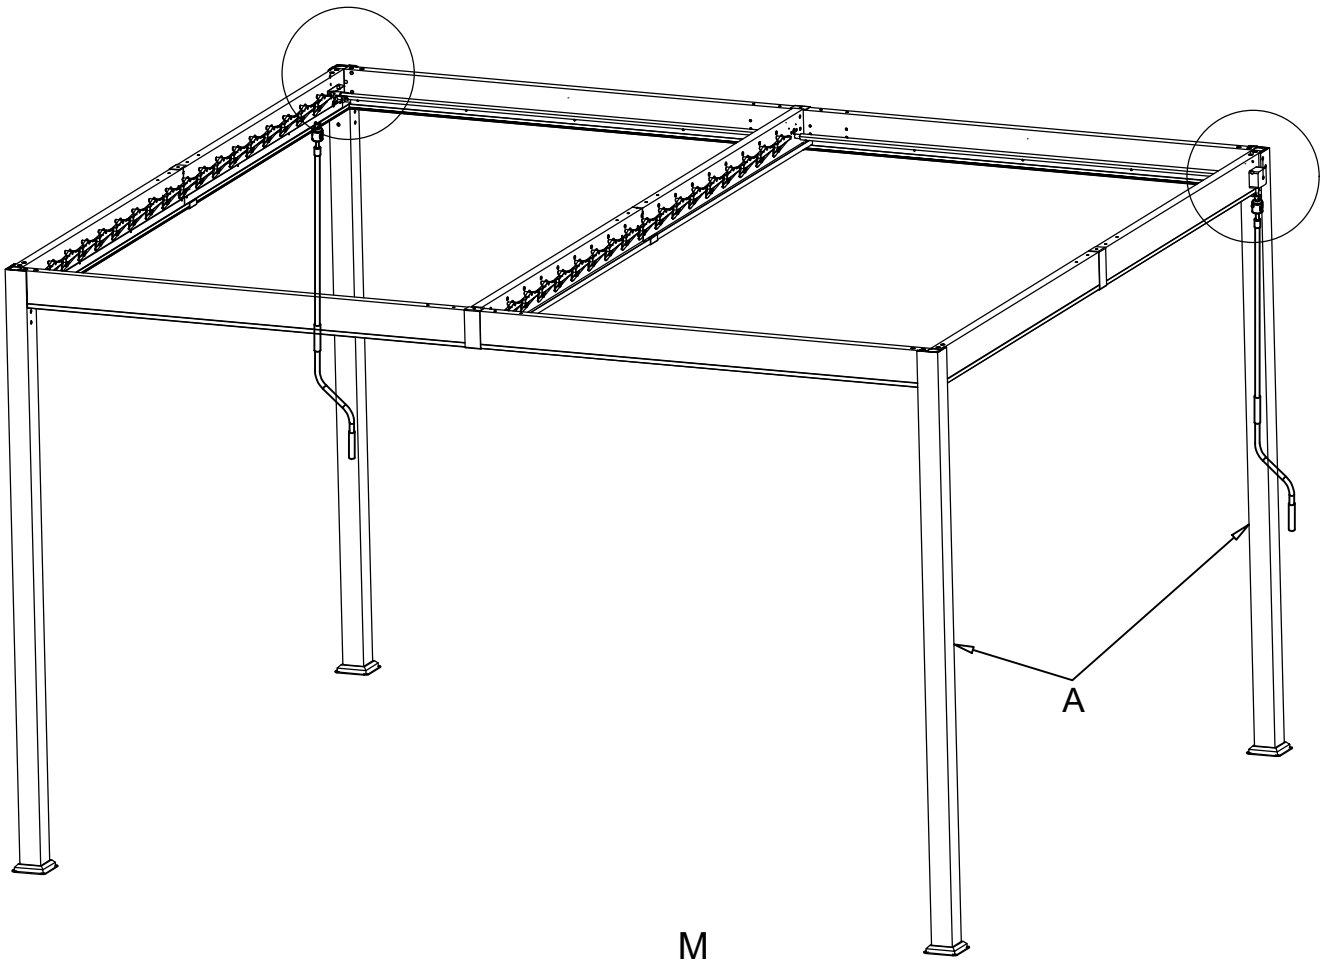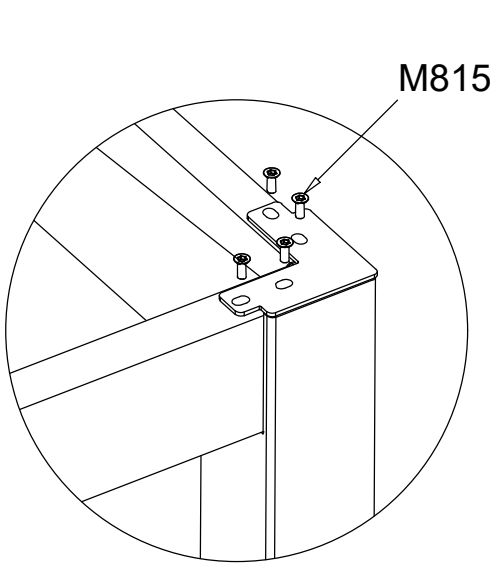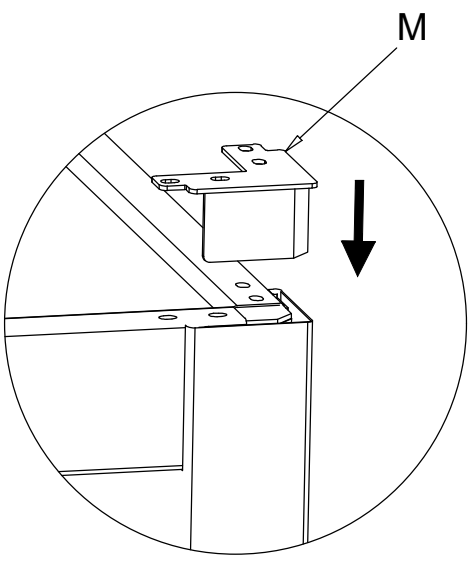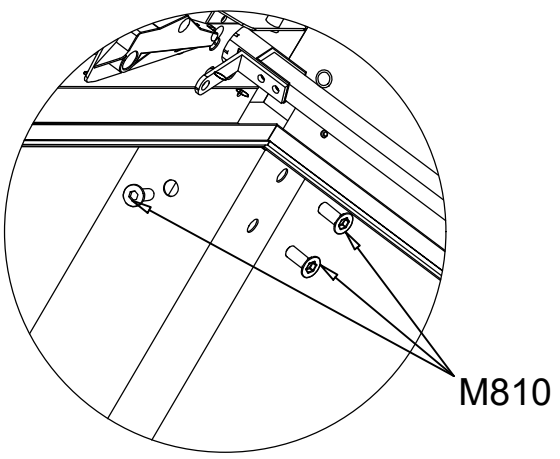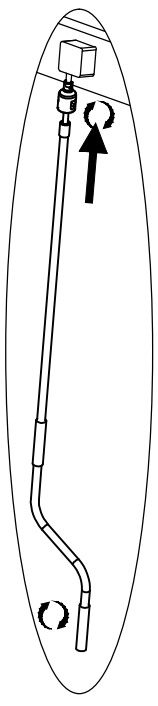
2.














Insert the handle rod upward through the rotating collar. Rotate the rod until it engages with the locking slot, then release it to allow automatic locking.


Turn the handle until the locking tab is horizontally aligned with the cross beam.

STEP 12



F		2	M615	 M6*15	4	AK6	 M6	1

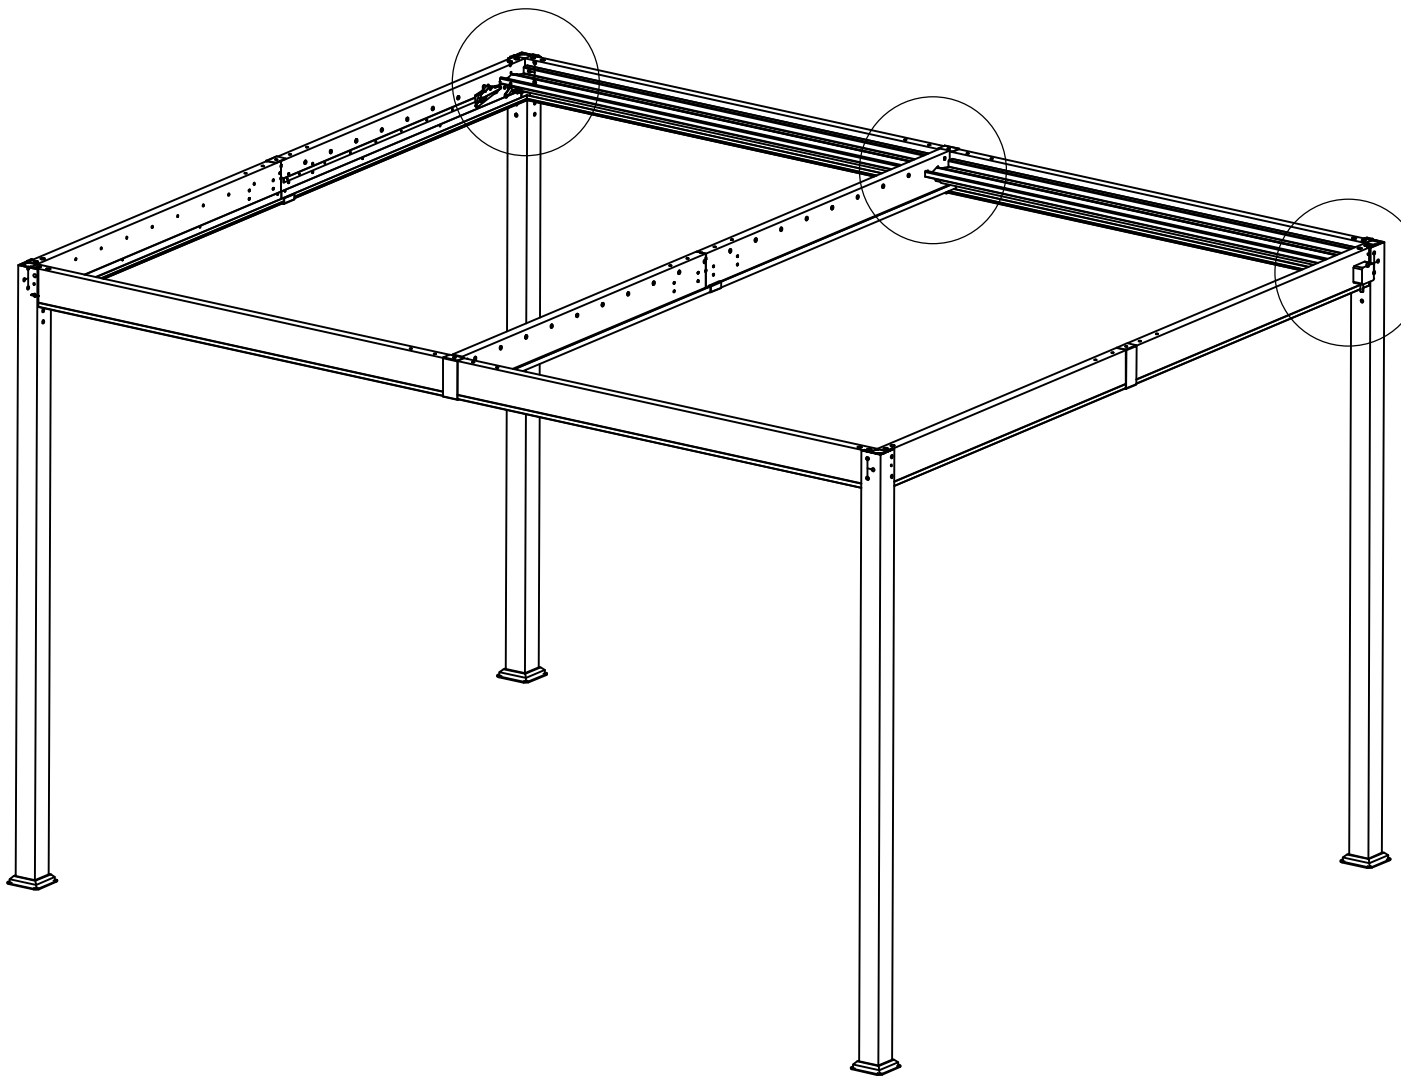


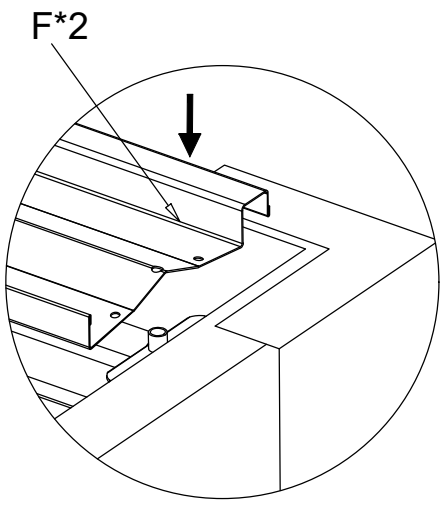


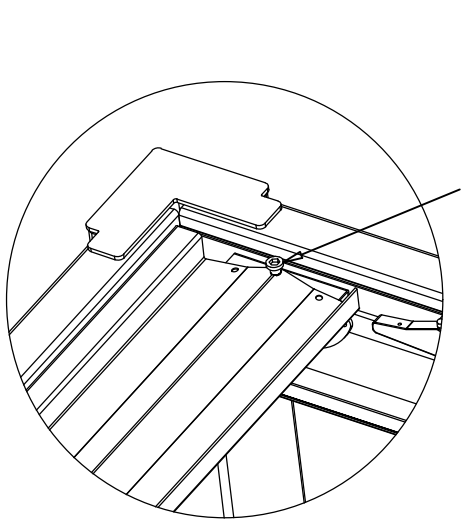


STEP 13



F		2	ST4208		144	SD		1

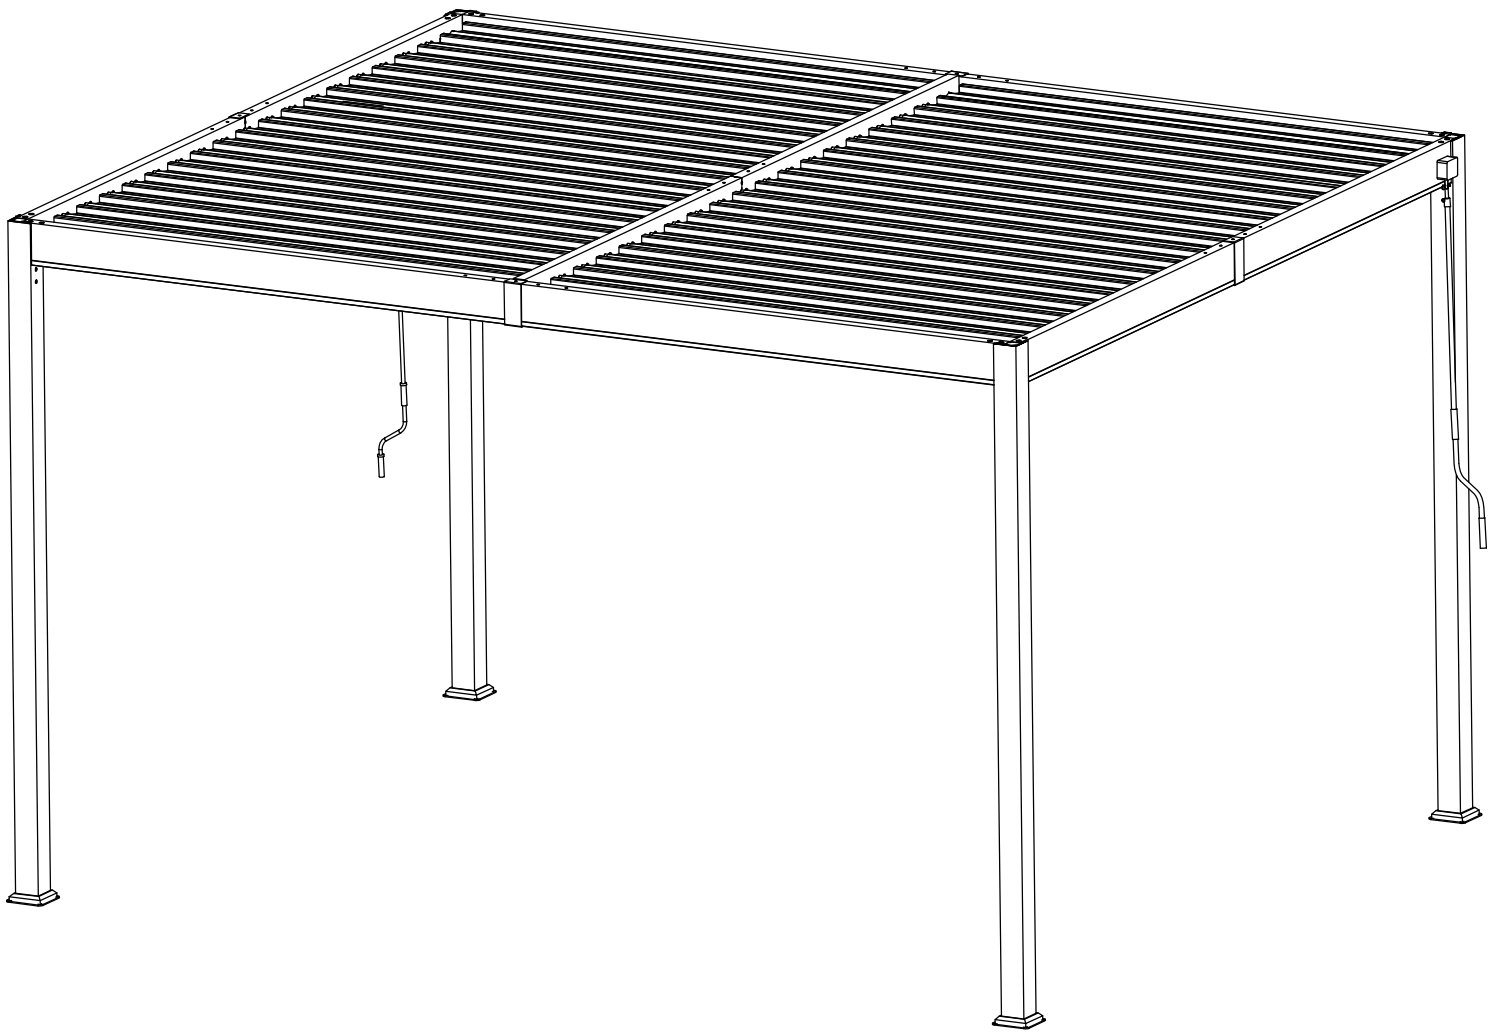


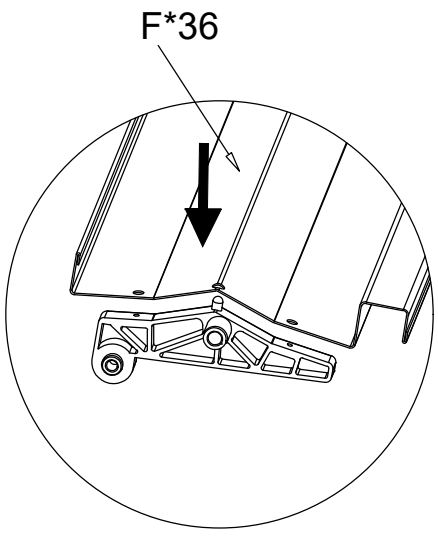


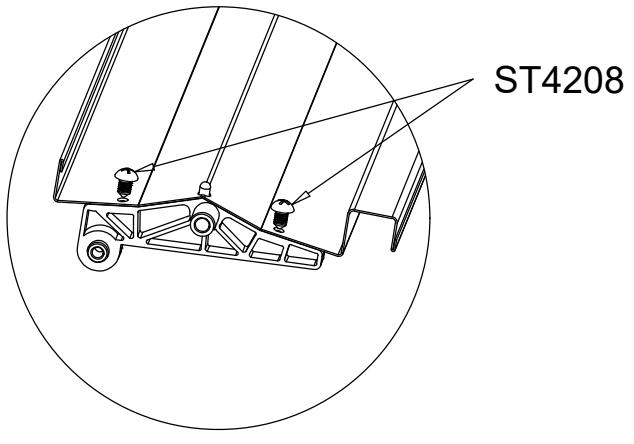


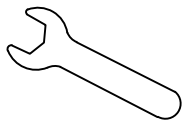
STEP 14

EB	 M8*100	16	SEM8	 M8	1			

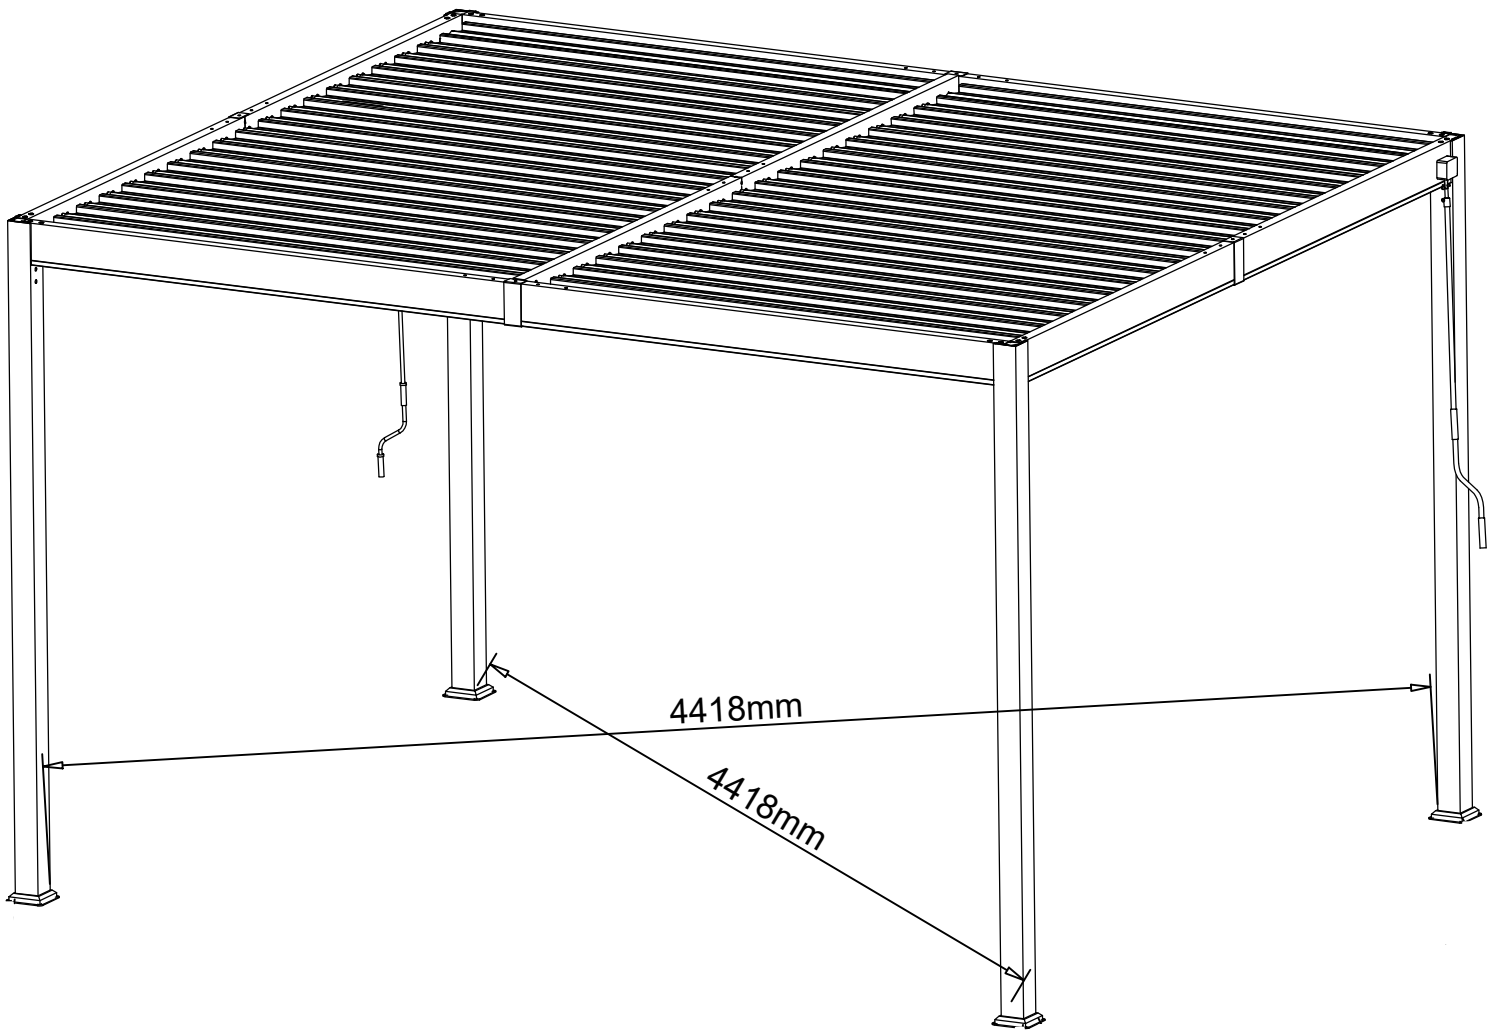

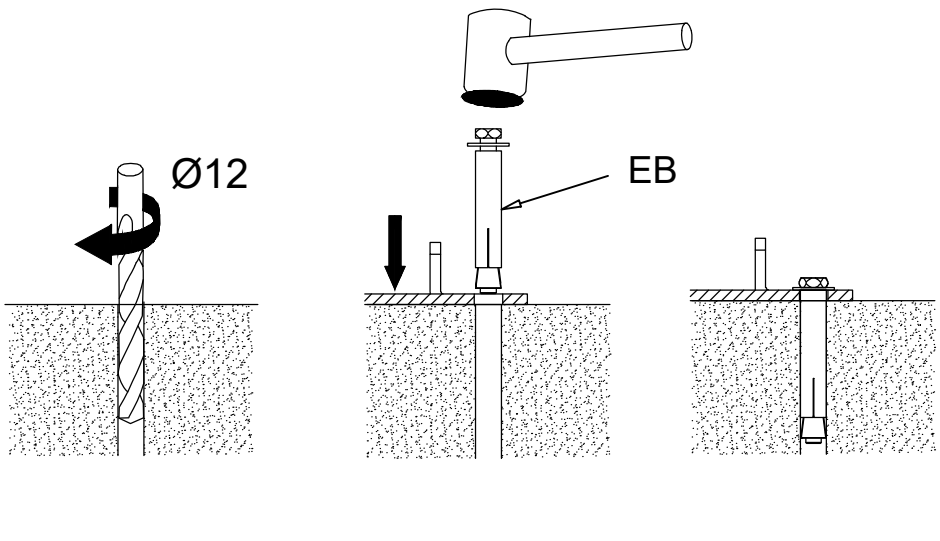

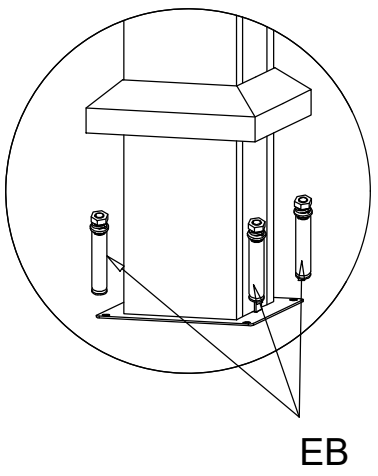

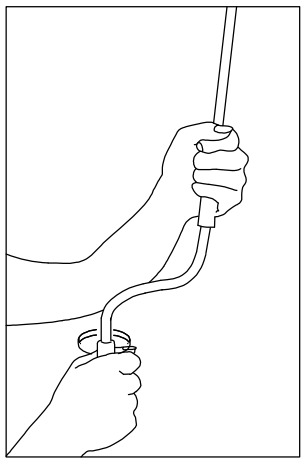

After installation, turn the handle to adjust the louvers between the open and closed positions.