

EDGE OF DOOR

Ø2 1/8 THRU

Ø1 1/8"

FOR 1 3/8"  
THICK DOOR

FOR 1 3/4"  
THICK DOOR

2 3/8  
BACKSET

2 3/4  
BACKSET


# TEMPLATE

(RIGHT HAND)


21X23.8CM

## Ridgecrest Mountain Passage & Privacy Installation Instructions.


### Door Prep - Active Lock

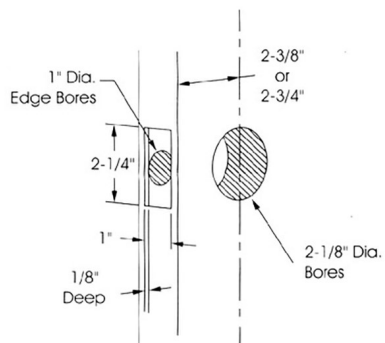


### Door Jamb For Active Locks

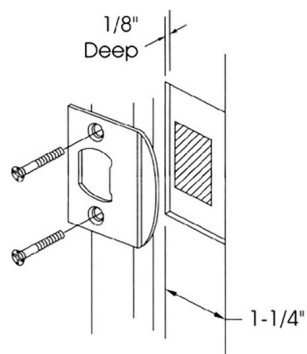

### Outside Trim

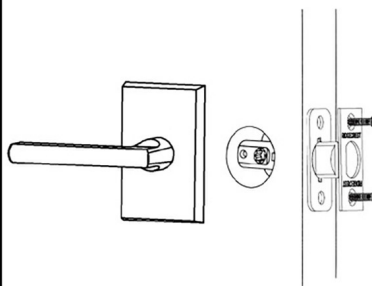

### Inside Trim -- For Privacy

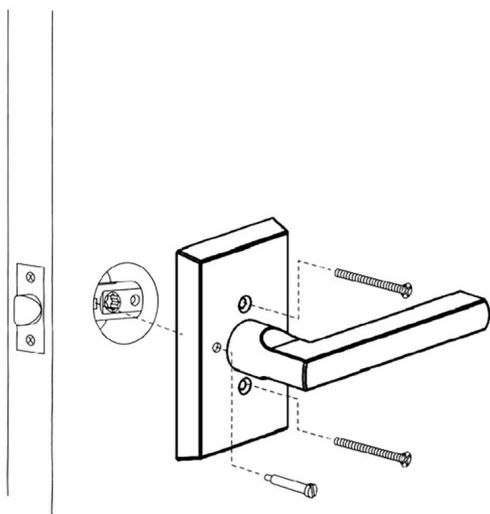

### Inside Trim -- For Passage

