



ASSEMBLY INSTRUCTIONS













FULL BED WITH L-SHAPED BOOKCASES, DRAWERS, AND USB PORTS

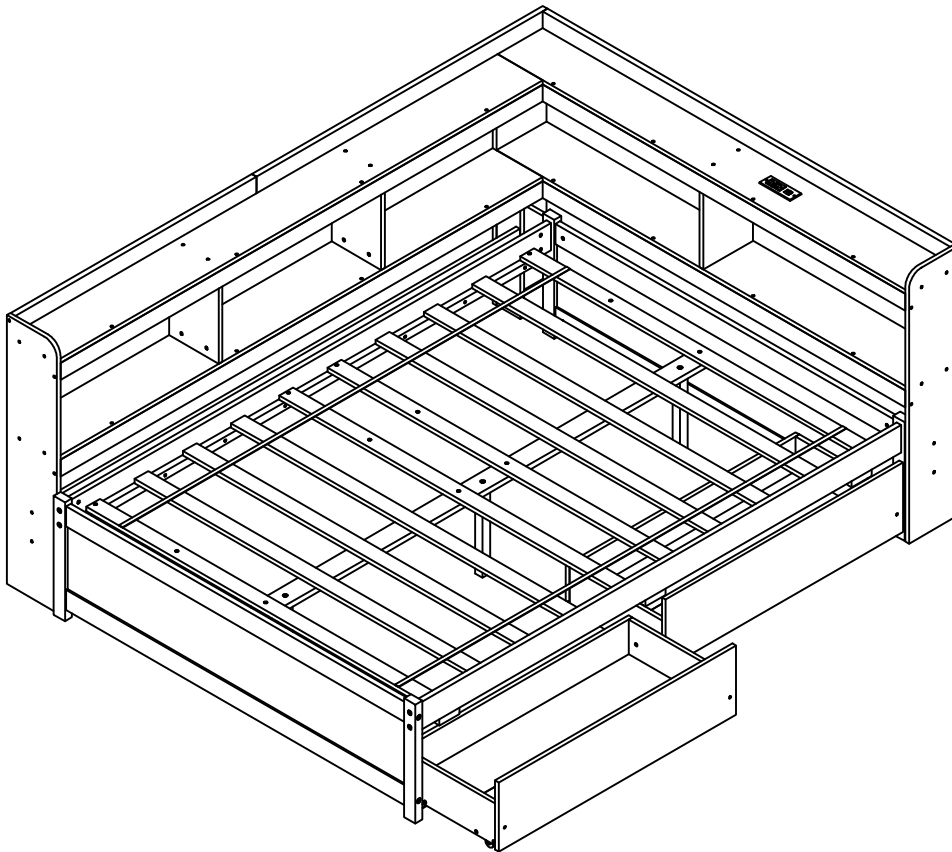









Detail View

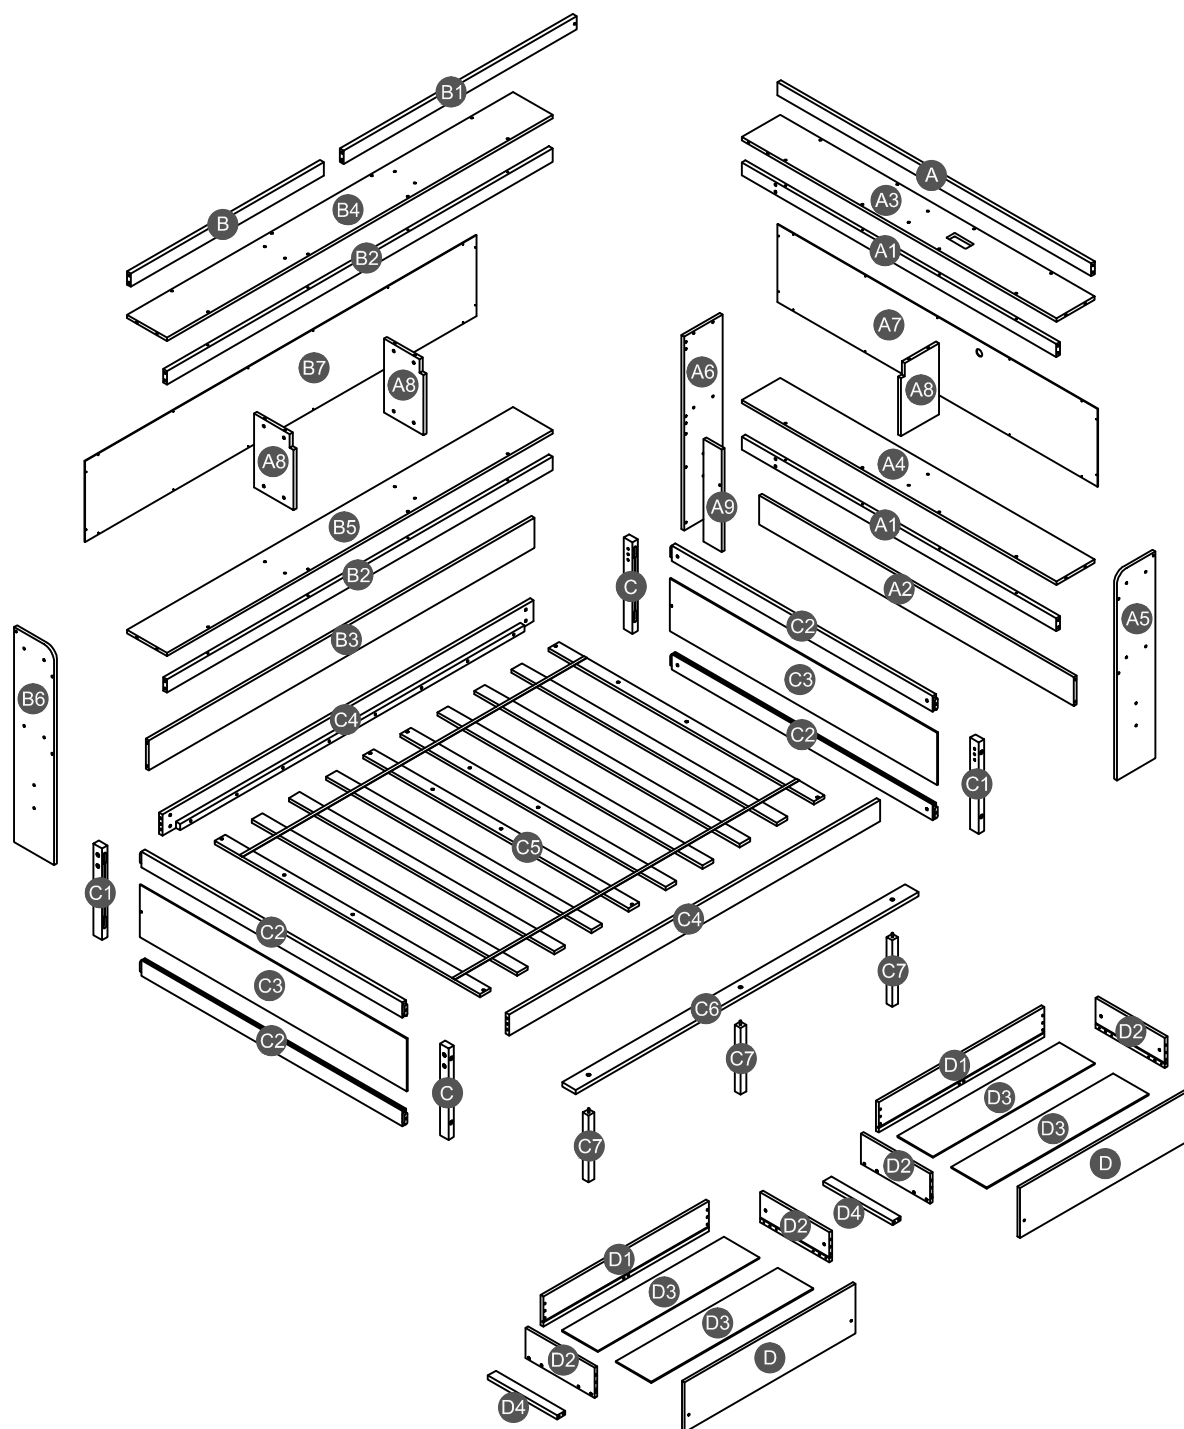






Part list (Box 1)

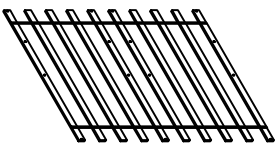A7  Back panel HB - 1pc	A9  Support HB - 1pc	B  Upper horizontal bar (left) - 1pc
B1  Upper horizontal bar (right) - 1pc	B2  Horizontal bar (front) - 2pcs	B3  Lower horizontal bar - 1pc
B4  Top panel - 1pc	B5  Shelf panel - 1pc	B7  Back panel - 1pc
C  Leg (left front/right back) - 2pcs	C1  Leg (left back/right front) - 2pcs	C4  Side rail - 2pcs
C5  Slats - 1set	C6  Lower support slat - 1pc	C7  Leg support - 3pcs
D4  Support drawer - 2pcs		


Part list & Hardware list (Box 2)

A  Upper horizontal bar HB - 1pc	A1  Horizontal bar HB (front) - 2pcs	A2  Lower horizontal bar HB - 1pc
A3  Top panel HB - 1pc	A4  Shelf panel HB - 1pc	A5  Side panel HB (right) - 1pc
A6  Side panel HB (left) - 1pc	A8  Divider panel - 3pcs	B6  Side panel (left) - 1pc
C2  Horizontal bar HB/FB - 4pcs	C3  Side panel HB/FB - 2pcs	D  Front drawer panel - 2pcs
D1  Back drawer panel - 2pcs	D2  Left / right drawer panel - 4pcs	D3  Drawer bottom - 4pcs

Hardware List (Box 2)


1  $\varnothing 10 \times 20 \text{mm}$ Wood dowel (8pcs)	2  $\varnothing 8 \times 30 \text{mm}$ Wood dowel (43pcs)	3  $(\varnothing 15) 1/4" \times 80 \text{mm}$ Hex-Head bolts (16pcs)
4  $(\varnothing 12) 1/4" \times 60 \text{mm}$ Hex-Head bolts (53pcs)	5  $(\varnothing 12) 1/4" \times 15 \text{mm}$ Hex-Head bolts (2pcs)	6  $1/4" \times 15 (9.5 \text{mm})$ Horizontal-Hole bolts (69pcs)
7  $(\varnothing 12) 1/4" \times 40 \text{mm}$ Hex-Head bolts (25pcs)	8  $\varnothing 4 \times 30 \text{mm}$ Wood screws (34pcs)	9  $\varnothing 3.5 \times 15 \text{mm}$ Wood screws (18pcs)
10  $\varnothing 3.5 \times 15 \text{mm}$ Wood screws (30pcs)	11  $(\varnothing 10) 1/4" \times 76 \text{mm}$ Connecting bar (1pc)	12  $80 \times 40 \times 19 \text{mm}$ Drawer stopper (3pcs)
13  $100 \times 52 \times 20 \text{mm}$ Wheels (8pcs)	14  $40 \times 17 \times 17 \times 1.6 \text{mm}$ Metal bracket (2pcs)	15  $75 \times 20 \times 2 \text{mm}$ Metal bracket (2pcs)
16  $1500 \times 43 \times 47 \times 125 \text{mm}$ Furniture power distribution units (1PC)	17  $(1/4") 4.5 \times 58 \text{mm}$ Allen key (1pc)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

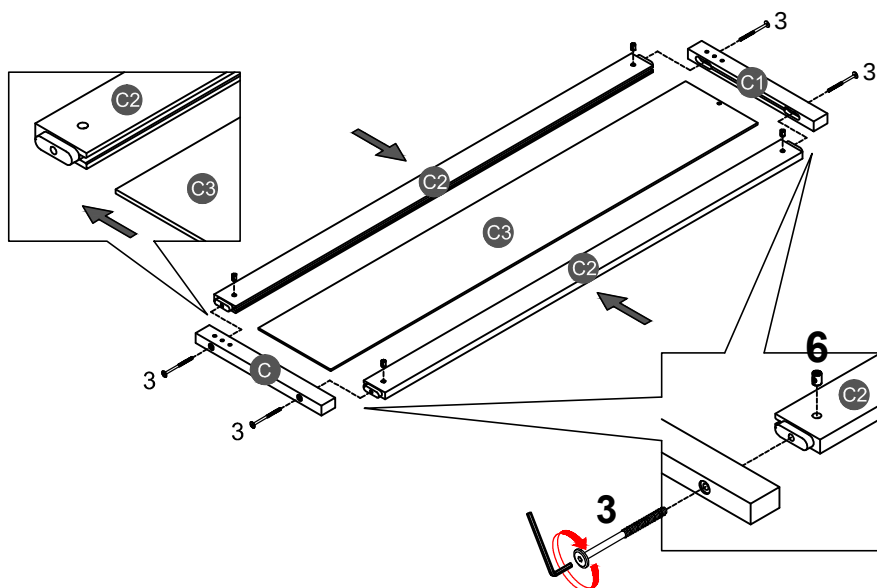

3		6	
8PCS		8PCS	


2pcs

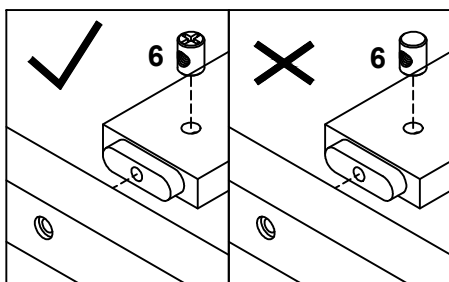

Note: Part 6 will face up with the "x" mark on it, otherwise it cannot be tightened

Remarque: La pièce 6 sera face vers le haut avec la marque "x", sinon elle ne peut pas être serrée.


STEP 2:

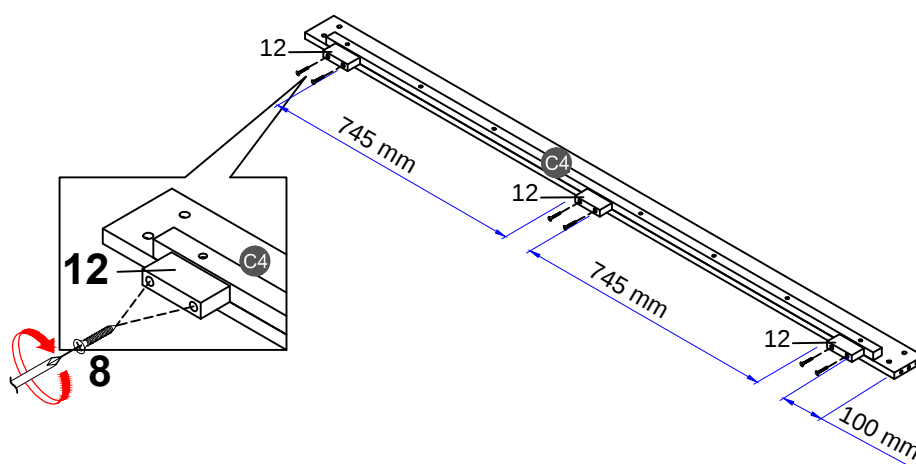

8		12	
6PCS		3PCS	


Drawer stopper (12) with lower side rail front (C4) by using screw (8).

STEP 3:

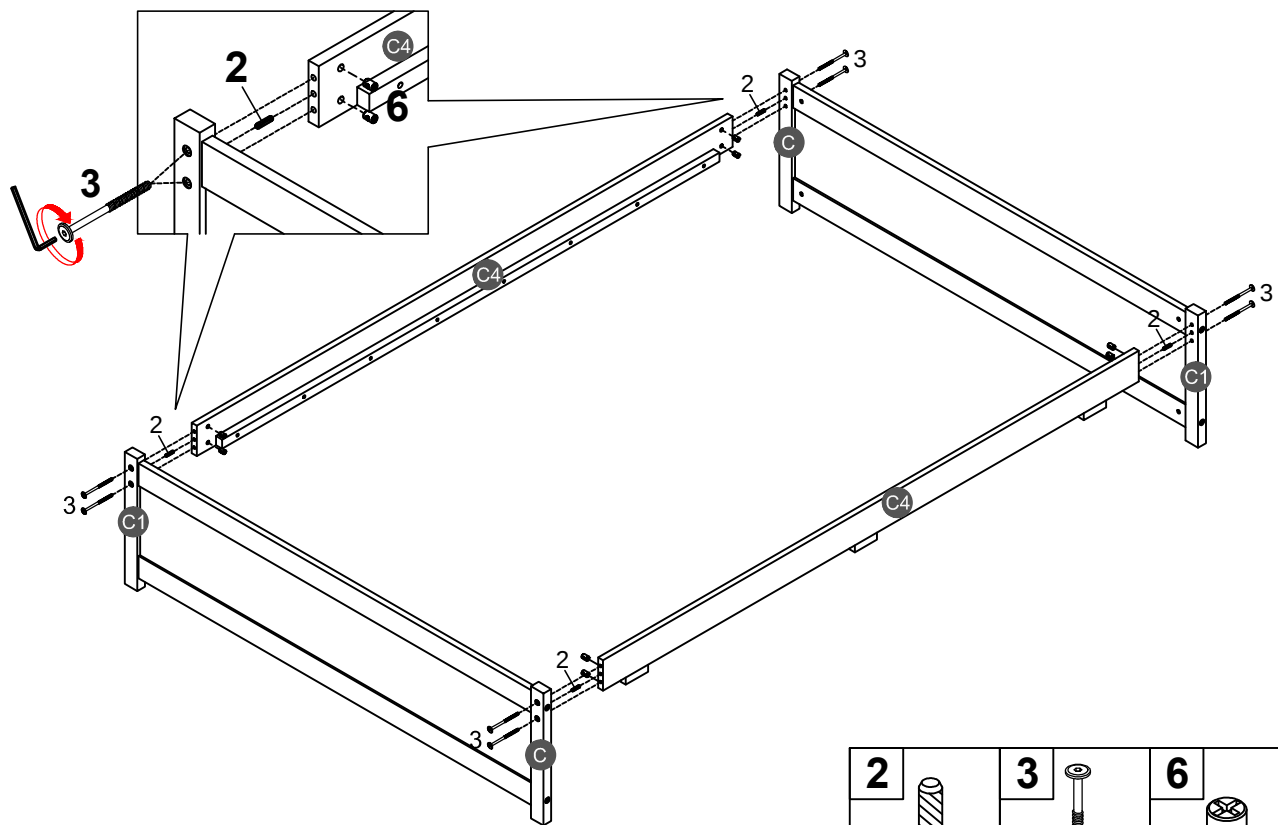


2		3		6	
4PCS	8PCS	8PCS	8PCS	8PCS	8PCS


STEP 4:

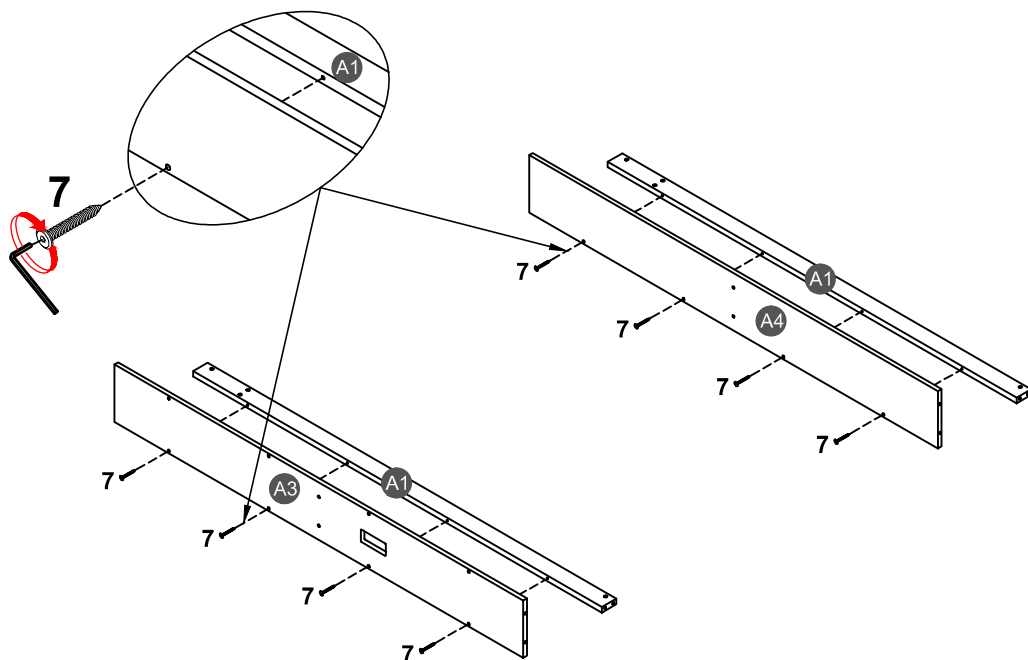


7	
8PCS	

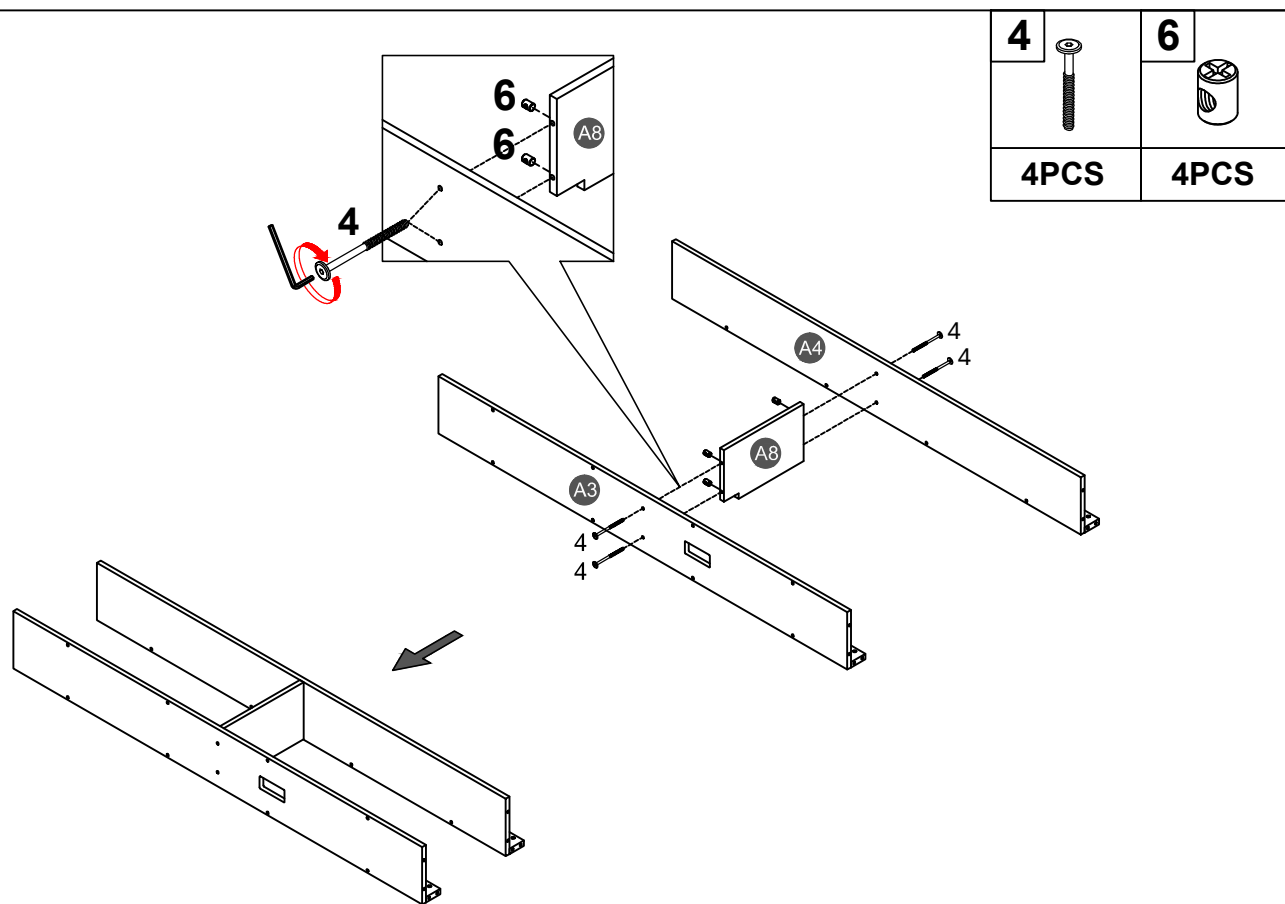

STEP 6:

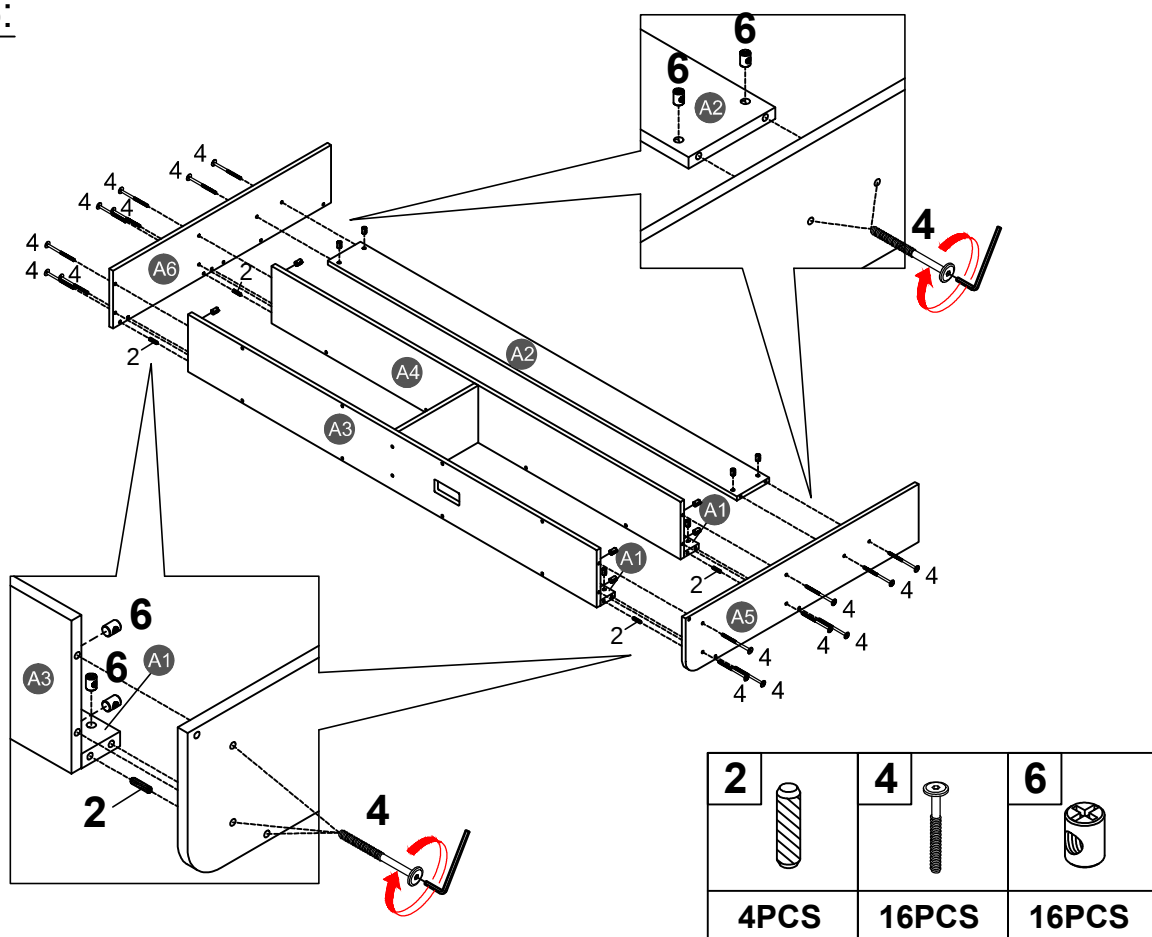


STEP 7:

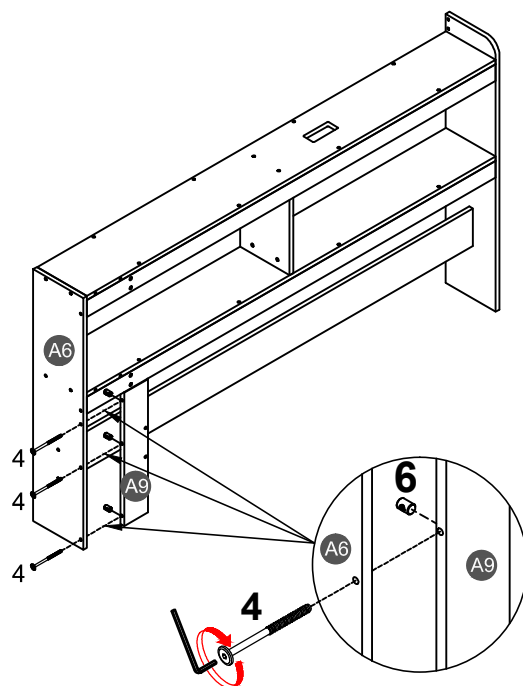


4		6	
3PCS		3PCS	

STEP 8:

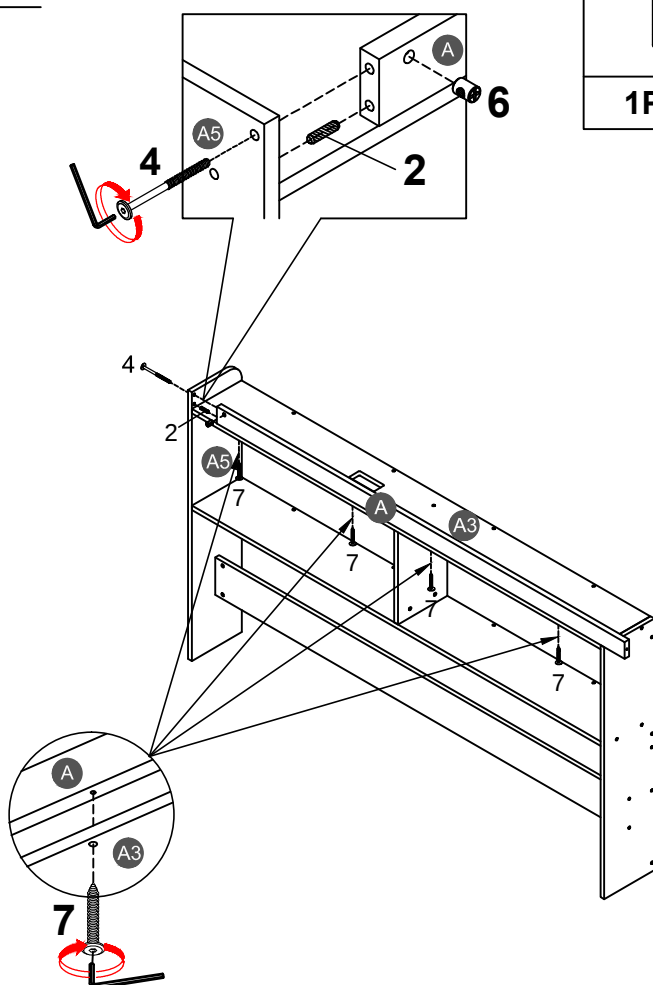


2		4		6		7	
1PC		1PC		1PC		4PCS	

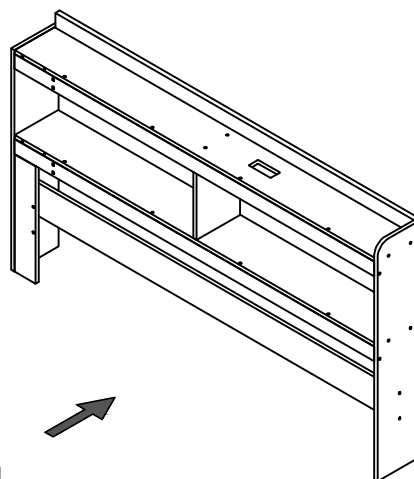


STEP 9:

4		6	
8PCS		8PCS	

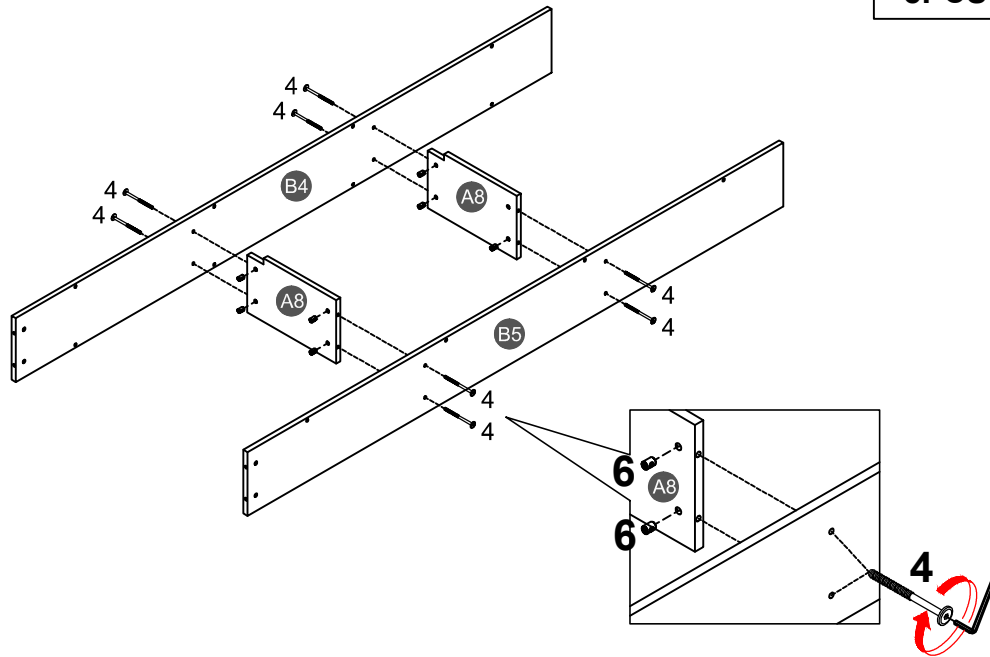


STEP 10:

7	
8PCS	

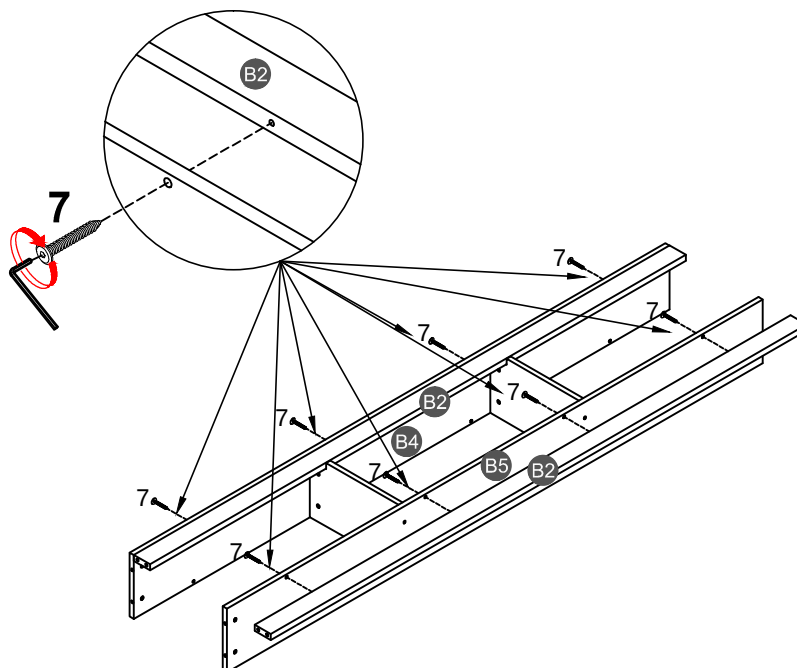


STEP 11:

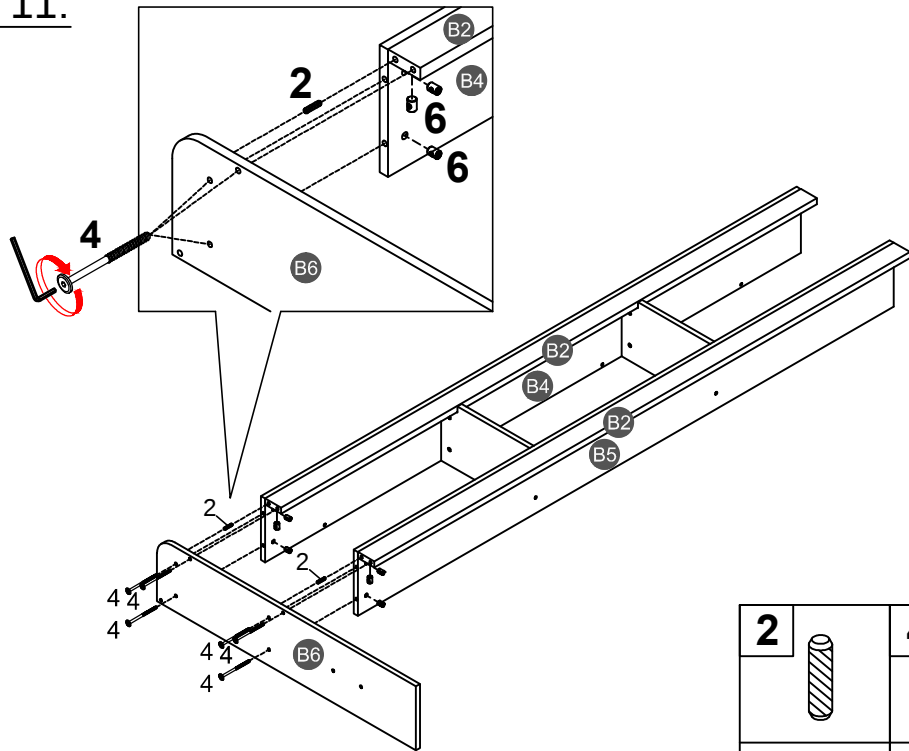


2		4		6	
2PCS		6PCS		6PCS	

STEP 12:

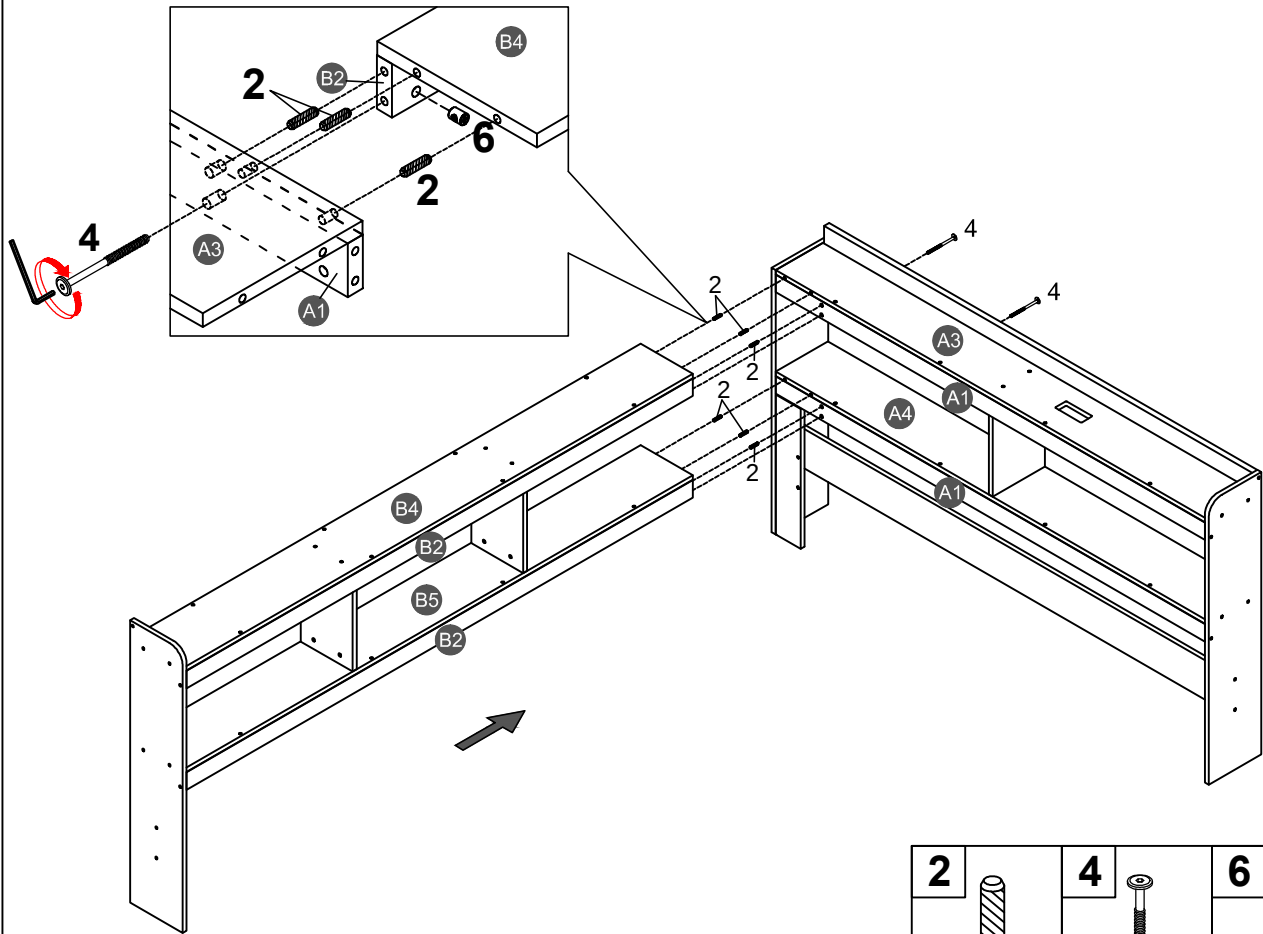

2		4		6	
6PCS		2PCS		2PCS	

STEP 13:

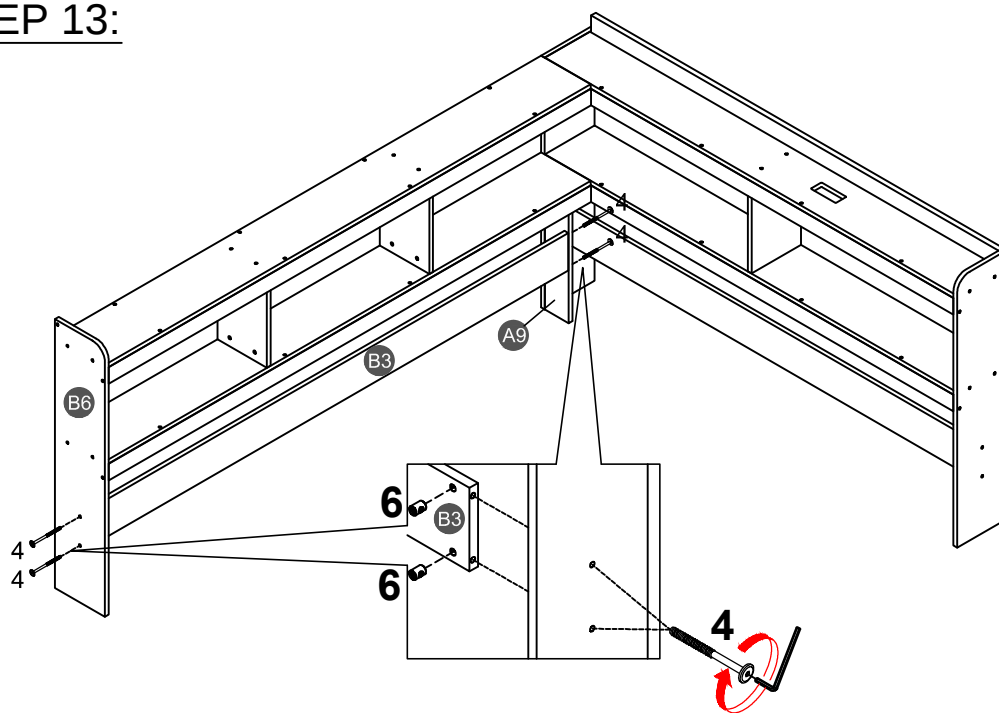

4




4PCS

6



4PCS

STEP 14:

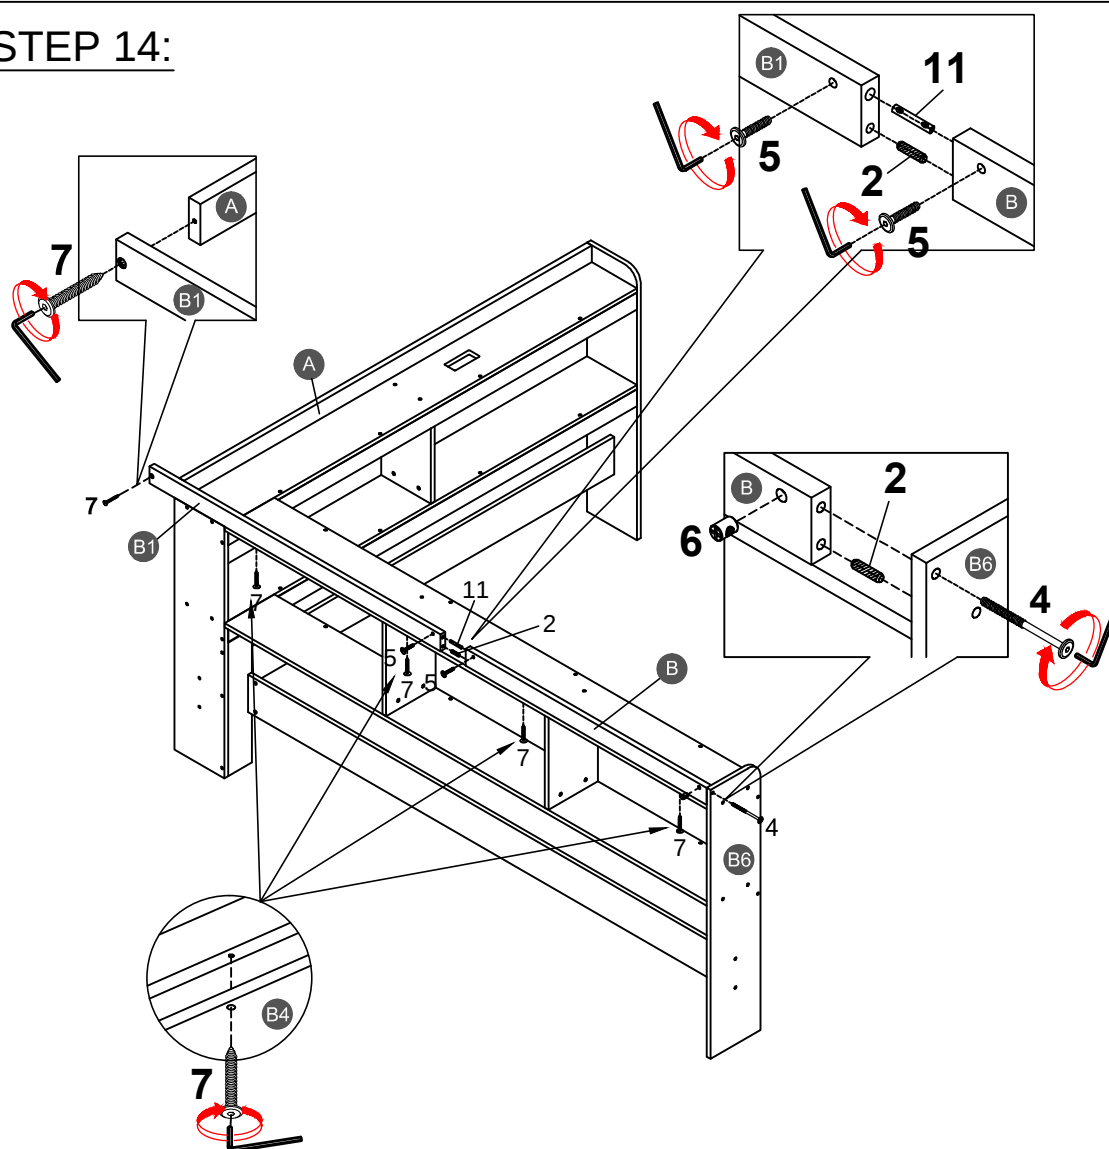

2



2PCS

4



1PC

6



1PC

5



2PCS

7



5PCS


11



1PC


STEP 15:

9		10		16	
2PCS		14PCS		1PC	

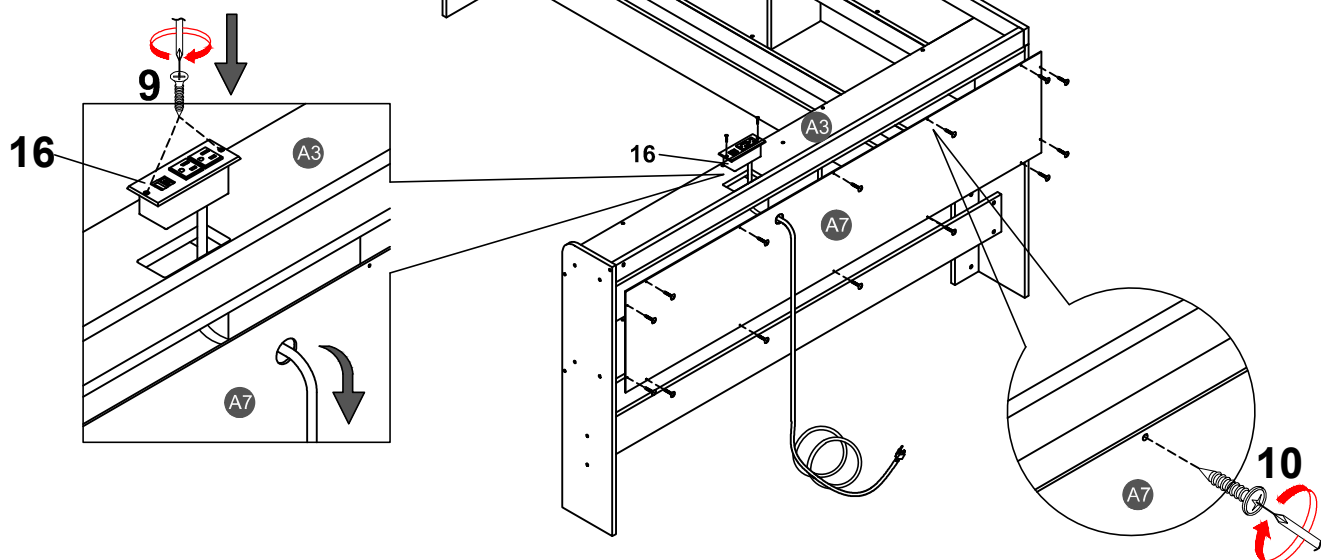


STEP 16:


10	
16PCS	

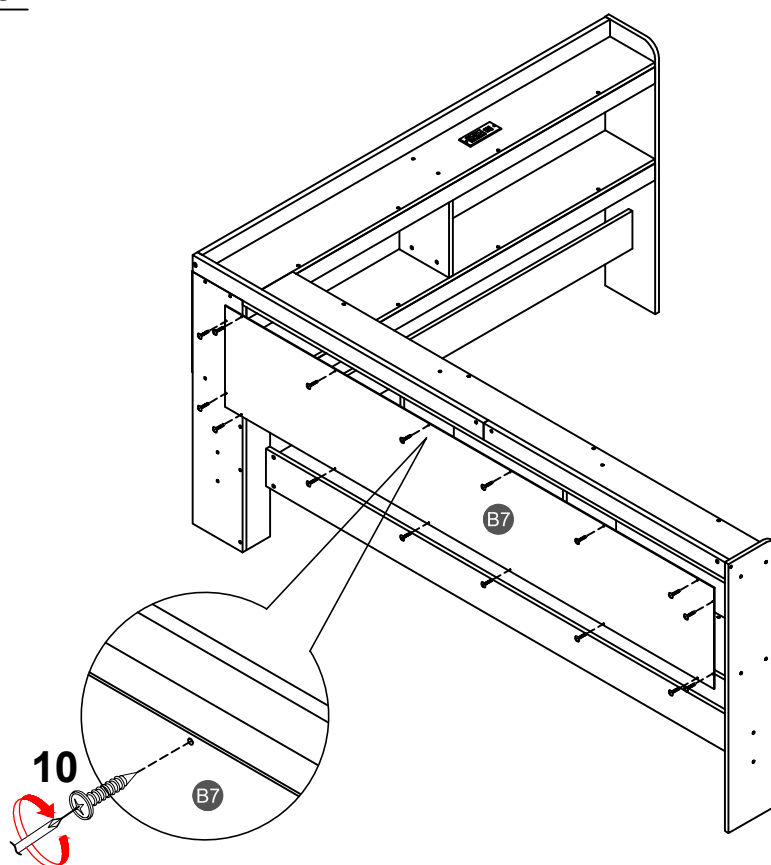

STEP 17:

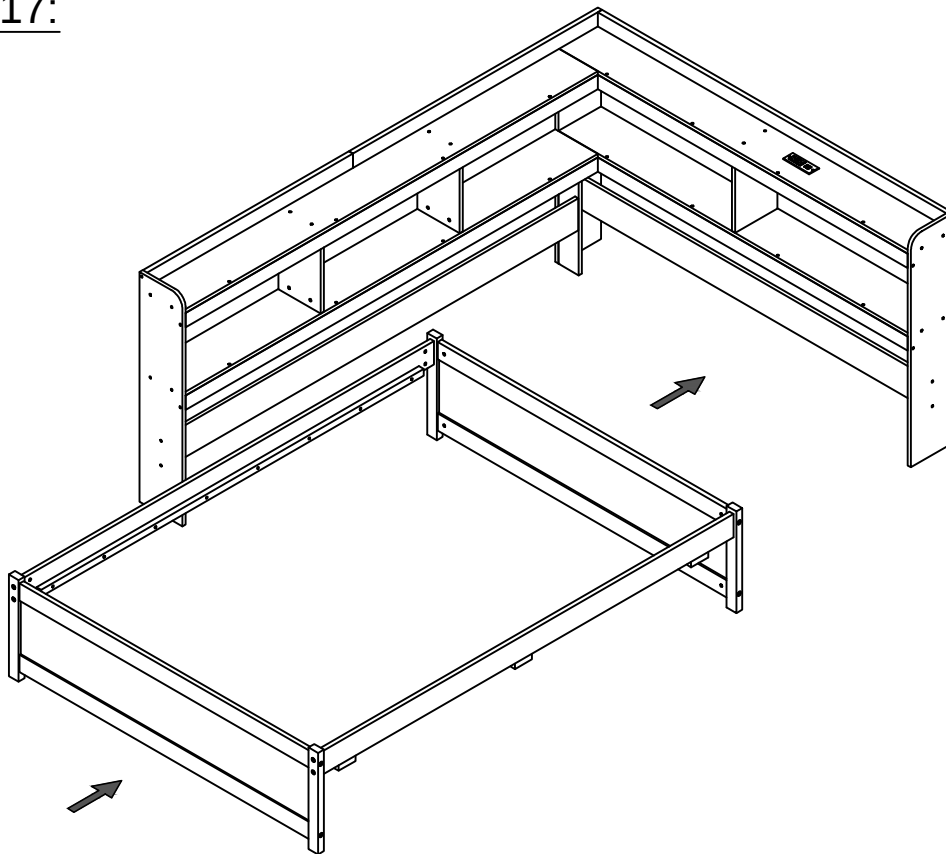


STEP 18:

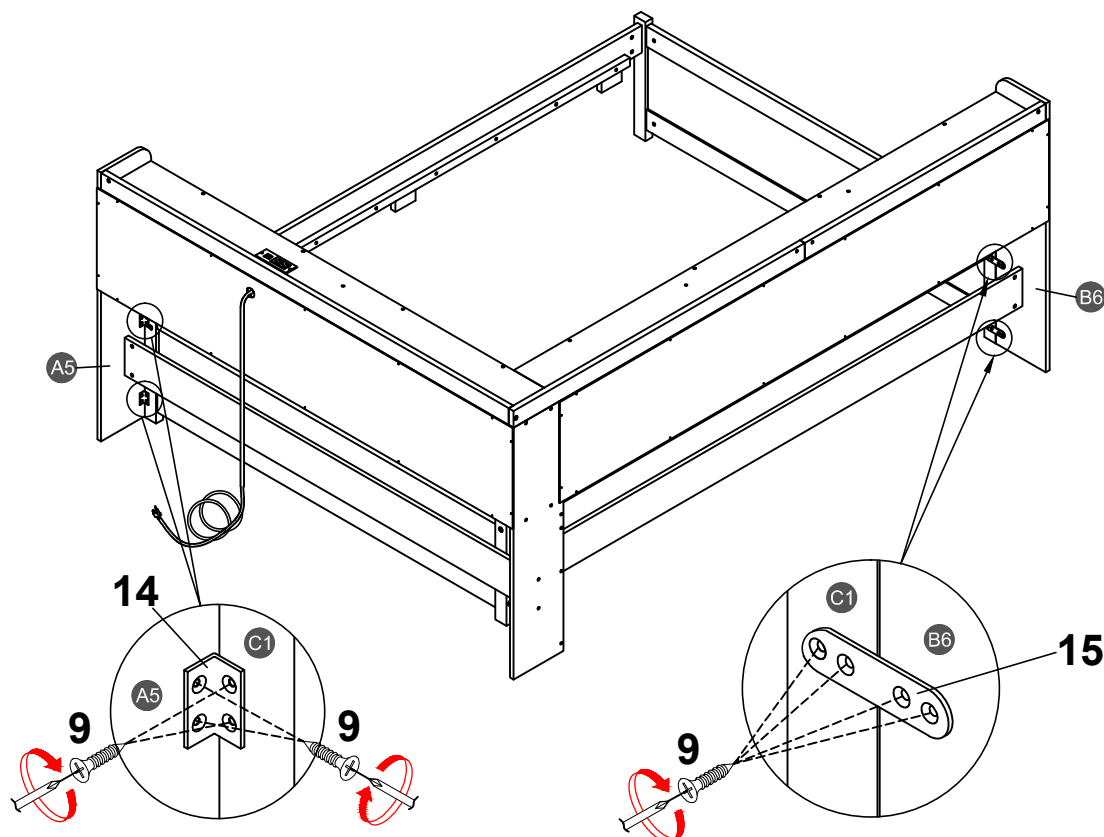


9	
16PCS	
14	
2PCS	
15	
2PCS	

STEP 19:

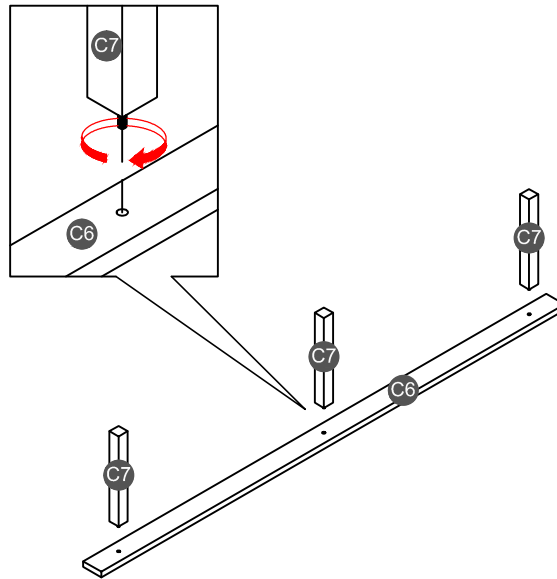


Assembling leg support (C7) with lower support slat (C6) later rotate, Move support slat inside Full bed.

STEP 20:

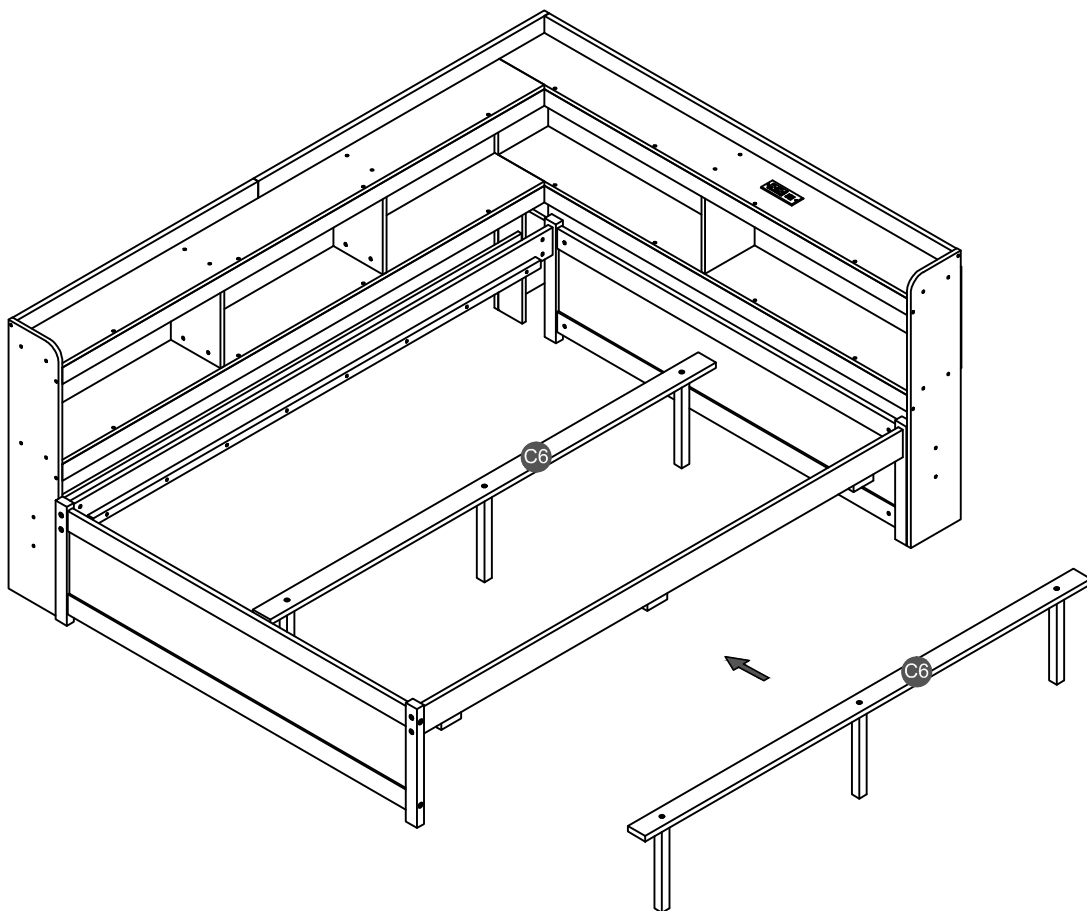


STEP 21:

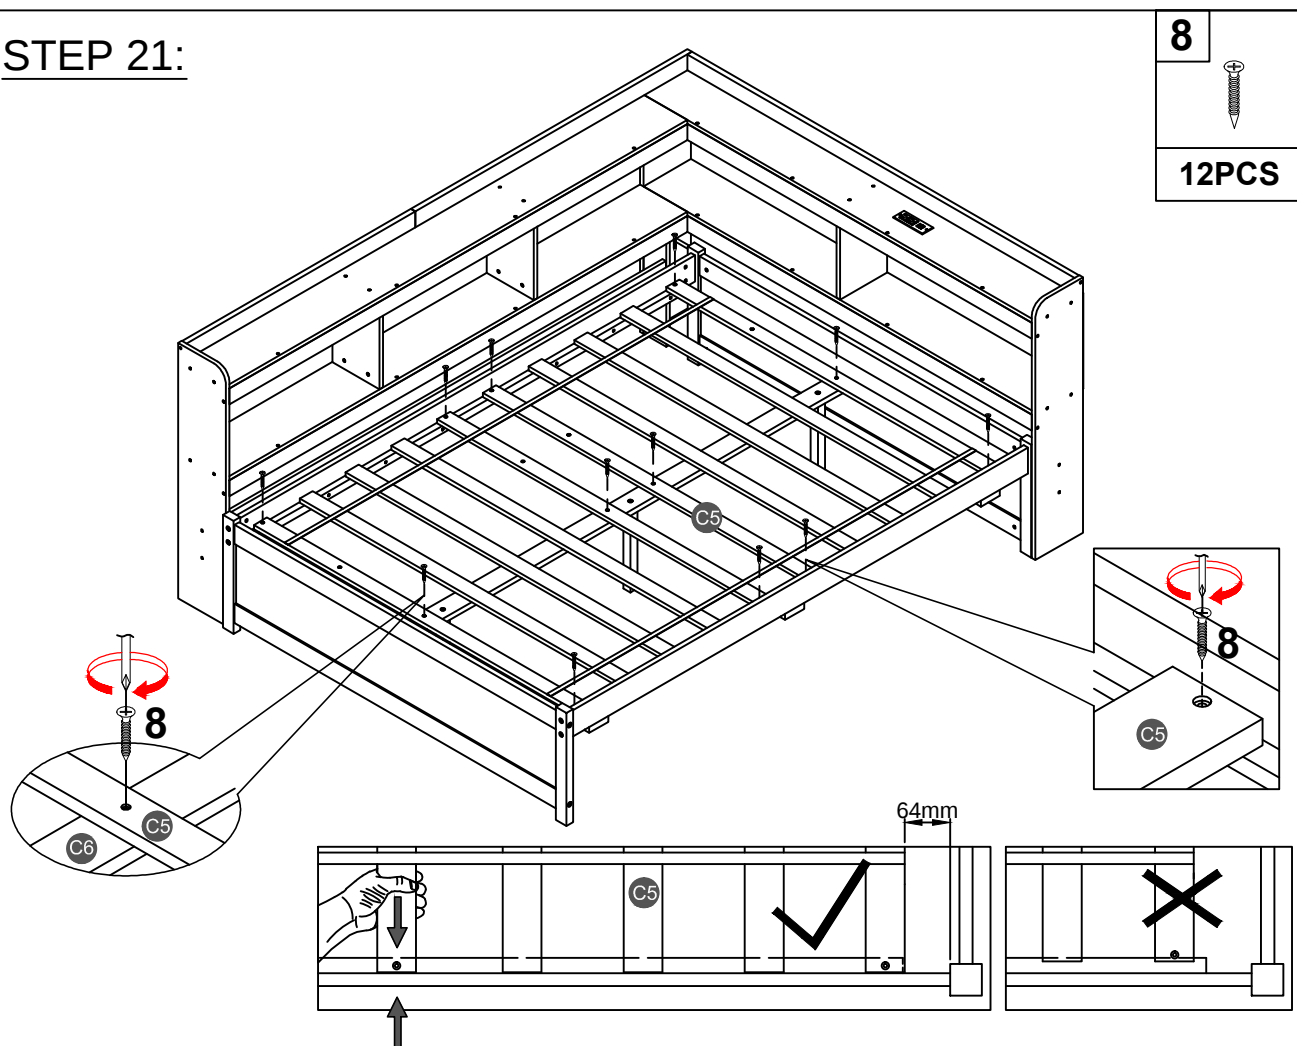


NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.

STEP 22:

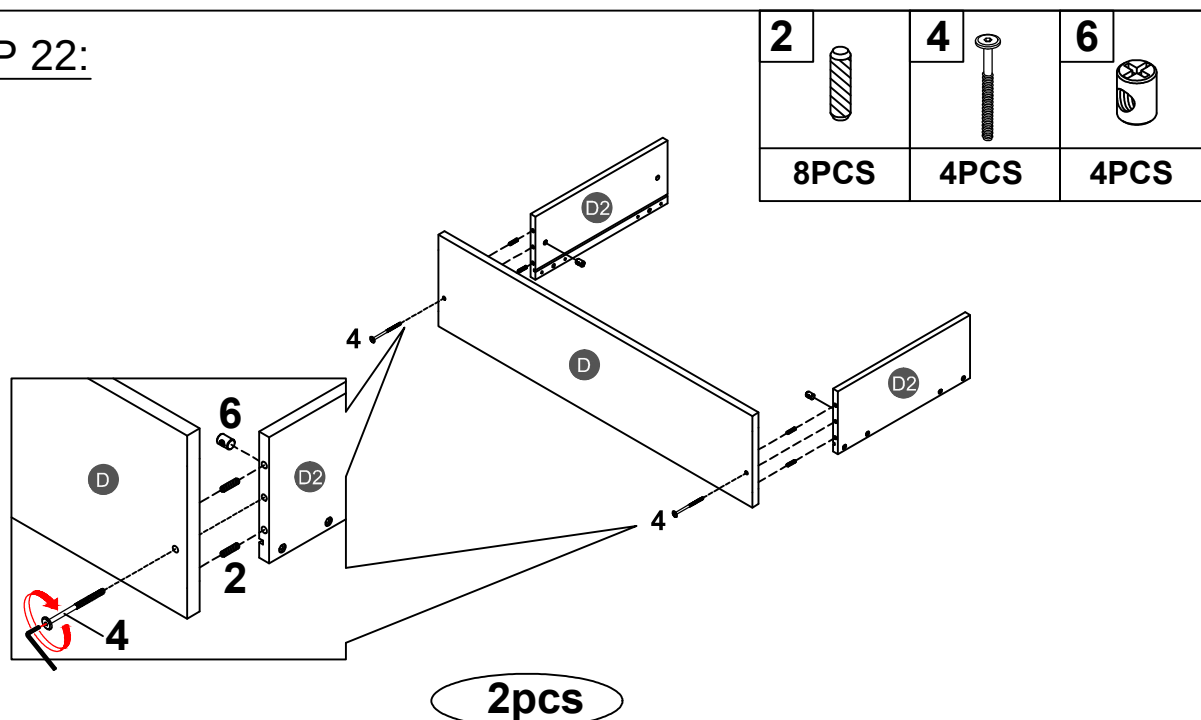


STEP 23:

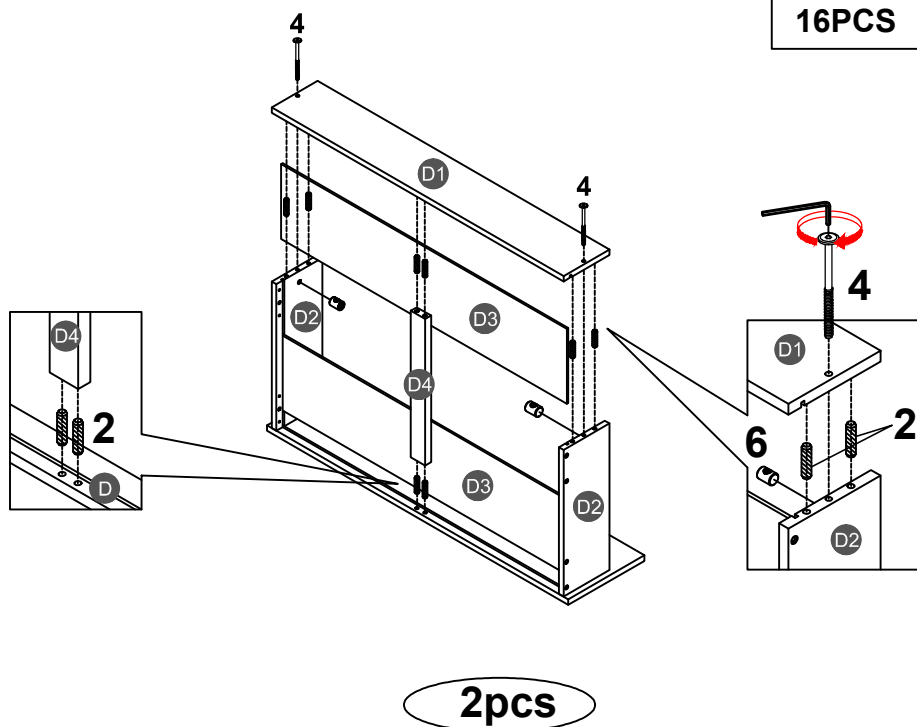


2	4	6
		
16PCS	4PCS	4PCS


STEP 24:

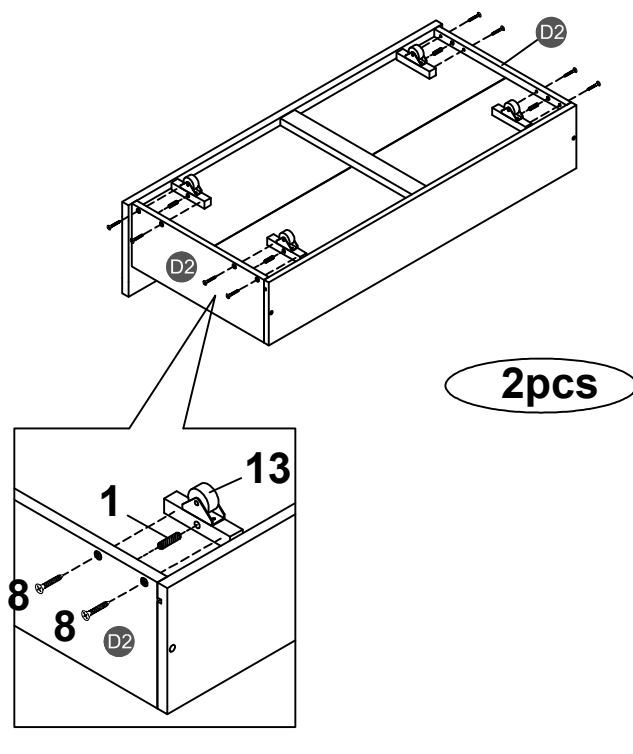


1	8	13
		
8PCS	16PCS	8PCS

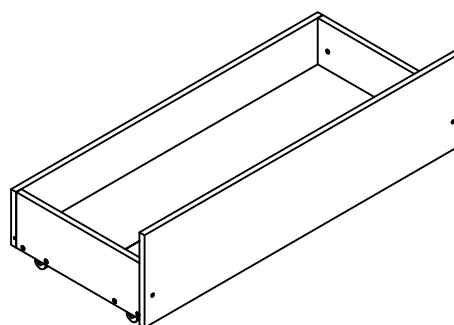

STEP 25:

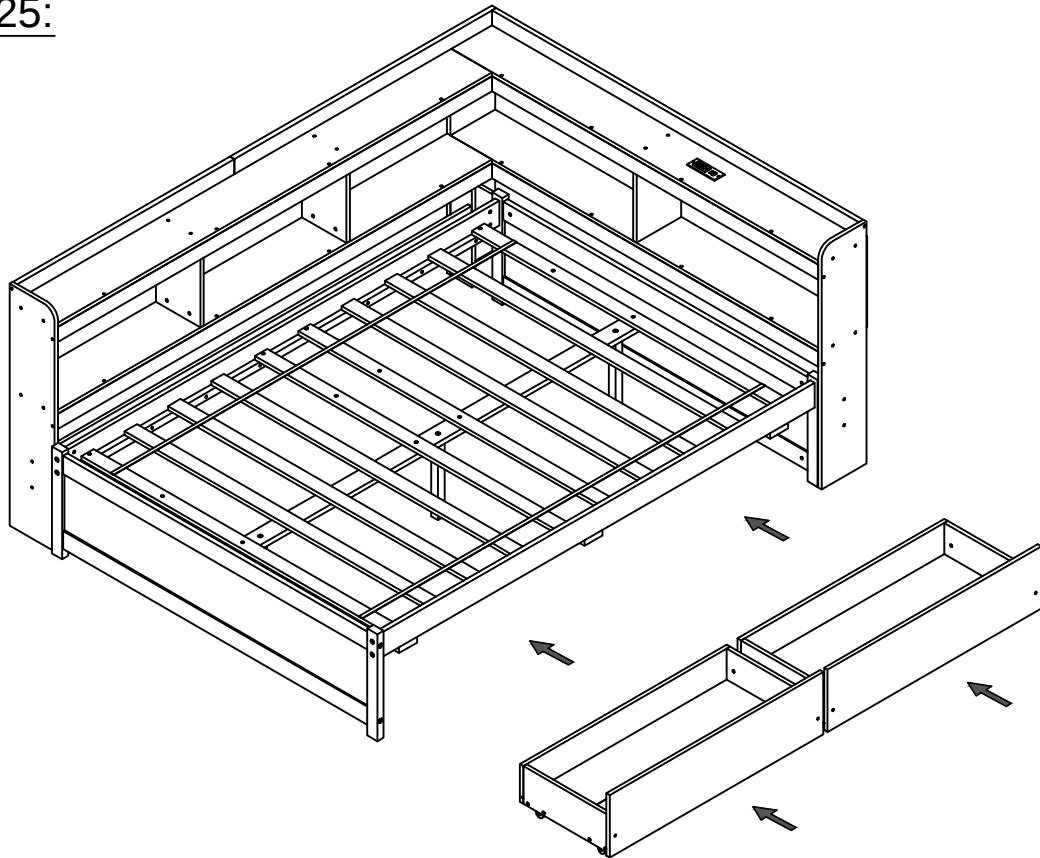

Push Drawers under the bottom of Fullbed.

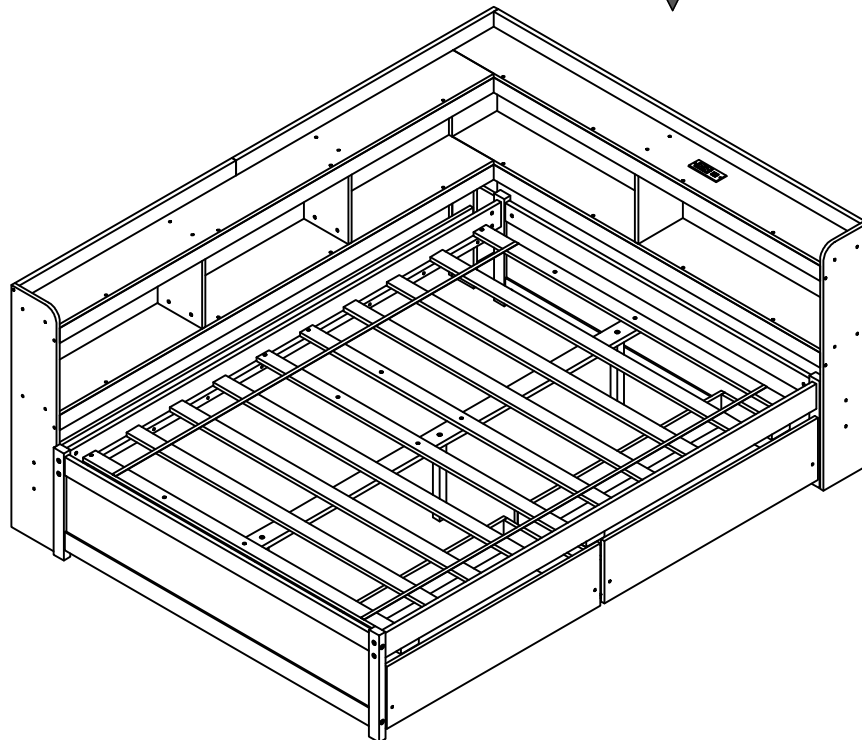

Make sure to tighten all the screws of the bed.