


ASSEMBLY INSTRUCTIONS

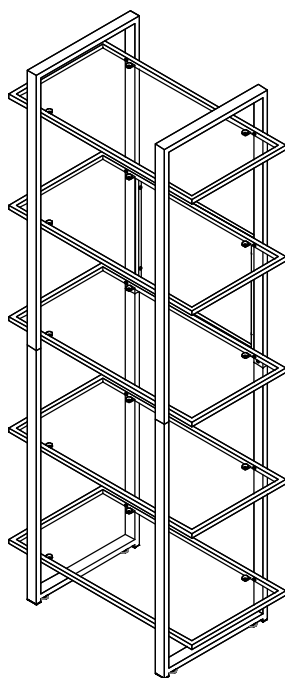

BOOKCASE

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.









WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

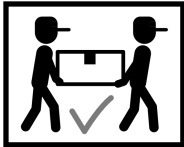





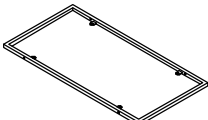

ASSEMBLY TIME 50 MINUTES

PARTS IDENTIFICATION

A	SHELF GLASS		5PCS
B	TOP LEFT FRAME		1PC
C	TOP RIGHT FRAME		1PC
D	BOTTOM FRAME		2PCS
E	BACK FRAME		1PC
F	SHELF FRAME		5PCS

ASSEMBLY INSTRUCTIONS


HARDWARE IDENTIFICATION

1	SHORT BOLT (1/4" x 12mm SR)		4PCS
2	LONG BOLT (1/4" x 28mm SR)		24PCS
3	SUCTION CUP (Ø19 x 9mm)		20PCS
4	CAP (20 x 40 mm BLK)		4PCS
5	LEVELER (1/4" x 12mm BLK)		4PCS
6	ALLEN WRENCH (4mm)		1PC


ASSEMBLY INSTRUCTIONS

STEP 1

Do not tighten until each step is completed or instructed.

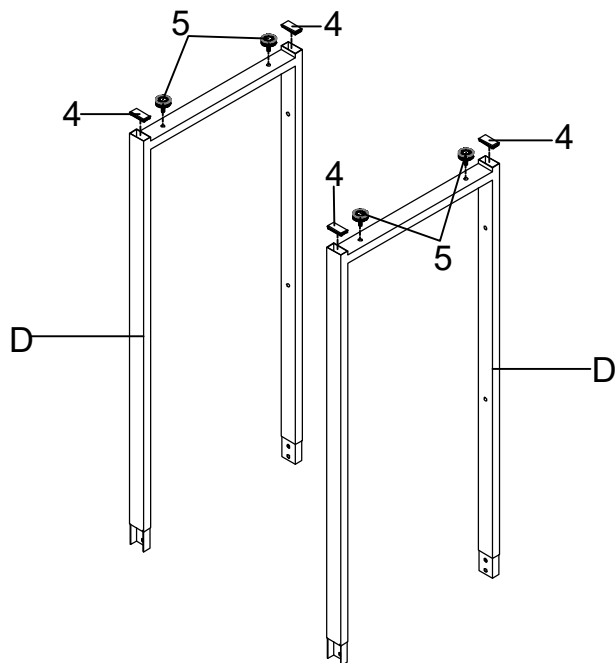


STEP 2

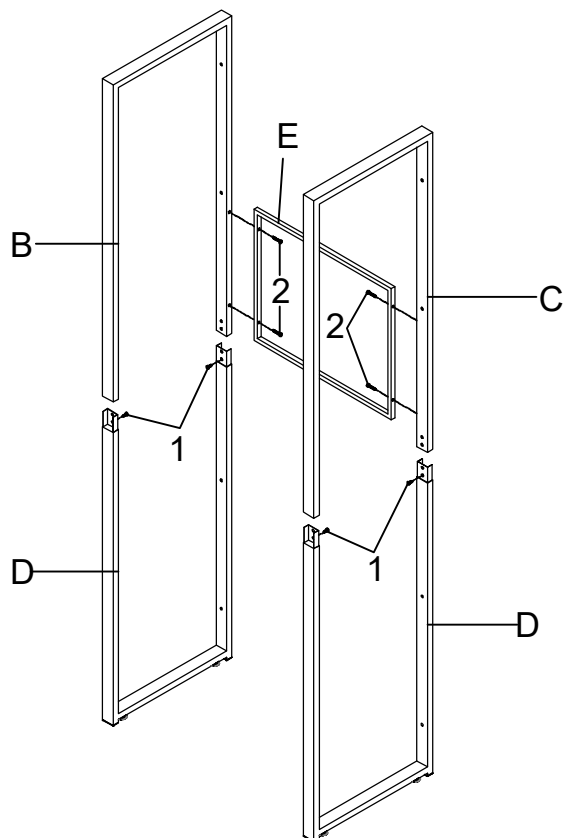



ASSEMBLY INSTRUCTIONS

STEP 3

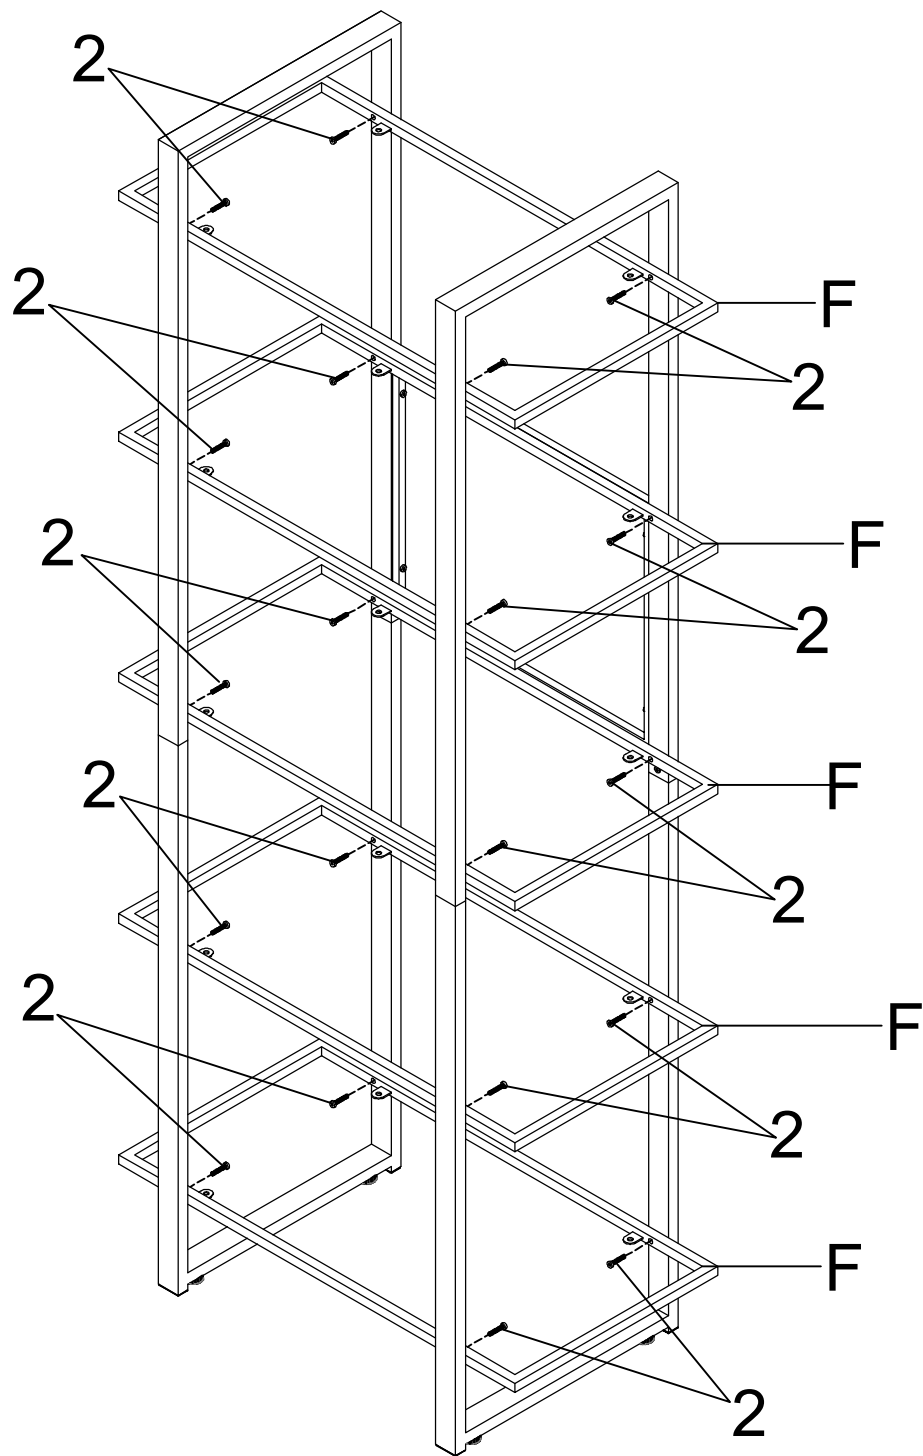

ASSEMBLY INSTRUCTIONS


STEP 4

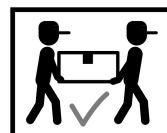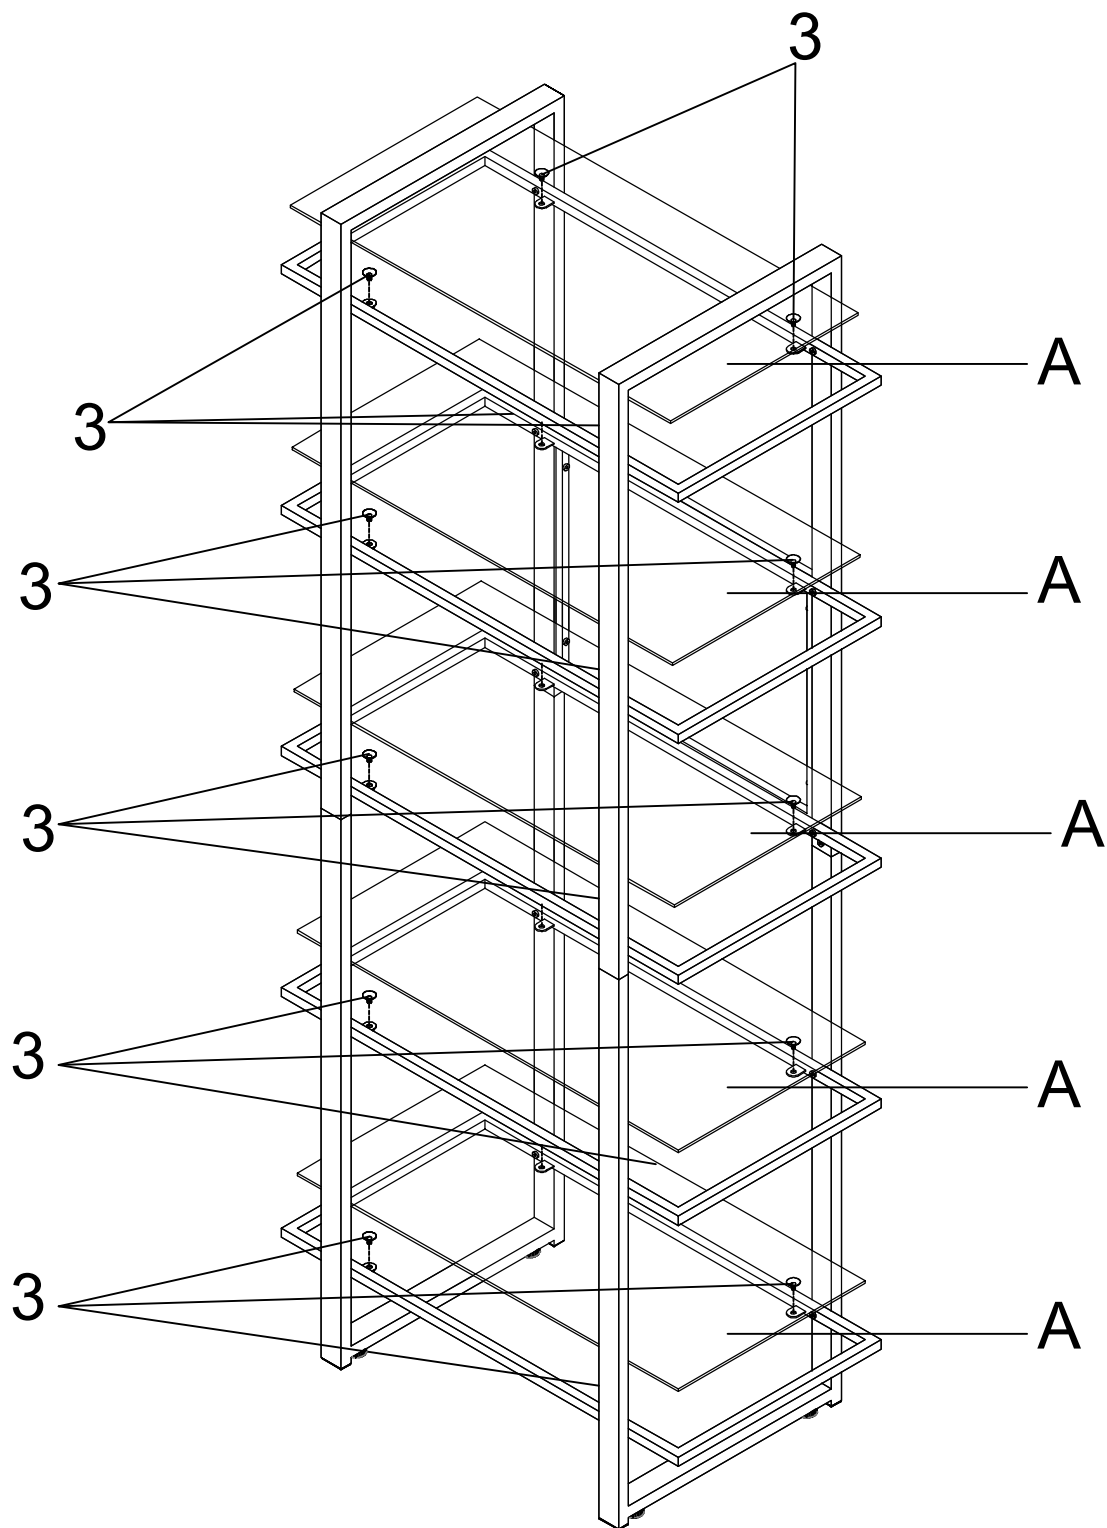

ASSEMBLY INSTRUCTIONS

Product Size : 800 X 451 X 2007 H (MM)

Product Size : 31 $\frac{1}{2}$ " X 17 $\frac{3}{4}$ " X 79"

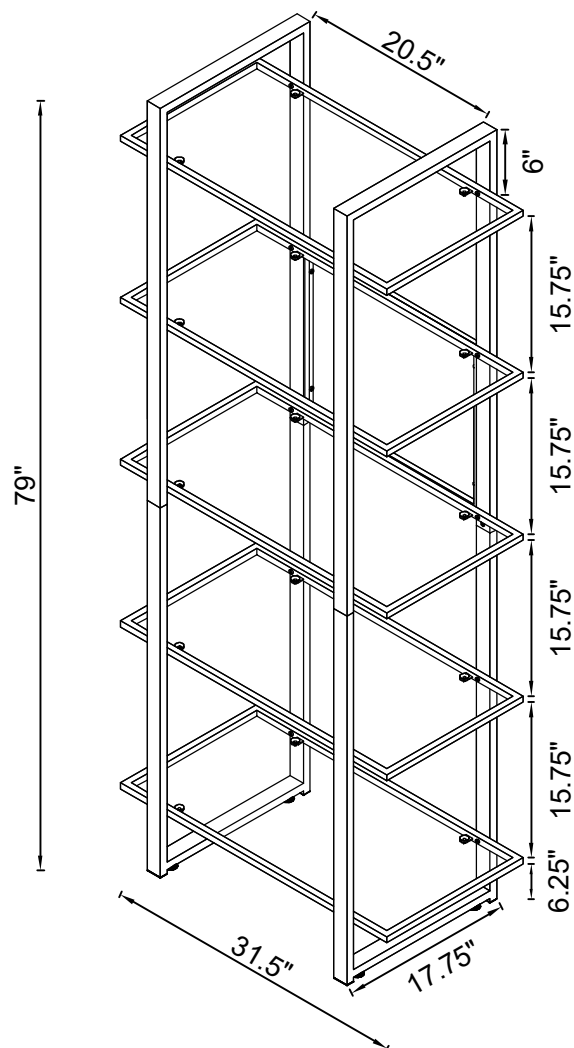

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT


WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


STEP 1

Attach a bracket securely to the back top rail of the furniture using short screw provided, through the smaller hole.

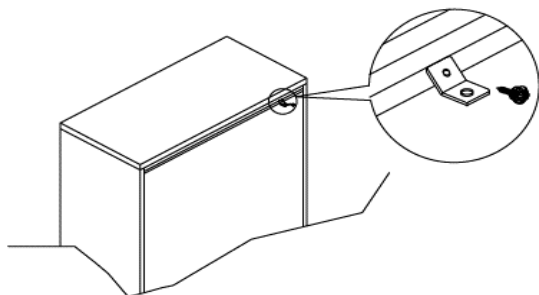

STEP 2

Locate the other bracket on the wall over a plastic wall stud and two inches below the mounting bracket secured to the back of the furniture. Attach the wall stud using the long screw provided, through the smaller hole.

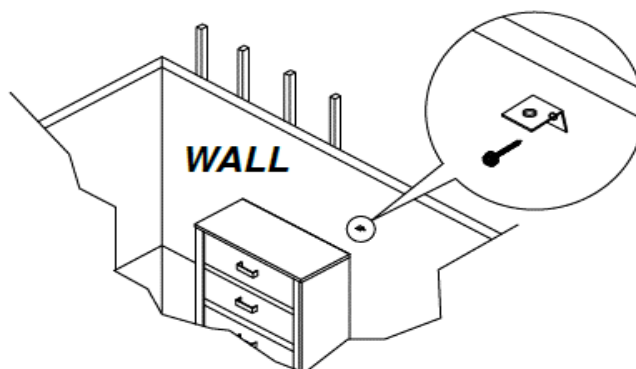

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

