



Warnings and Cautions

Please retain this instruction for future usage and read carefully before assembly.

Make sure you have all the parts & hardware as item list shows.

3 adults or more are recommended to install your Sunroom.

Do not discard any of the packaging until you have checked that you have all the parts and pack of fittings.

Check all bolts for tightness before use, and periodically check and tighten bolts ensure your gazebo works properly.

Some parts might have sharp edger/corners/Please follow basic safety precautions to reduce the risk of hurts.

Avoid installing and settling the solarium in a corridor of heavy wind.

Some assembly parts contain sharp edges, you should wear protective gloves when handling these items.

For safety issues you must not leave the unit unattended if it is not completed, even if it is already anchored to the ground.


*It is essential to place the gazebo on level ground and not less than **6 feet** from any obstruction such as fences, garages, overhanging branches, laundry lines, or electrical wires.*

If you have questions or concerns.

*Please contact us via email at **service@domioutdoorliving.com***

Domi outdoot living

domi
outdoor living

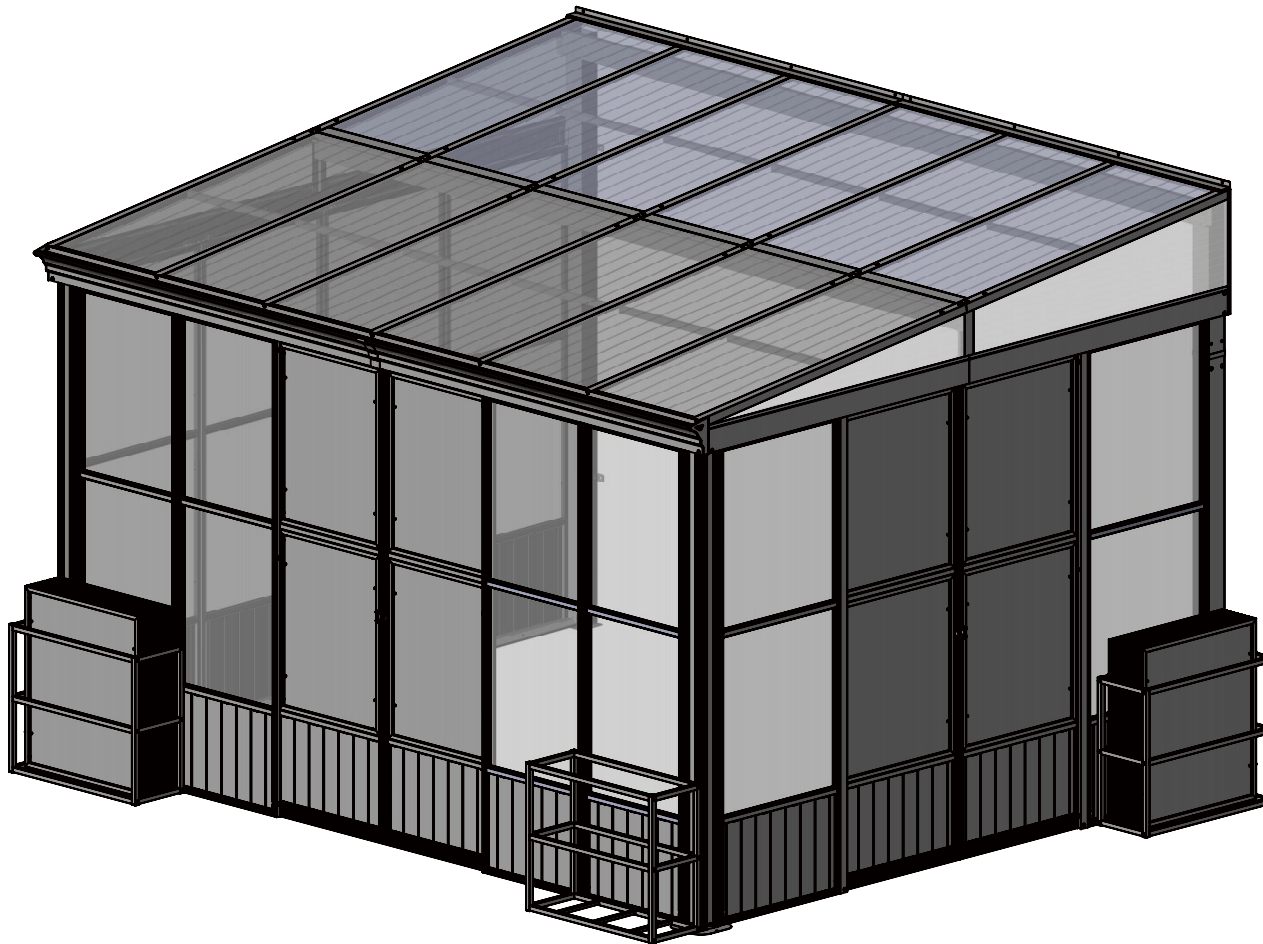


10'x12'


SKU: LGFP1647

Solarium Wall-Mounted
Sunroom

Assembly Manual

LGFP1647

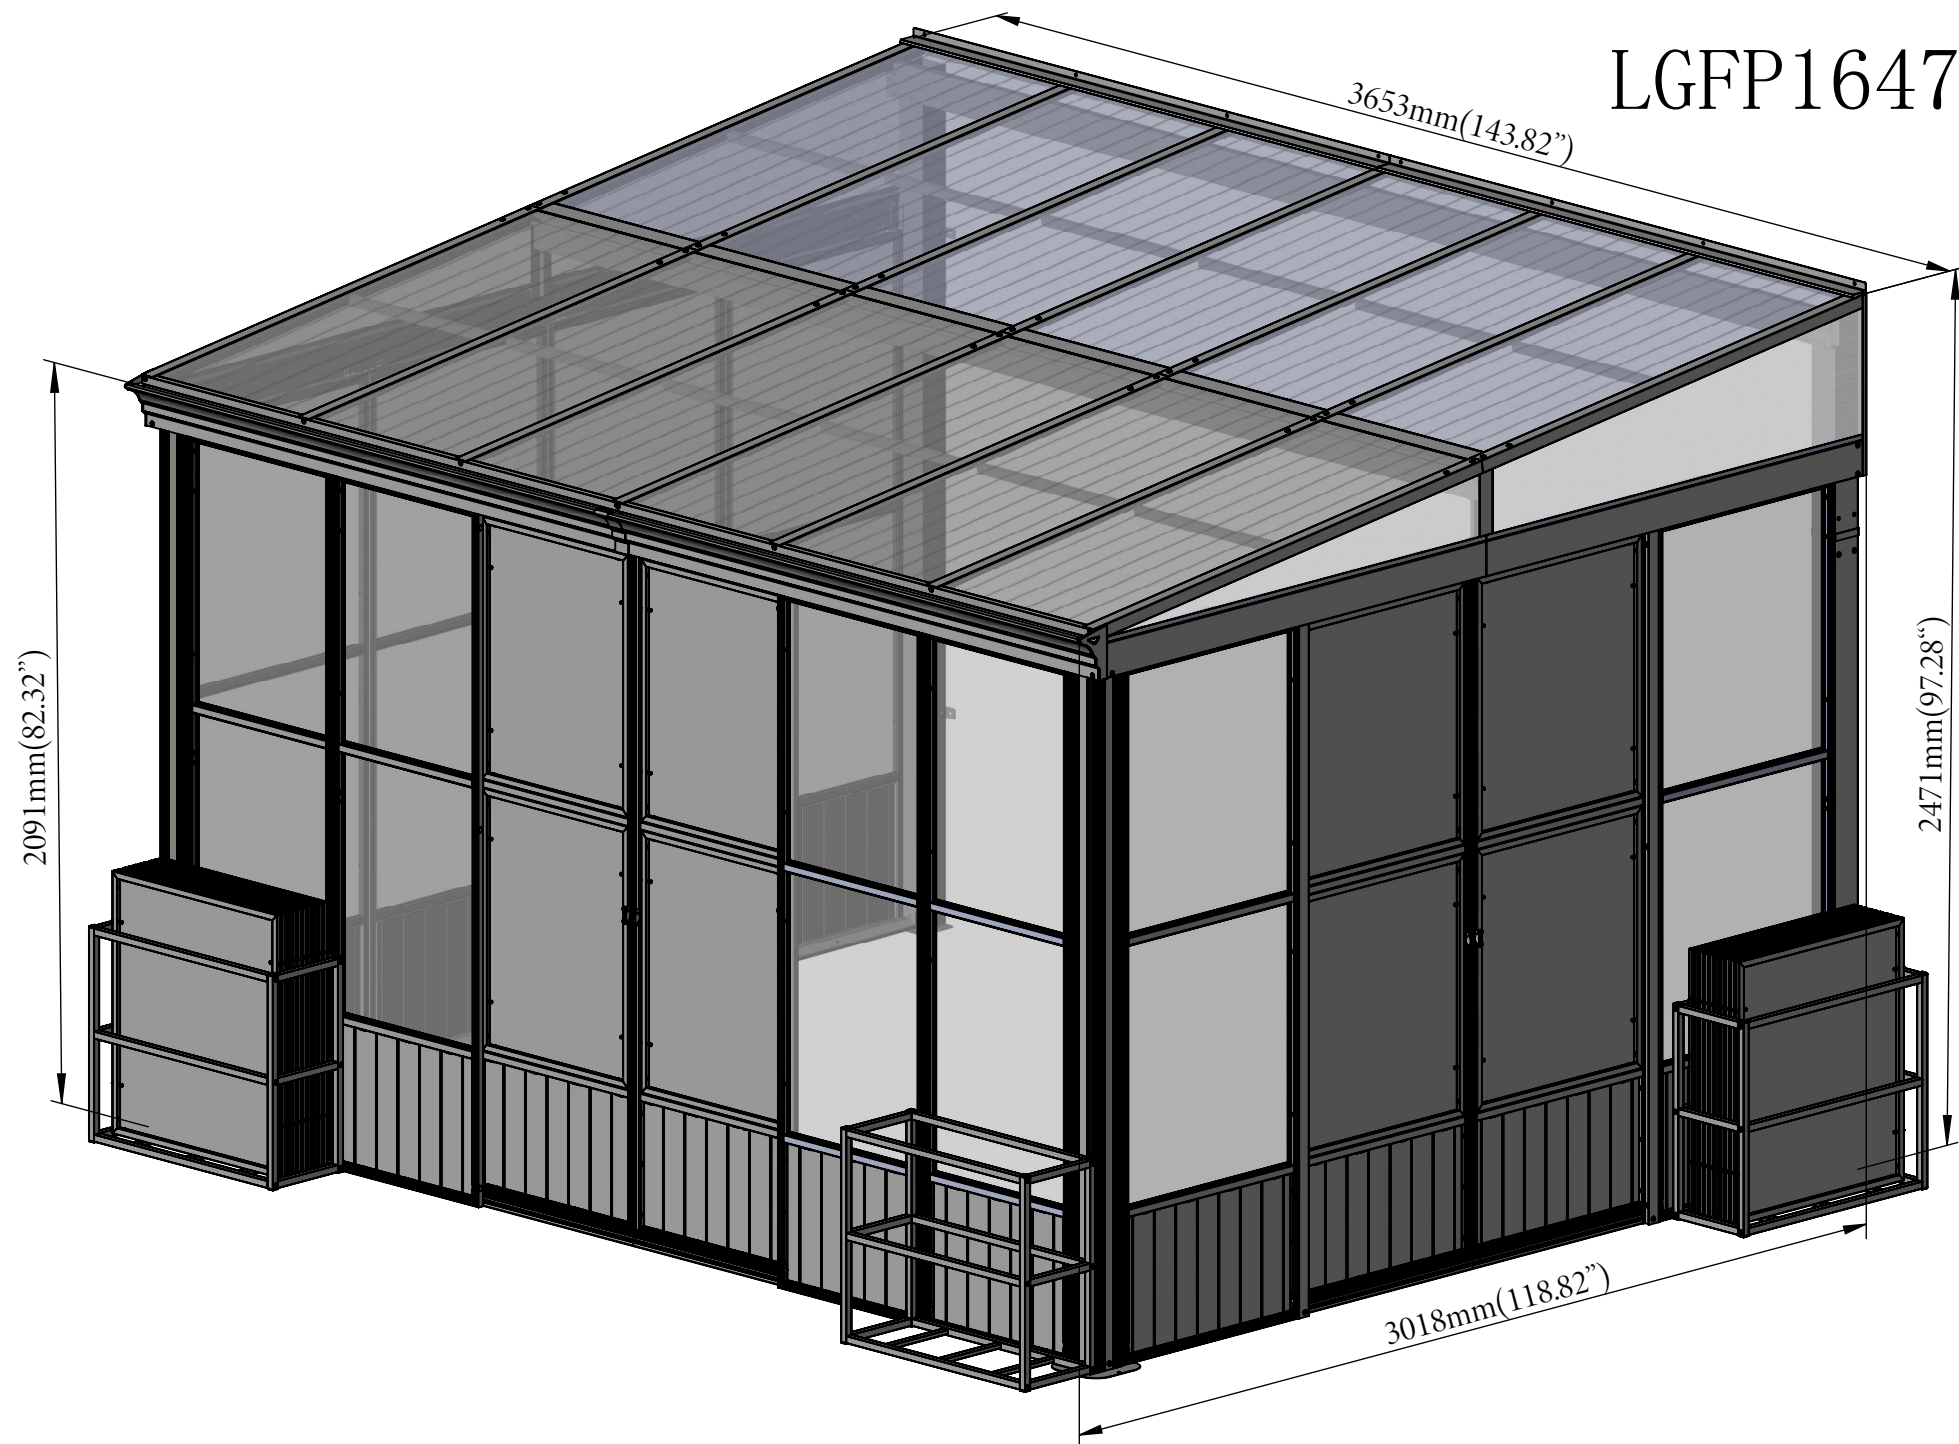

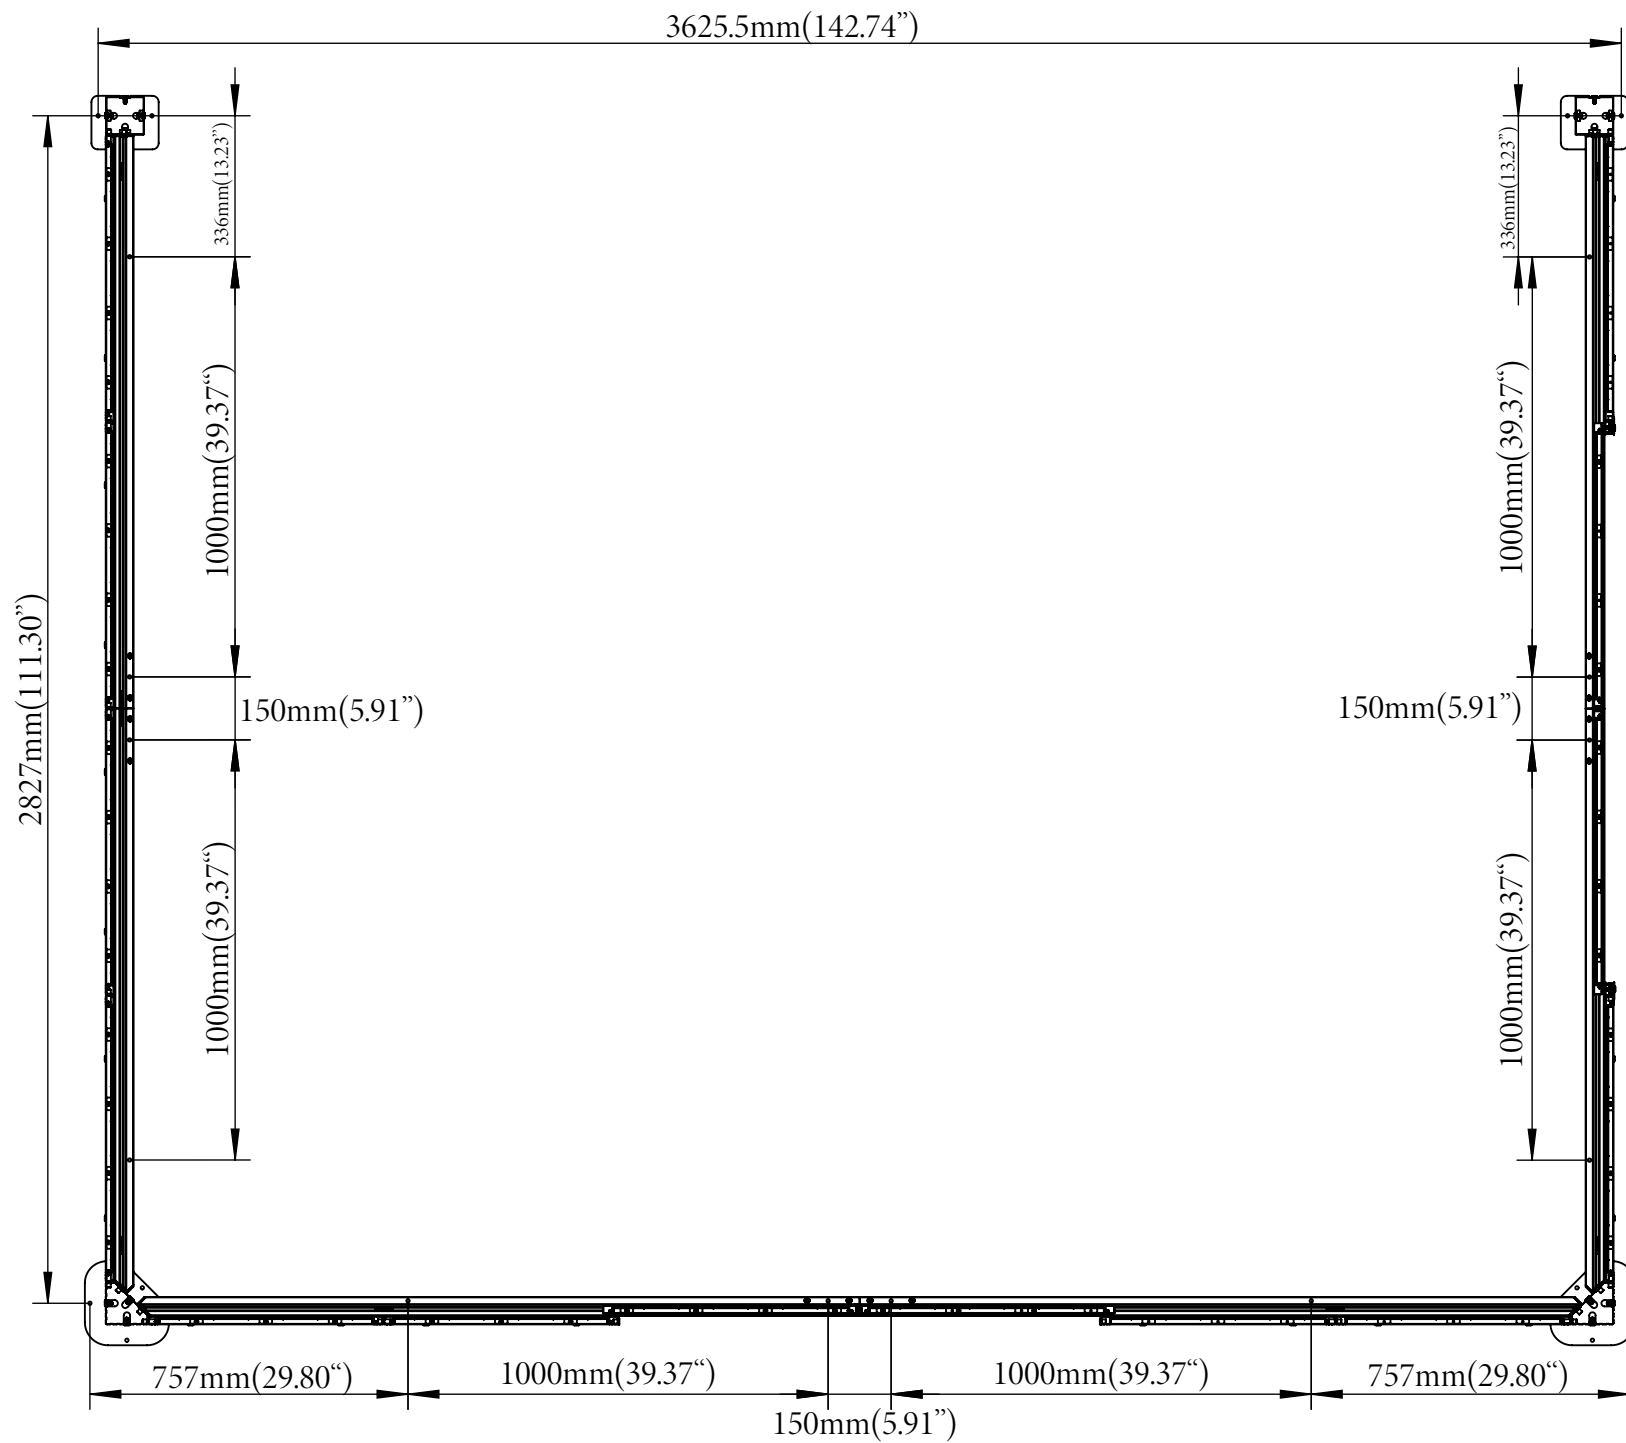

Thank you for your purchase of
Domi outdoor living's Sunroom

Read and follow this assembly and operation guide.

To reduce personal injury and damage to you Sunroom

We recommend a **three-person team** for assembly and disassembly.

Please **remove** snow accumulation at all times.

Please schedule enough time to complete the assembly of the sunroom.

It will takes approximately 7 hours to set up.

If you like our products, please tell other customers

If you have problem with our products, please tell us

Please feel free to contact us.

DOMI OUTDOOR LIVING




Pre-assembly

TOOLS THAT MAY BE REQUIRED (Not included in boxes)

*NOTE: Tools / equipment are not shown to actual size and scale.



LEVEL




RUBBER Mallet




PHILLIPS SCREW



DRILL



ALLEN KEY



ALLEN KEY

EQUIPMENT REQUIRED (Not included in boxes)

*NOTE: Equipment are not shown to actual size and scale.



SAFETY HAT



GLOVES



SAFETY GOGGLES



STEPLADDER

Please leave all the bolts a little loose when assembling and then go back to the end of the assembly process to tighten all of the bolts.

Matters needing attention



1. Three or more people are required for assembly.



2. Do not fully tighten screws prior to complete assembly.



Regulation

IMPORTANT: A sunroom may entail to purchase a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.

Care and Cleaning:



For cleaning, use a domestic soap or detergent and wash with warm water using a sponge or fabric. Rinse with clean water.

1

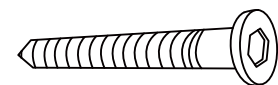
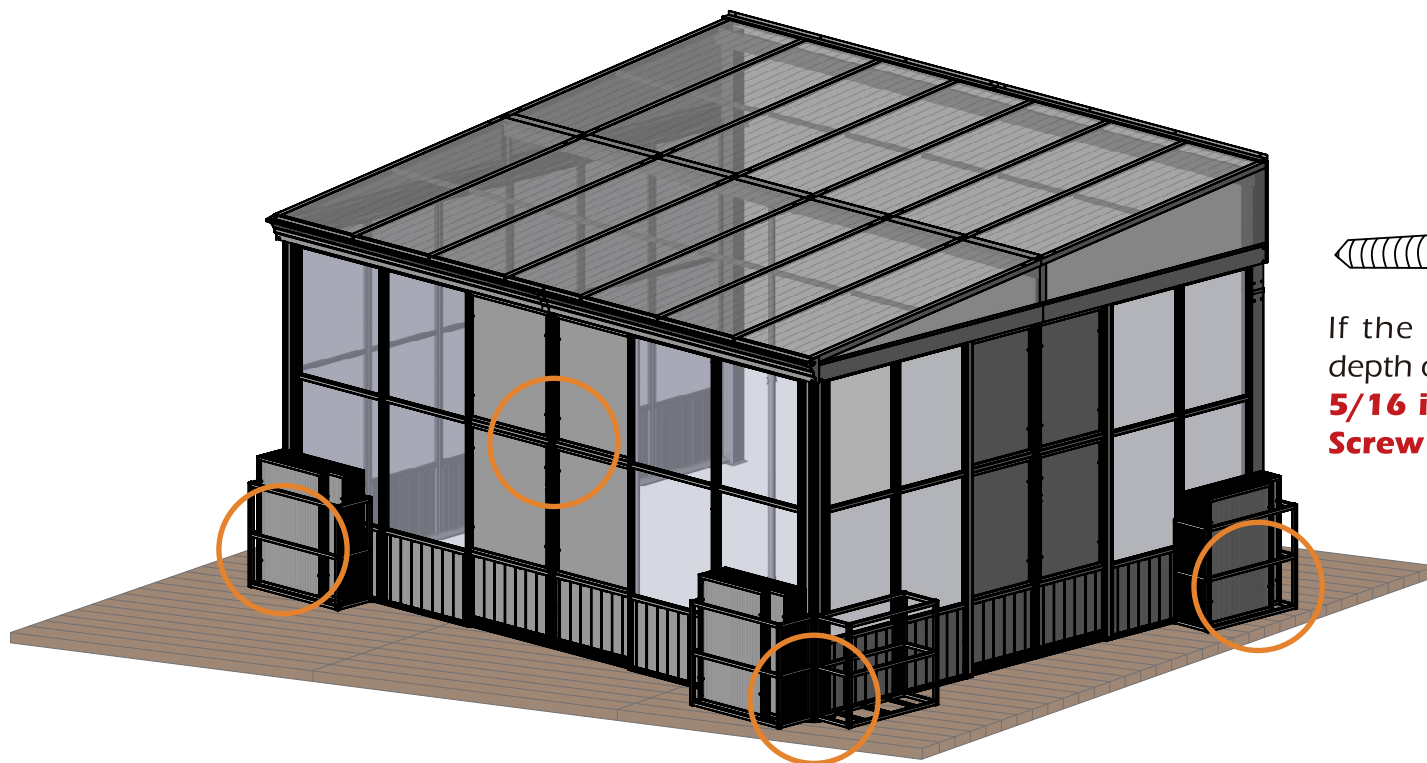


x12

If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. x4 in. Structural Wood Screw** to mount the pergola.

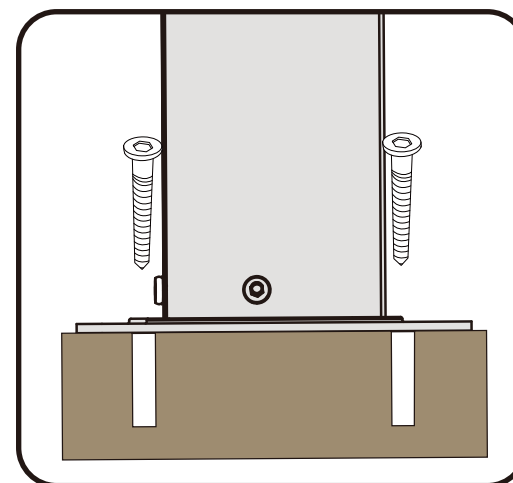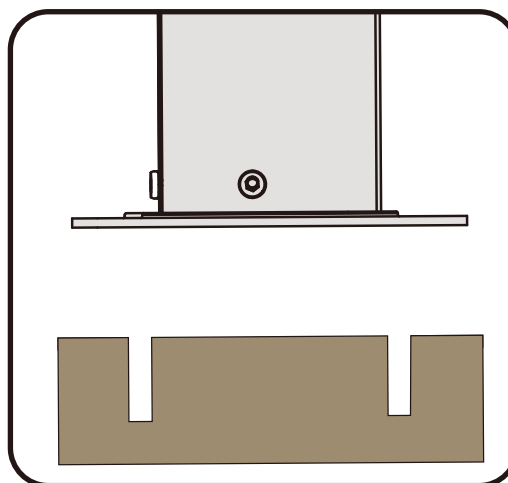


2

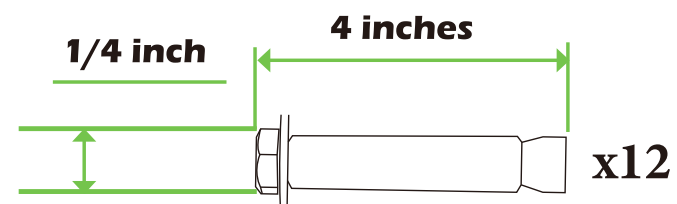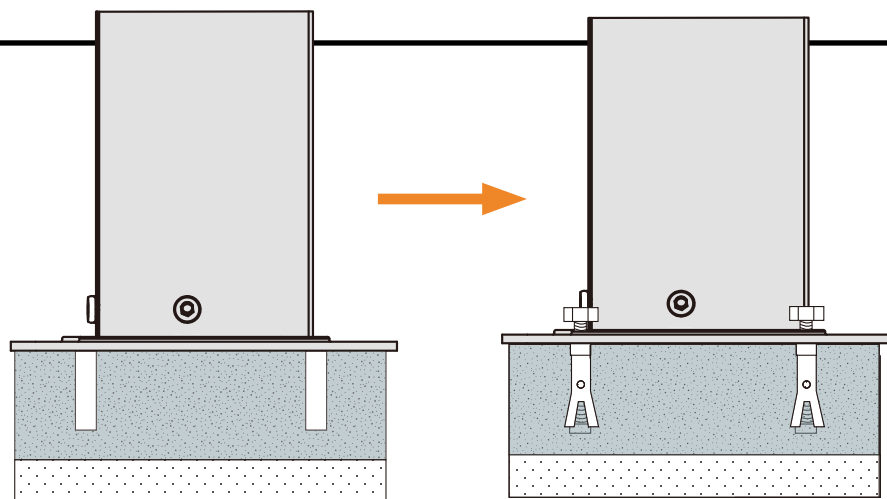


If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the pergola


MODEL1

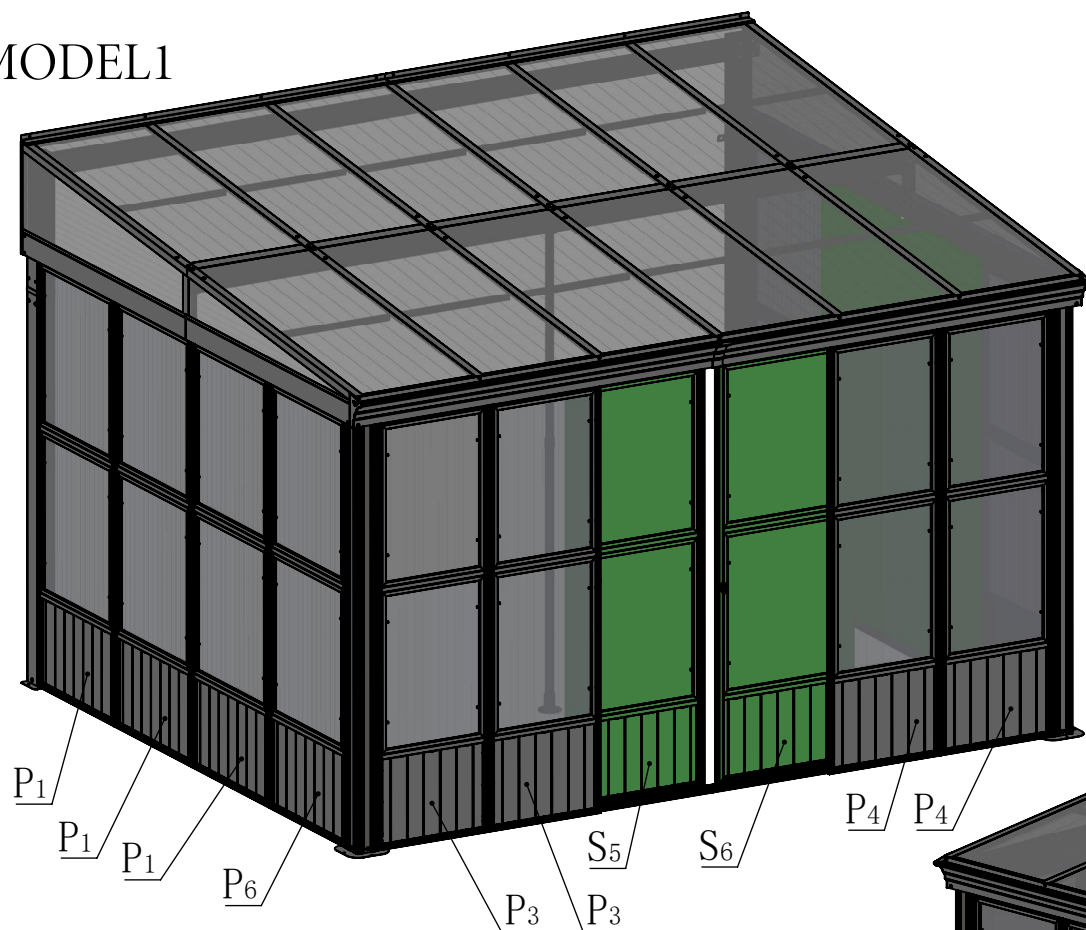


Attention: There are two options for opening the side door of this sunroom. And the subsequent assembly steps are based on **Model 1 (right side door)** in this manual.













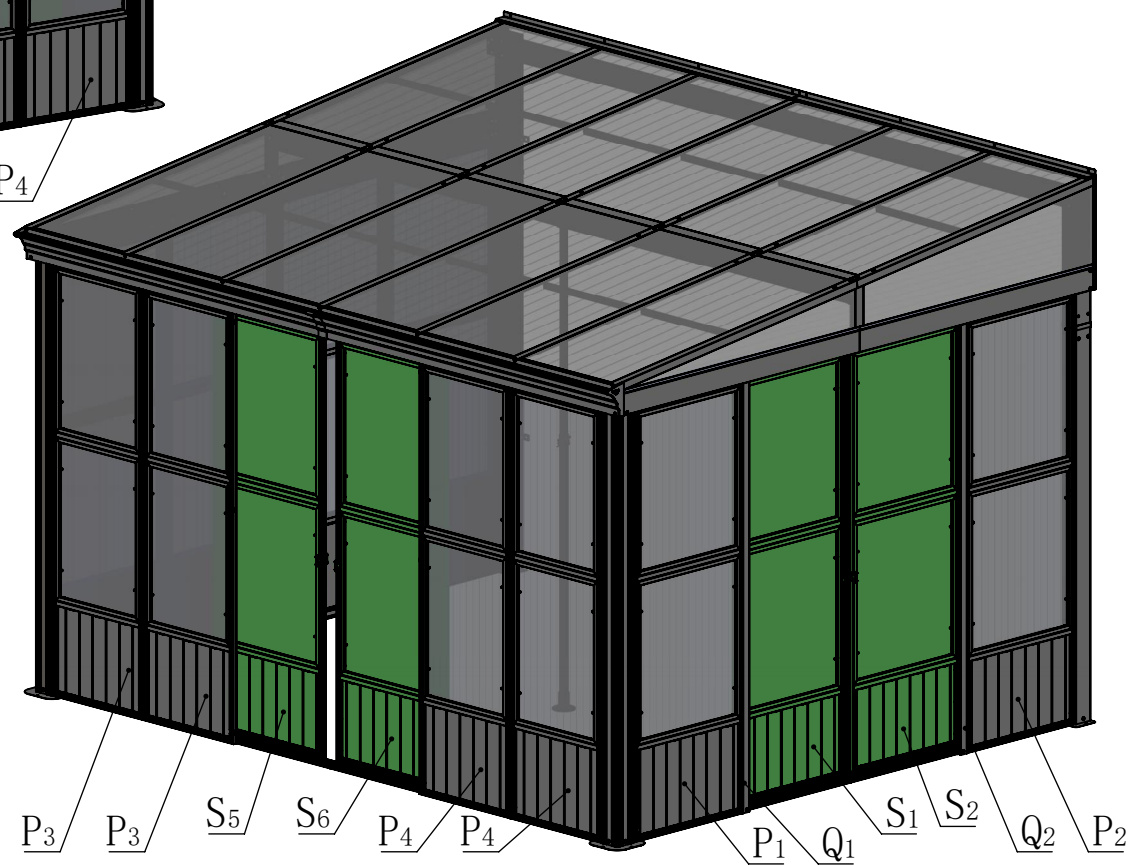


MODEL2

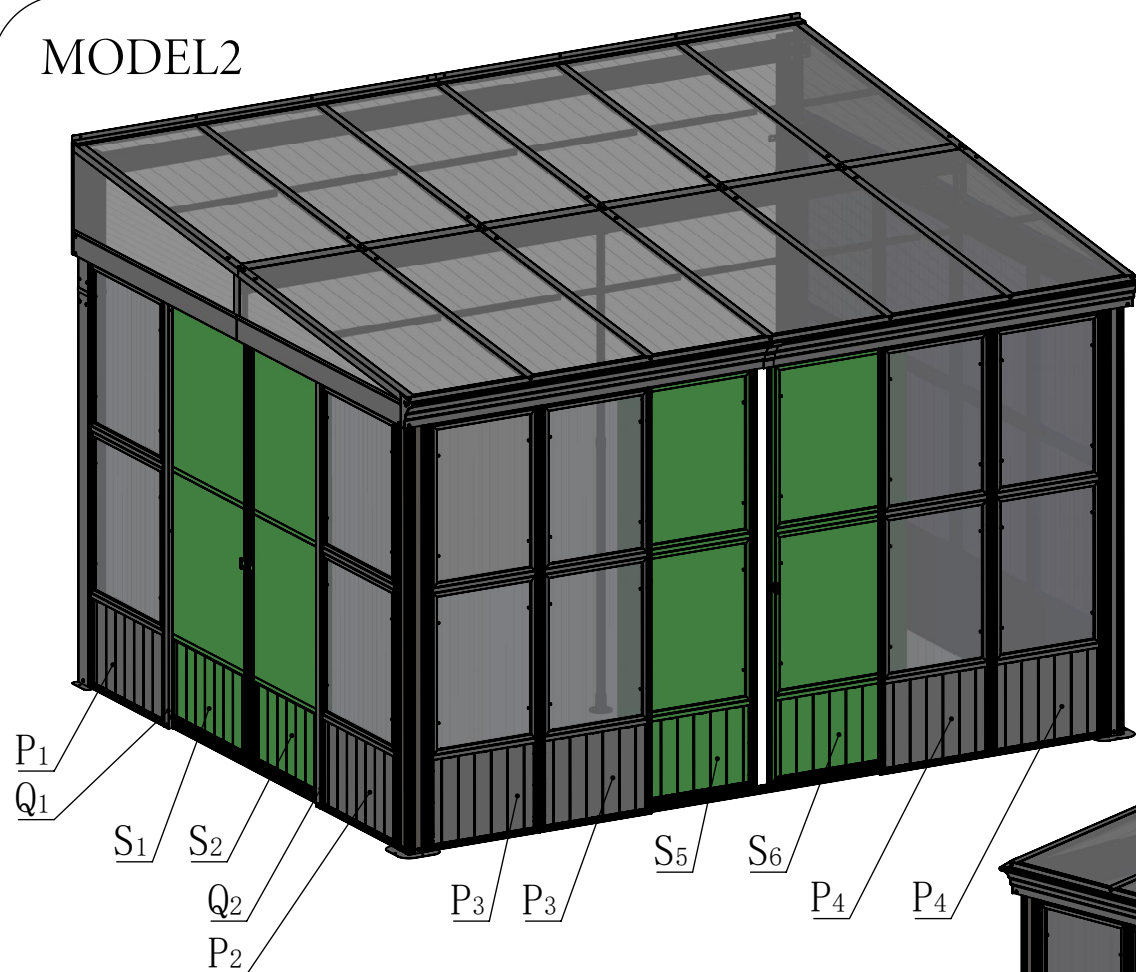


Attention: There are two options for opening the side door of this sunroom. And you need to make adjustments if you want to assemble based on **Model 2 (left side door)**.
 Adjustment 1: Install 2 screws (4#) less in the middle of the original left side beam (C1/C2), and install them when subsequently assembling the sliding door track.
 Install 2 screws (4#) more in the middle of the original right side beam (D1/D2).
 Adjustment 2: Install 1 square nut (24#) less in the original left lower screen track (O4) and 1 square nut (24#) less in the track (O5); install 1 more square nut (24#) in the original right lower screen track (O6) and 1 more square nut (24#) in the track (O7).
(Adjustment 1 and Adjustment 2 will also be explained during installation.)
 Adjustment 3: Screens and sliding doors are assembled in the positions shown here.

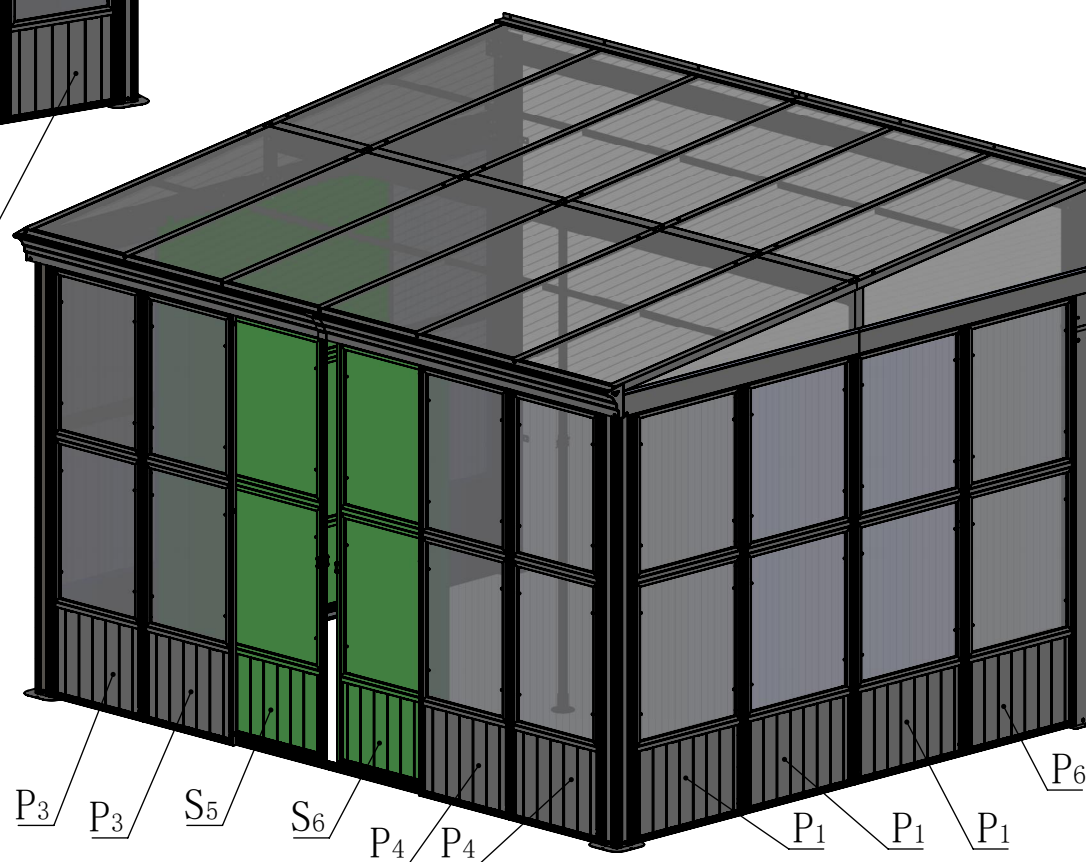


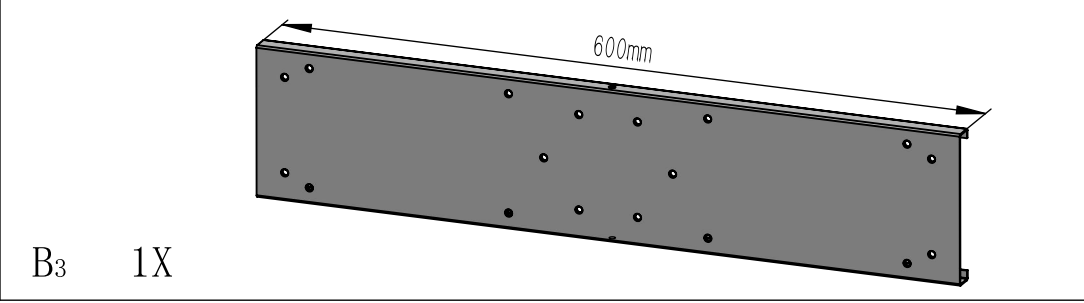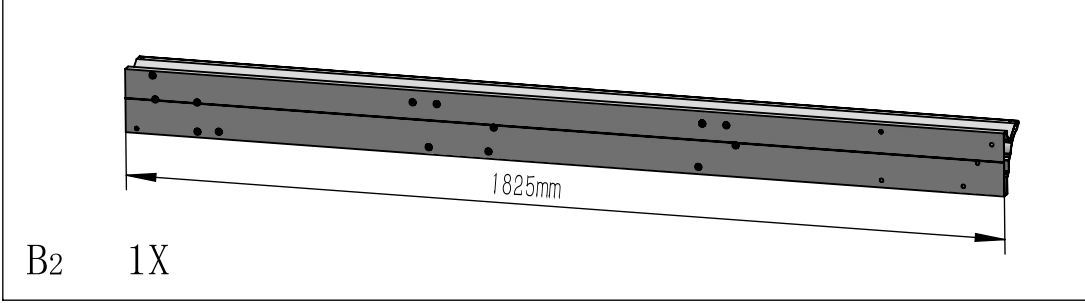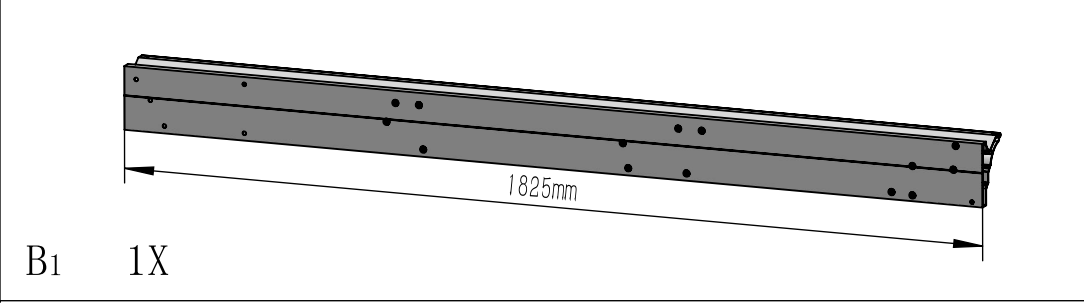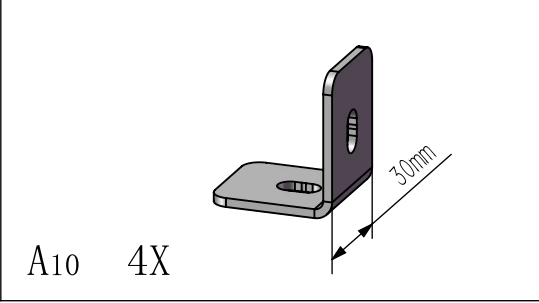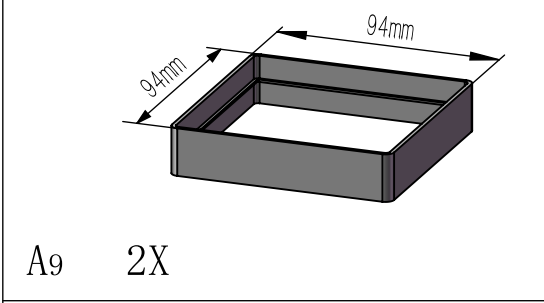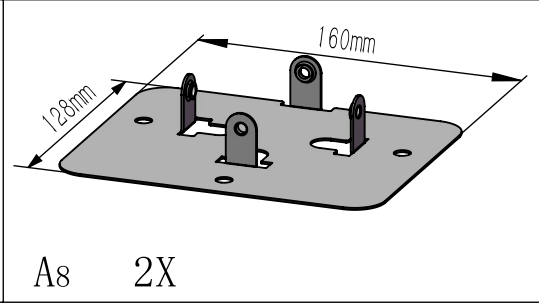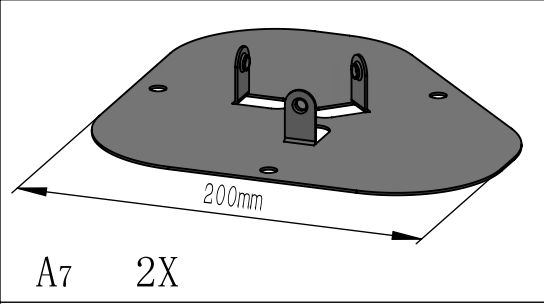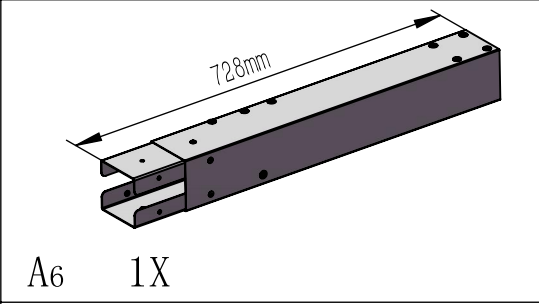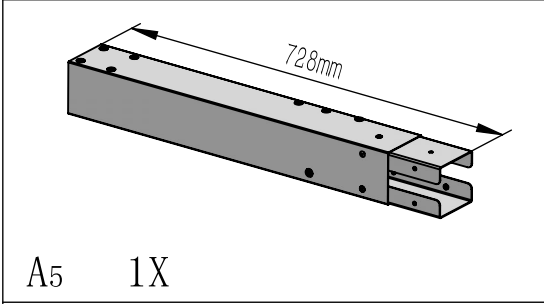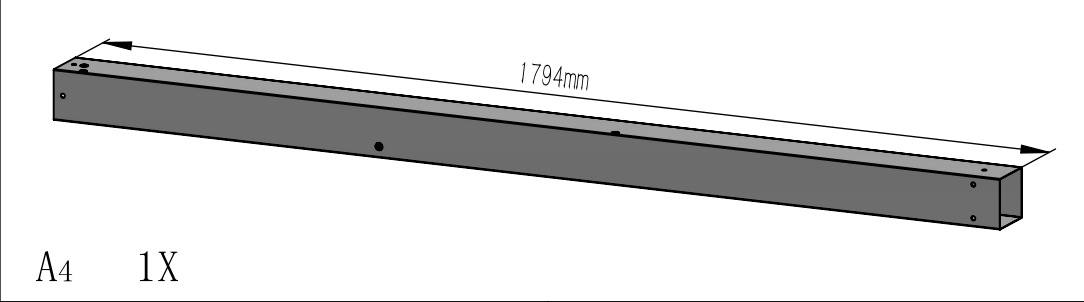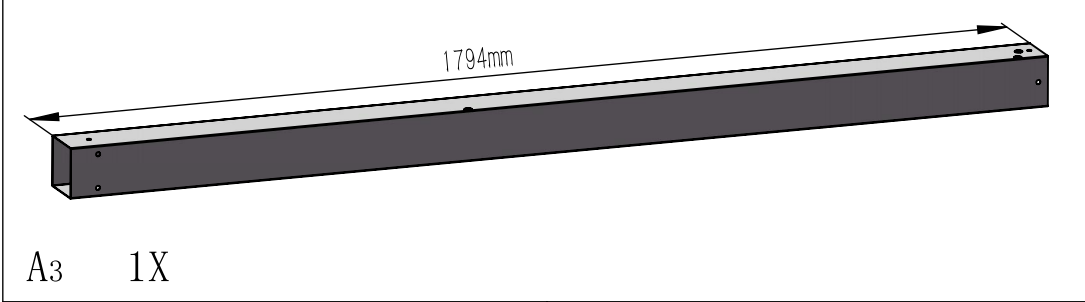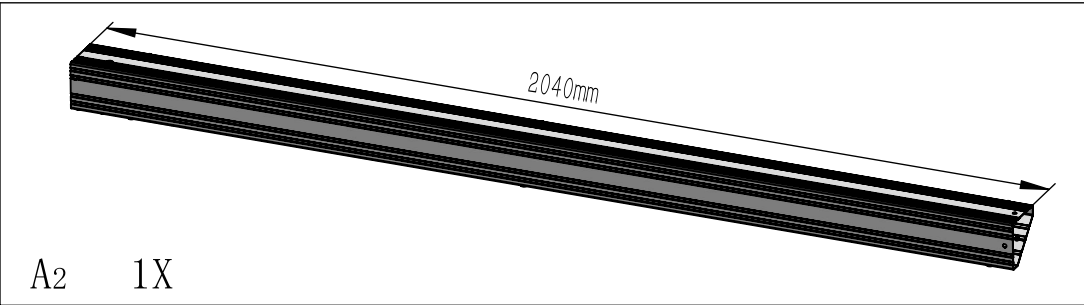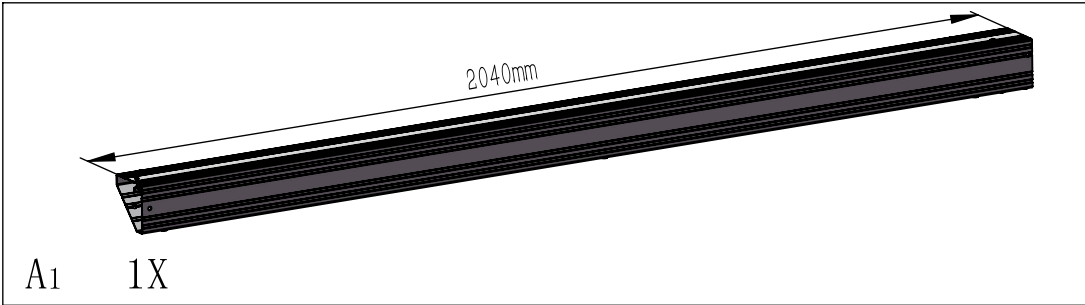


B₄ 1X

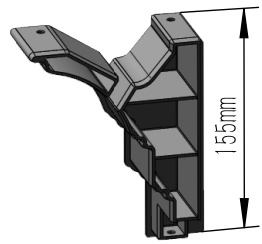


B₅ 1X

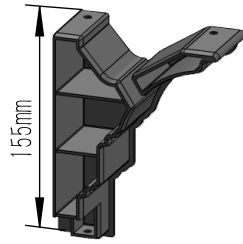


B₆ 6X

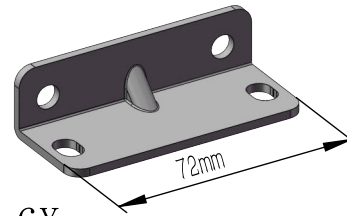


B₇ 1X

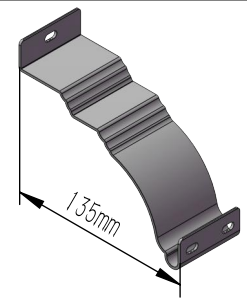


B₈ 13X

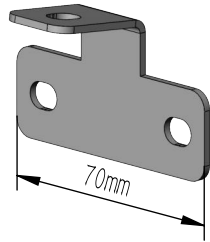


B₉ 2X

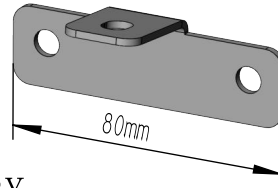


C₁ 1X

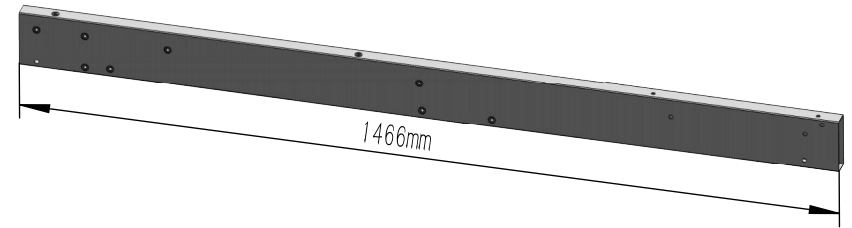


C₂ 1X

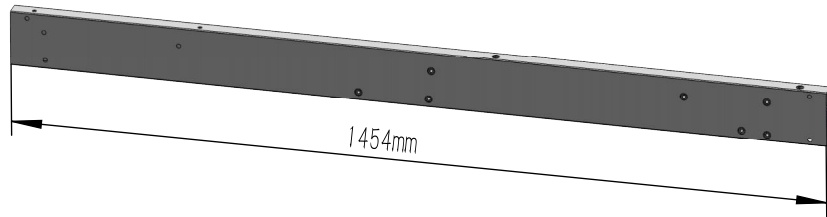


C₃ 4X

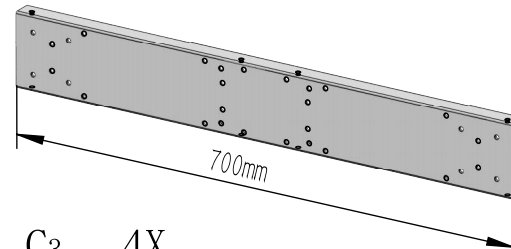


C₄ 2X

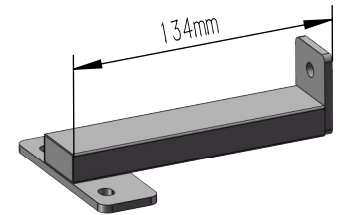


C₅ 1X

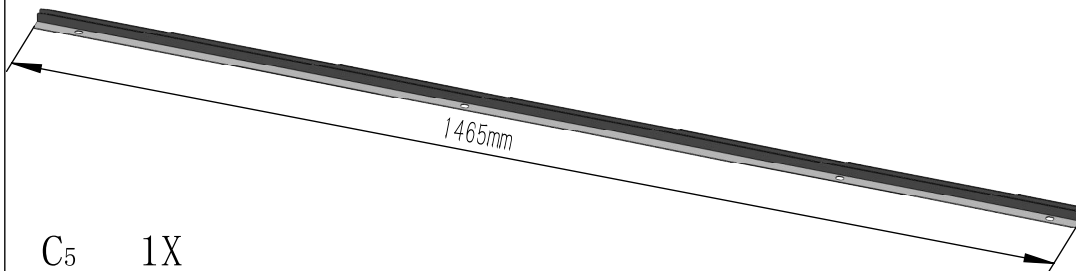


C₆ 1X











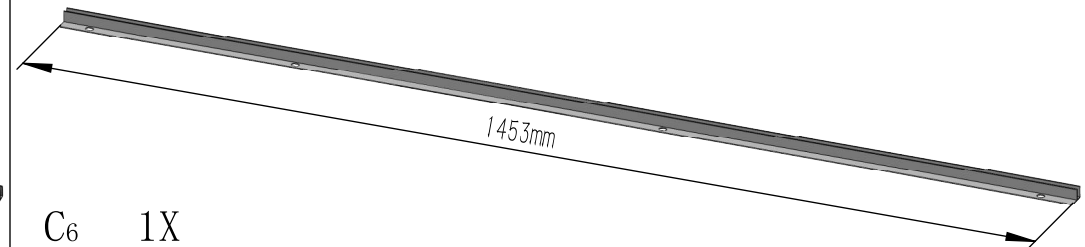













D₁ 1X













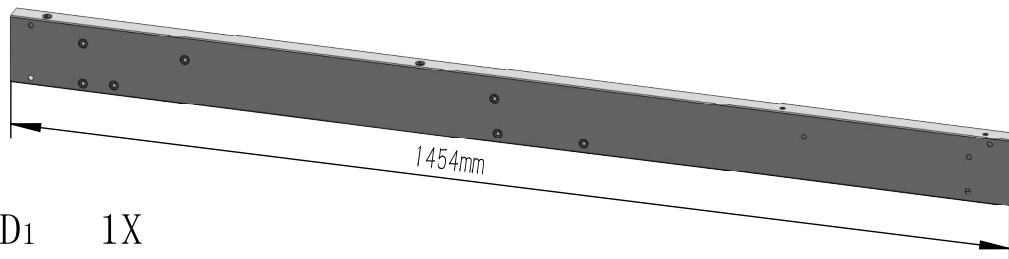












D₂ 1X









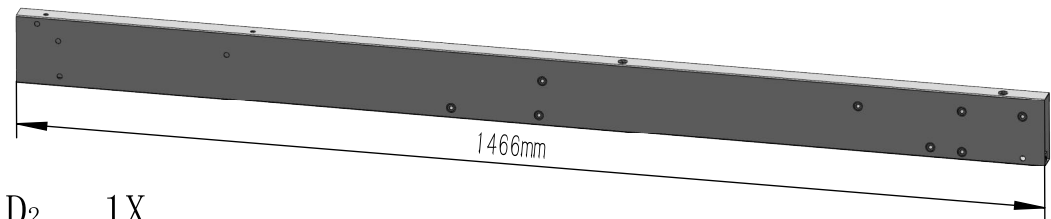


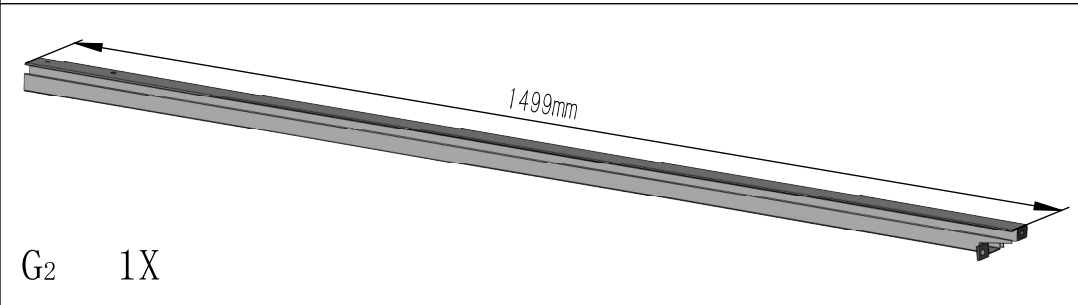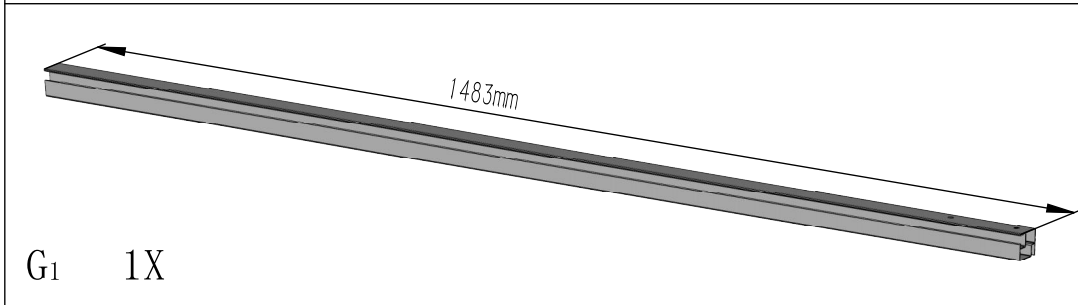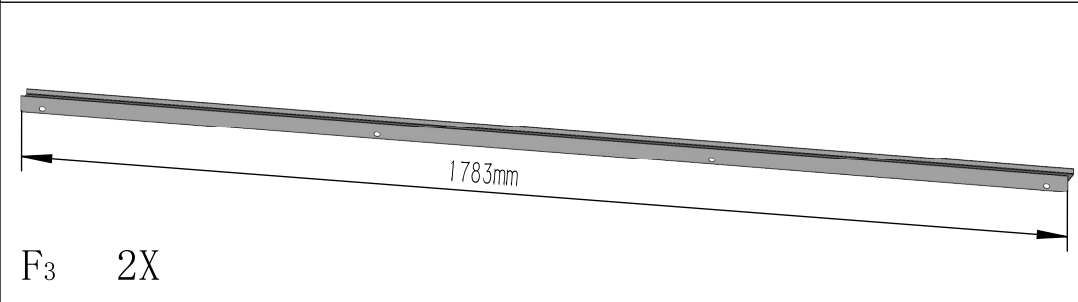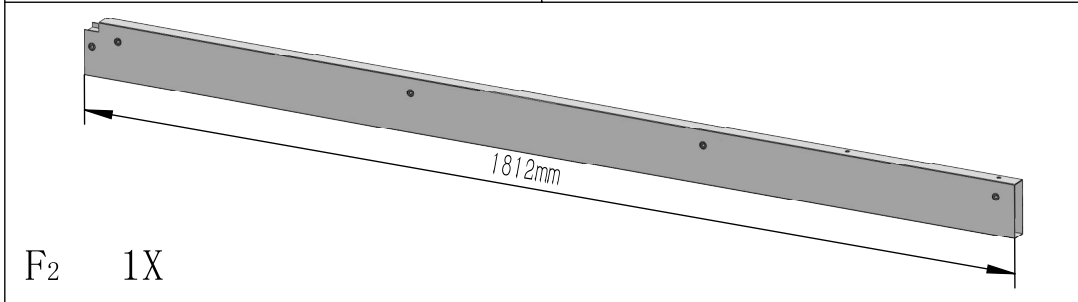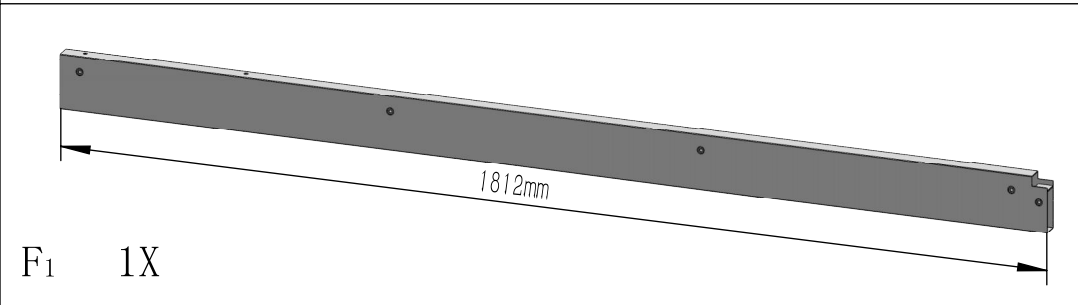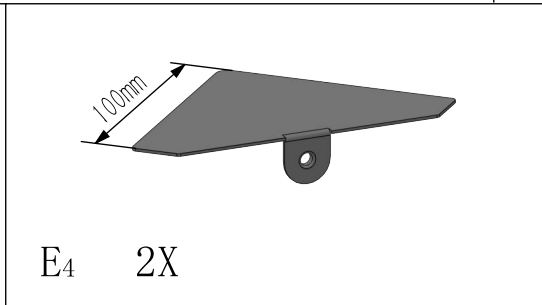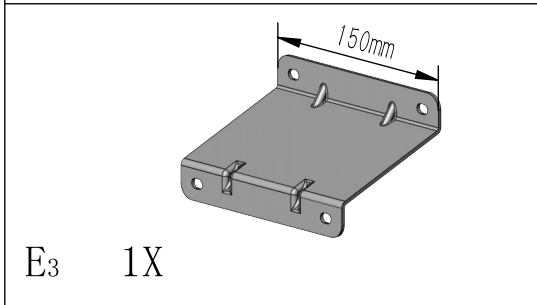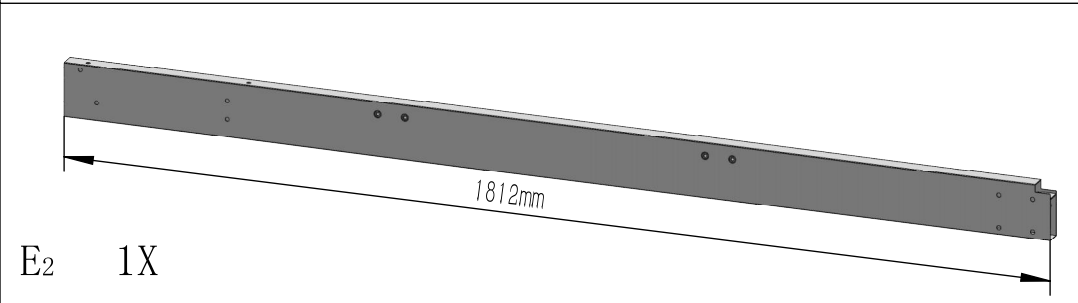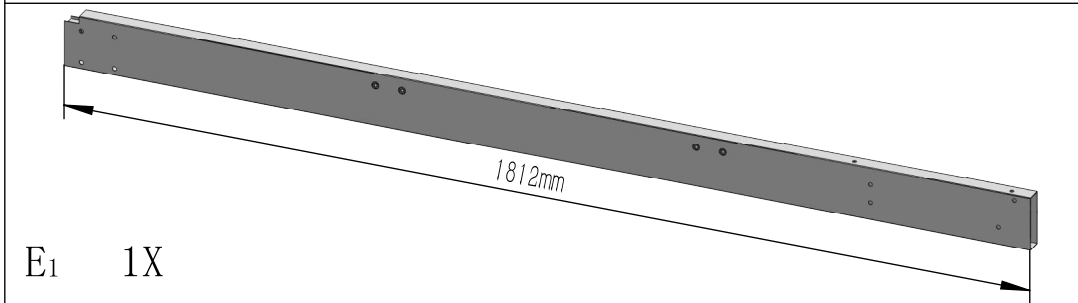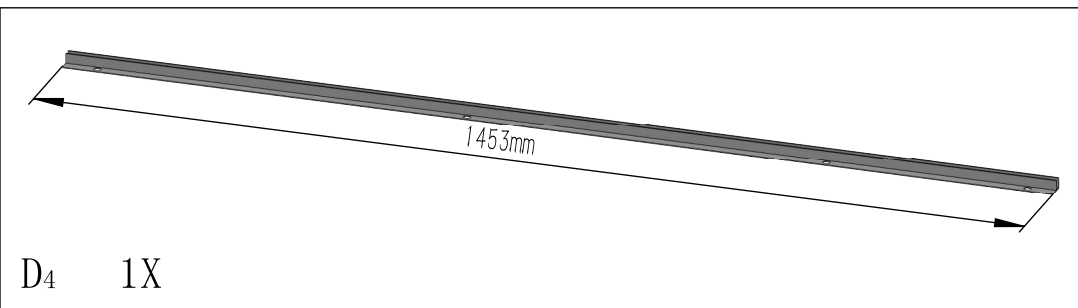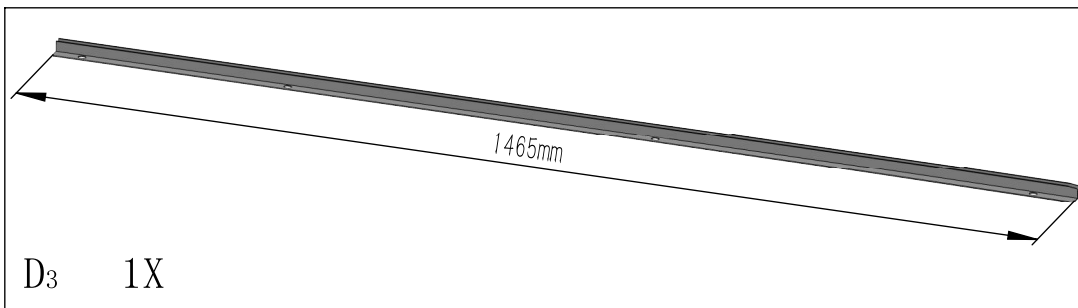


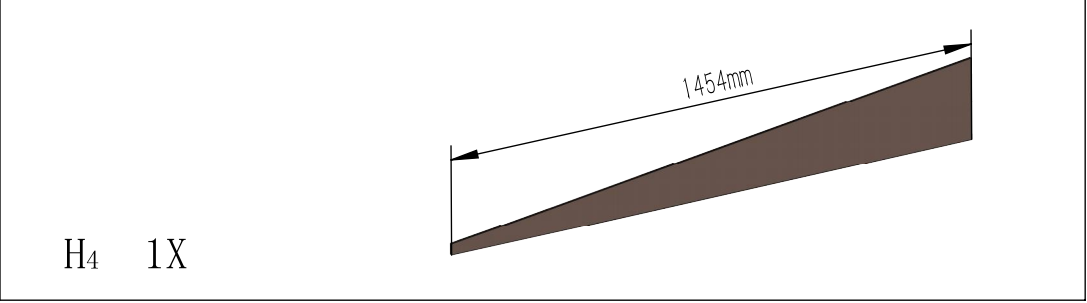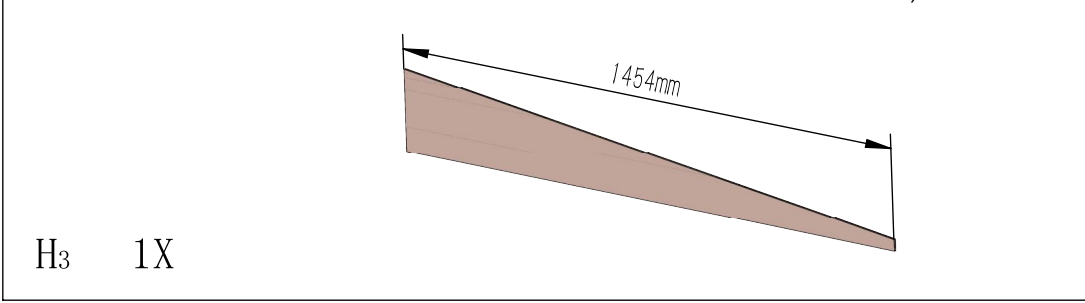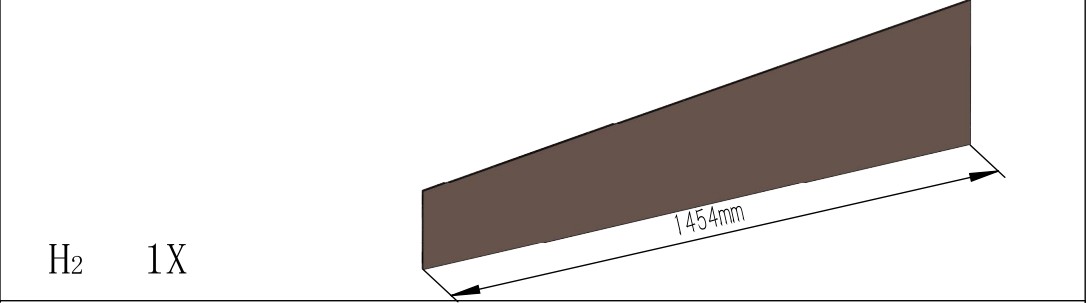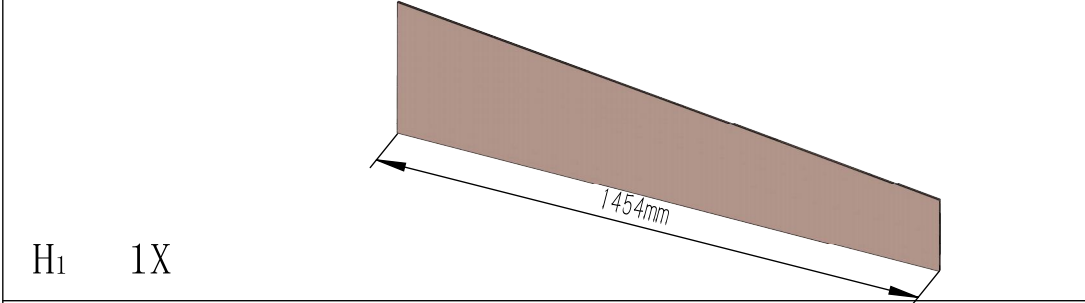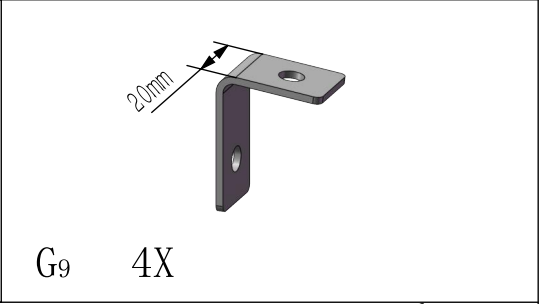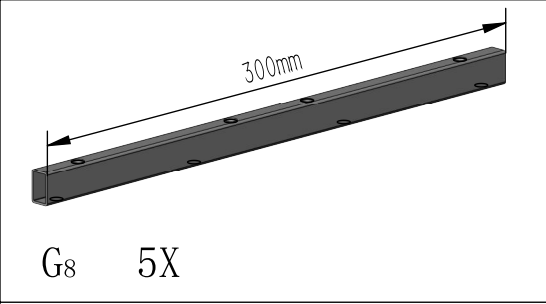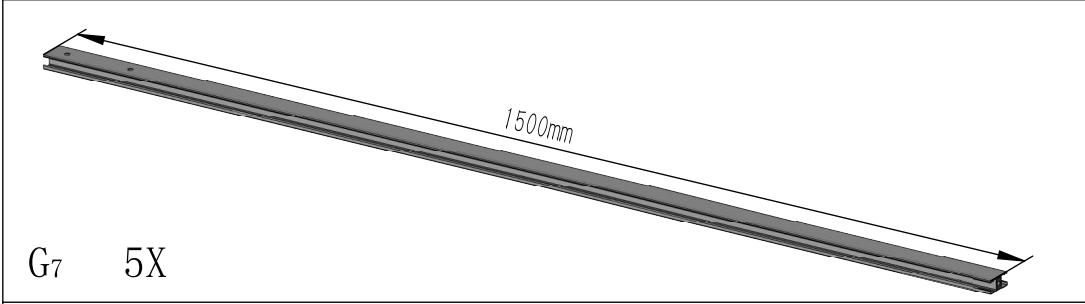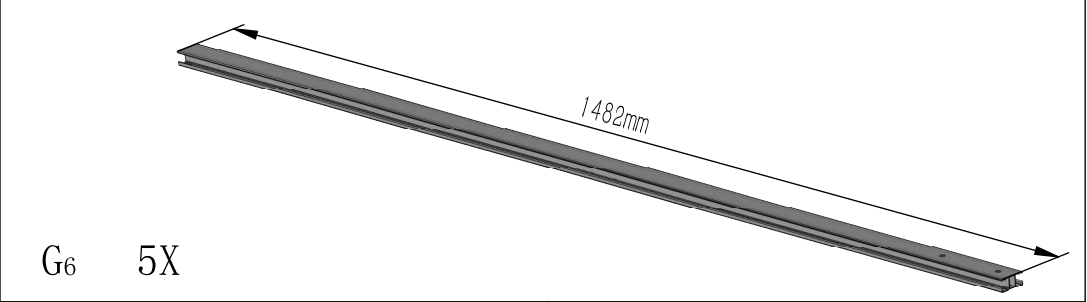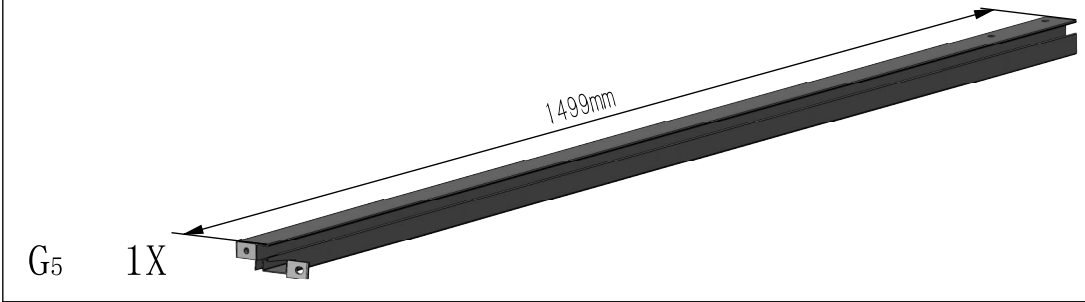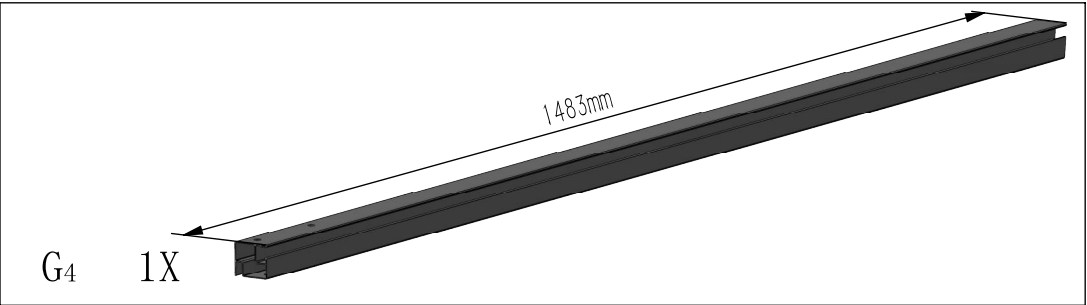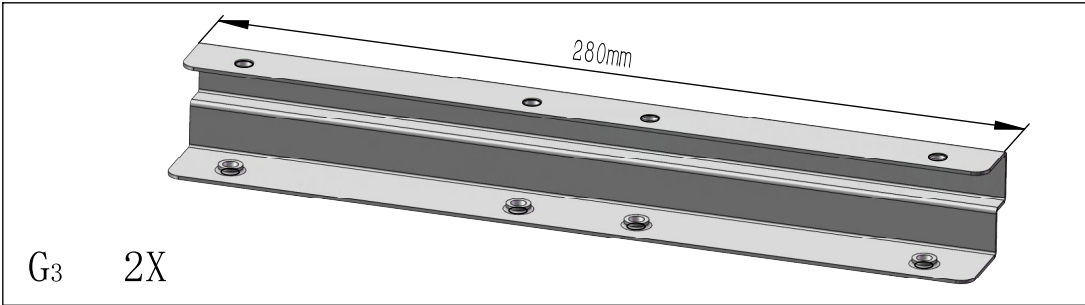

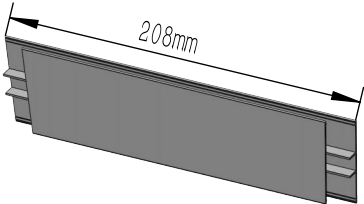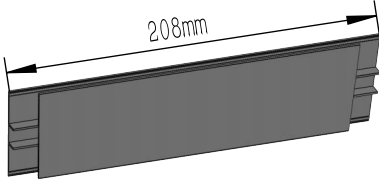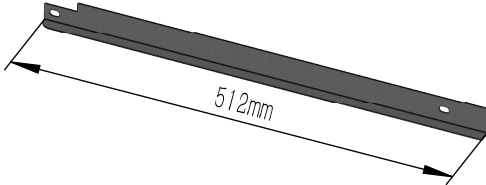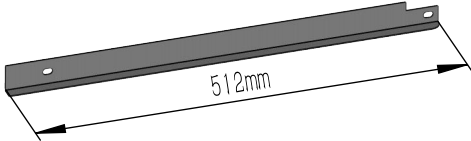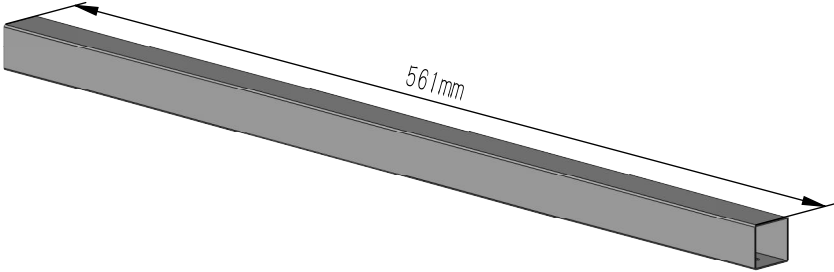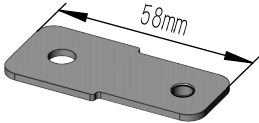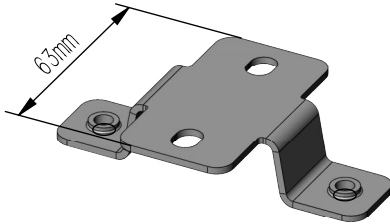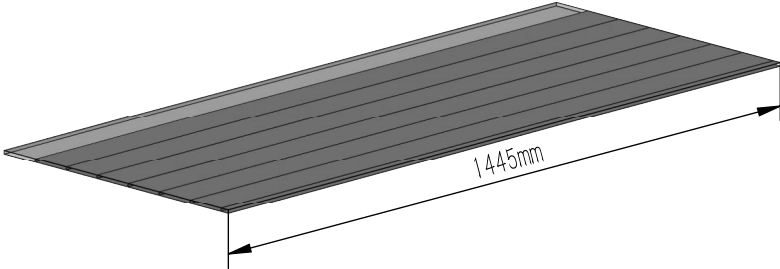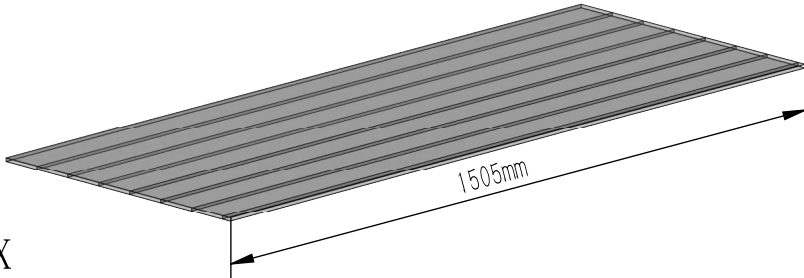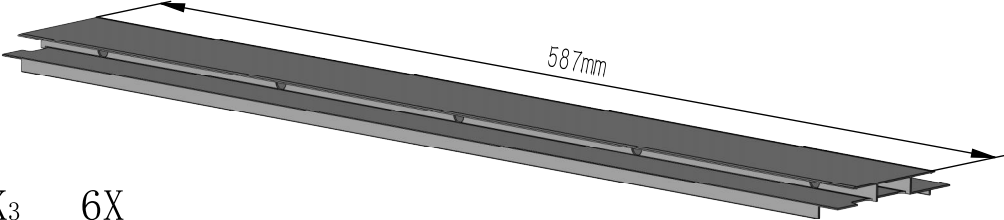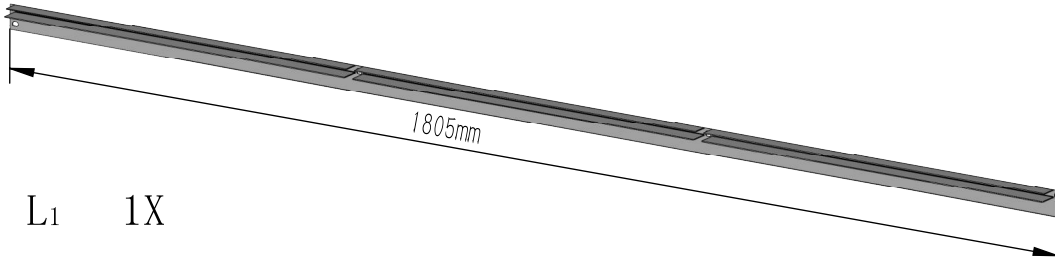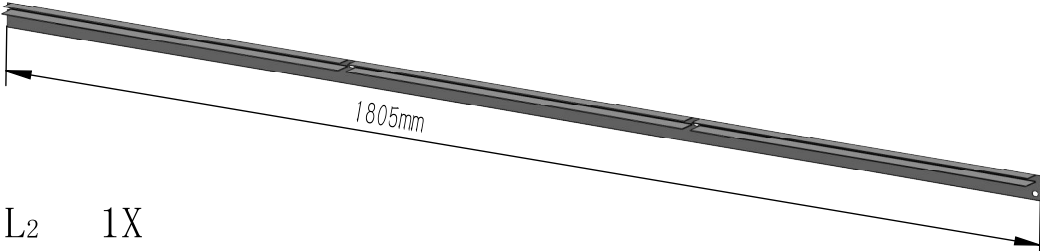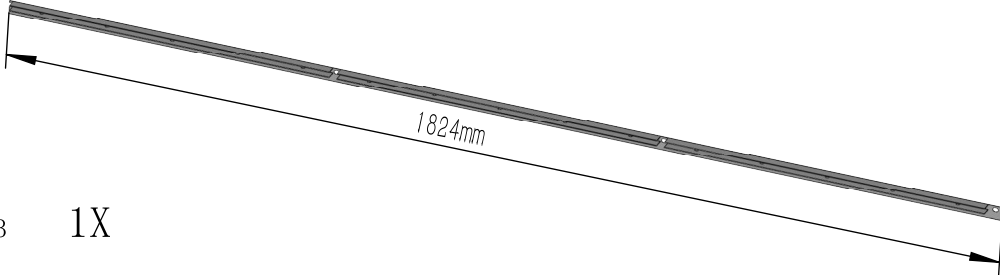
 <p>H₅ 1X</p>	 <p>H₆ 1X</p>	 <p>H₇ 1X</p>	 <p>H₈ 1X</p>
 <p>J₁ 12X</p>	 <p>J₂ 4X</p>	 <p>J₃ 10X</p>	
 <p>K₁ 6X</p>	 <p>K₂ 6X</p>		
 <p>K₃ 6X</p>	 <p>L₁ 1X</p>		
 <p>L₂ 1X</p>	 <p>L₃ 1X</p>		

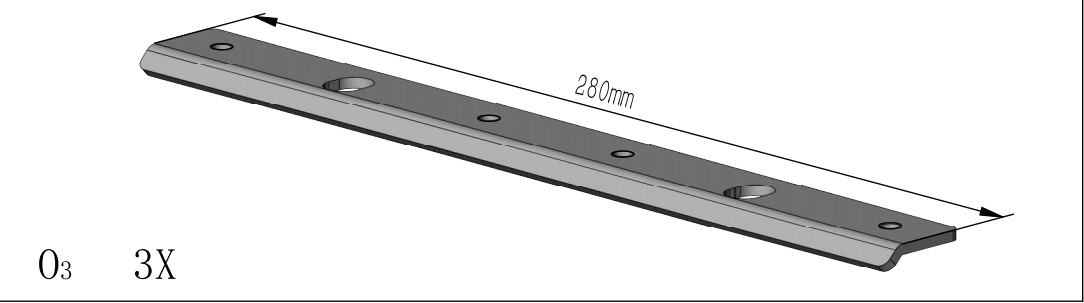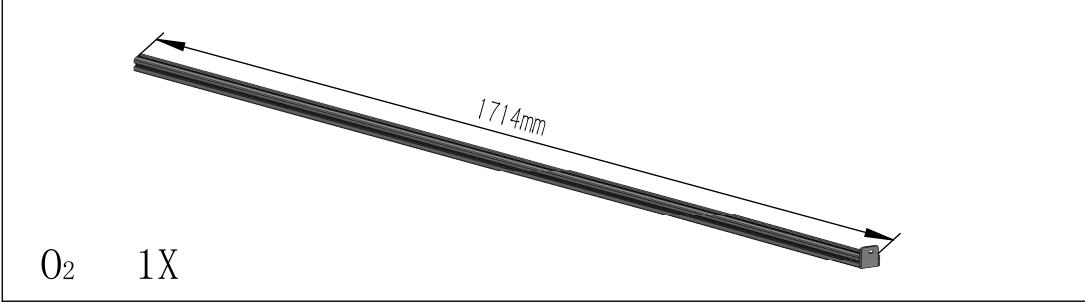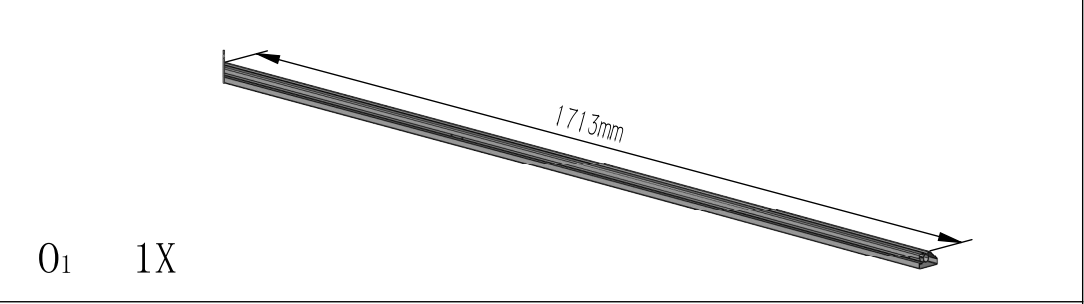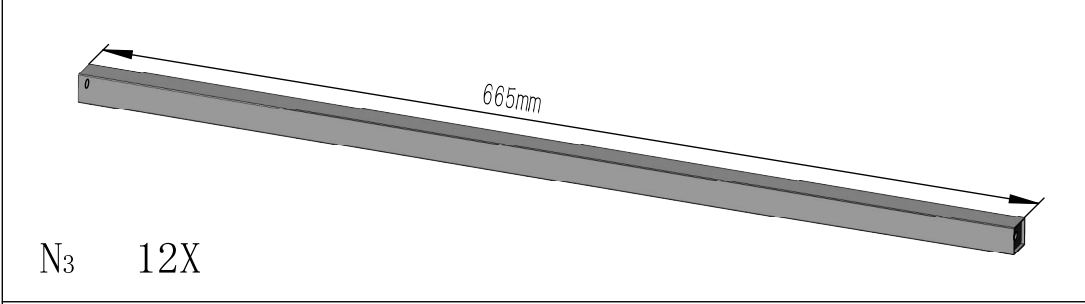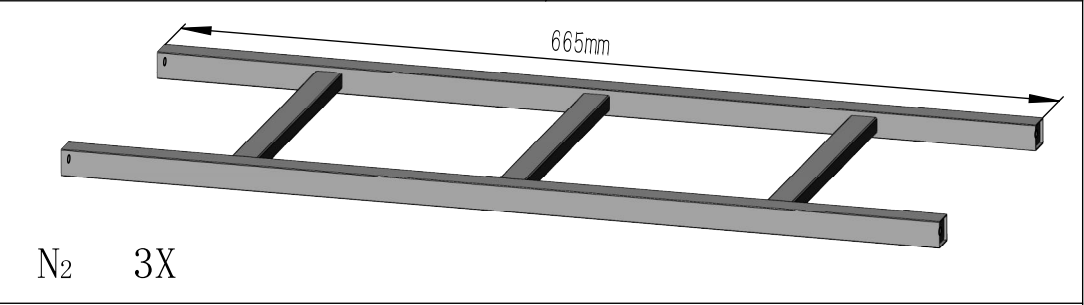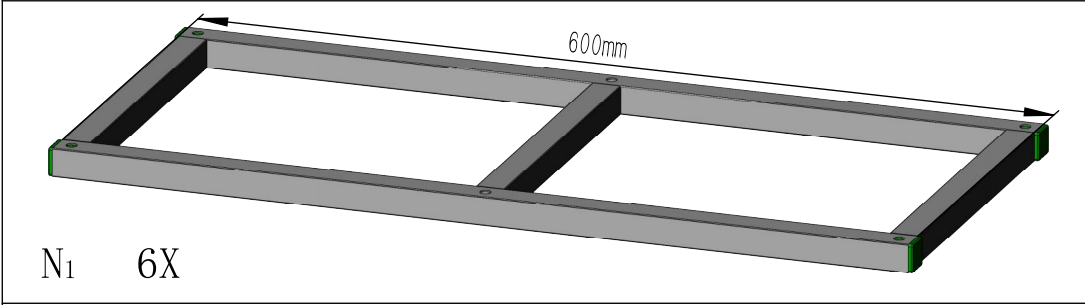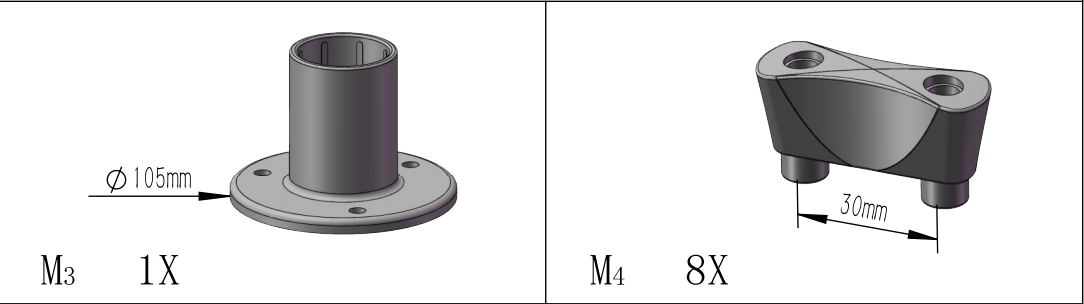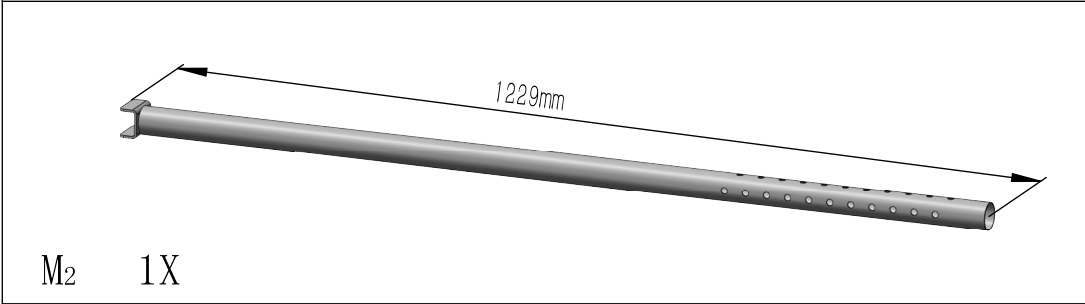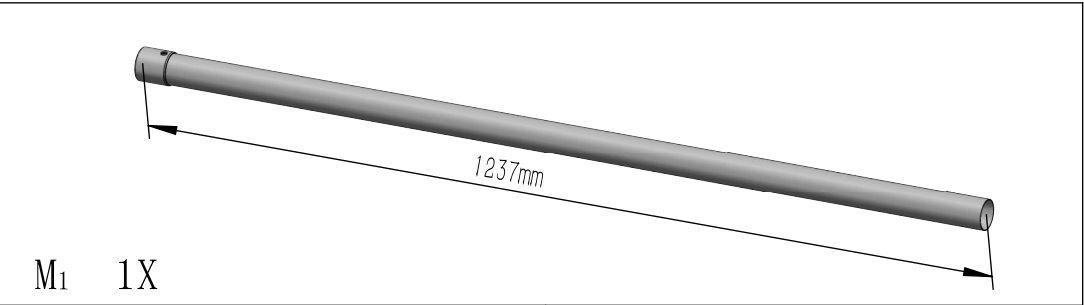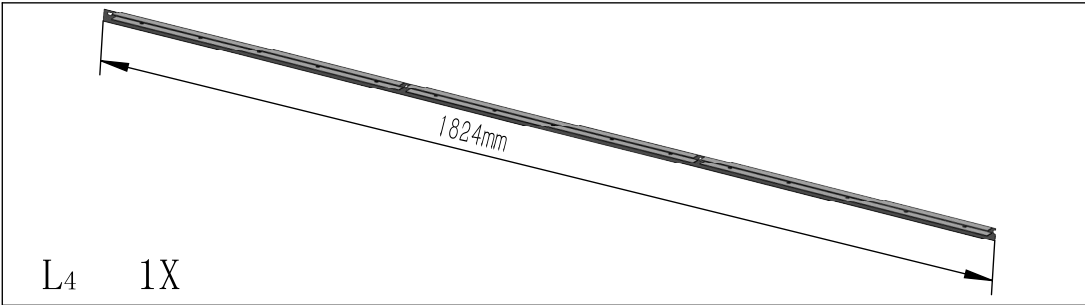

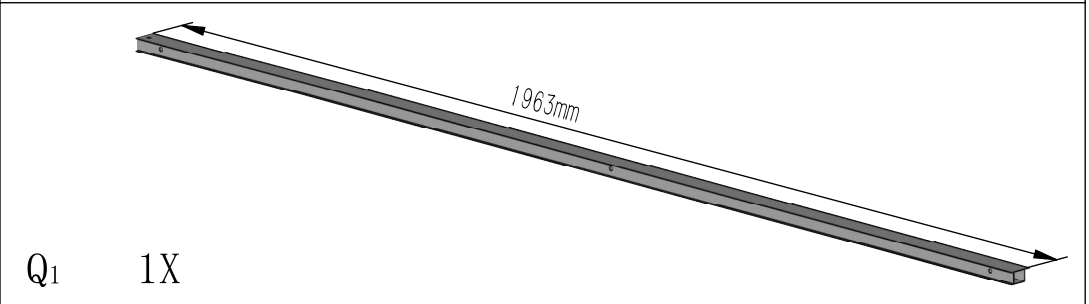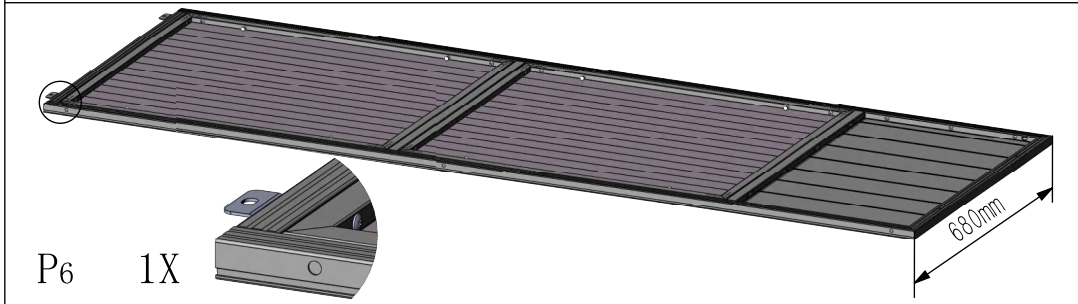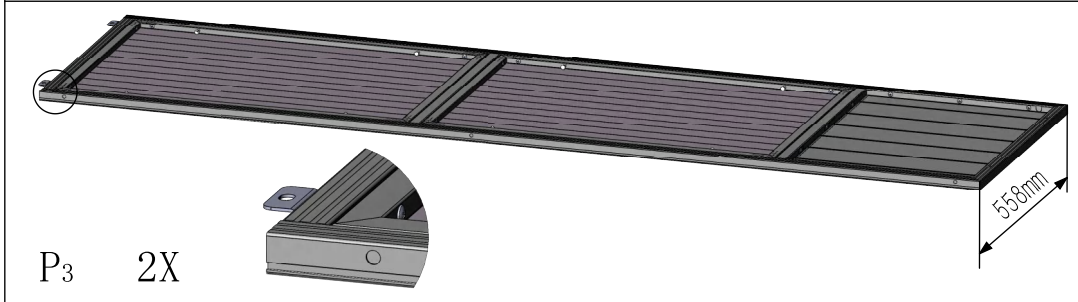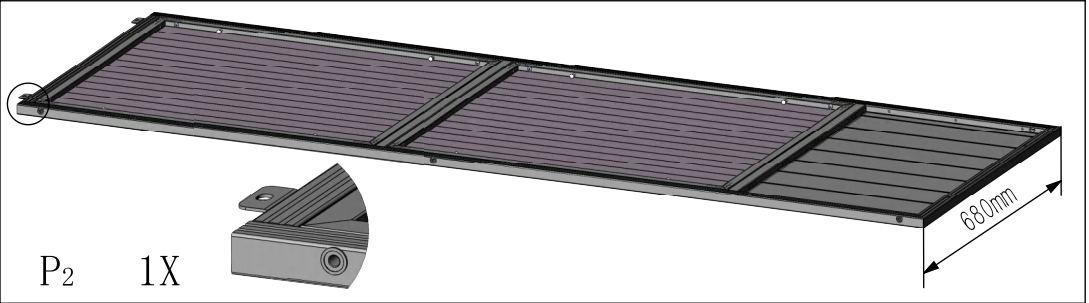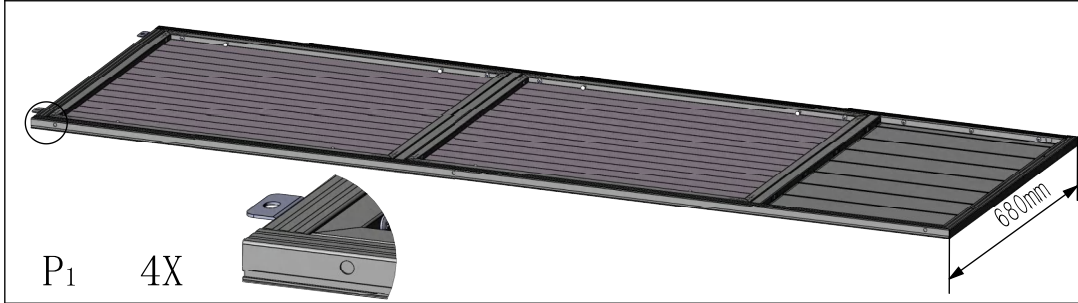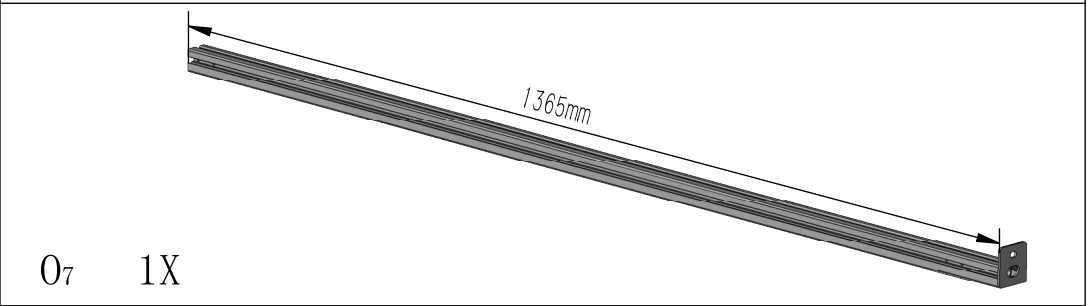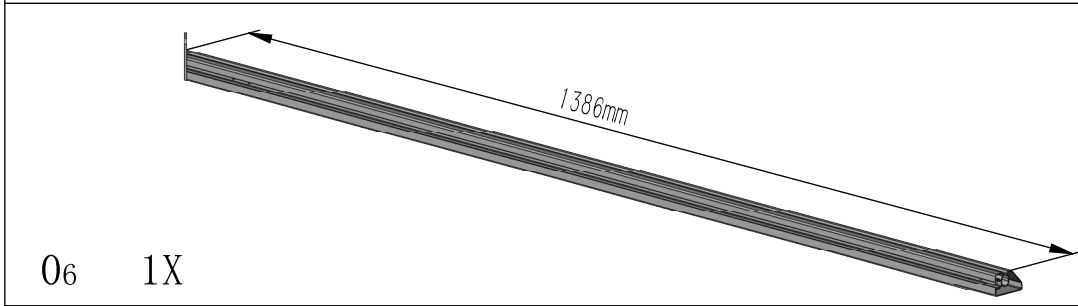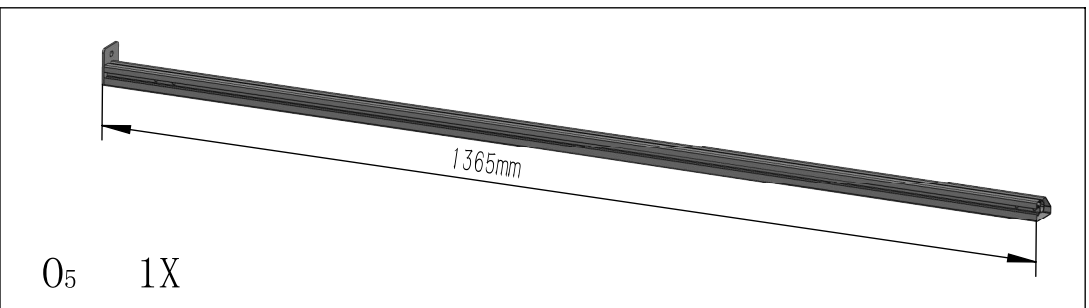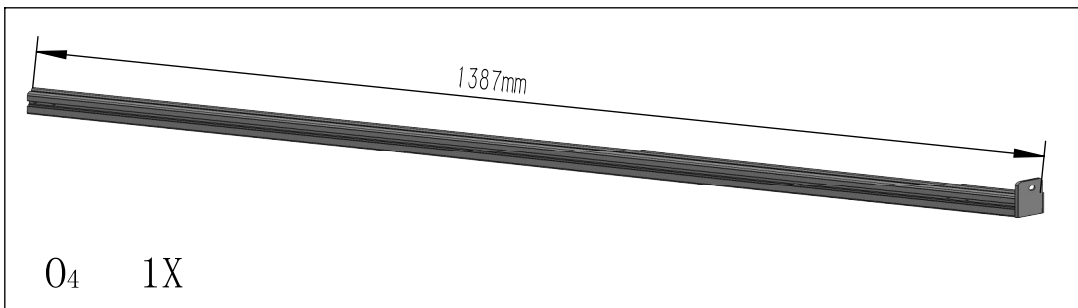


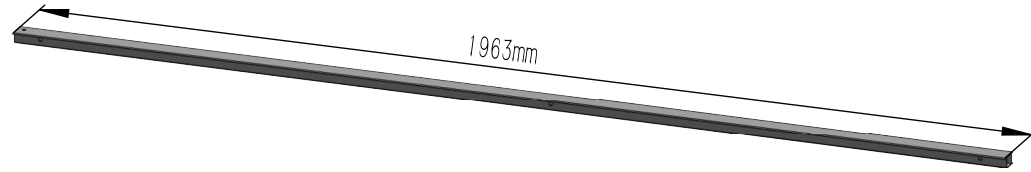


Q₂ 1X

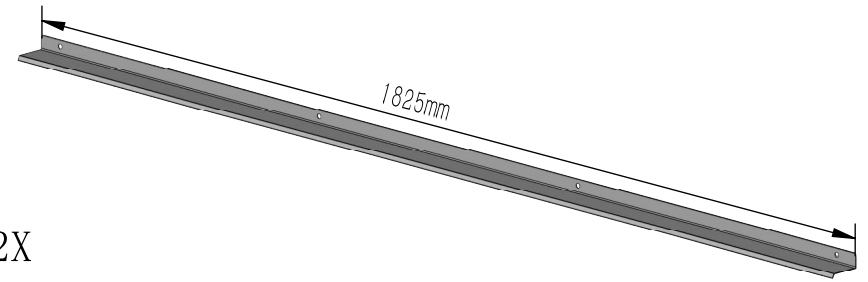


R₁ 2X

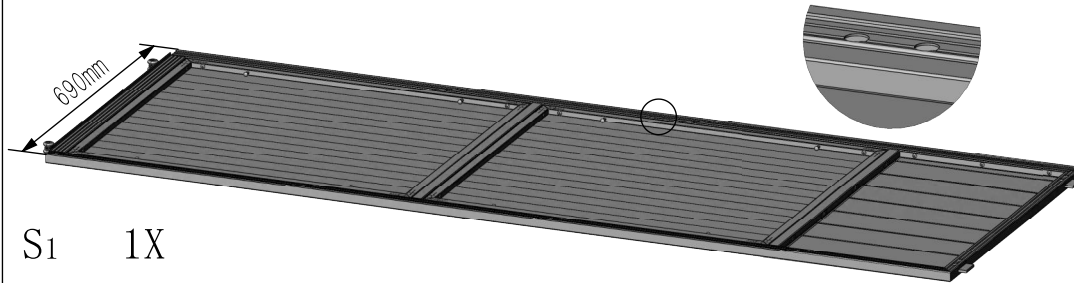


S₁ 1X

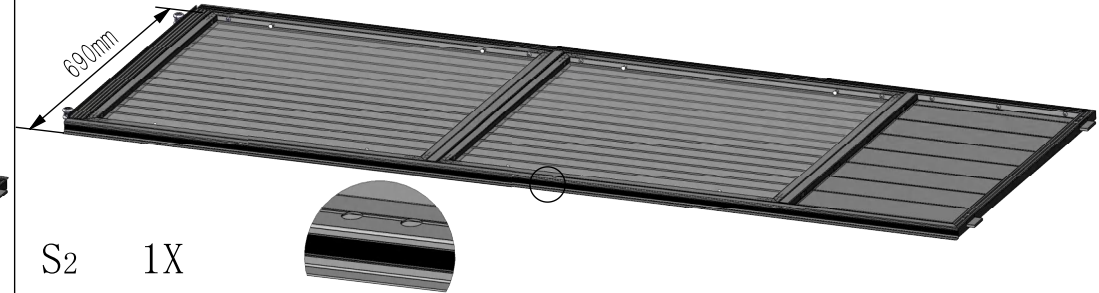


S₂ 1X

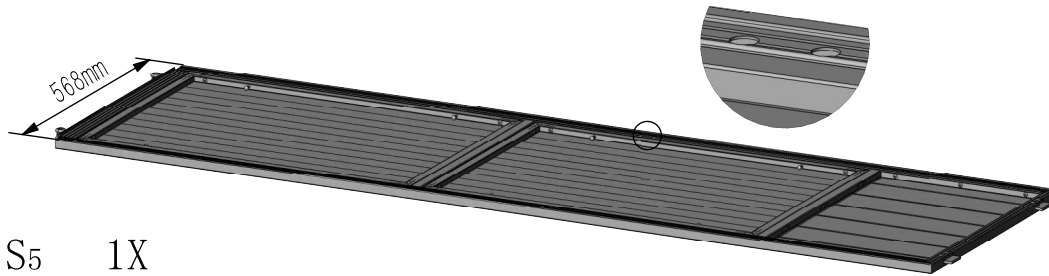


S₅ 1X

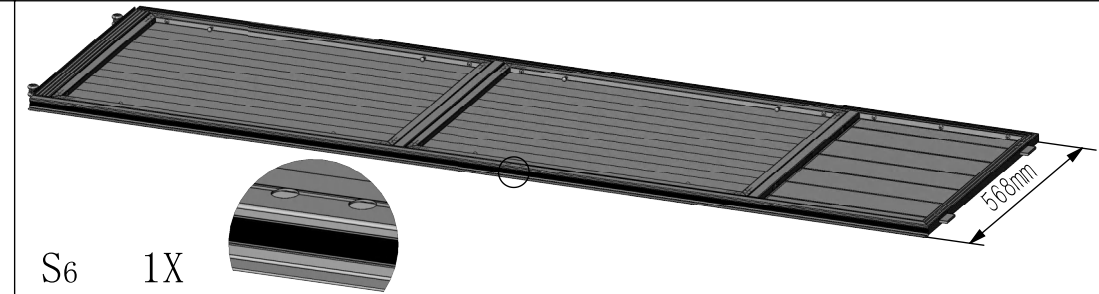


S₆ 1X

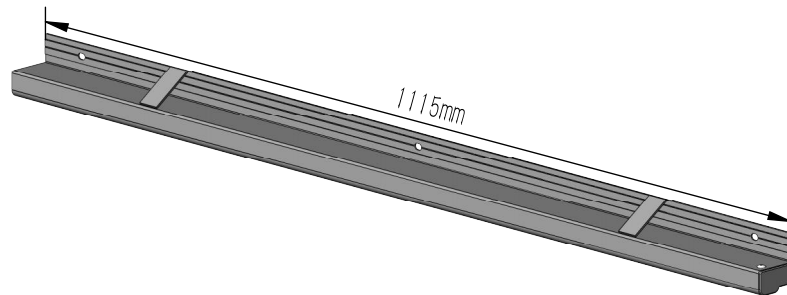


T₁ 1X

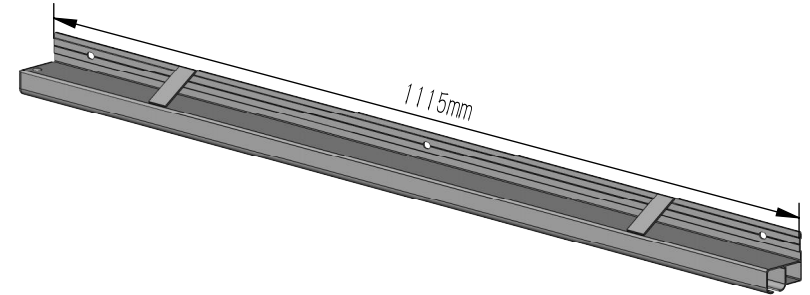













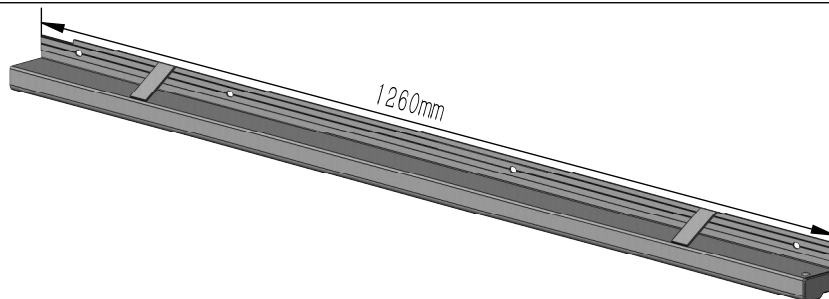


T₂ 1X





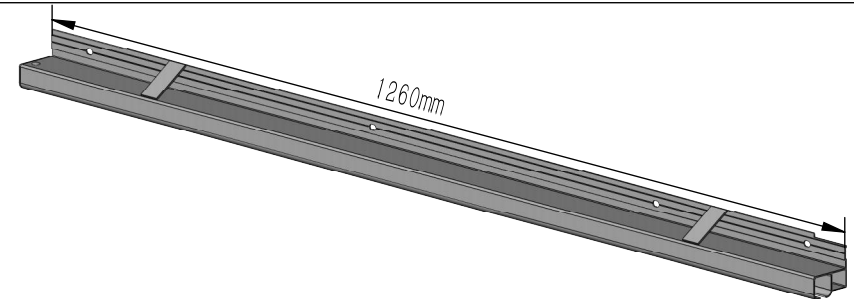

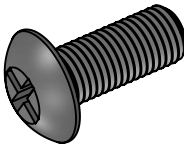

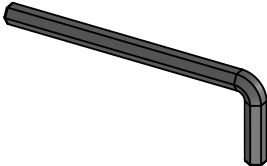

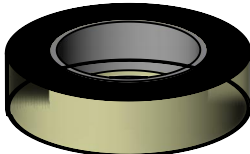



T₃ 1X

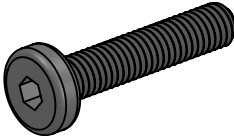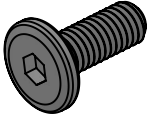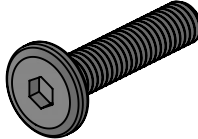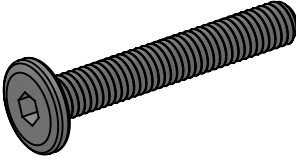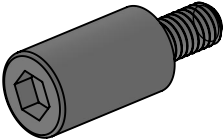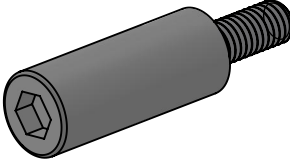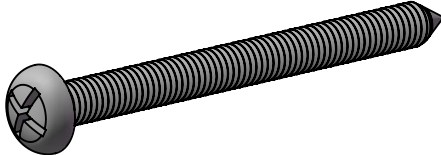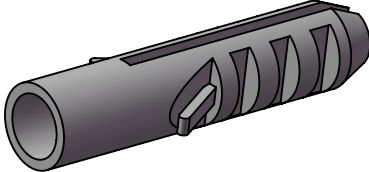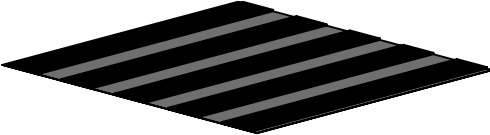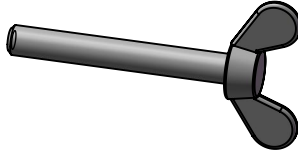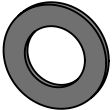

T₄ 1X


 <p>1# 6 ST4. 8*13</p>	 <p>2# 1 M5*12</p>	 <p>3# 36 M6*30</p>
 <p>4# 360 M6*16</p>	 <p>5# 22 M6*28</p>	 <p>6# 14 M6*40</p>
 <p>7# 2 M6*12 (L20)</p>	 <p>8# 6 M6*15 (L30)</p>	 <p>9# 14 ST6*70</p>
 <p>10# 14</p>	 <p>11# 1 Waterproof Tape</p>	 <p>12# 1 M8*60</p>
 <p>13# 1 M8</p>	 <p>14# 1 M8</p>	 <p>15# 1 Silicone Sealant</p>

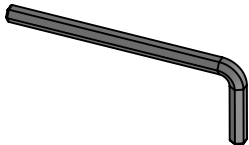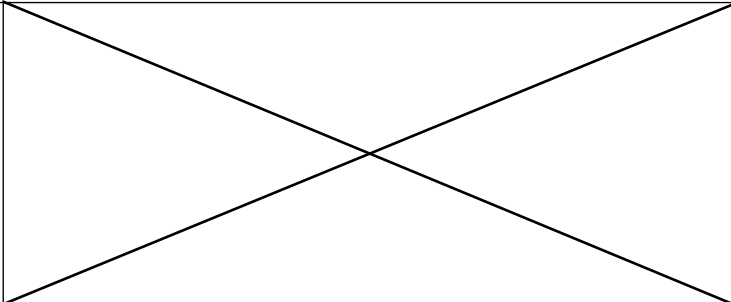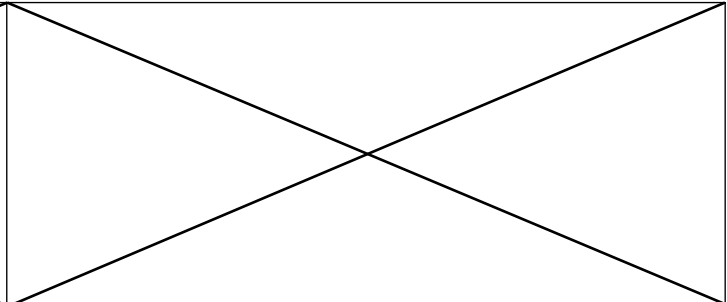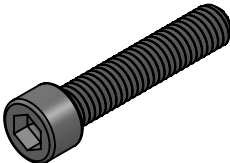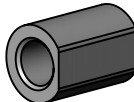16#	1		S4									
19#	33		M6*30	20#	33		21#	16				
22#	16		M4*10	23#	8		M4	24#	22	Metal Square Nuts	M6	
25#	1		S5	26#	6		27#				2	D18/d6
28#	1		Anti-Dust Tape									

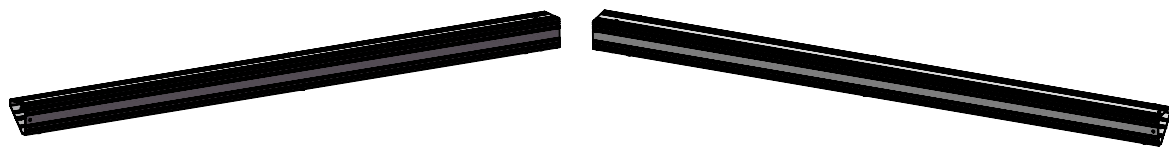


A1 1X

A2 1X

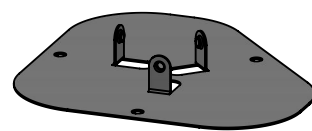


A7 2X

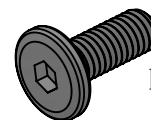


M6*16

4# 6X

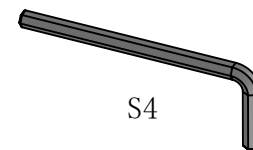


S4

16# 1X

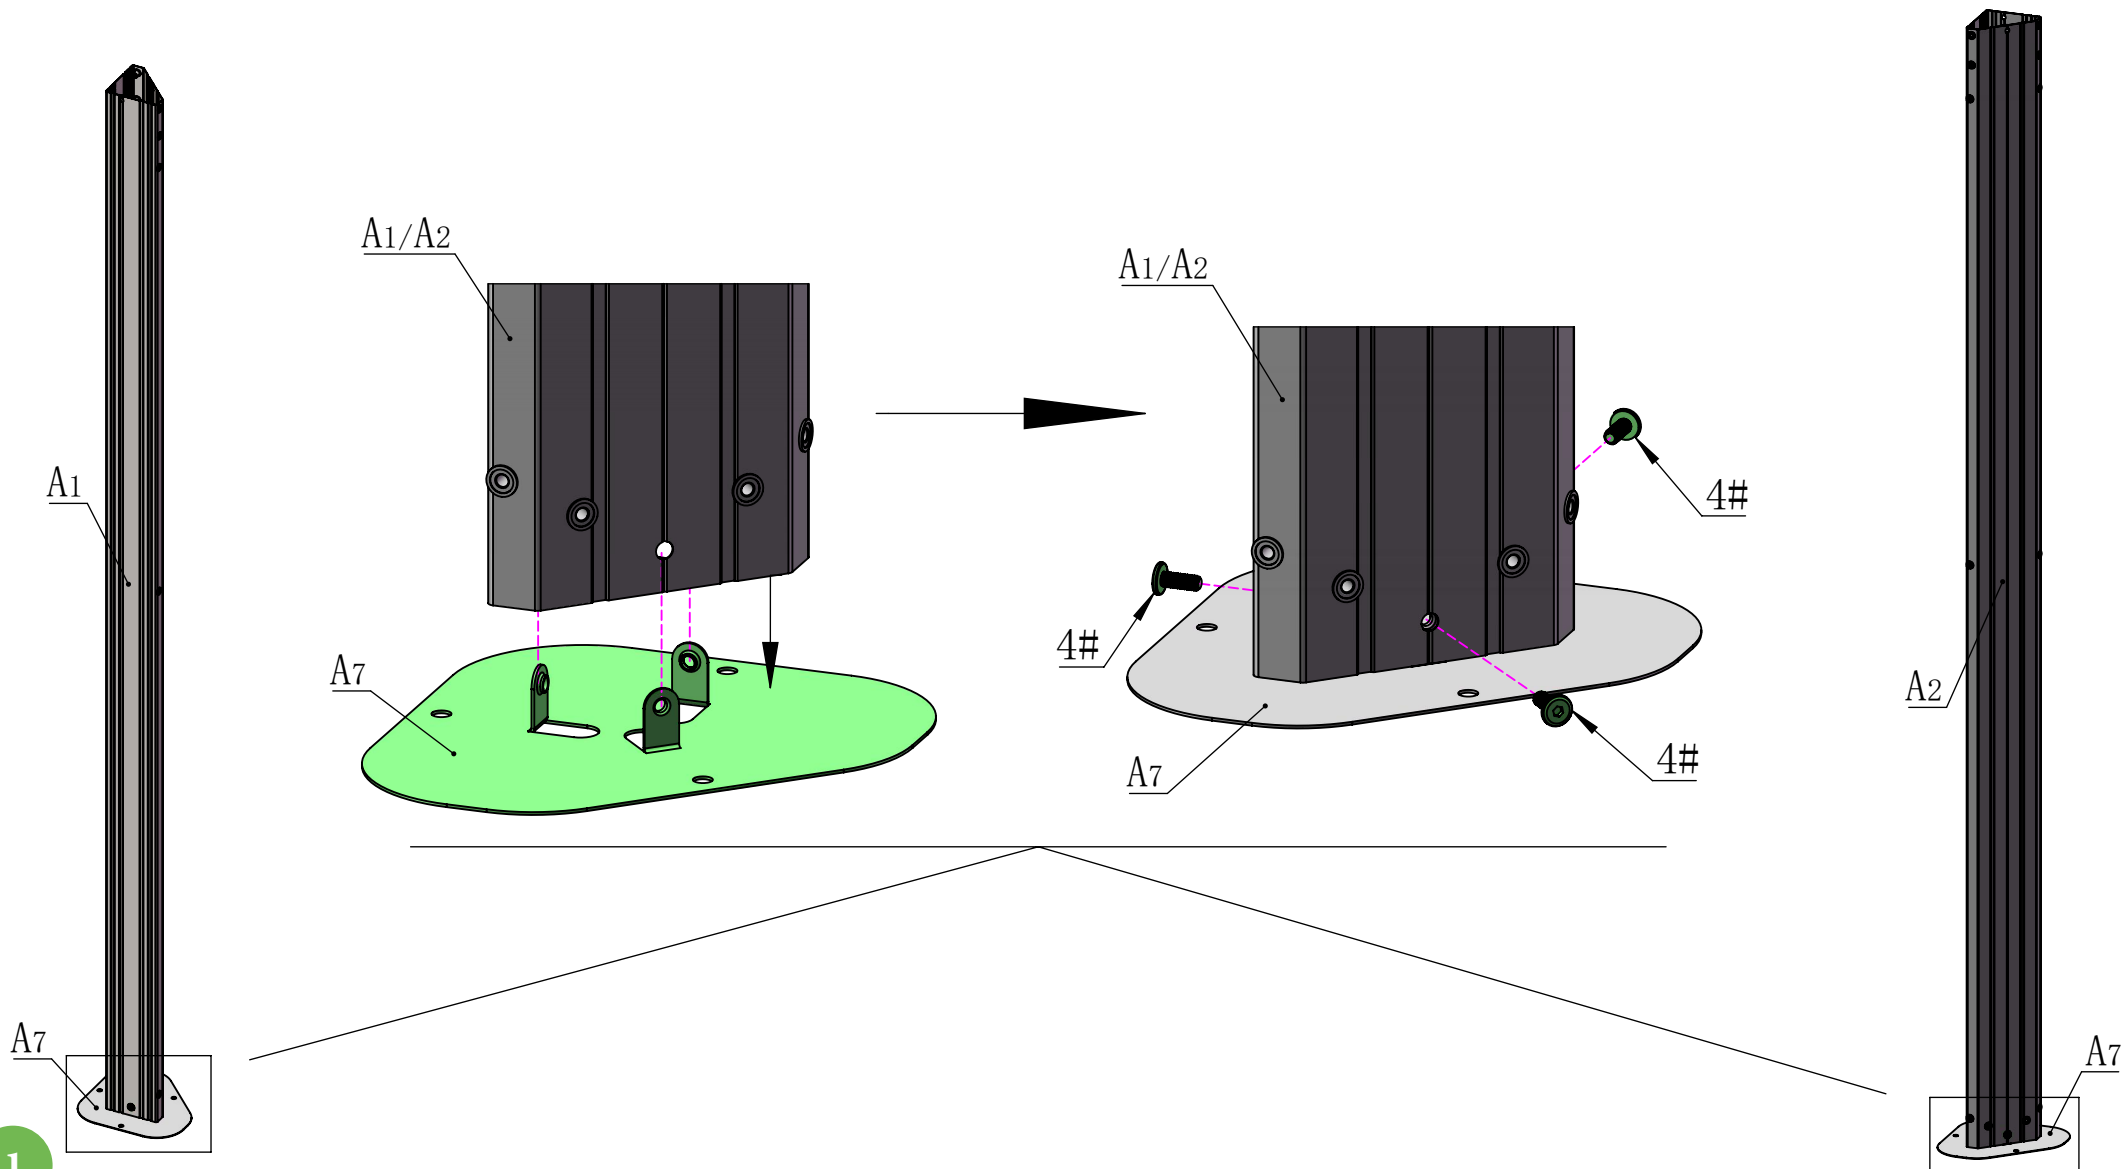




A3 1X



A4 1X

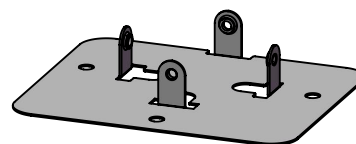


A8 2X







M6*16


4# 8X

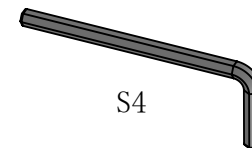


S4

16# 1X

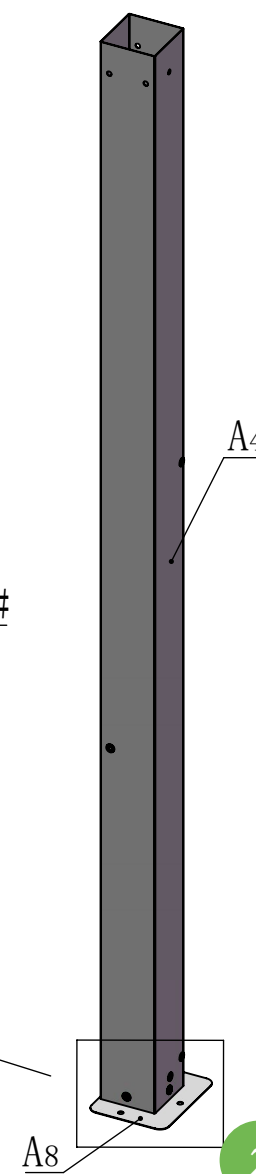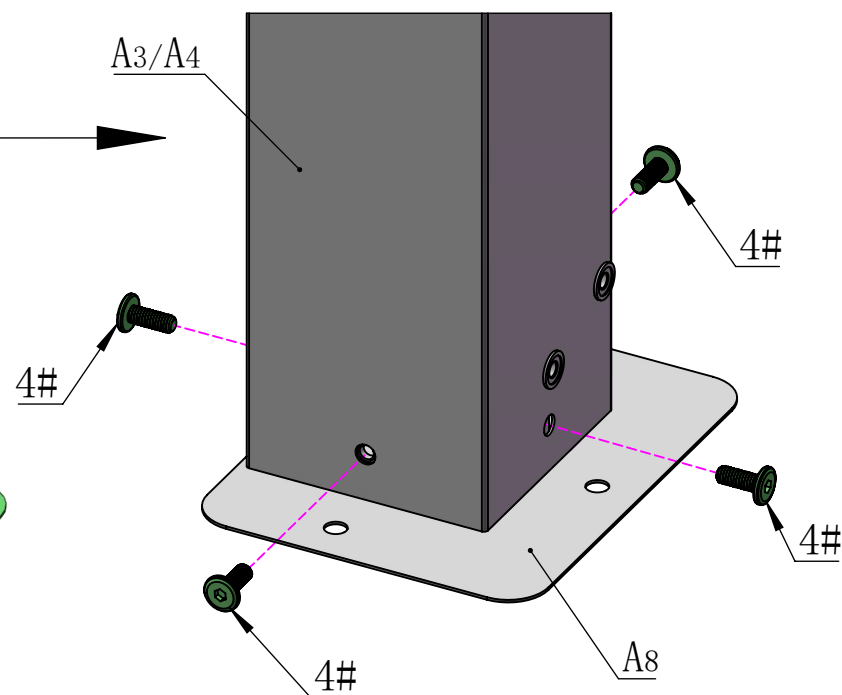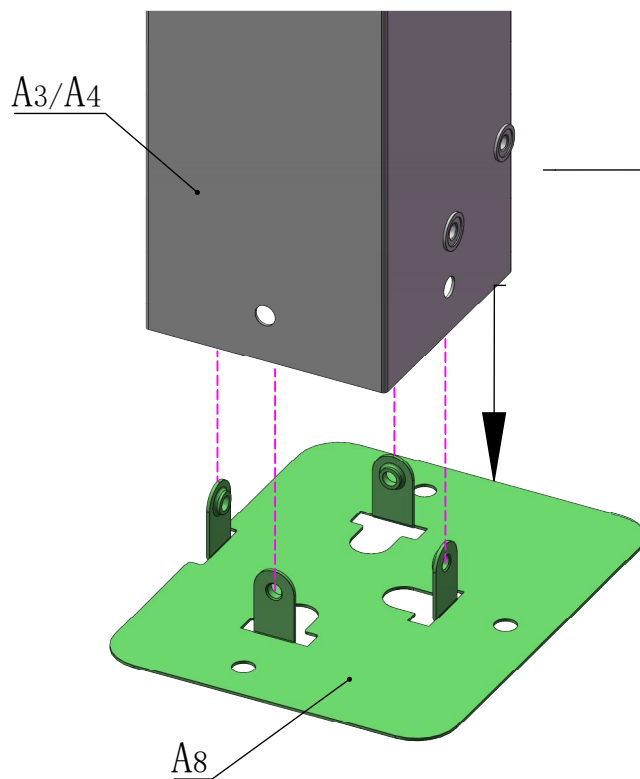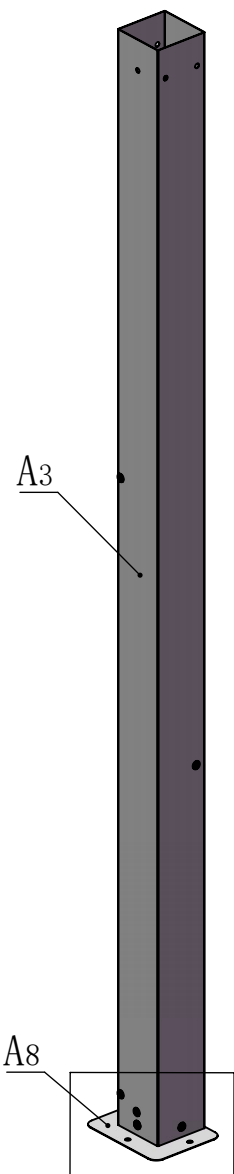


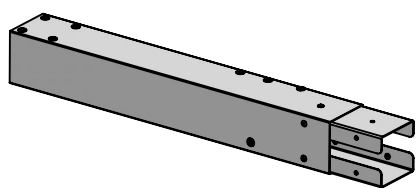

A5 1X

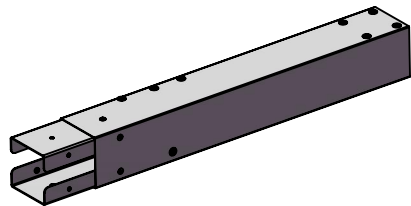


A6 1X

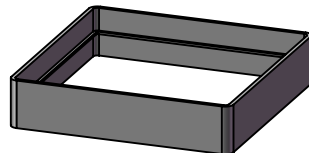


A9 2X




4# 12X

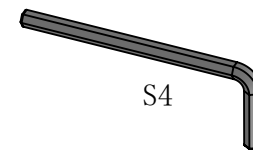


16# 1X

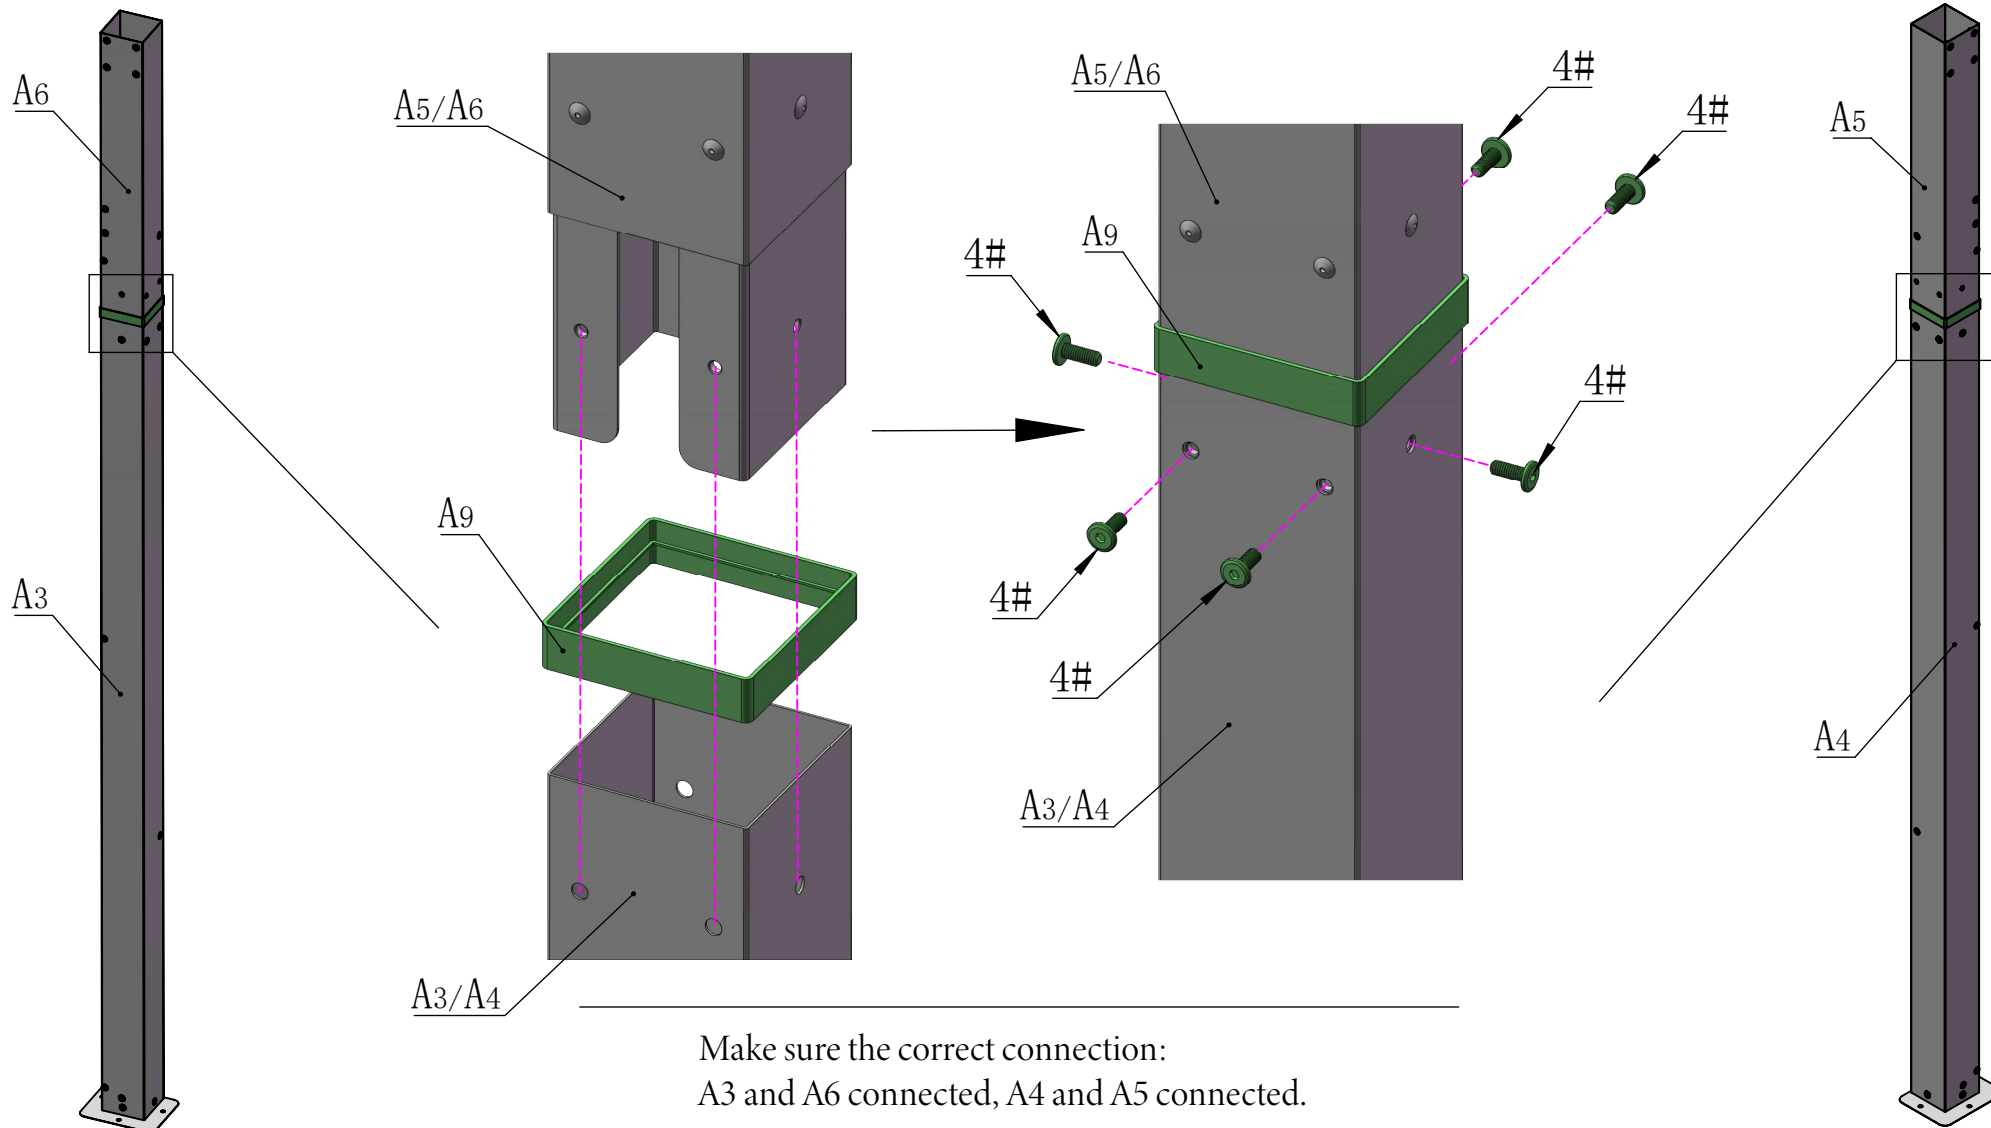

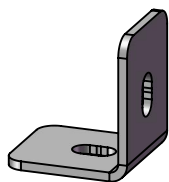


A10 4X



M6*16




4# 4X

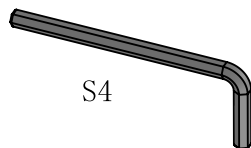


S4


16# 1X

The bracket #A10 is used to fix the post against the wall. If you don't need it fixed, please retain for future use and skip this step.

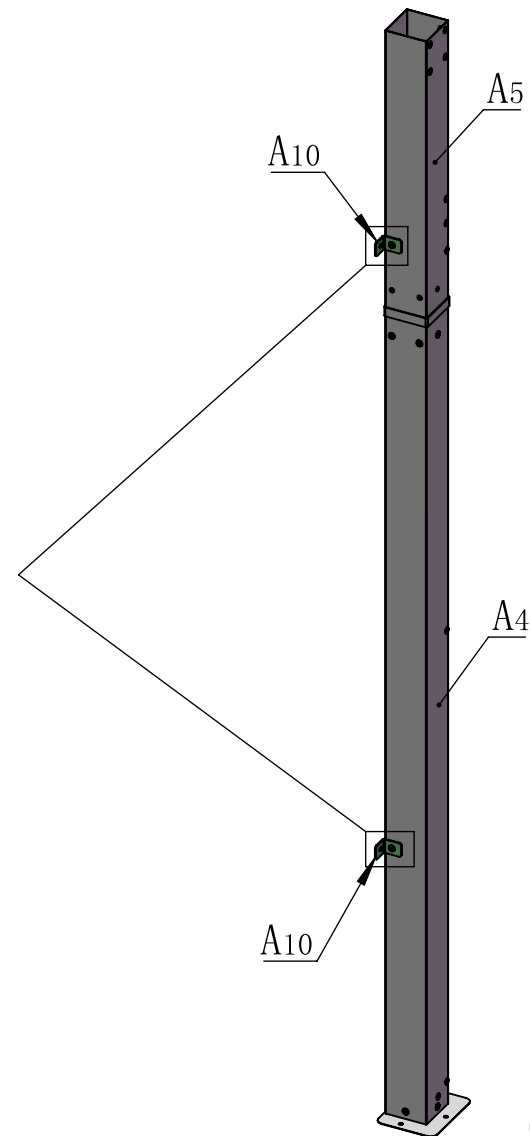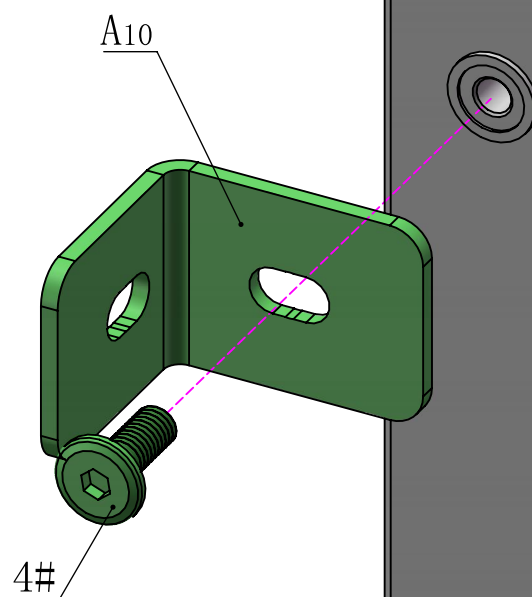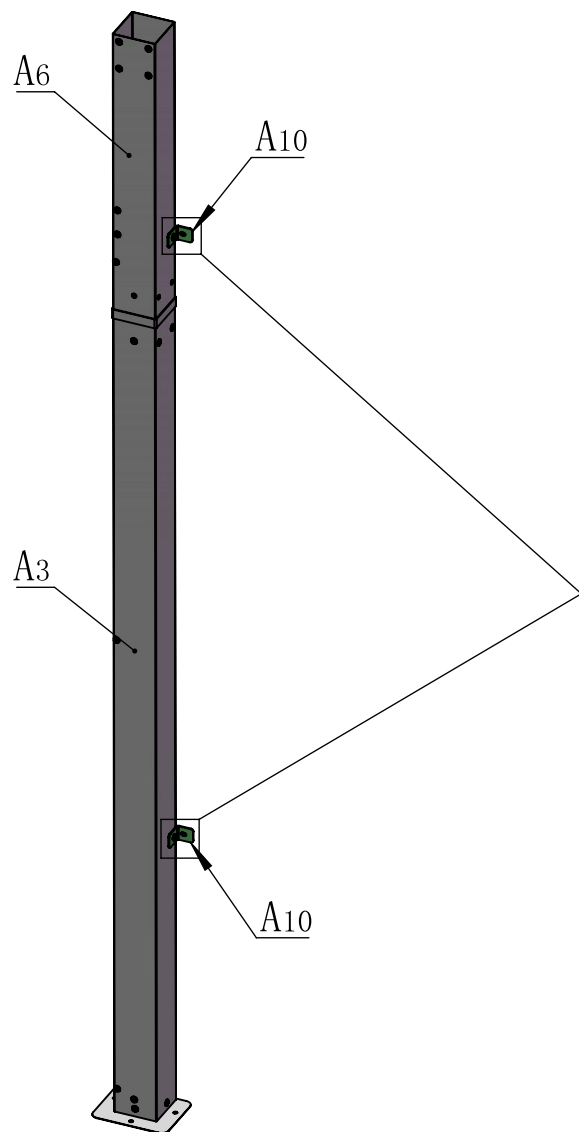


Front Beam Assembly

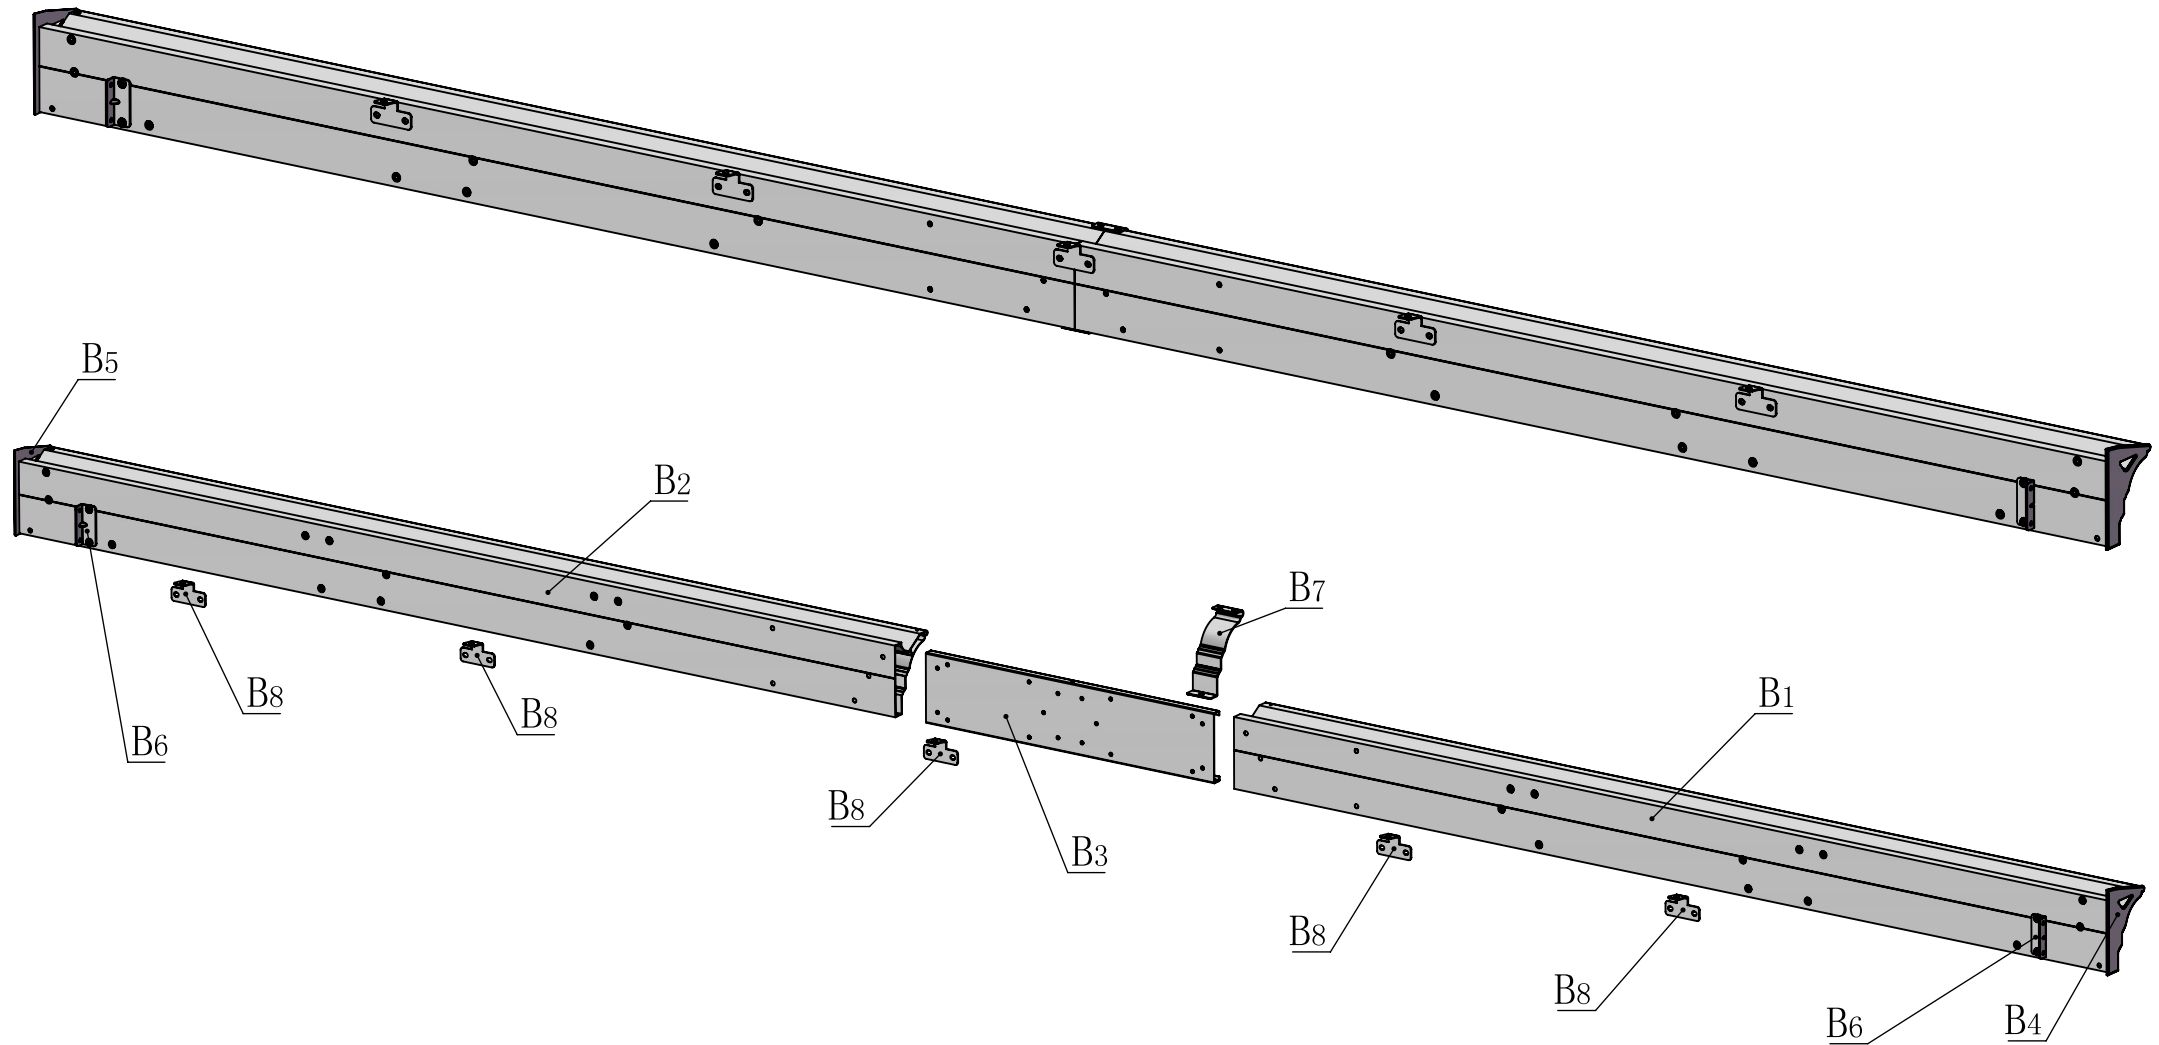

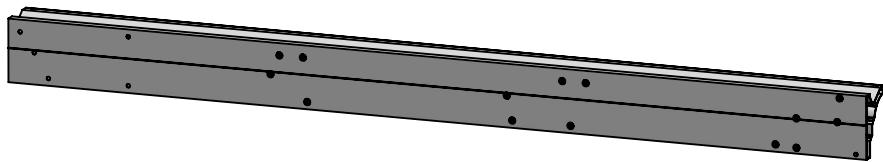

B1 1X


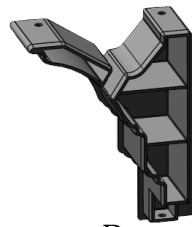



B4 1X



ST4. 8*13

1# 2X

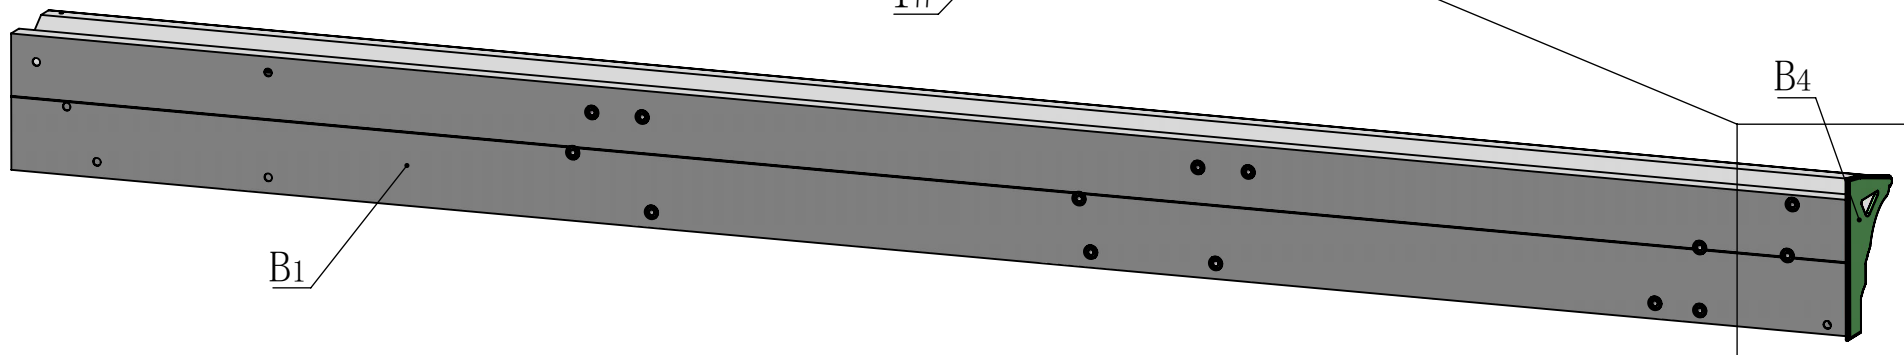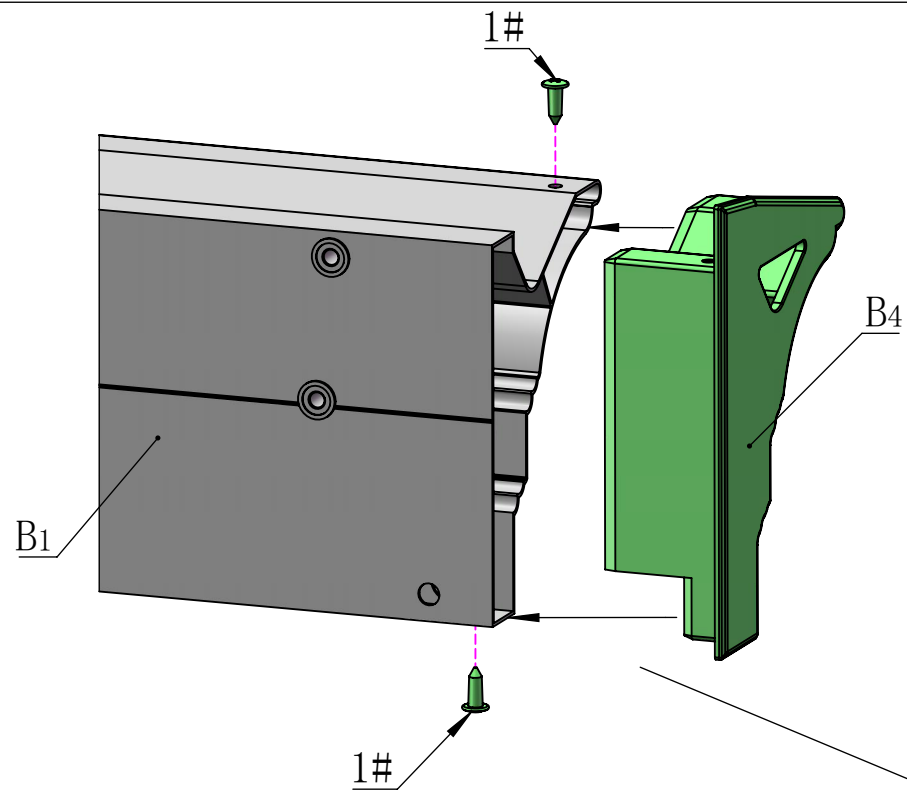

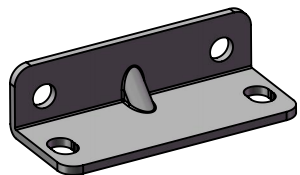


B6 1X




M6*16


4# 2X

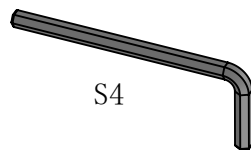


S4

16# 1X

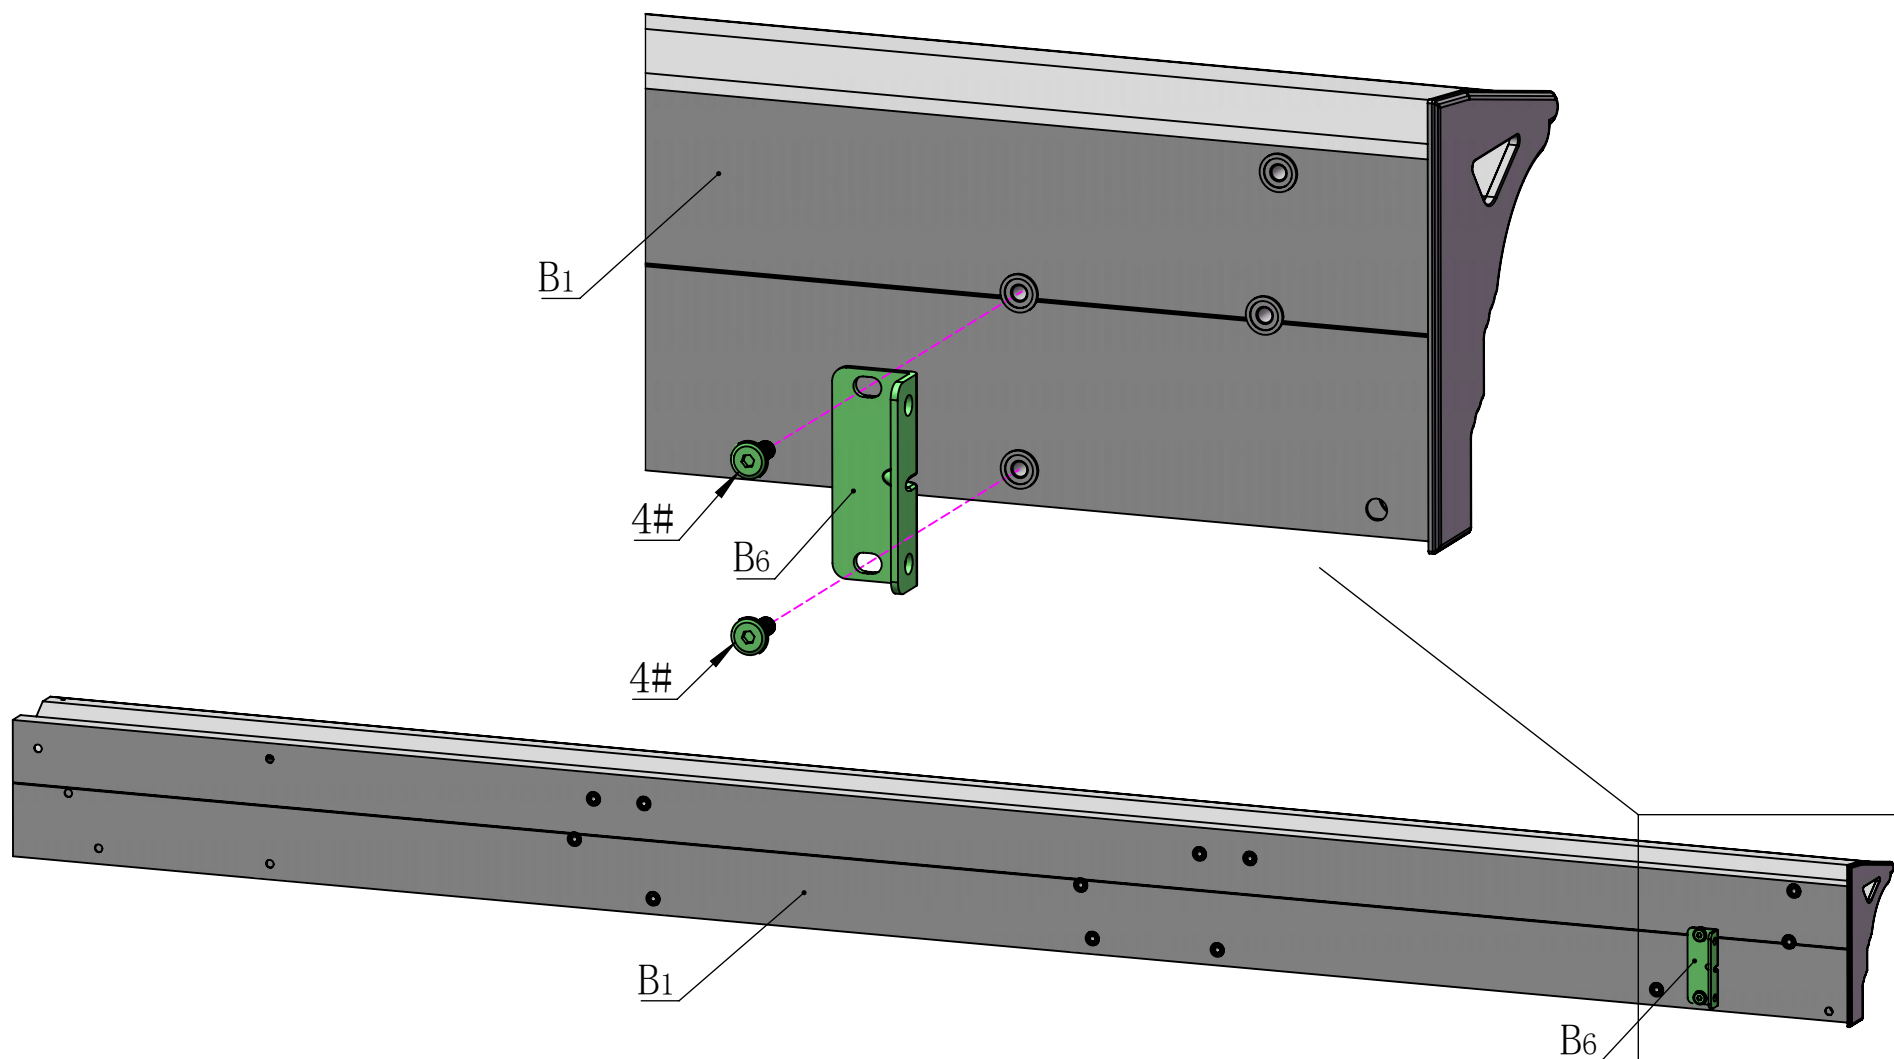

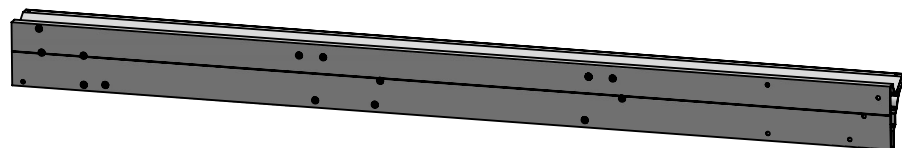

B2 1X

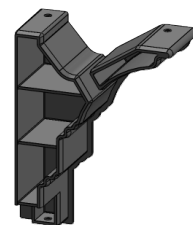



B5 1X




ST4. 8*13

1# 2X

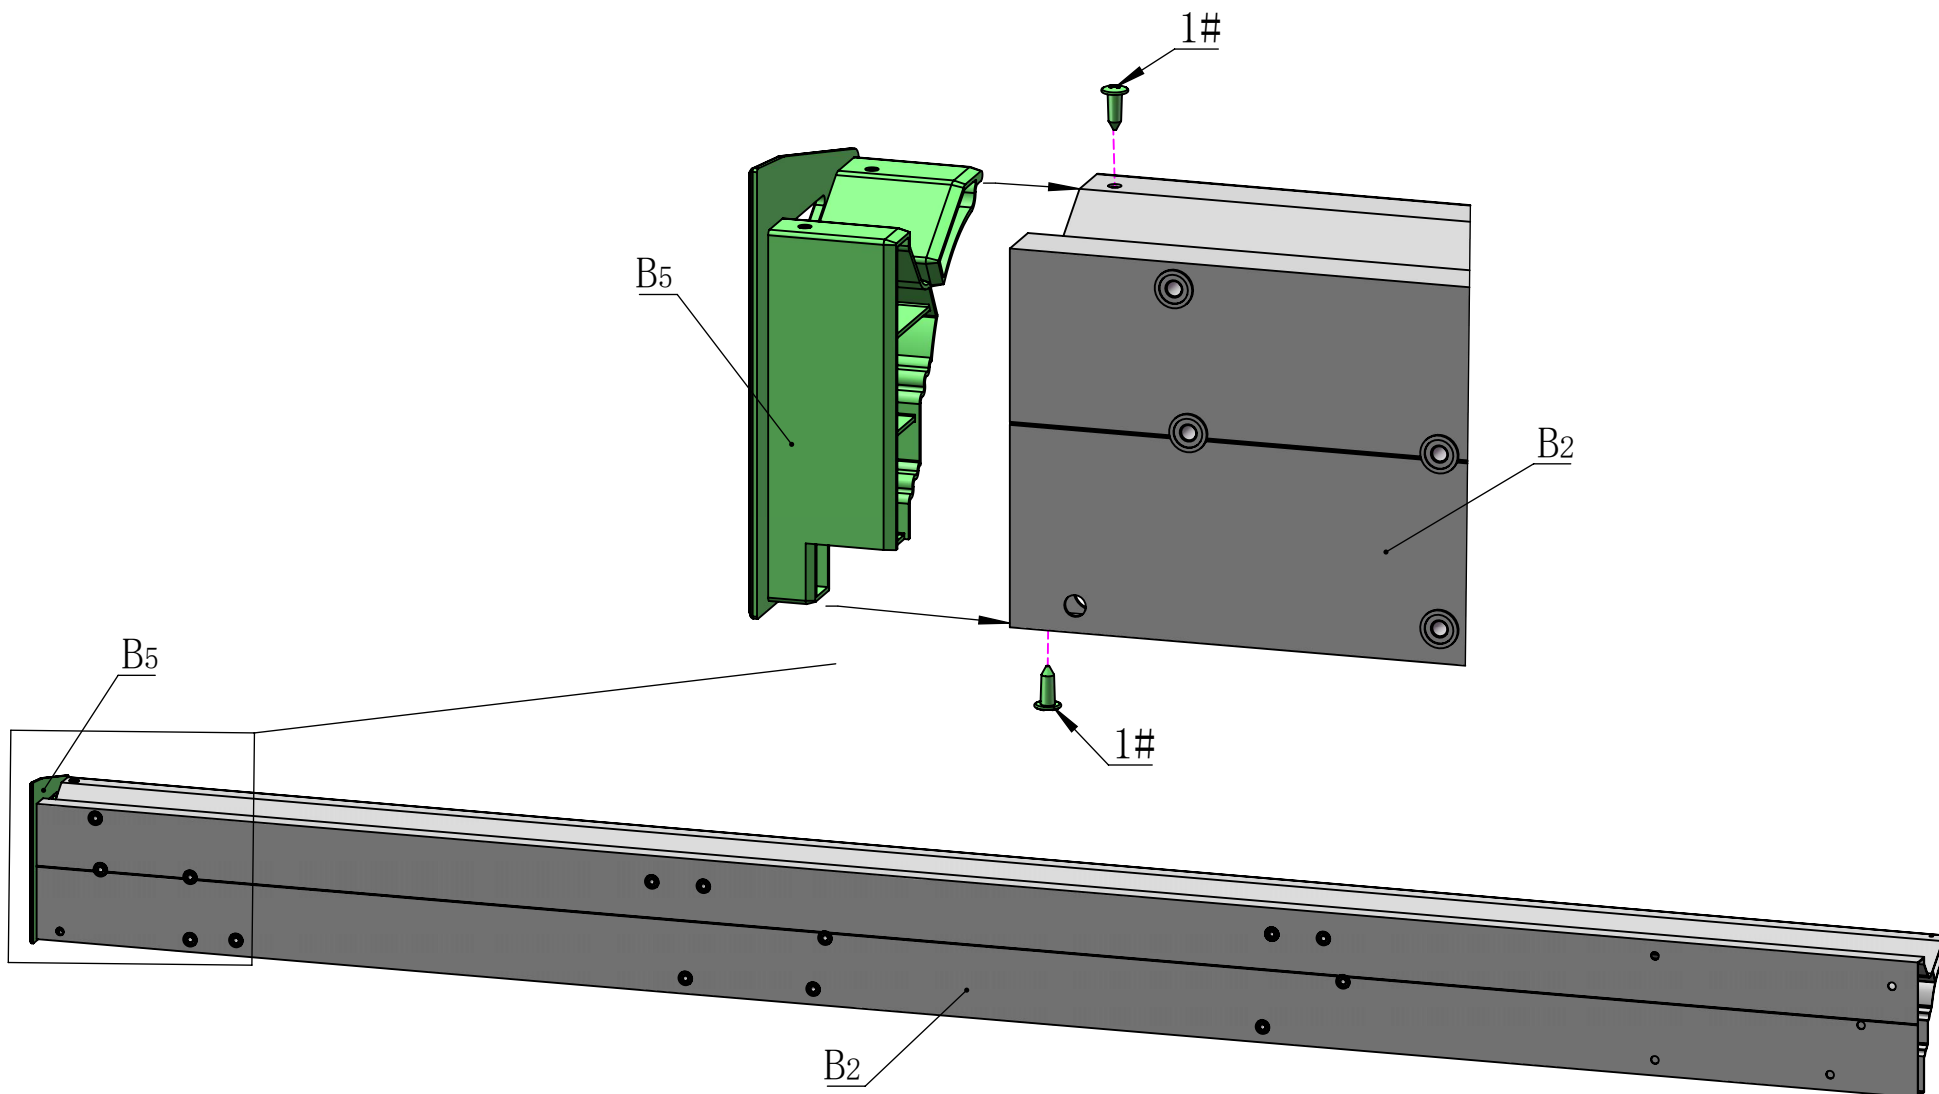

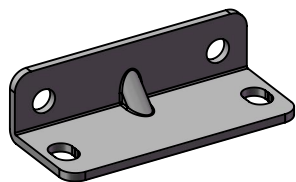


B6 1X

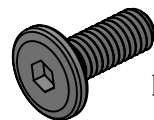


M6*16


4# 2X

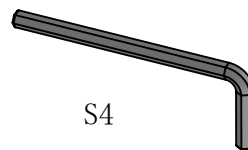

S4

16# 1X

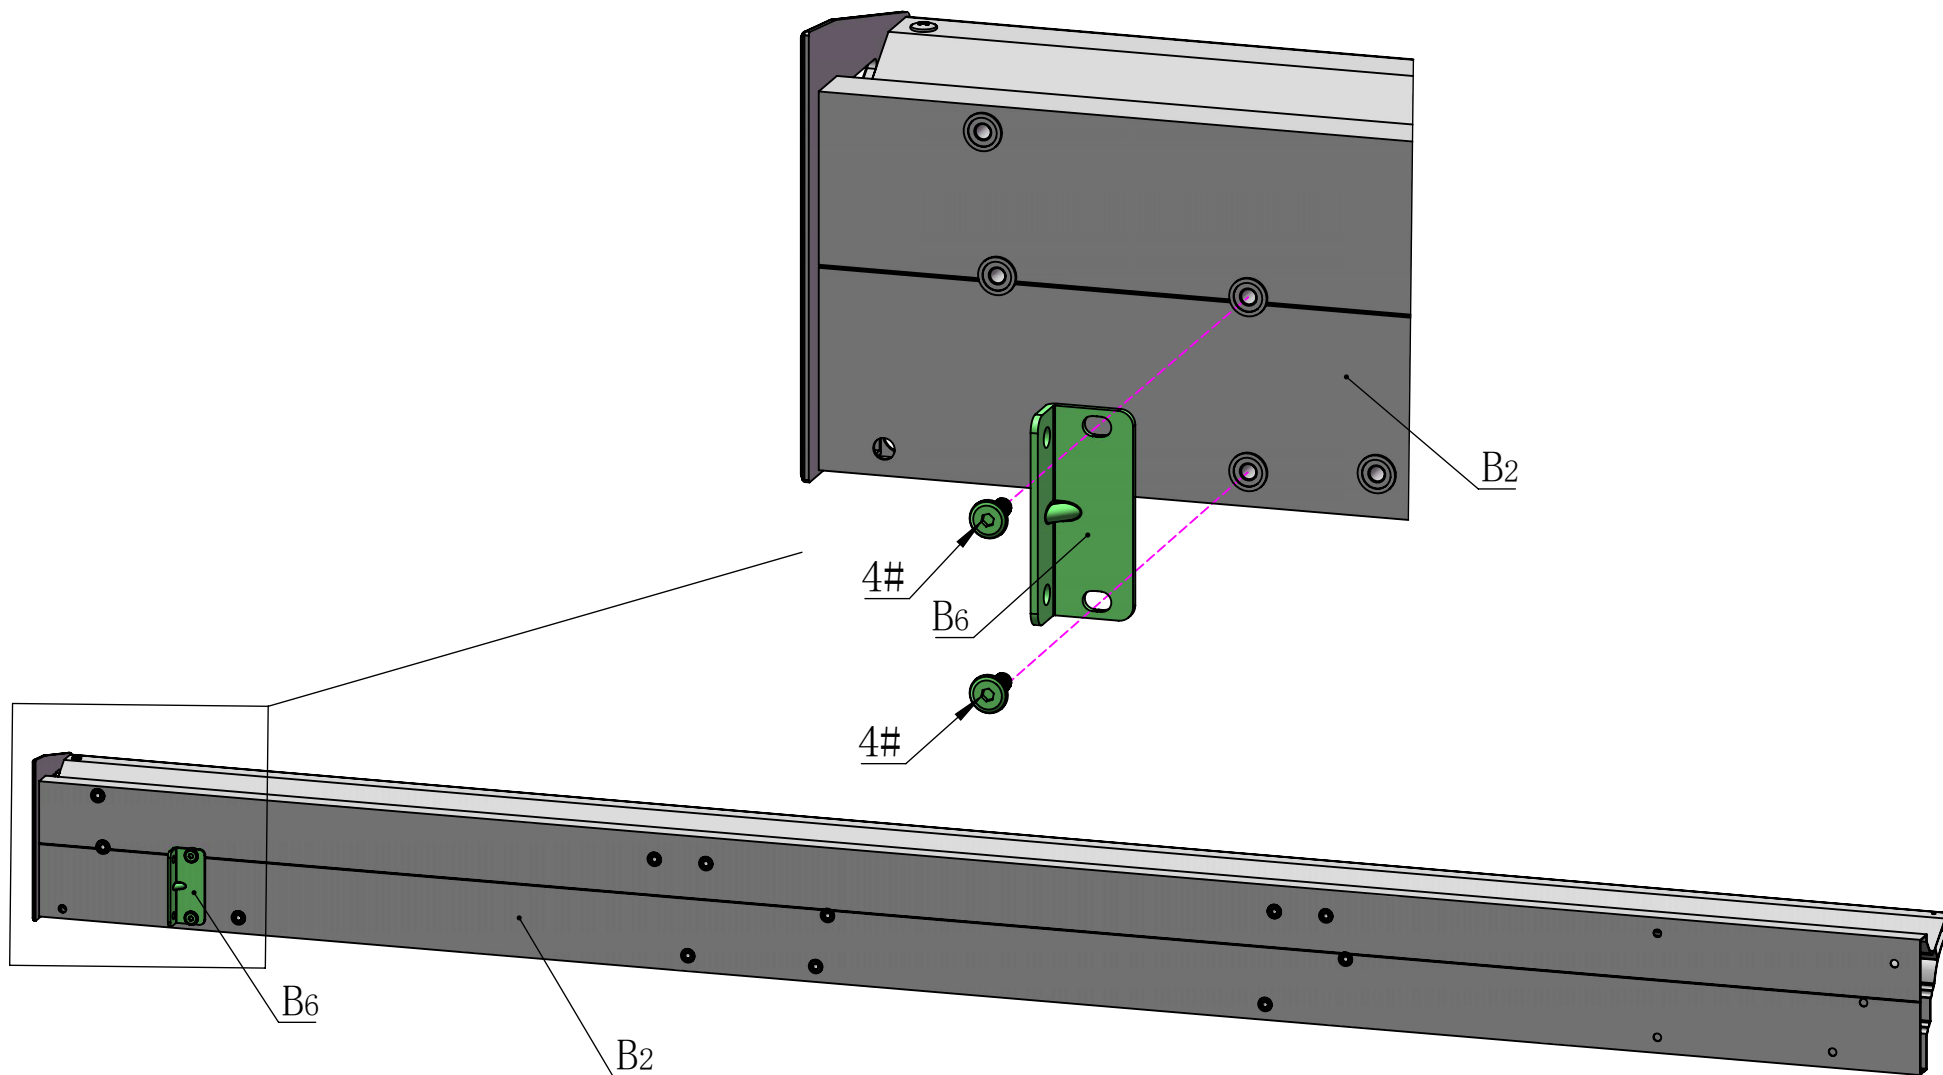

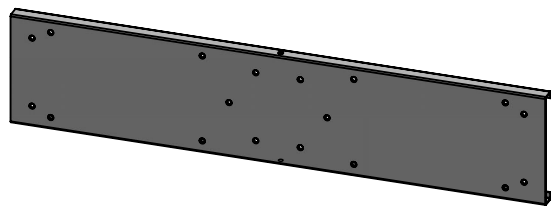


B3 1X




M6*16


4# 6X

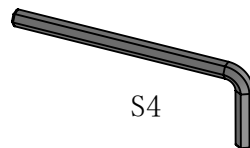

S4


16# 1X

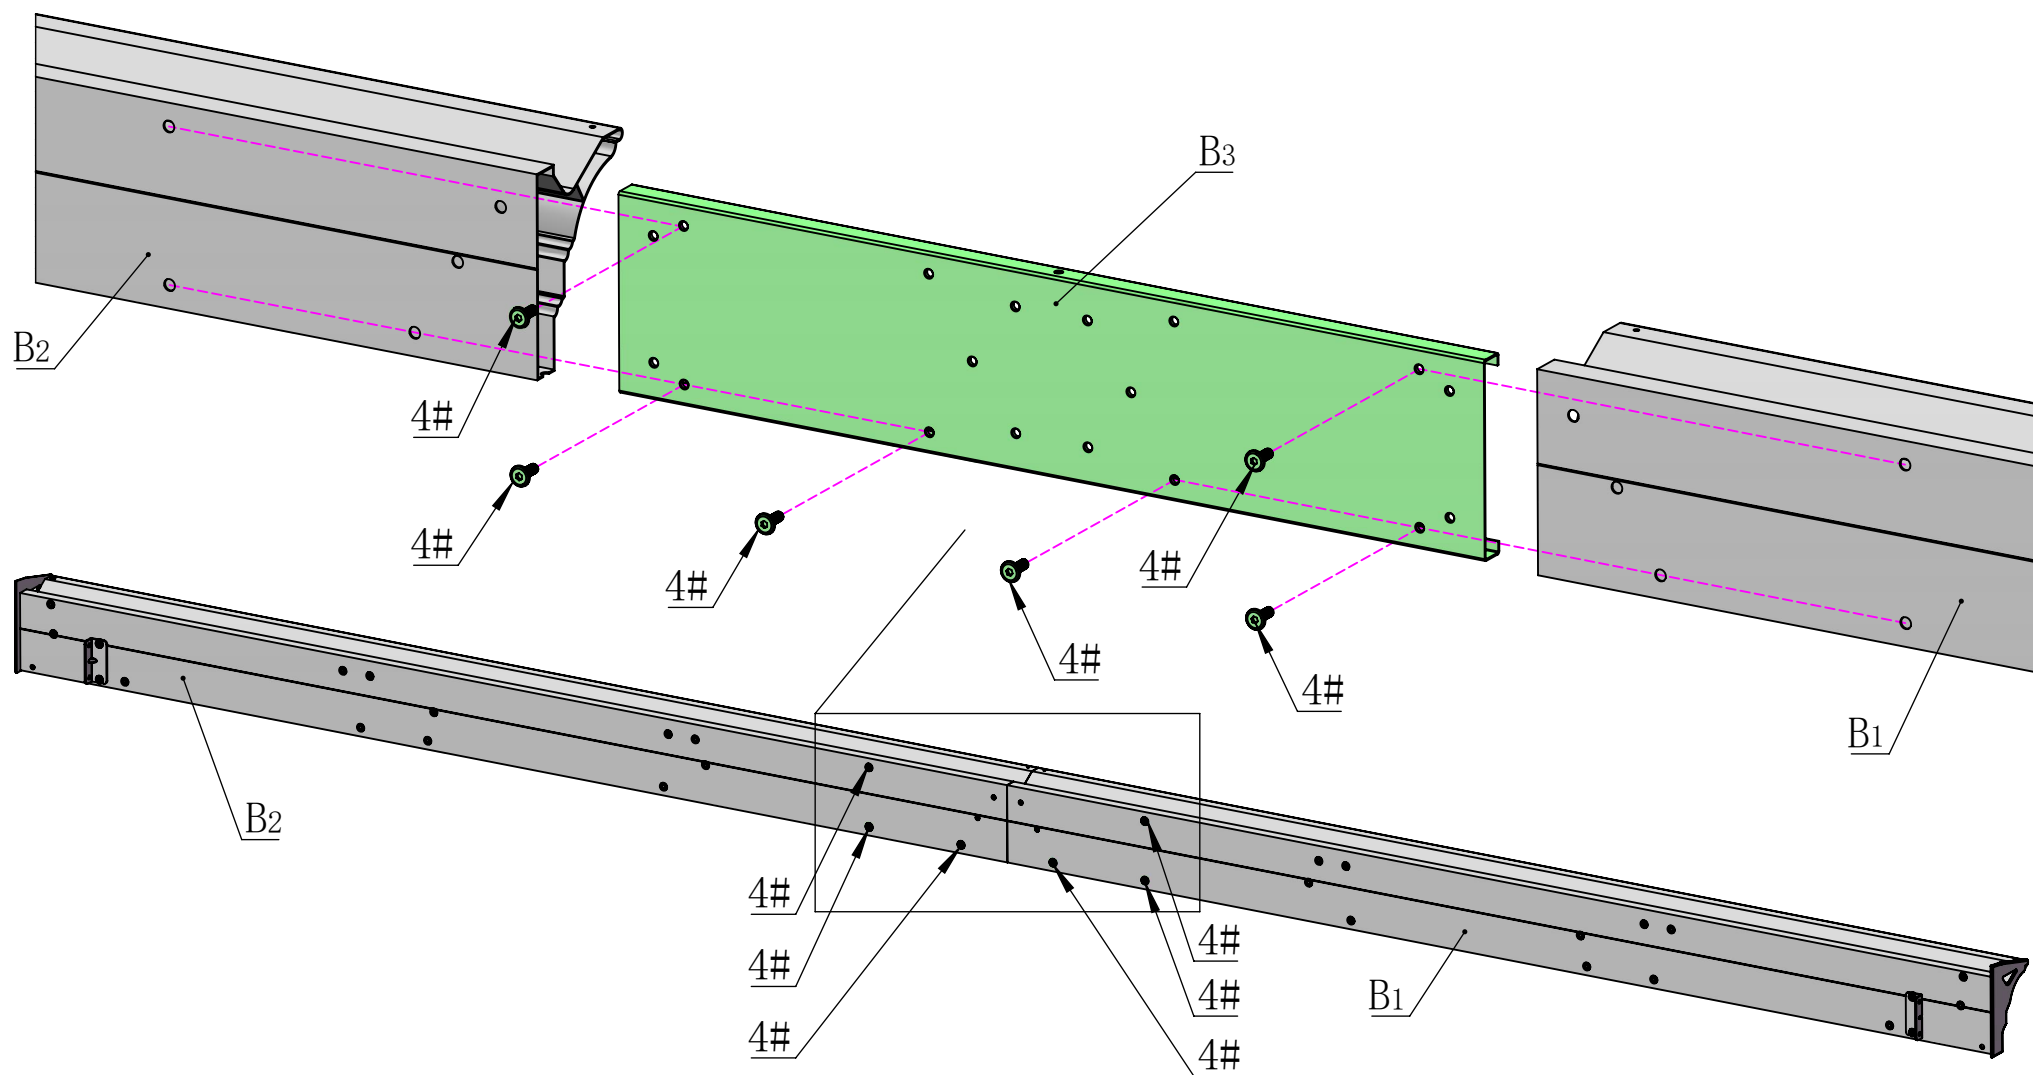

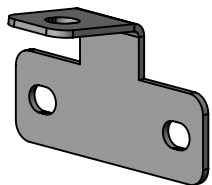

B8


5X

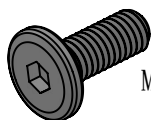

4#

M6*16


10X

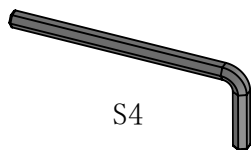


S4

16#


1X

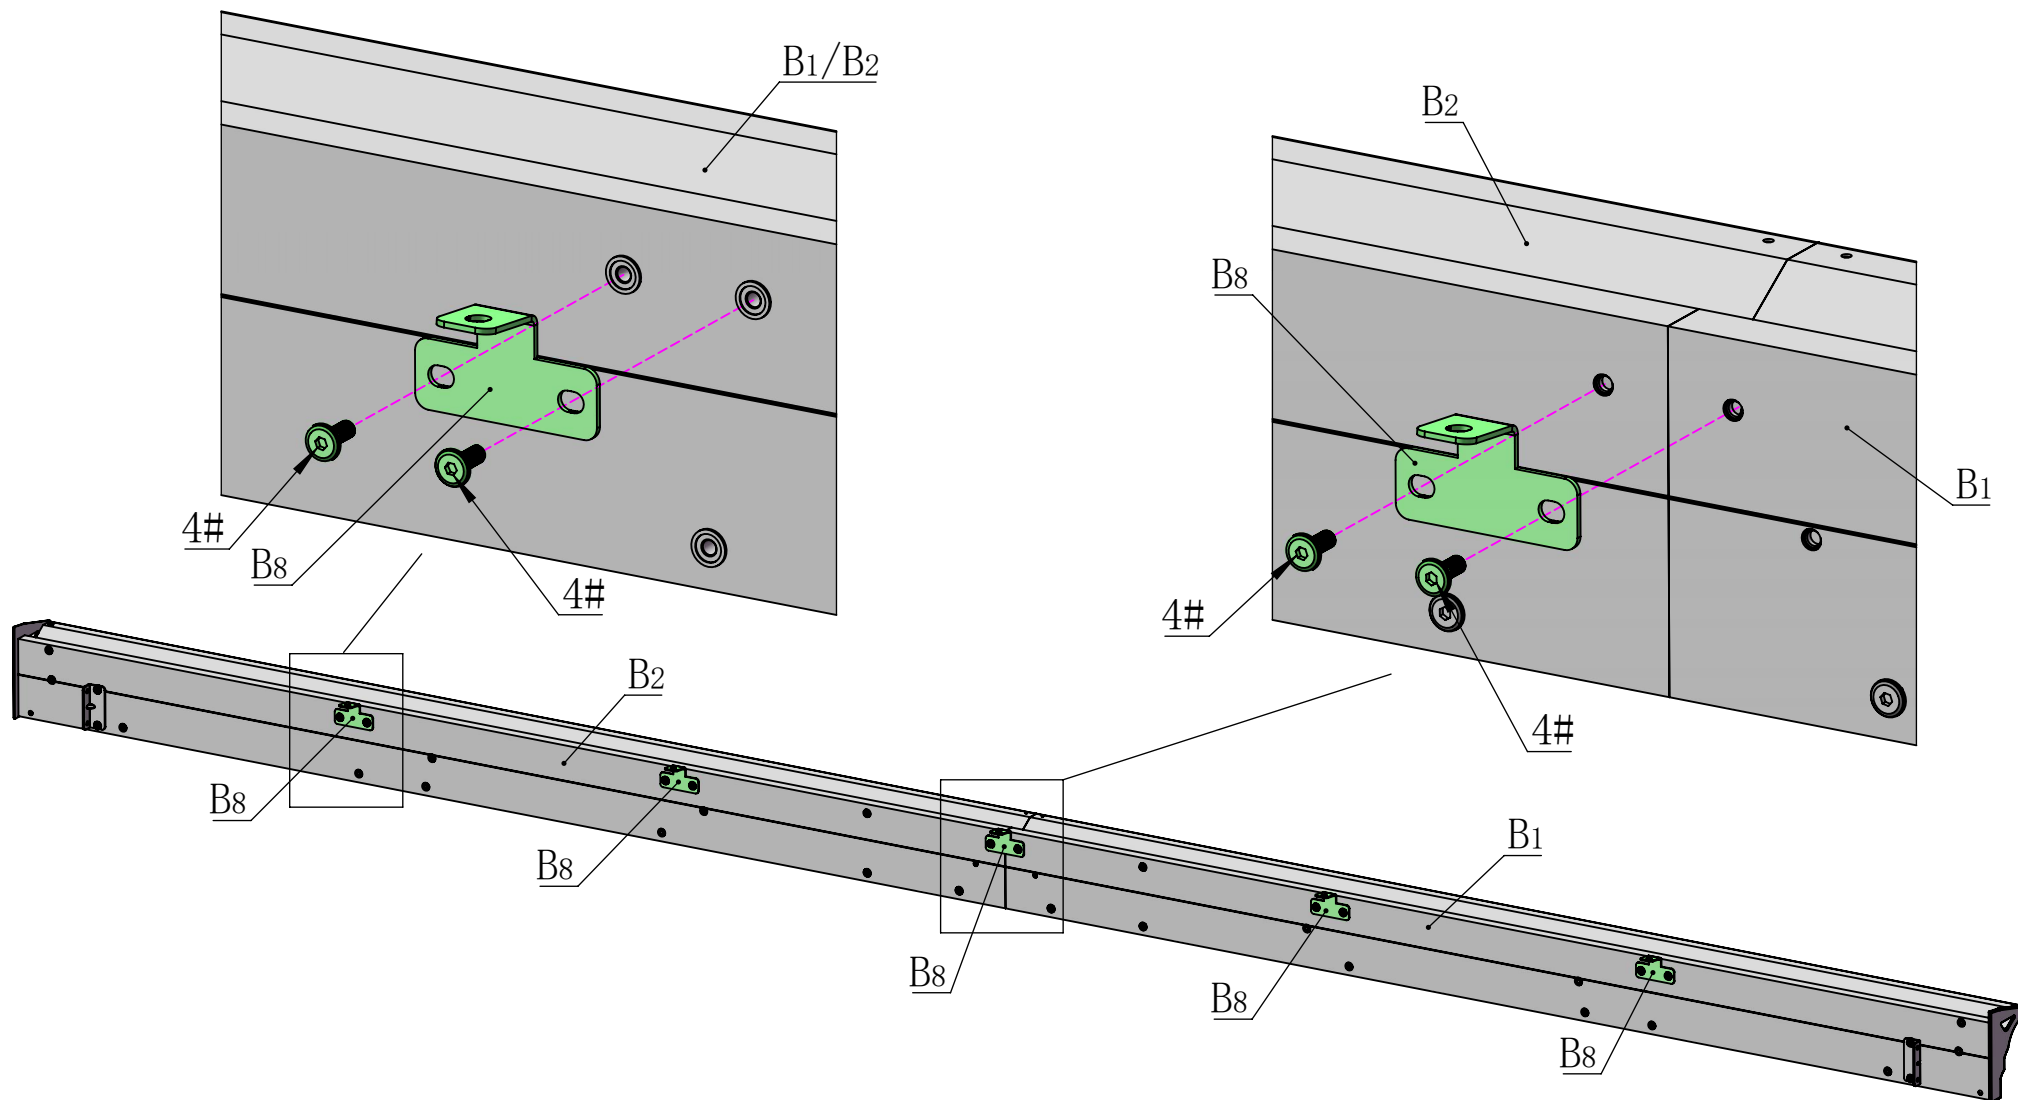


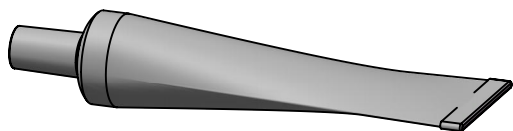


15# 1X

Use silicone sealant (part #15) to affix the gap between the two beams.

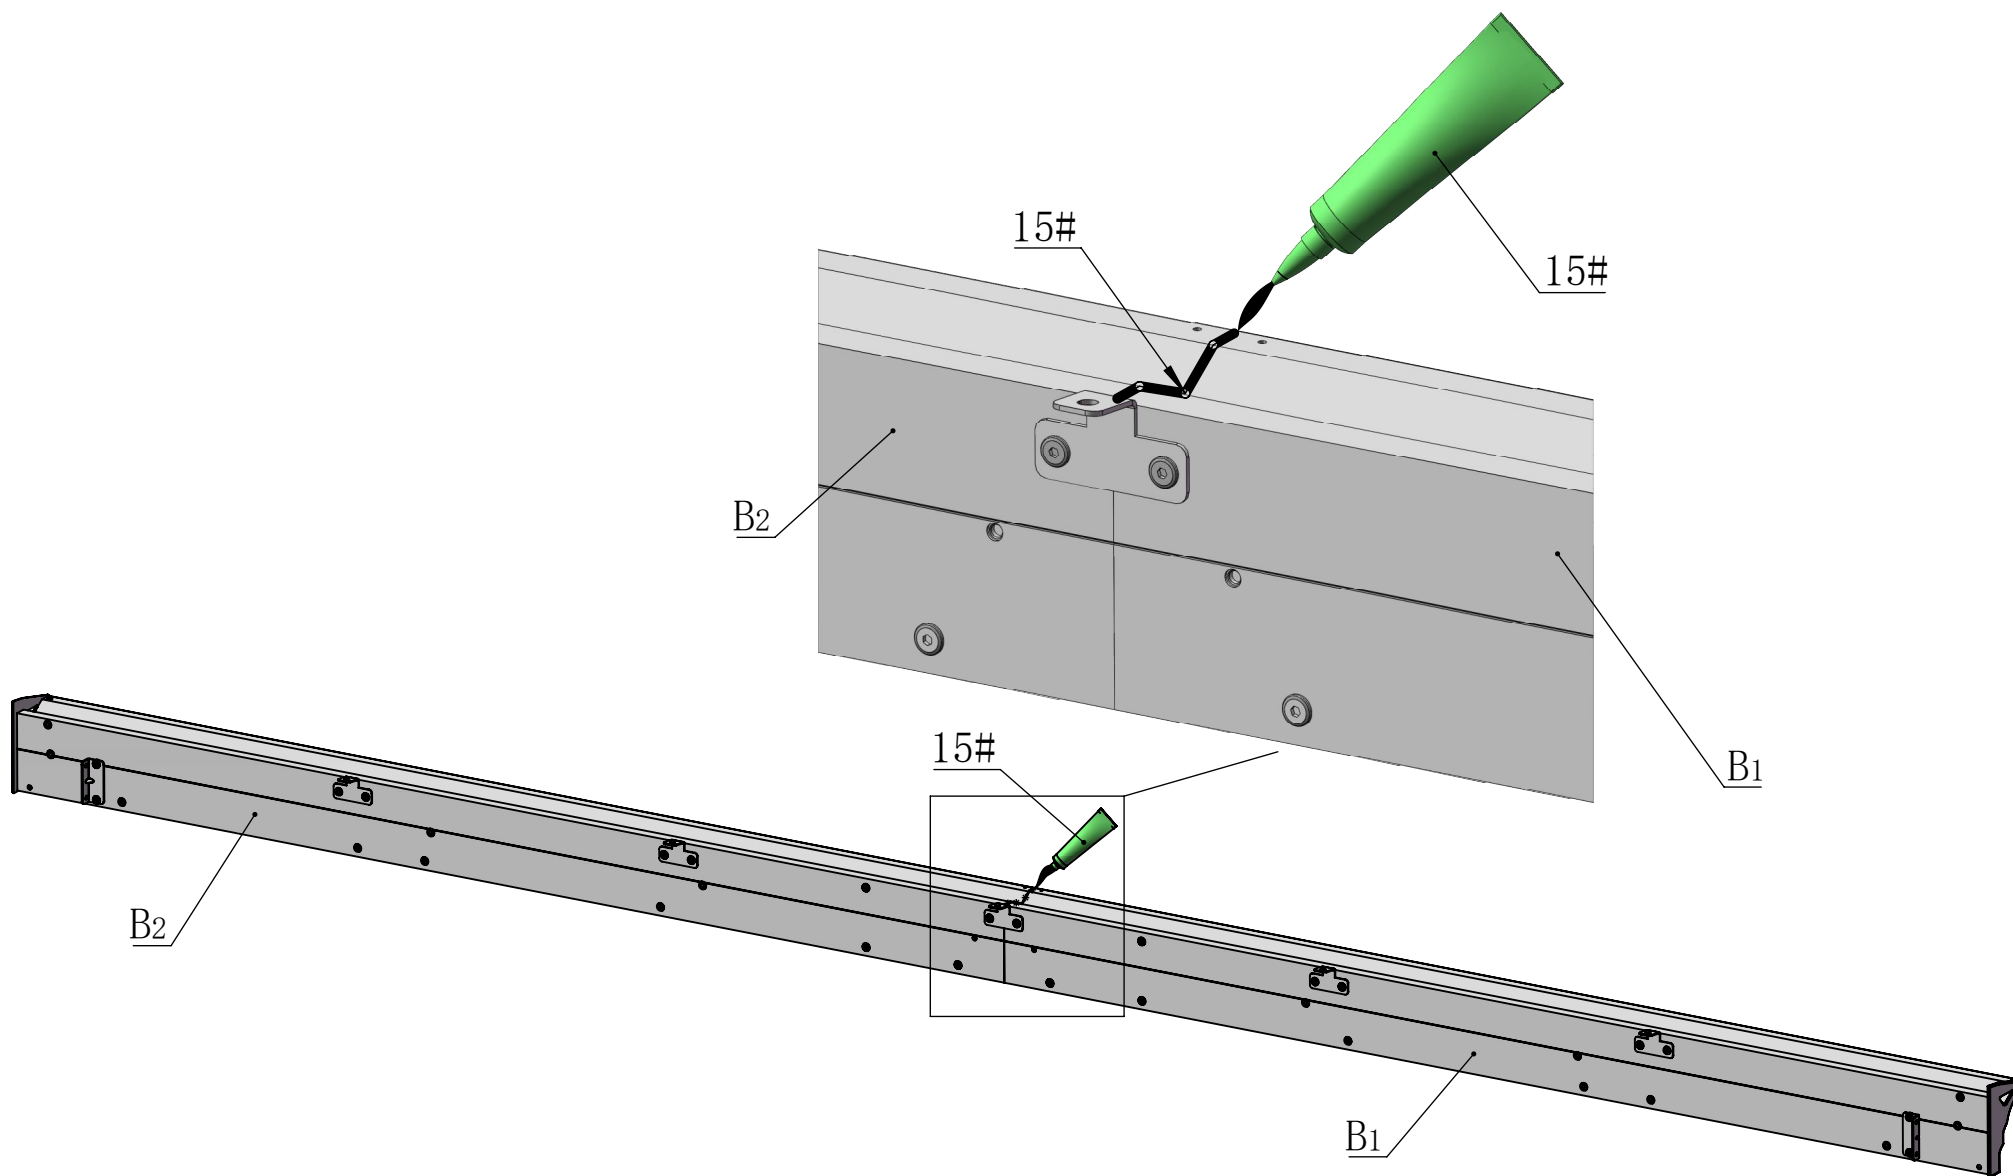

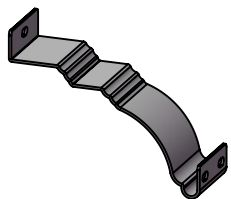

B7 1X




ST4.8*13

1# 2X




M5*12

2# 1X

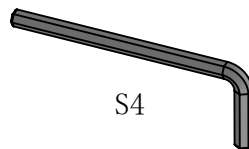



S4

16# 1X

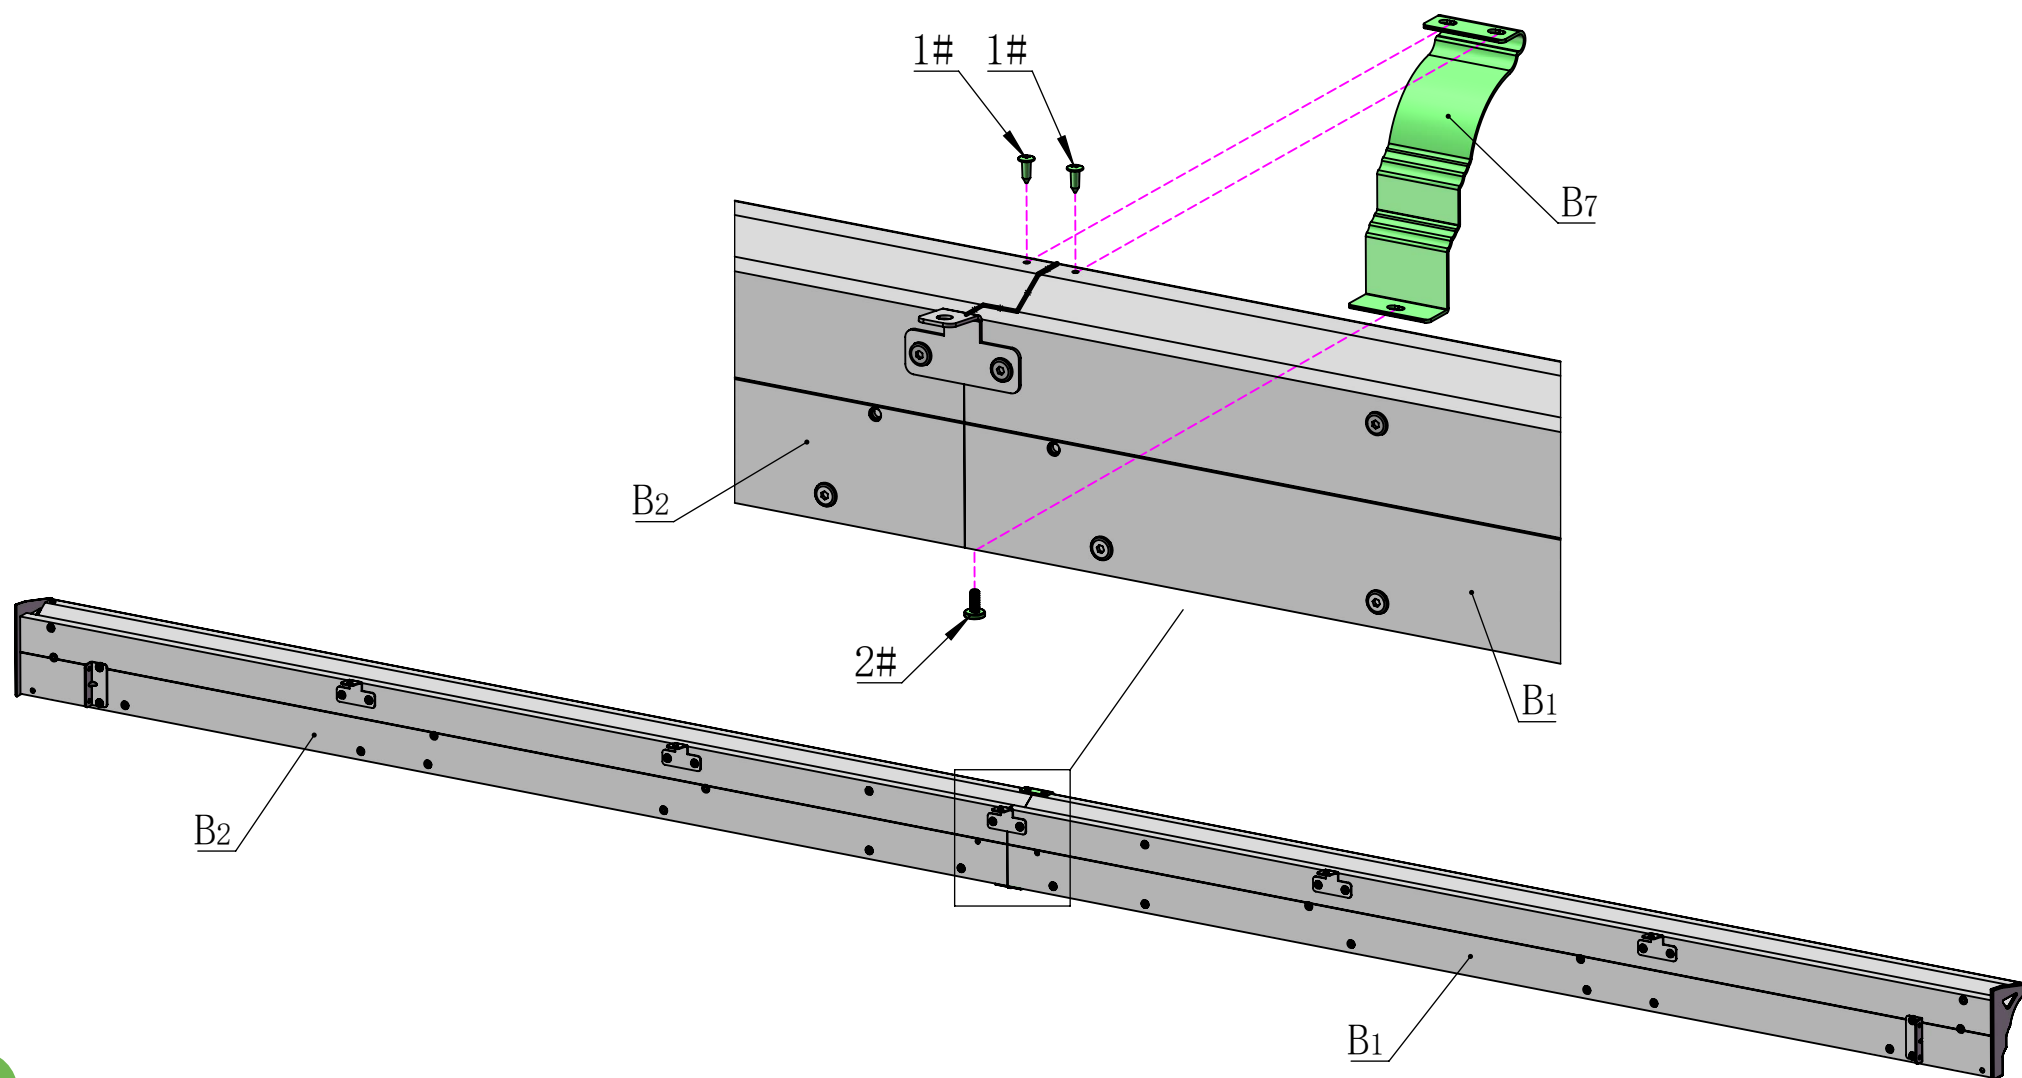


Side Beam Assembly

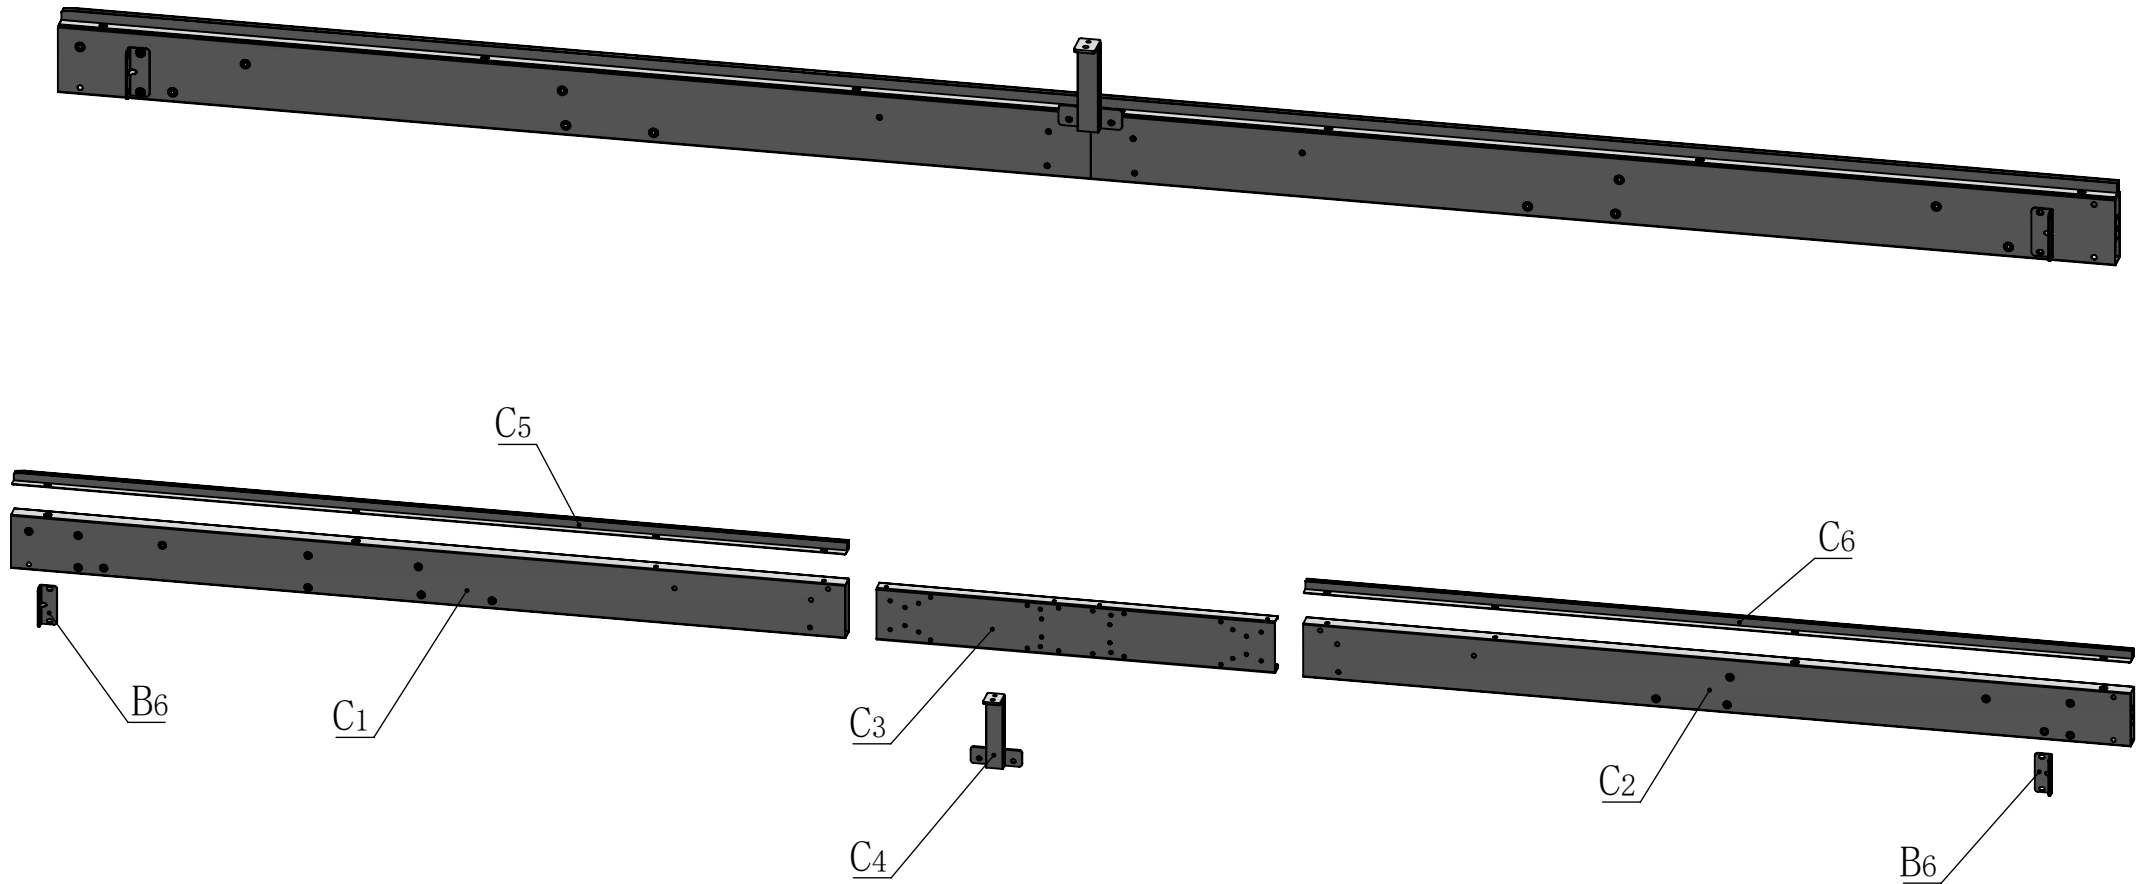


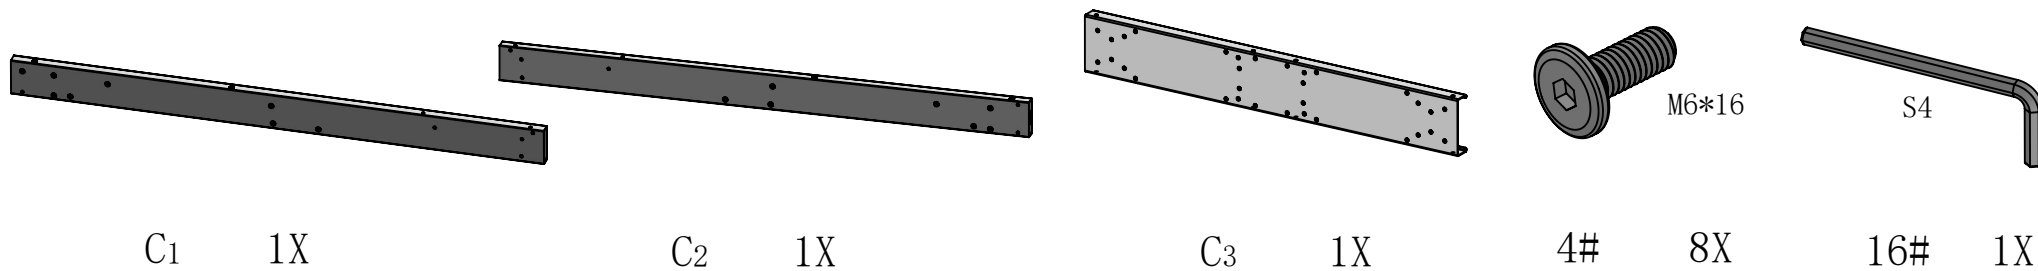

Attention: If you want to assemble based on **Model 2 (left side door)**, only the 2 screws (#4) at the center of the original left side beam (C1/C2) need to be installed, not the 2 screws (#4) at both ends.
Please see the next page.

MODEL 1

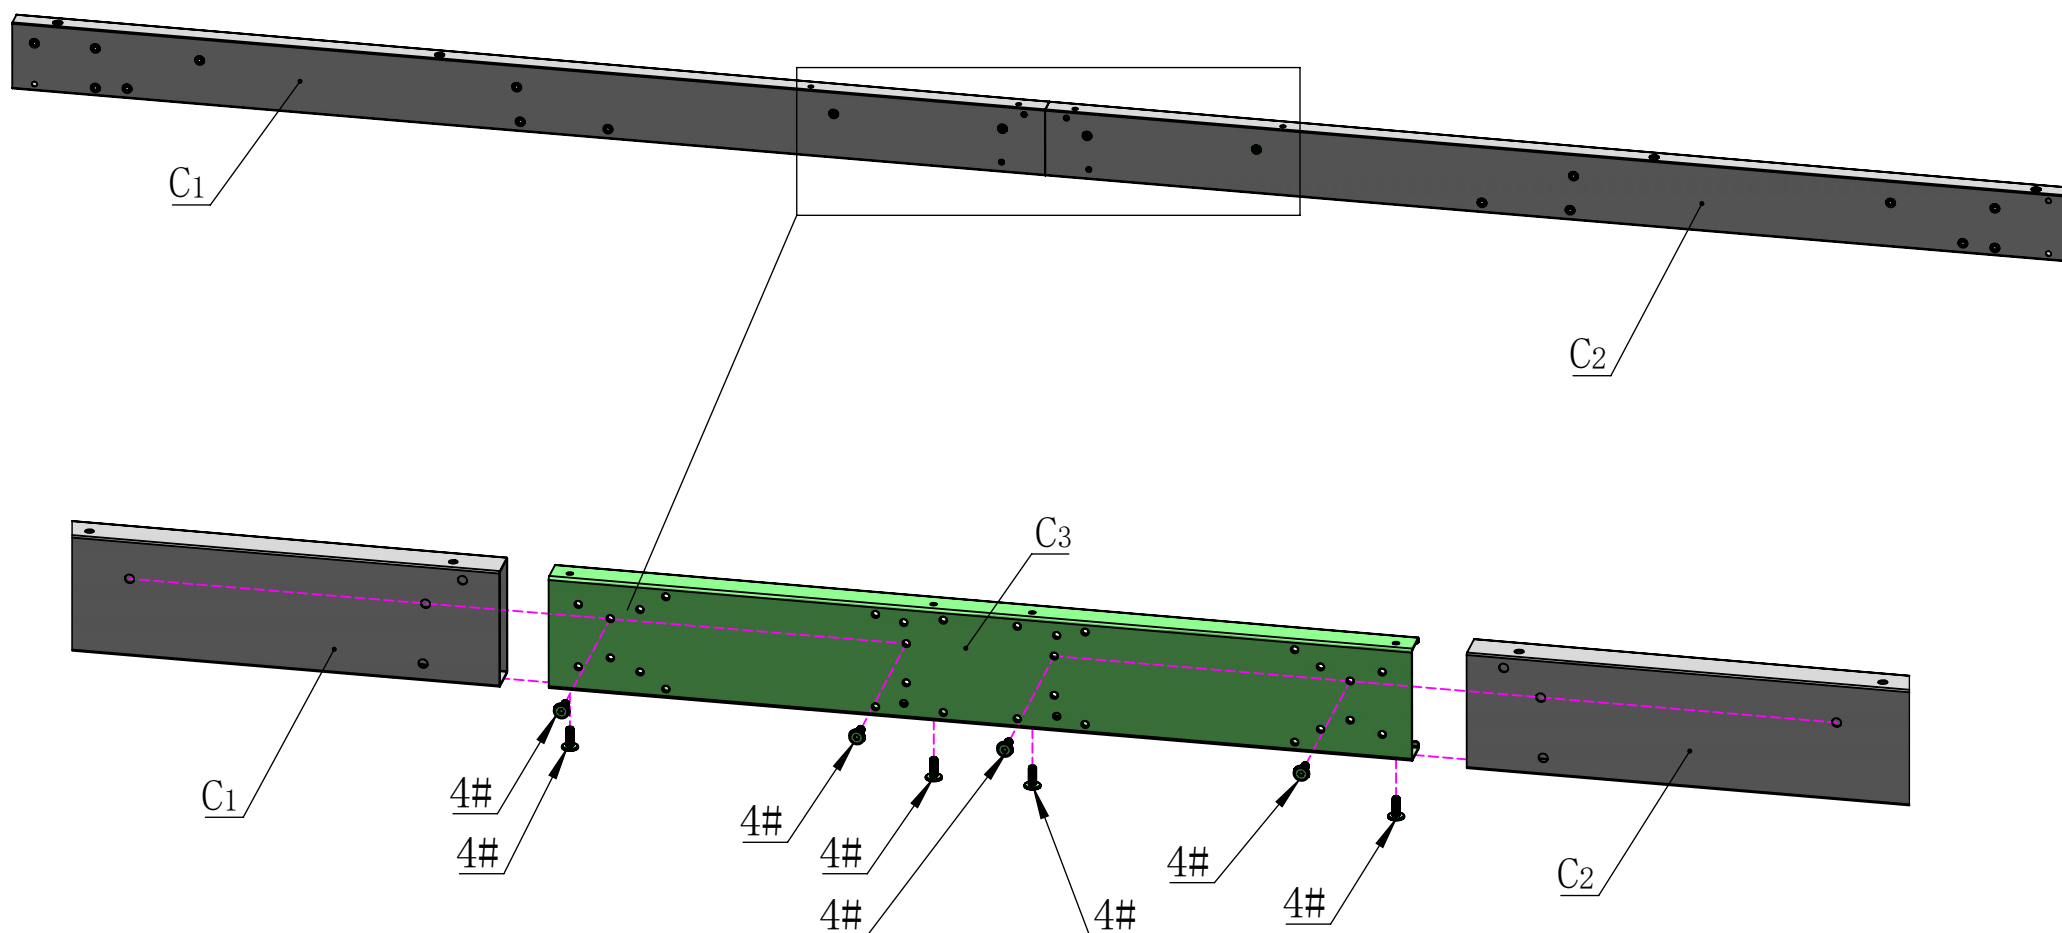

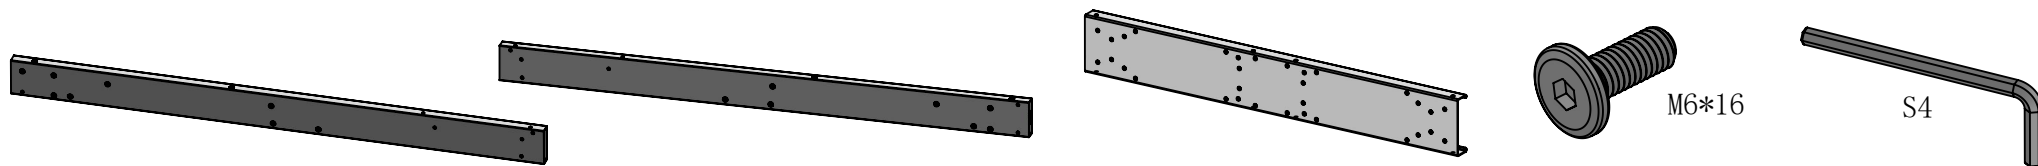

C1 1X


C2 1X

C3 1X

4# 6X

16# 1X

MODEL2

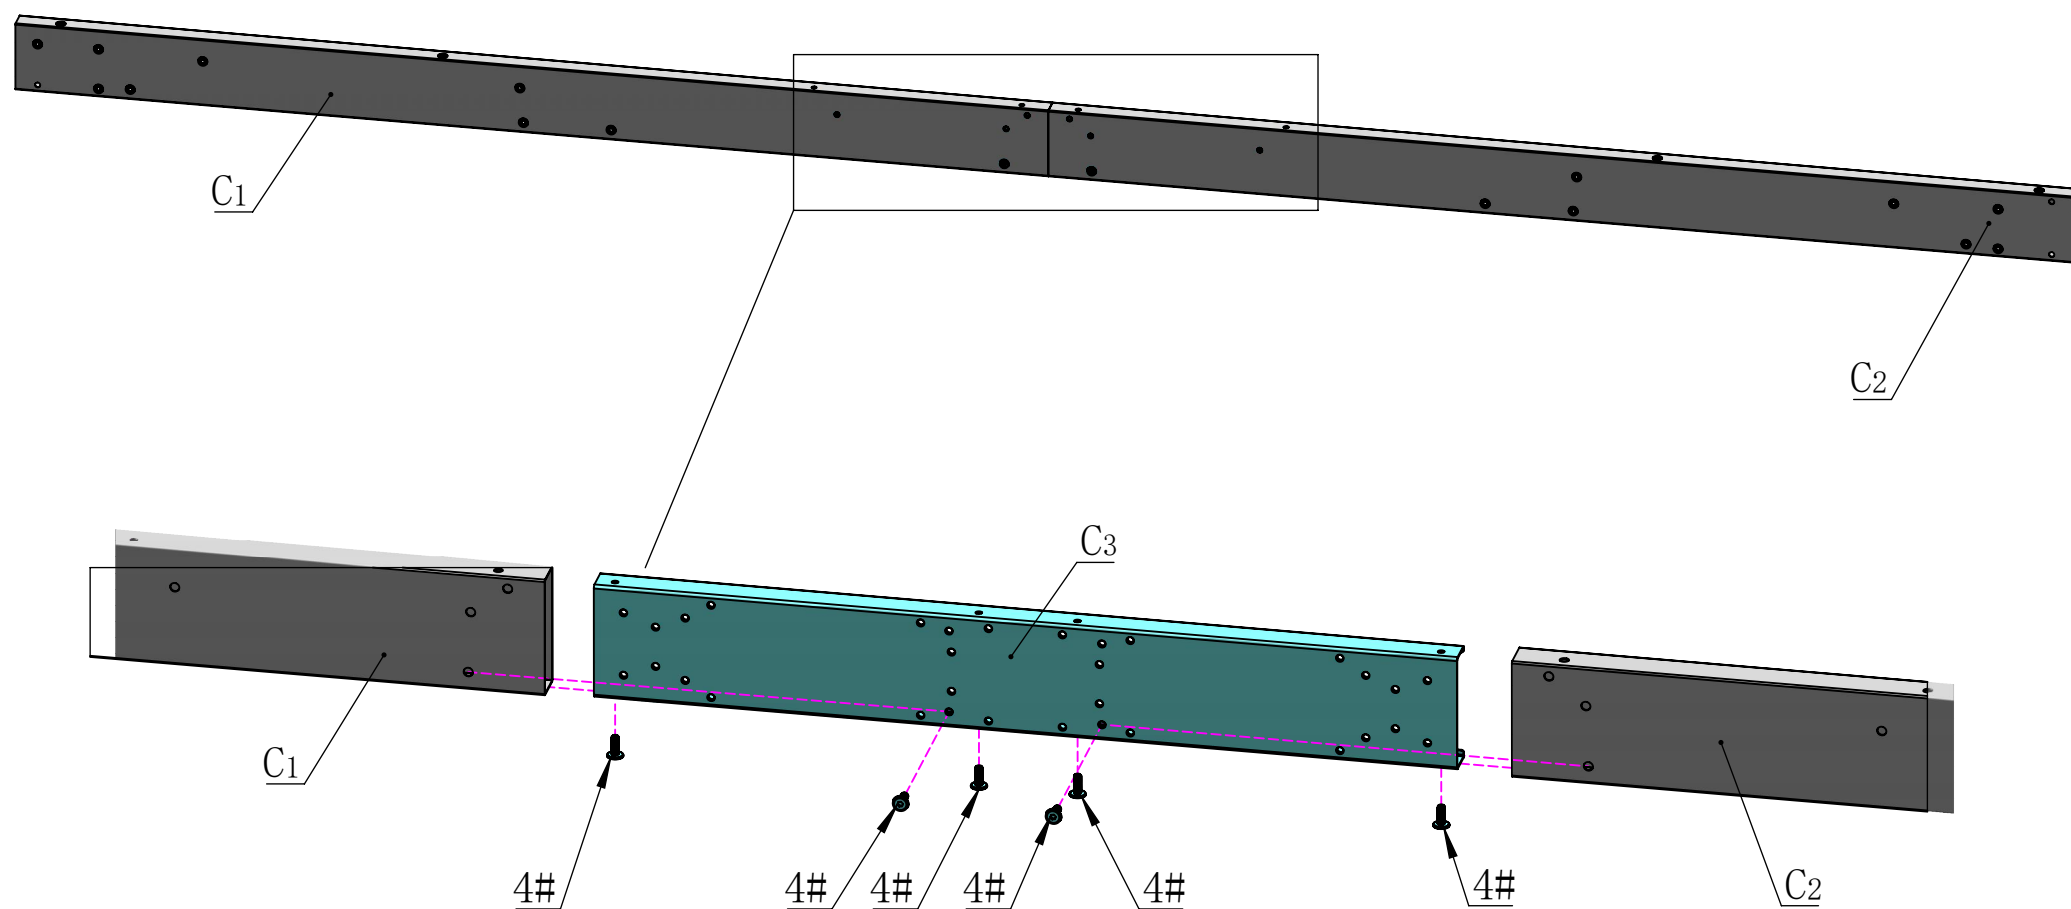





C5 1X




C6 1X

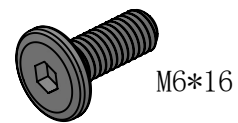


4# 8X

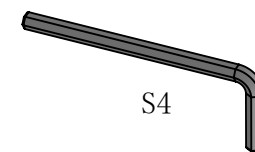

16# 1X

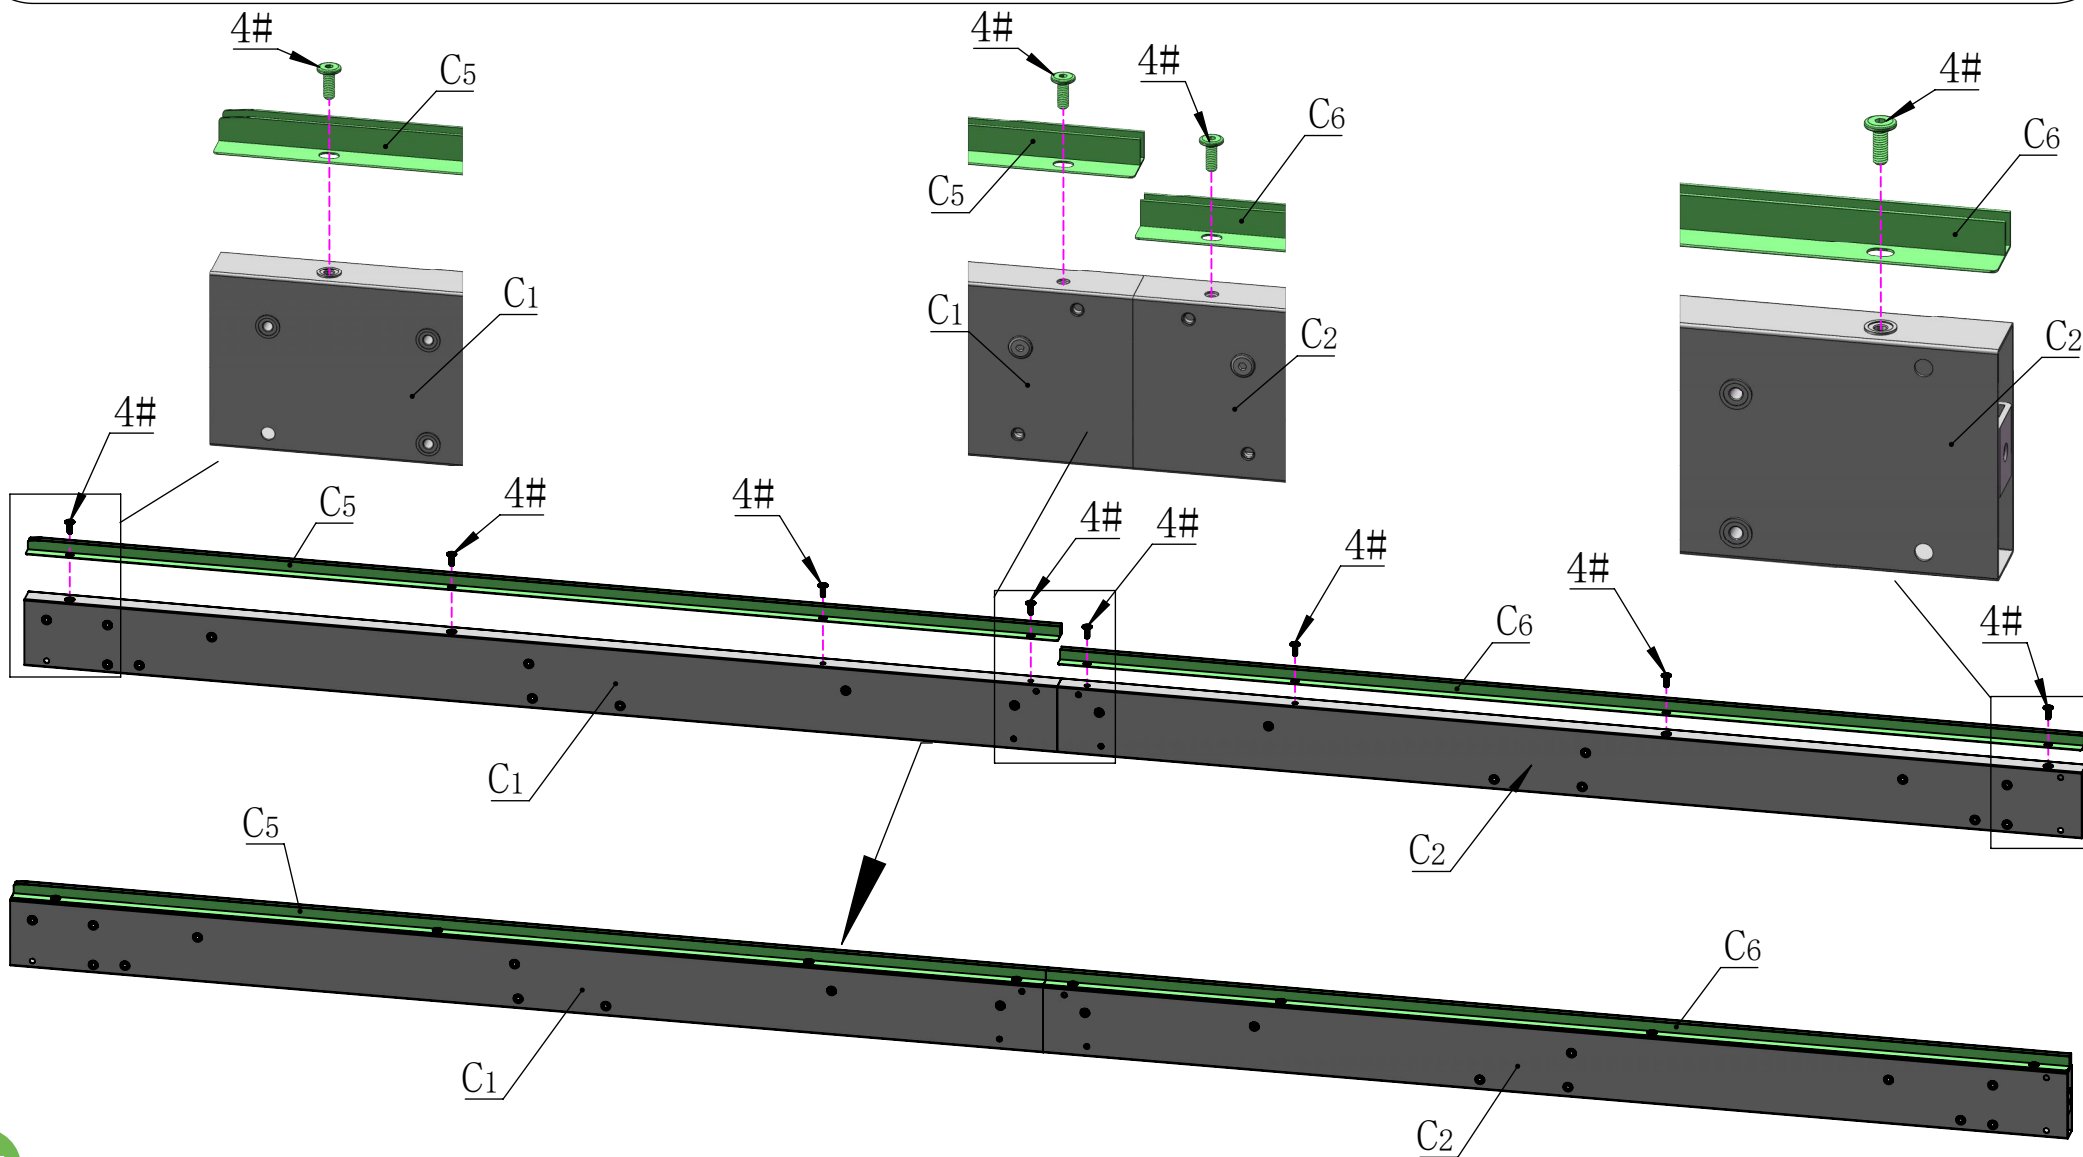

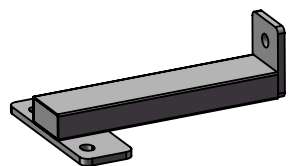

C4


1X



M6*16

4#


2X

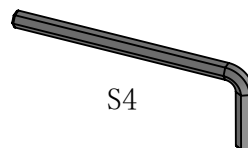


S4


16#

1X

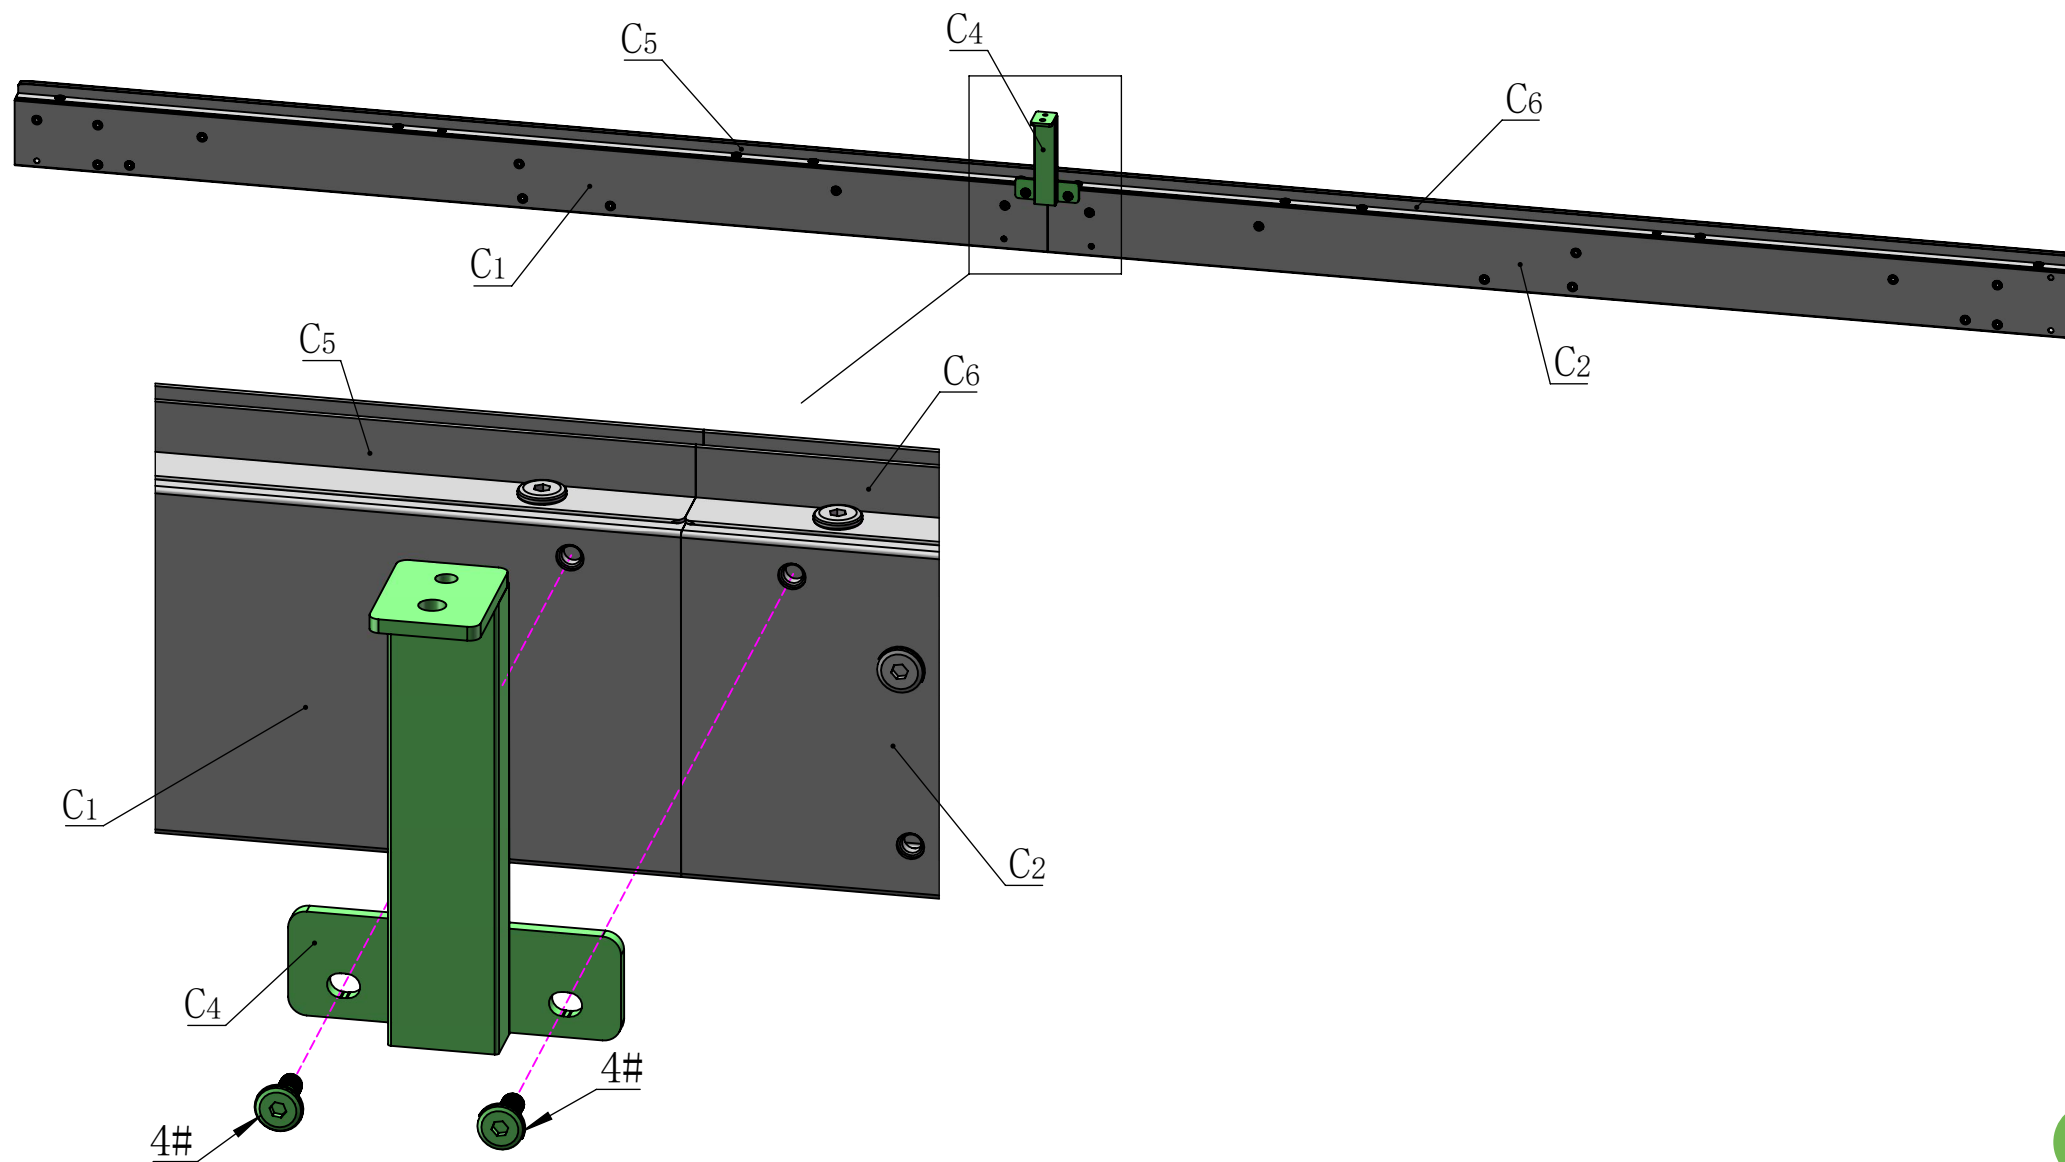

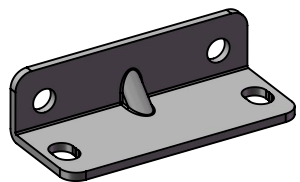


B6 2X

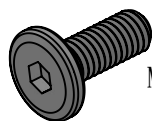


M6*16

4# 4X

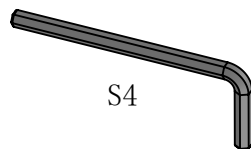



S4

16# 1X

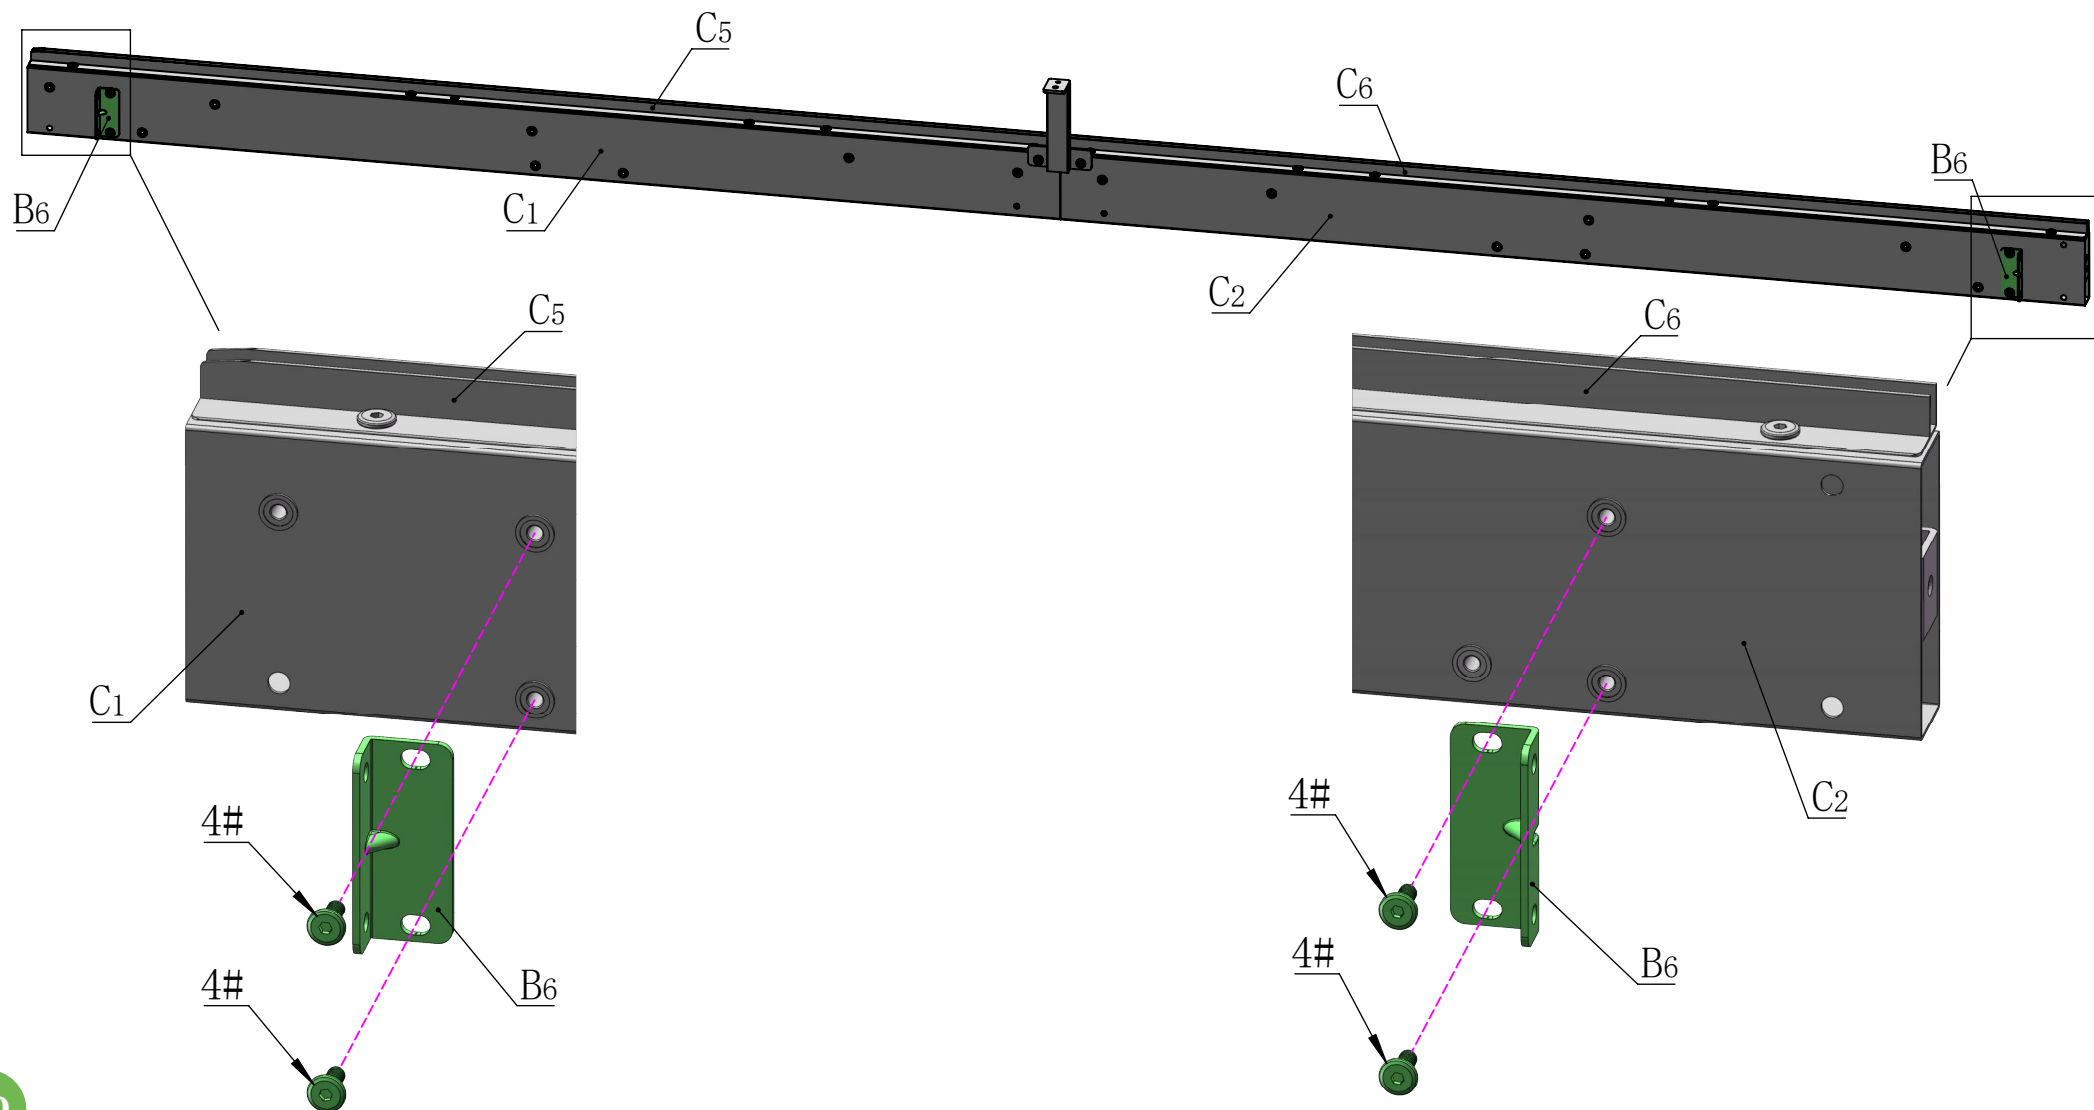


Side Beam Assembly

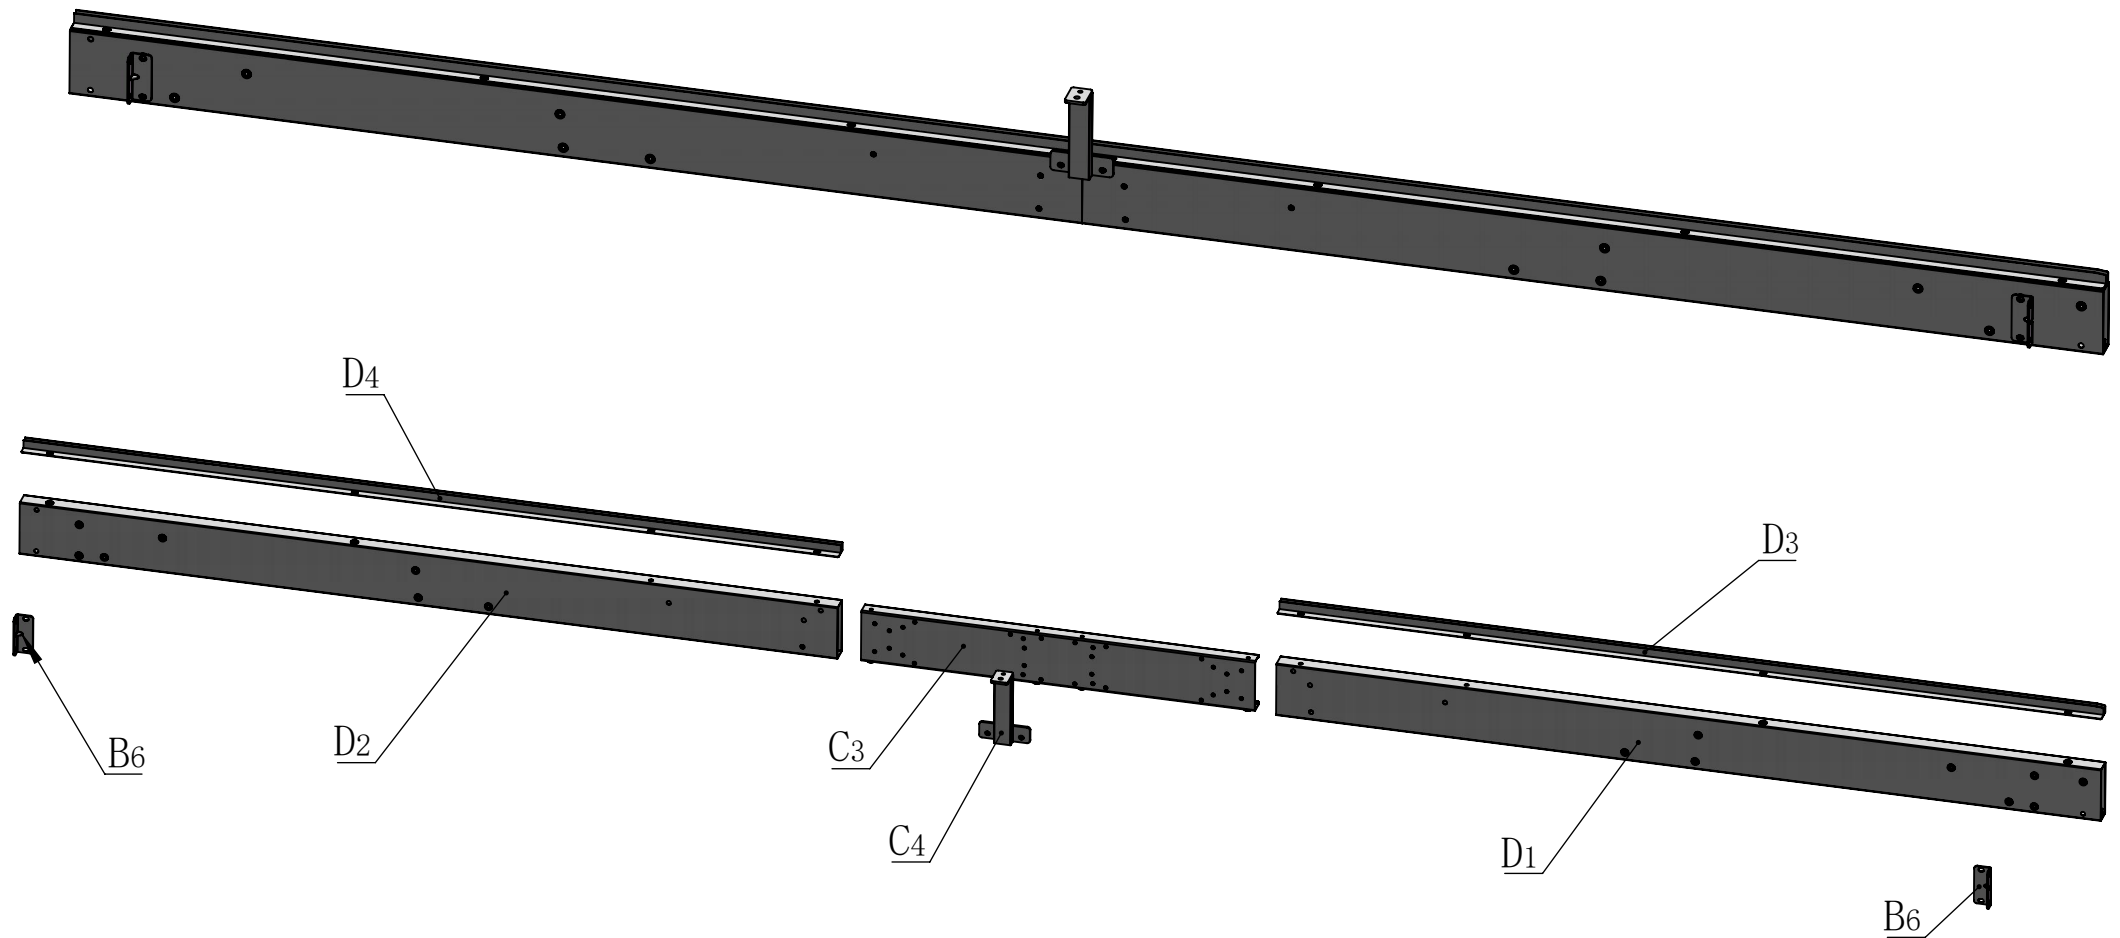


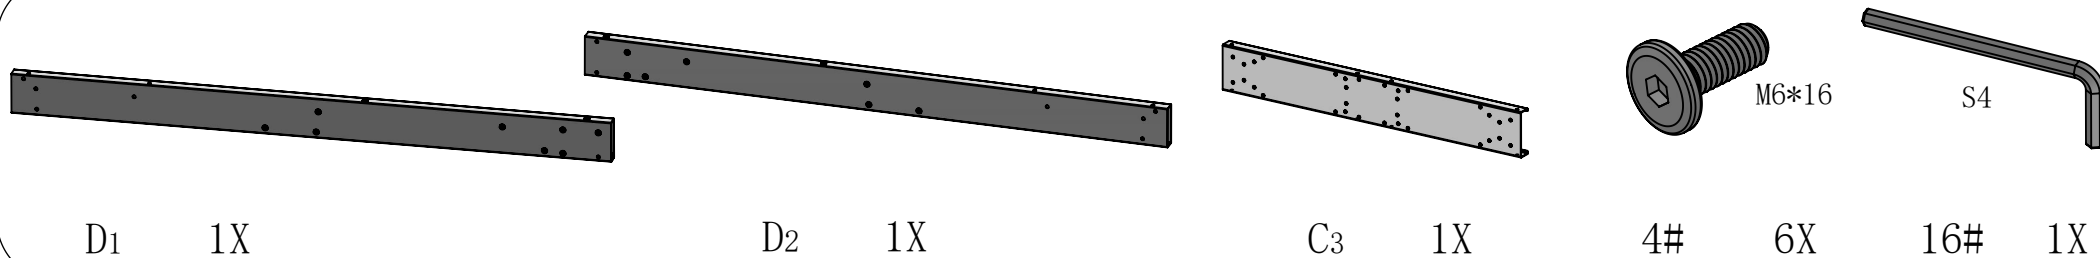


Attention: If you want to assemble based on **Model 2 (left side door)**, in addition to the two screws (#4) in the center of the original right side beam (D1/D2), the two screws (#4) at both ends also need to be installed.
Please see the next page.

MODEL 1

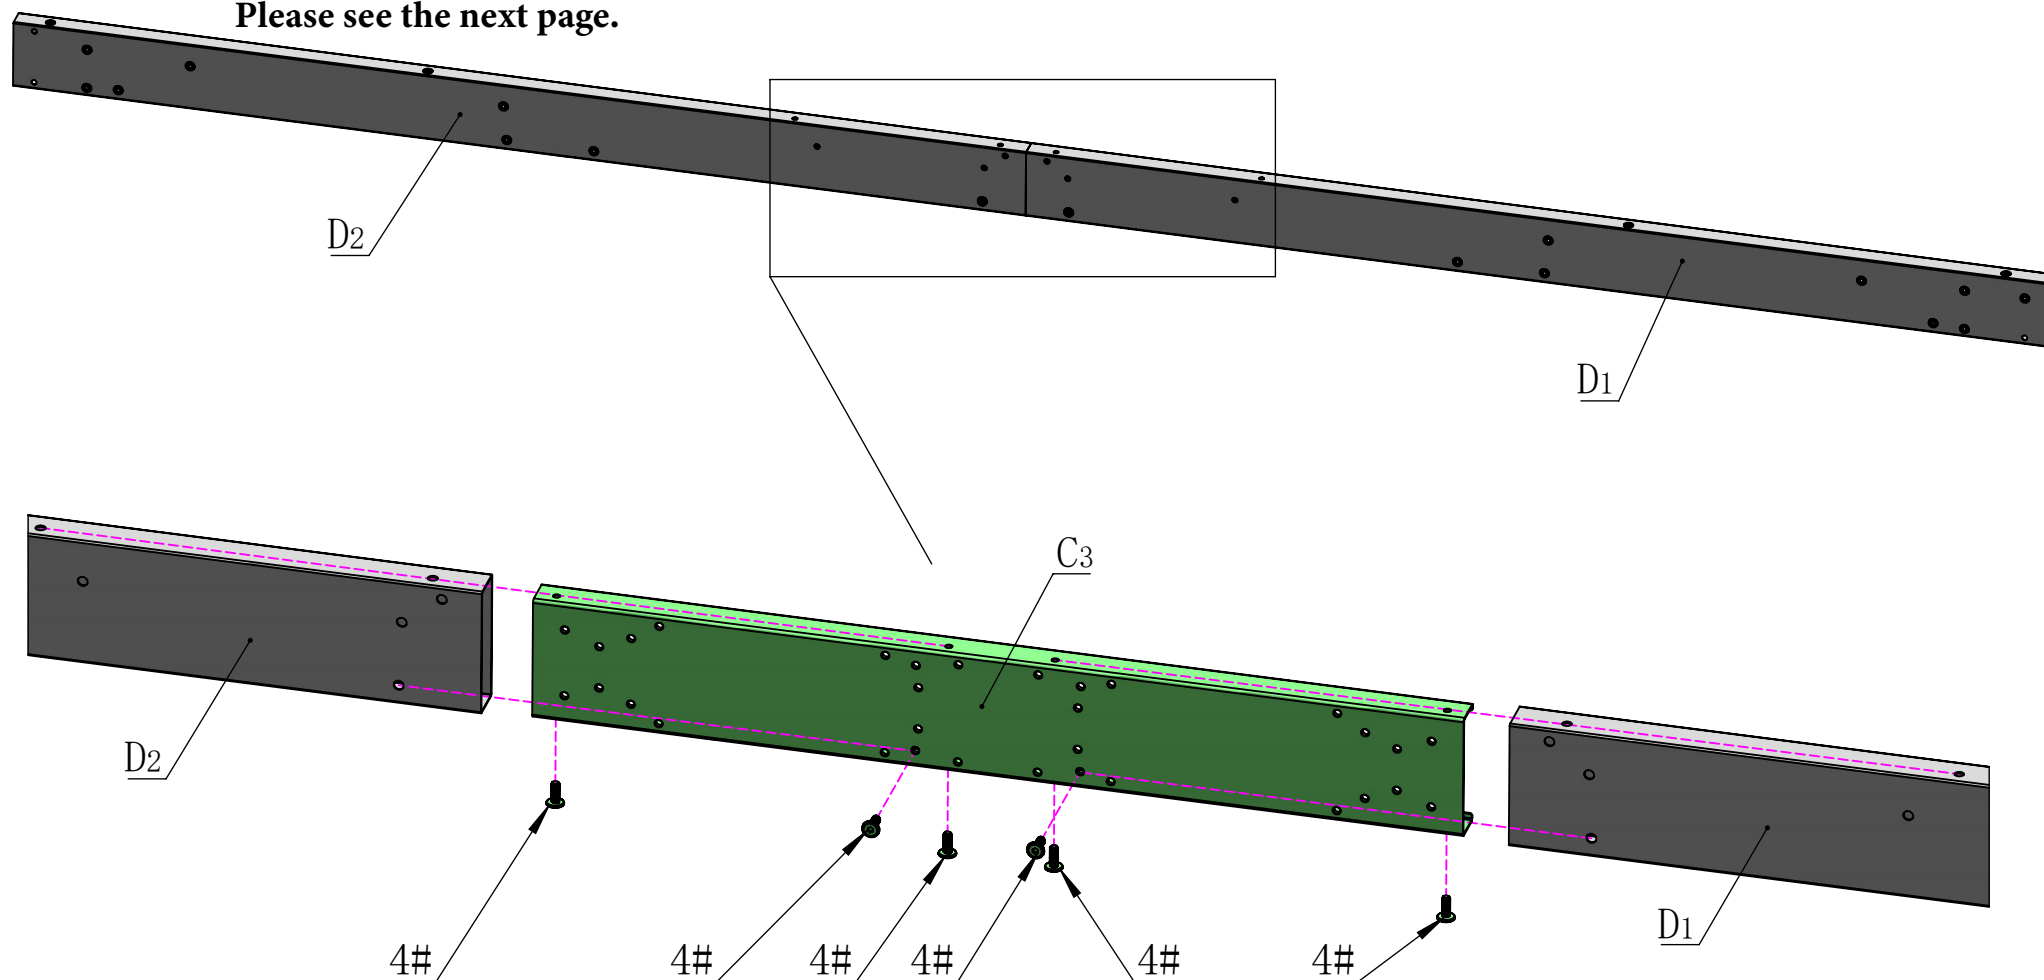


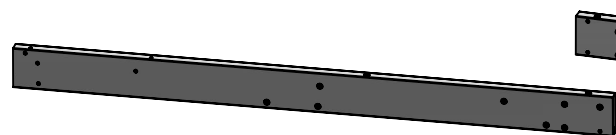

D1 1X

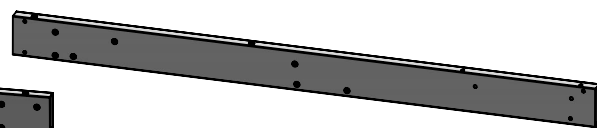

D2 1X

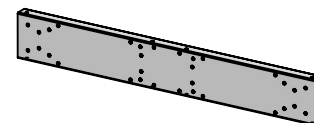


C3 1X



M6*16



4# 8X

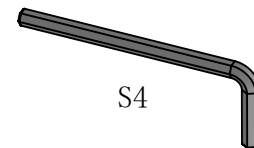


S4

16# 1X

MODEL2

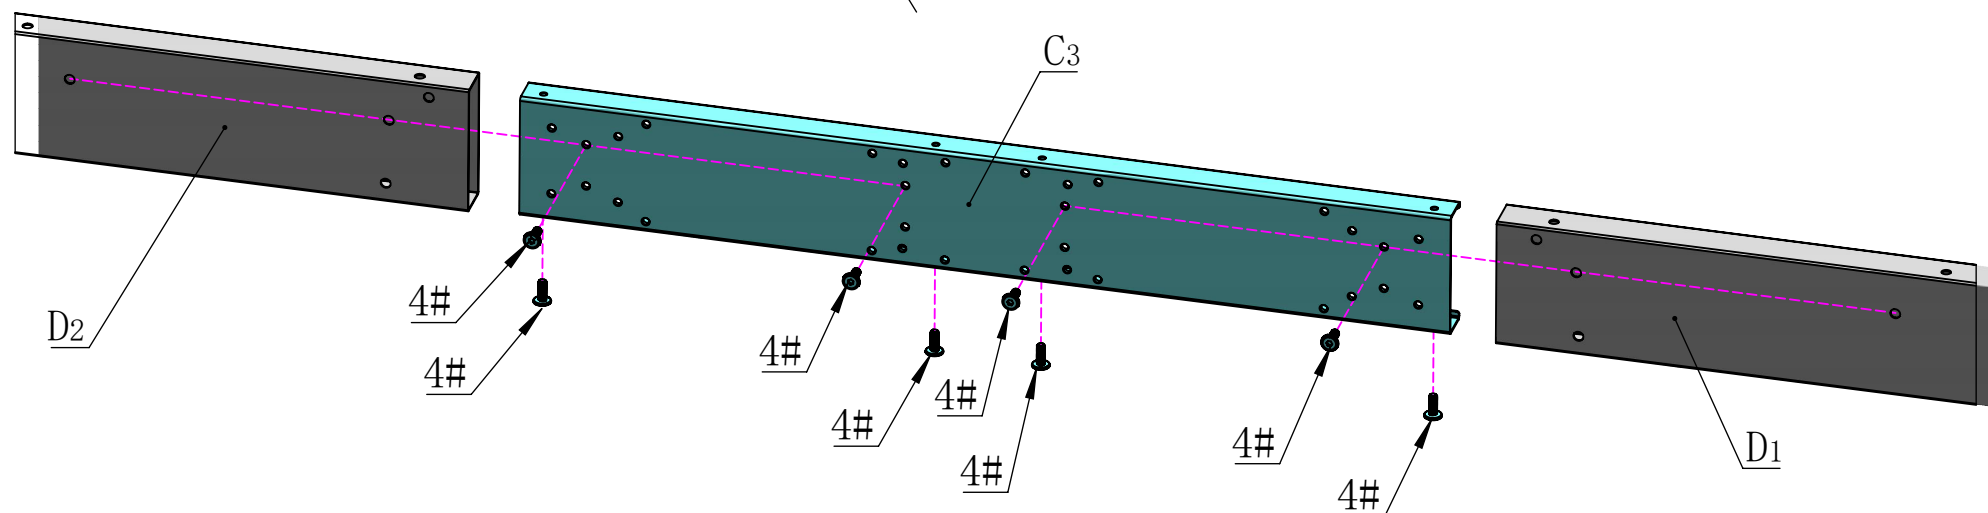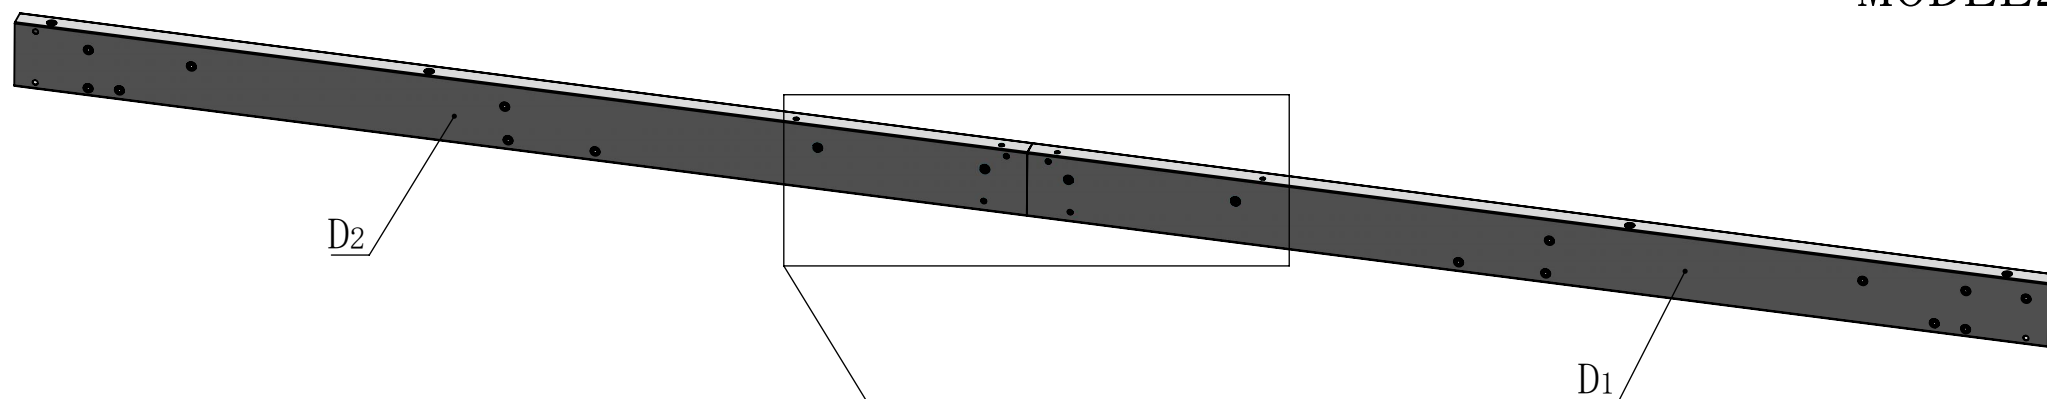


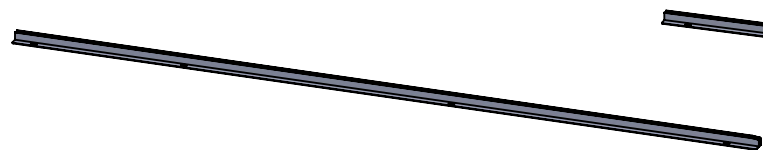


D3 1X




D4 1X

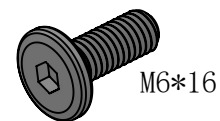


4# 8X

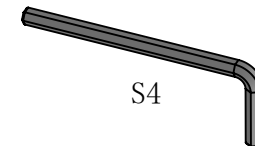


16# 1X

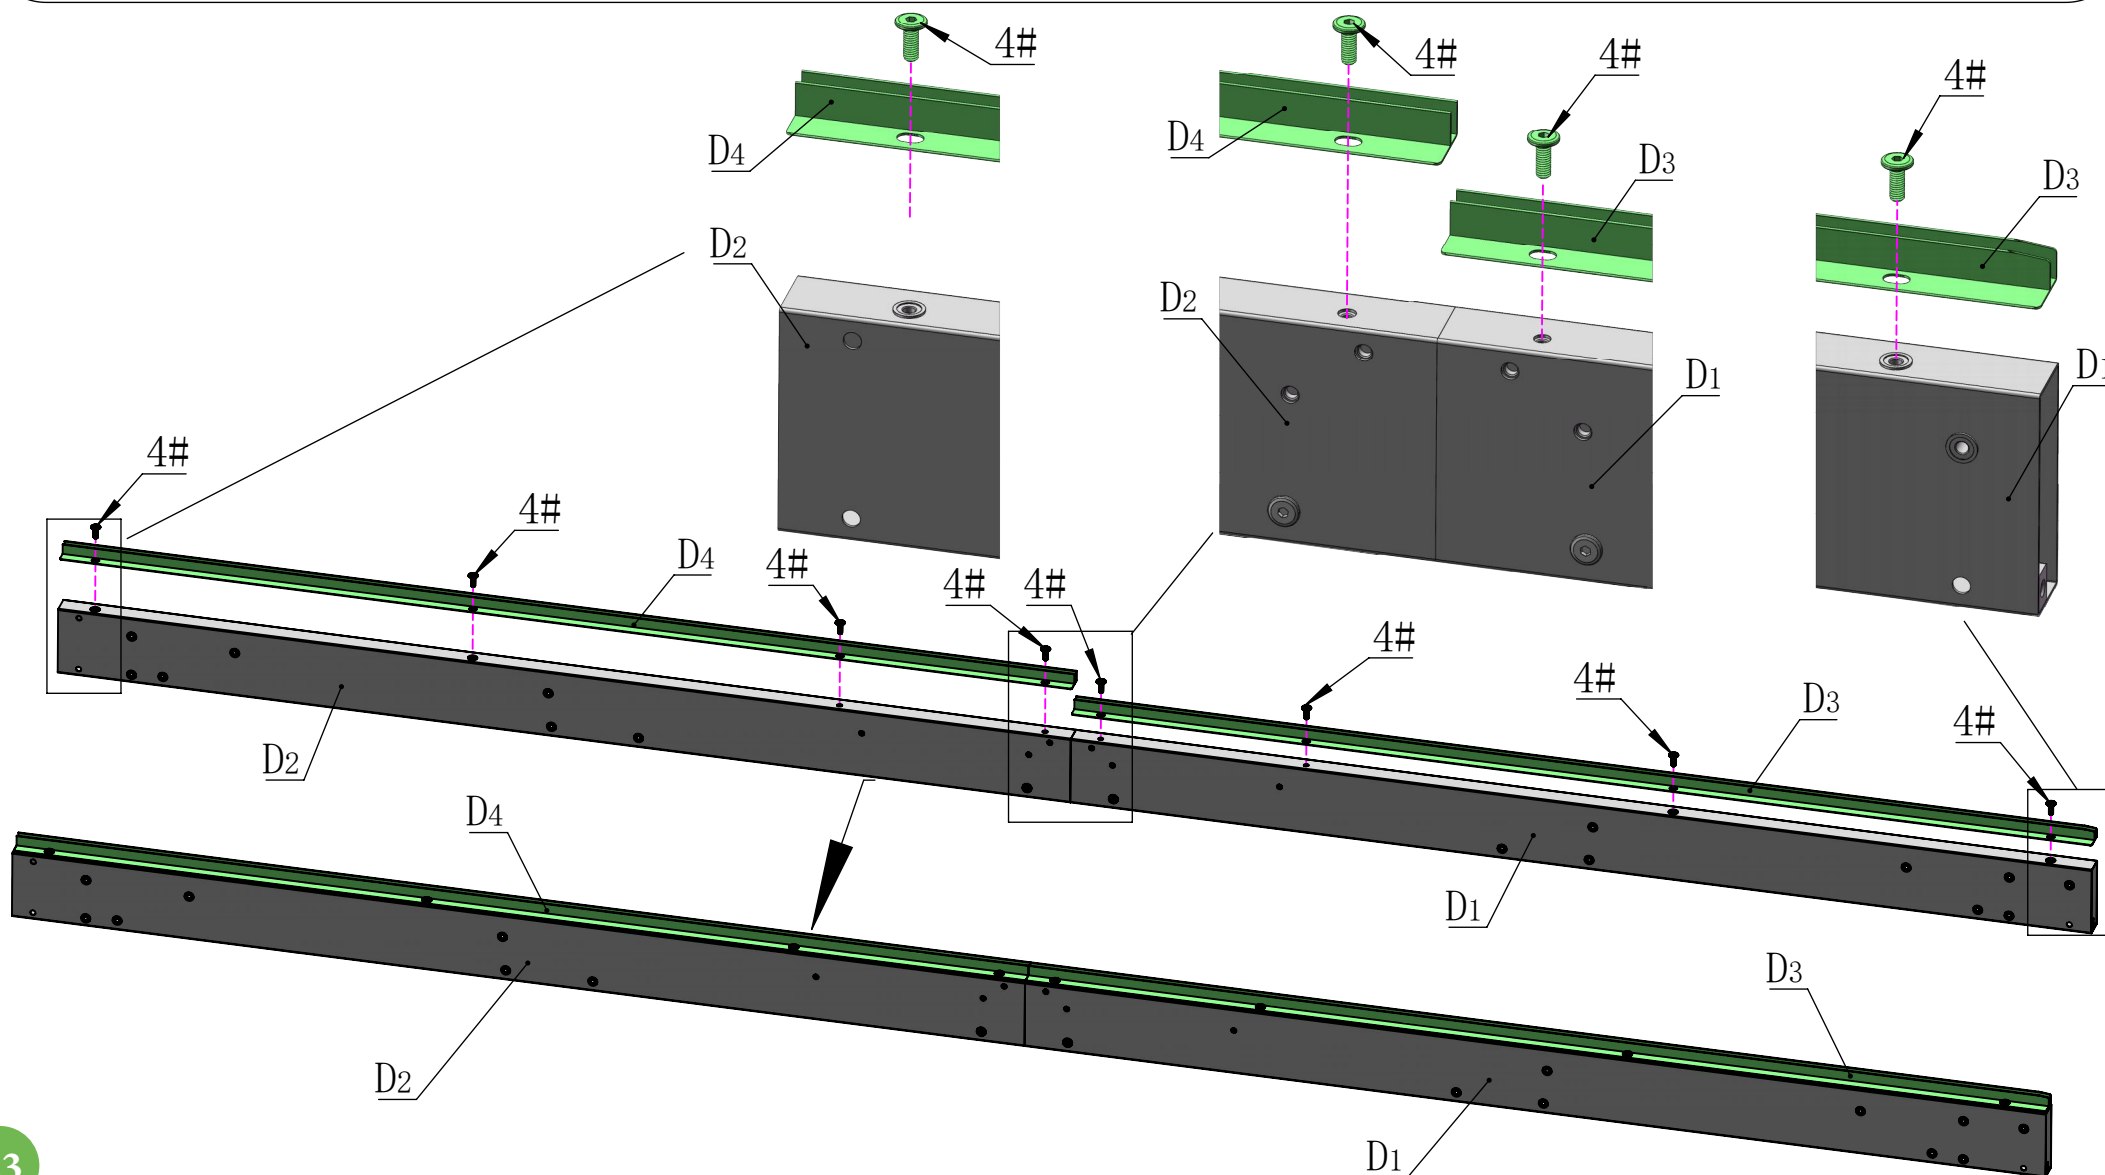


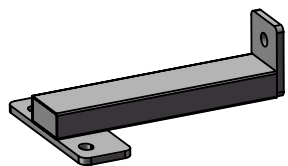


C4 1X

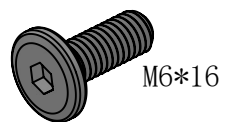


4# 2X M6*16

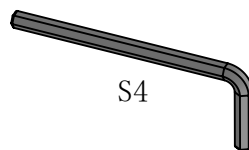

16# 1X S4

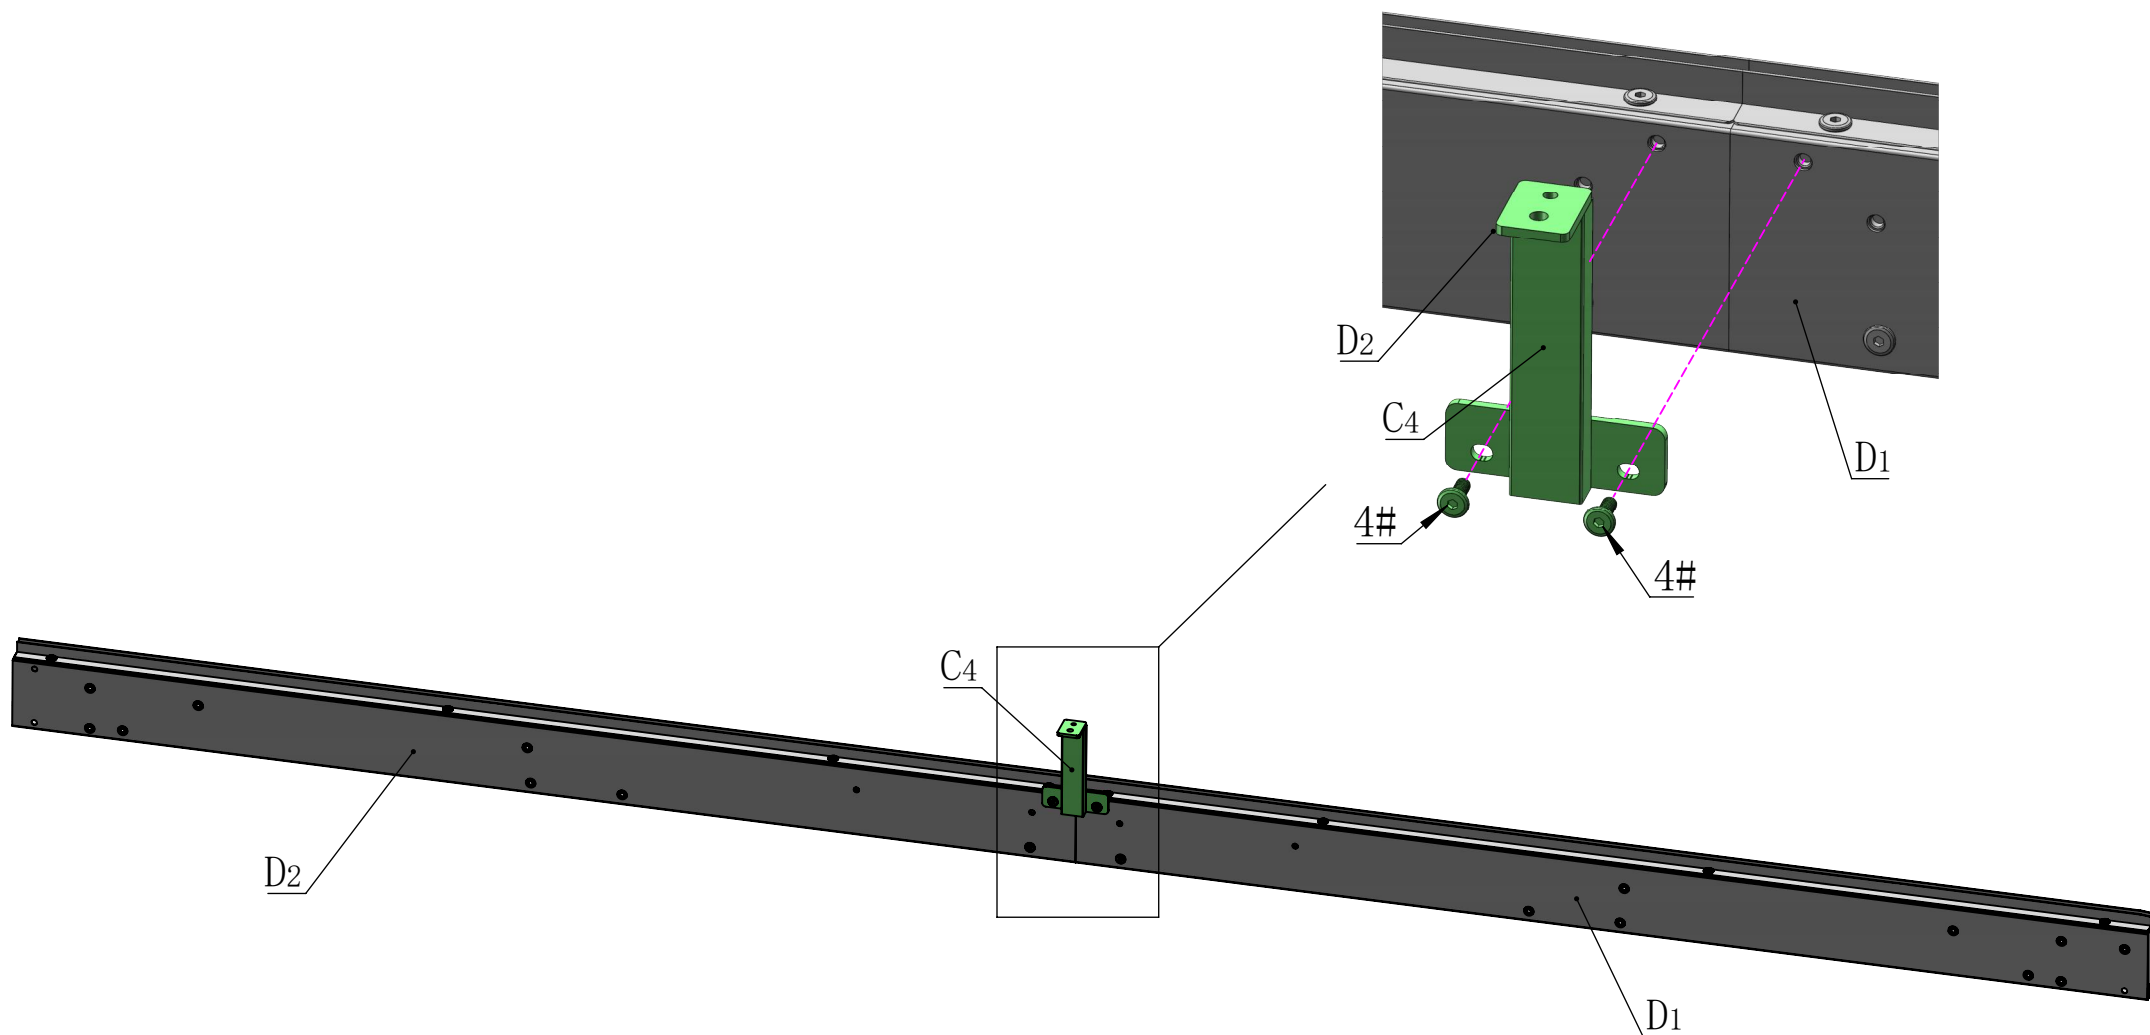

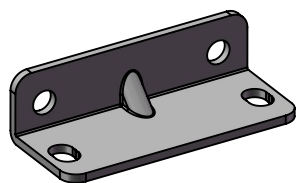


B6 2X




M6*16

4# 4X

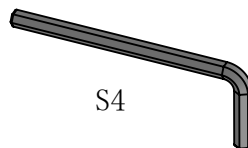



S4

16# 1X

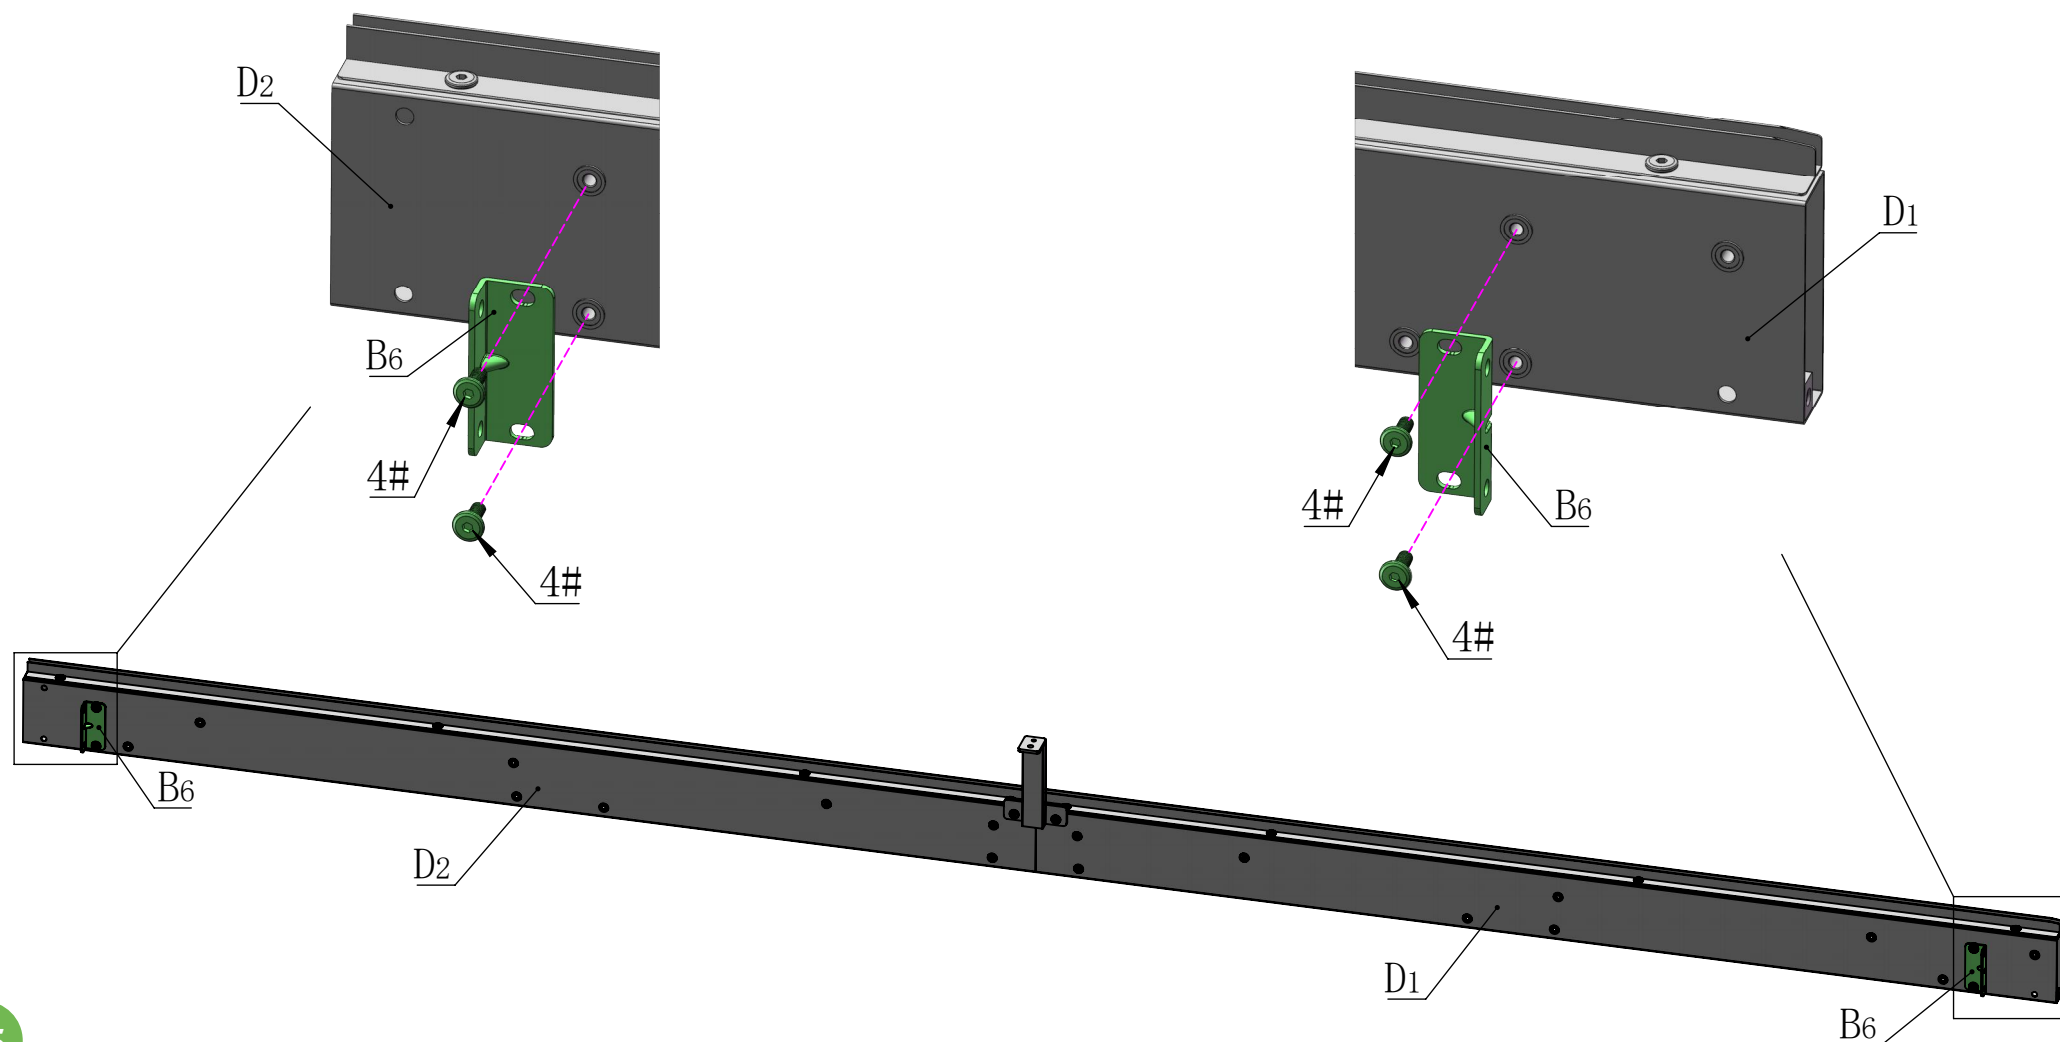


Rear Beam Assembly

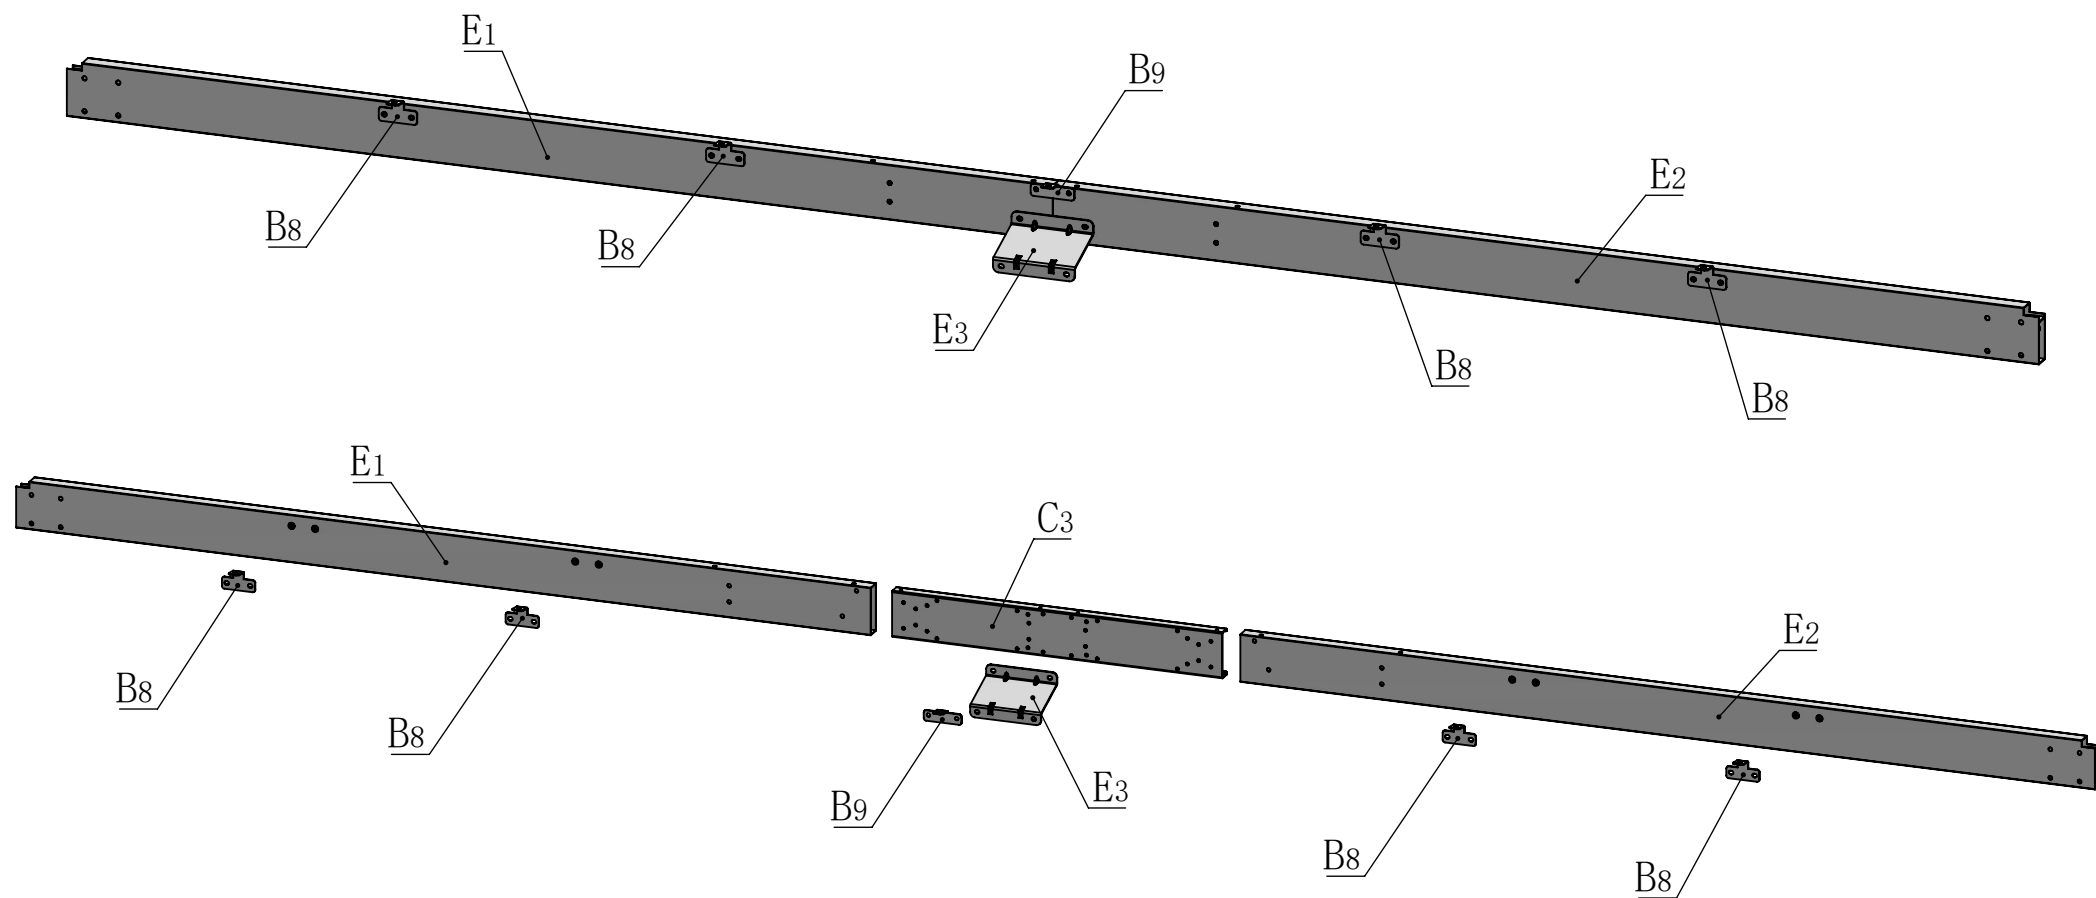


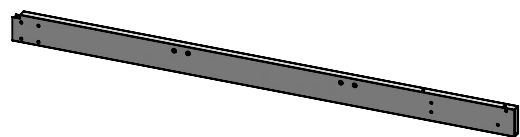

E1 1X




E2 1X



C3 1X





M6*16

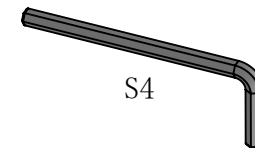


S4

4# 12X 16# 1X

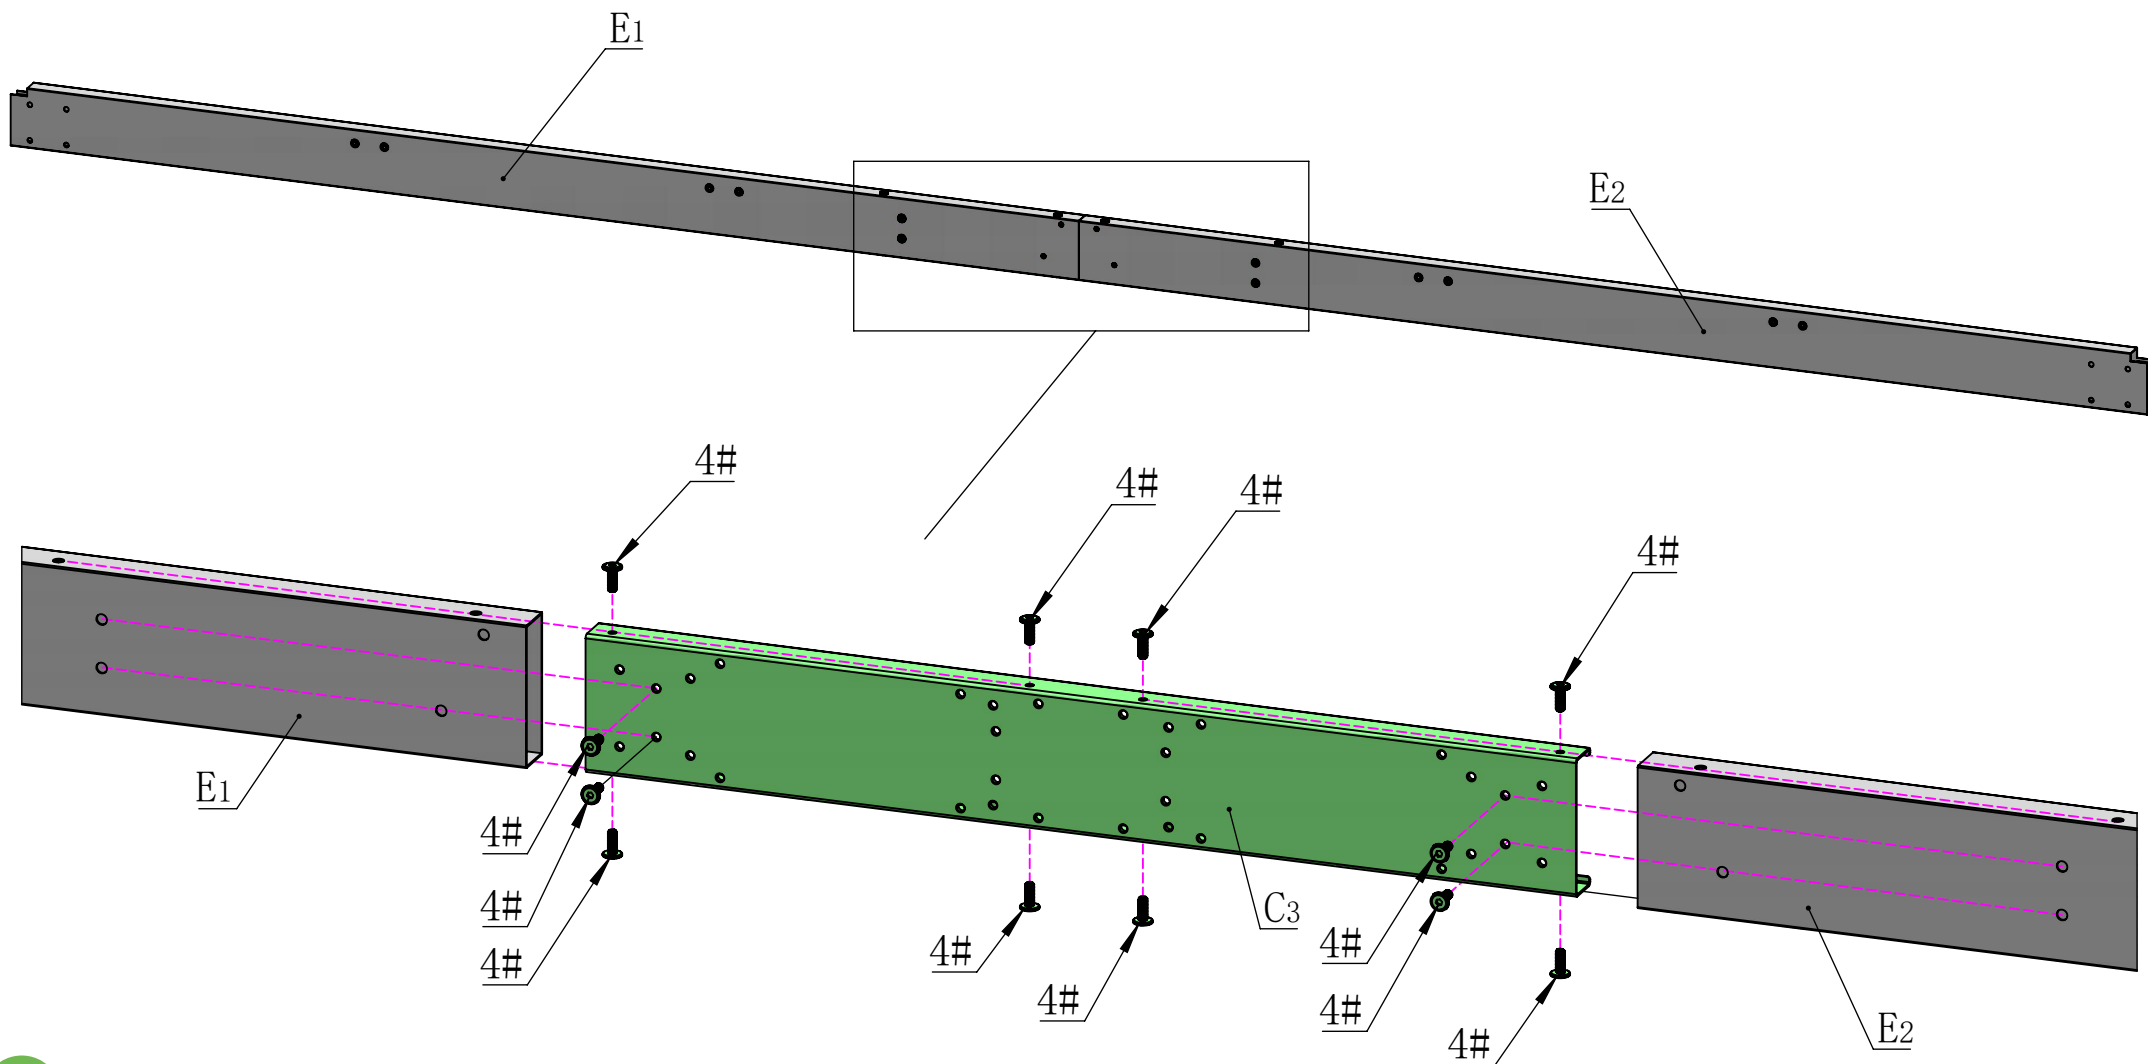


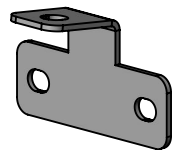


B8 4X

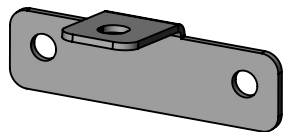




B9 1X

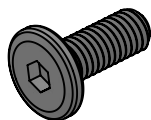


M6*16
4# 10X

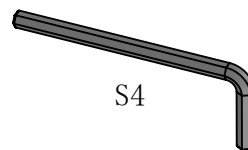


S4
16# 1X

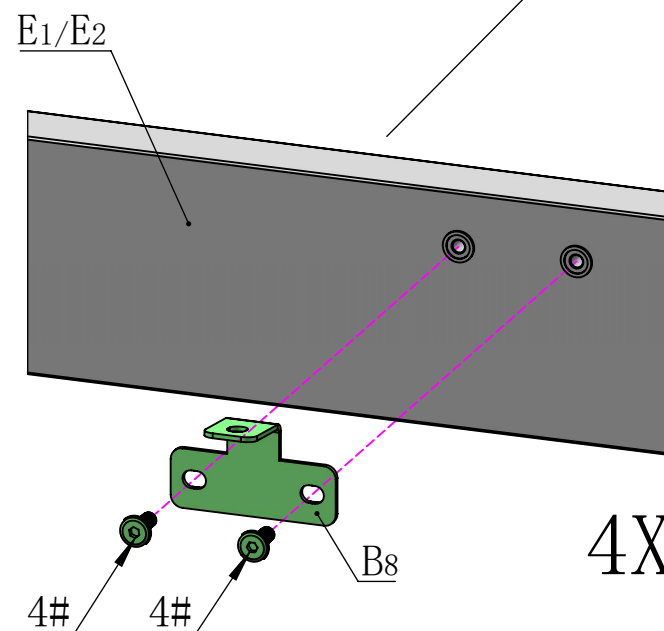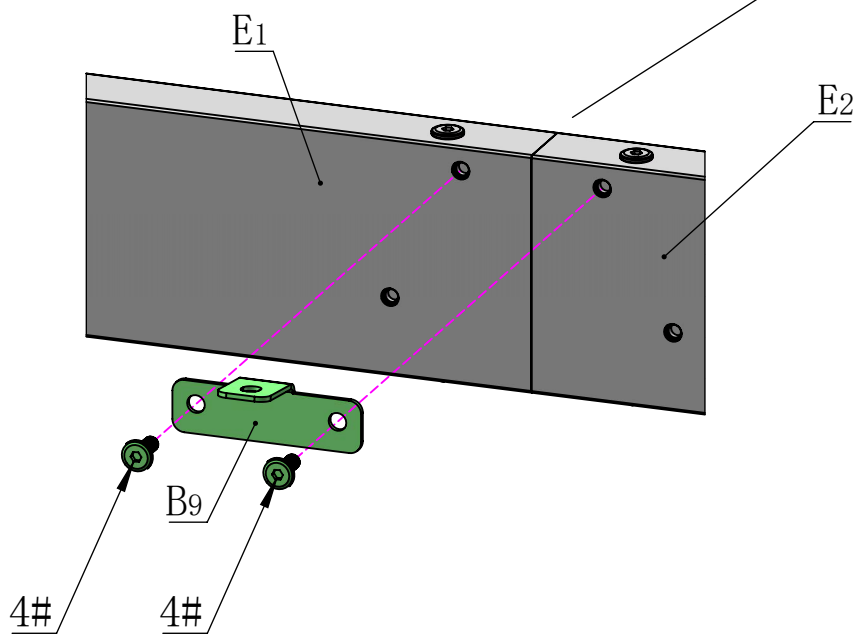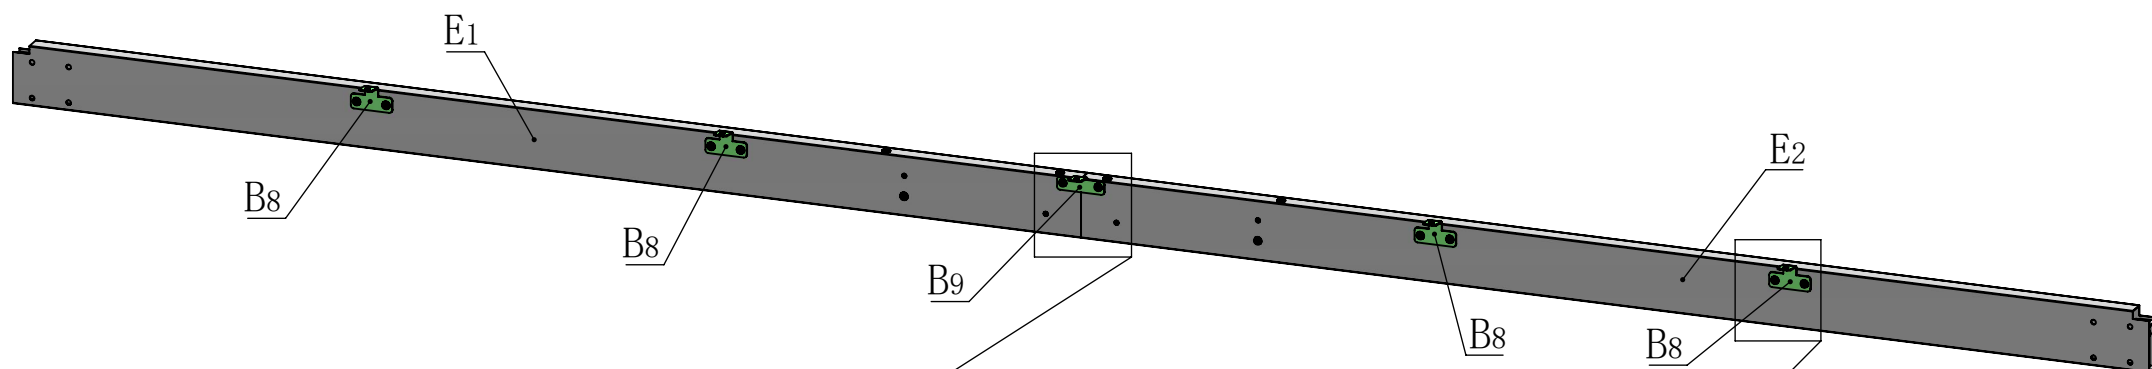

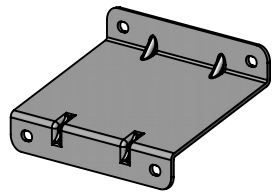

E3


1X

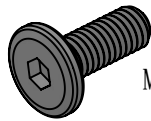

M6*16

4#



2X

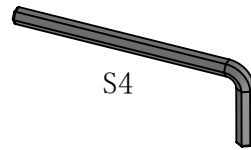


S4


16#

1X

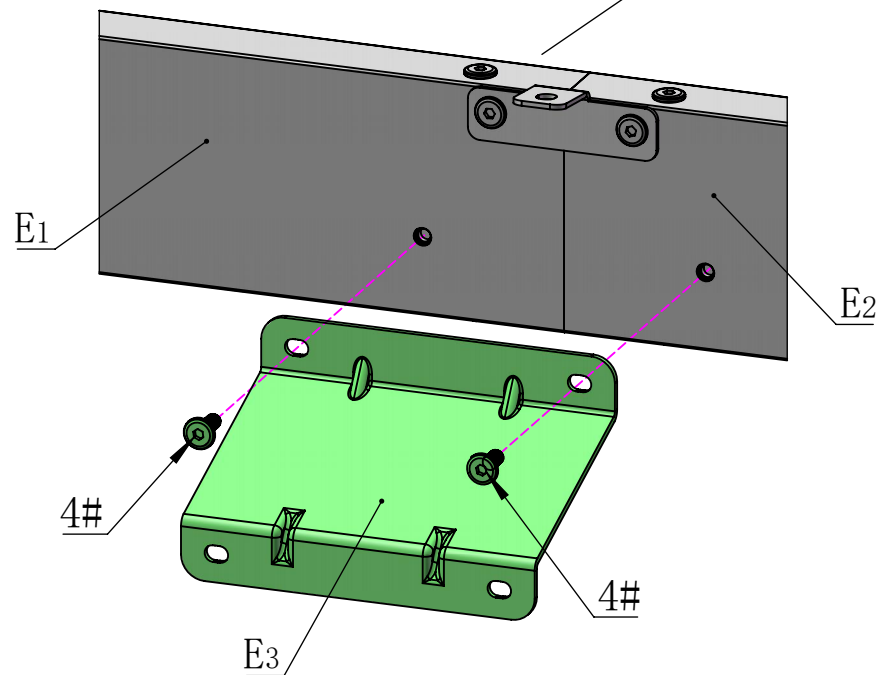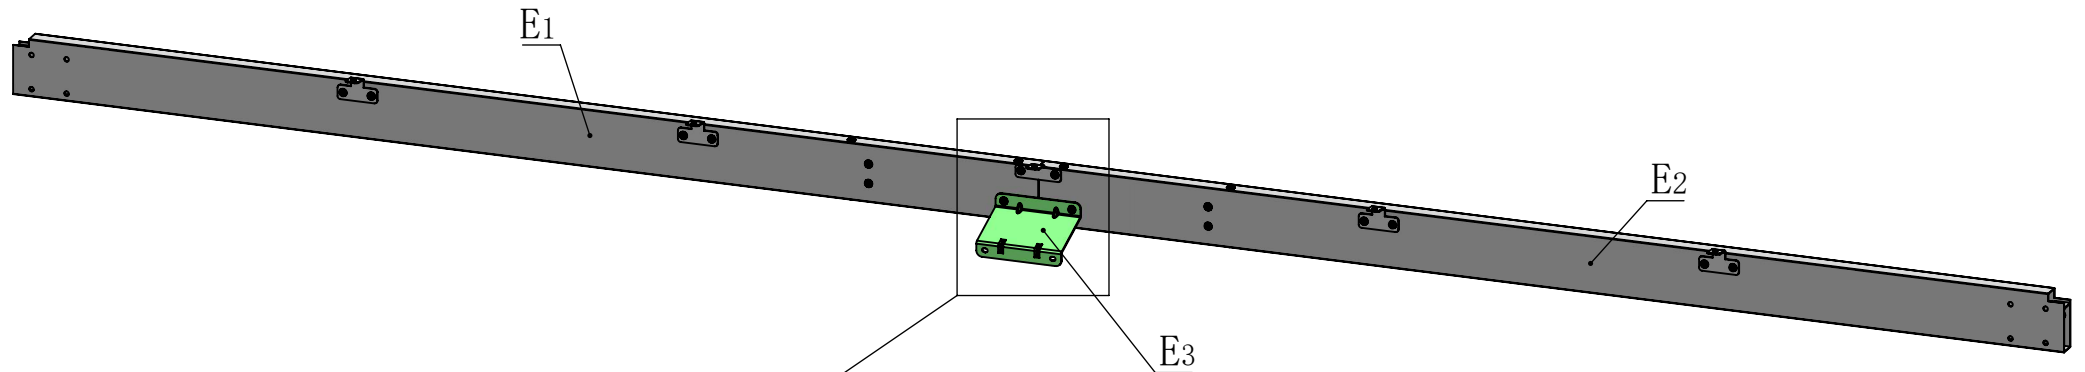


Frame Assembly

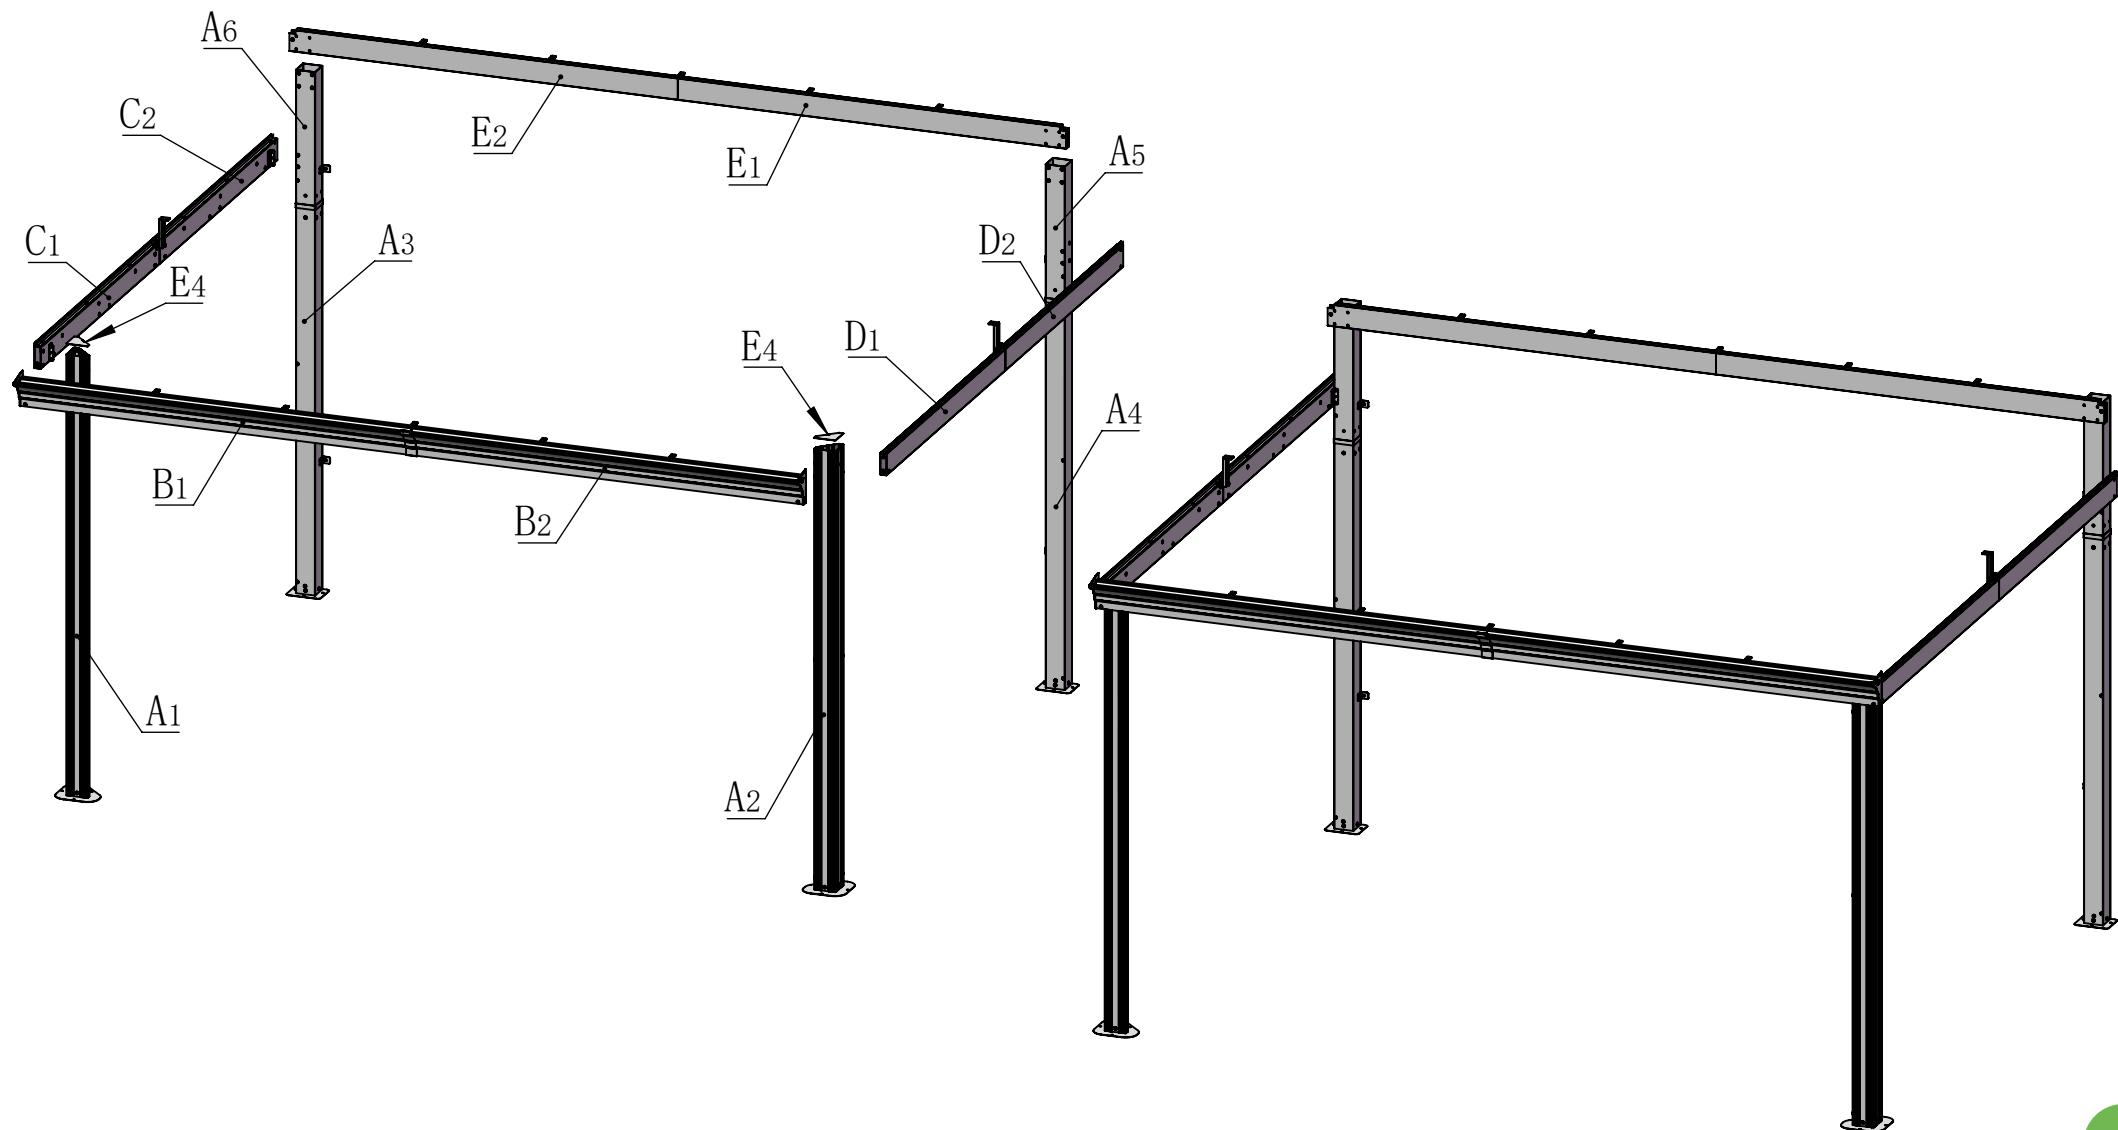

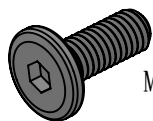

M6*16

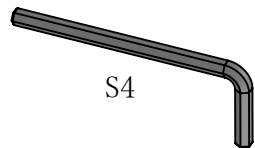


S4


4#

6X

16#

1X

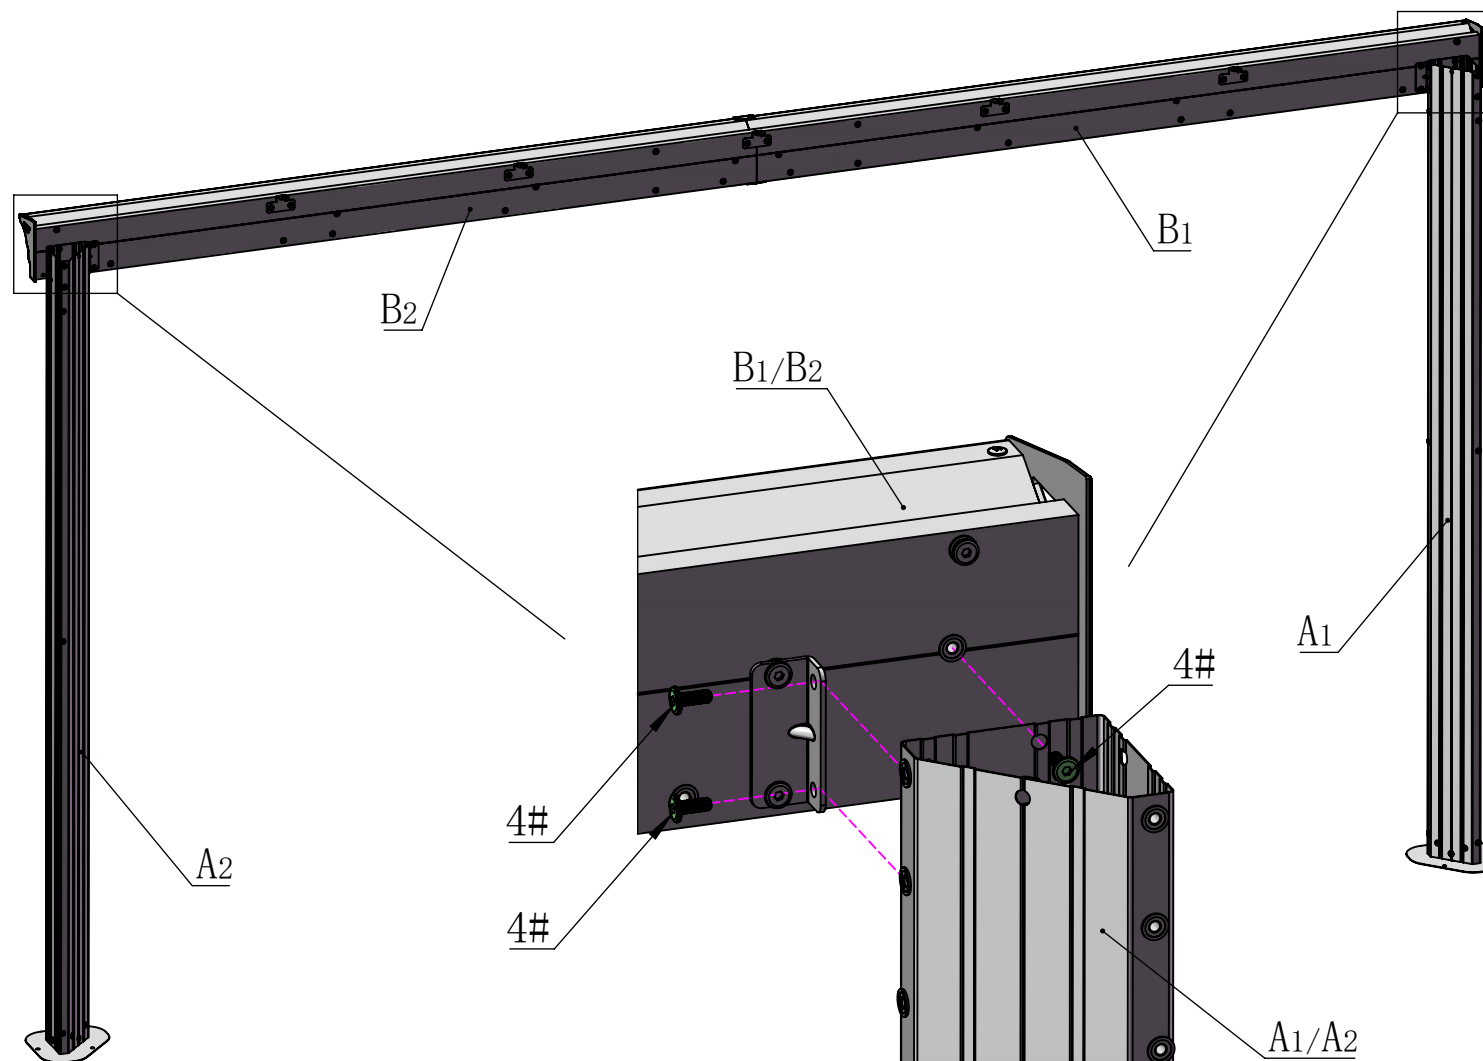


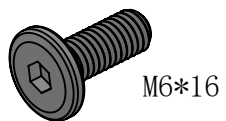

M6*16

4#


10X

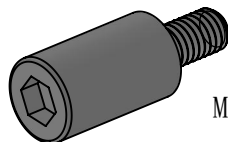

M6*12 (L20)

7#


2X

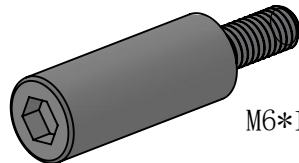

M6*15 (L30)

8#




6X

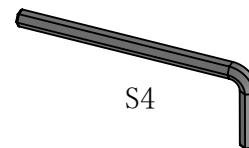


S4


16#

1X

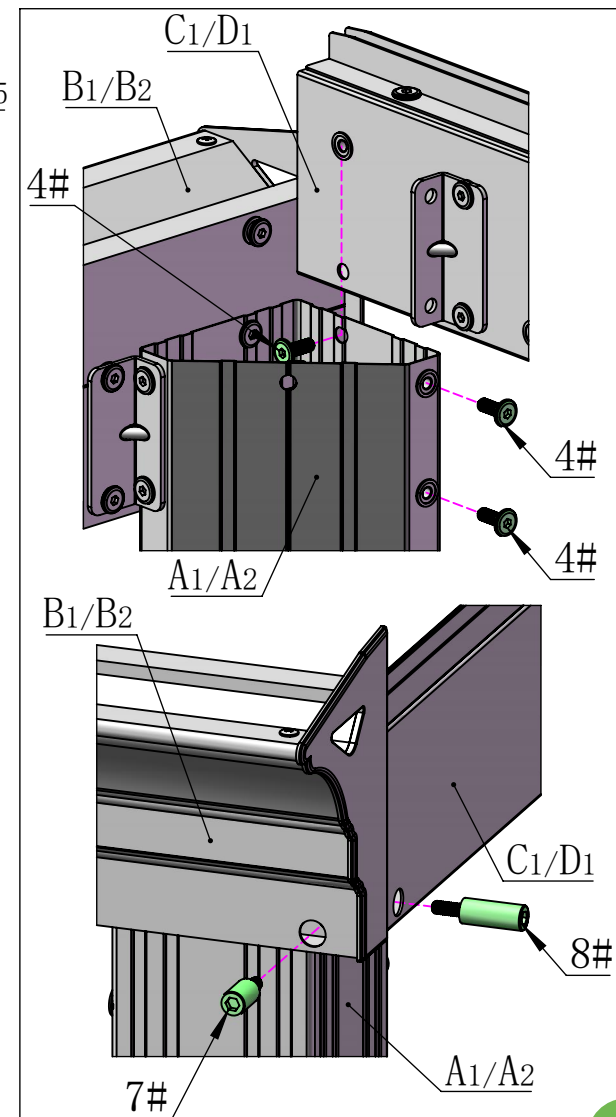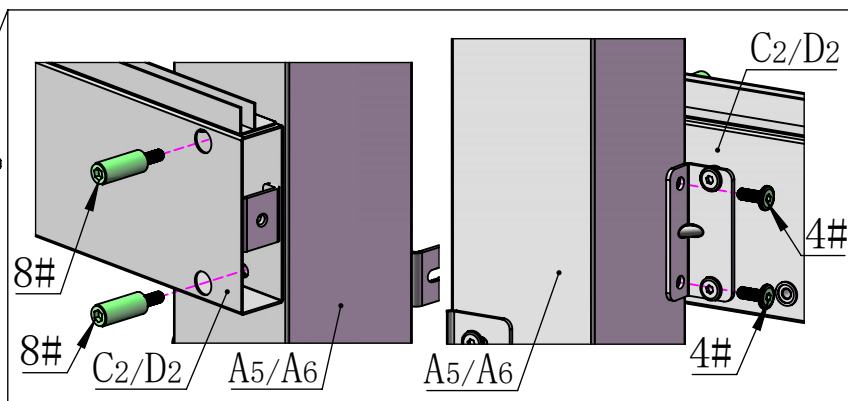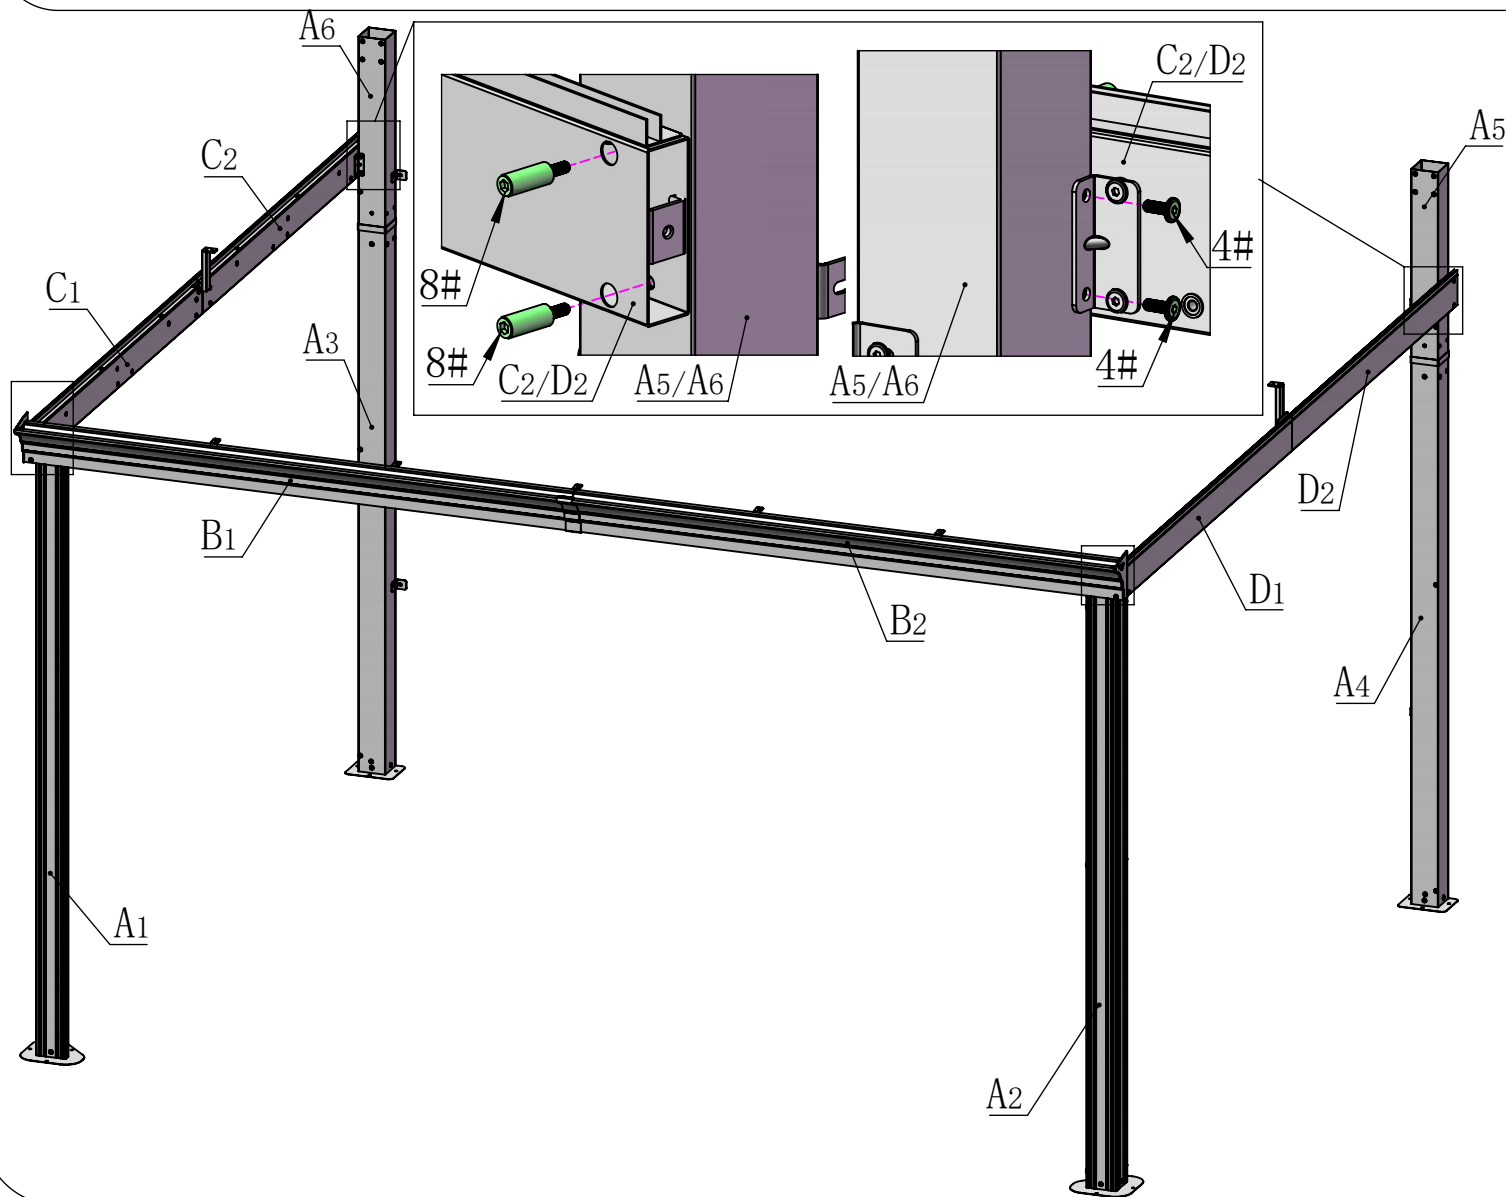

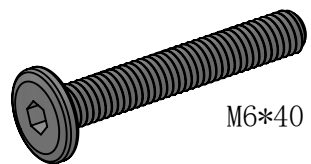

M6*40

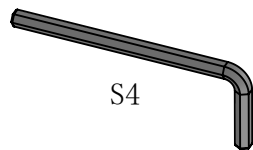


S4


6#

8X

16#


1X

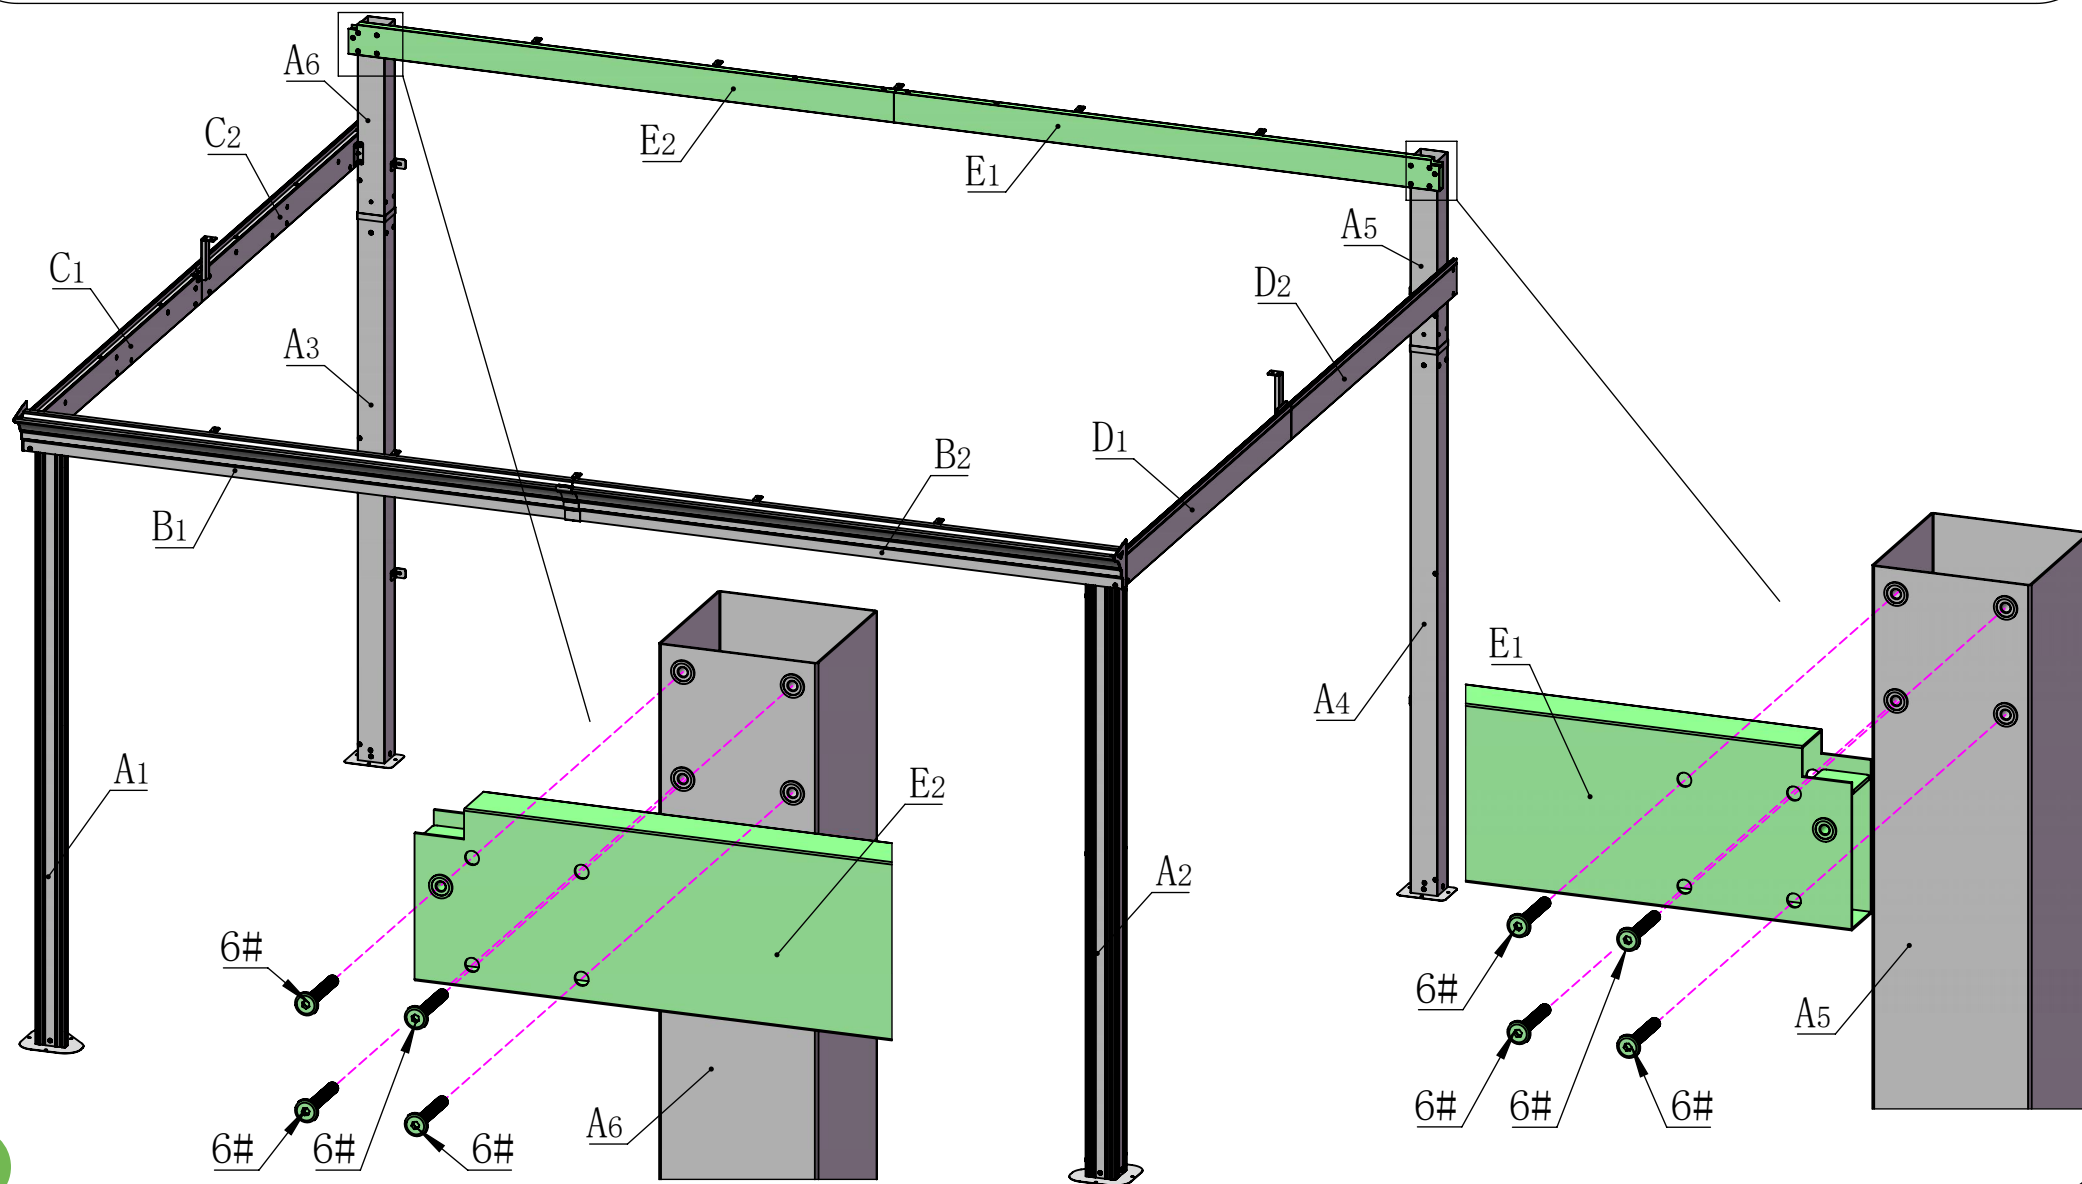

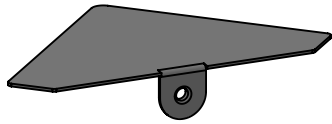

E4


2X

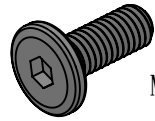

M6*16

4#


2X

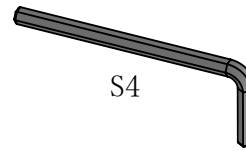


S4


16#

1X

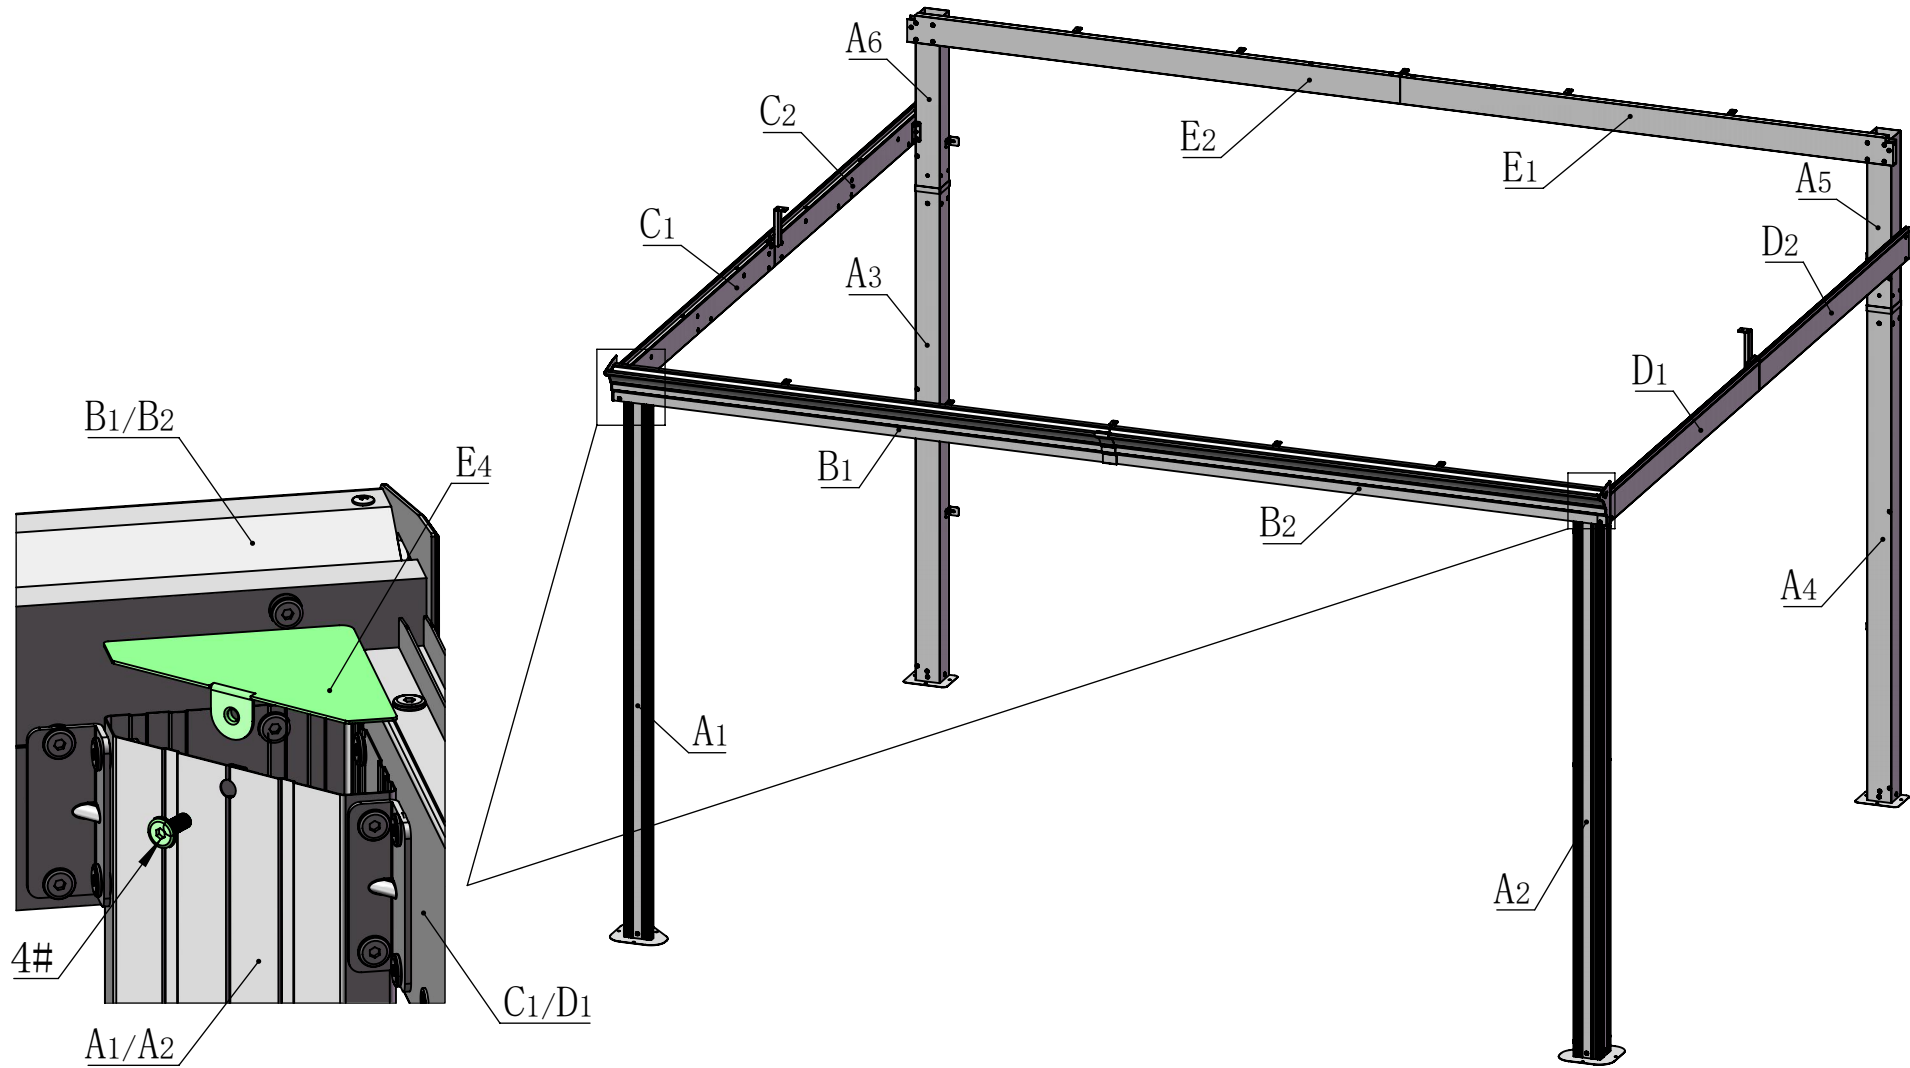


Middle Beam Assembly

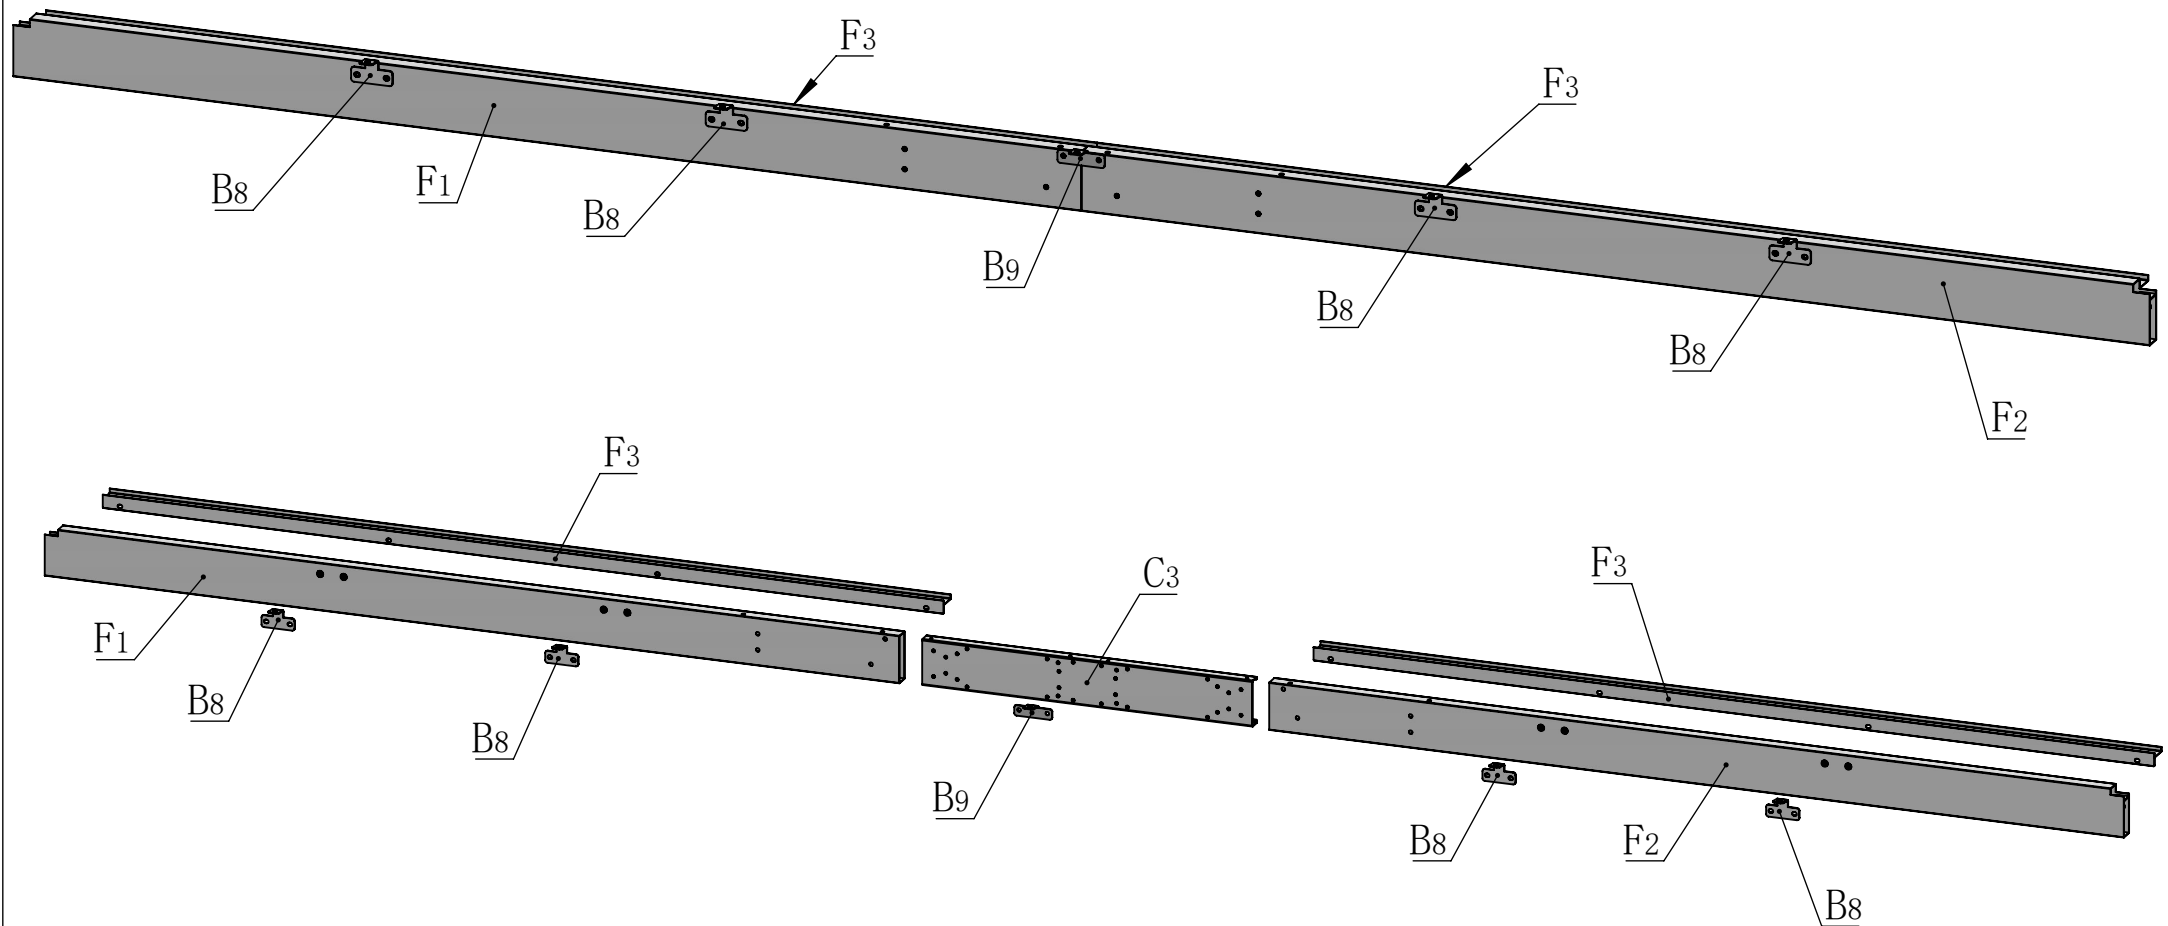




F1

1X



F2

1X



C3


1X



M6*16

4#



14X

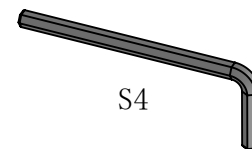


S4

16#


1X

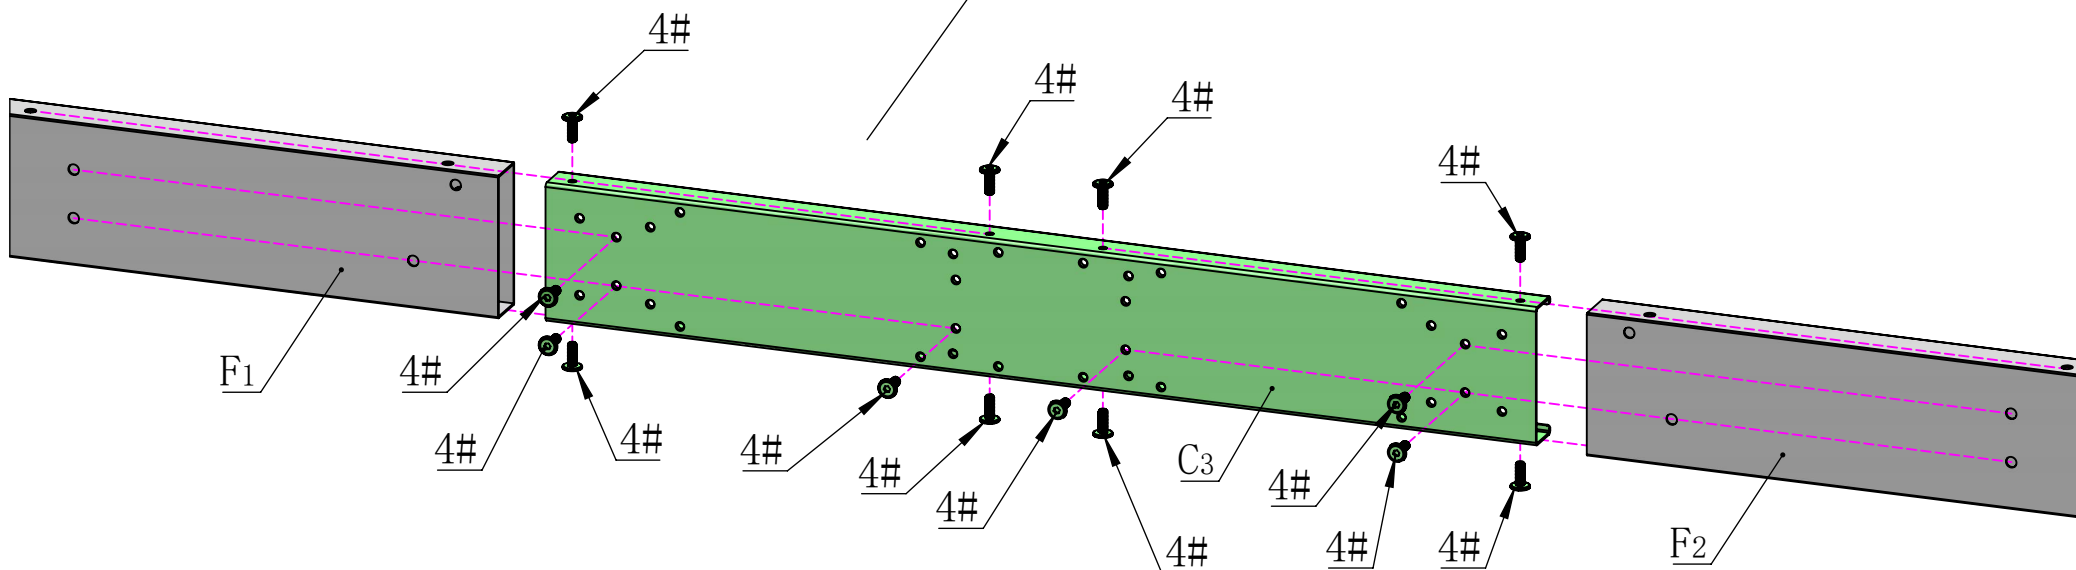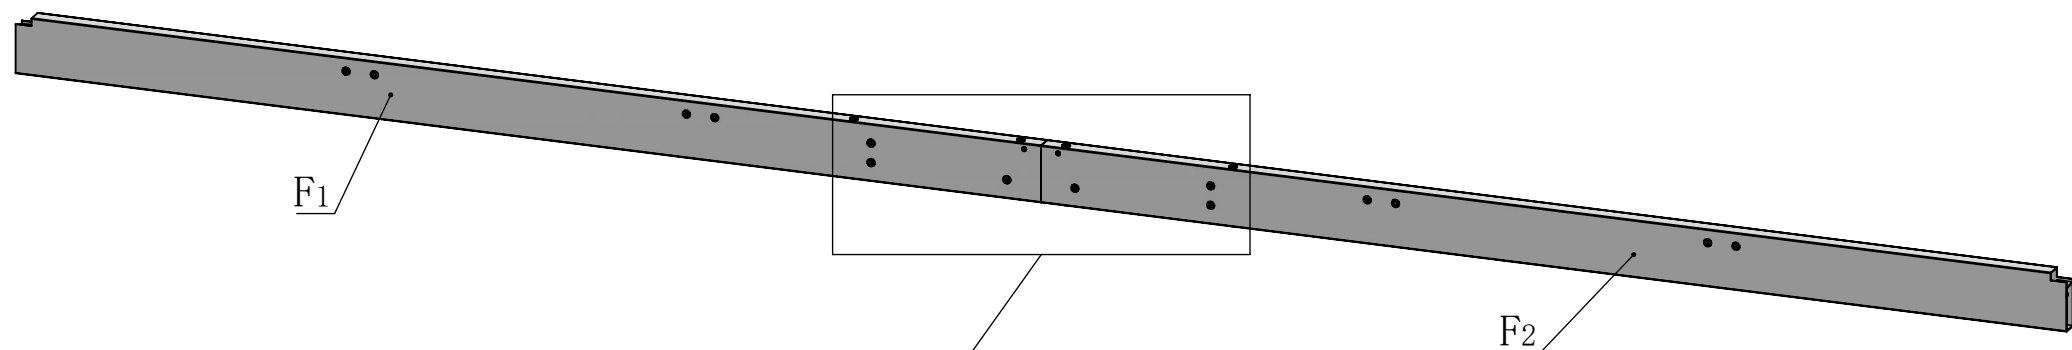

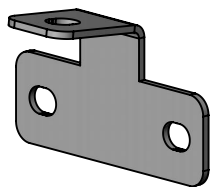

B8

4X

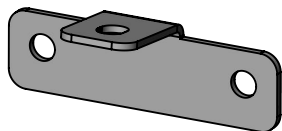

B9


1X



M6*16

4#


10X

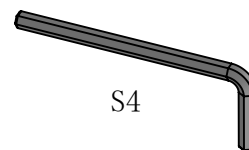


S4


16#

1X

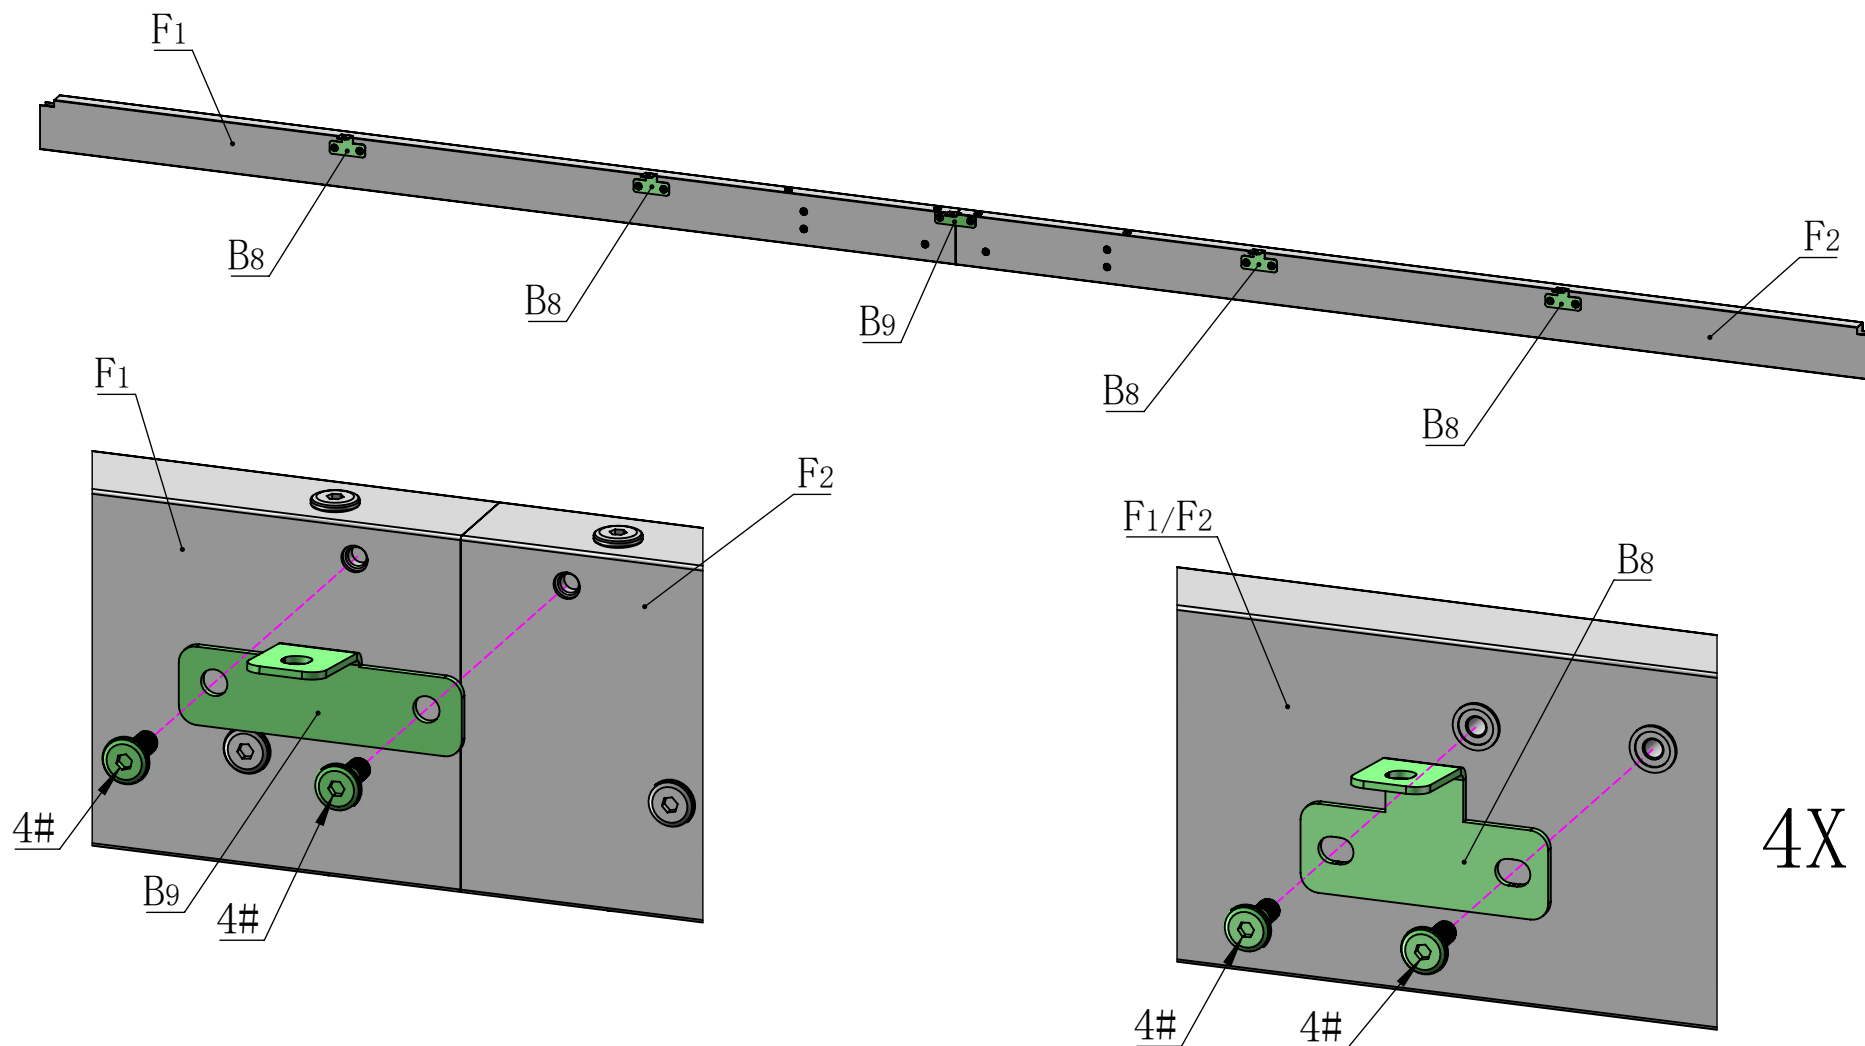


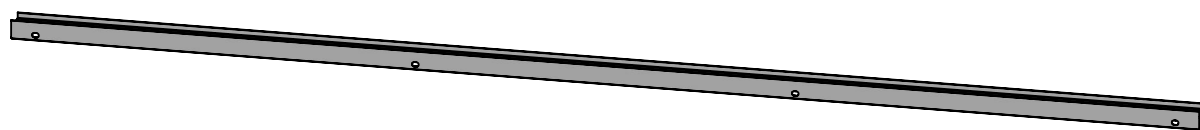


F₃ 2X

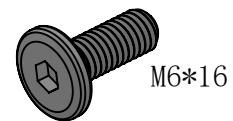

4# 8X

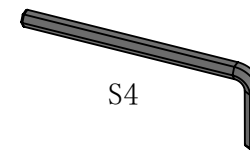


16# 1X

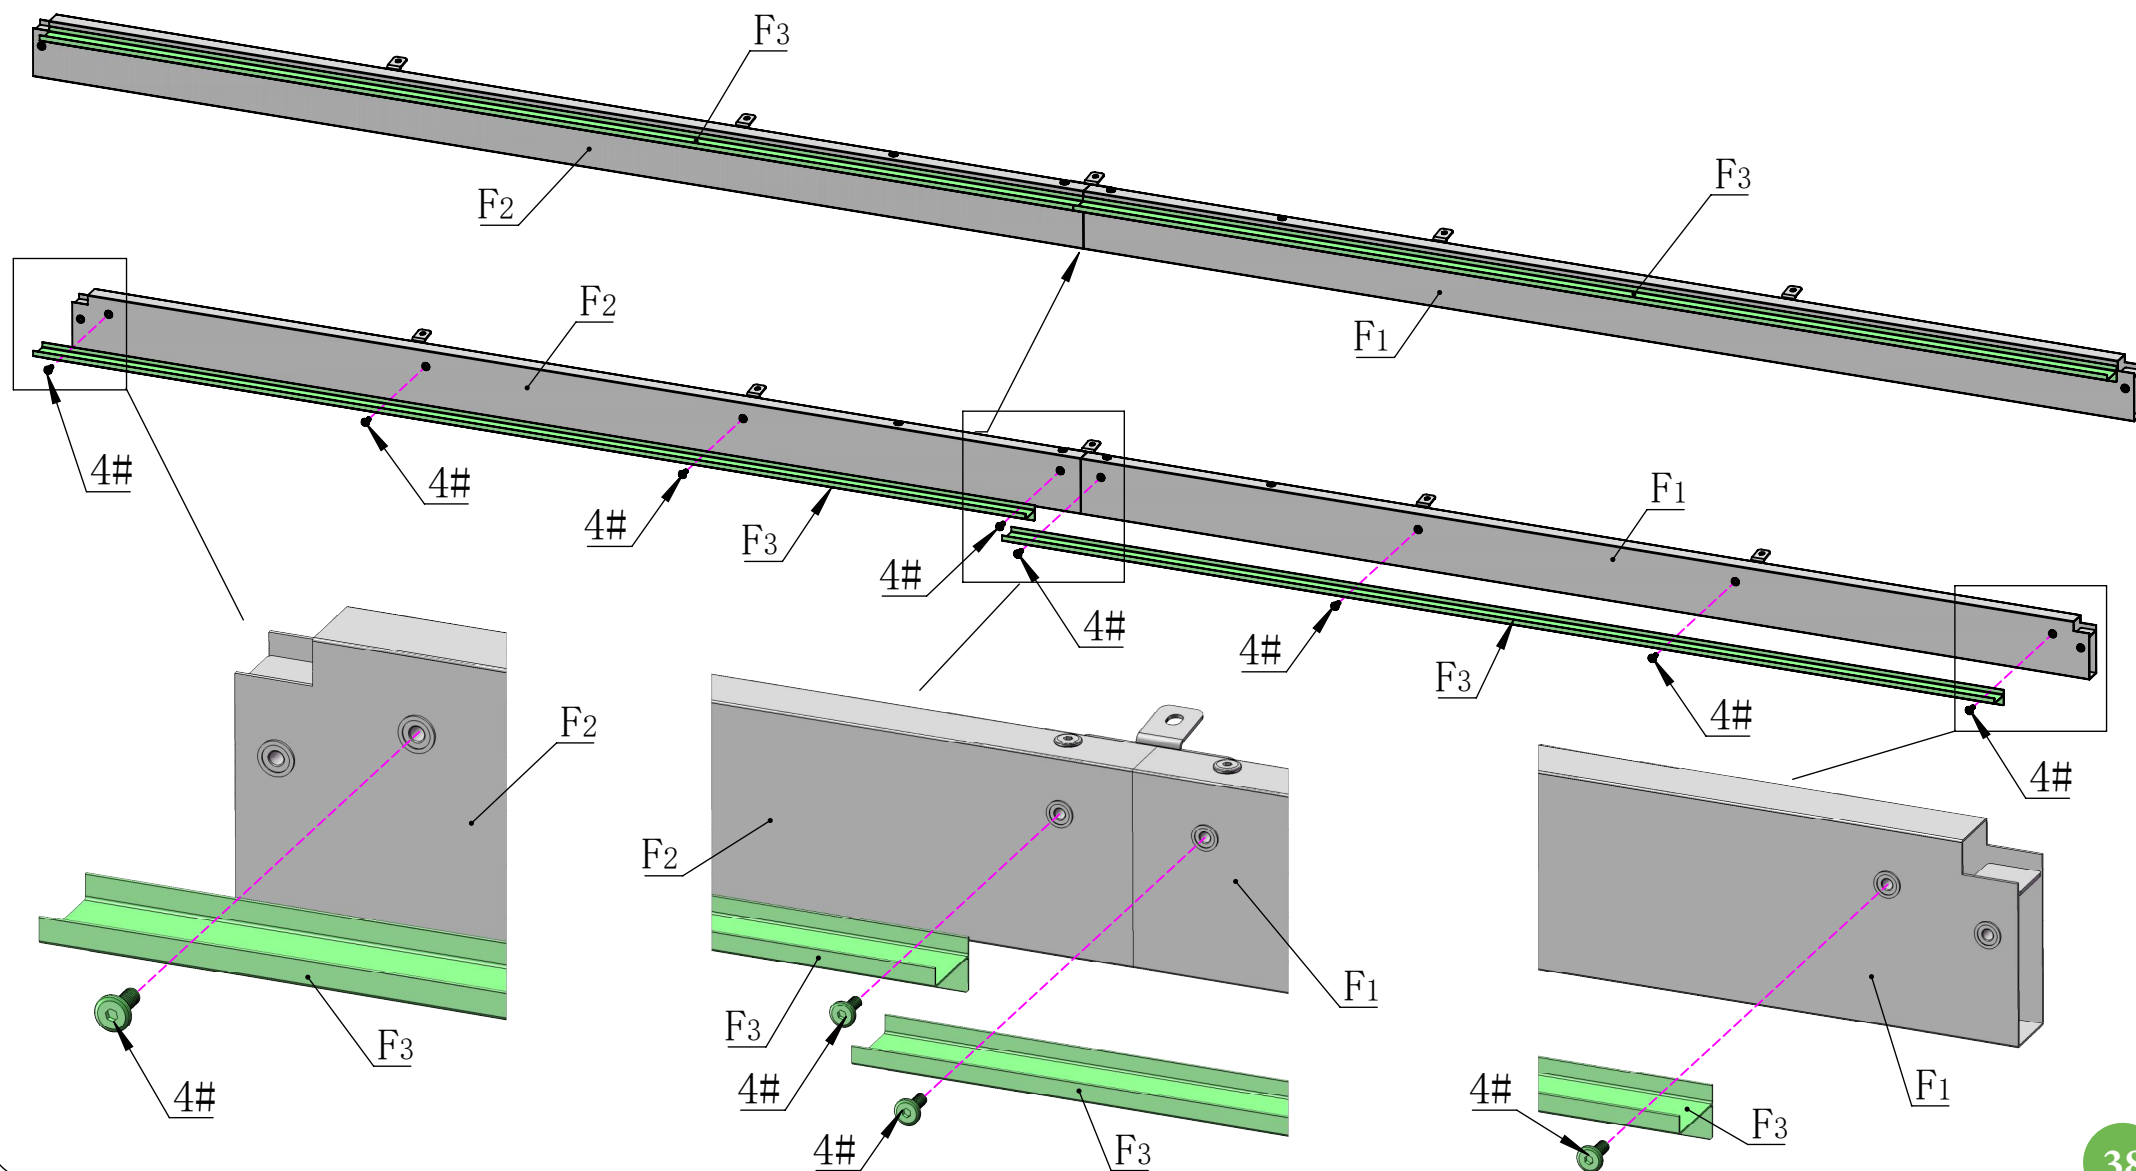





Use silicone sealant (part #15) to affix the gap between the two beams.

15# 1X

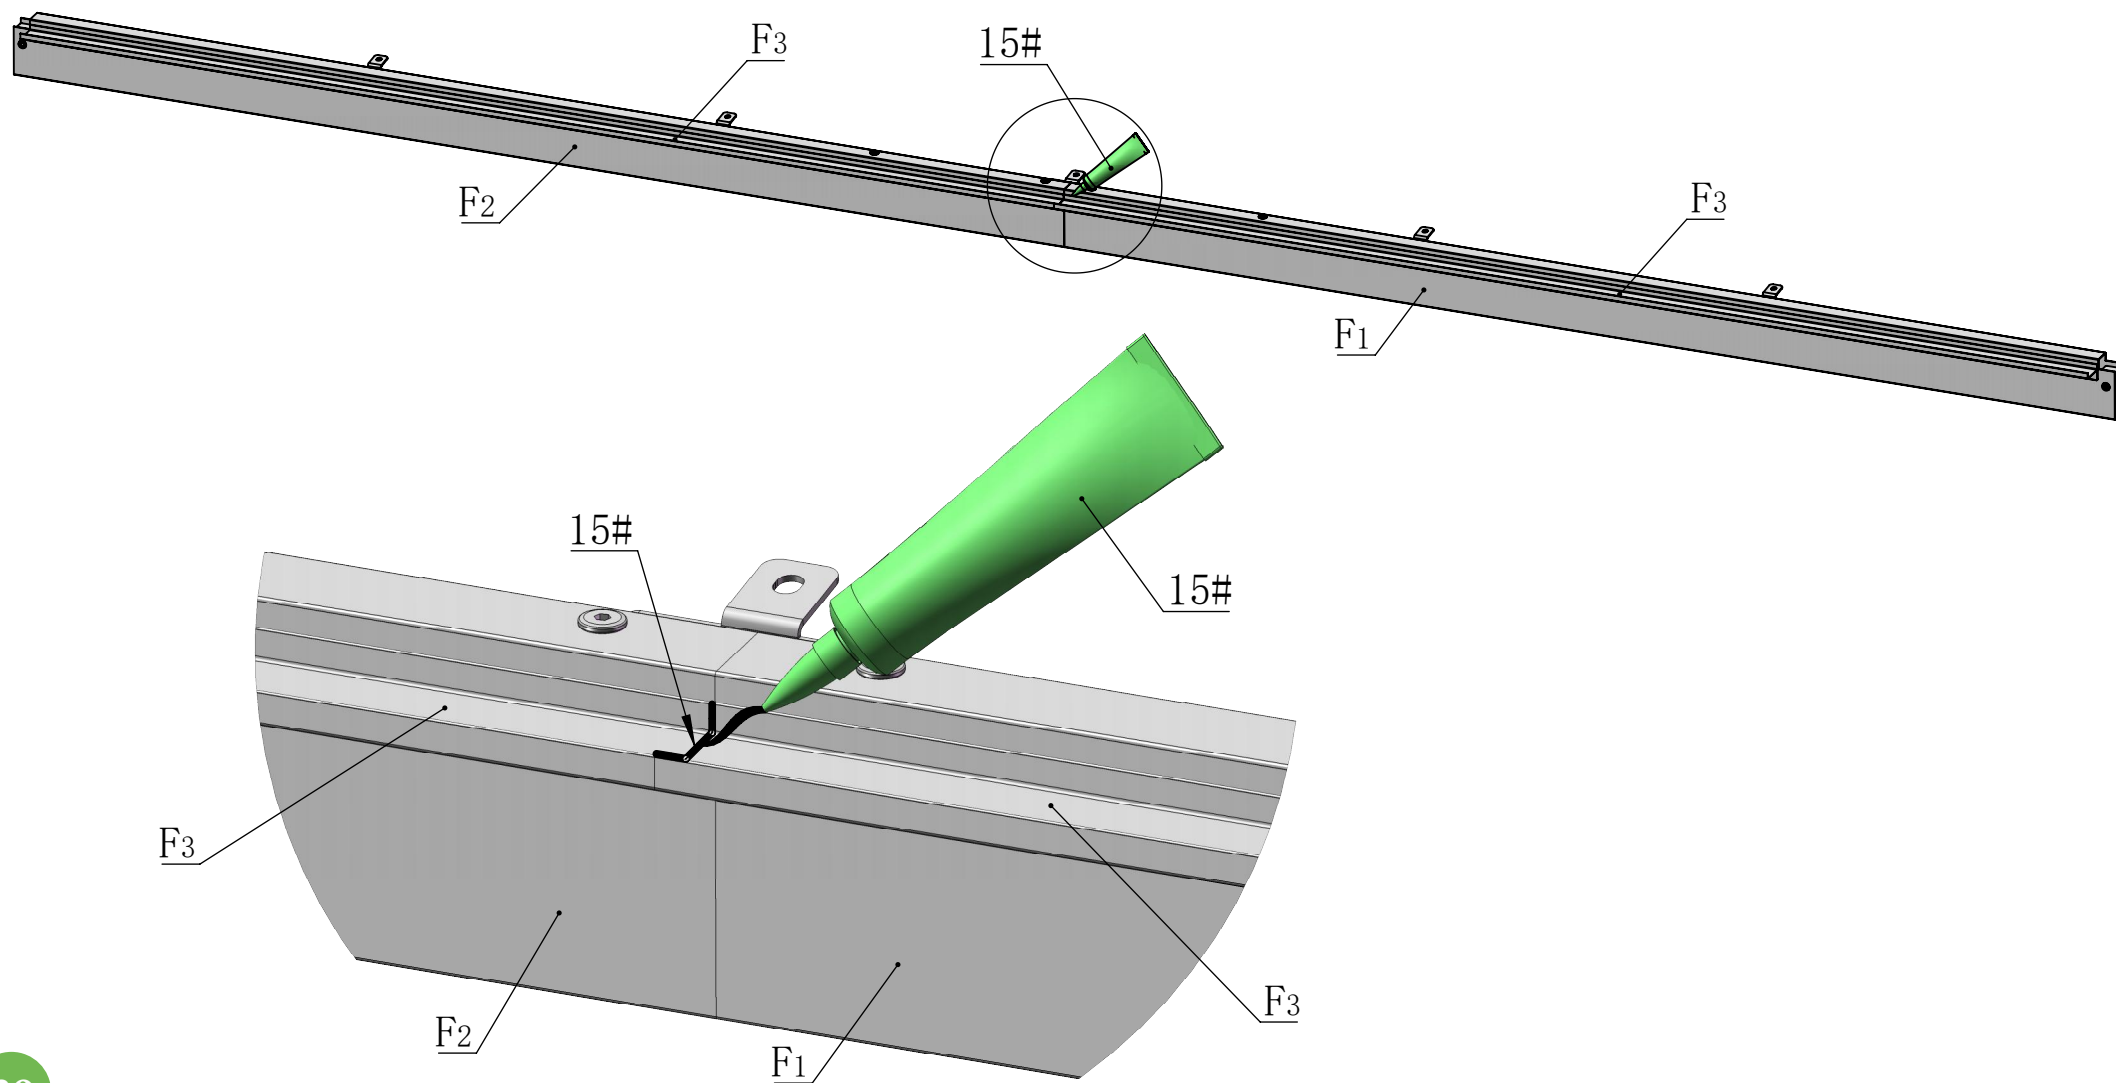

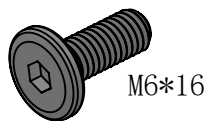

M6*16

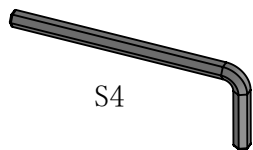


S4



4#

2X

16#


1X

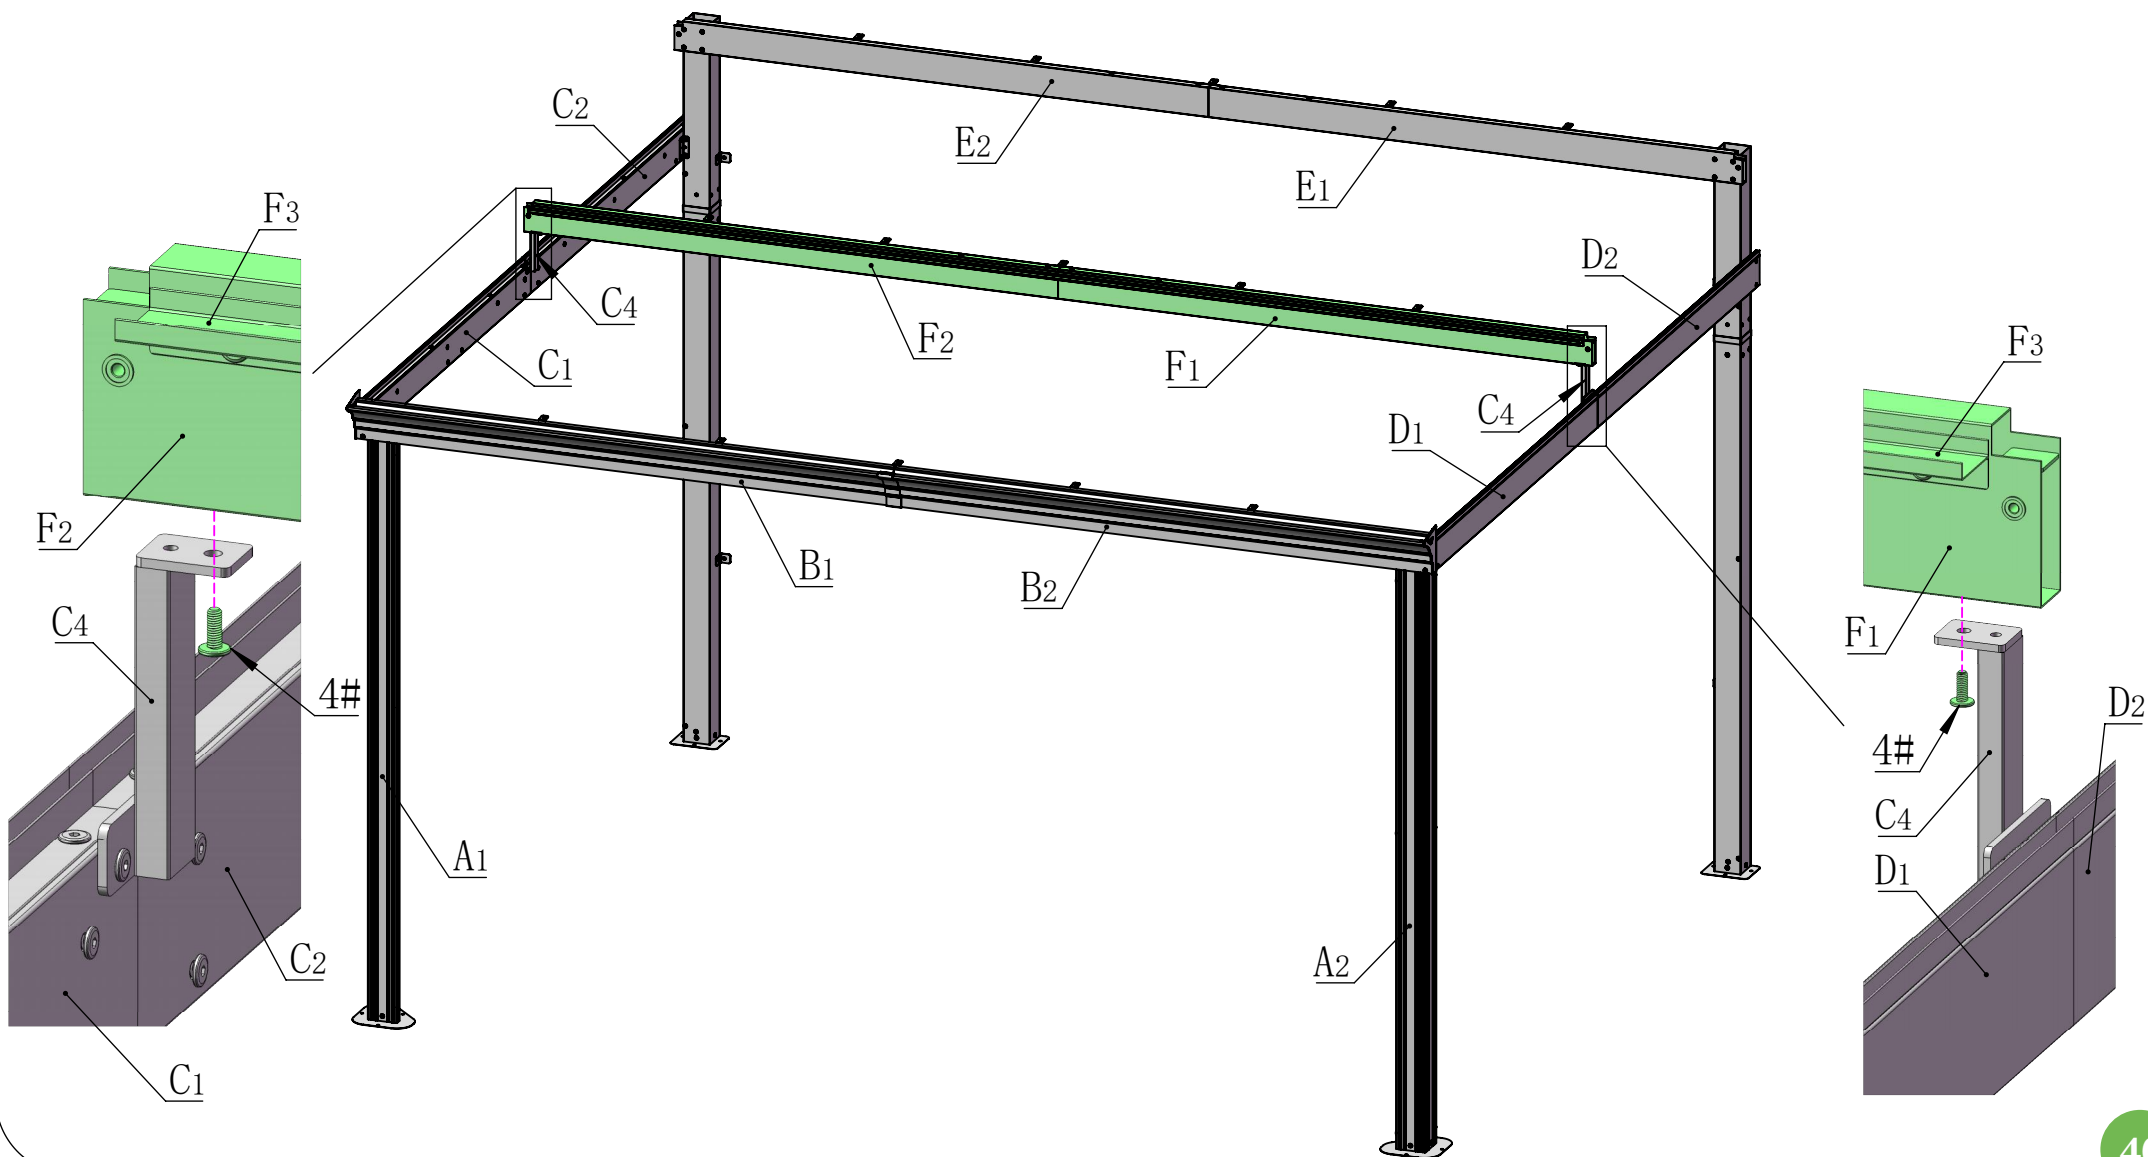

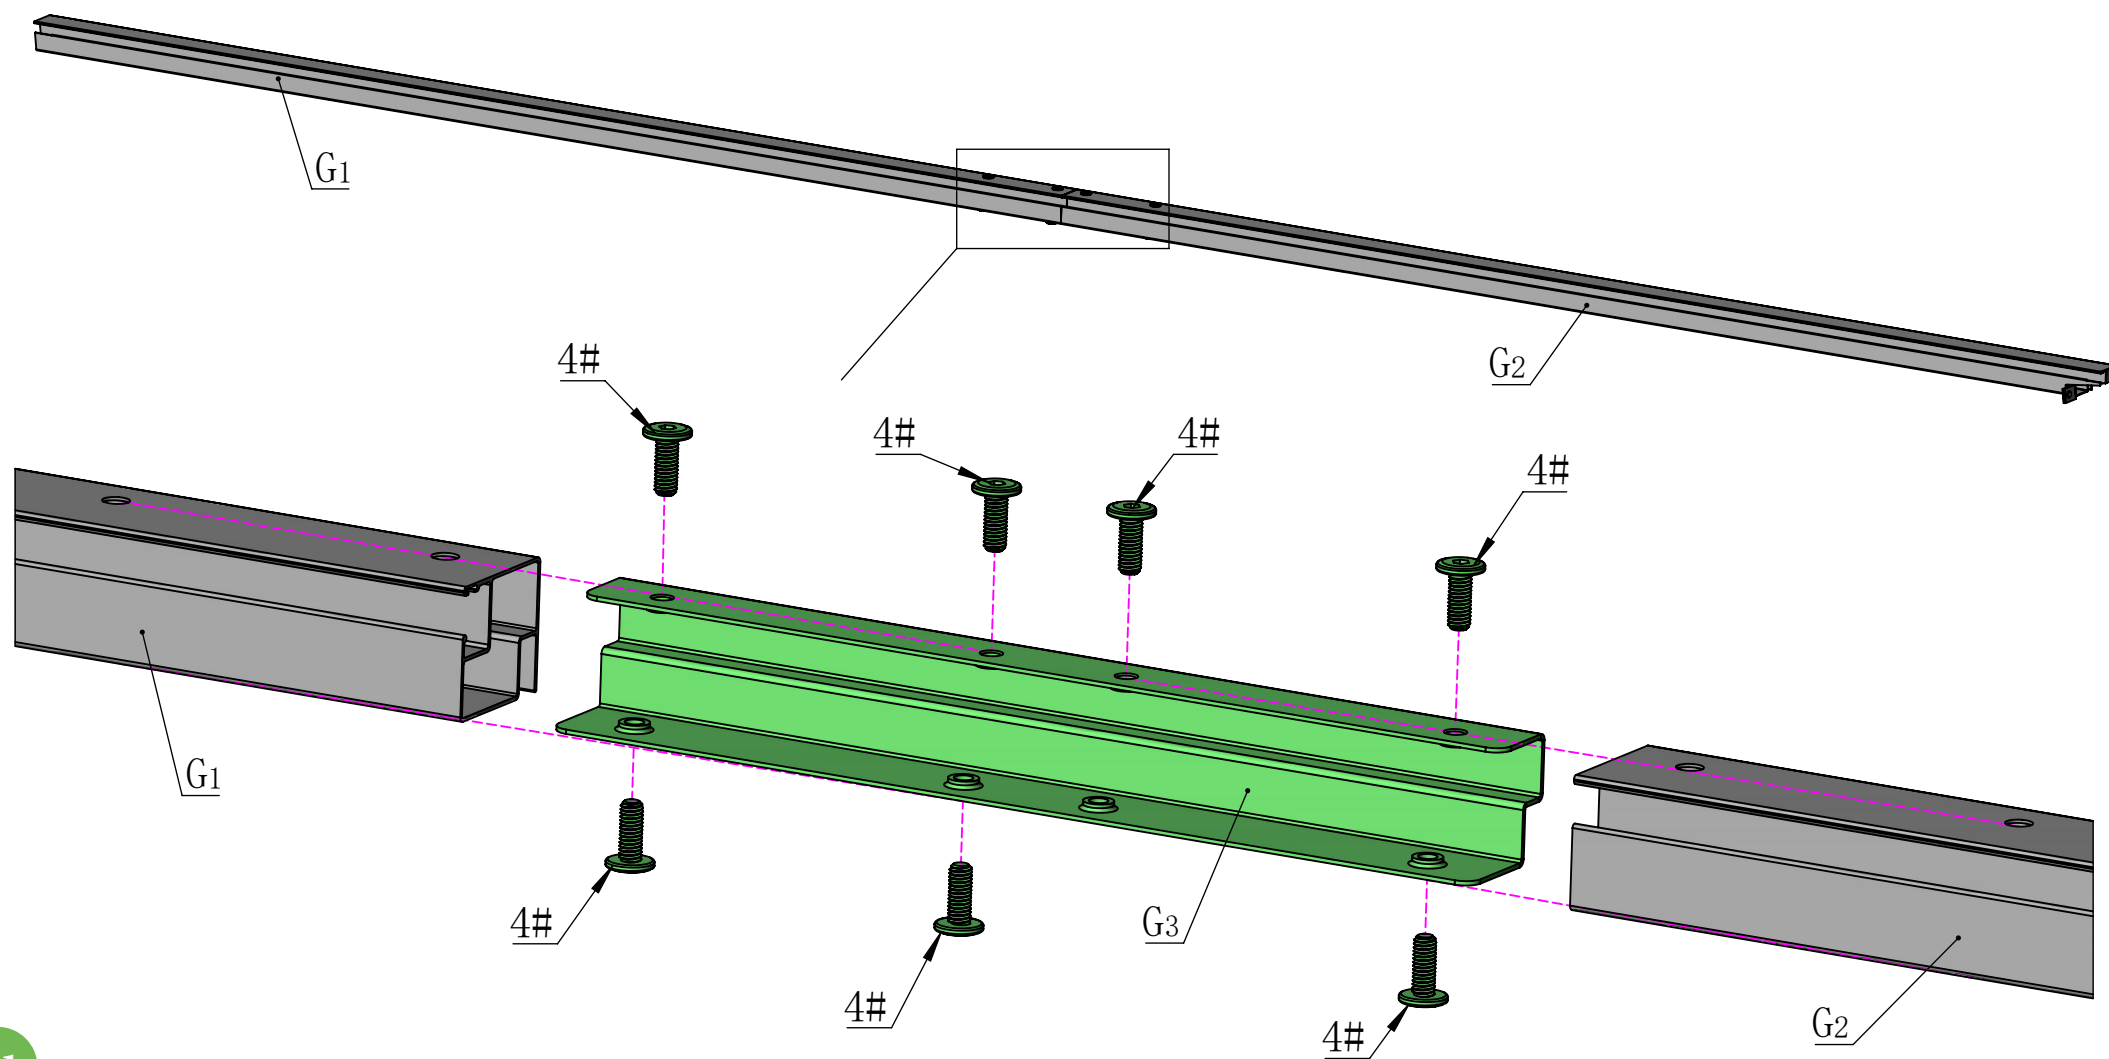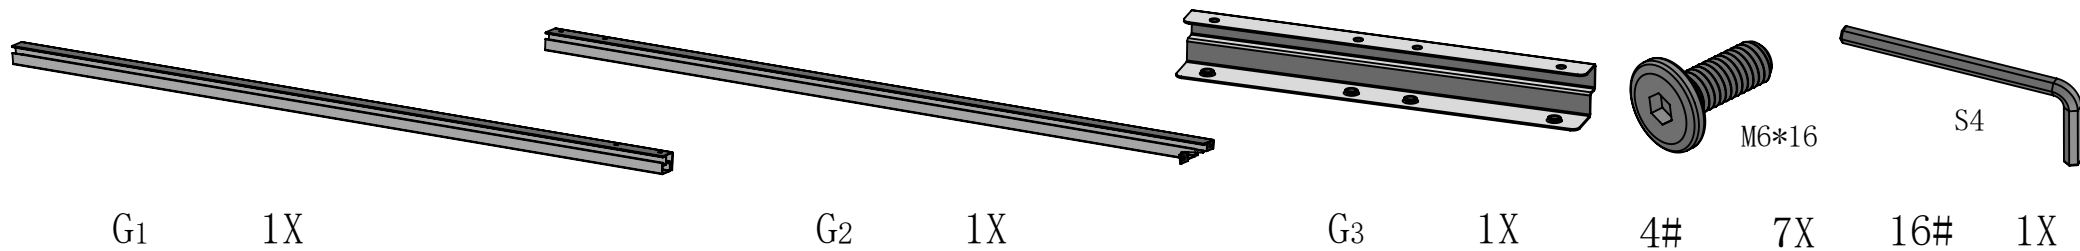





15# 1X

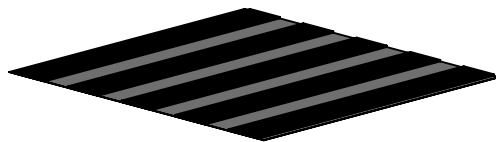

11# 1X


Apply a strip of waterproof tape (part # 11) on the gap between G1 and G2. Then, fill the gap in the groove with silicone sealant (part # 15).

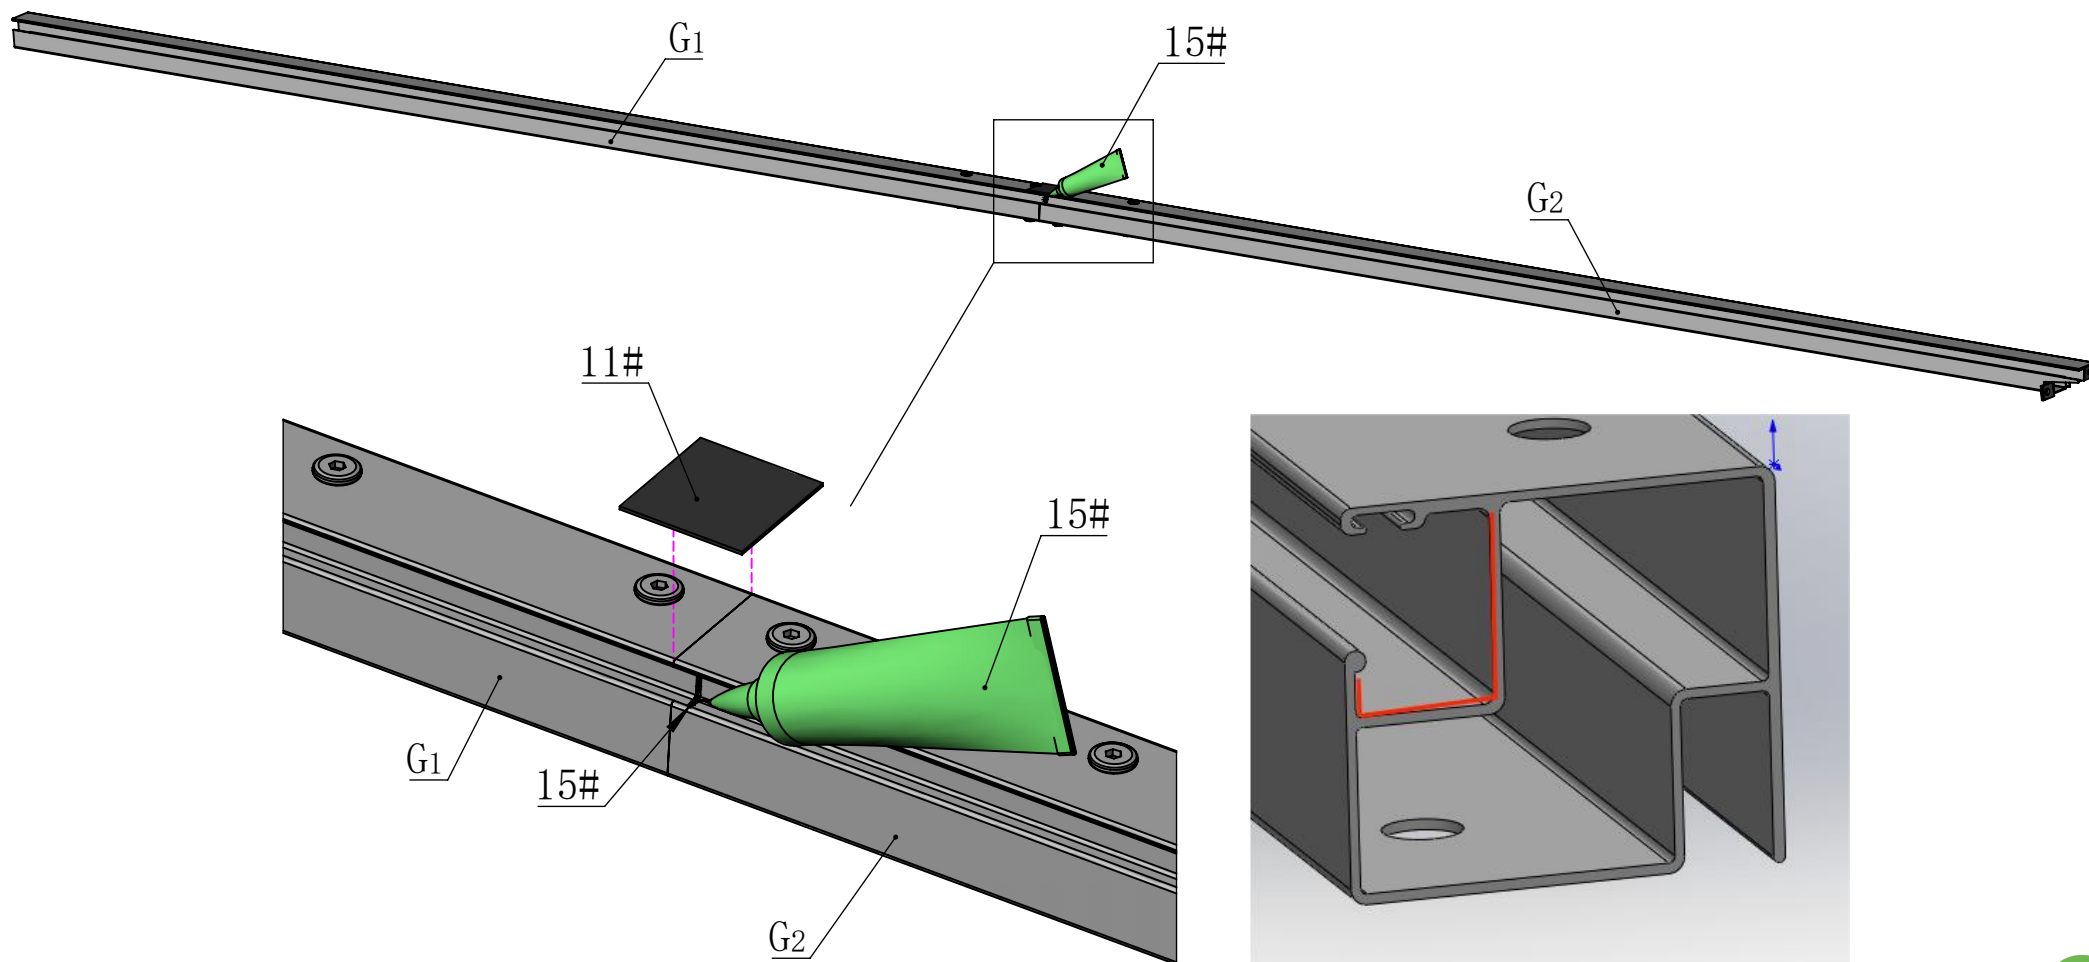

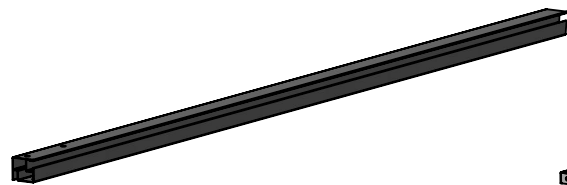


G4

1X

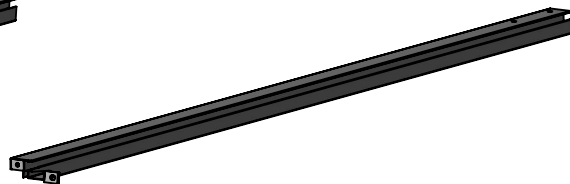


G5

1X

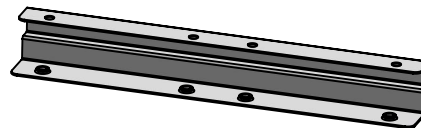


G3

1X



4#


M6*16

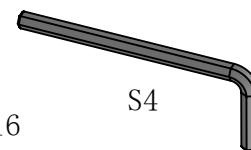

S4

16#


1X

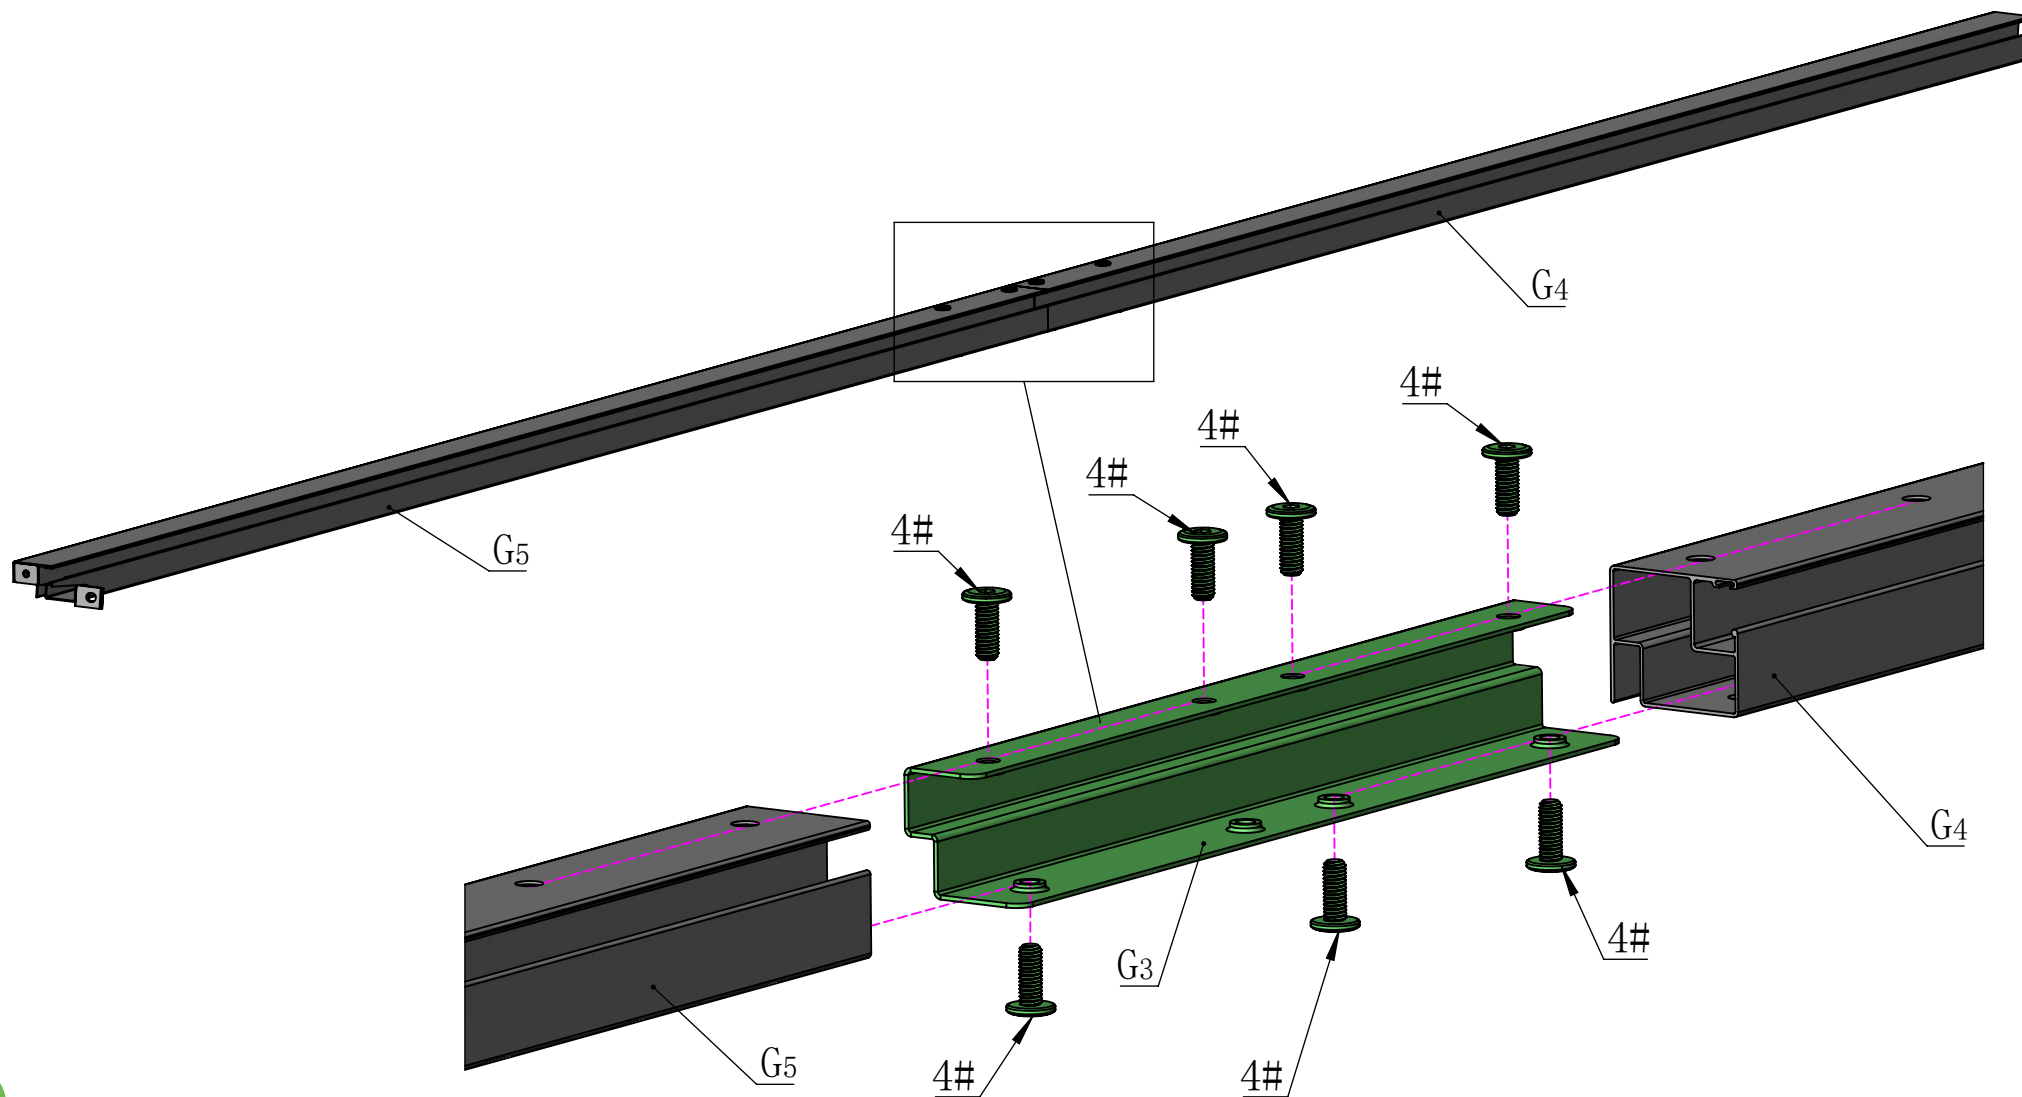



15#


1X


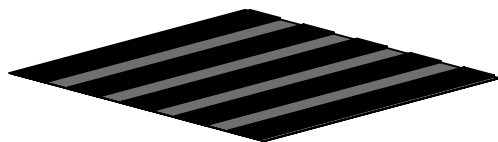


11#

1X

Apply a strip of waterproof tape (part # 11) on the gap between G4 and G5. Then, fill the gap in the groove with silicone sealant (part # 15).

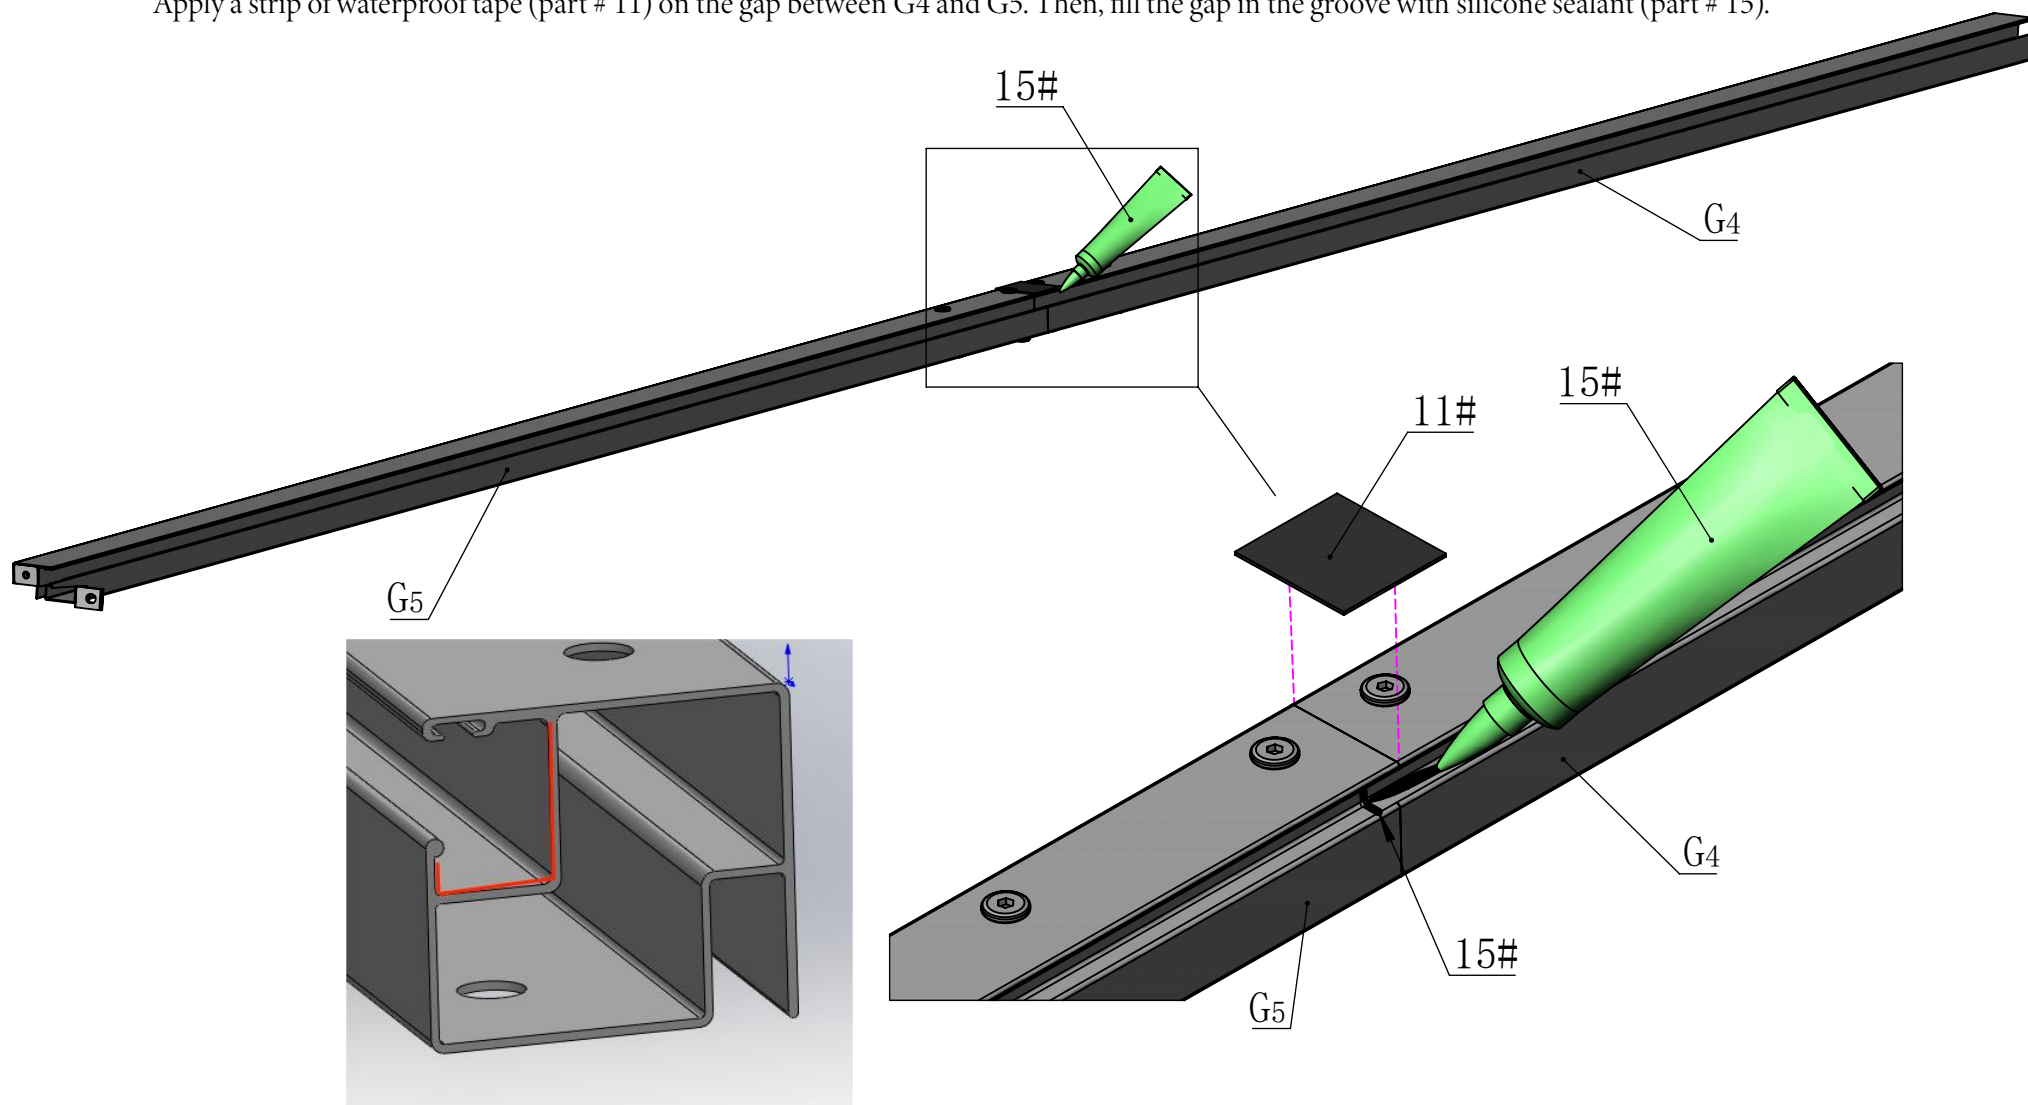


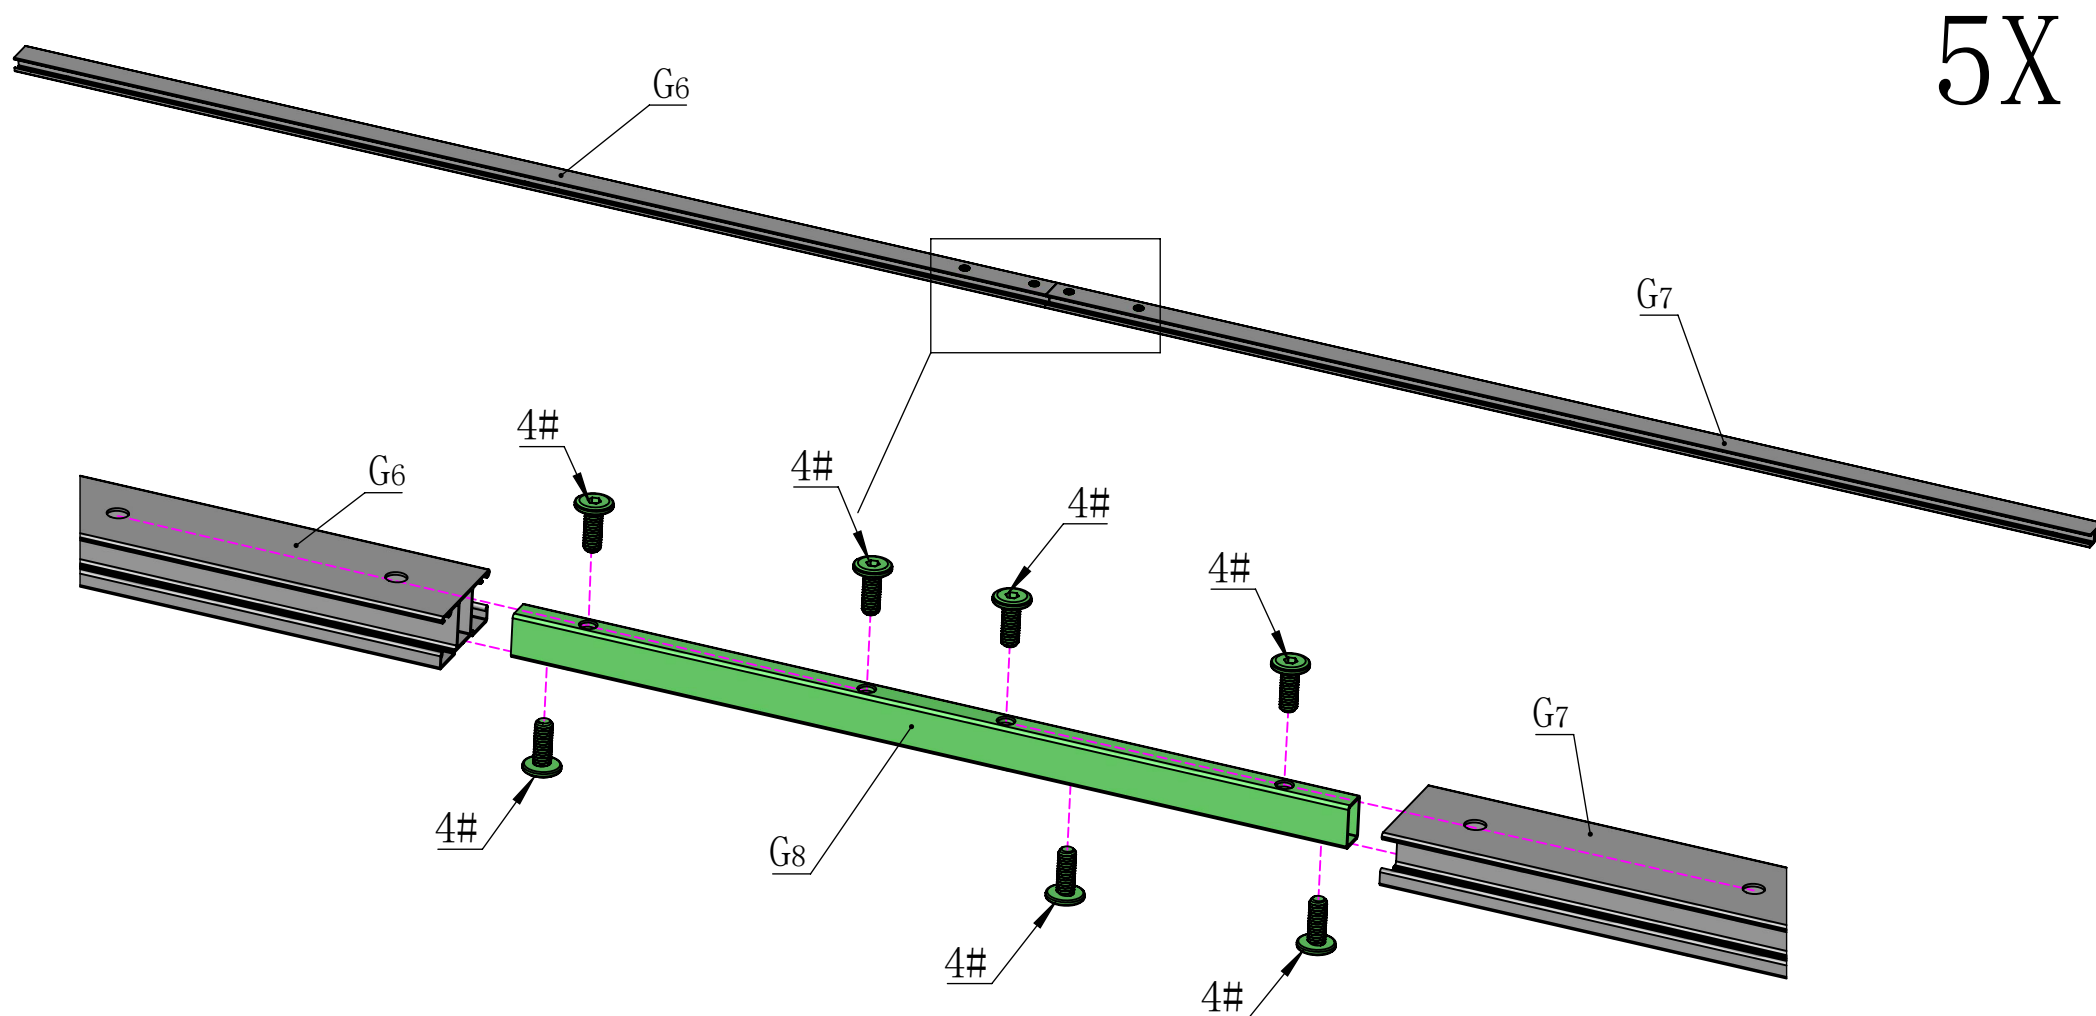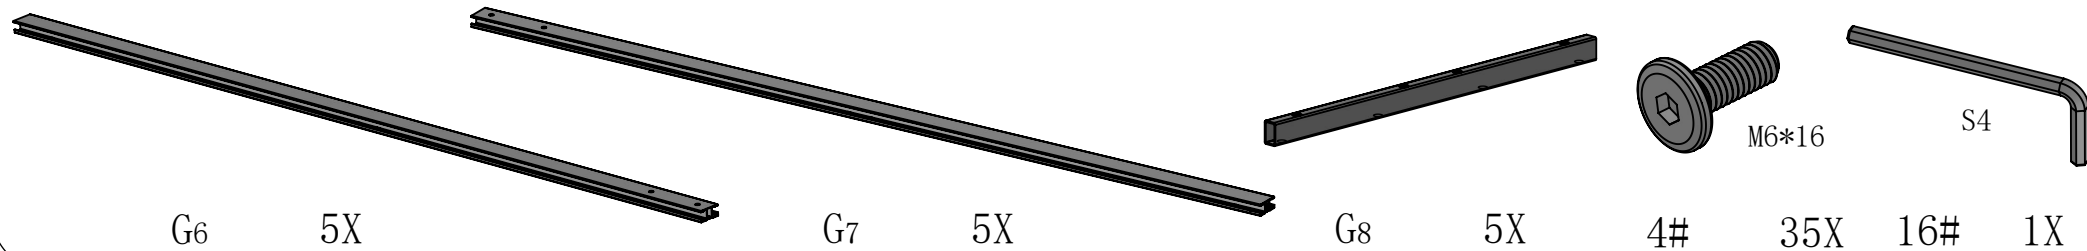



15#

1X

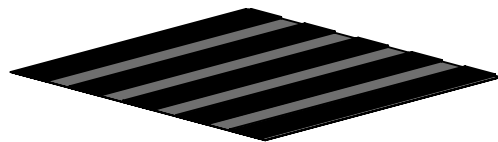



11#

1X

5X

Apply a strip of waterproof tape (part # 11) on the gap between G6 and G7.
Then, use silicone sealant (part # 15) to fill the gap in the groove on both sides.

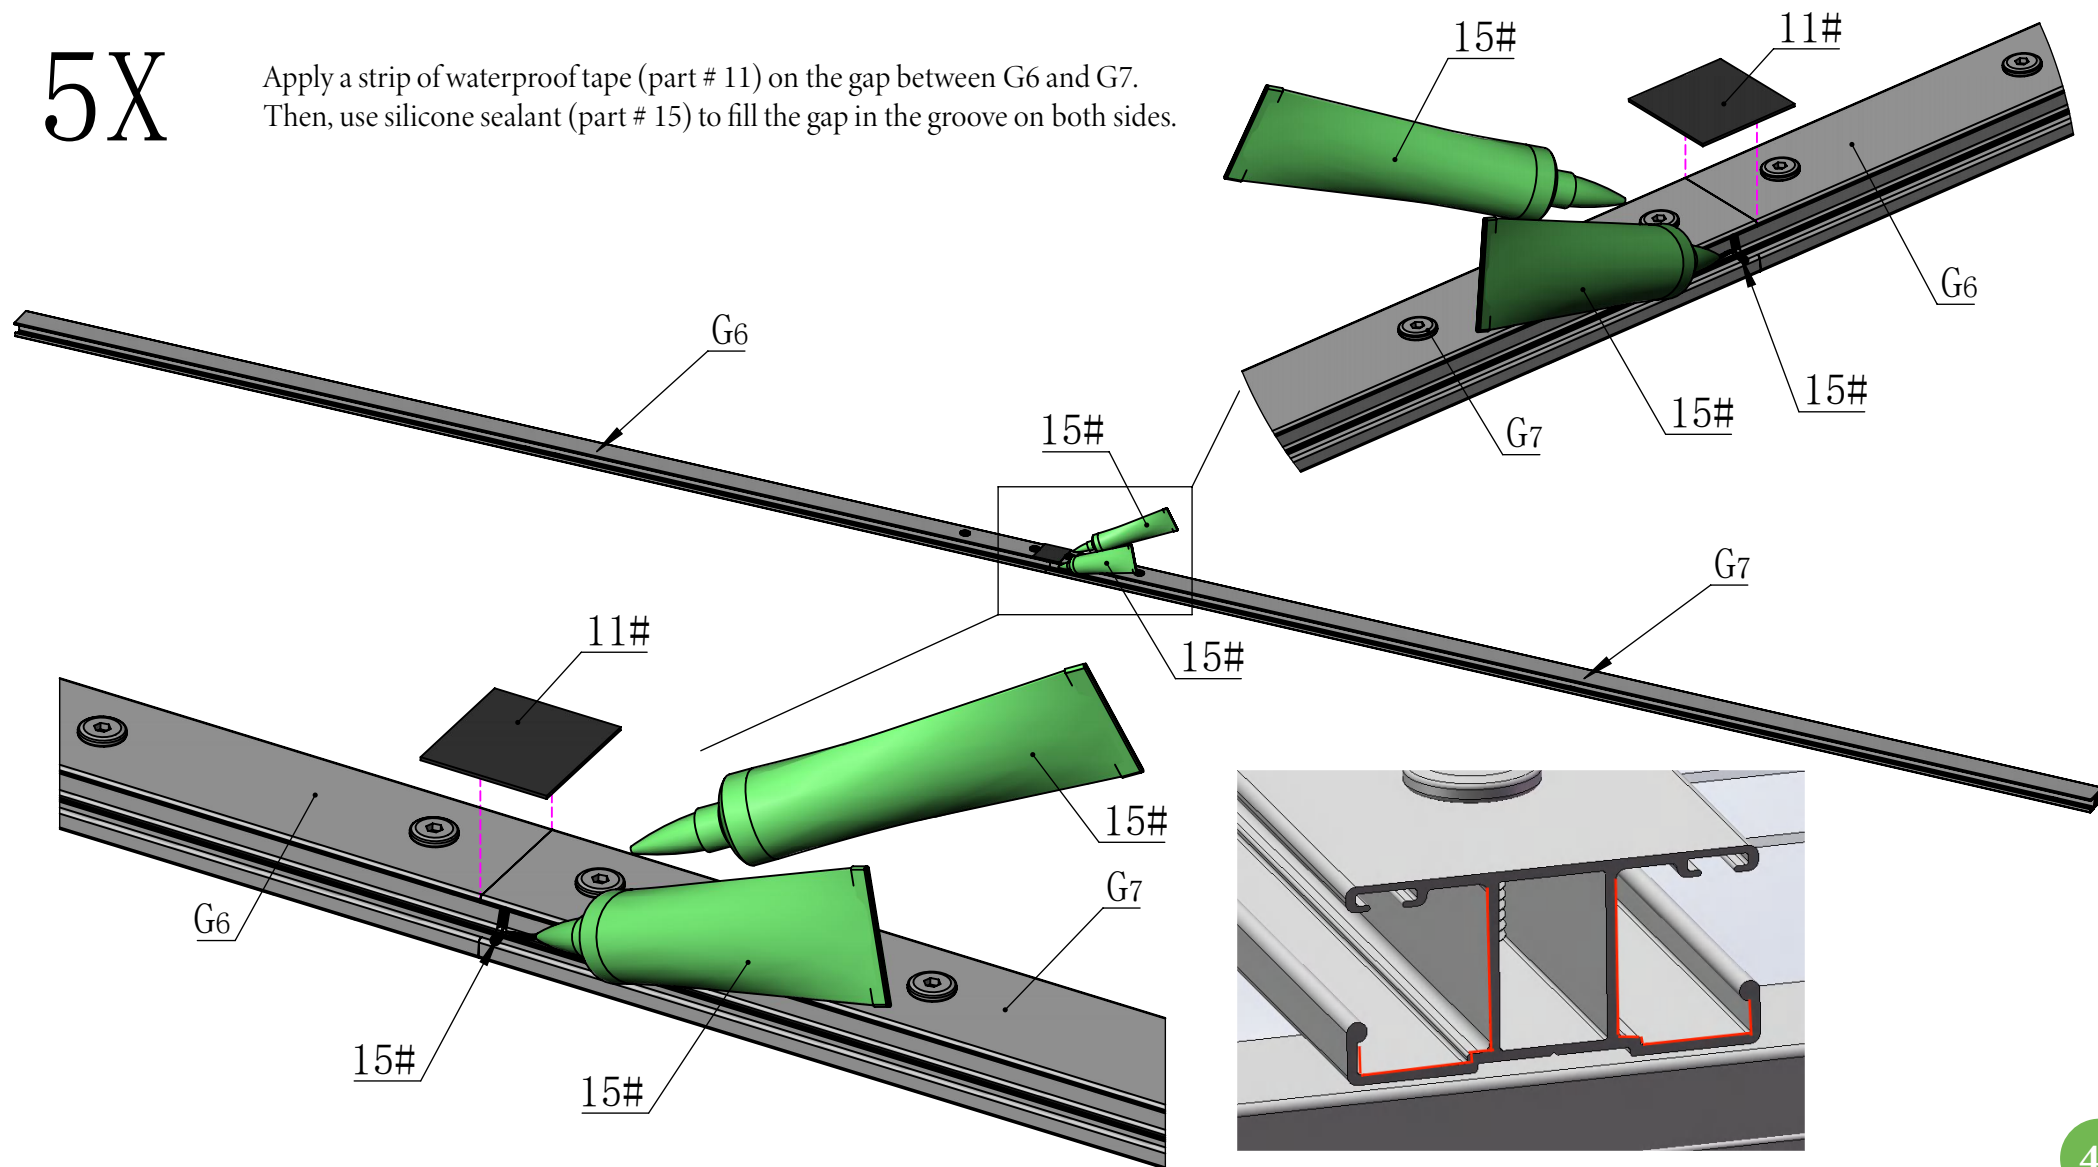

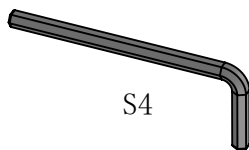


S4

1X




IMPORTANT! POLYCARBONATE INFORMATION

- Each polycarbonate panel has a UV coating on only ONE (1) side of the panel.
- To install properly so the UV coating is on the outside of the panel.

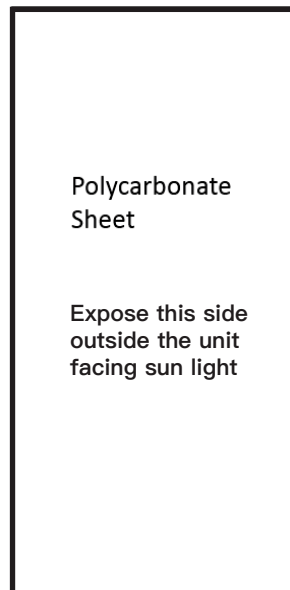


- Remove film immediately before installing tape to prevent damage to the panels.

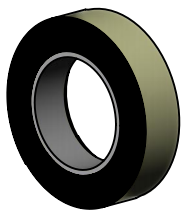


28#


1X


Note: Before installing the side panel, make sure to remove the protective film. Then centre the tape (#28) on the polycarbonate panel so it is equal on both sides. Fold the tape around the edges and rub gently to avoid damaging the tape.

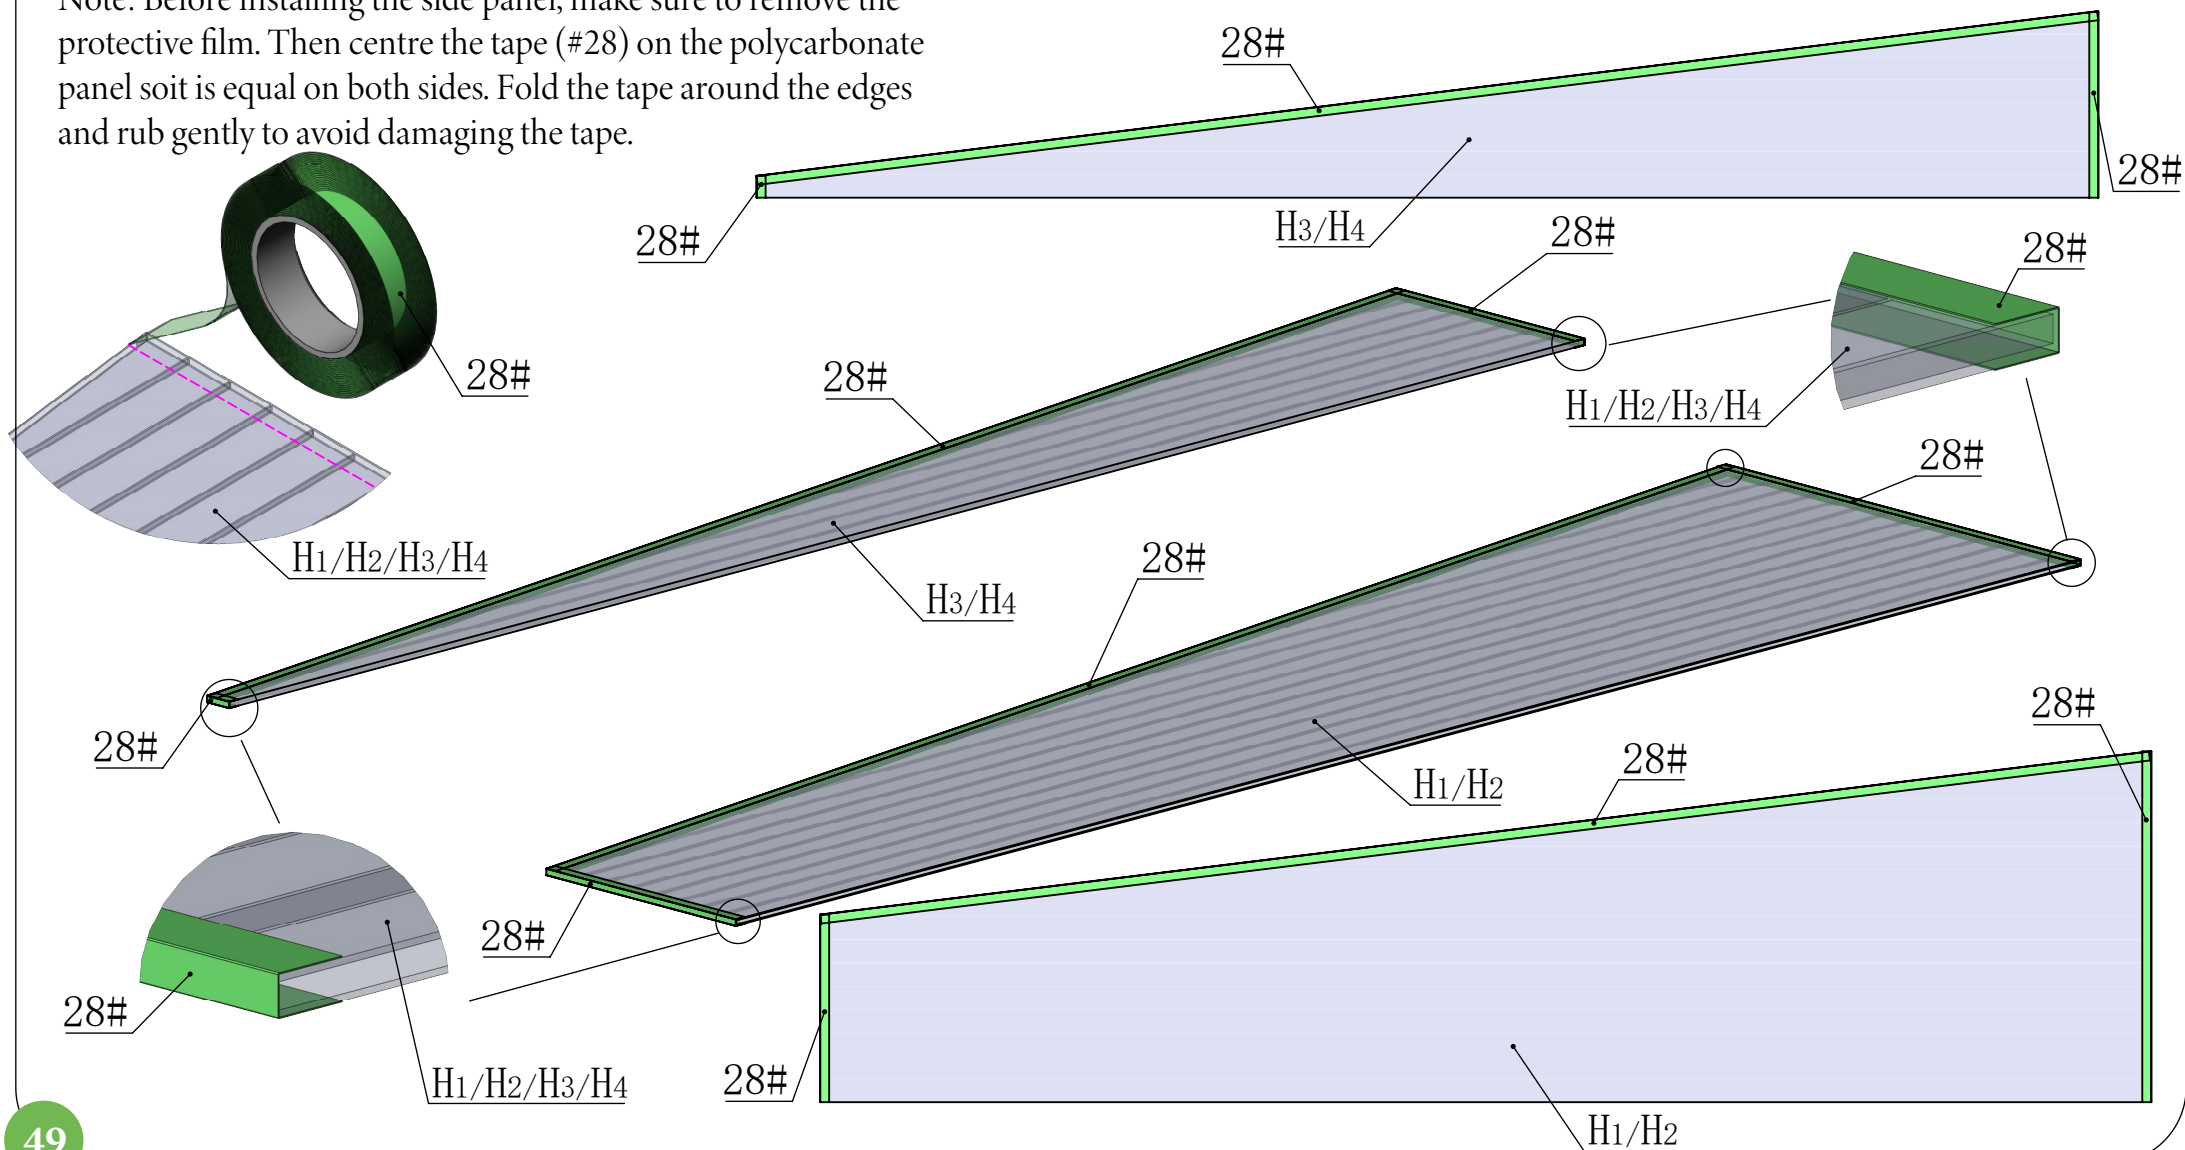

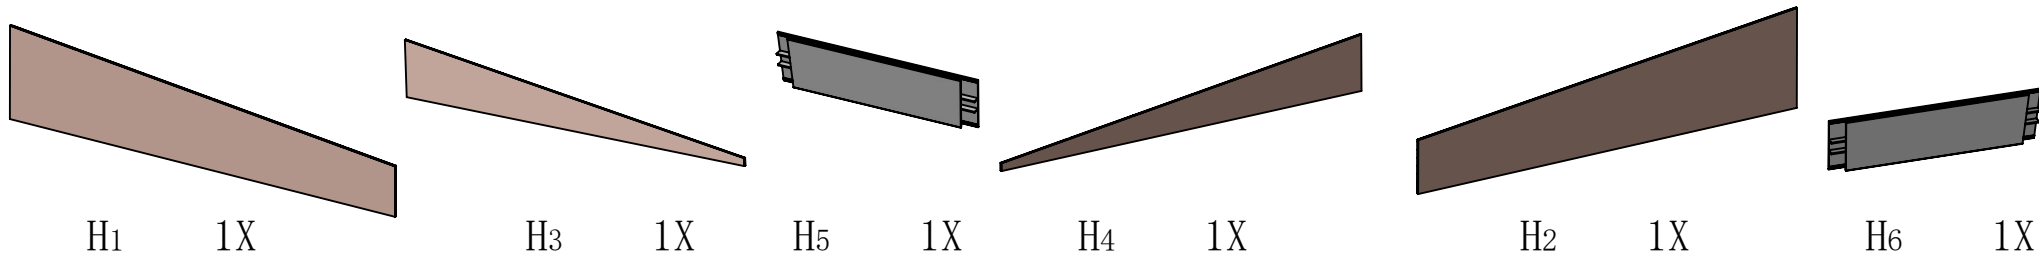


The notches of #H5 & H6 are facing inward.

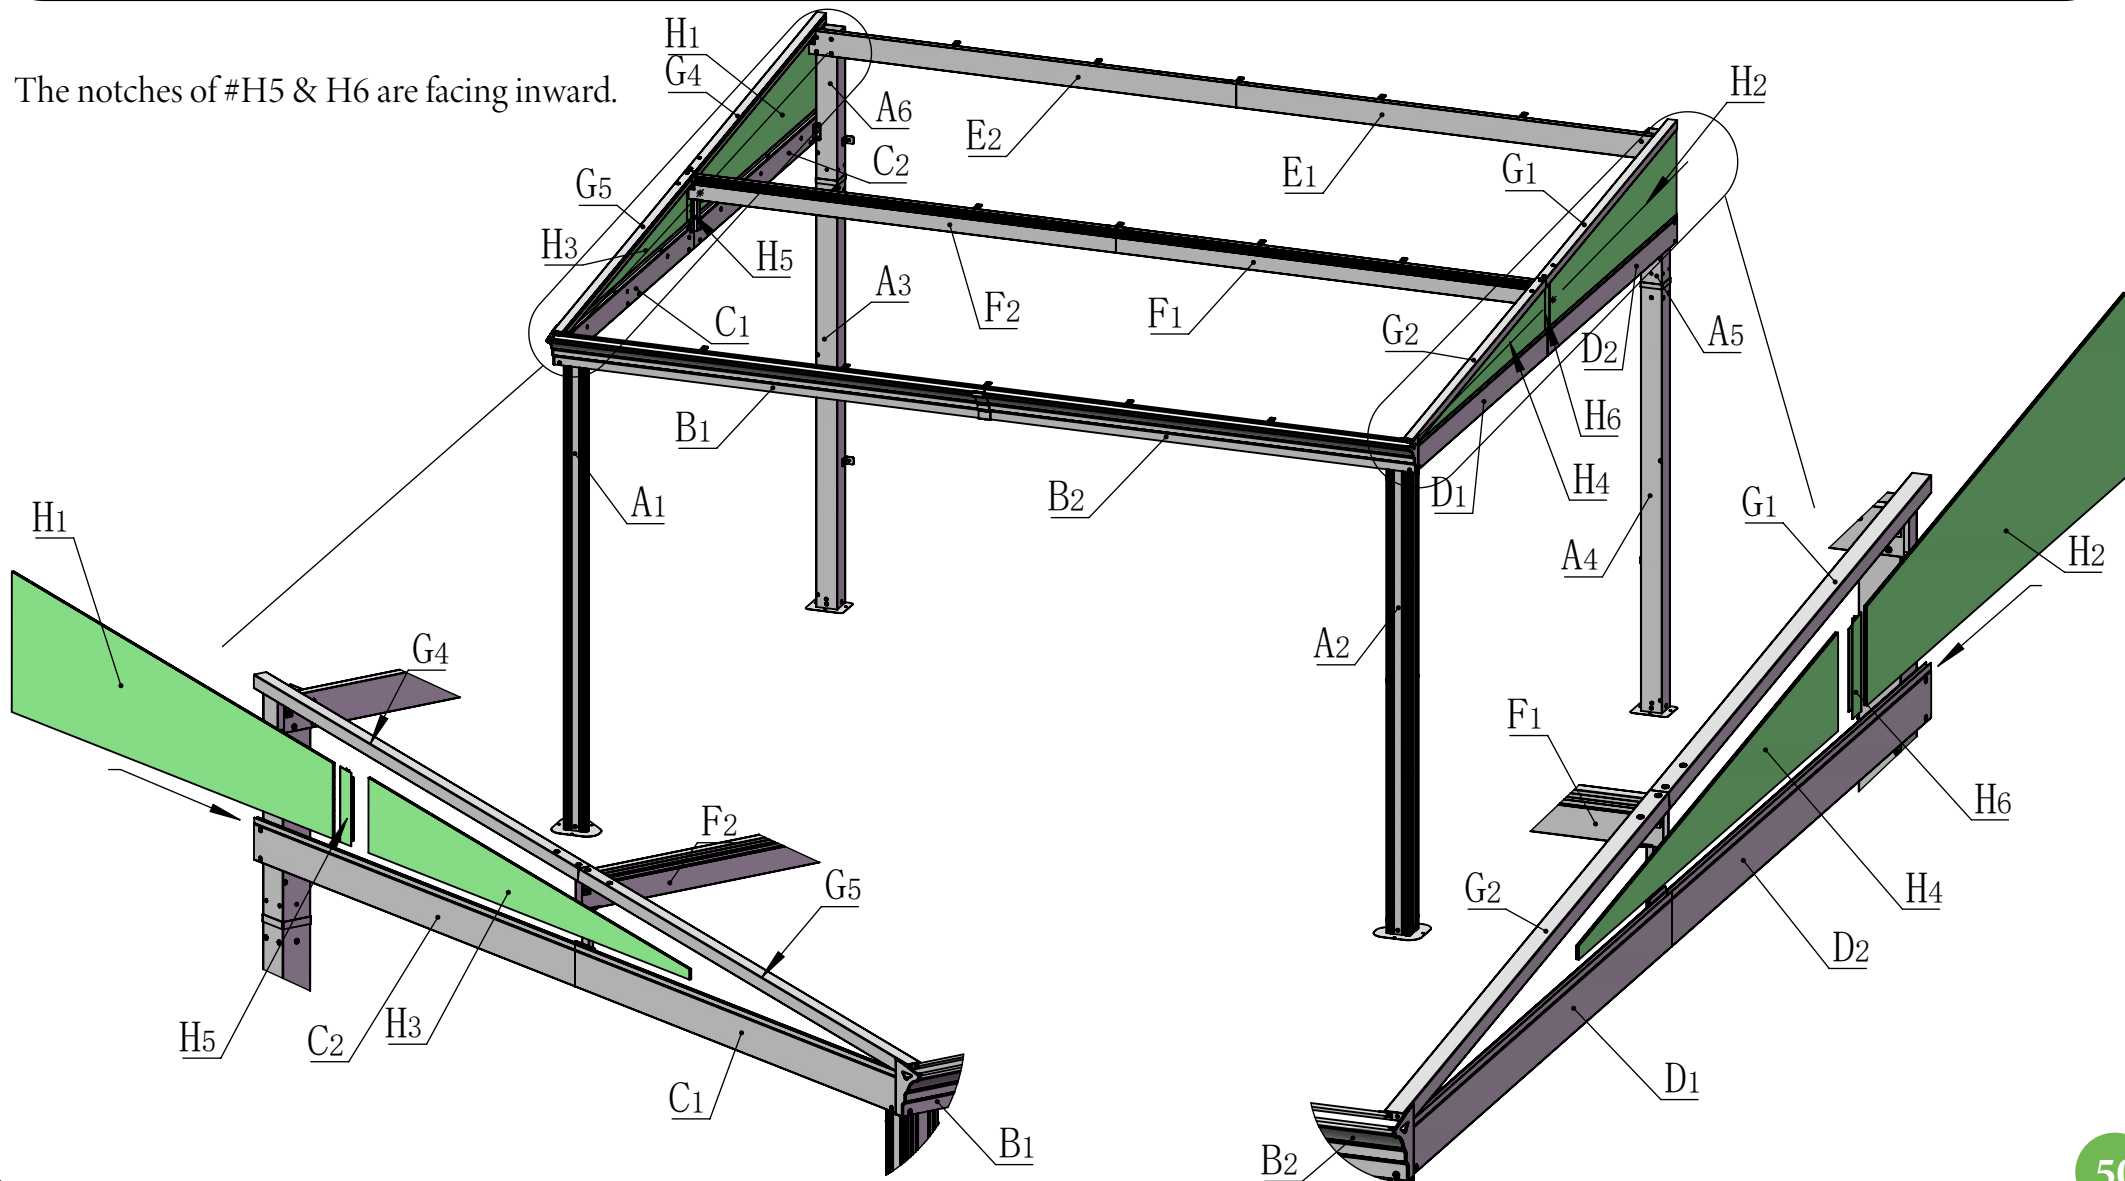


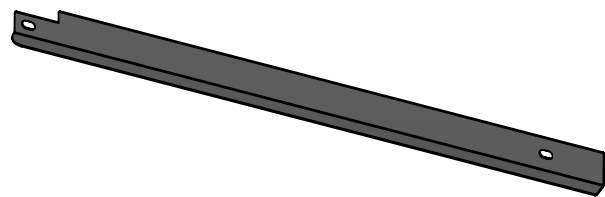

H7 1X

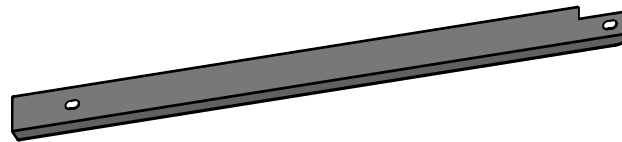


H8 1X




M6*16

4# 4X

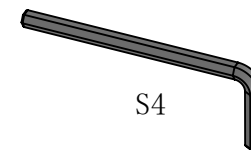


S4

16# 1X

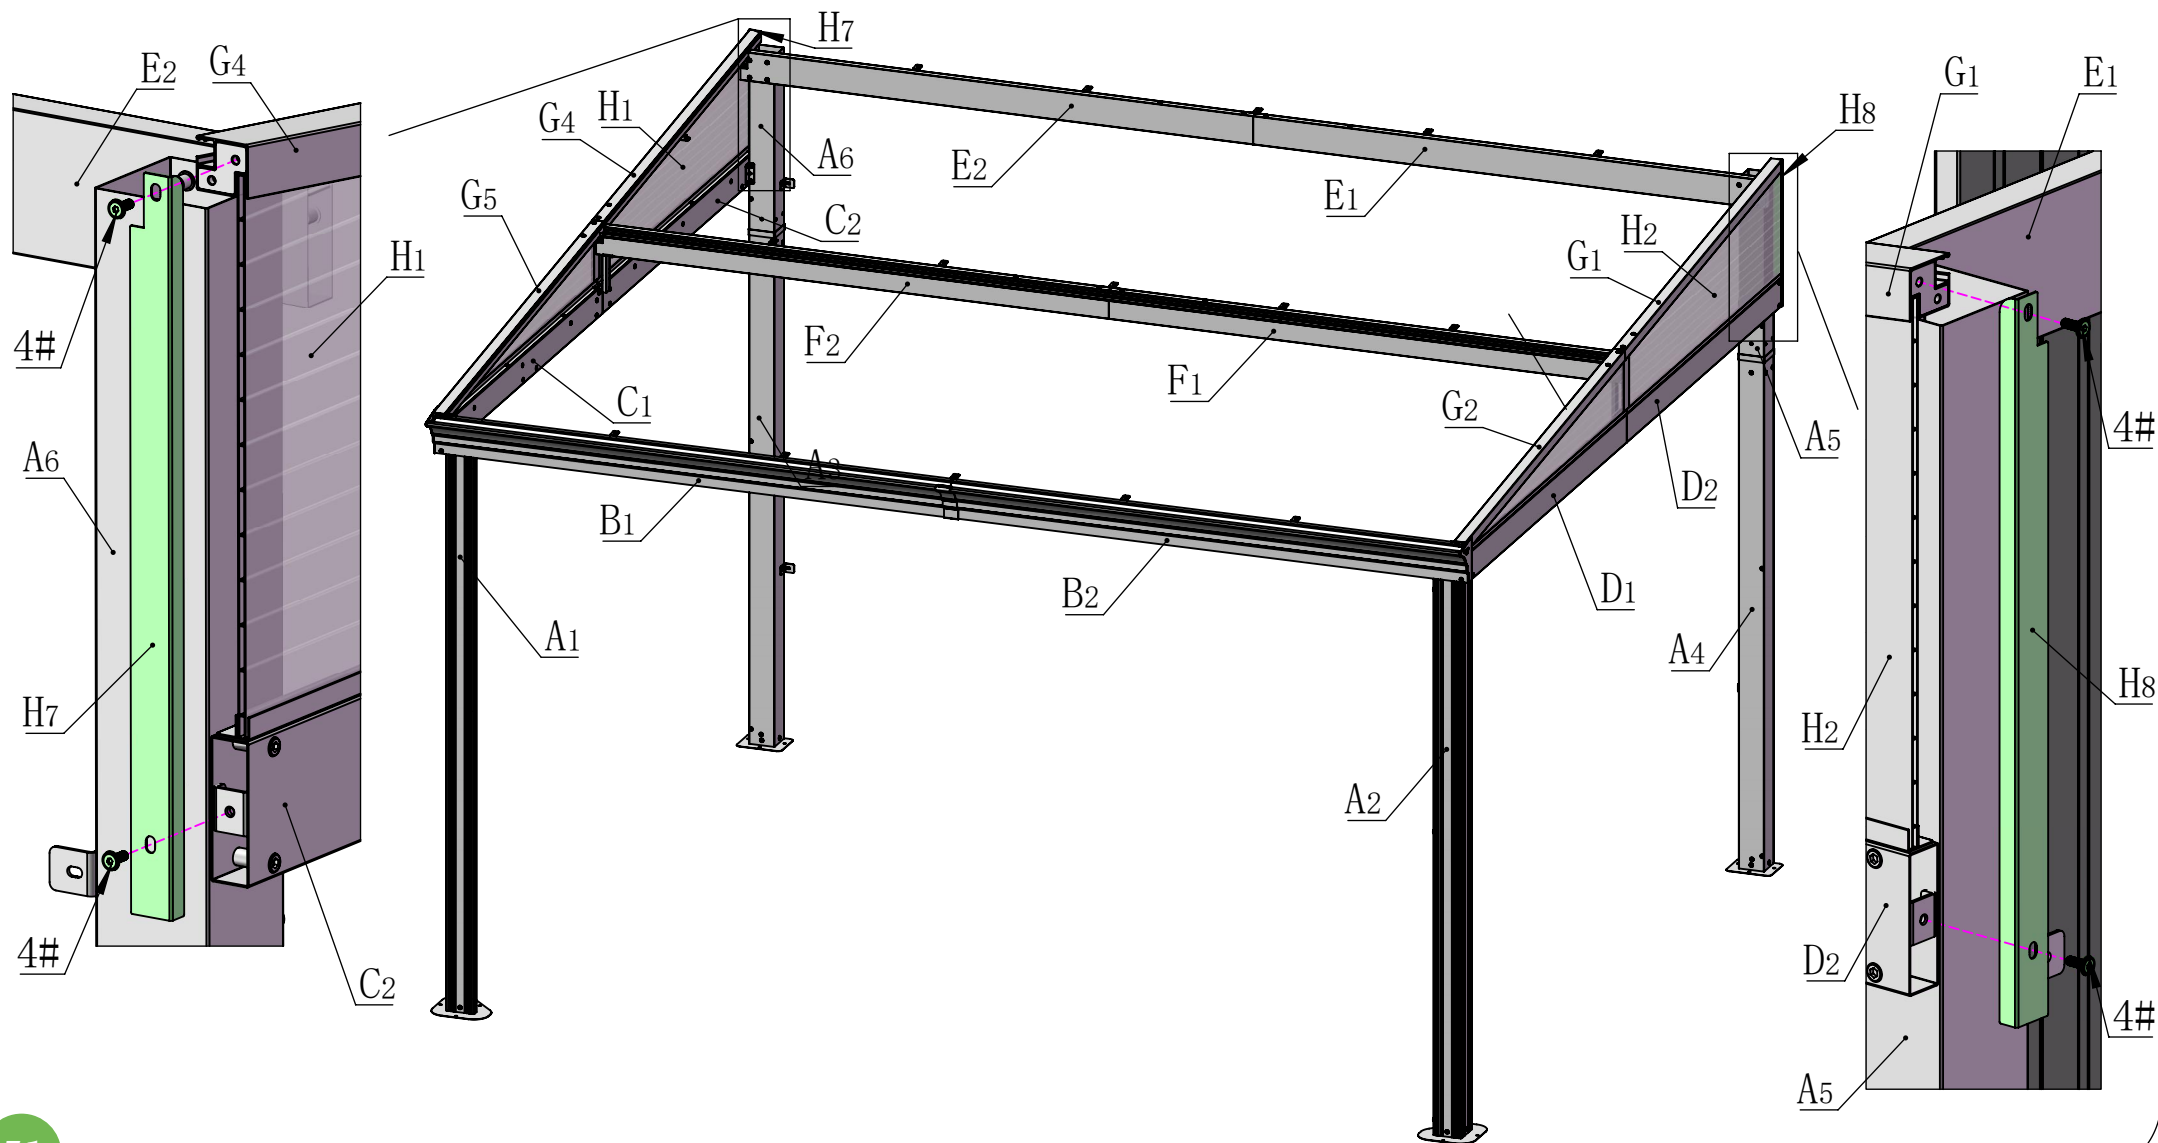



M6*16

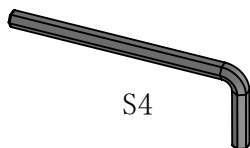

S4


4#

15X



16#

1X

5X

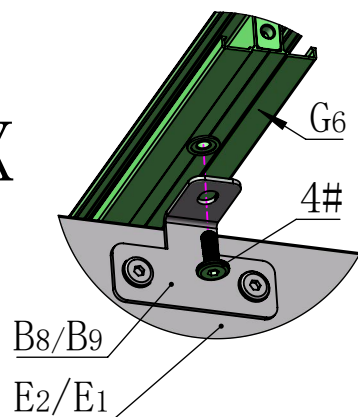



5X

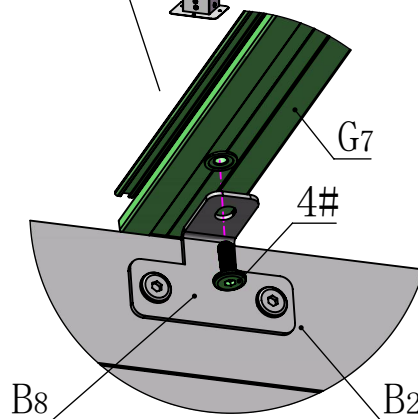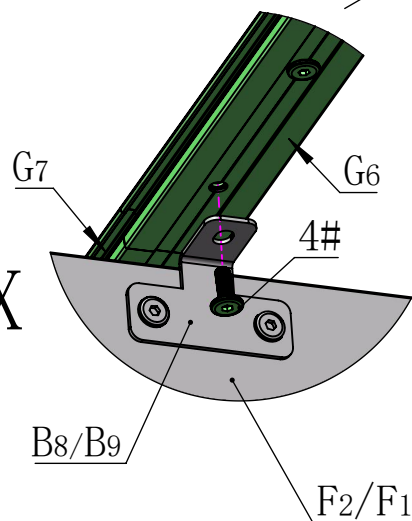


Note: In this step, fix but do not tighten the screws, tighten them after installing the PC board.

5X

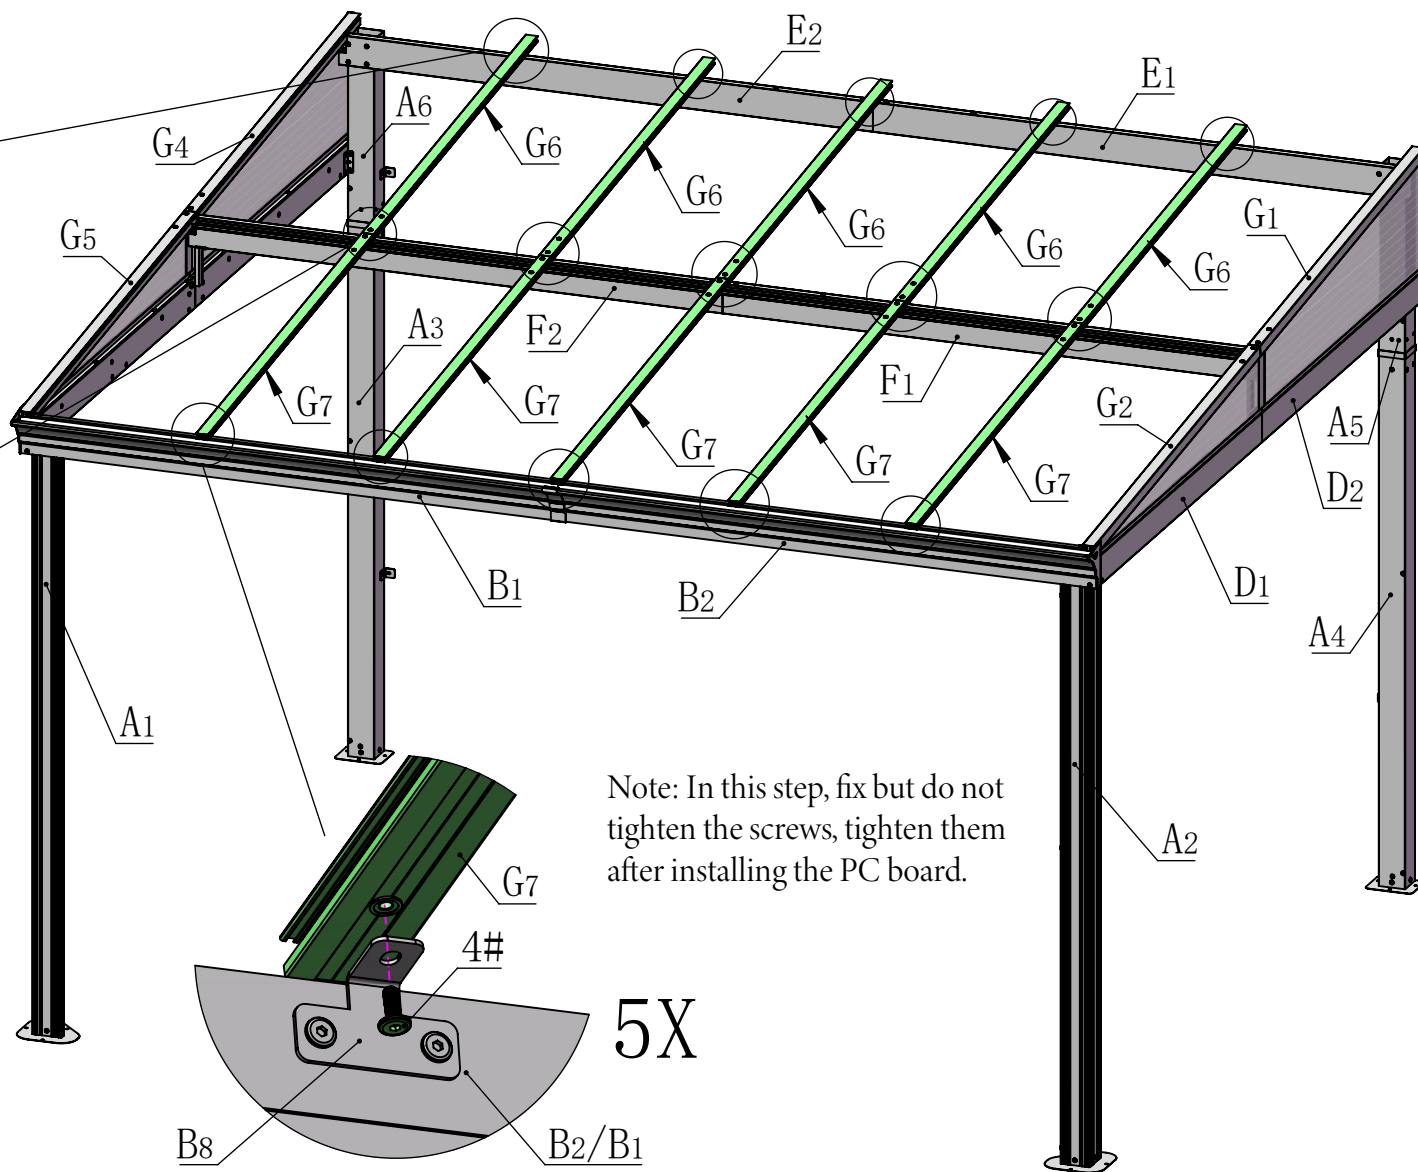


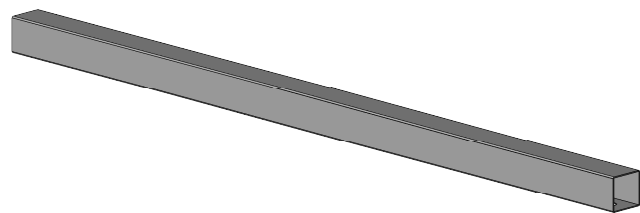


J1 2X




J2 2X

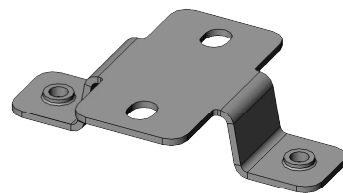


J3 2X










4# 10X M6*16

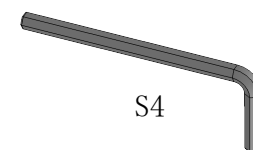

16# 1X S4

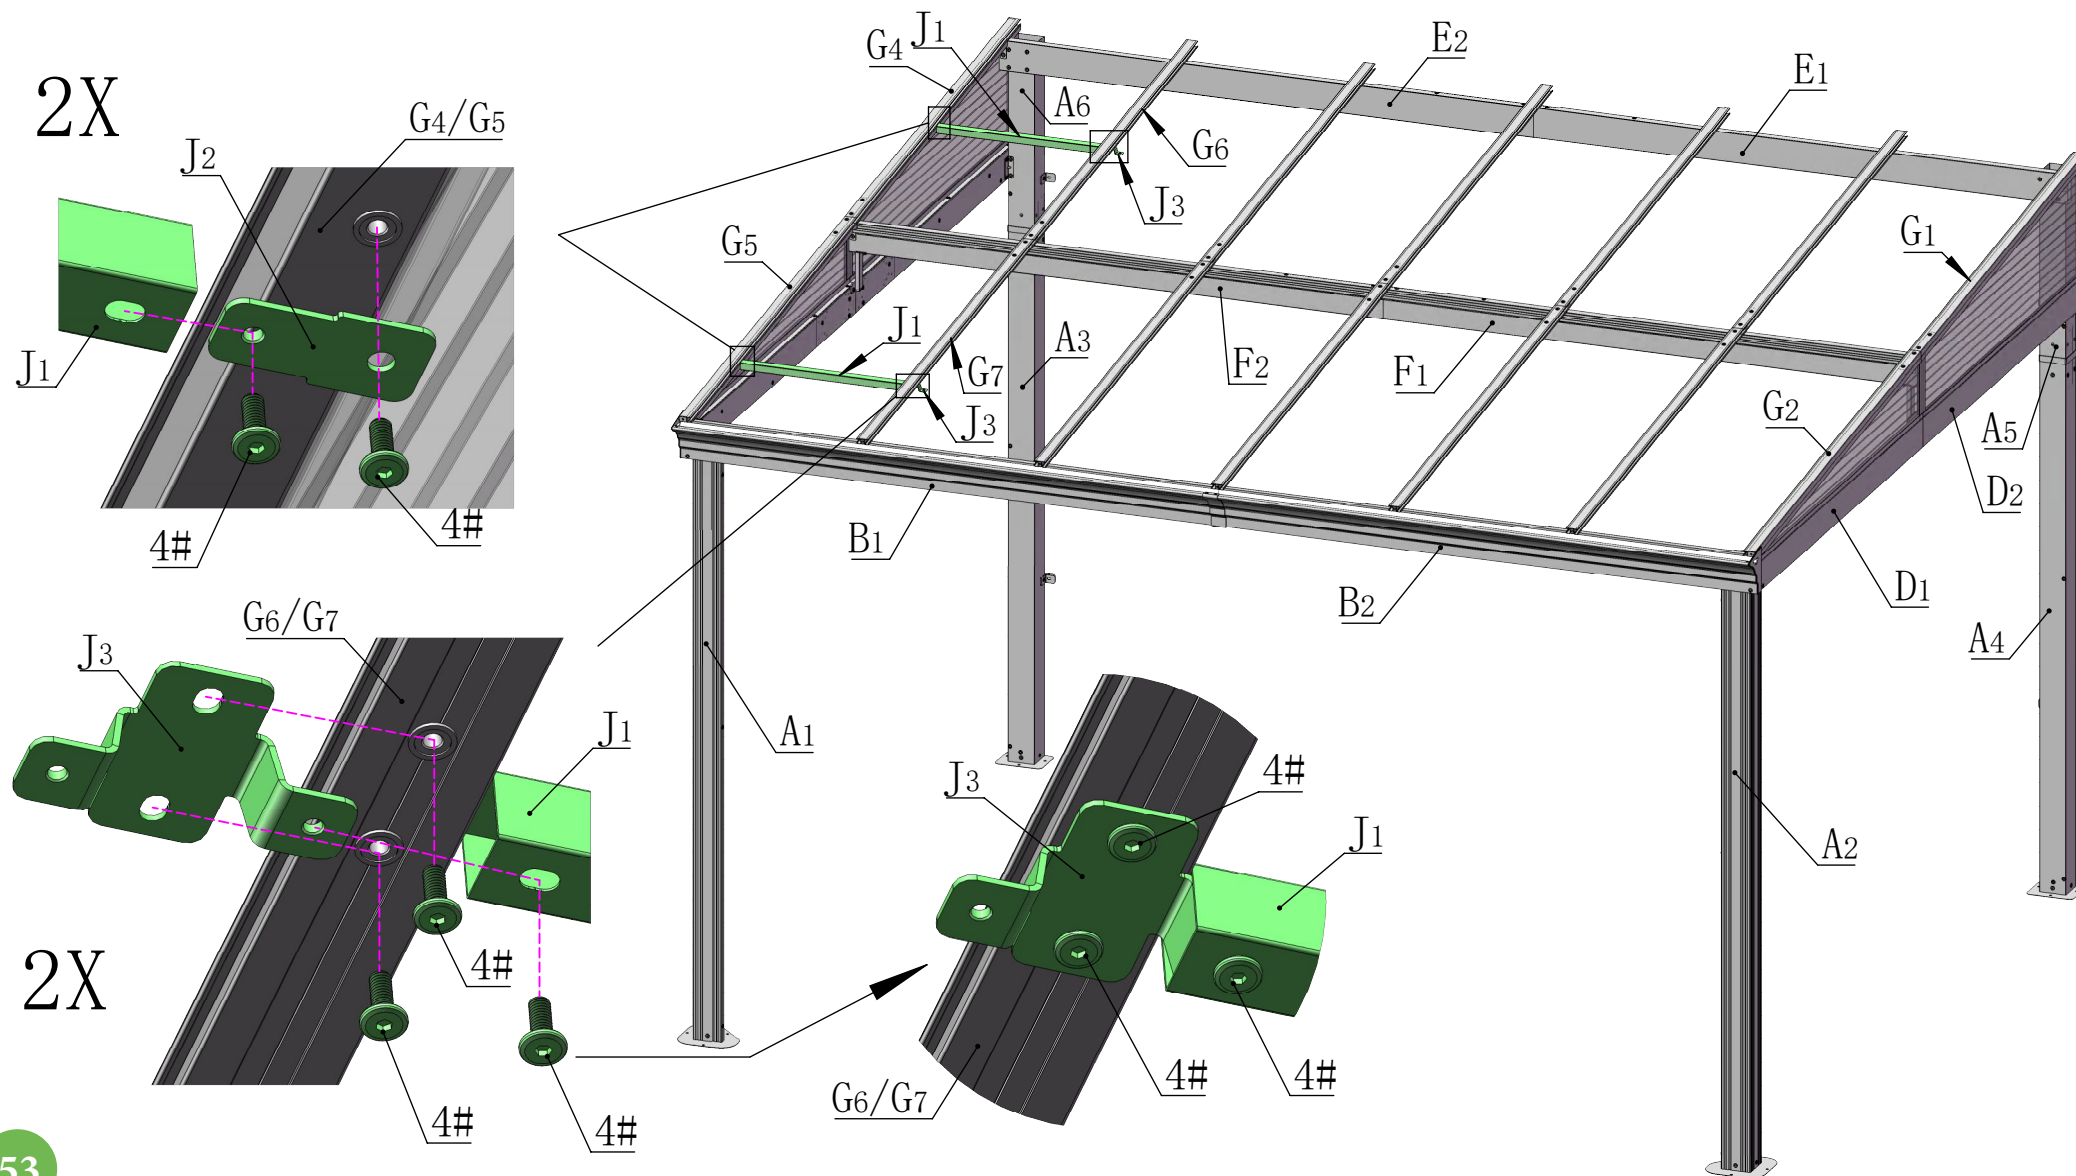


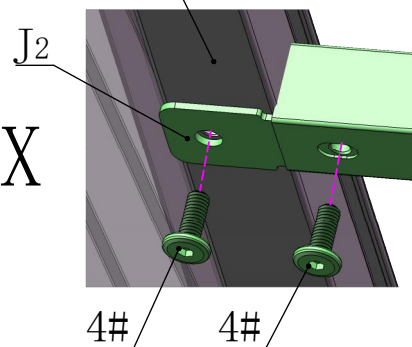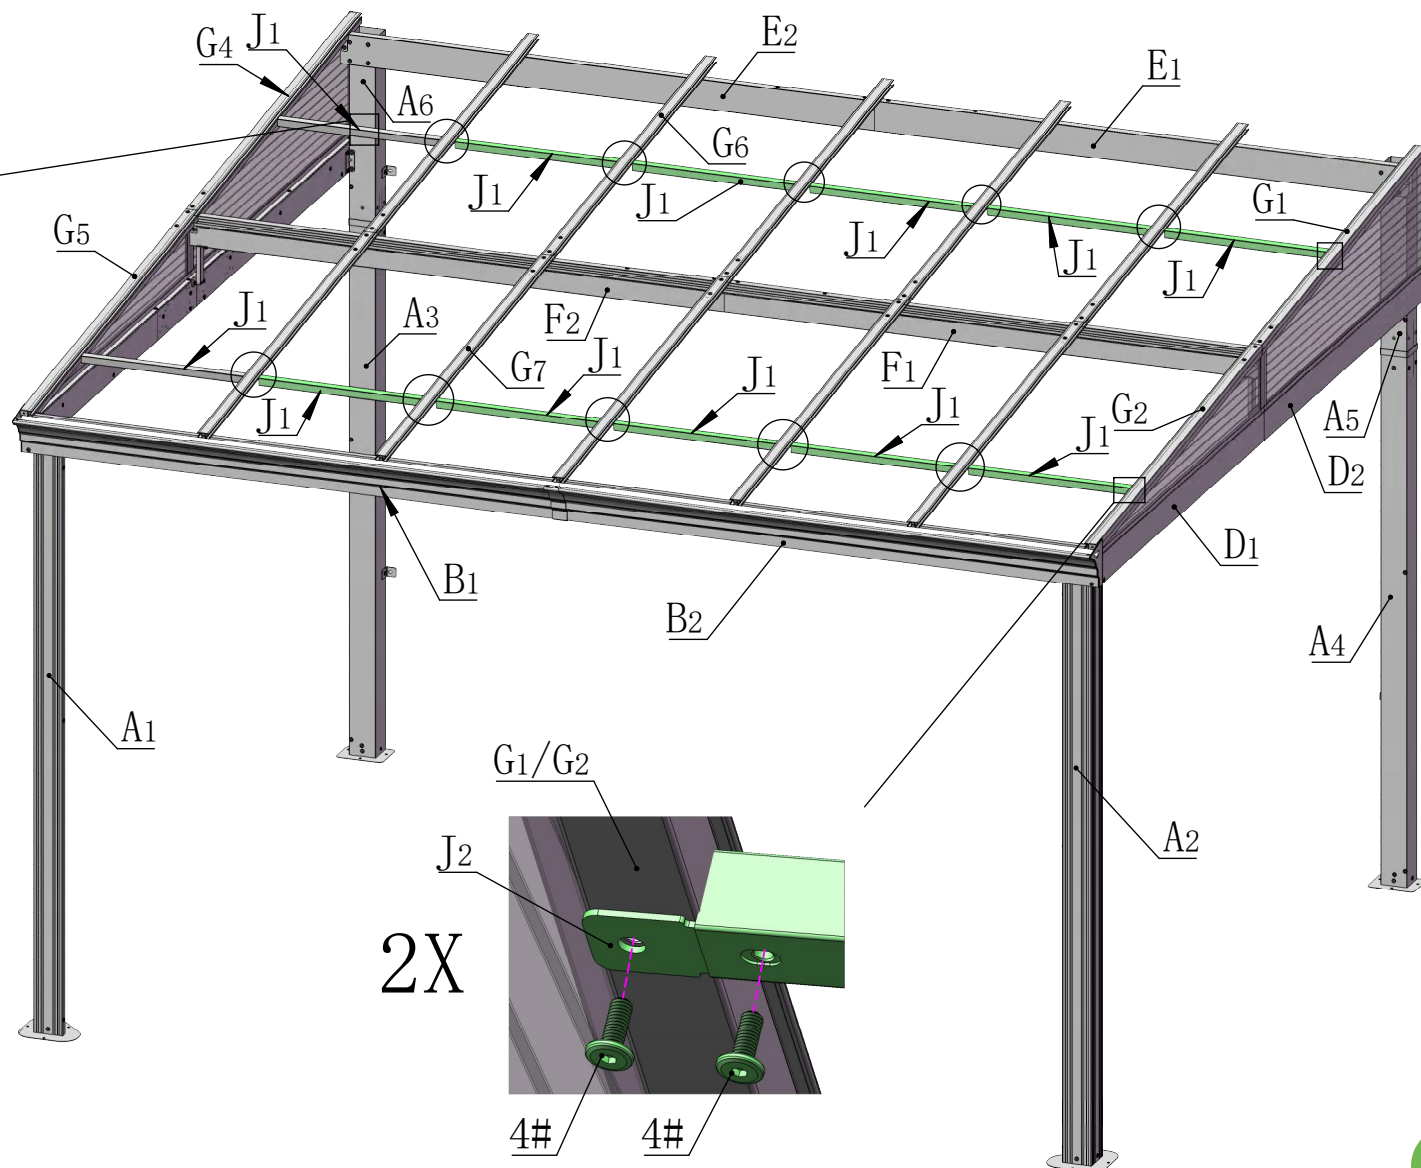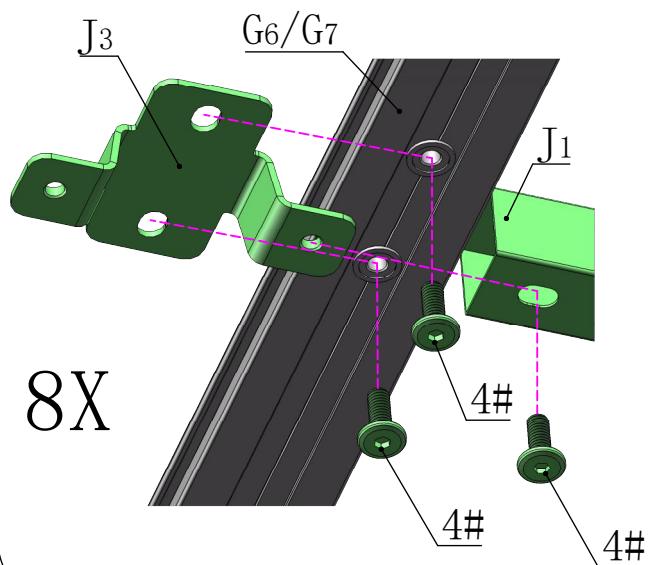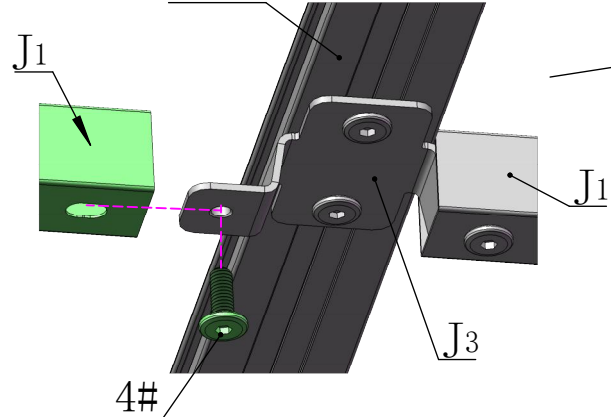

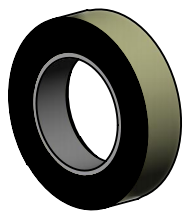


28#

1X

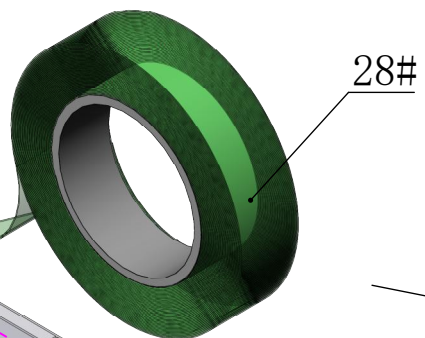

28#

Note: Before installing the top panel, make sure to remove the protective film. Then centre the tape (#28) on the polycarbonate panel so it is equal on both sides. Fold the tape around the edges and rub gently to avoid damaging the tape.

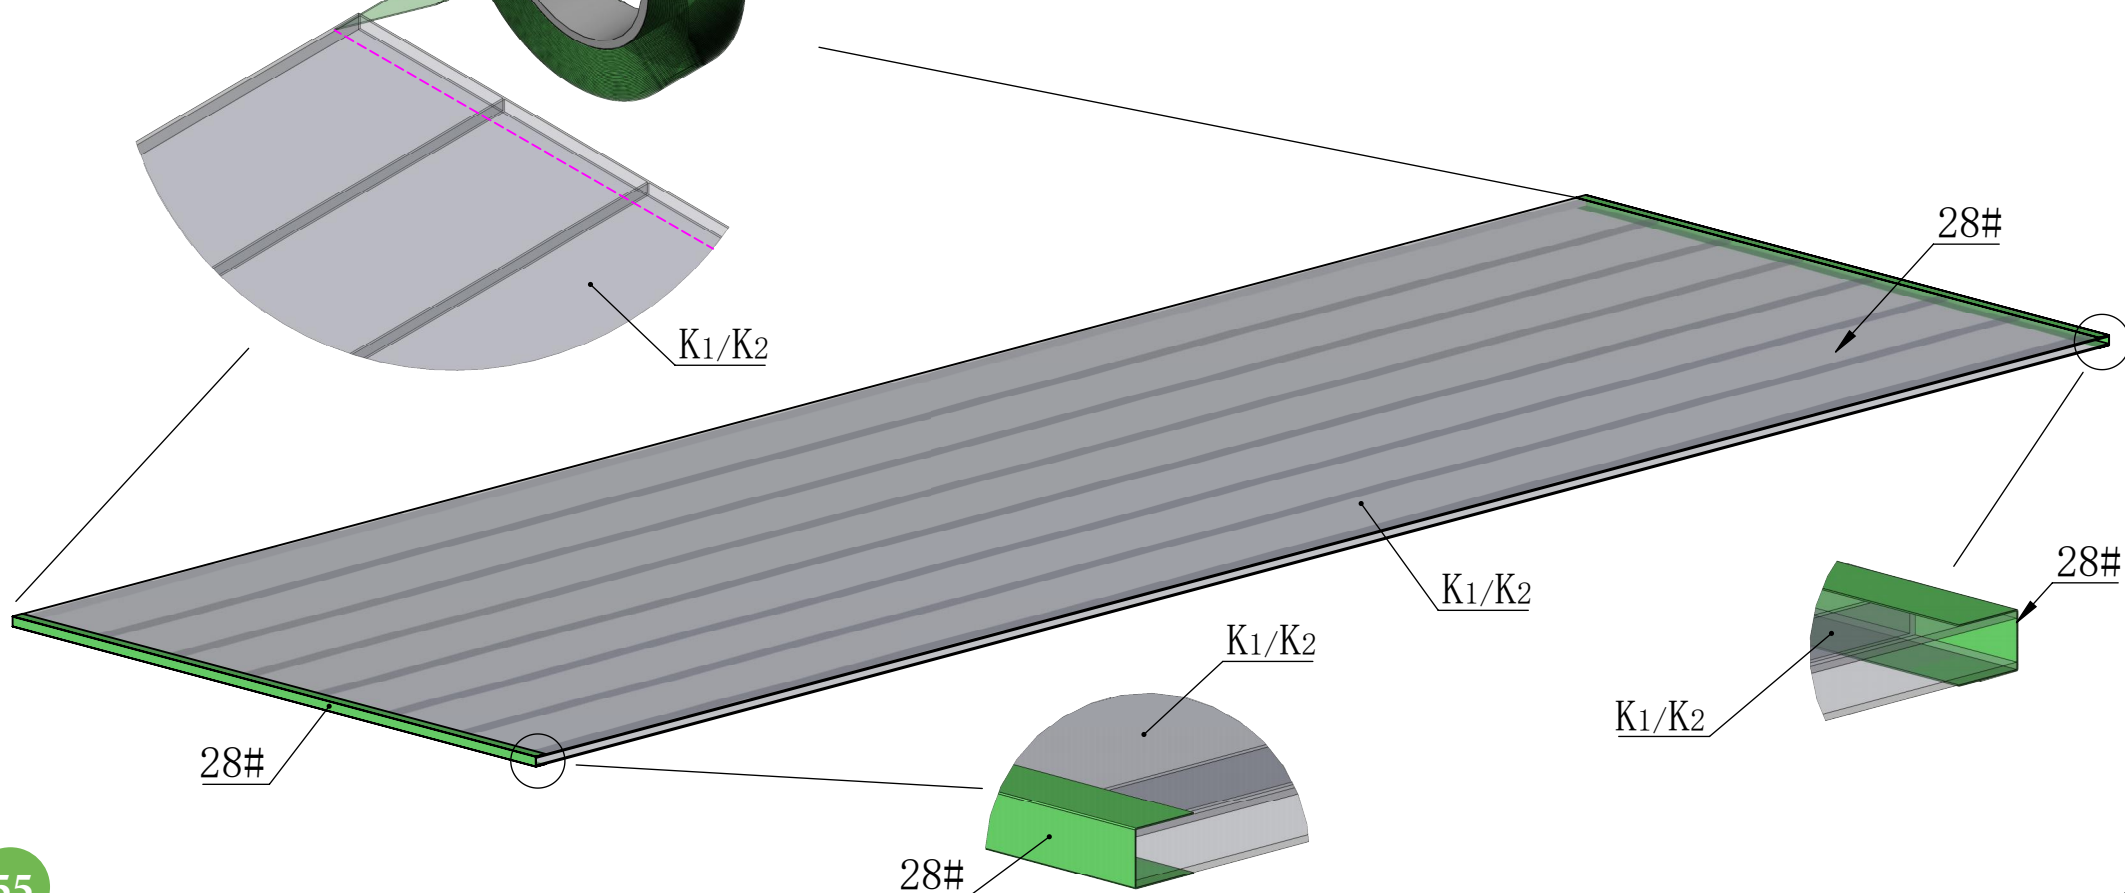

28#

K1/K2

K1/K2


K1/K2

28#


28#

28#

K1/K2

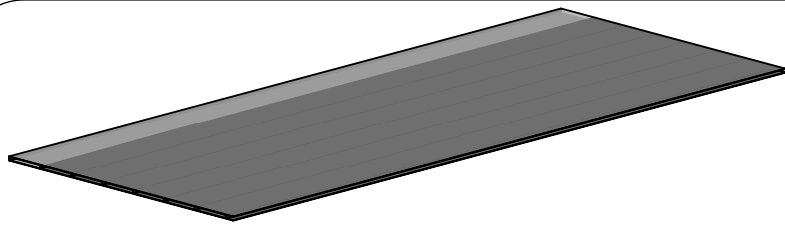




K1 1X


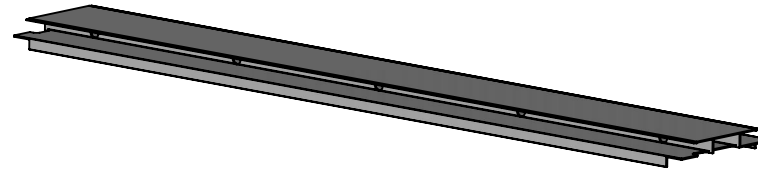


K3 1X

The upper end of the PC board should be installed flush with both sides.

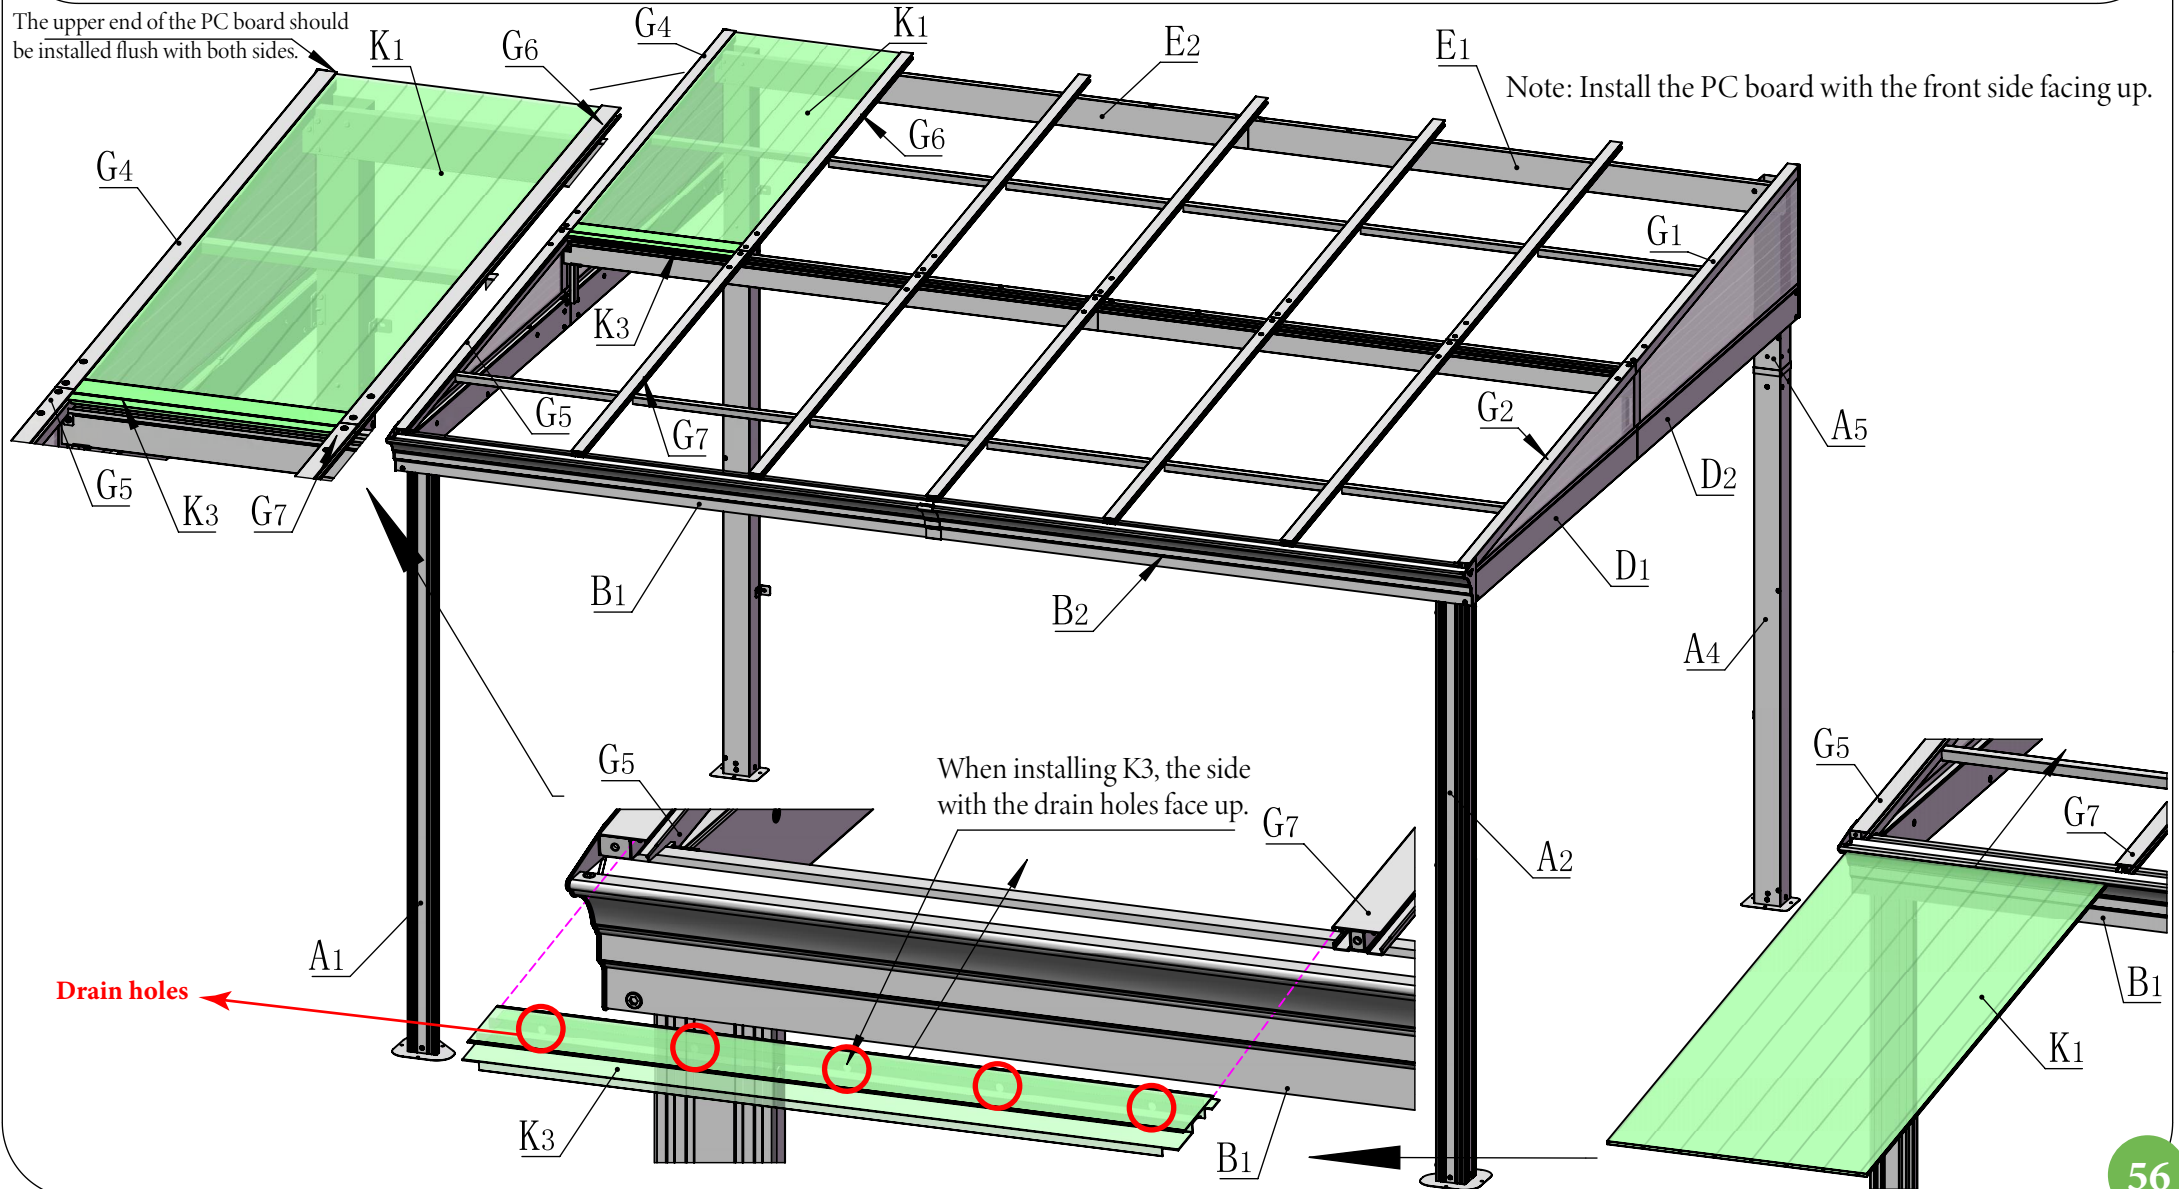

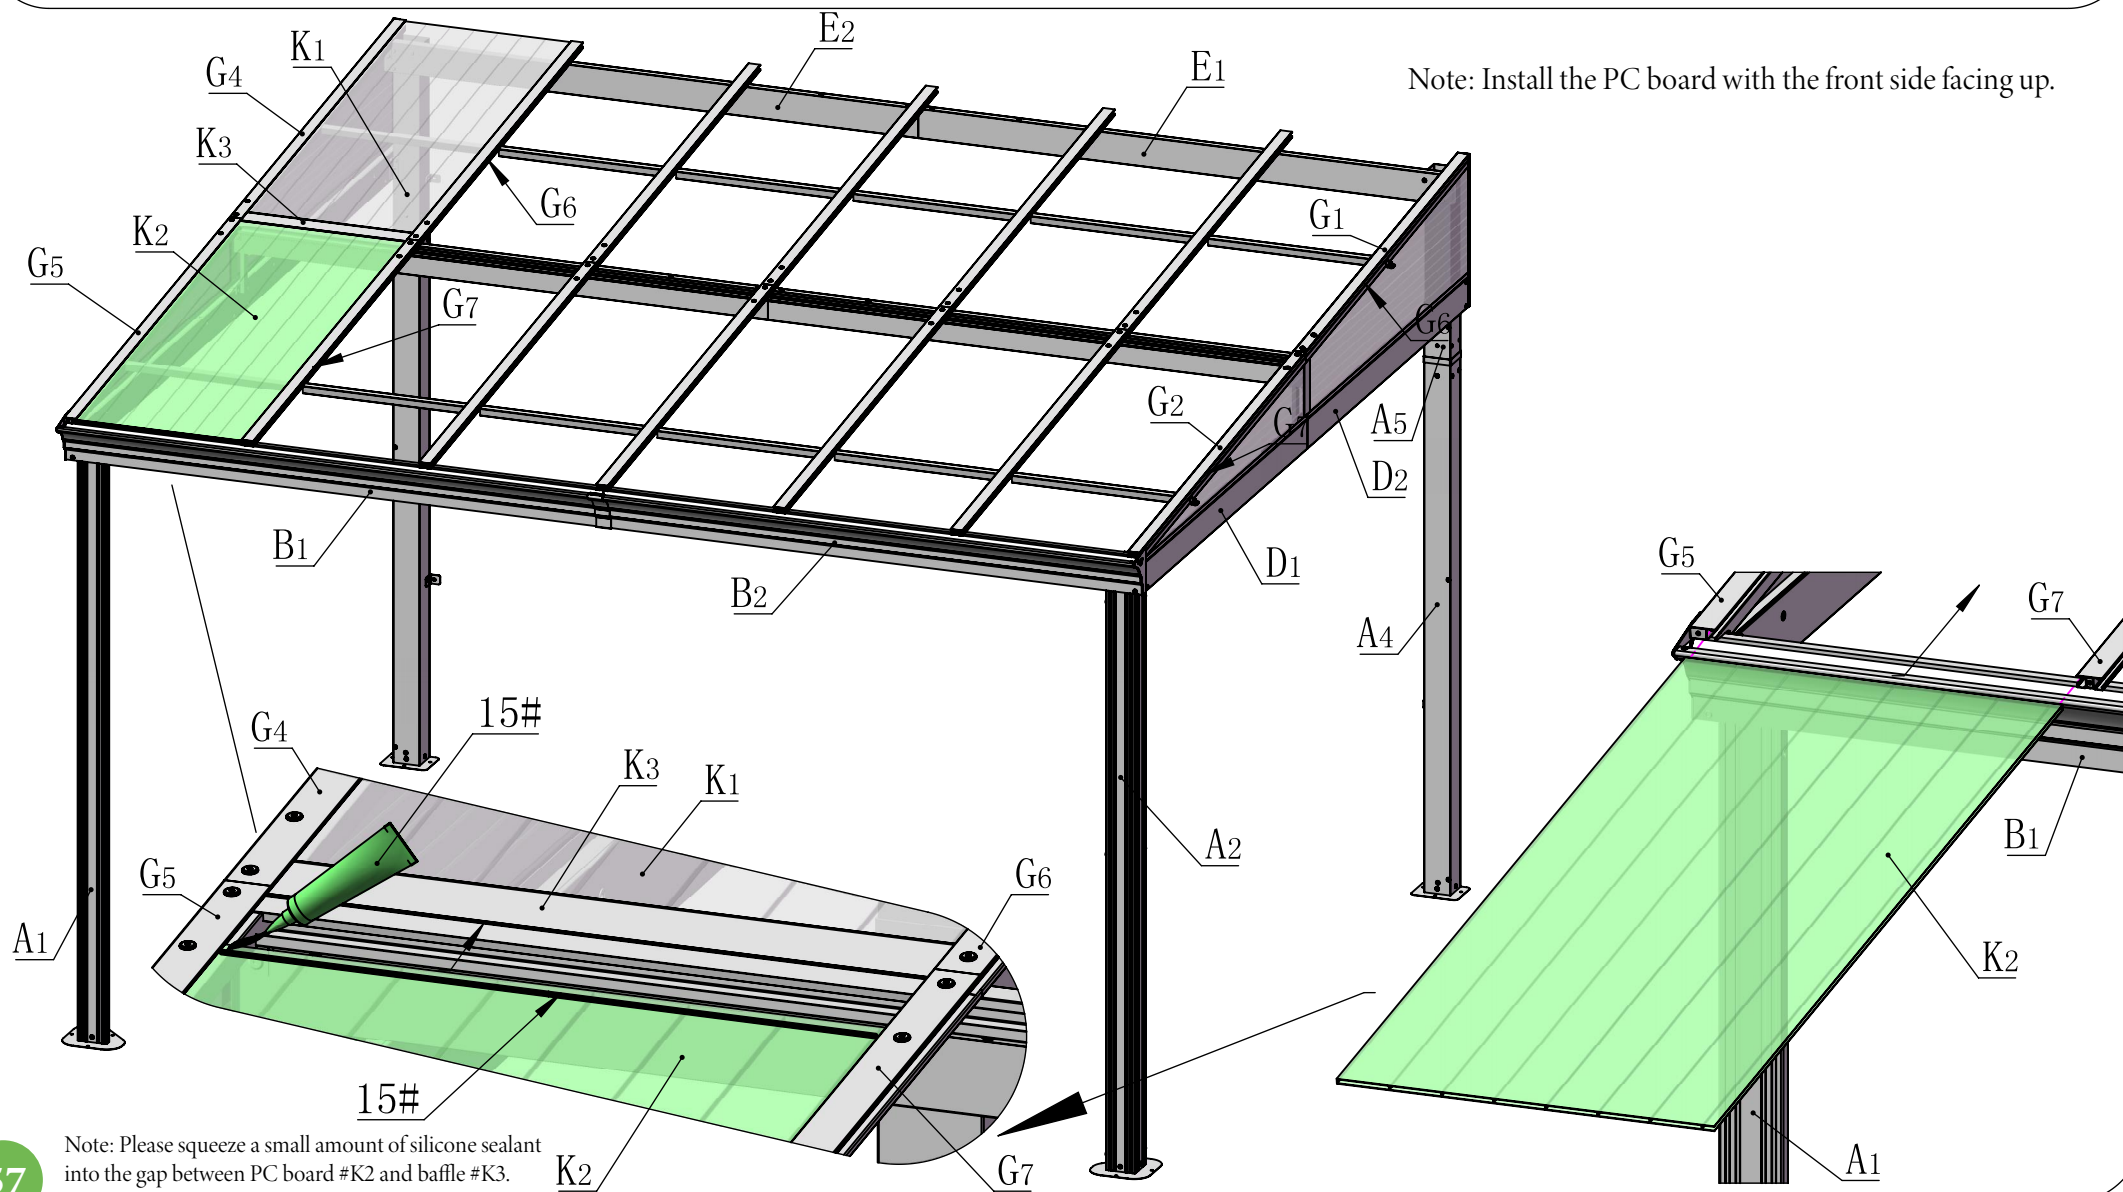

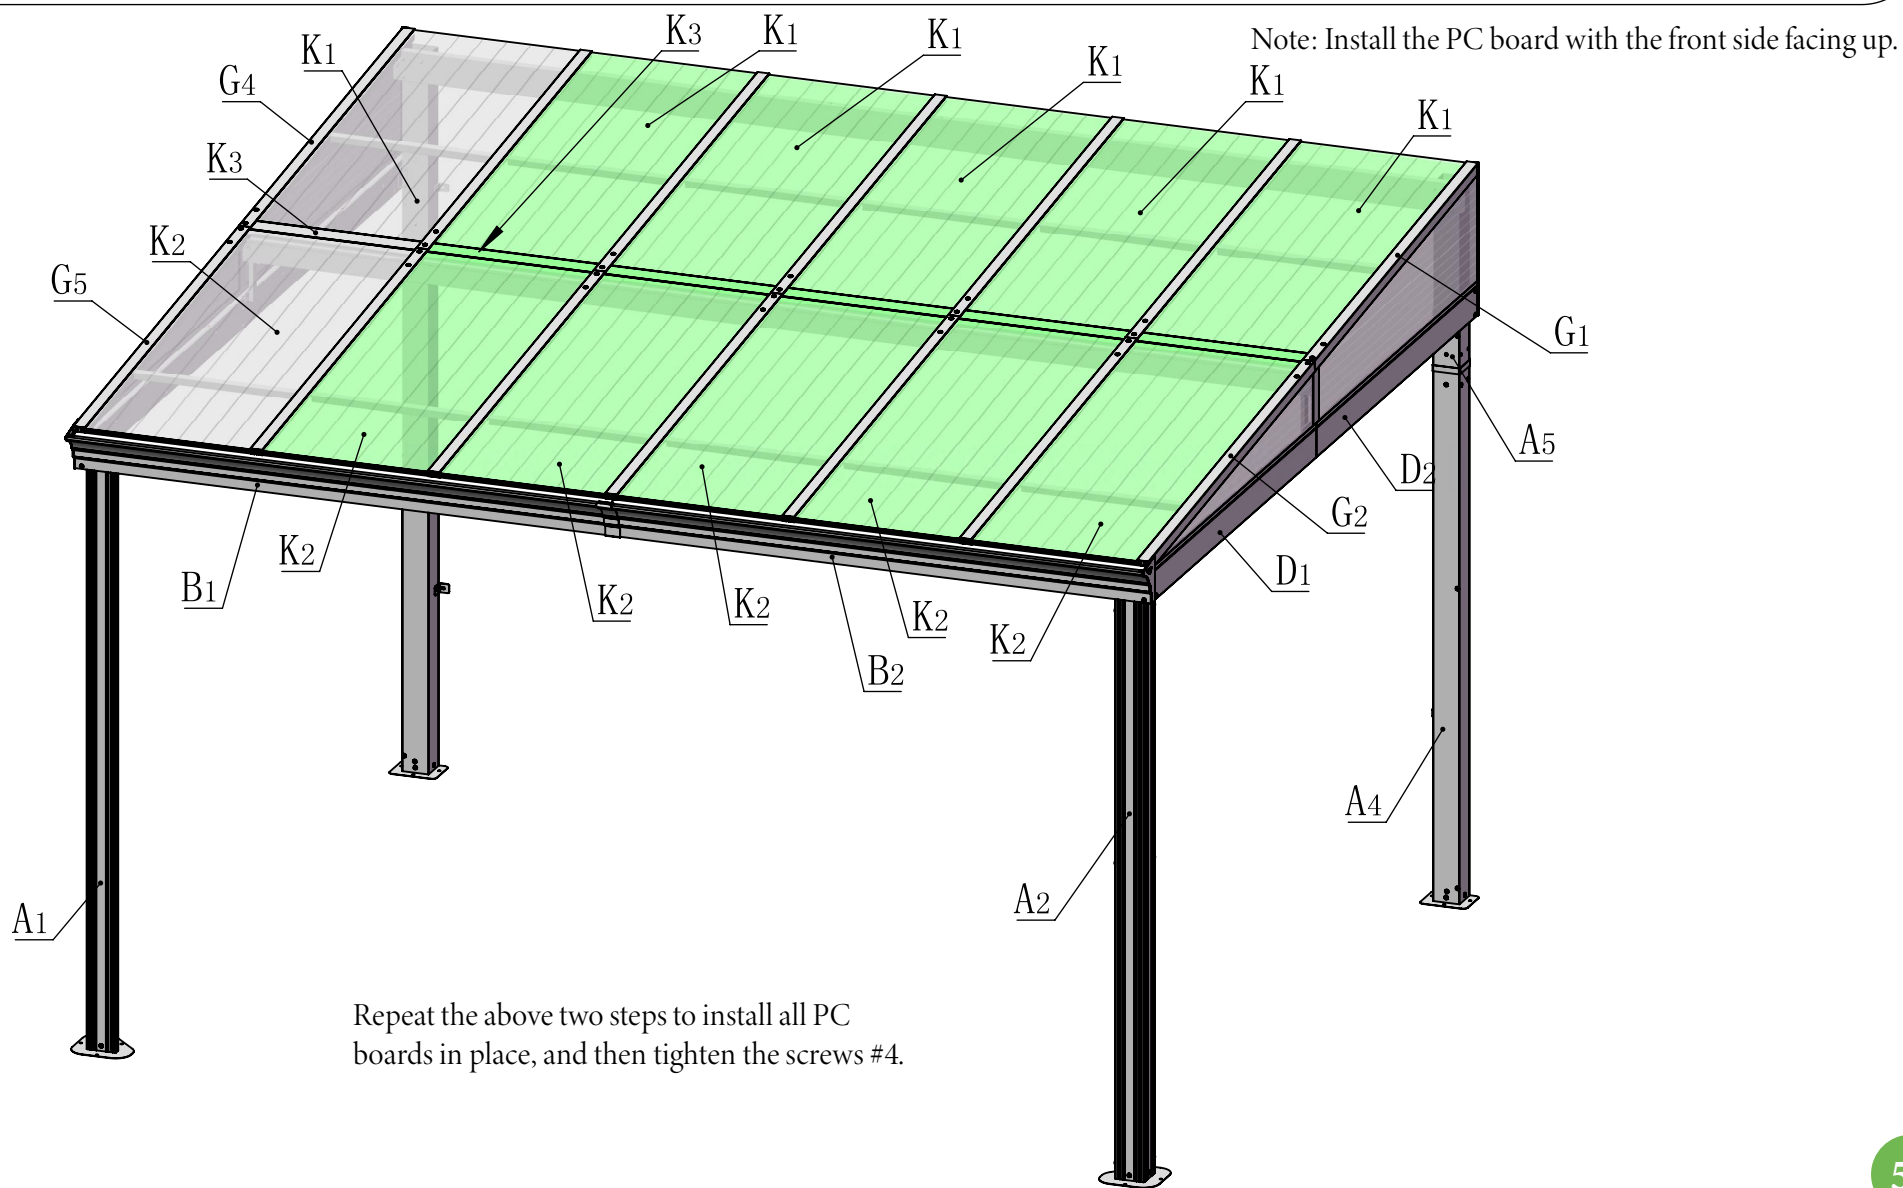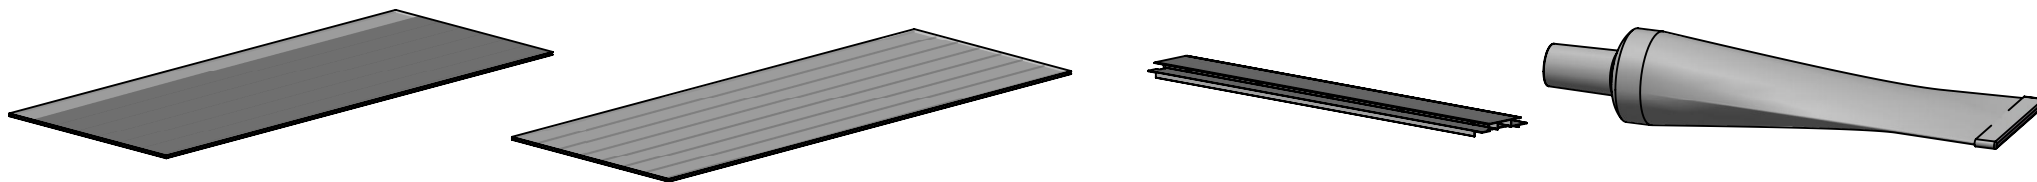




L1 1X




L2 1X




M6*16
4# 7X


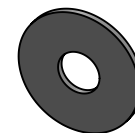



27# 1X

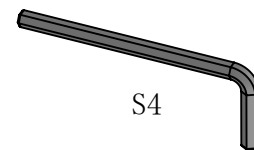

S4
16# 1X

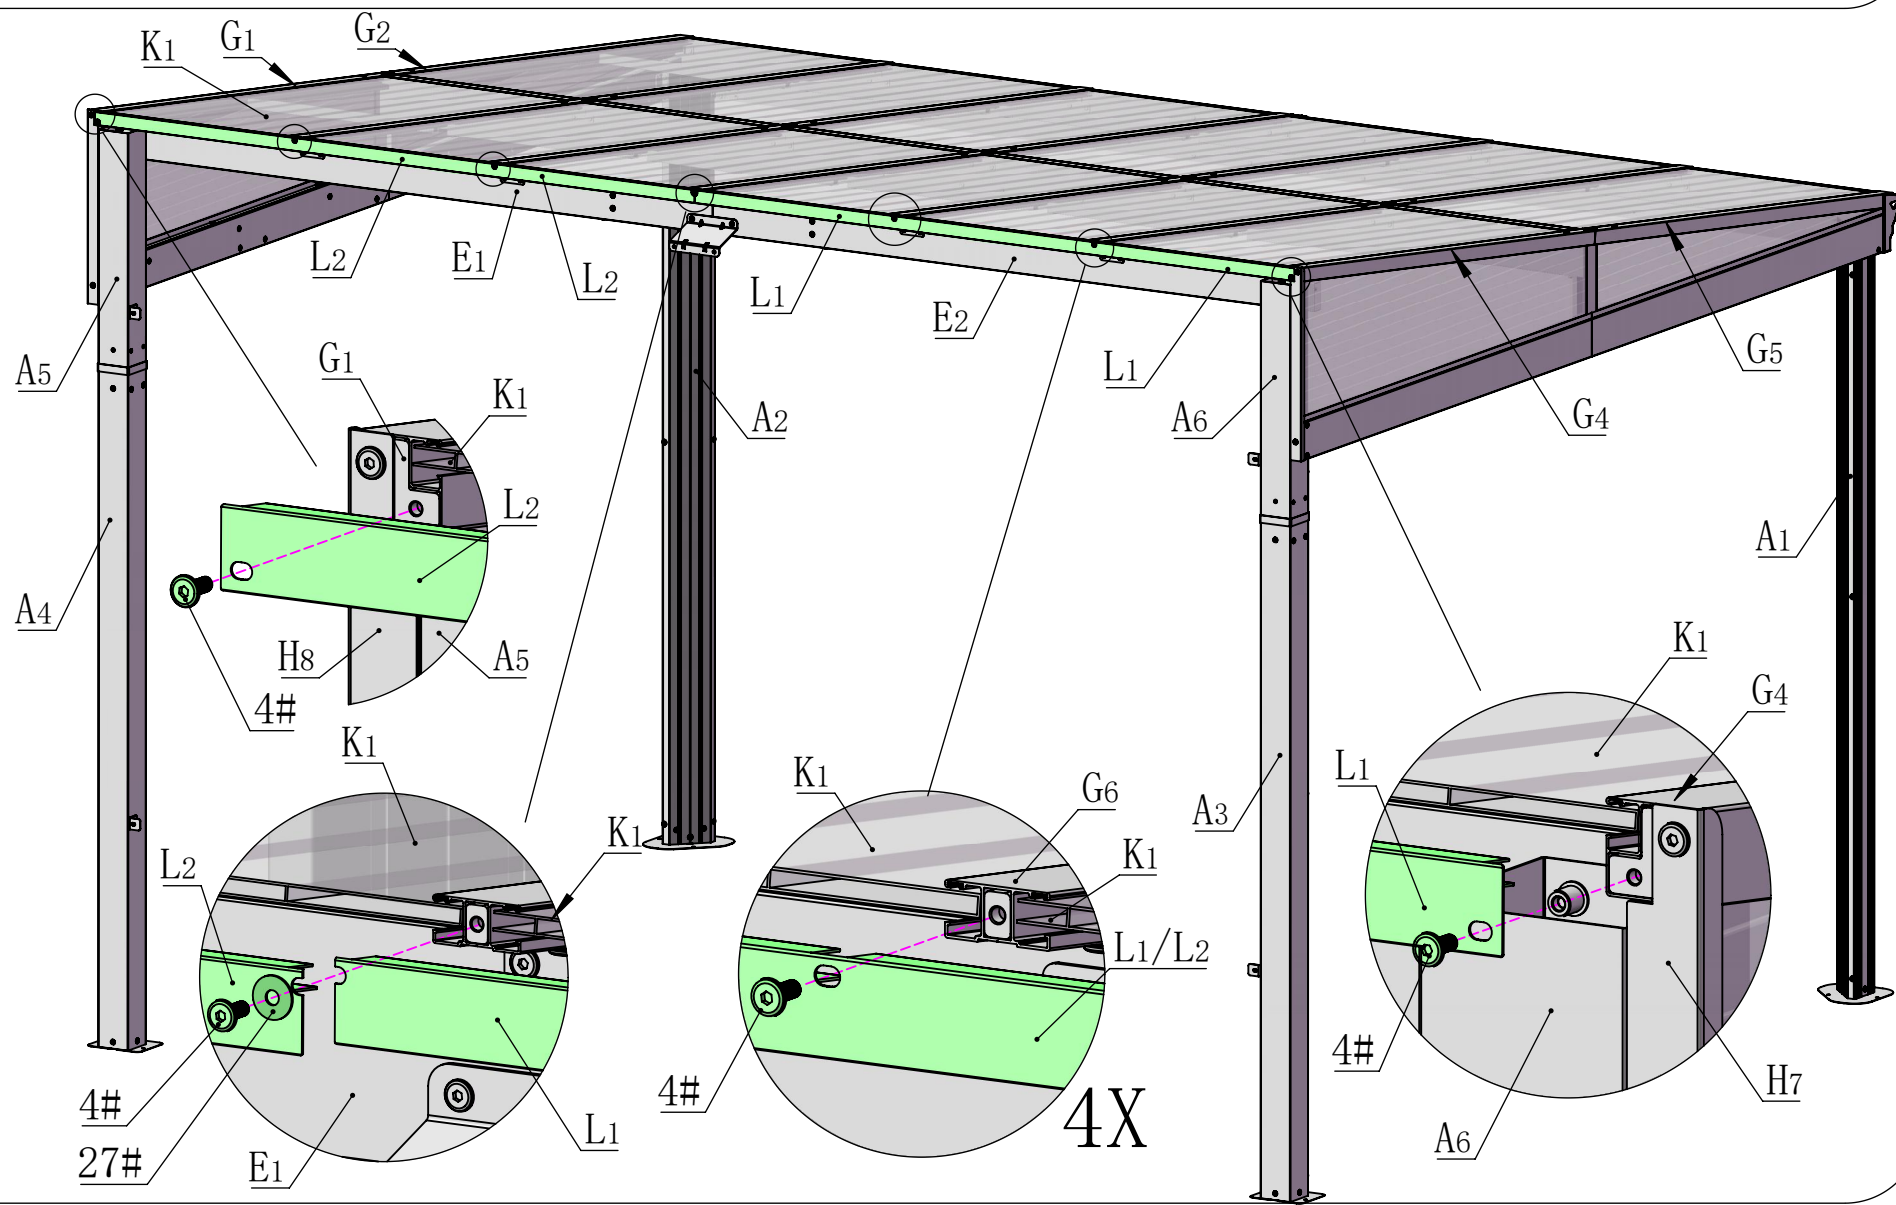


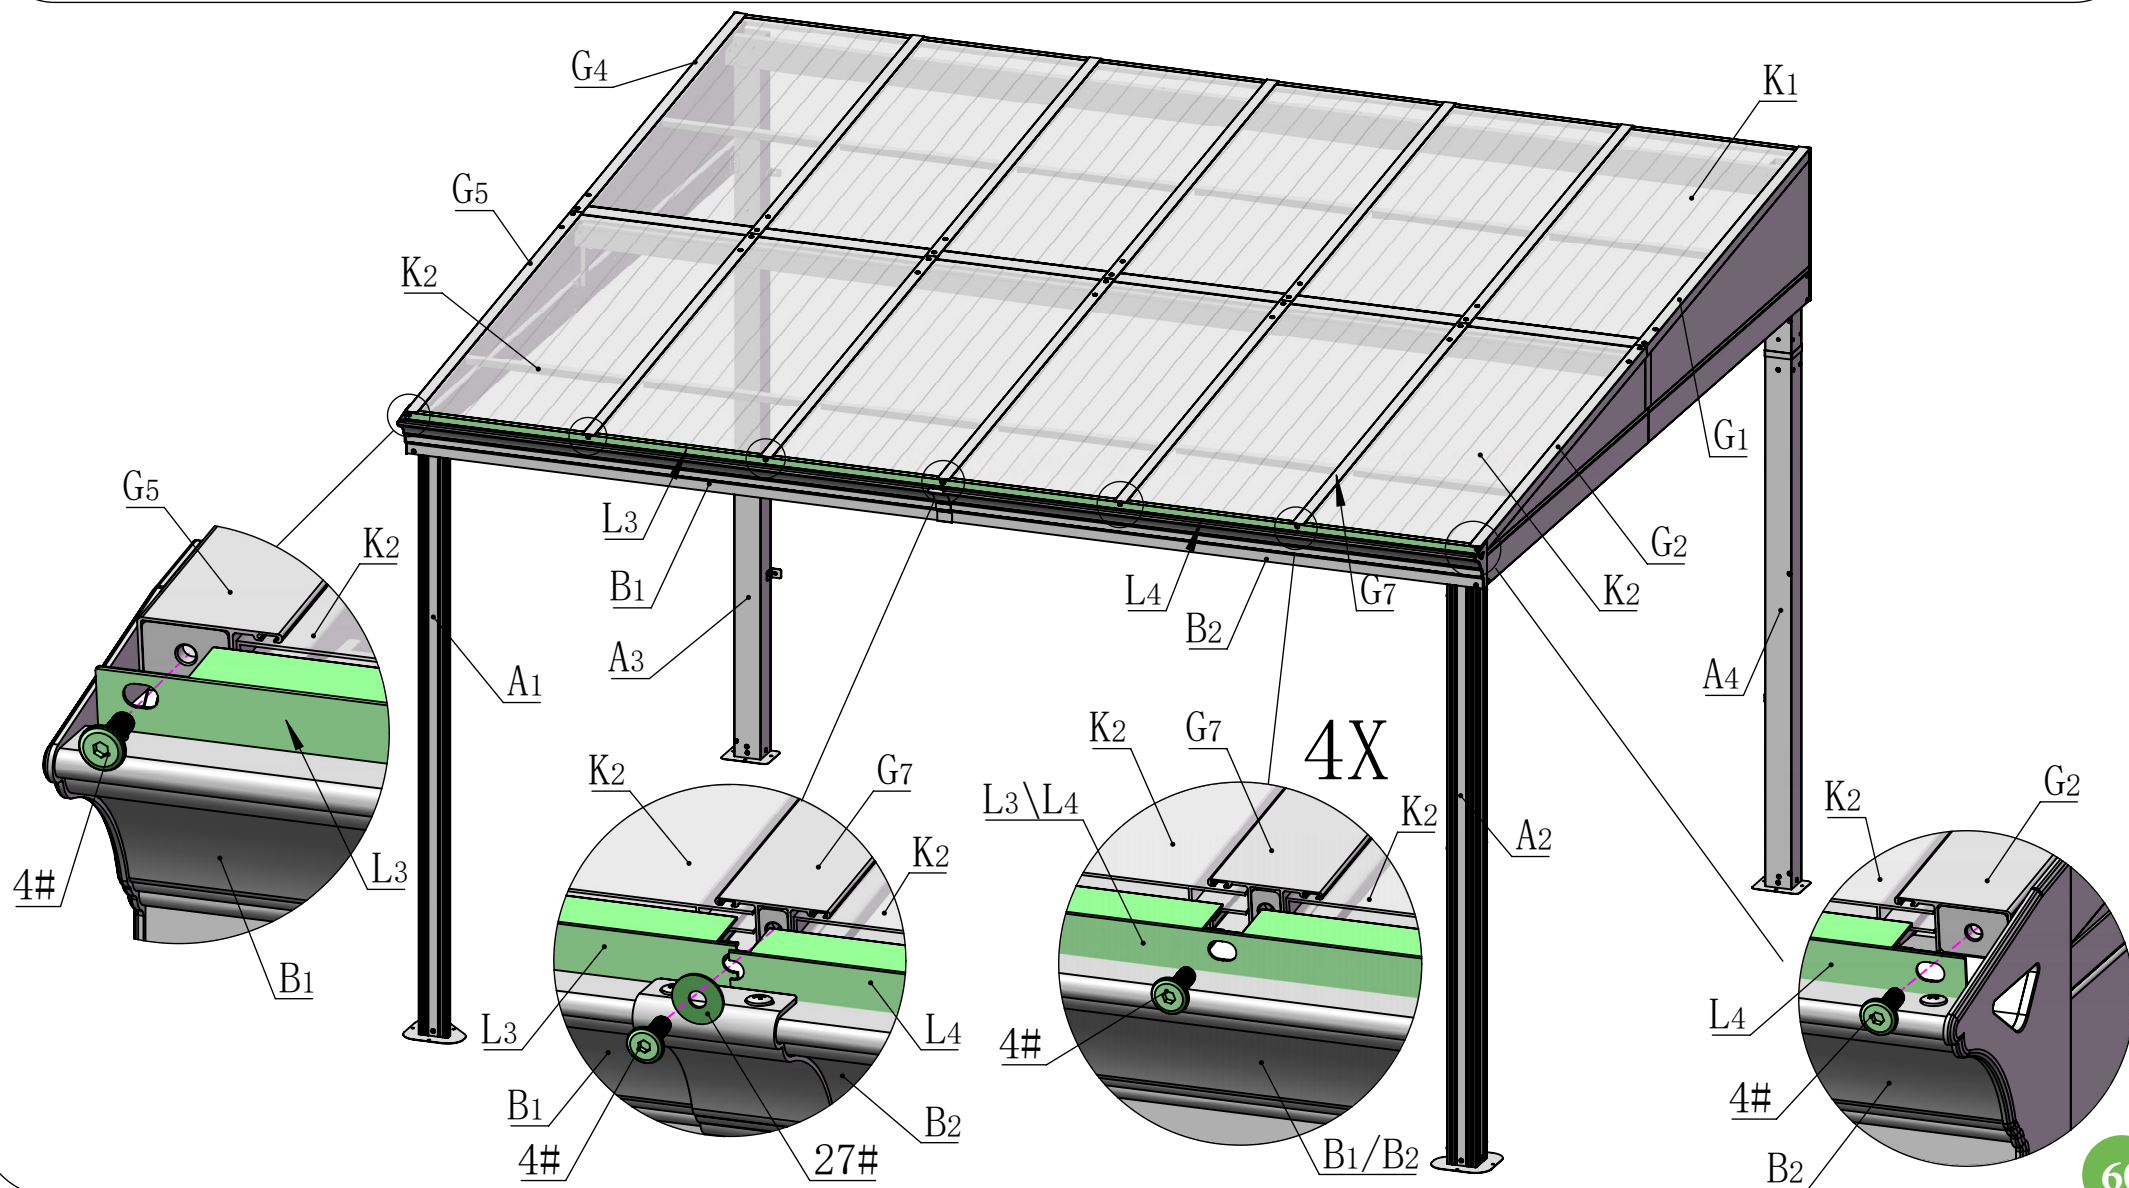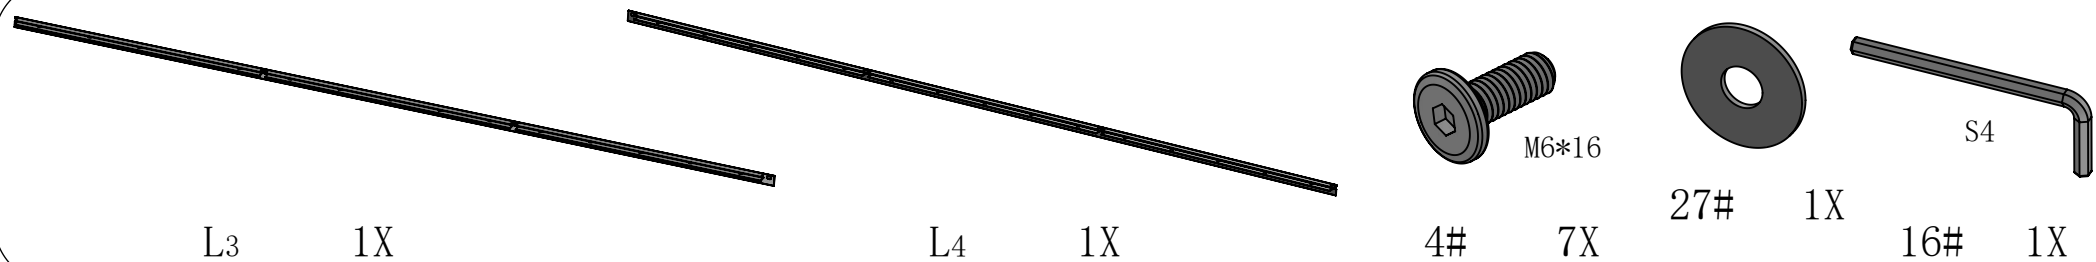

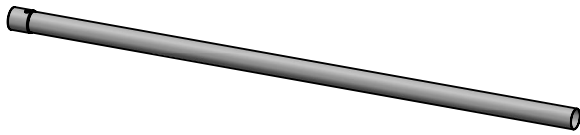

M1




1X

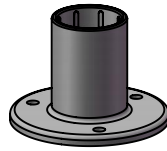

M3

1X


Support Tube Assembly

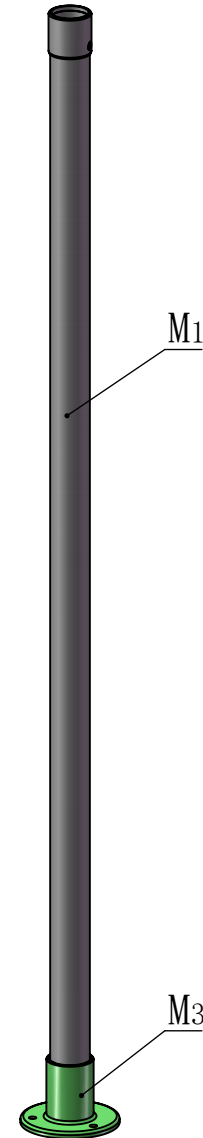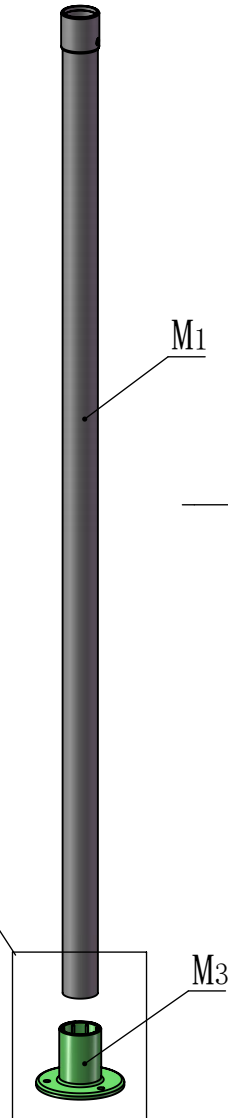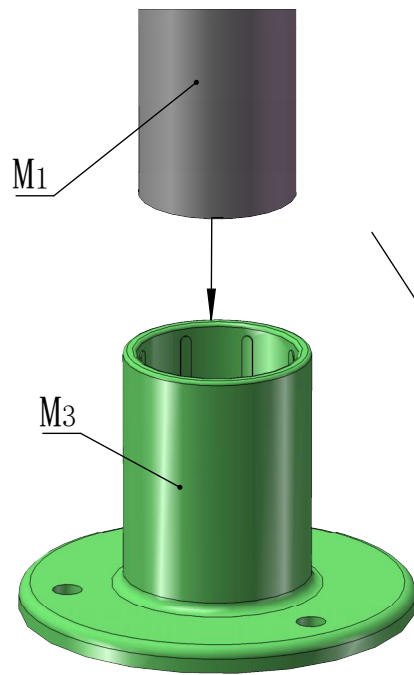



M2

1X

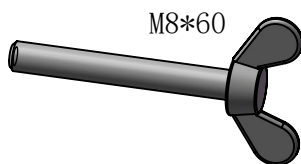

12#

1X




13#

1X





14#

1X

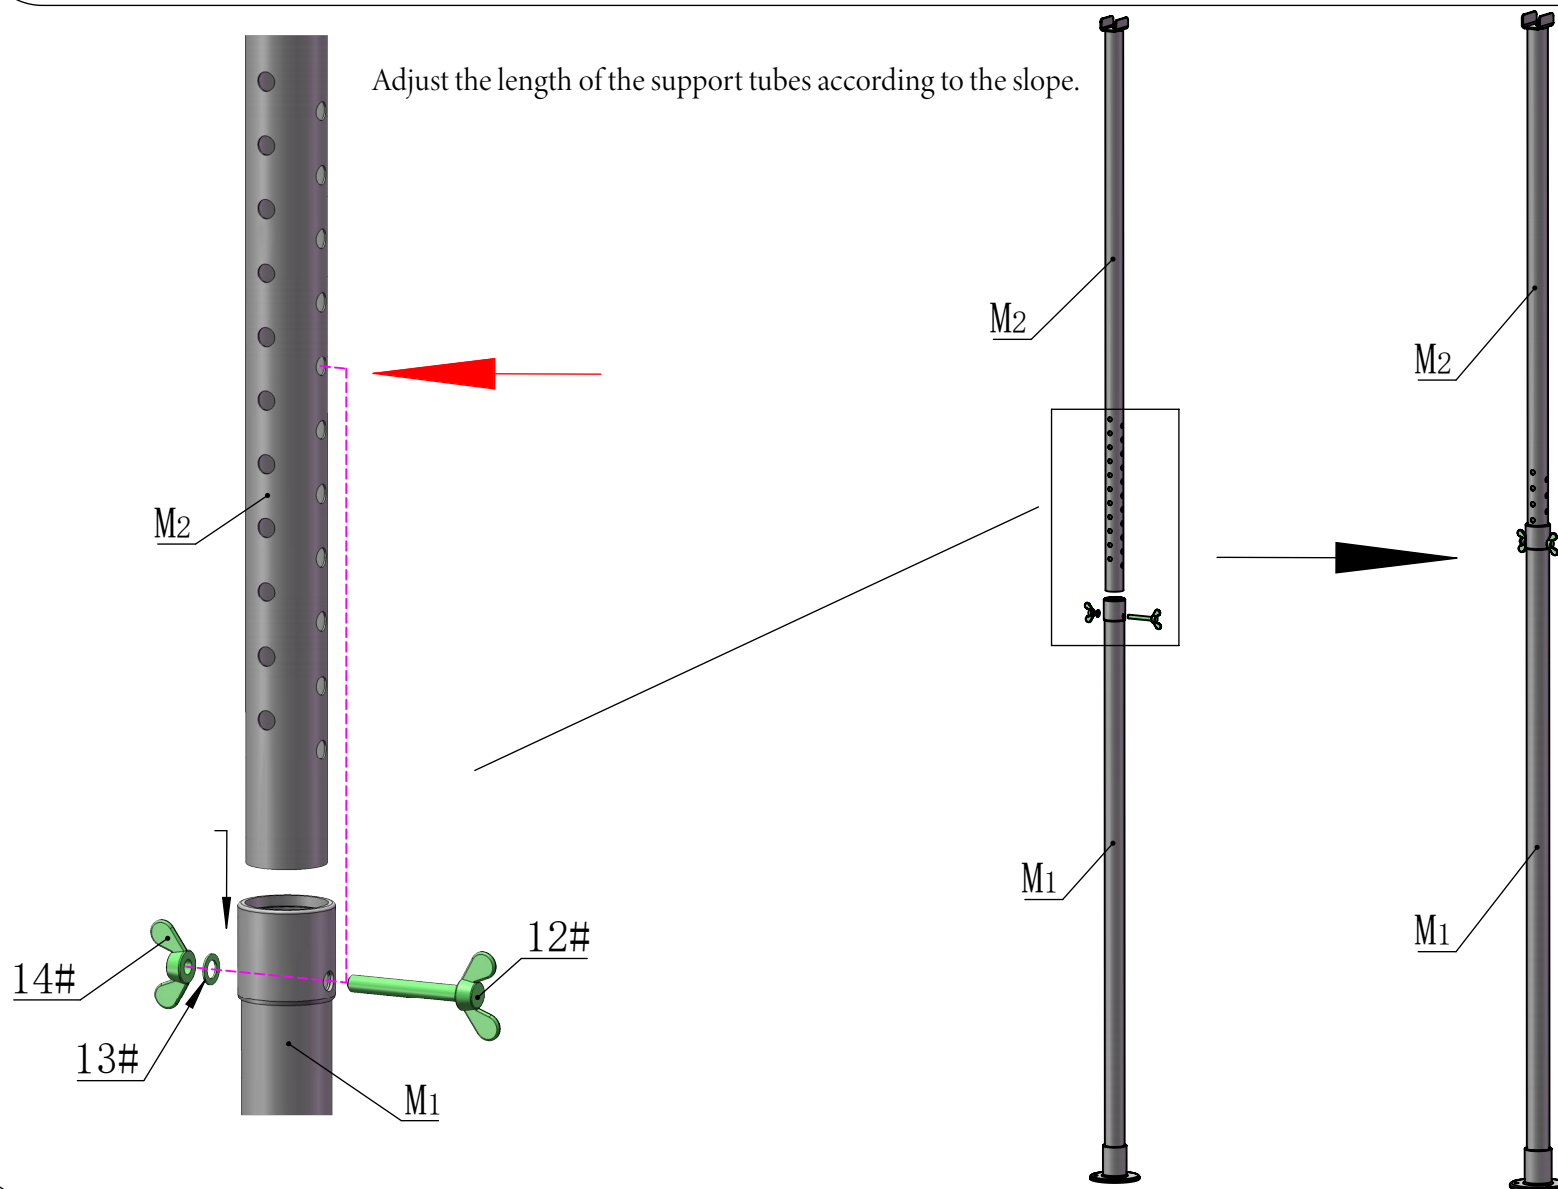


The support tube can strengthen the weight capacity of the roof. In bad weather, especially snowstorm, the support tube is essentially need to prevent the roof from collapsing under heavy snow. In daily life, you can put it away.

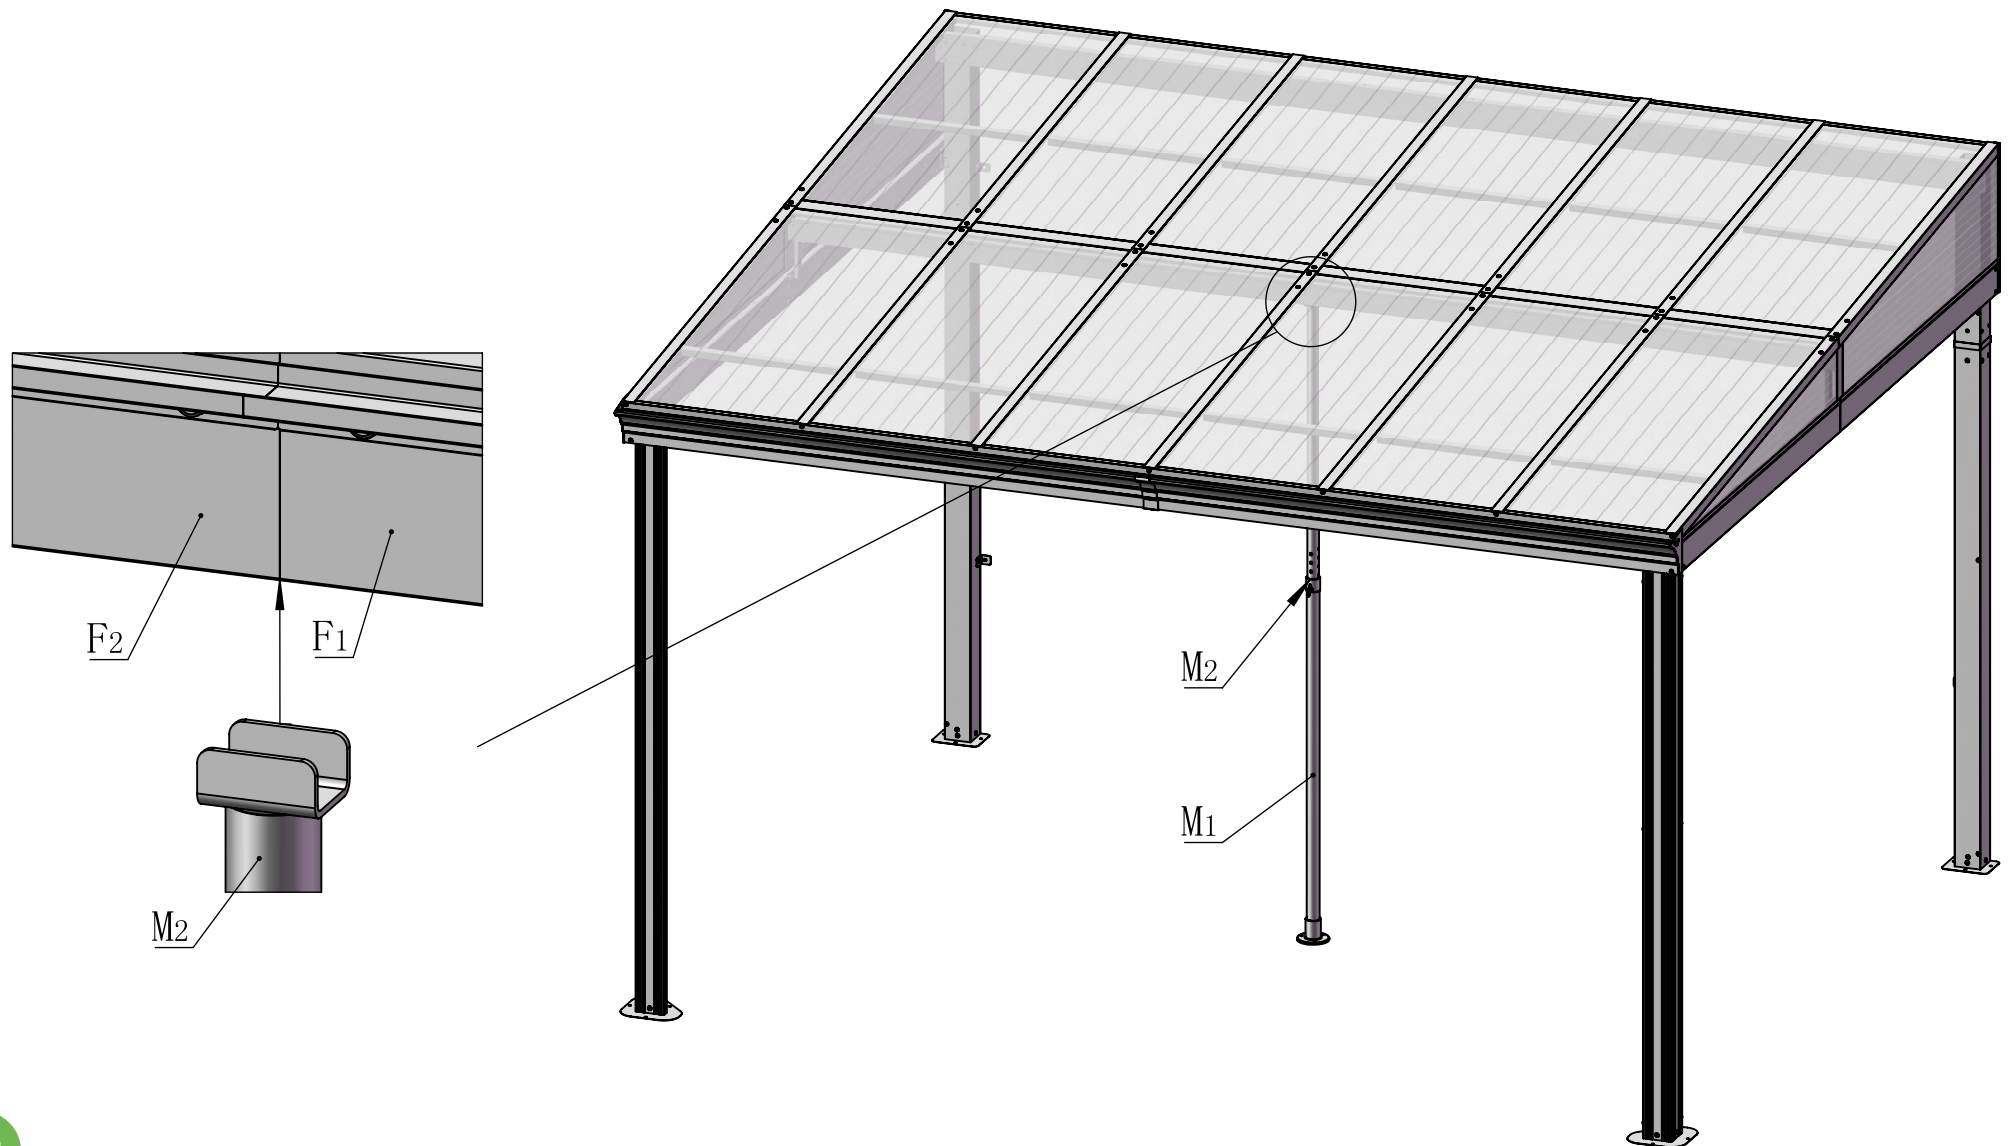

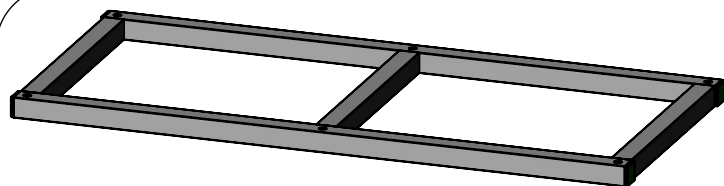


N1 6X

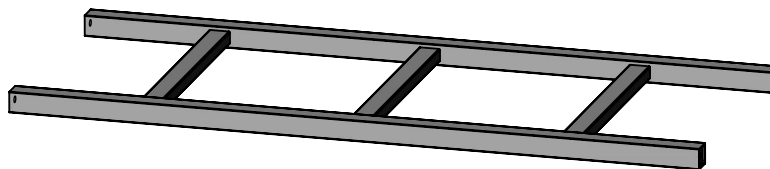

N2 3X



M6*30

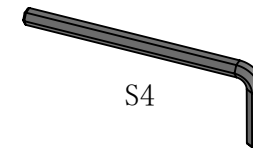


S4

3#


12X

16#


1X

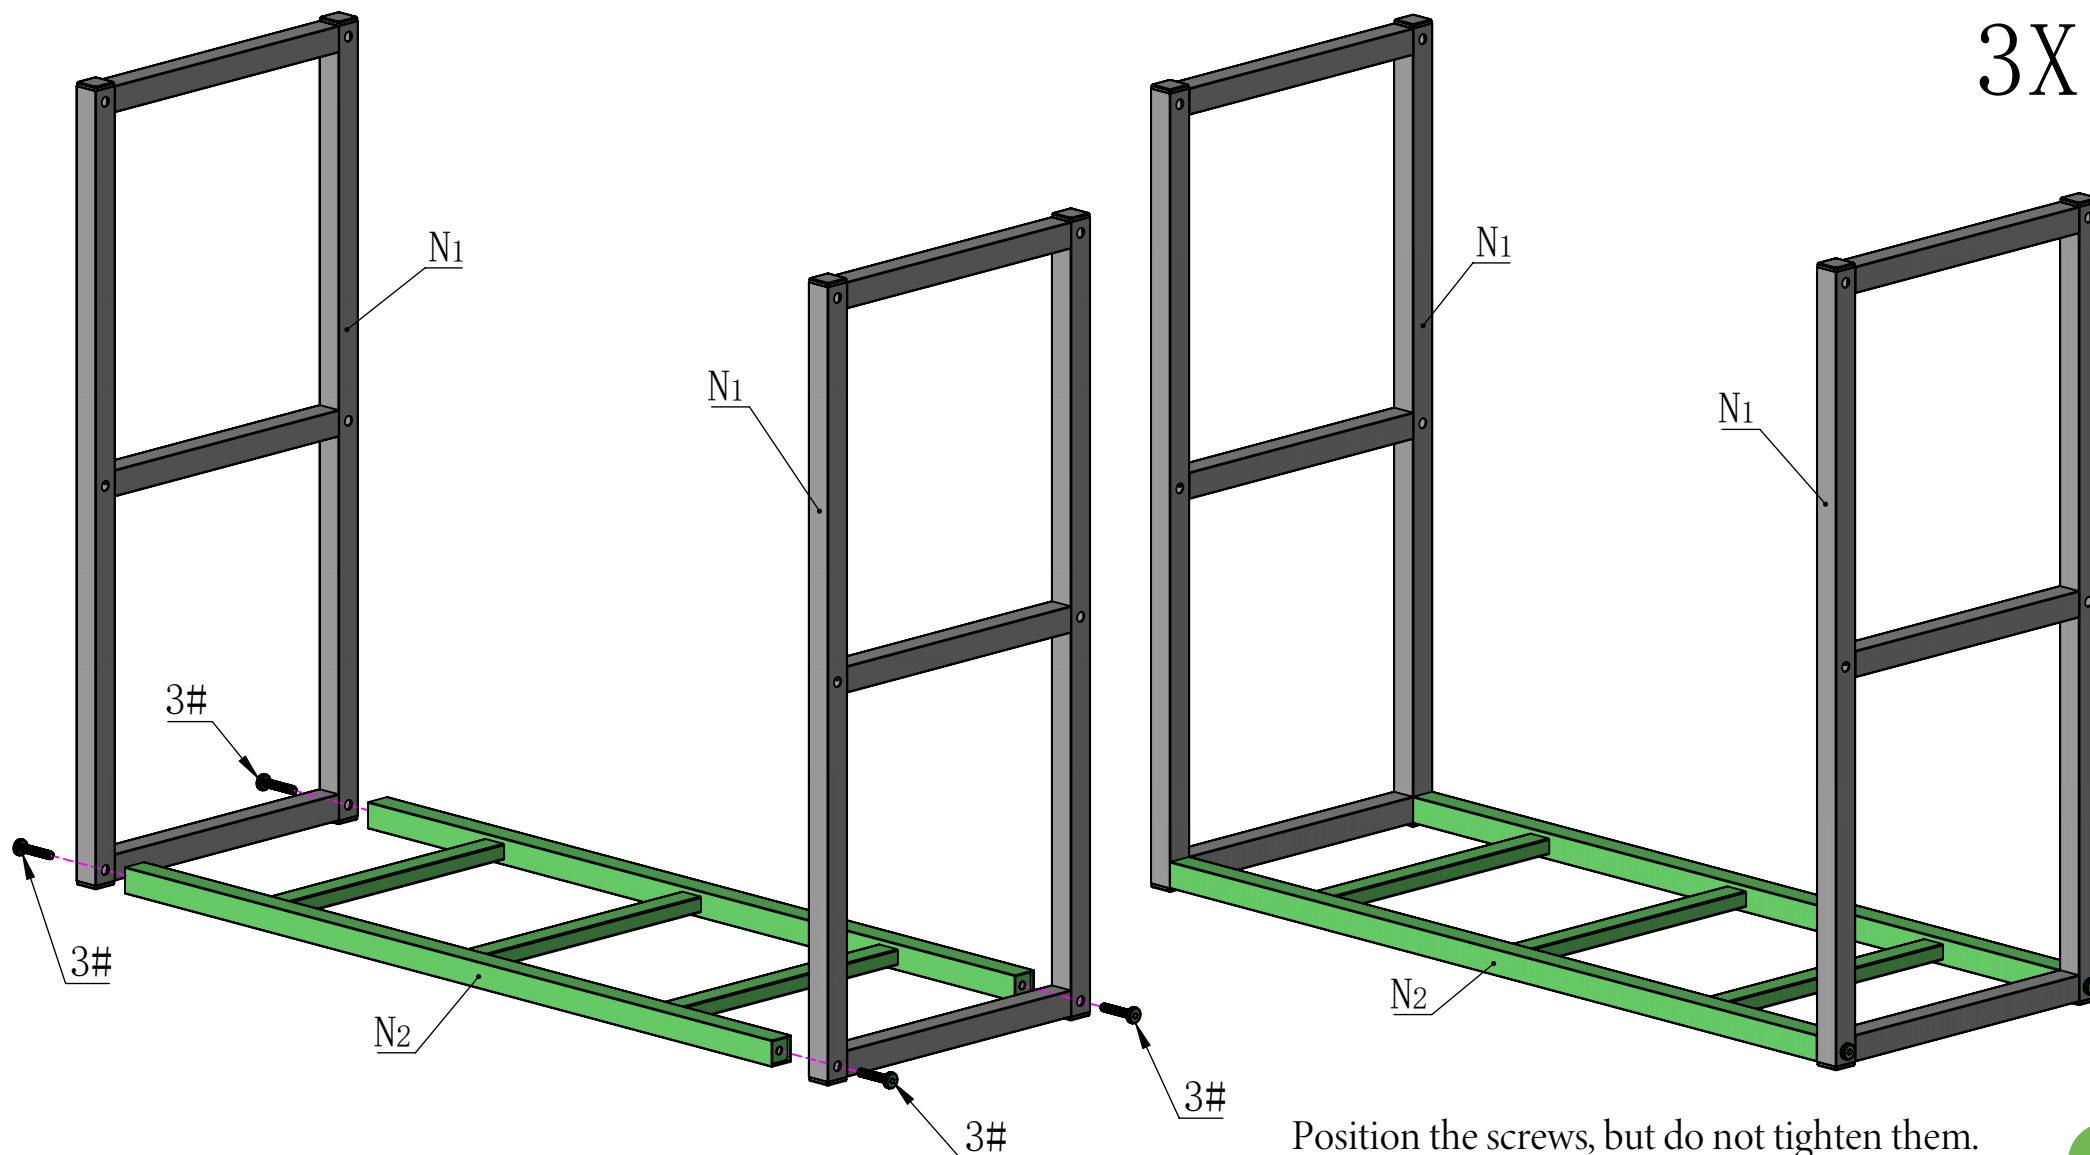


Position the screws, but do not tighten them.

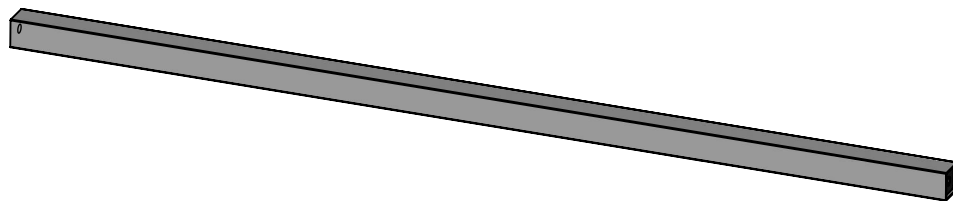



N3 12X

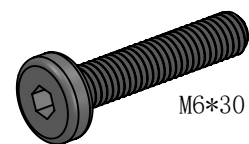

3# 24X

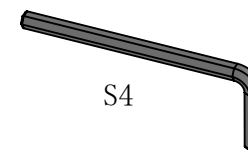


16# 1X

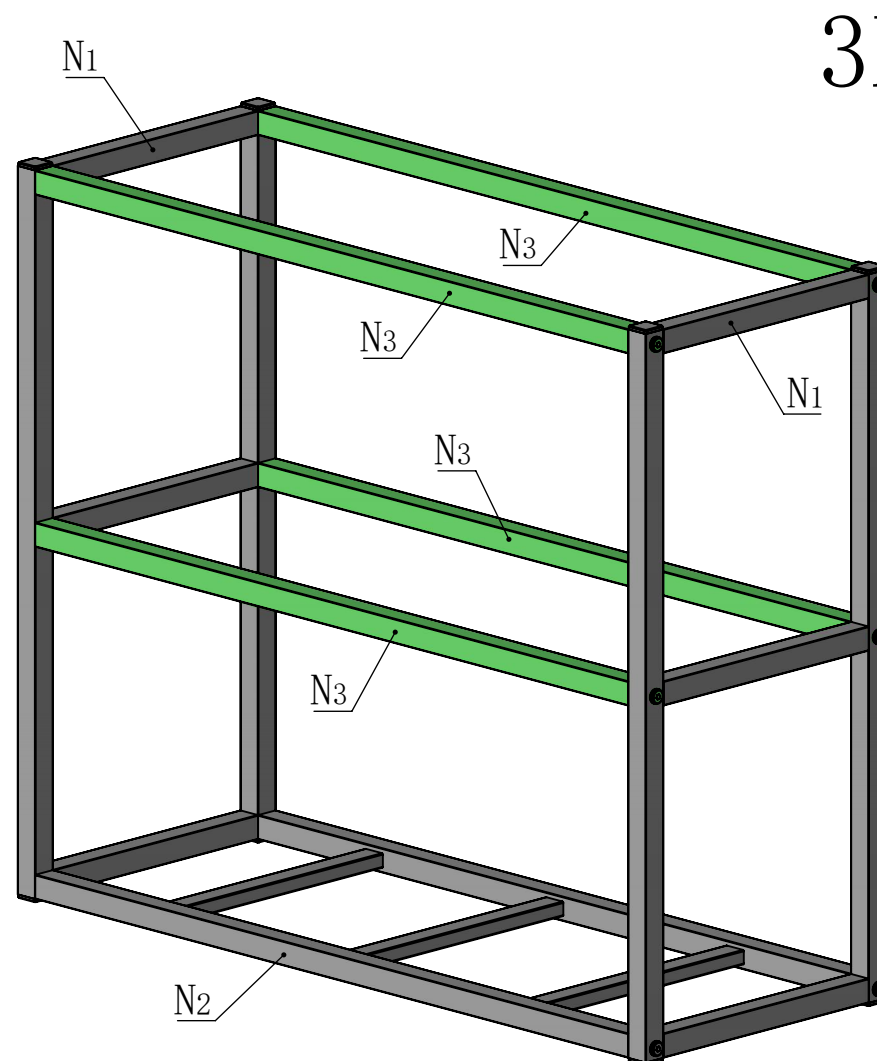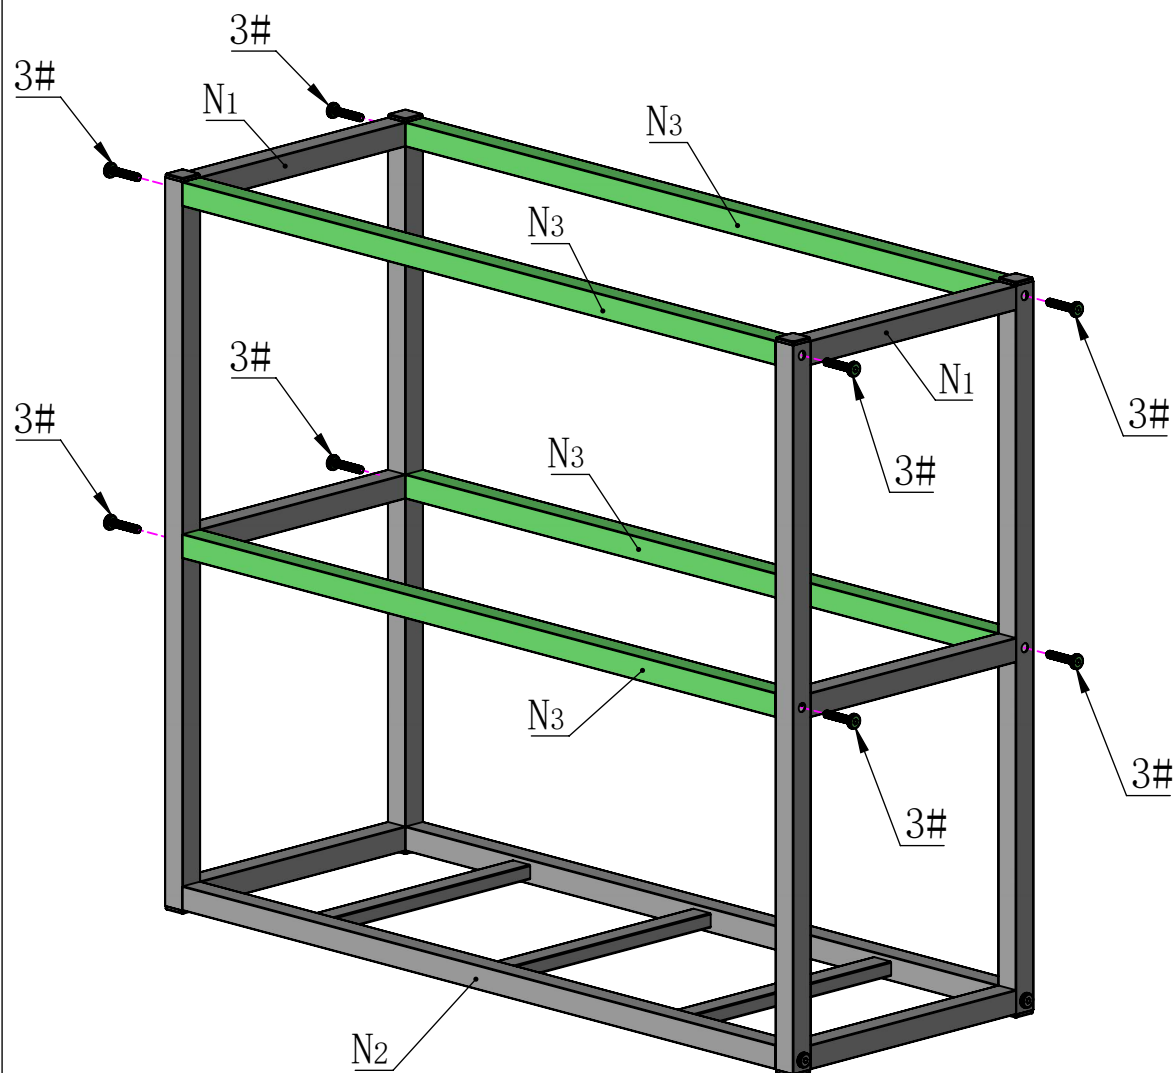


3X

Tighten all screws after they are positioned.



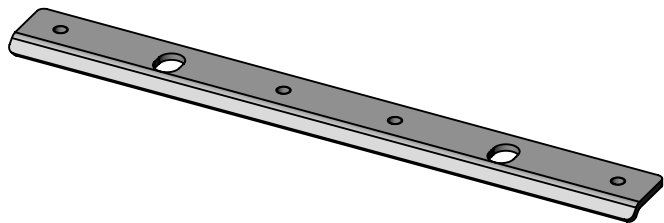


O₃ 1X

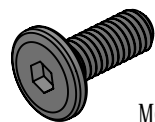


M6*16

4# 4X

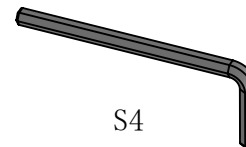


S4

16# 1X

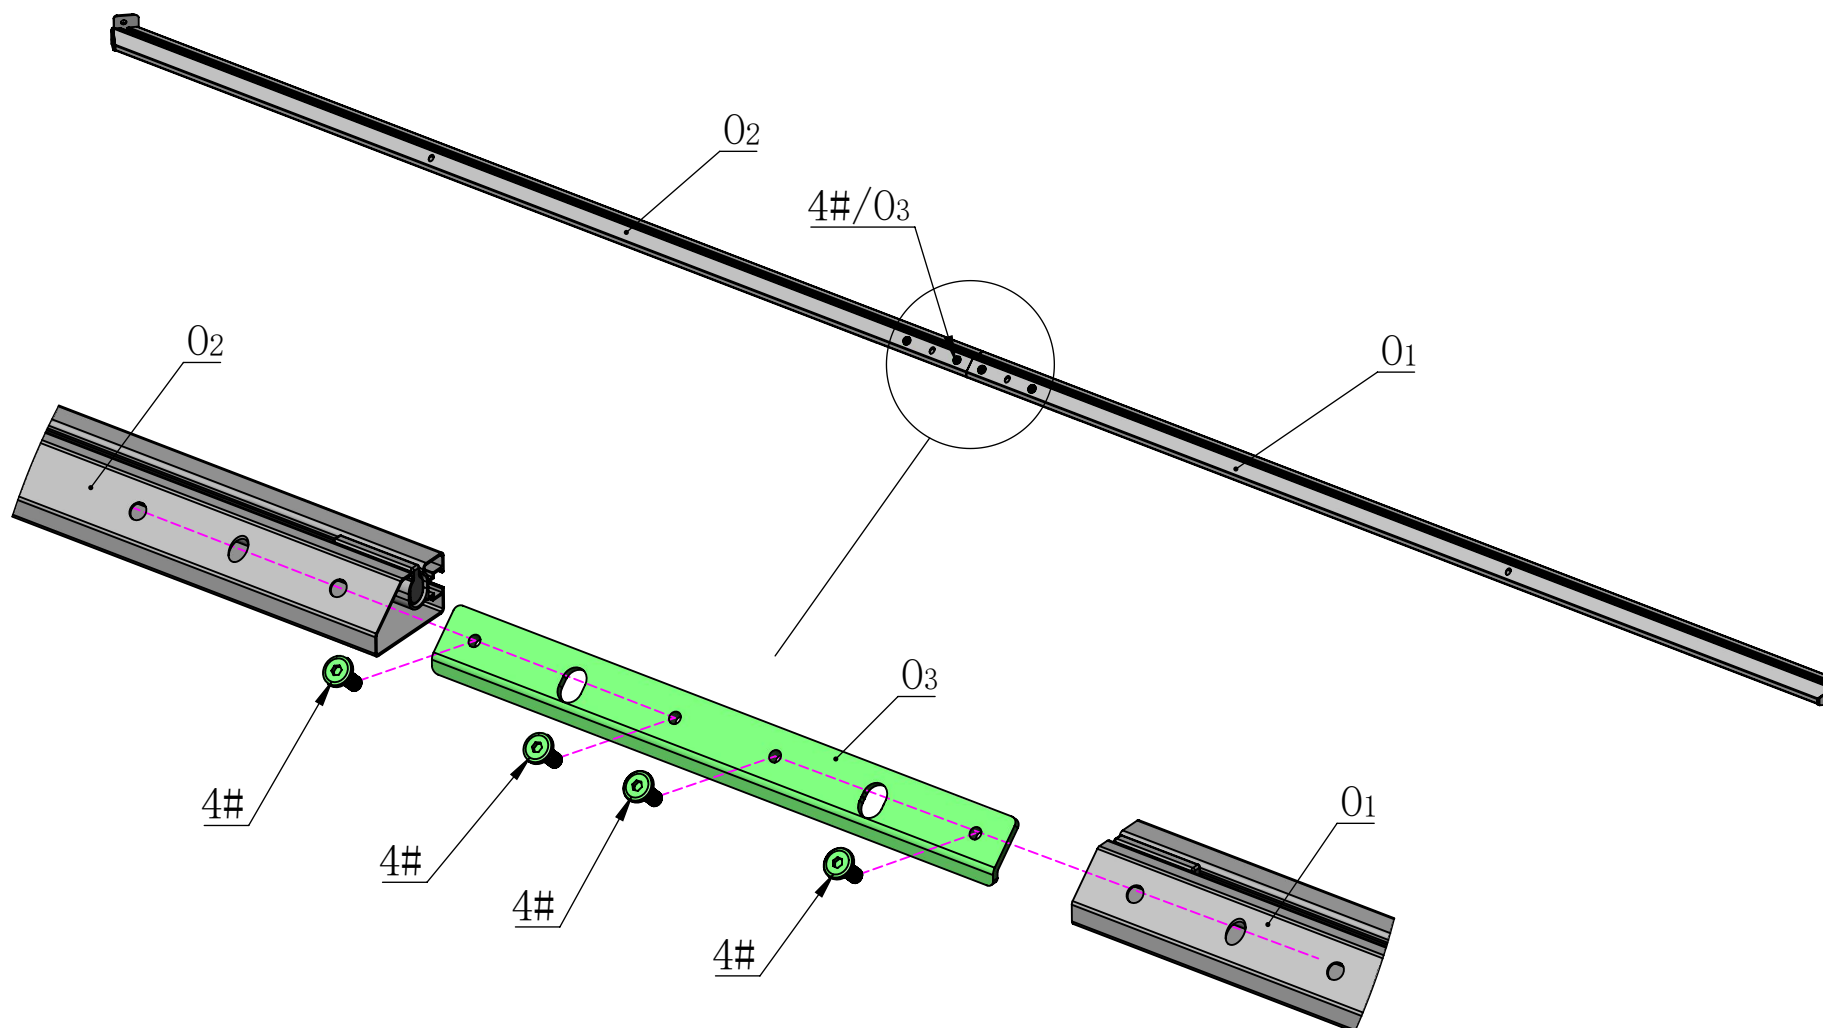




O4 1X

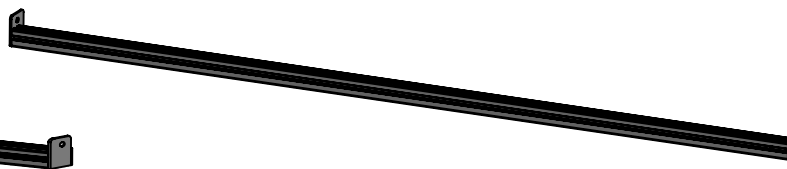


O5 1X



24# 8X

Attention: If you want to assemble based on **Model 2 (left side door)**, you need to install 3 square nut (#24) in the track (O4), and install 3 square nut (#24) in the track (O5).
Please see the next page.

MODEL 1

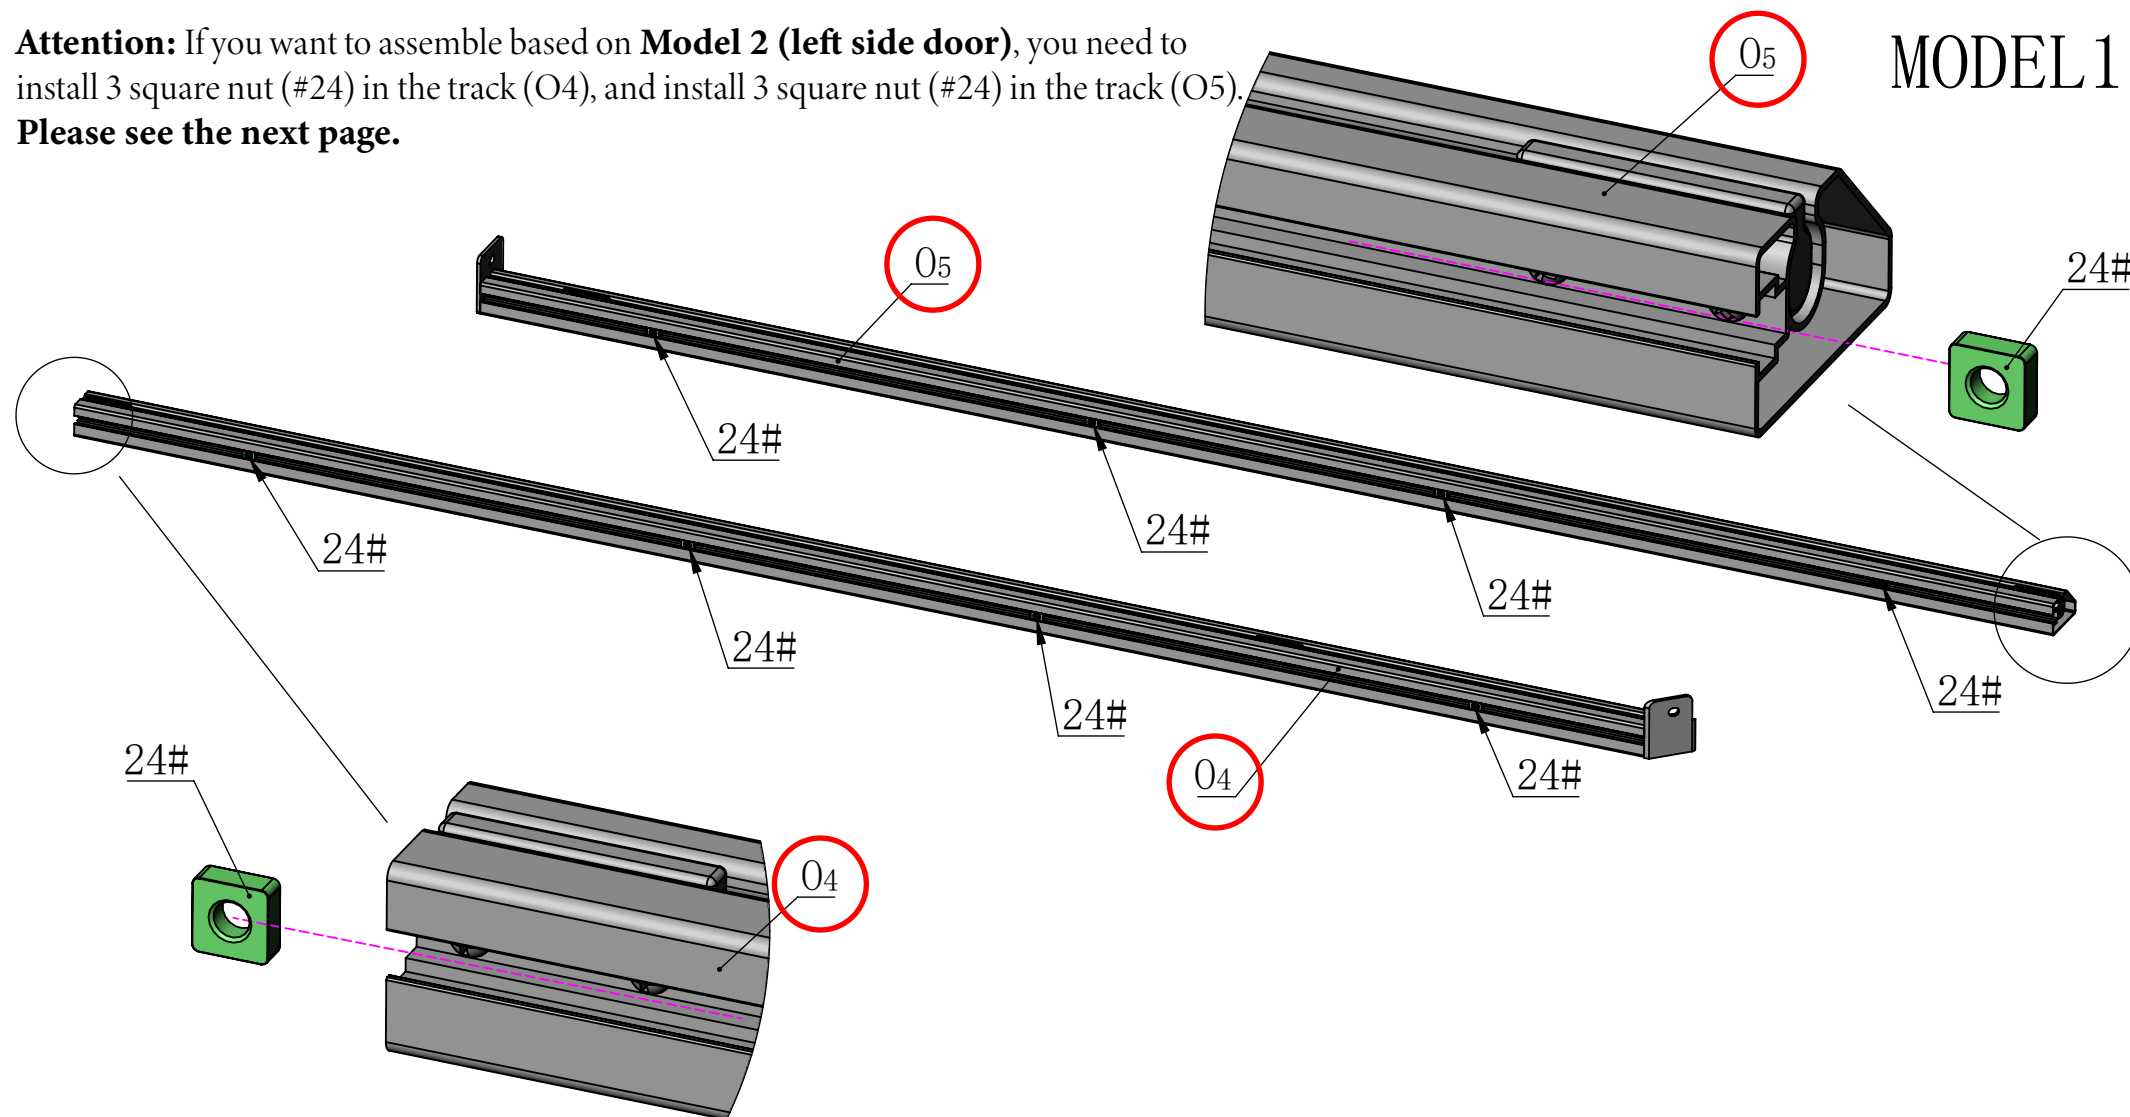



04 1X





05 1X



24# 6X

MODEL2

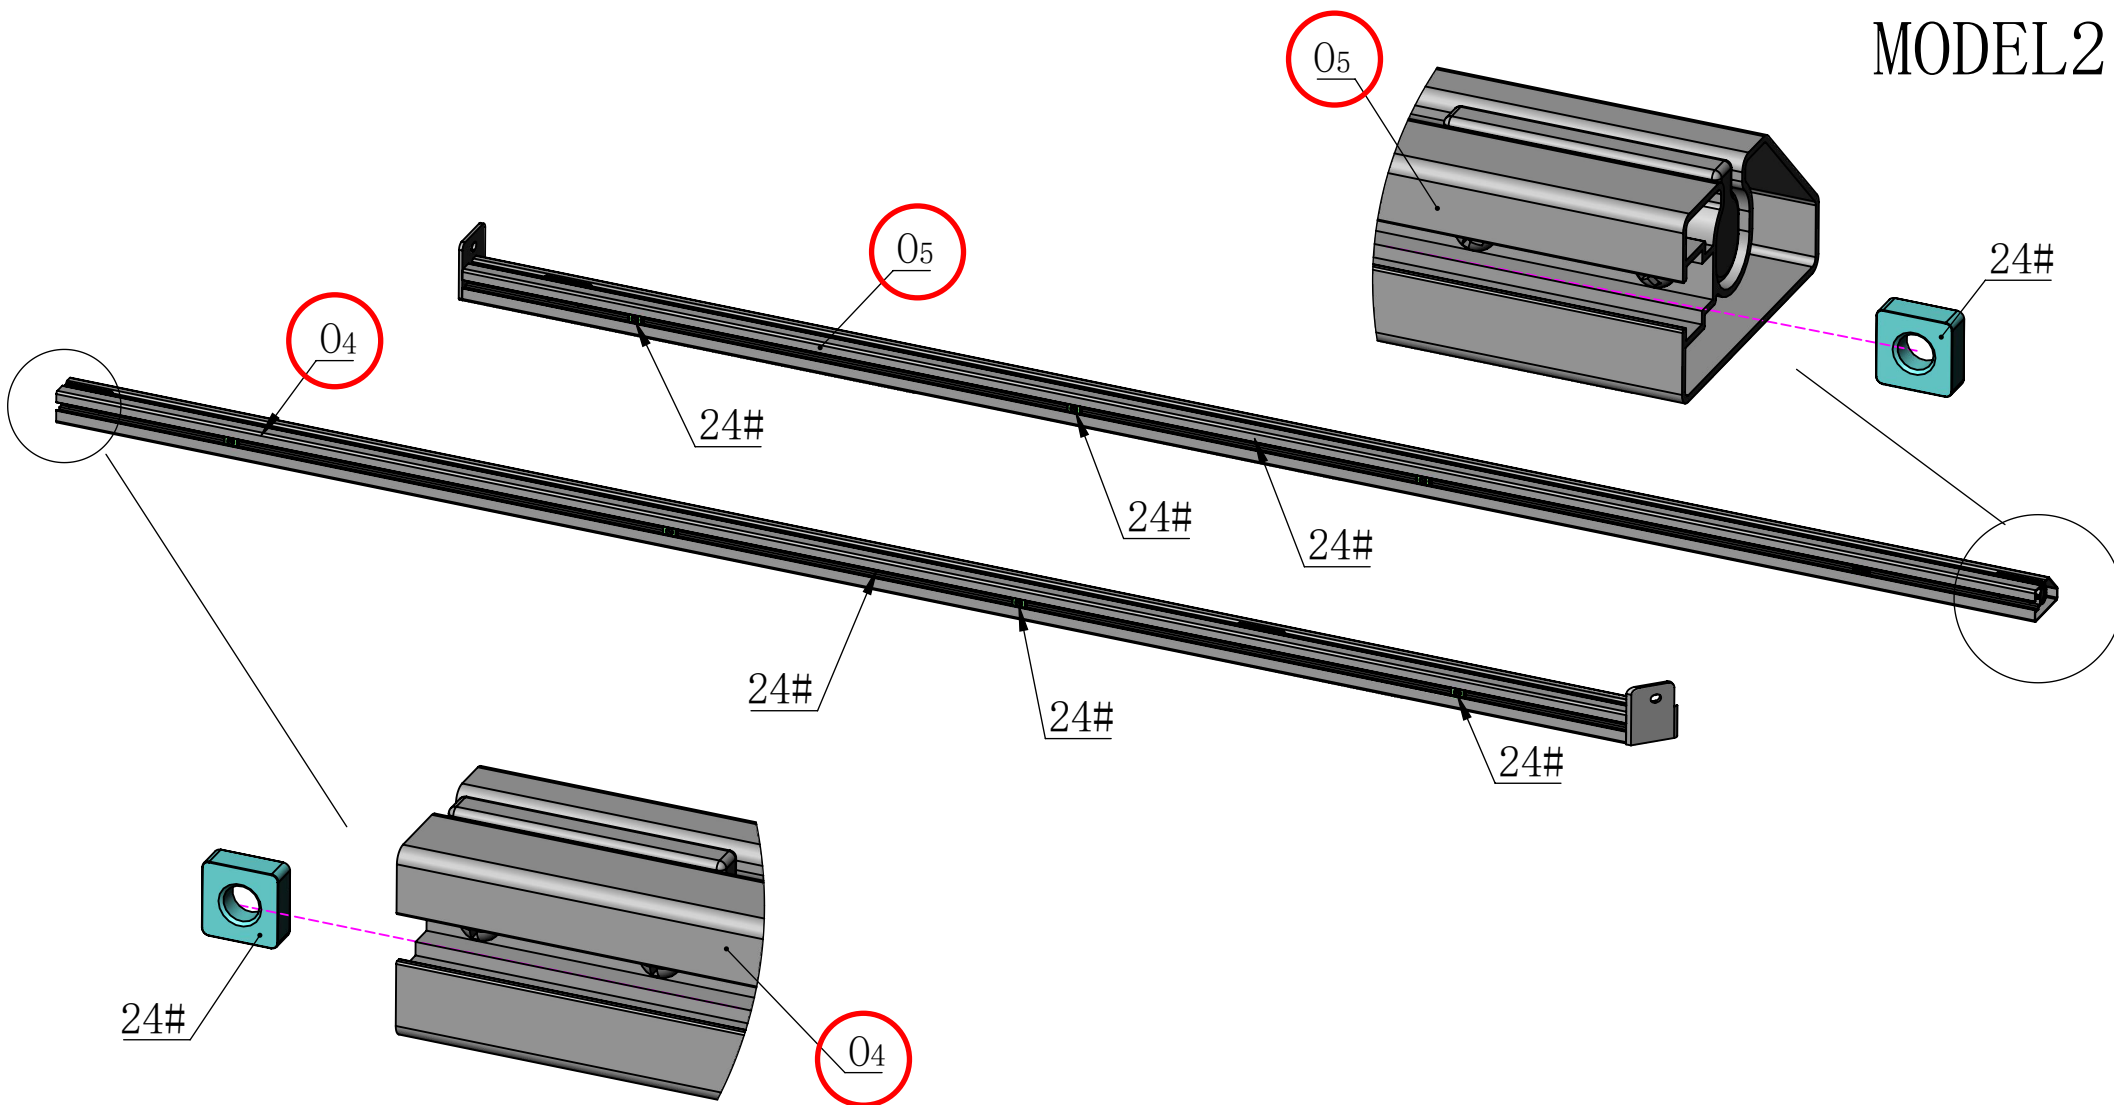

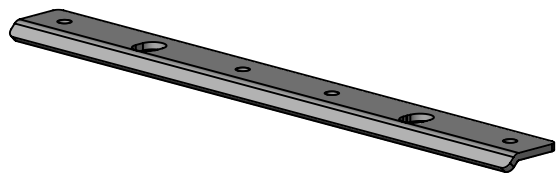


03 1X




M6*16


4# 4X

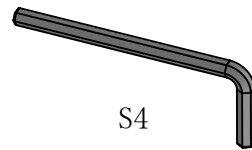

S4


16# 1X


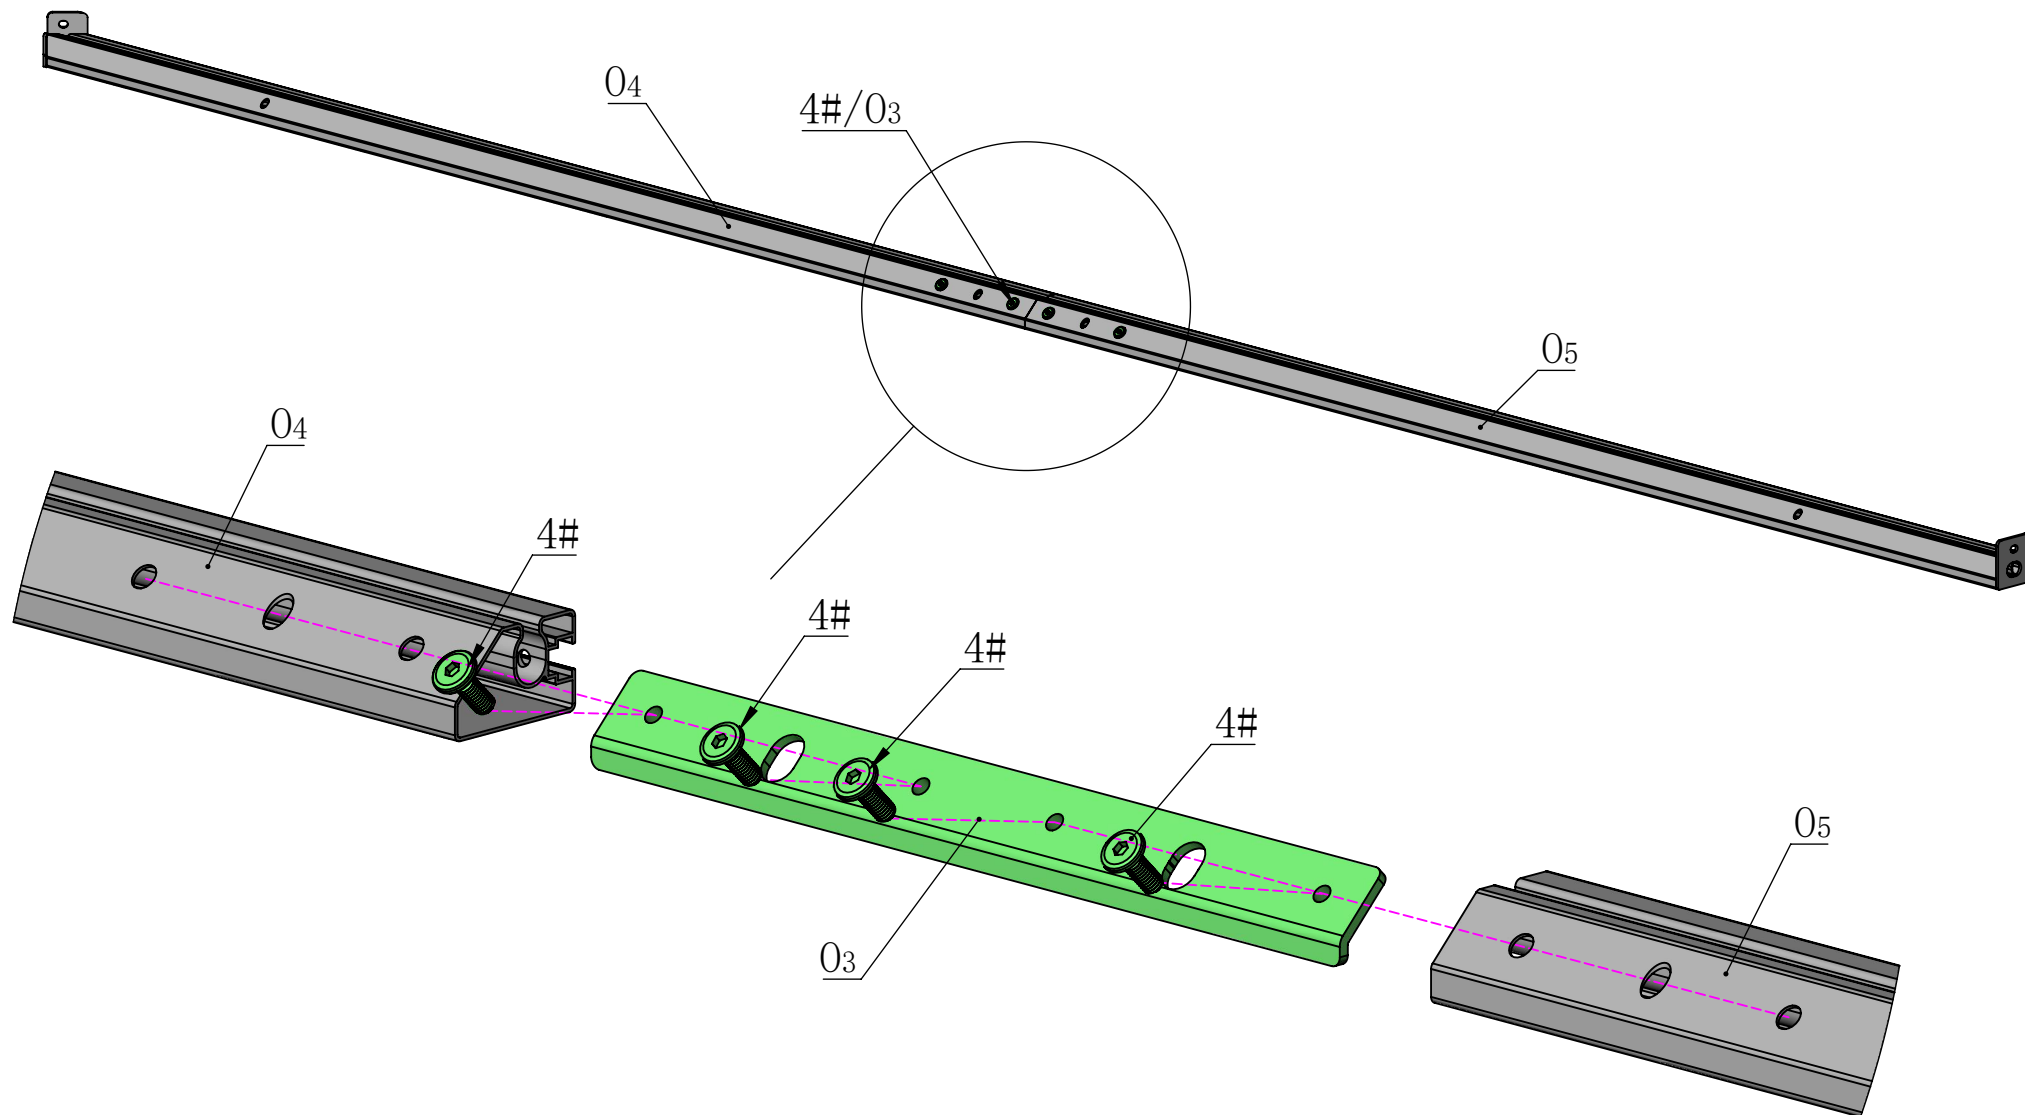


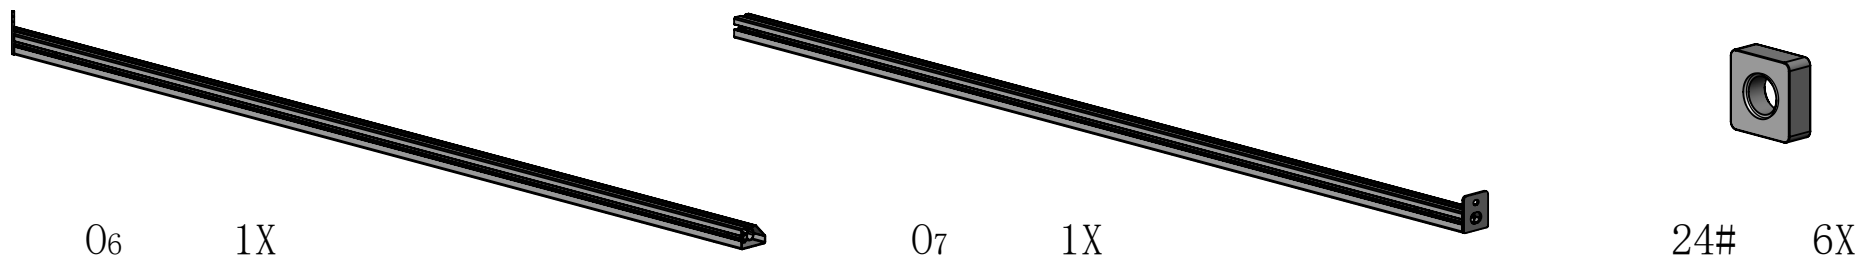


Attention: If you want to assemble based on **Model 2 (left side door)**, you need to install 4 square nuts (#24) in the track (O6), and install 4 square nut (#24) in the track (O7). Please see the next page.


MODEL 1

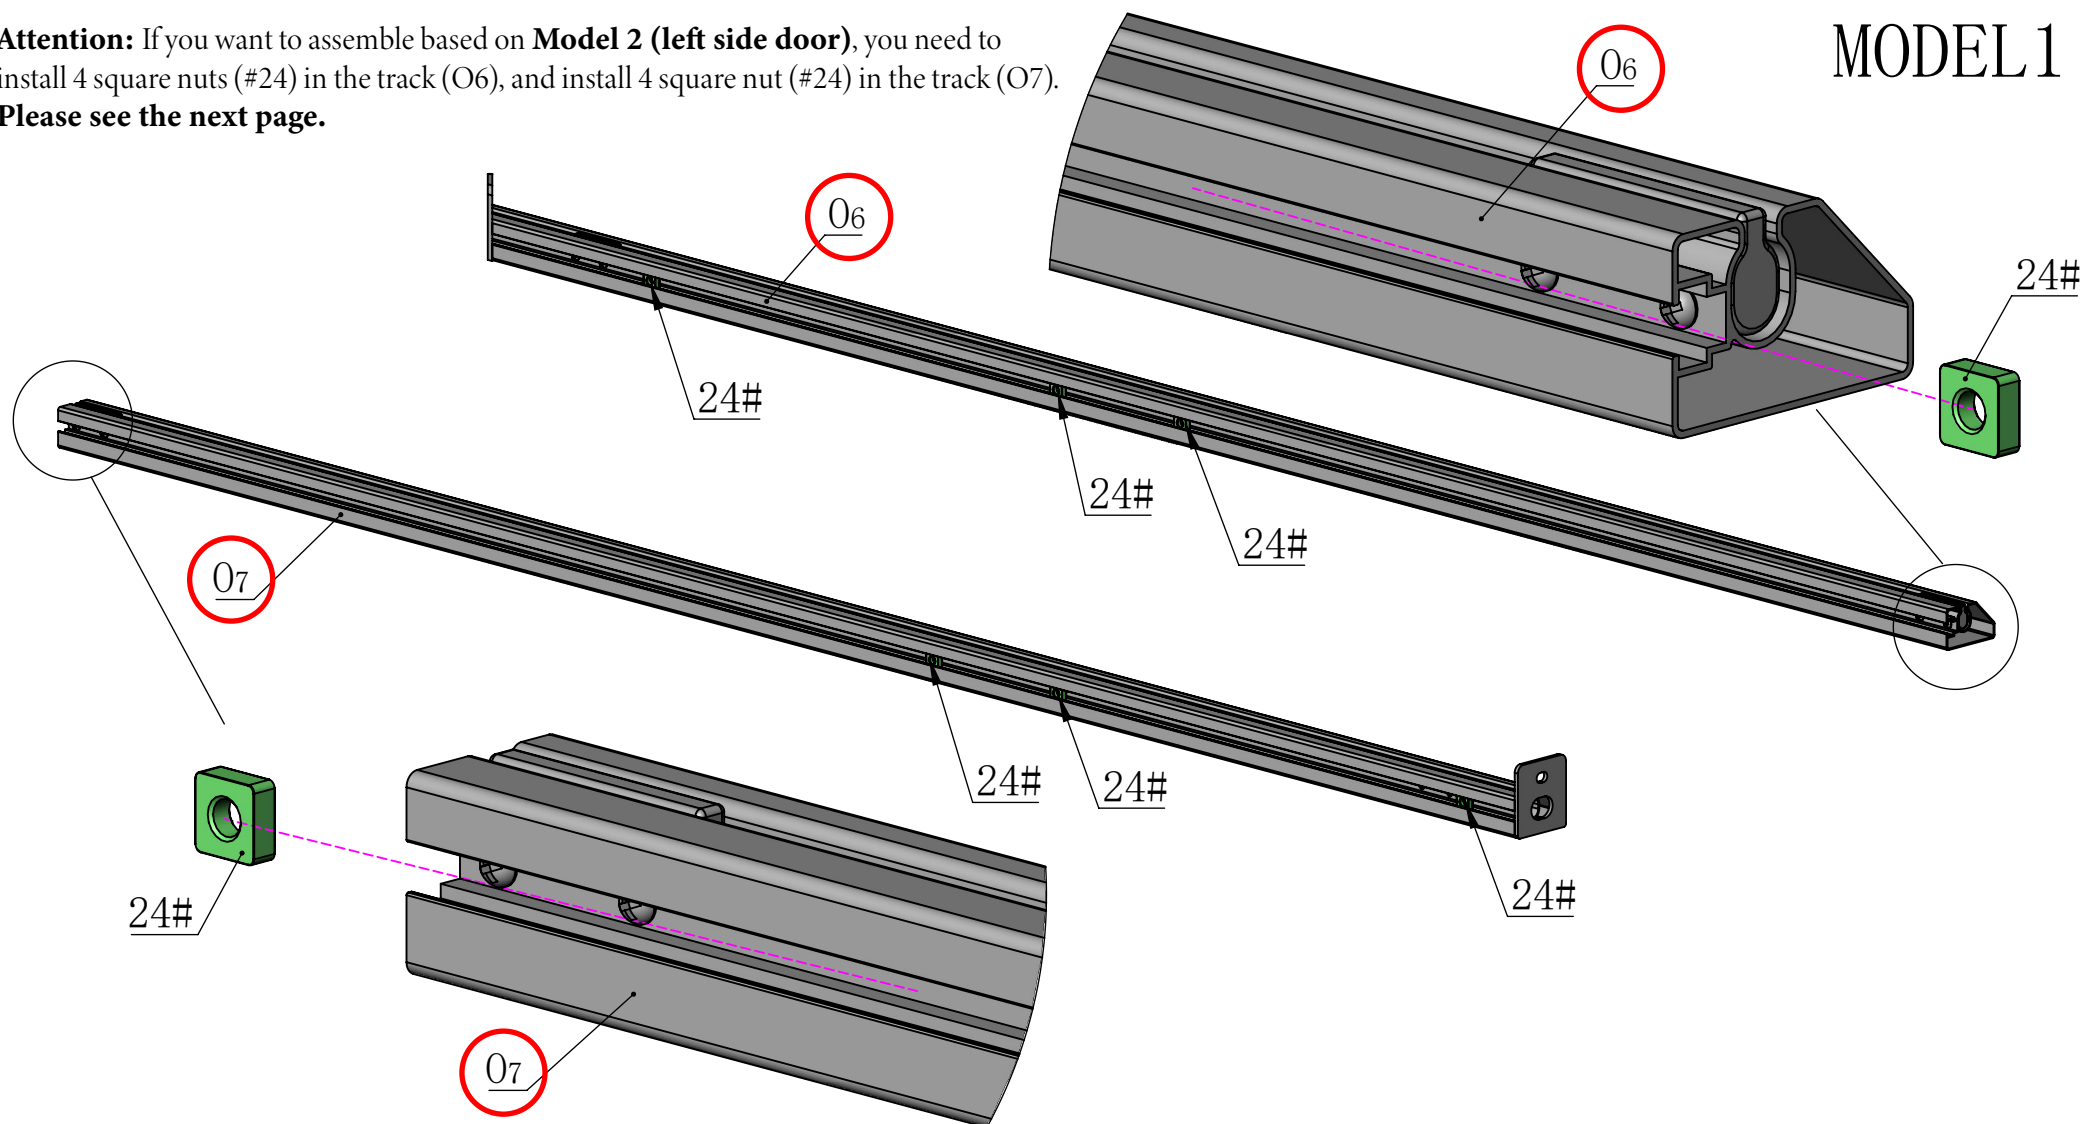

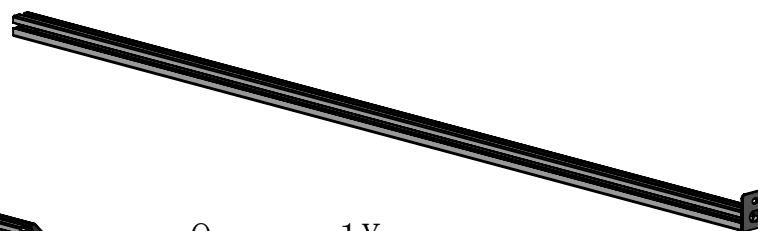


MODEL2

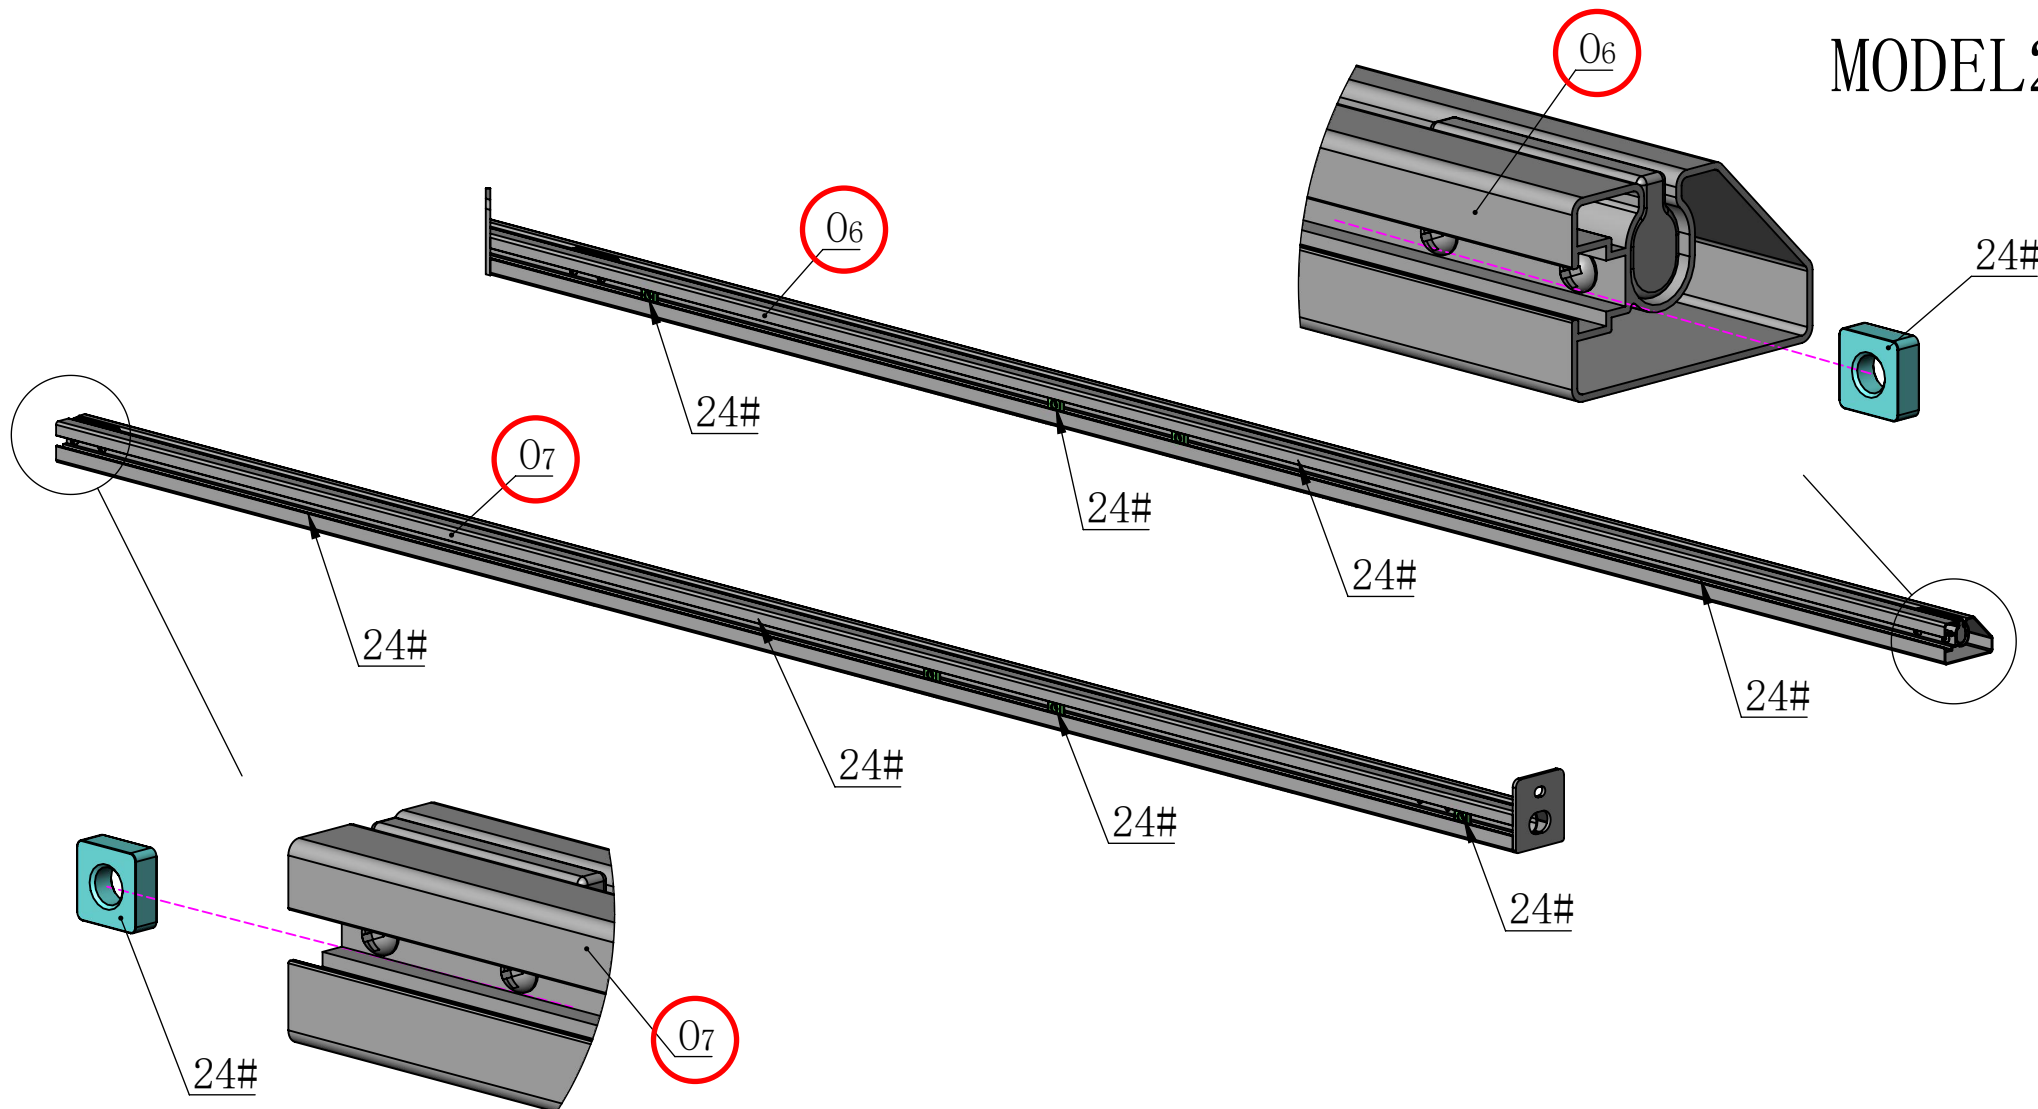

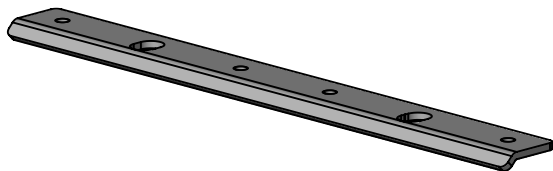


03 1X

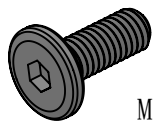


M6*16


4# 4X

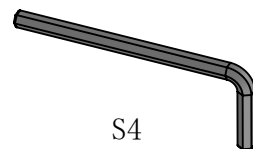

S4

16# 1X

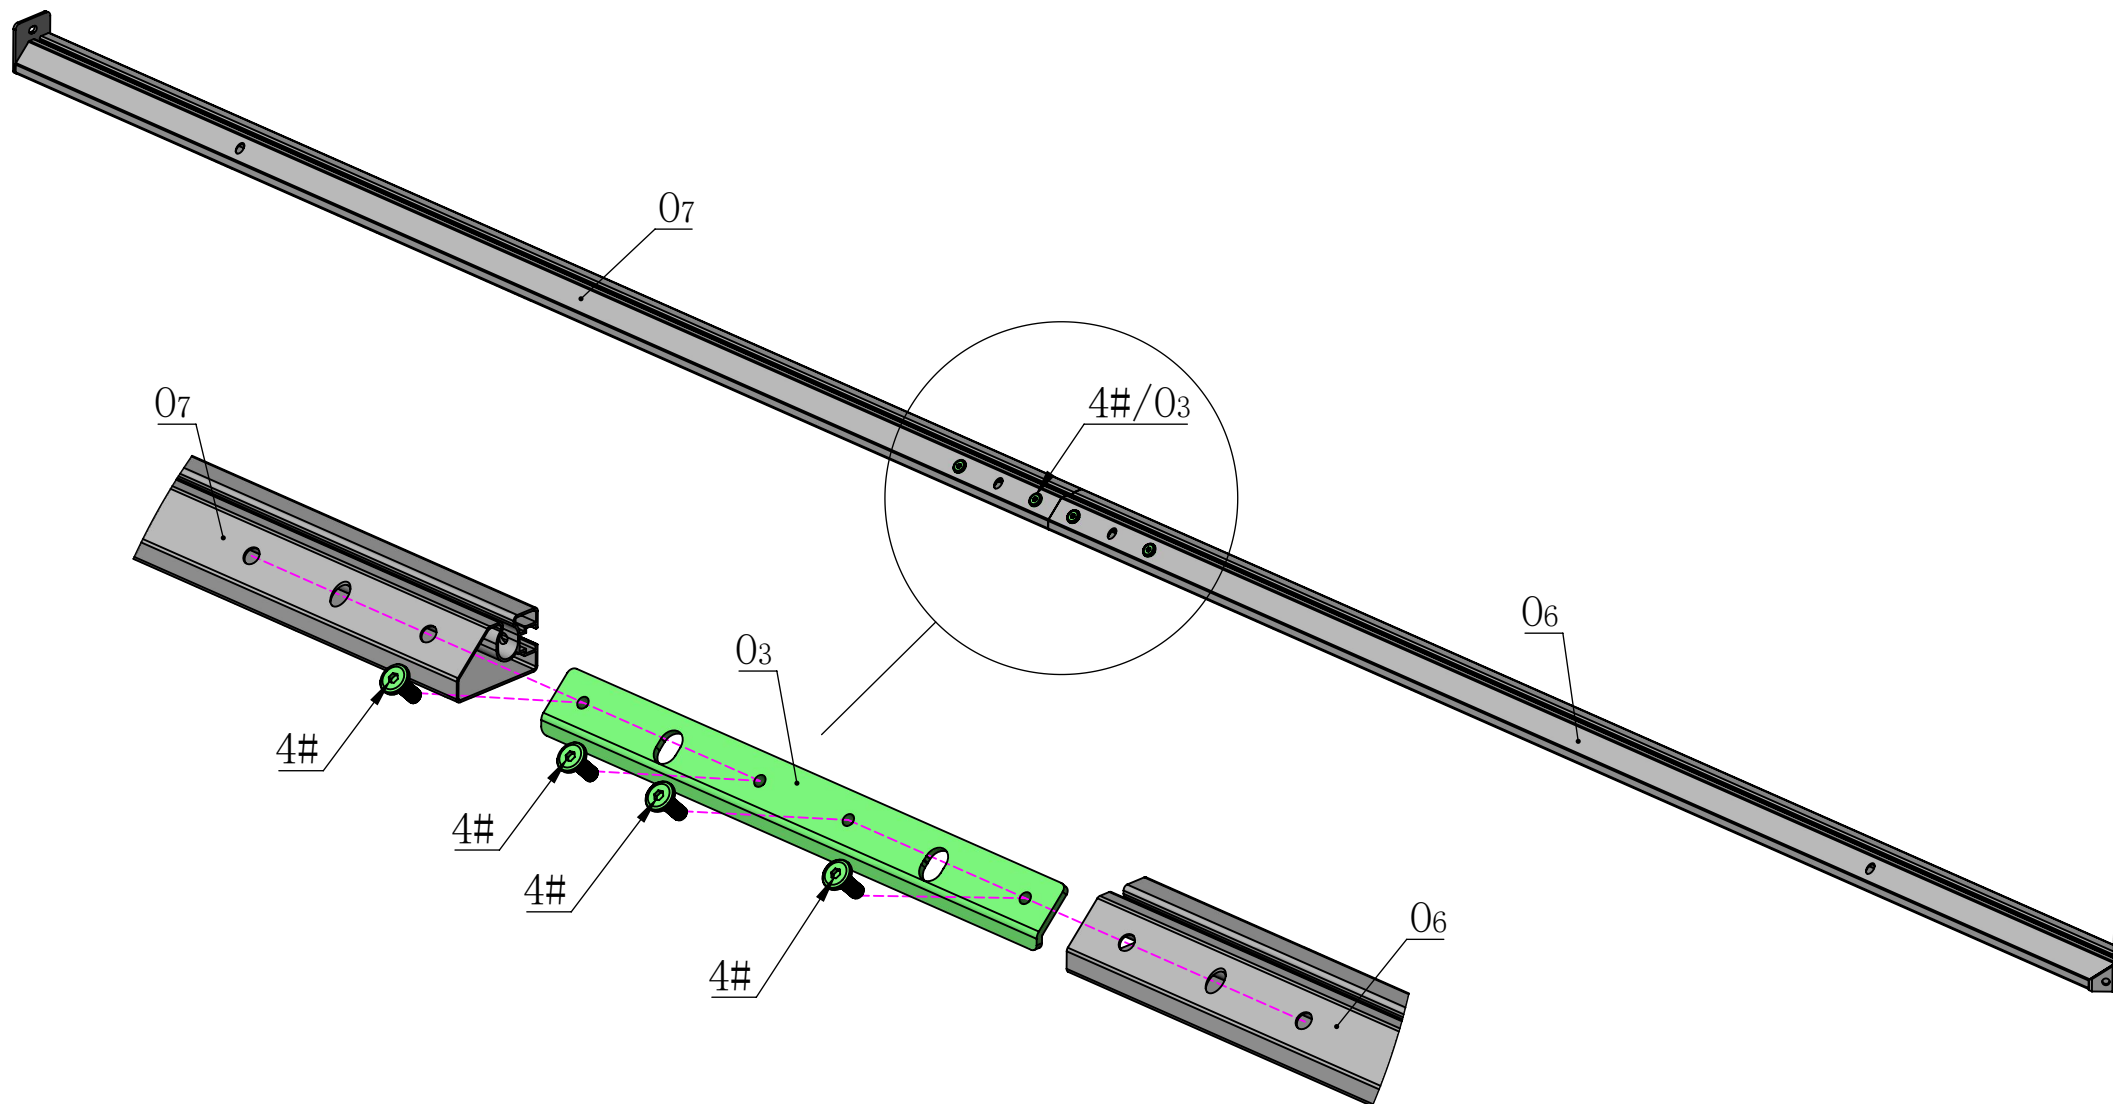


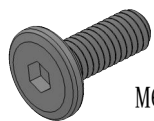

M6*16

4#


2X

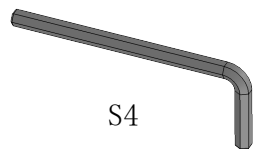


S4

16#

1X

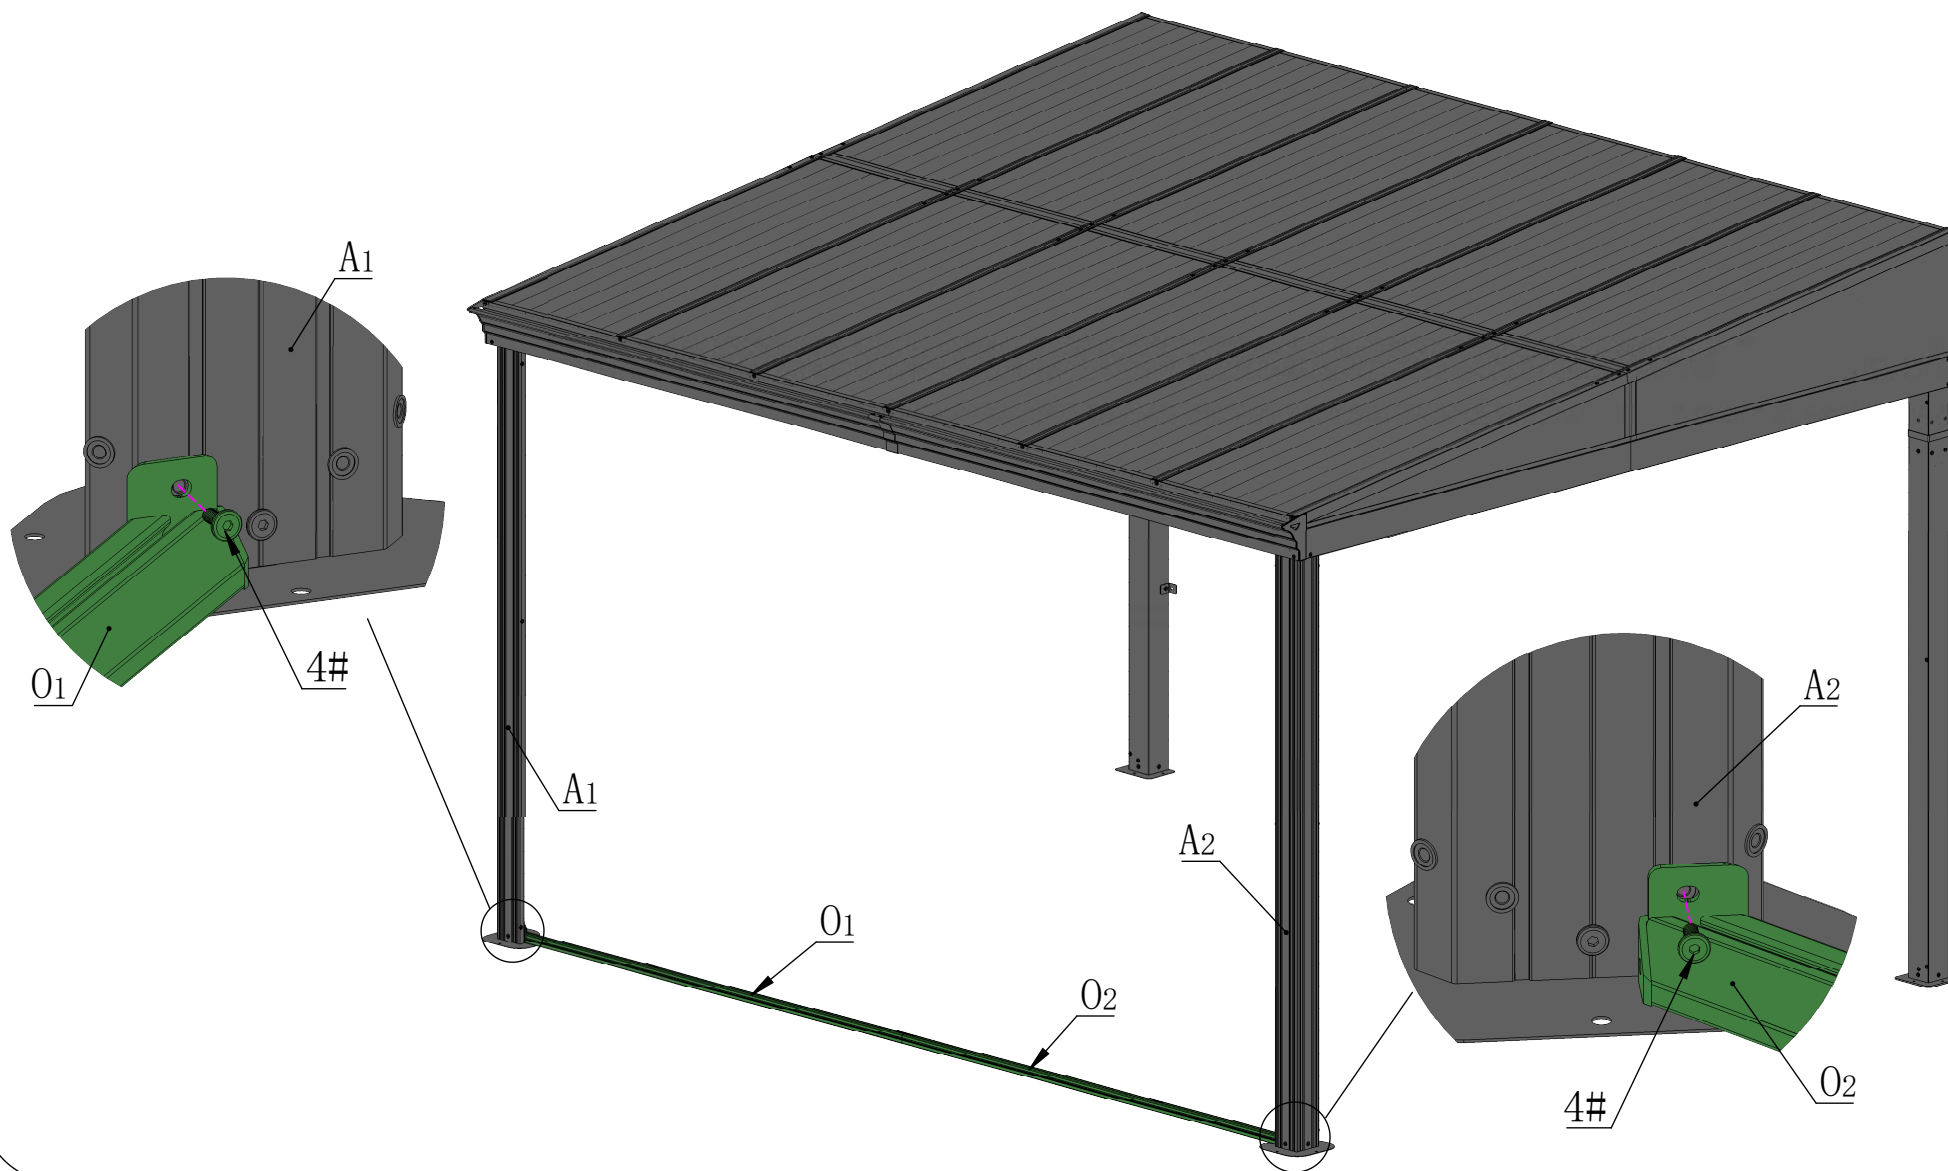


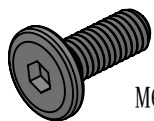

M6*16

4#


4X

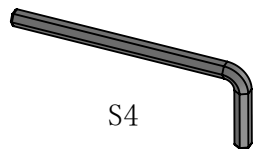


S4

16#


1X

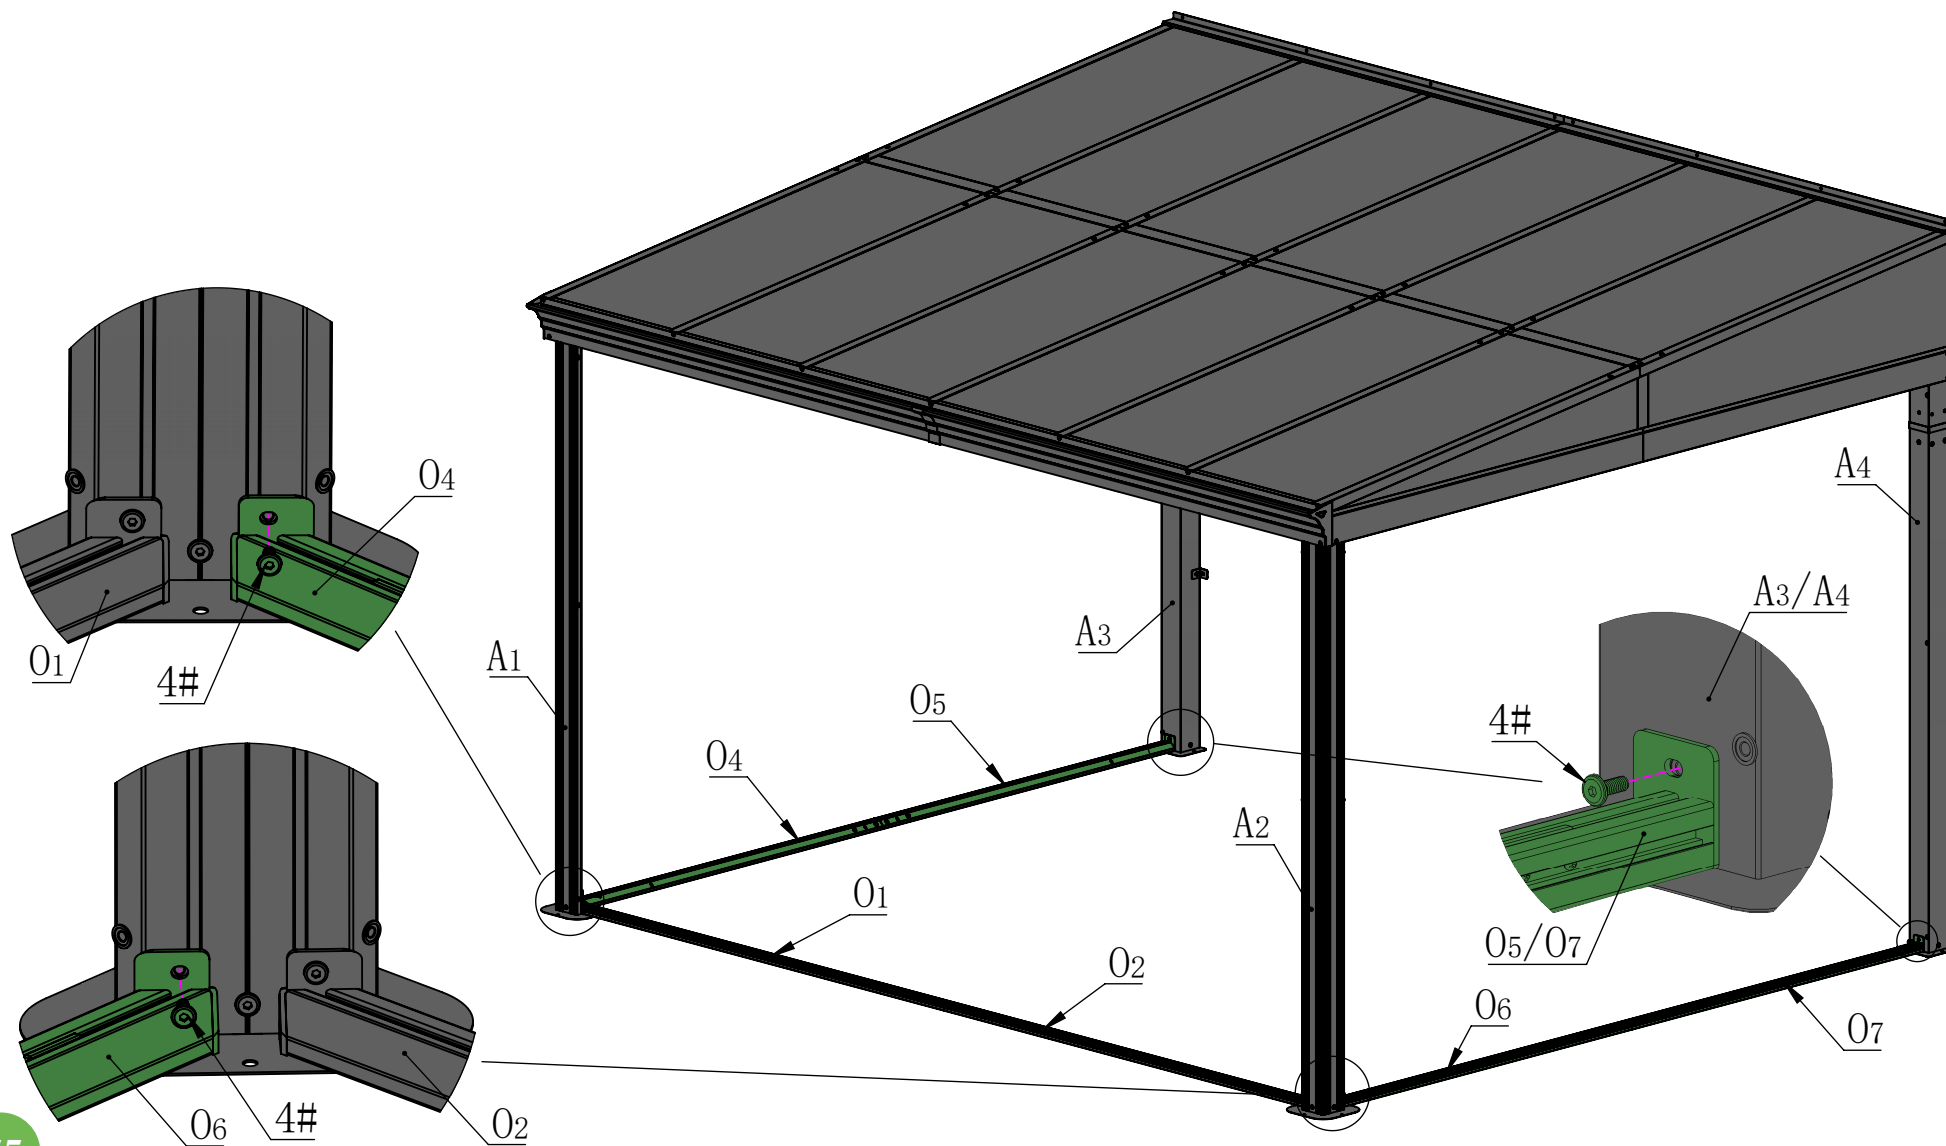




Please remove the window screens BEFORE assembling the wall panel.

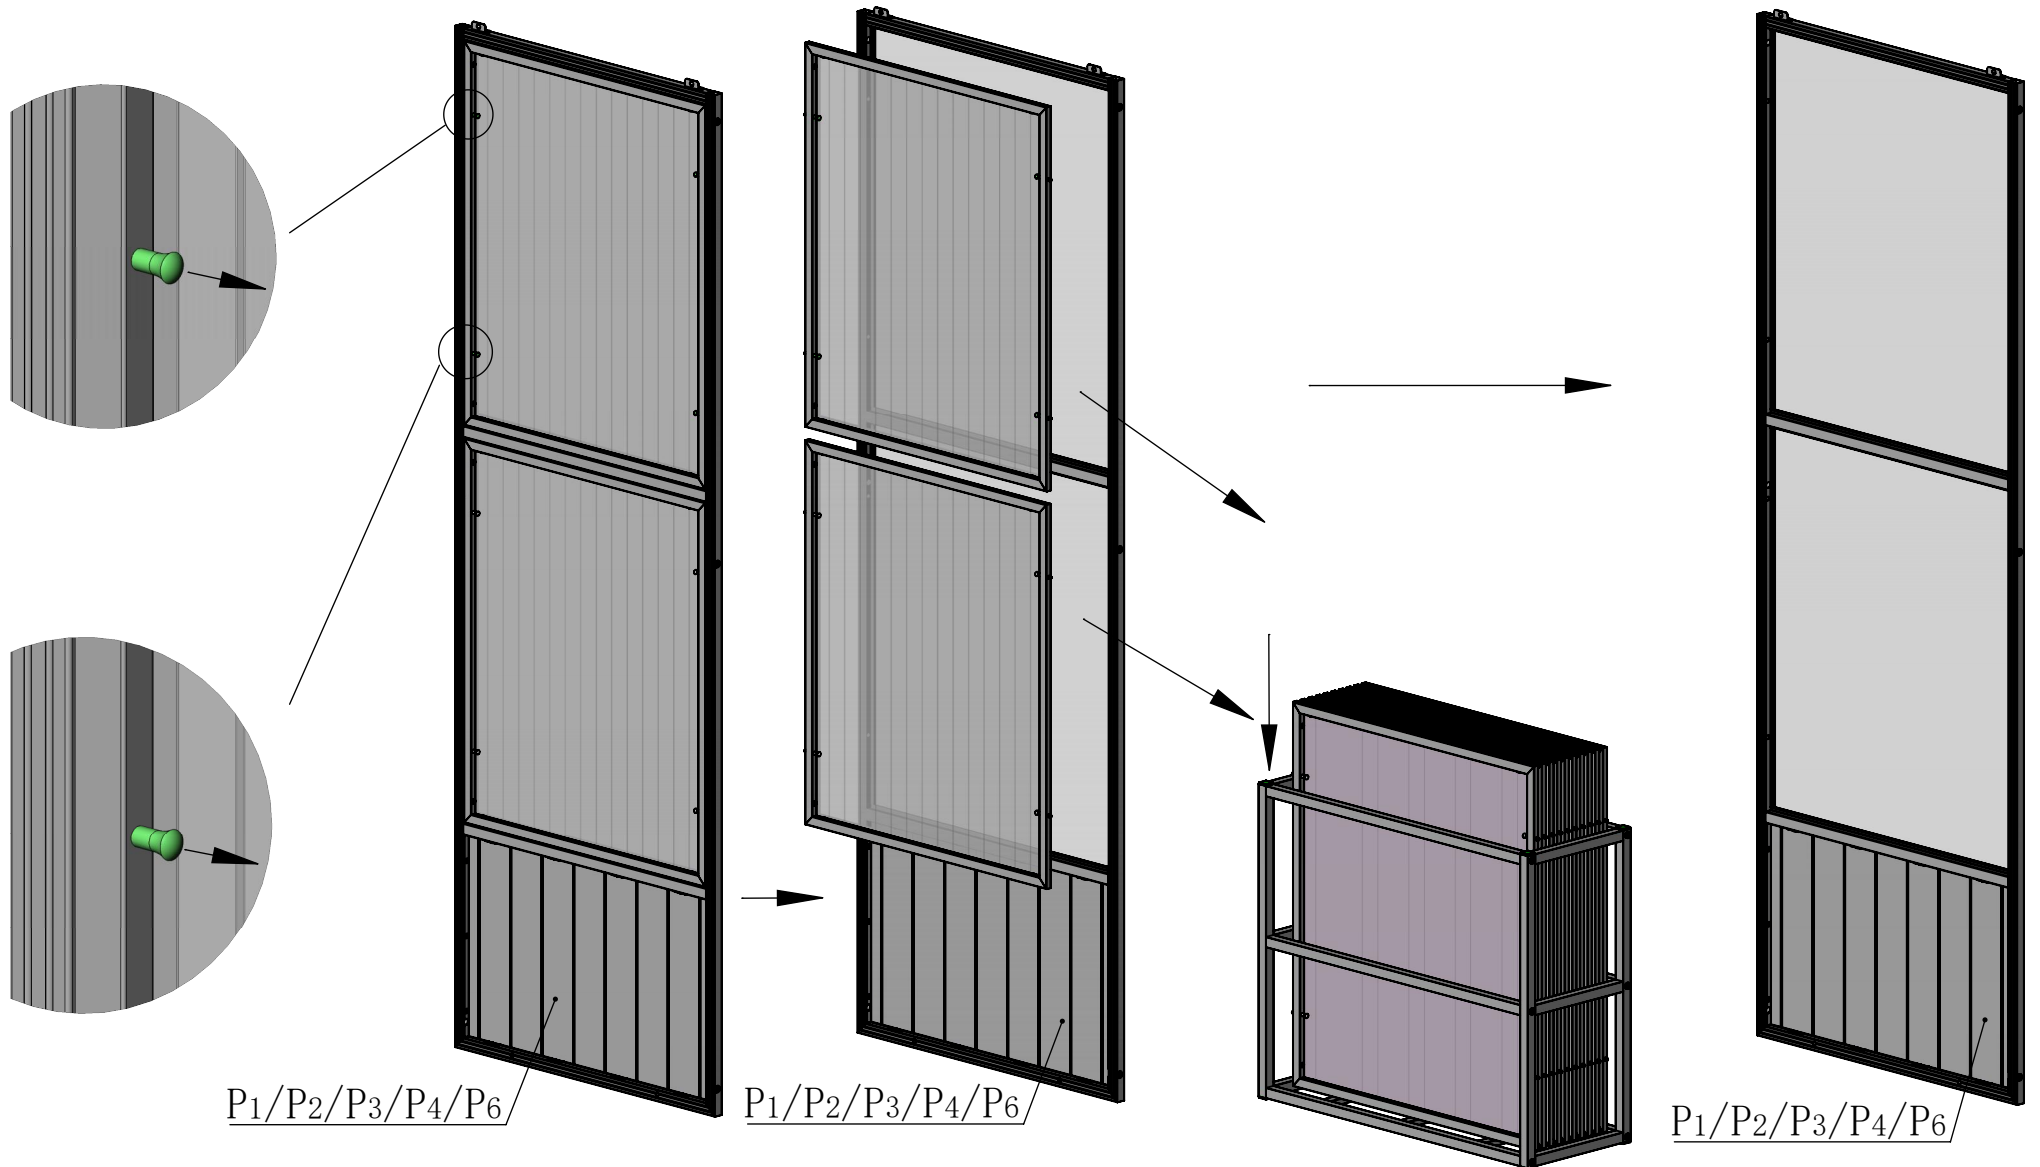


Inside View

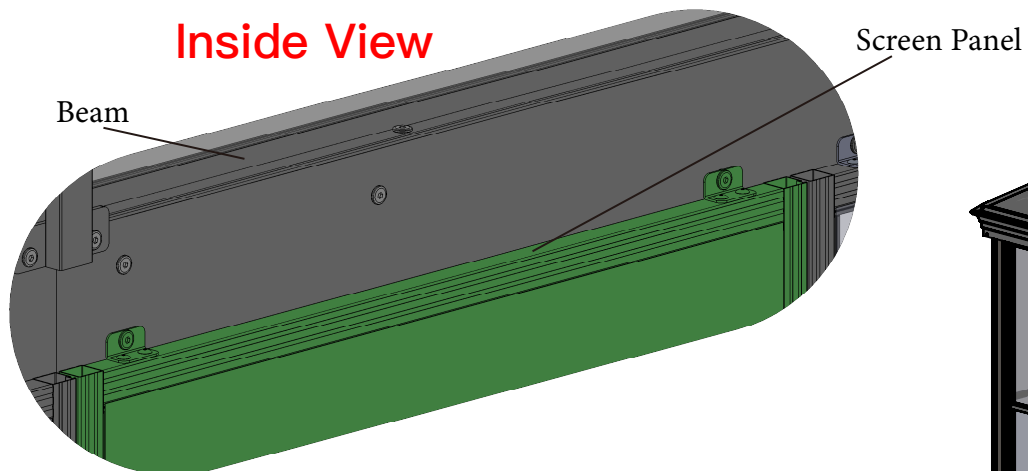


The removable windows should be installed outwards while the screen is inwards.

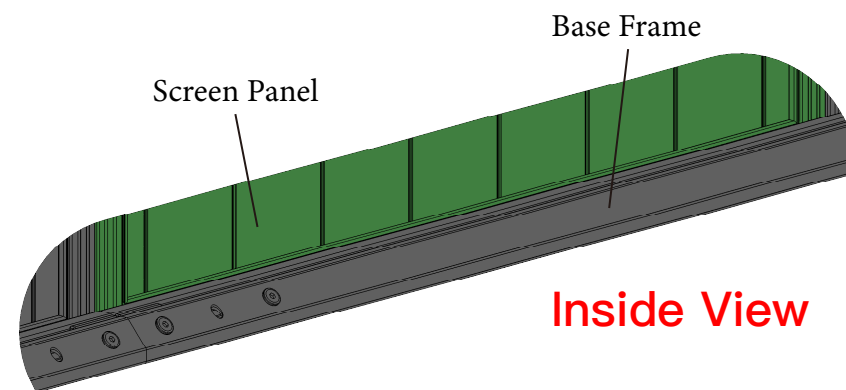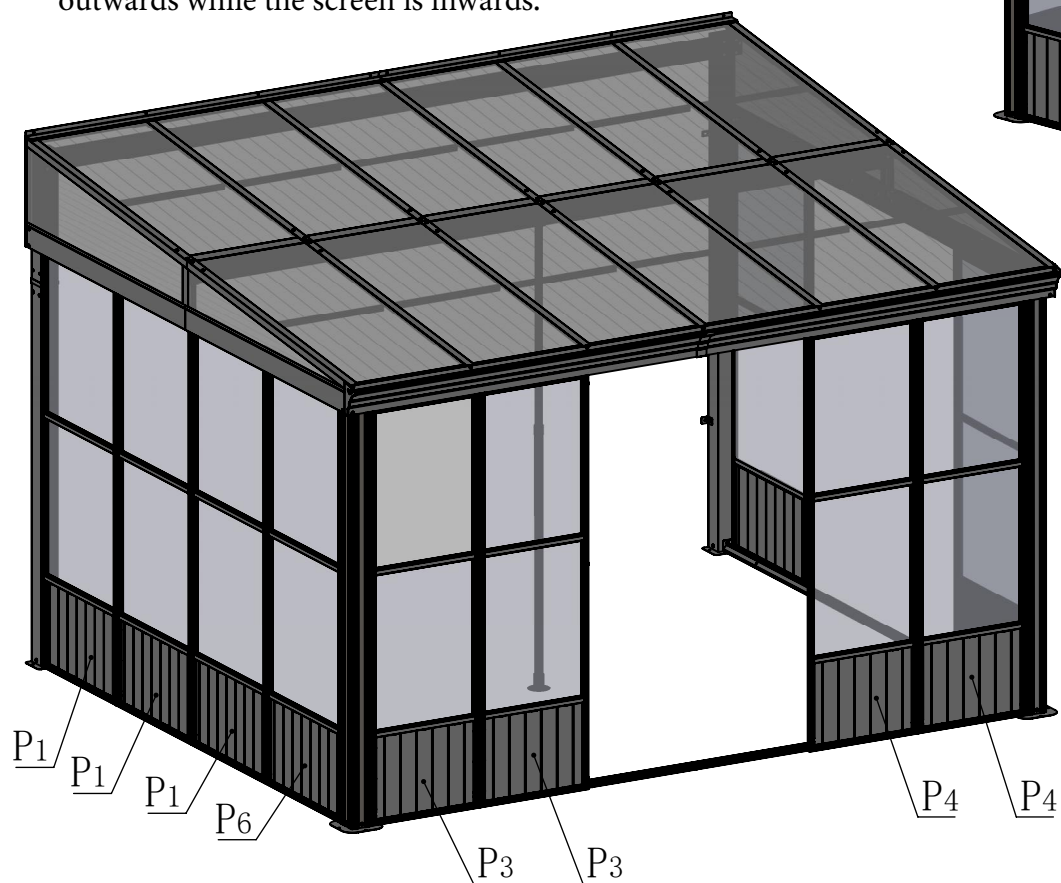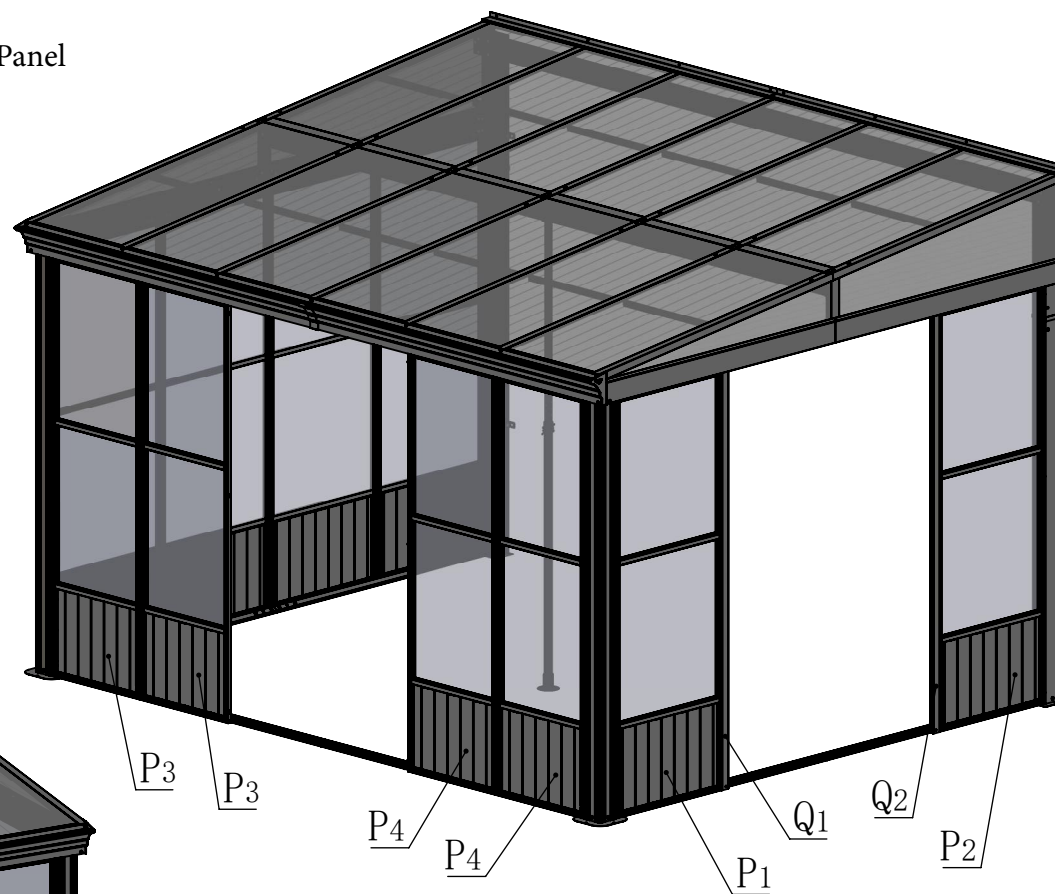

The bottom of the screen panel should be installed outside the base frame.

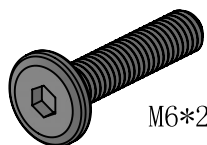

M6*28

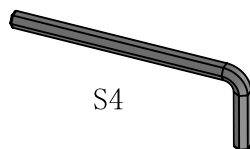

S4


5#

2X


16#

1X

Use 2 bolts #5 to secure the wall panel to the base frame #O1, **correspond**
and position the screws #5 with the square nuts #24 inside the track.

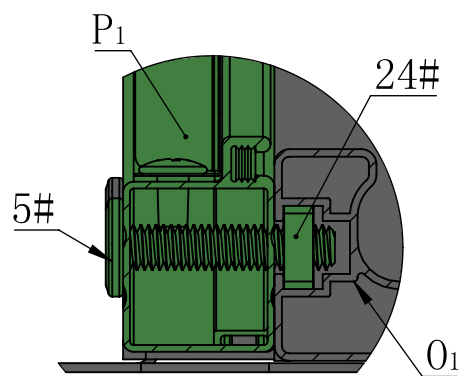


Section View

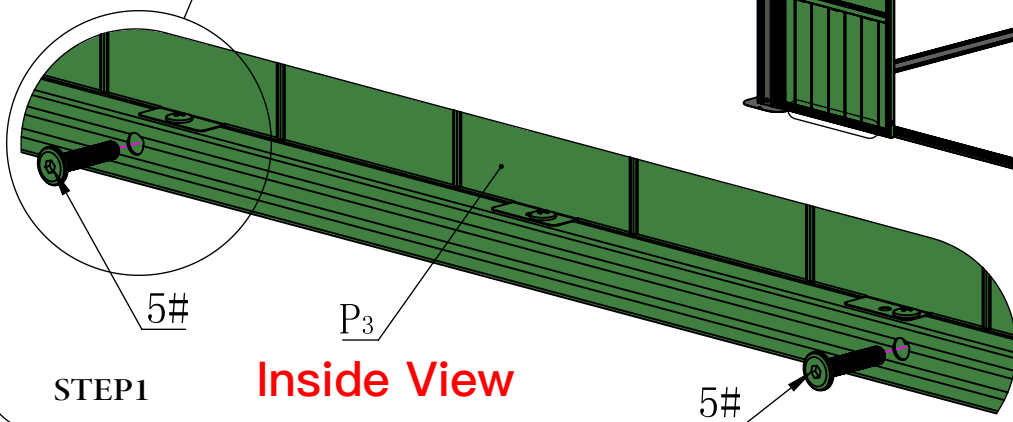


STEP1

Inside View

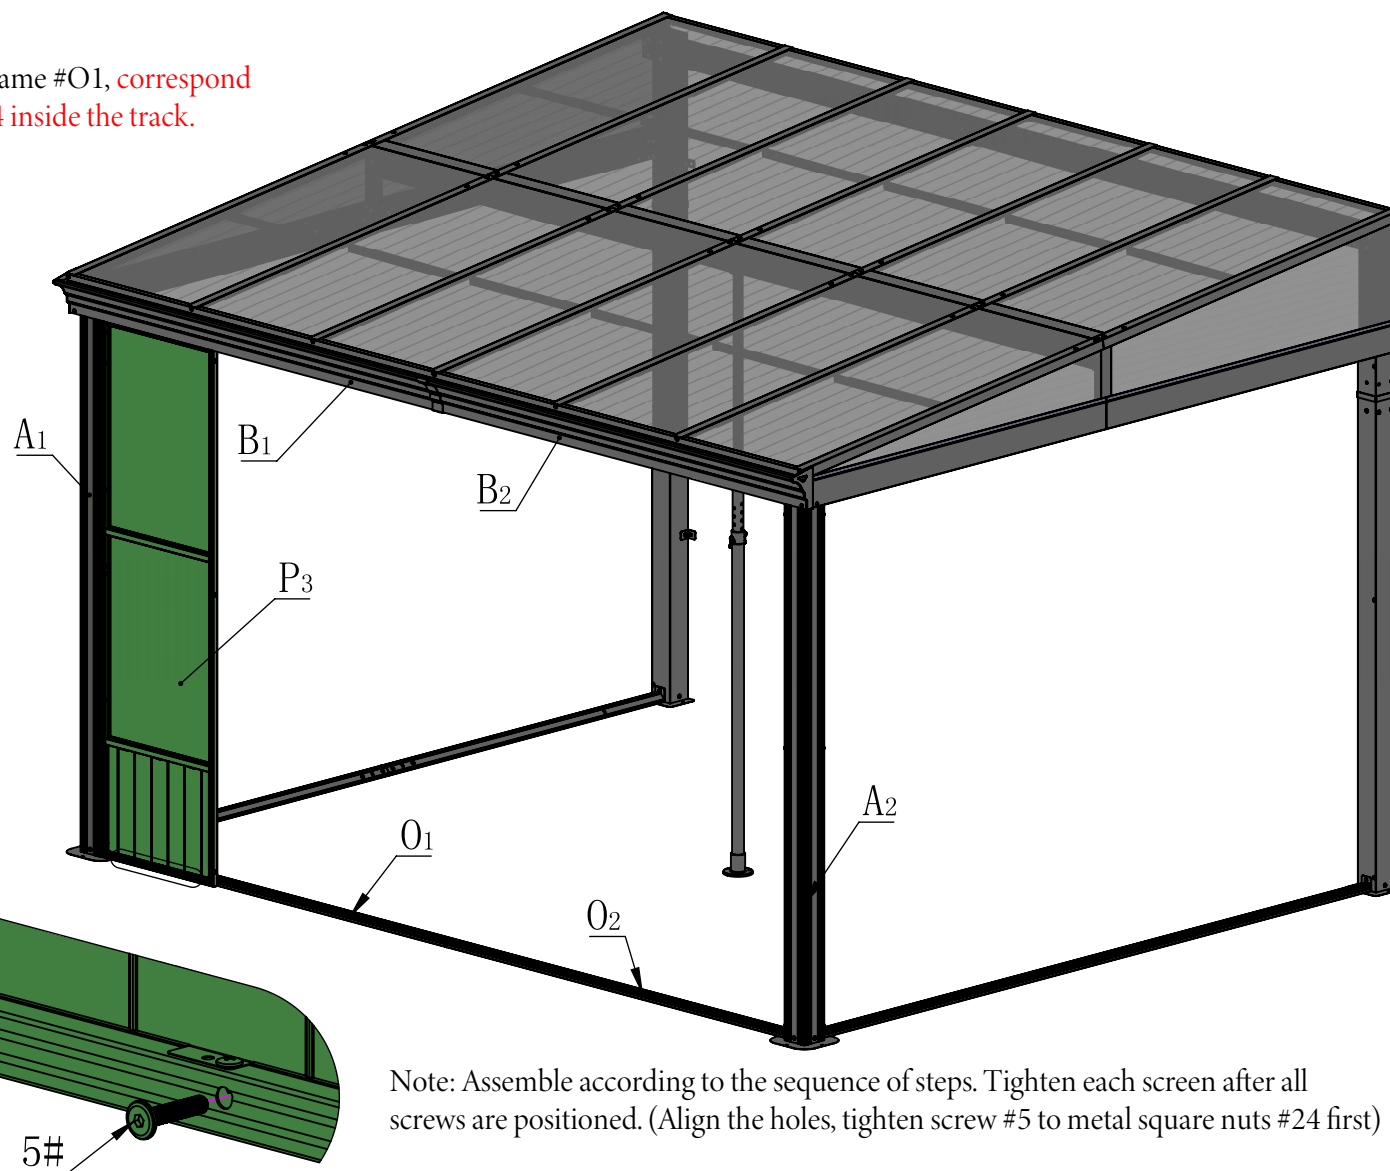


Note: Assemble according to the sequence of steps. Tighten each screen after all screws are positioned. (Align the holes, tighten screw #5 to metal square nuts #24 first)

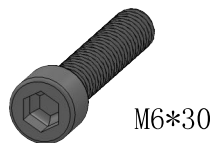


19#

3X





20#

3X

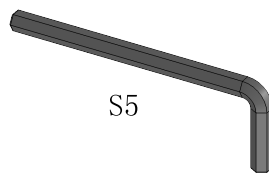


25#


1X

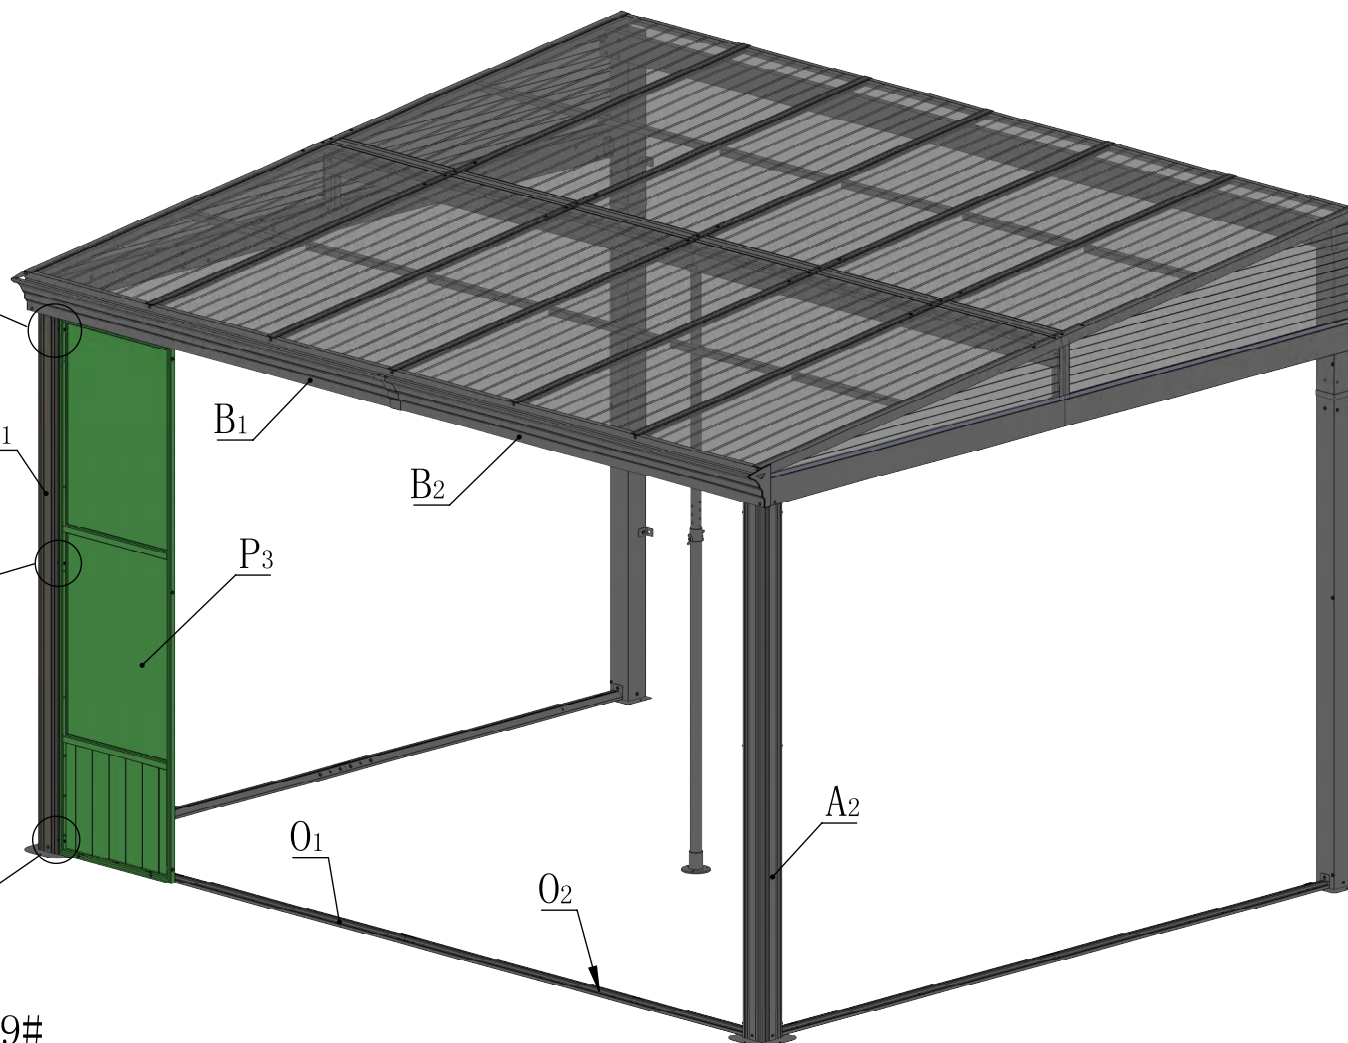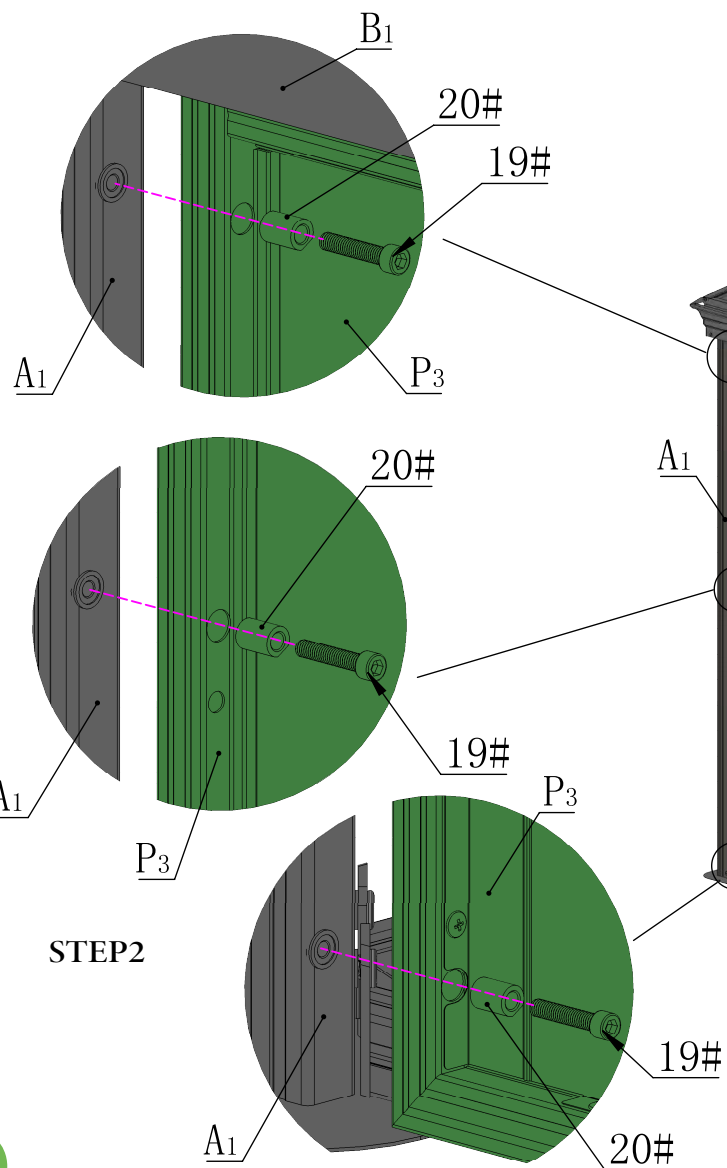

Note: Assemble according to the sequence of steps. Tighten each screen after all screws are positioned. (Align the holes, tighten screw 5# to metal square nuts 24# first.)

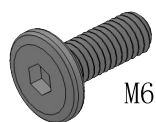

M6*16

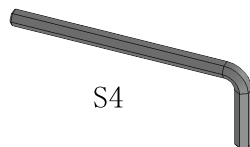

S4


4#

2X

16#


1X

STEP3

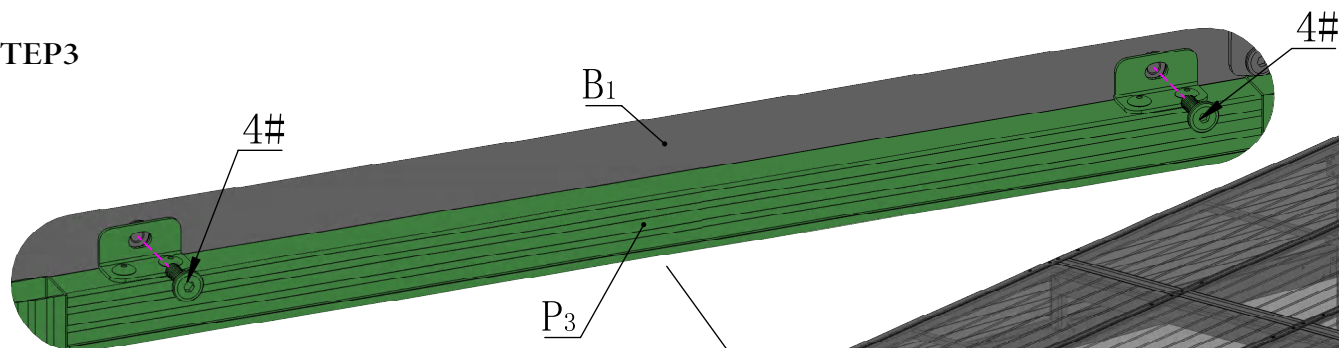


Inside View

The removable windows should be installed outwards while the screen is inwards.

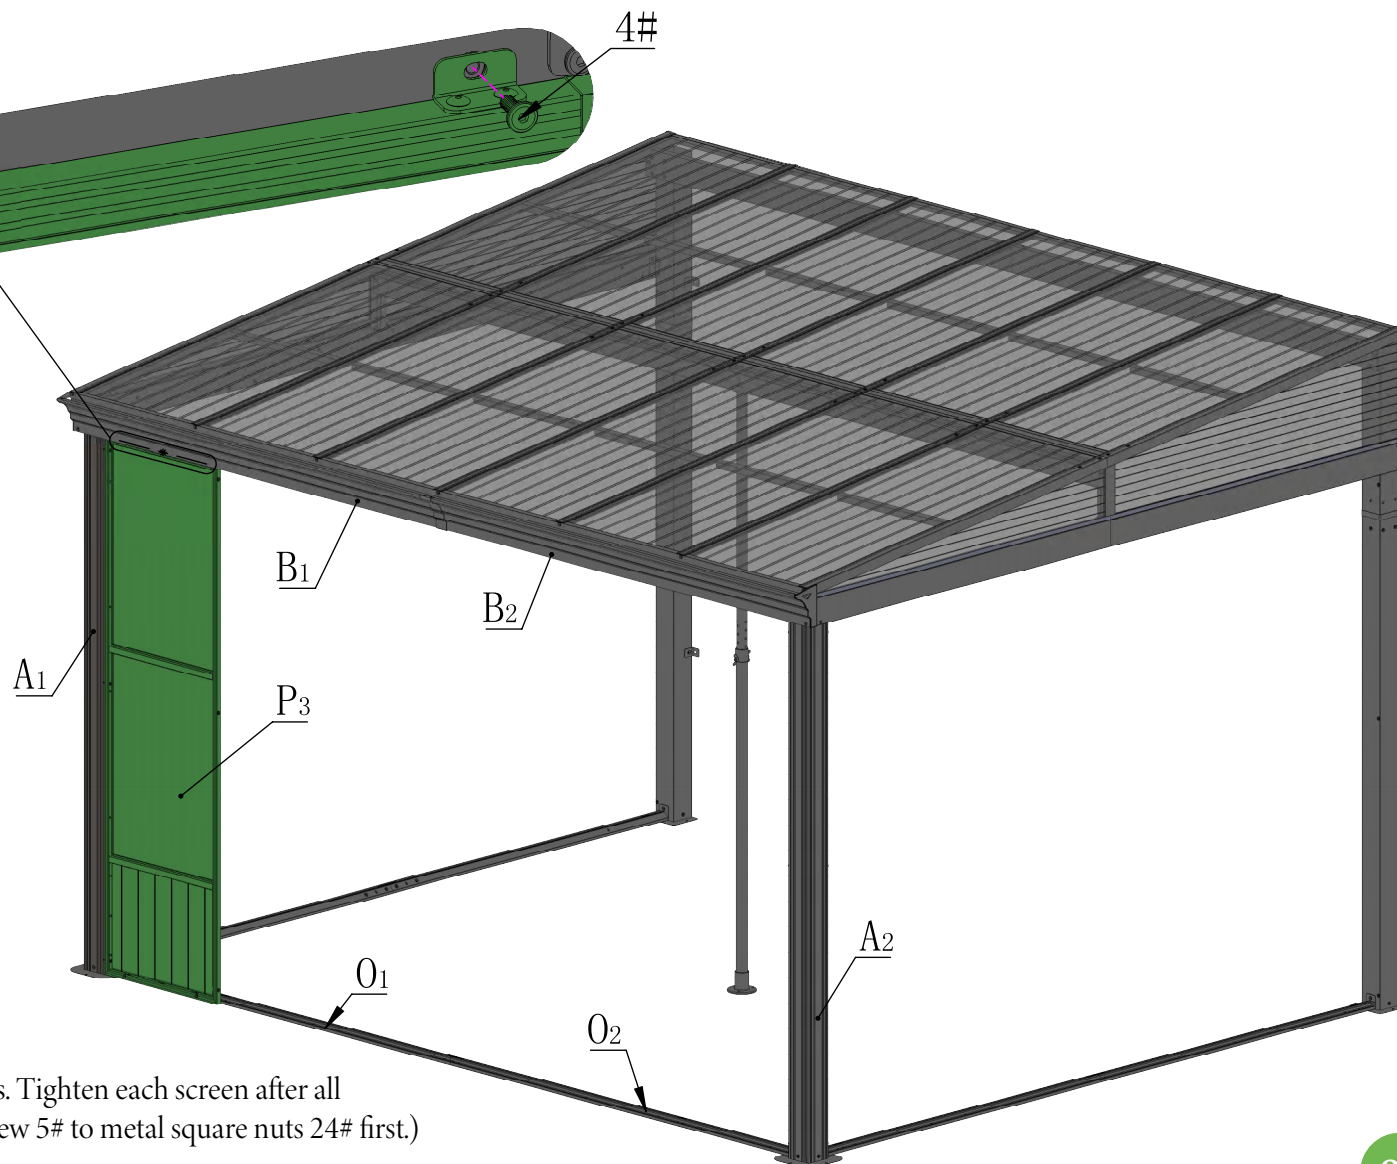


Note: Assemble according to the sequence of steps. Tighten each screen after all screws are positioned. (Align the holes, tighten screw 5# to metal square nuts 24# first.)

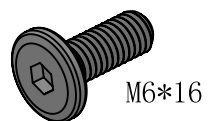

M6*16

4#


2X

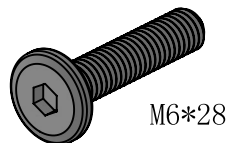

M6*28

5#


2X

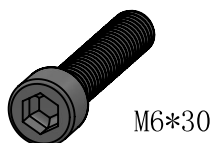

M6*30


19#

3X



20#


3X

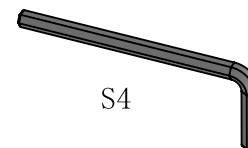

S4

16#

1X


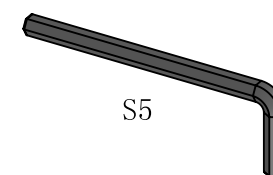


S5


25#

1X


STEP3

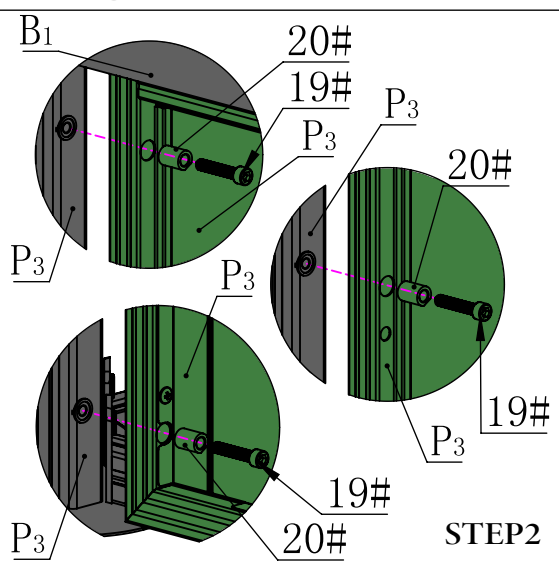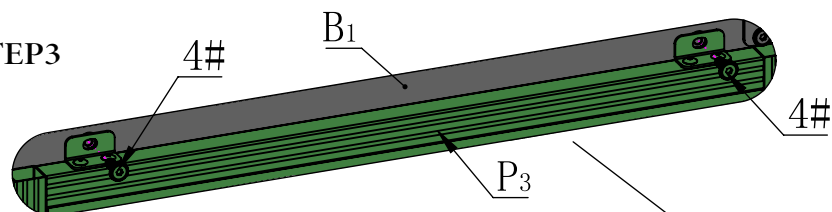


STEP2

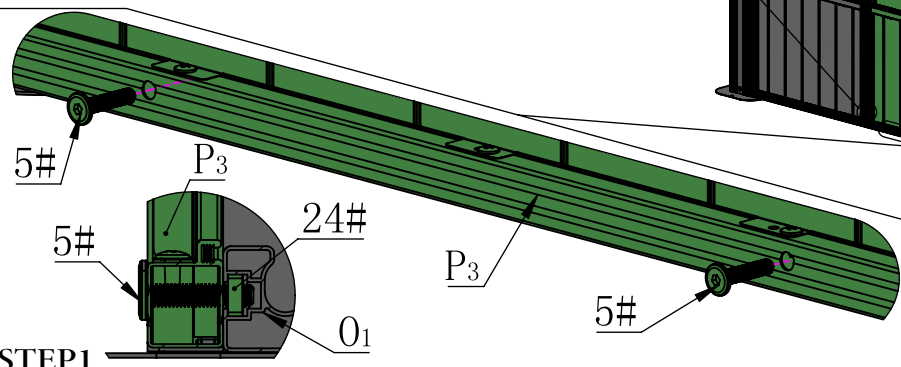

STEP1

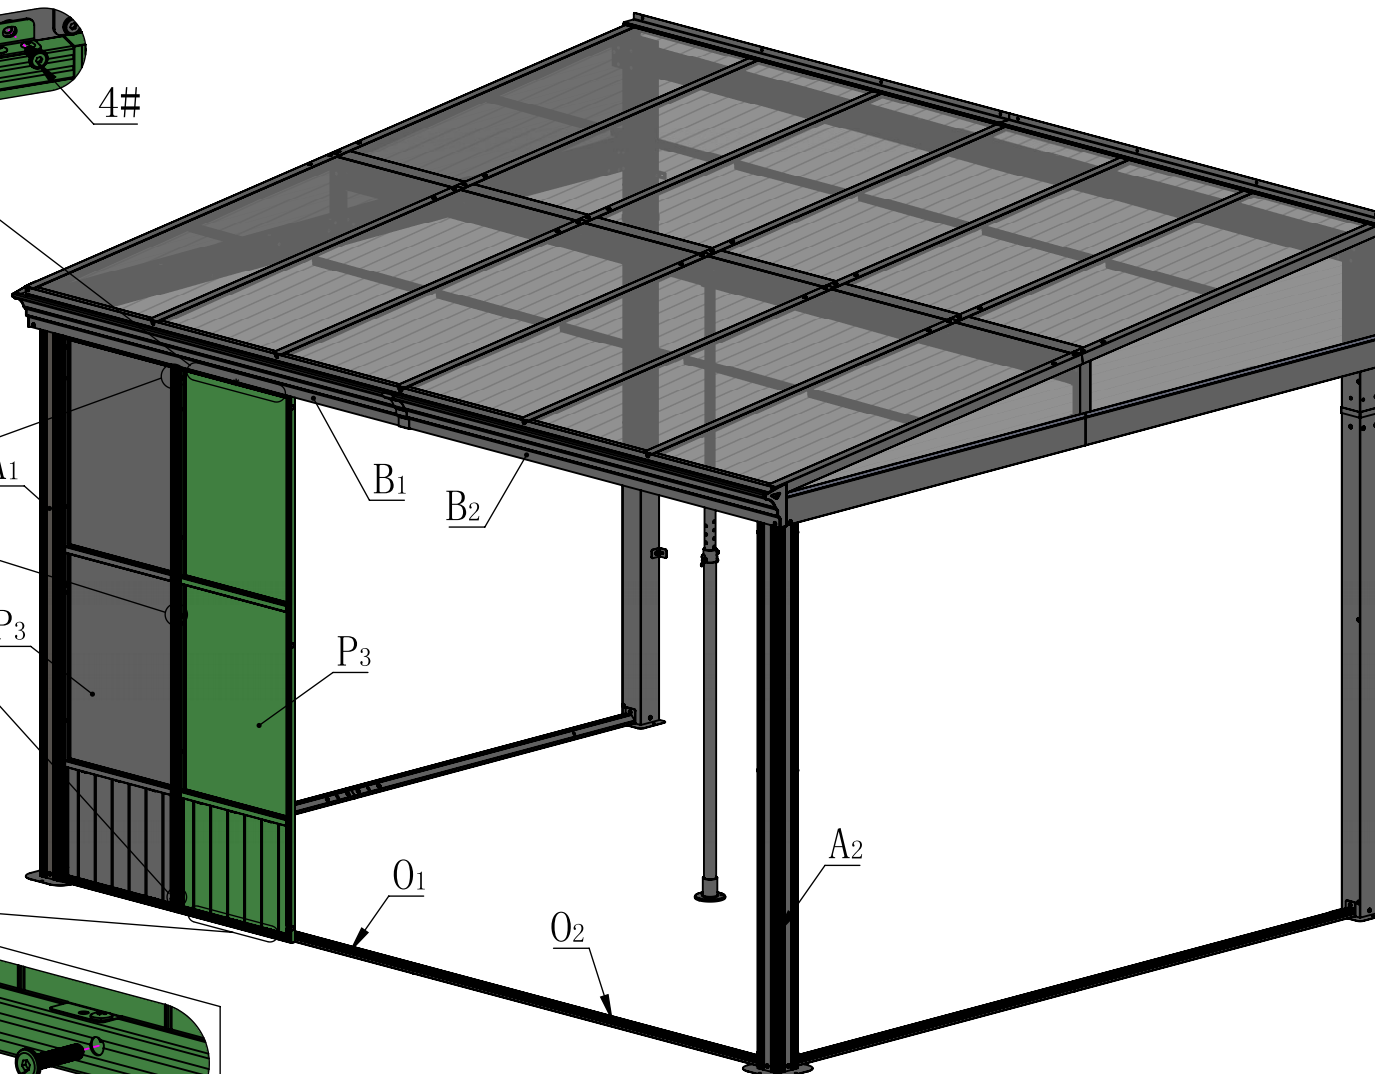


Note: Assemble according to the sequence of steps. Tighten each screen after all screws are positioned. (Align the holes, tighten screw 5# to metal square nuts 24# first.)

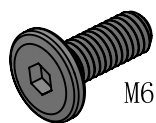

M6*16

4#


4X

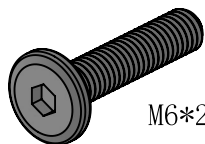

M6*28

5#


4X

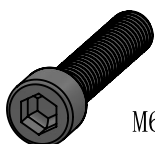

M6*30


19#

6X



20#


6X

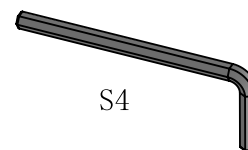

S4

16#





1X

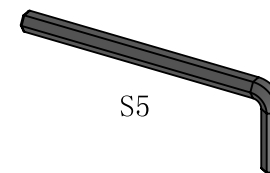


S5

25#

1X

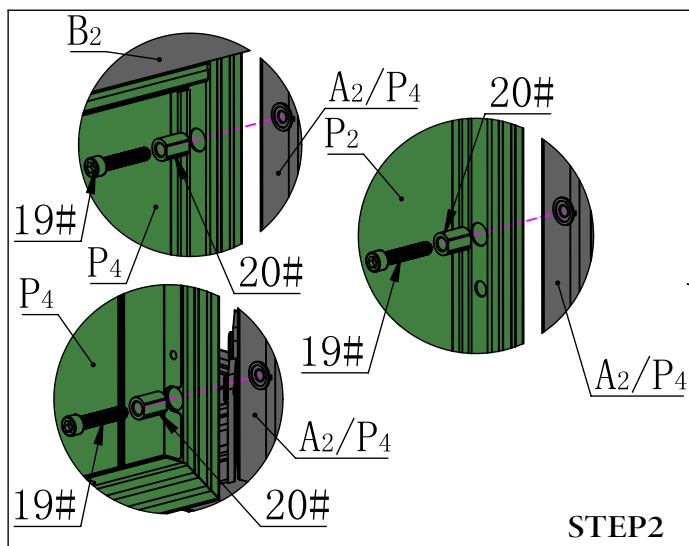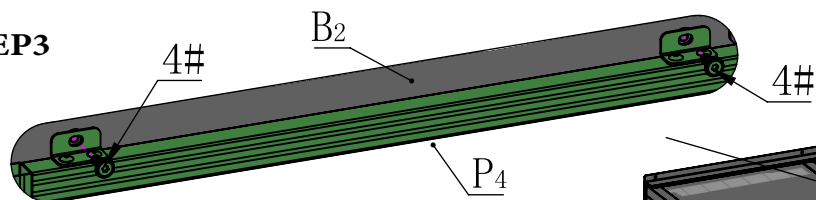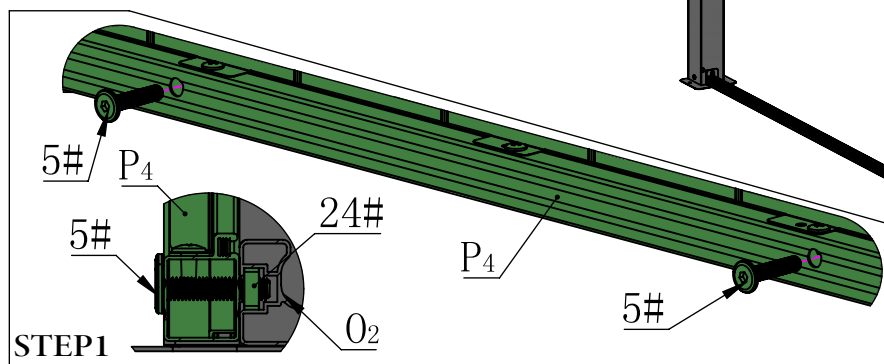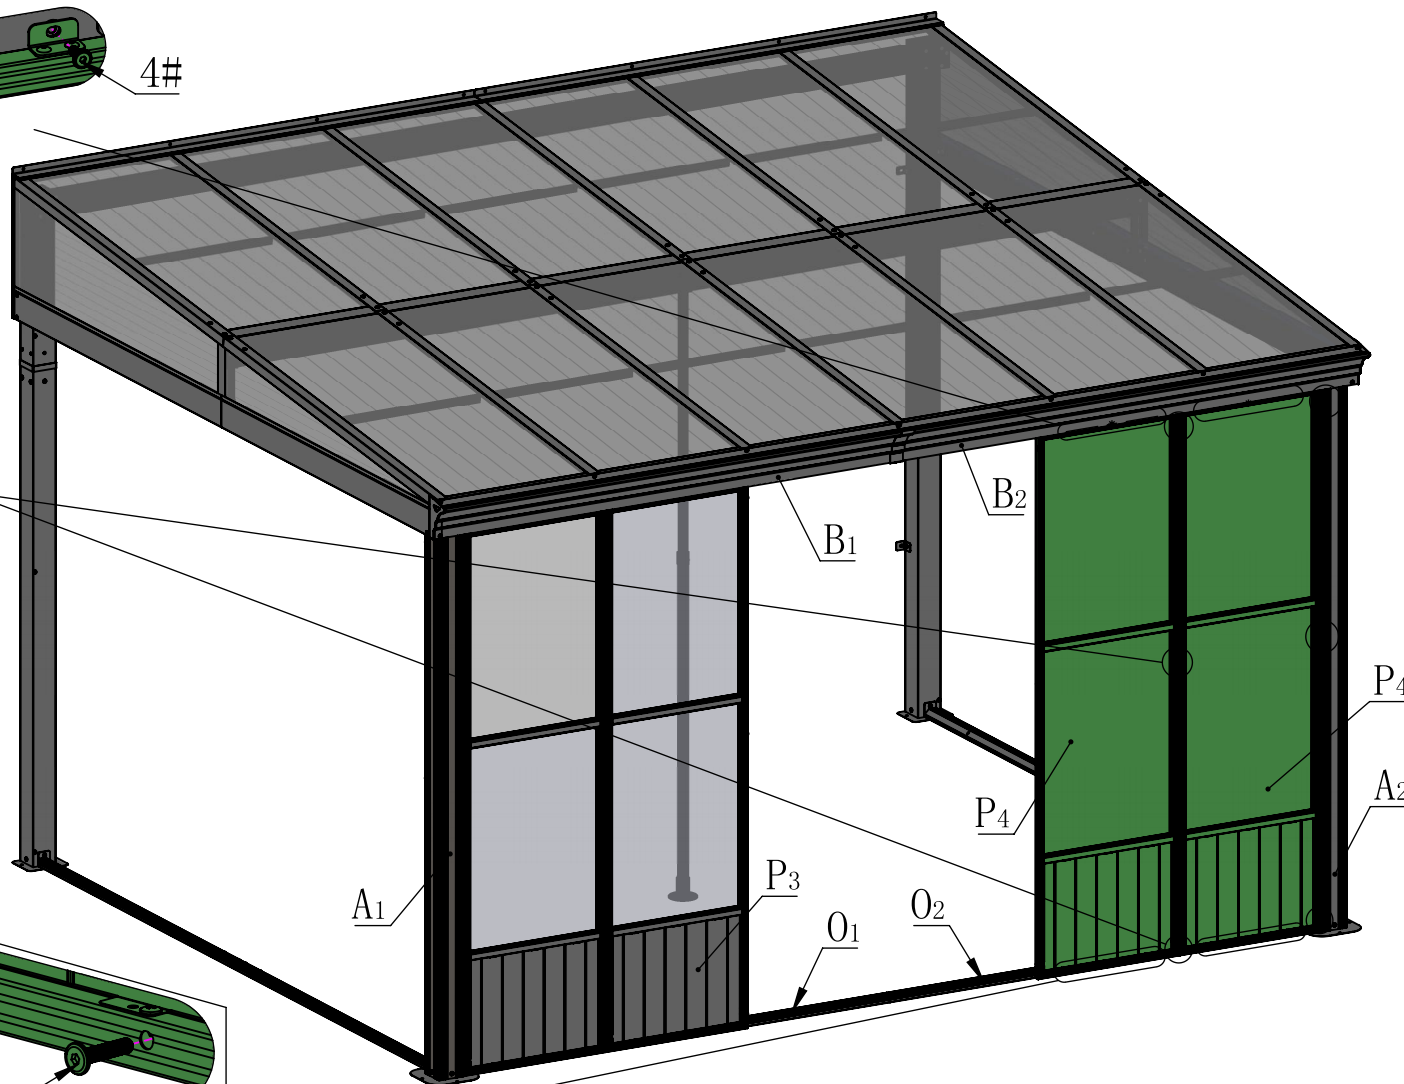STEP3**STEP2****STEP1**


Note: Assemble according to the sequence of steps. Tighten each screen after all screws are positioned. (Align the holes, tighten screw 5# to metal square nuts 24# first.)

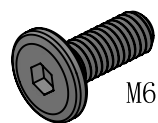

M6*16

4#


2X

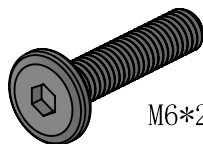

M6*28

5#


2X

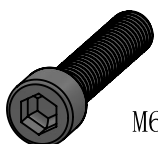

M6*30


19#

3X



20#


3X

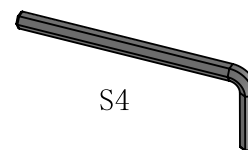

S4

16#

1X


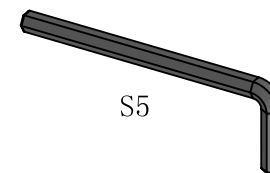


S5


25#

1X


STEP3

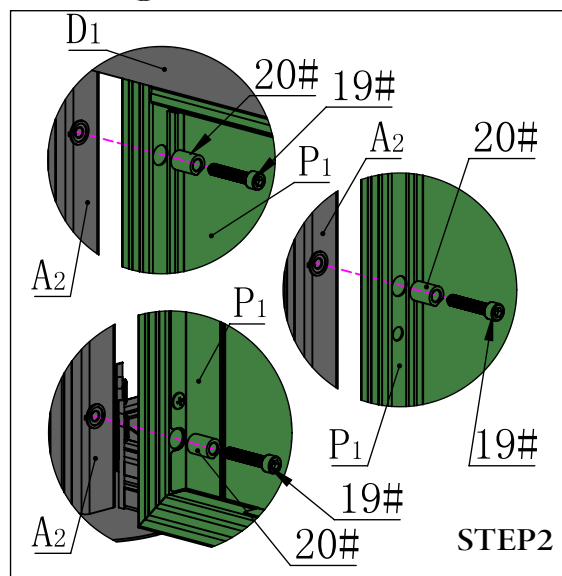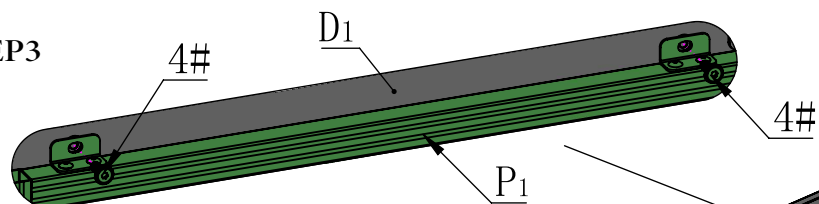


STEP2

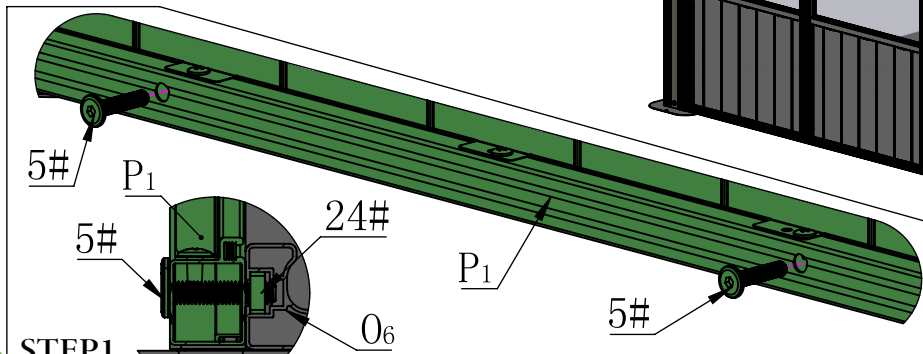

STEP1

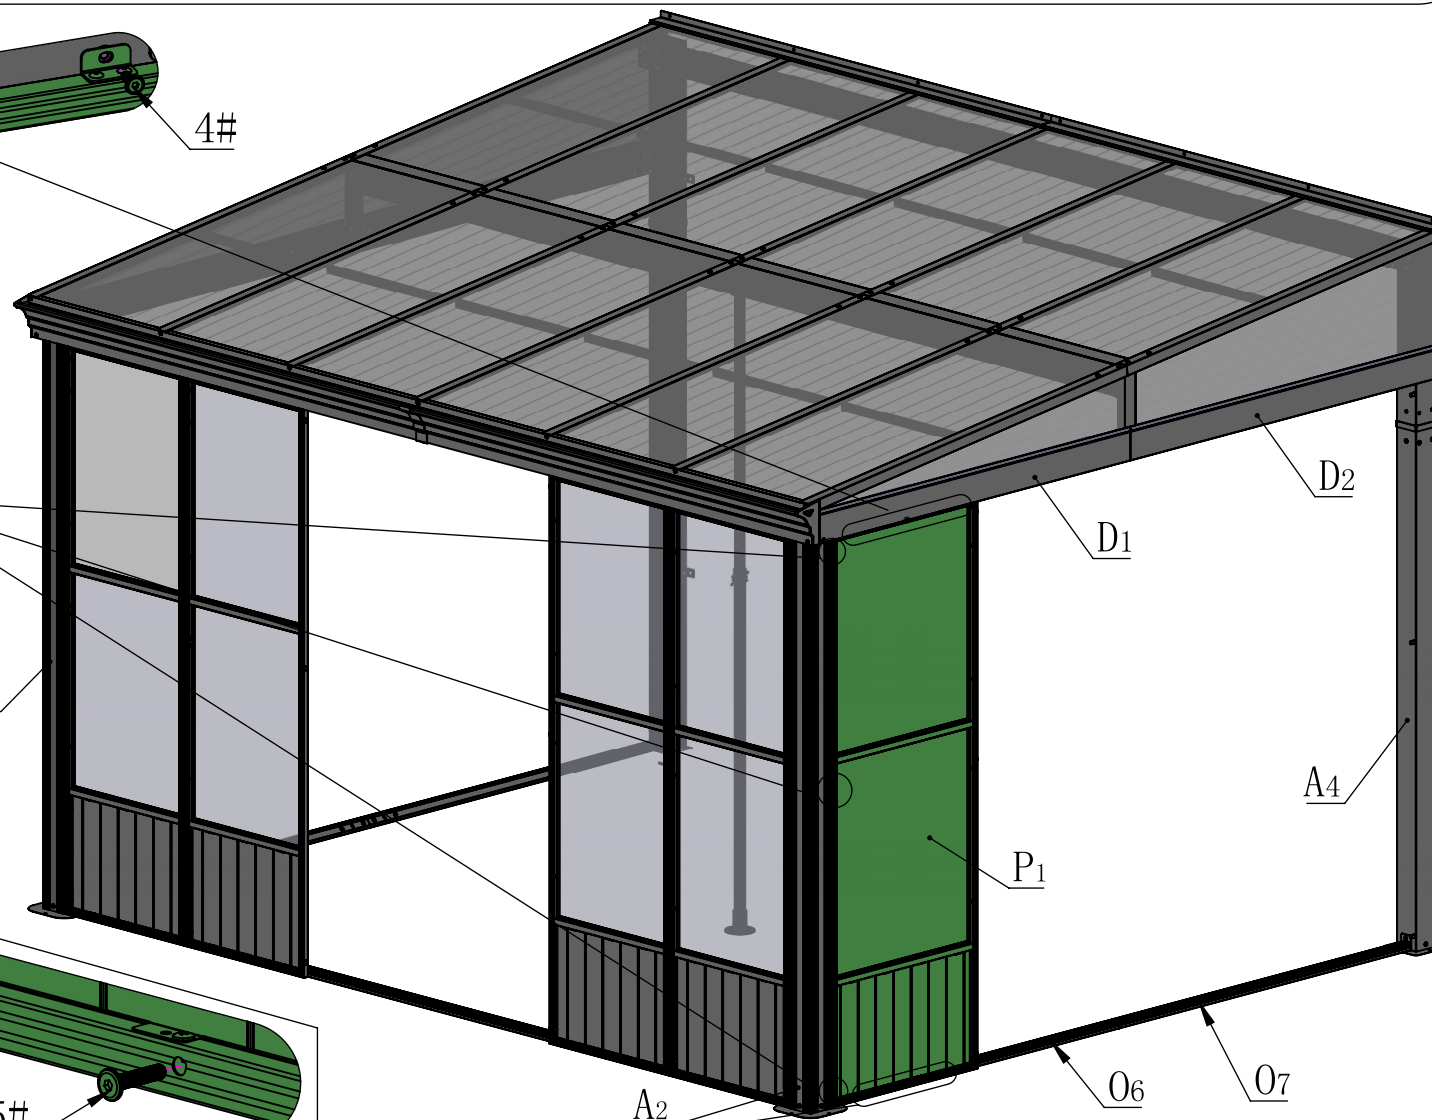


Note: Assemble according to the sequence of steps. Tighten each screen after all screws are positioned. (Align the holes, tighten screw 5# to metal square nuts 24# first.)

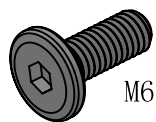

M6*16

4#


6X

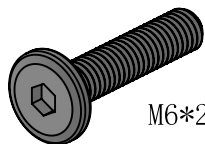

M6*28

5#


6X

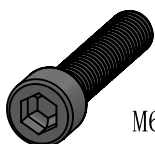

M6*30


19#

9X



20#


9X

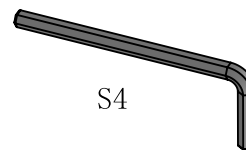

S4

16#

1X

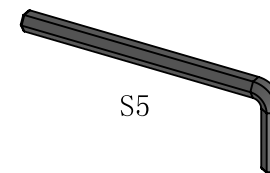

S5

25#

1X

STEP3

C₁/C₂

4#

4#

P₁C₂

20#

19#

P₁A₃/P₁

20#

A₆/P₁P₁P₁

19#

A₃/P₁P₁P₁

19#

20#

STEP2

A₆C₂A₃P₁P₁P₁P₁O₅O₄

5#

P₁

5#


24#

O₄/O₅P₁

5#

STEP1


Note: Assemble according to the sequence of steps. Tighten each screen after all screws are positioned. (Align the holes, tighten screw 5# to metal square nuts 24# first.)

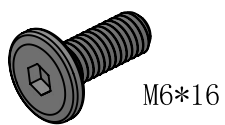

M6*16

4#


2X

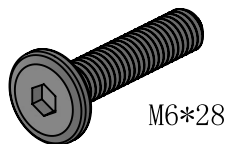

M6*28

5#


2X

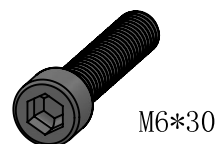

M6*30


19#

6X



20#


6X

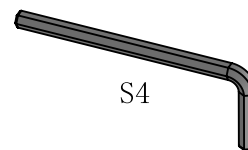

S4

16#


1X

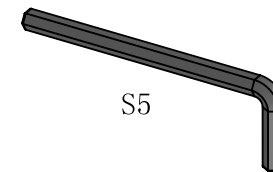


S5

25#


1X

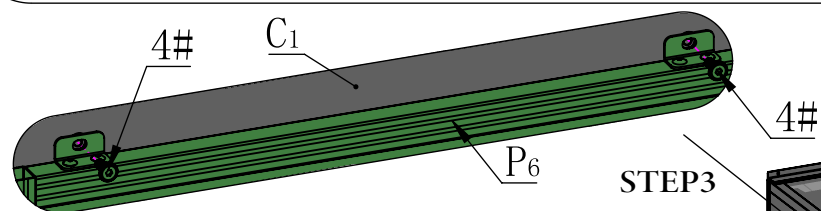


STEP3

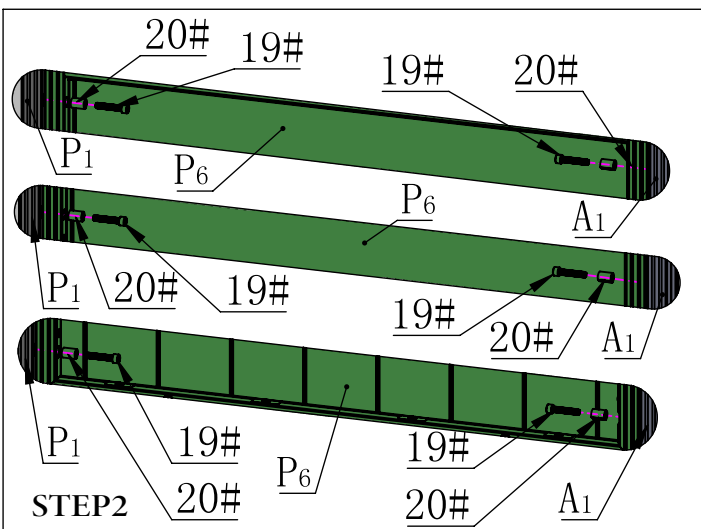


STEP2

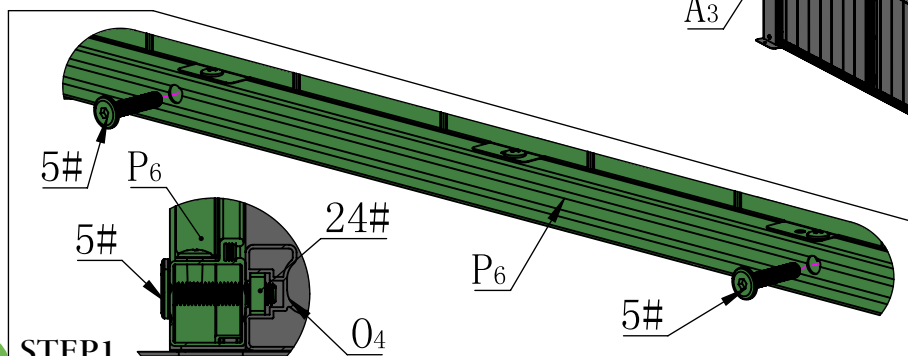

STEP1

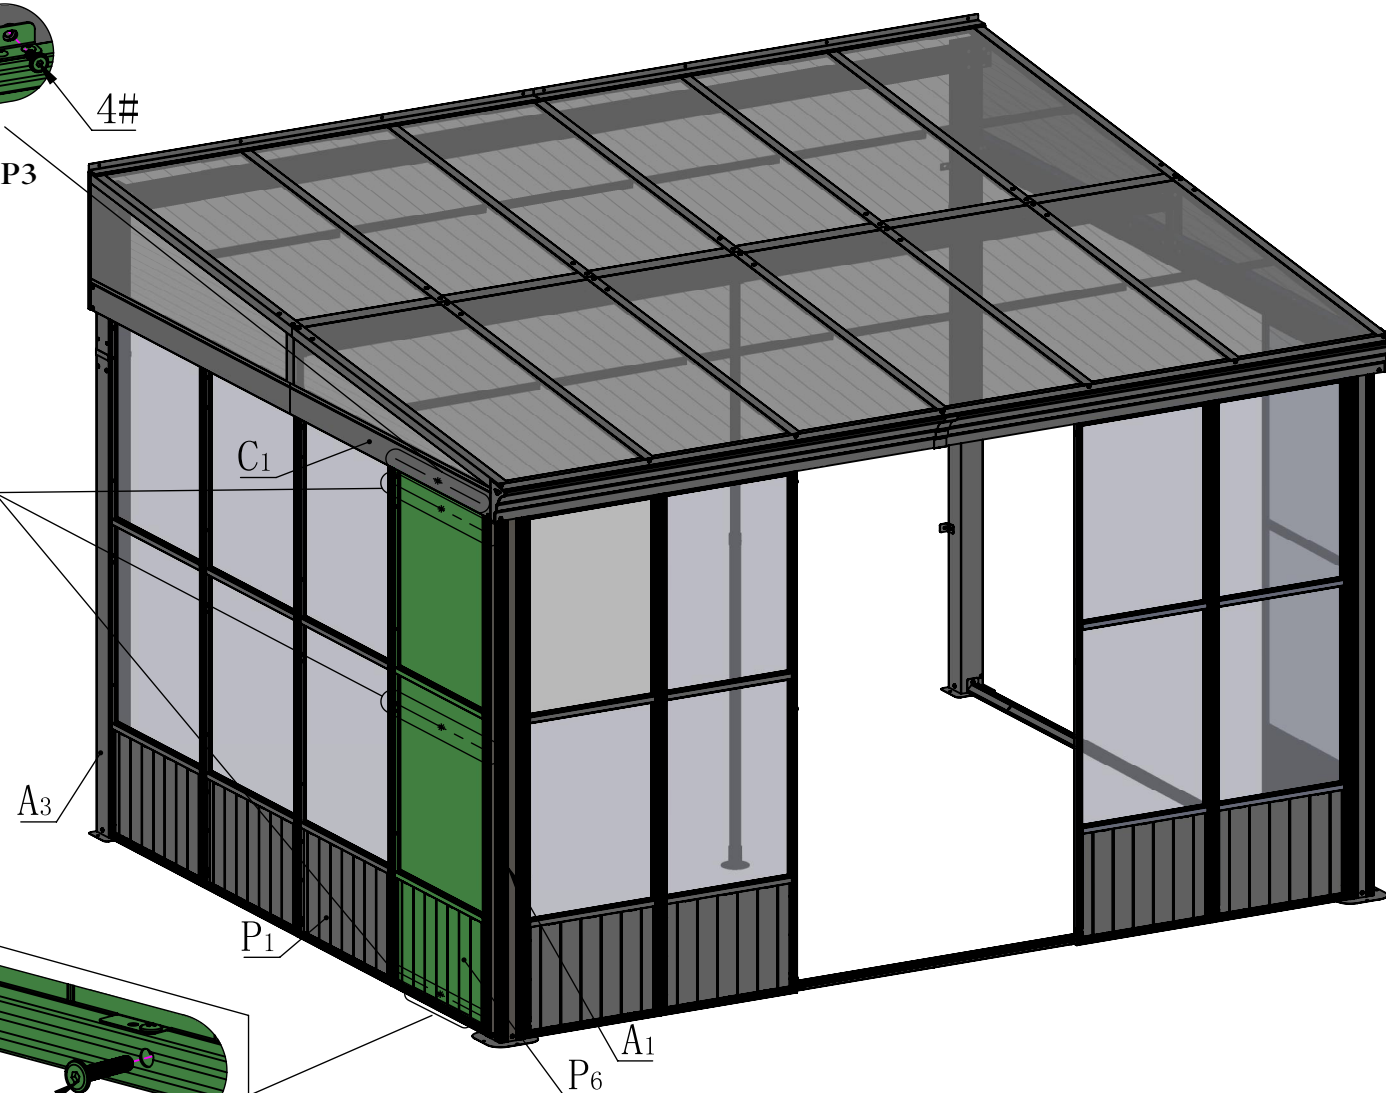


Note: Assemble according to the sequence of steps. Tighten each screen after all screws are positioned. (Align the holes, tighten screw 5# to metal square nuts 24# first.)

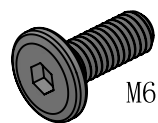

M6*16

4#


2X

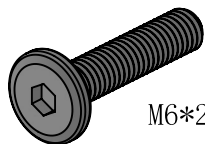

M6*28

5#


2X

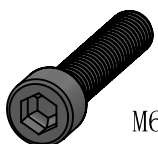

M6*30


19#

3X



20#


3X

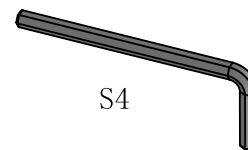

S4

16#

1X


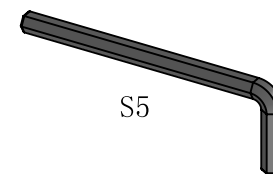


S5


25#

1X


STEP3

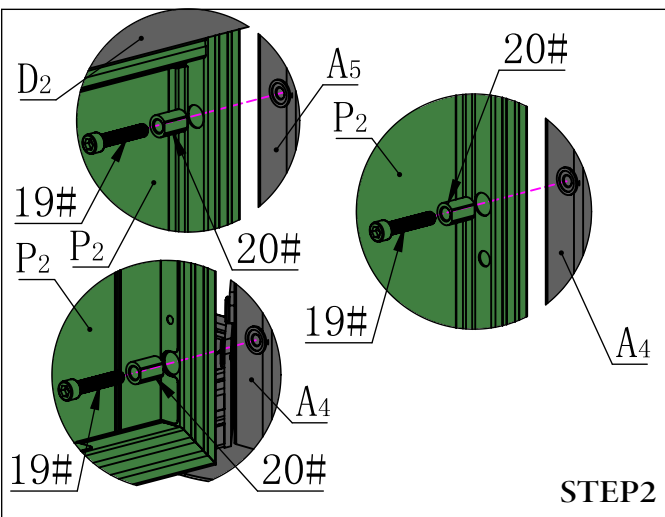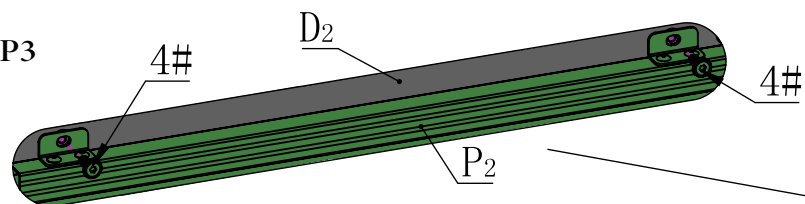



STEP2

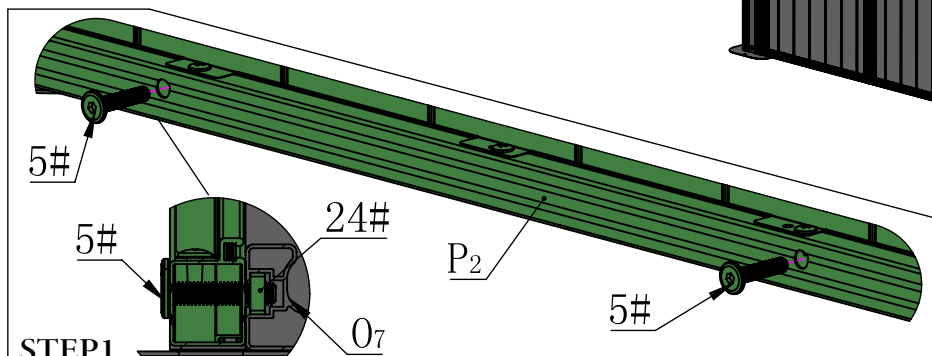


STEP1




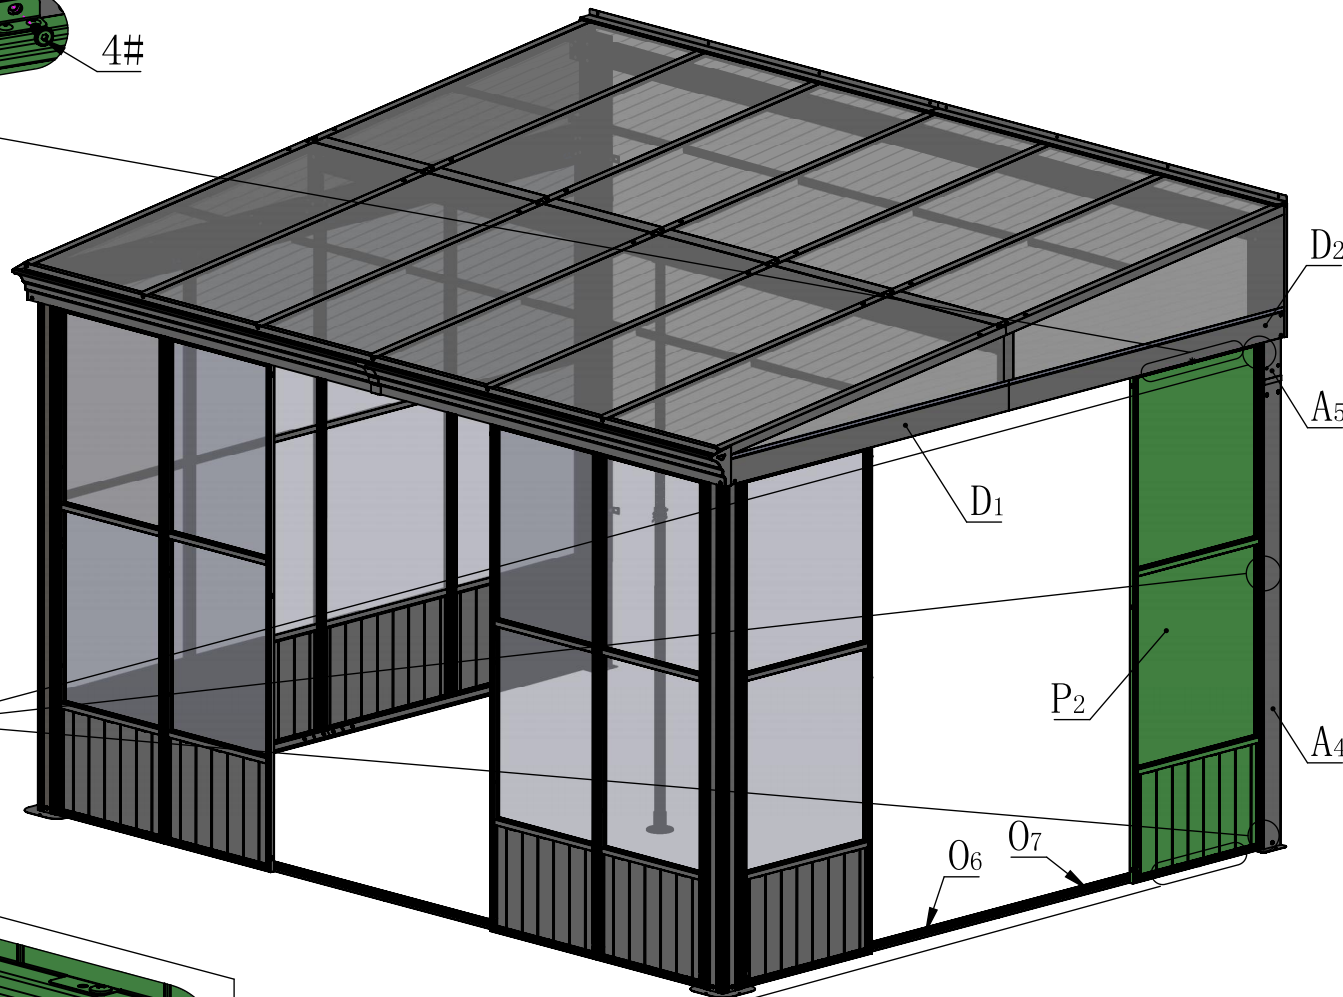





Note: Assemble according to the sequence of steps. Tighten each screen after all screws are positioned. (Align the holes, tighten screw 5# to metal square nuts 24# first.)

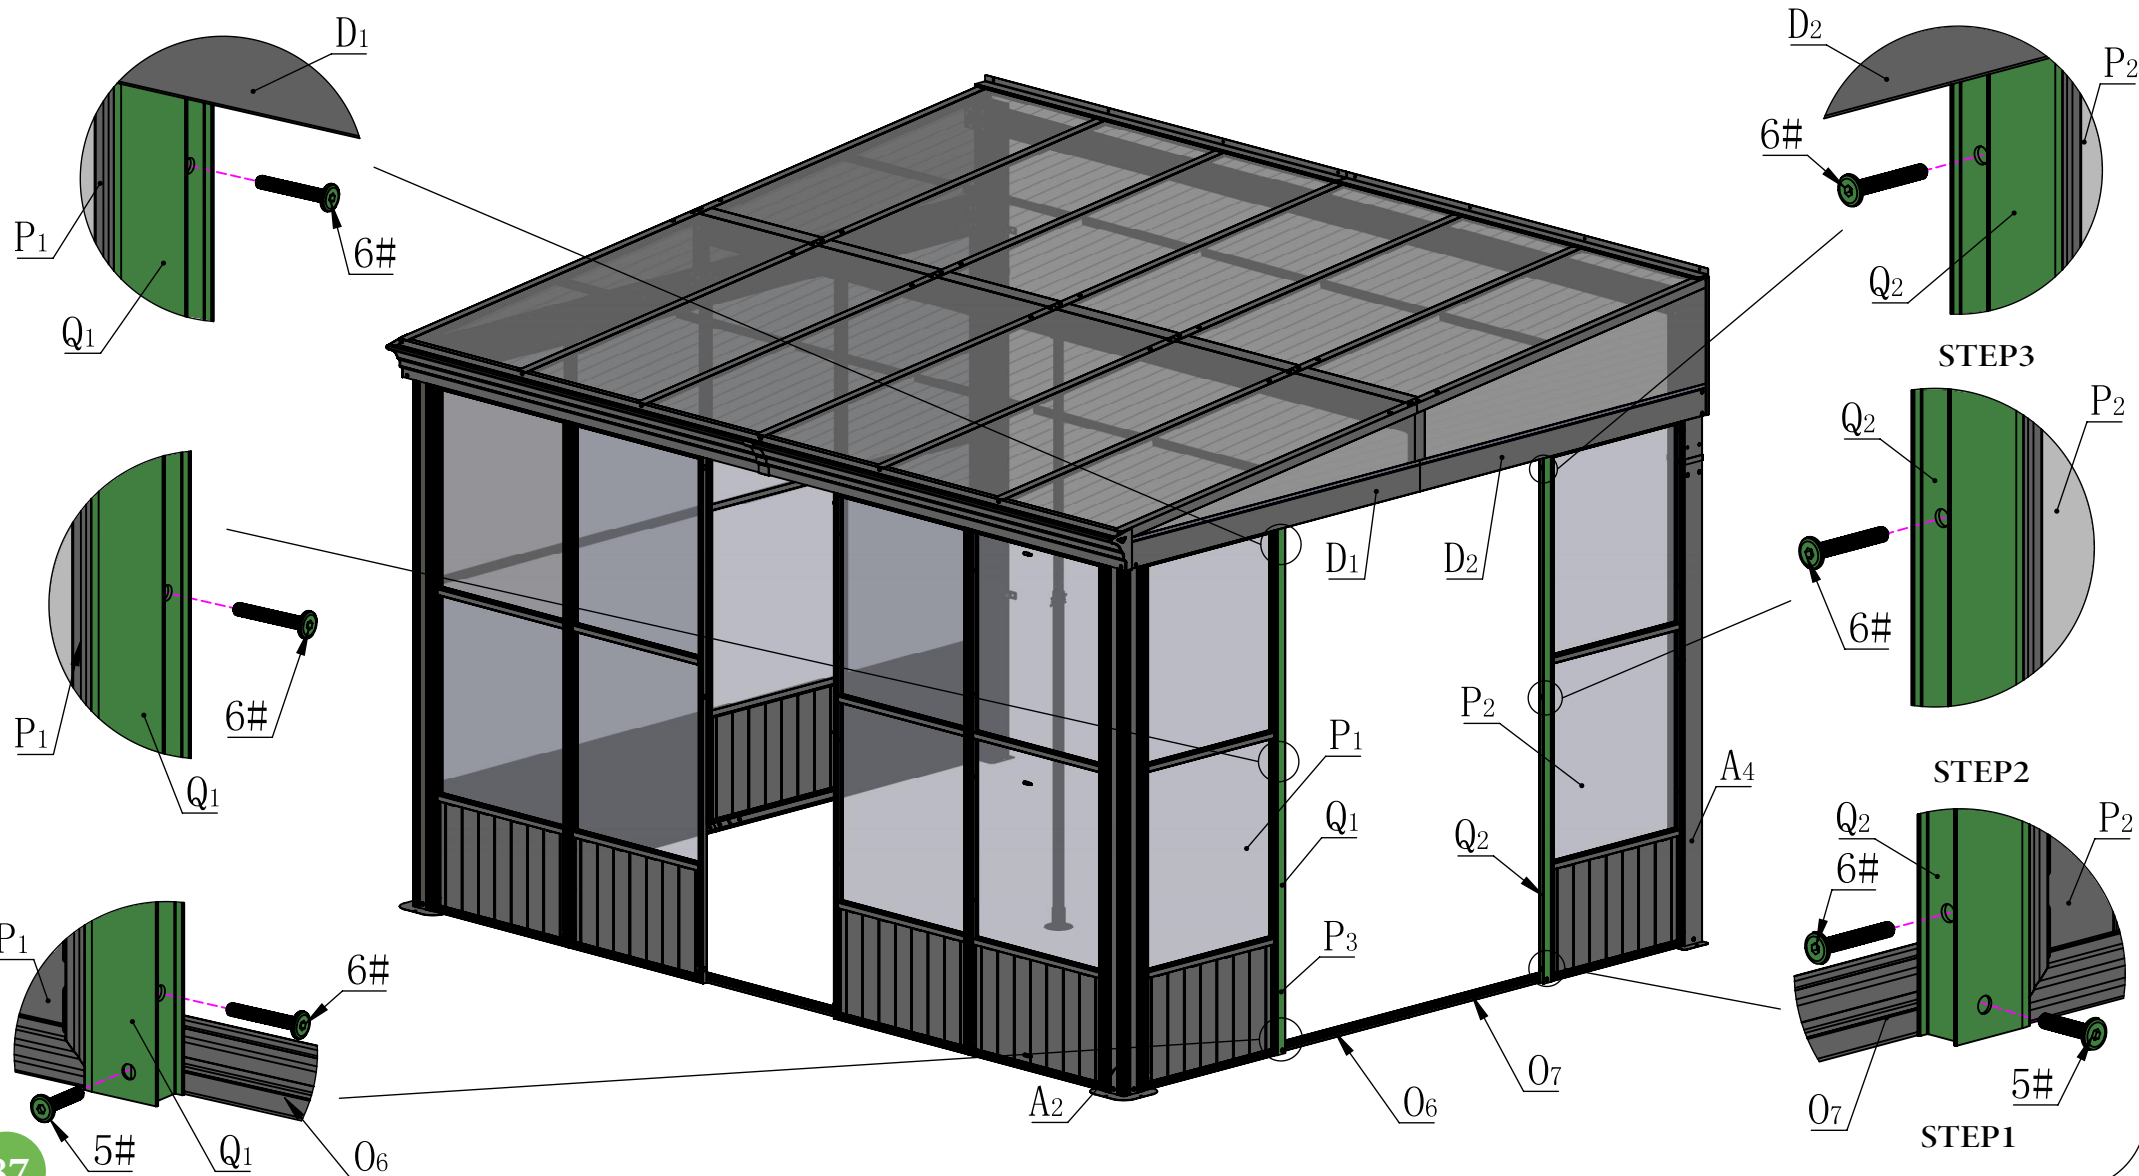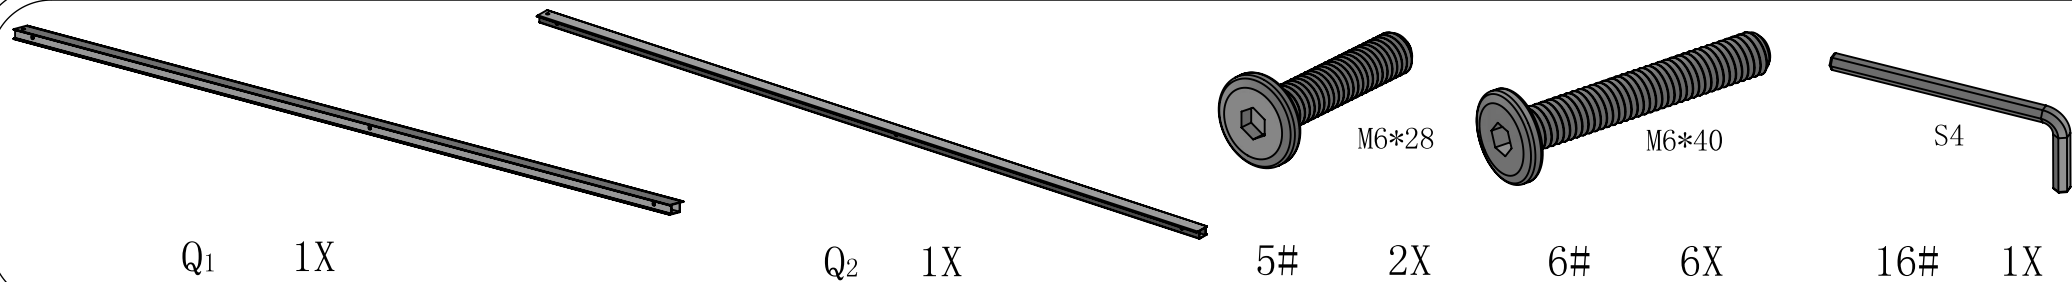





26# 6X

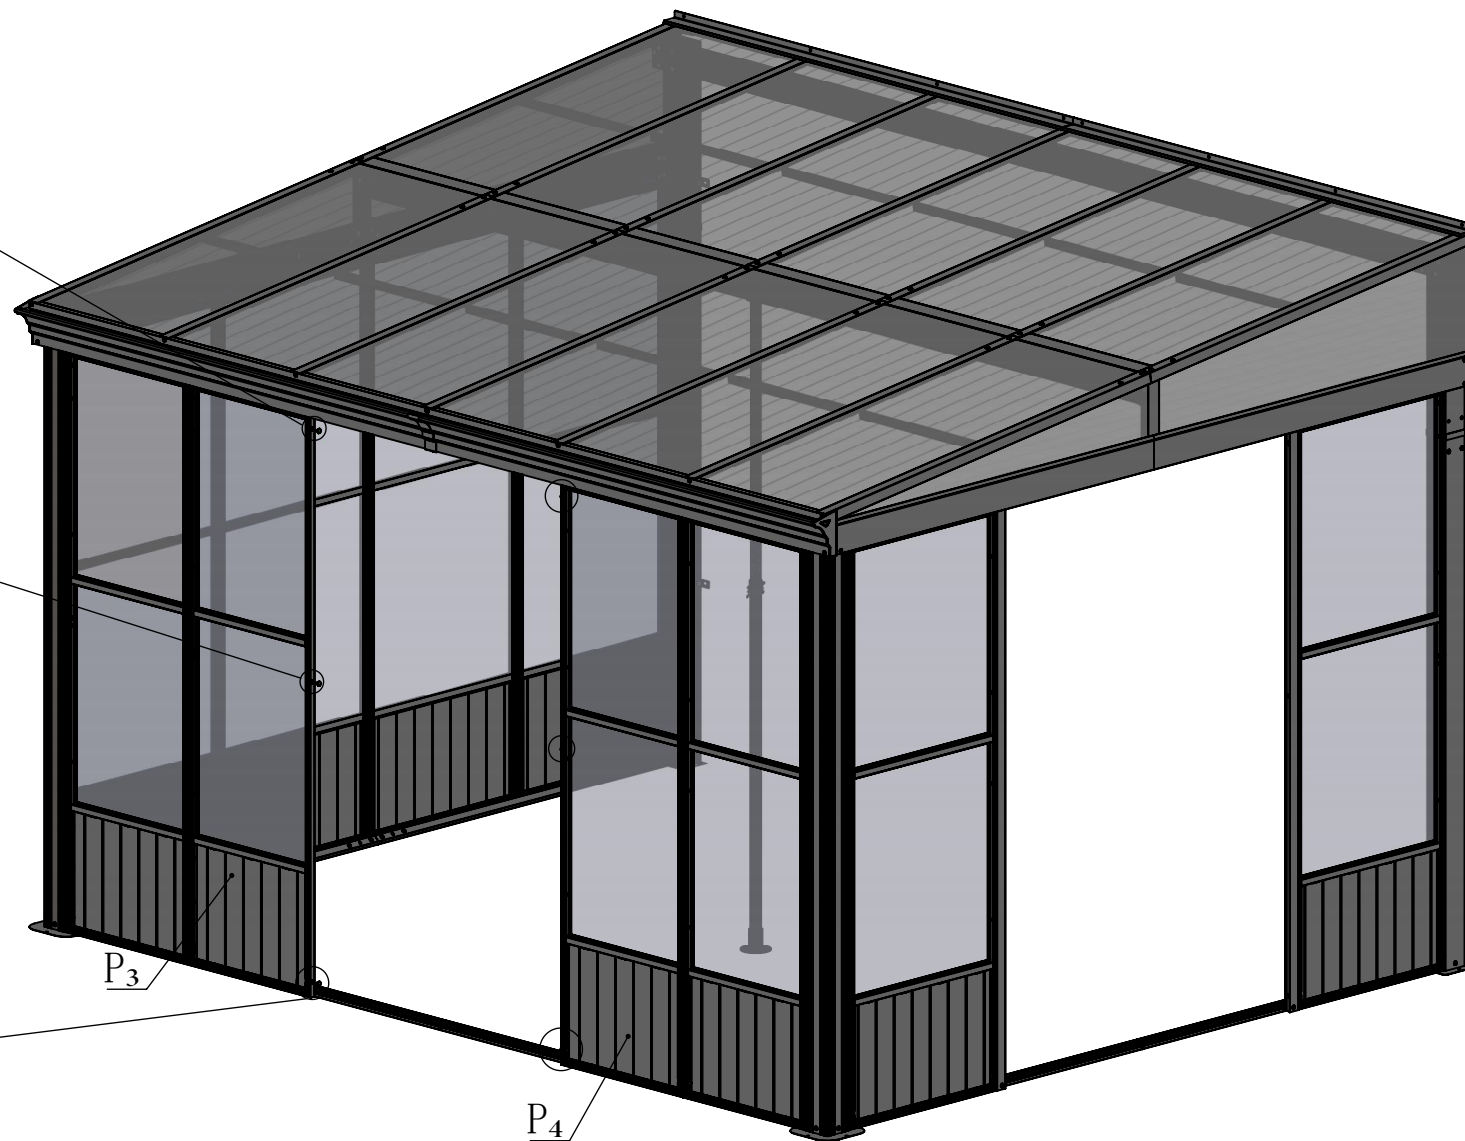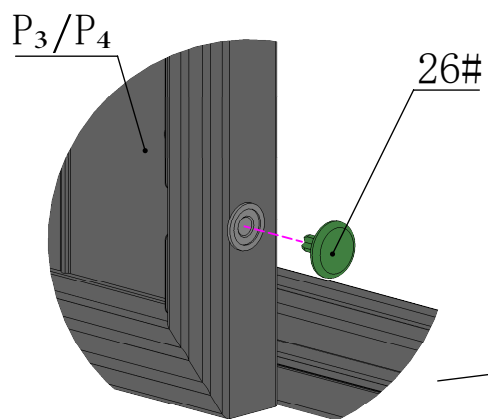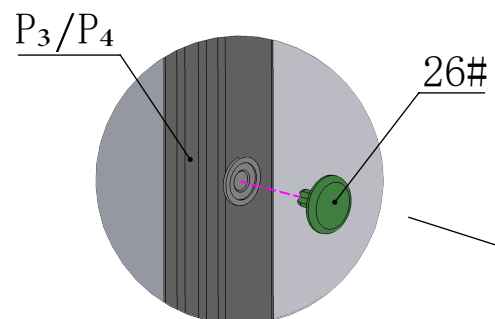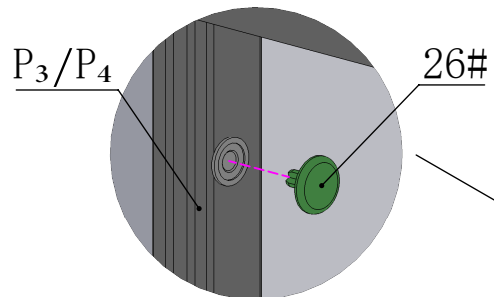

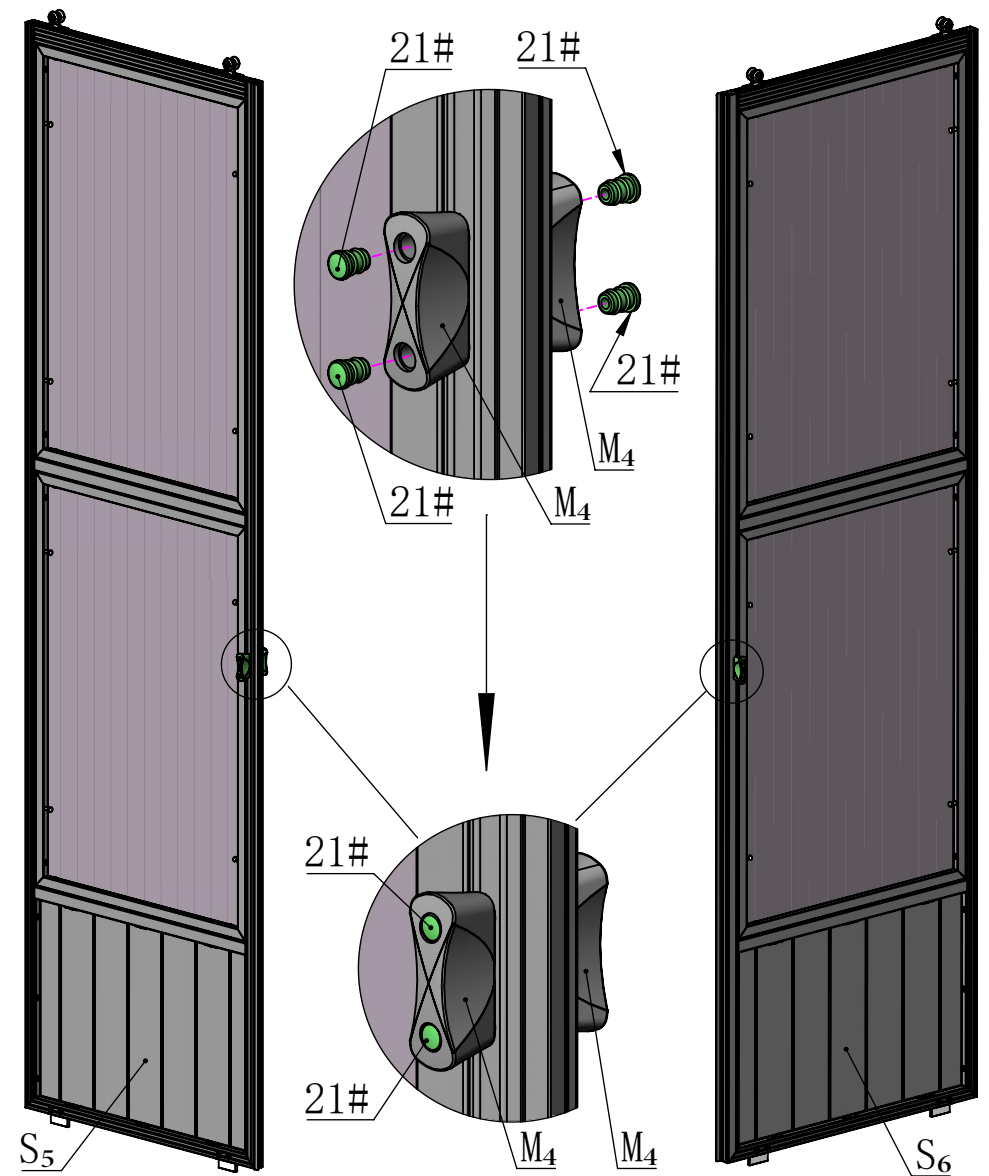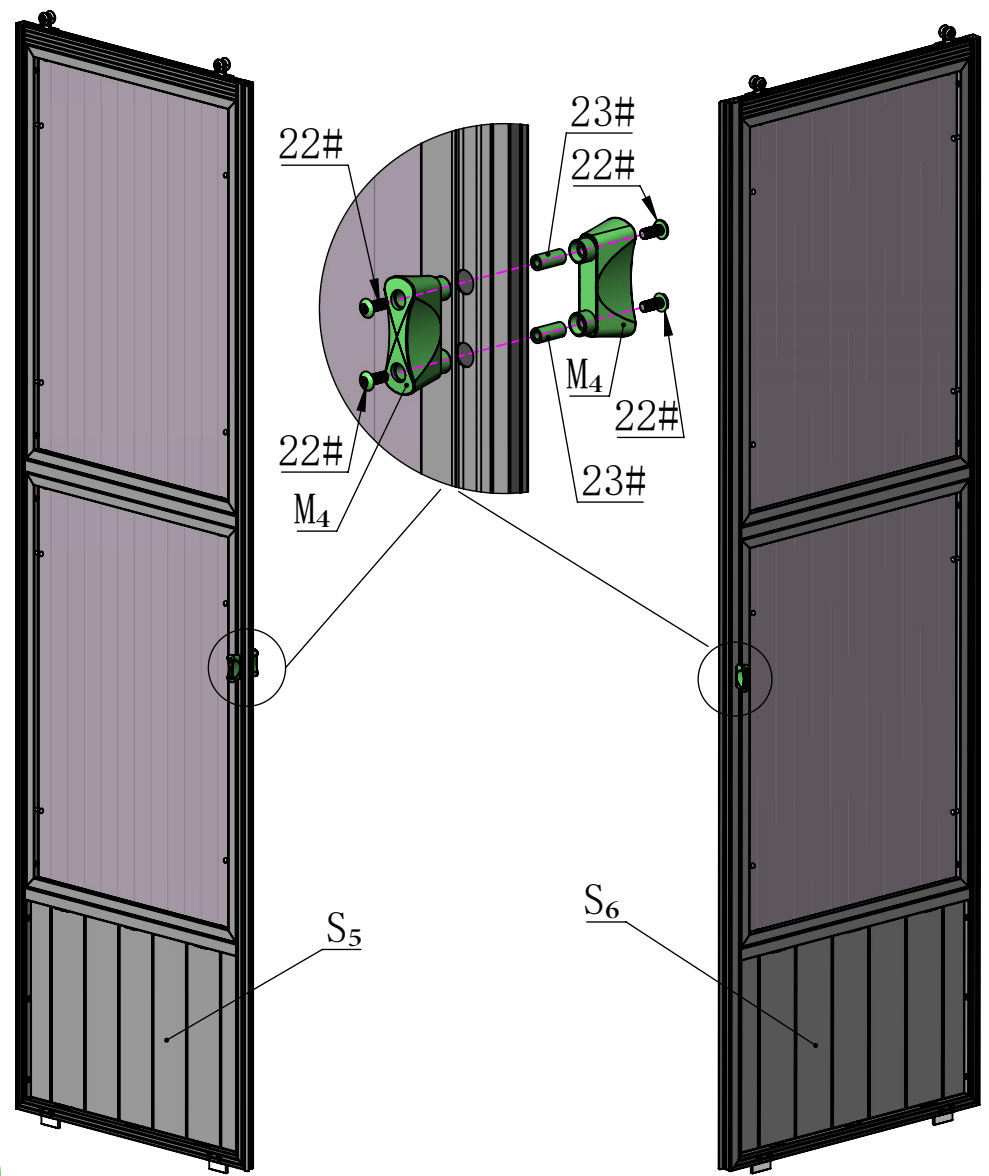
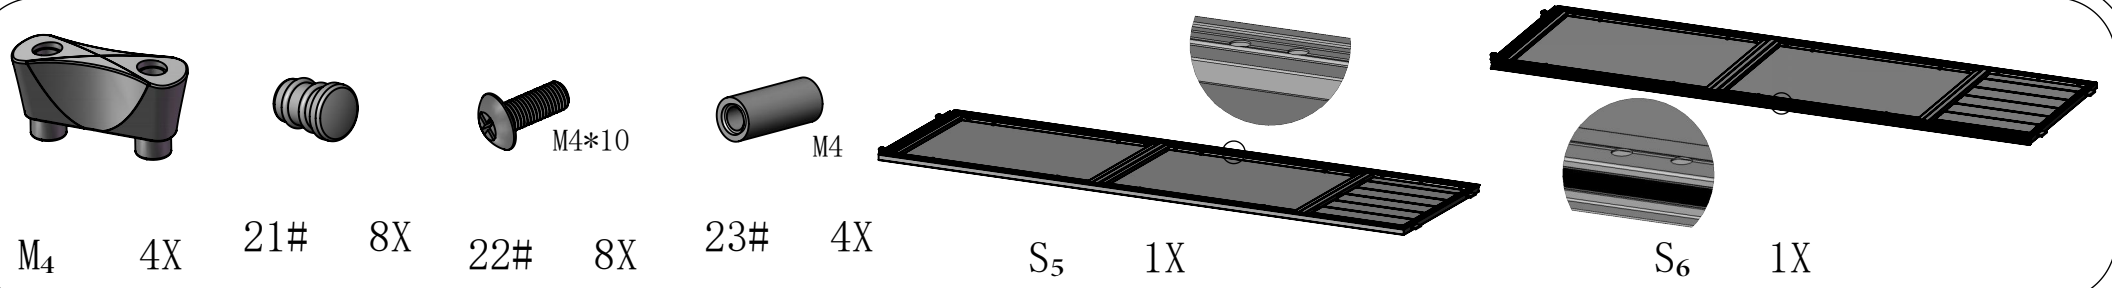


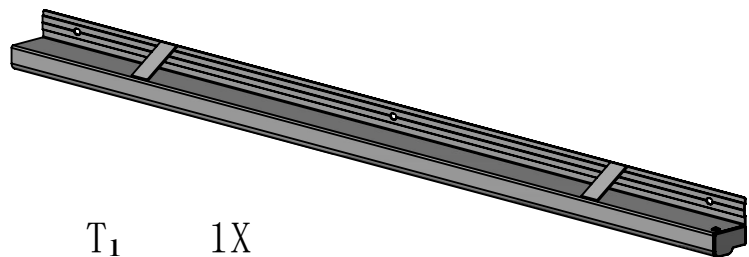

T_1 1X

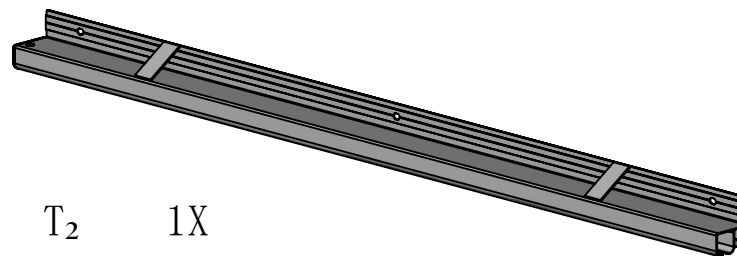


T_2 1X

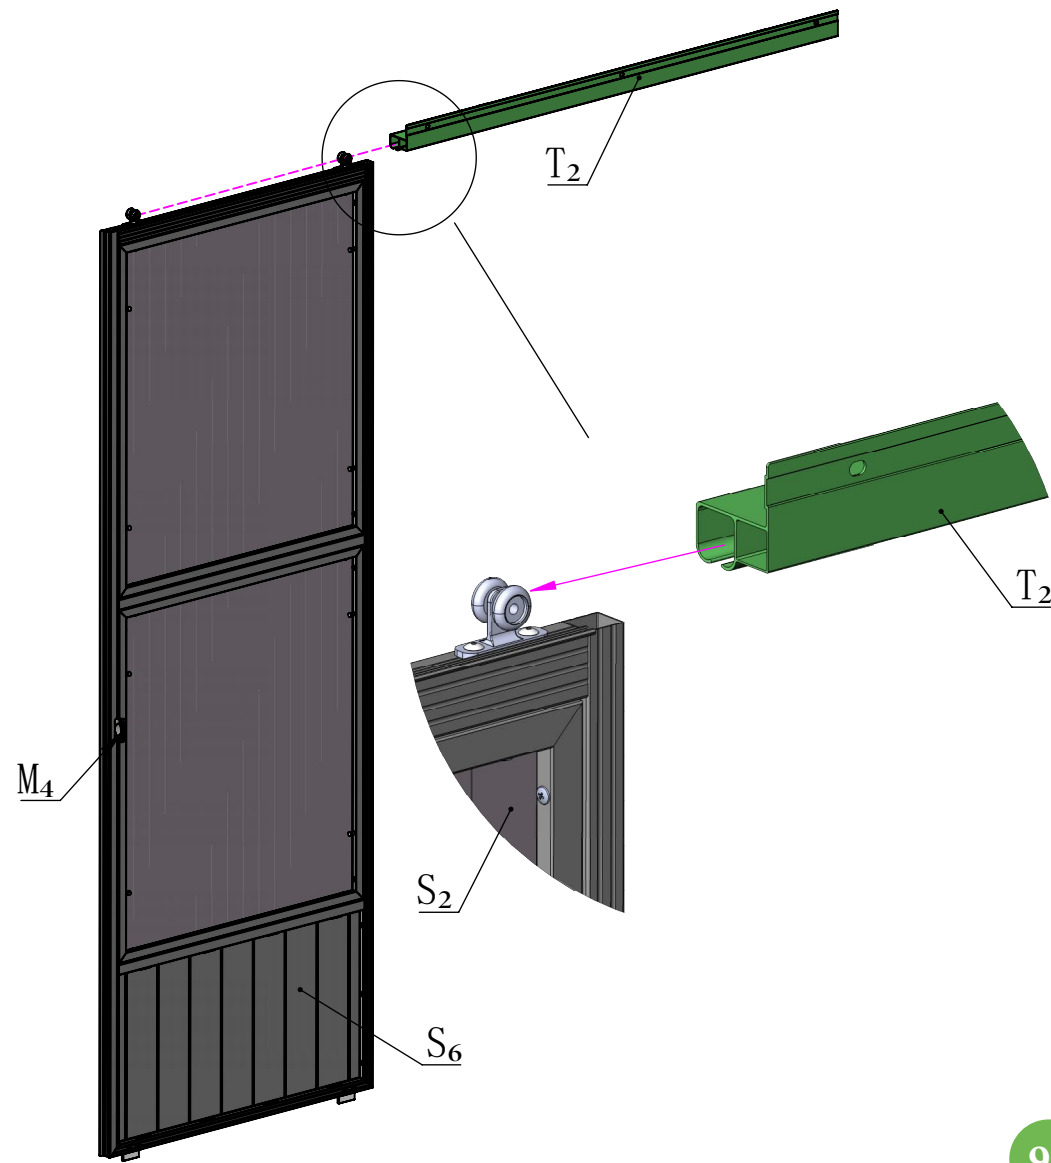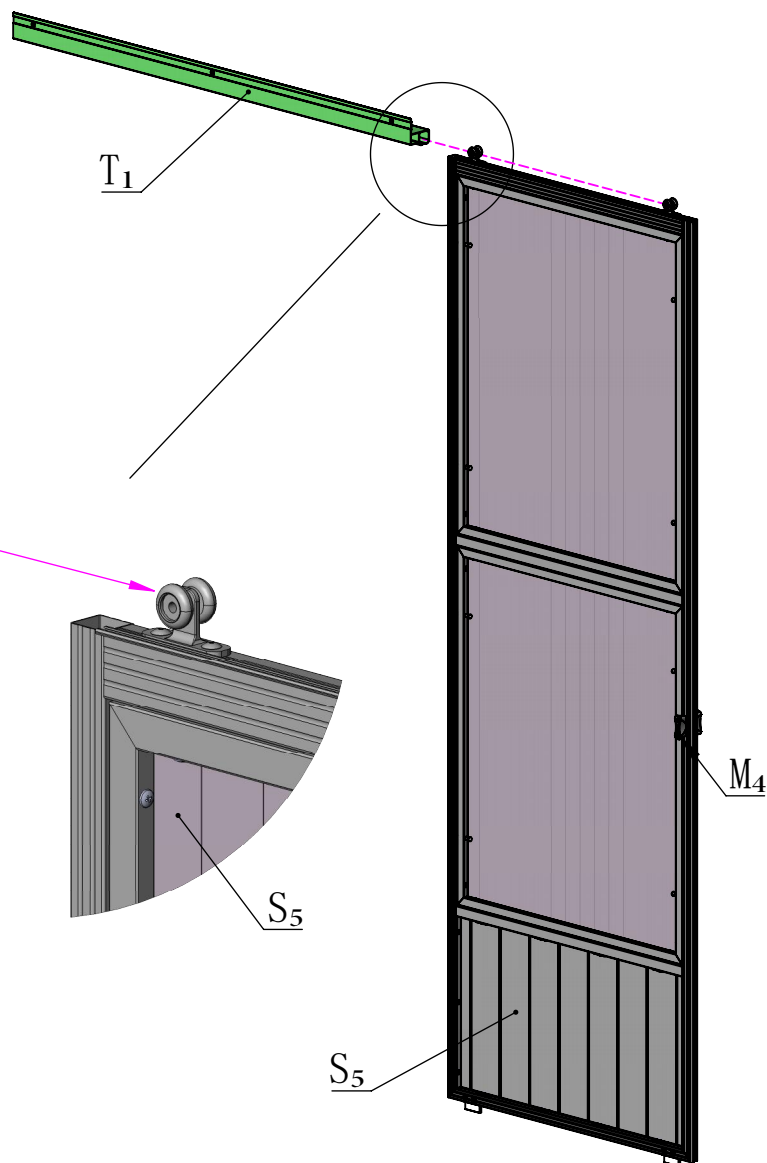



M6*16

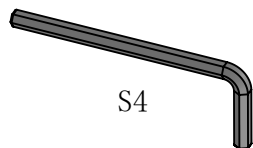


S4

4# 3X

16# 1X

Insert the sliding door #S5 into the track first.

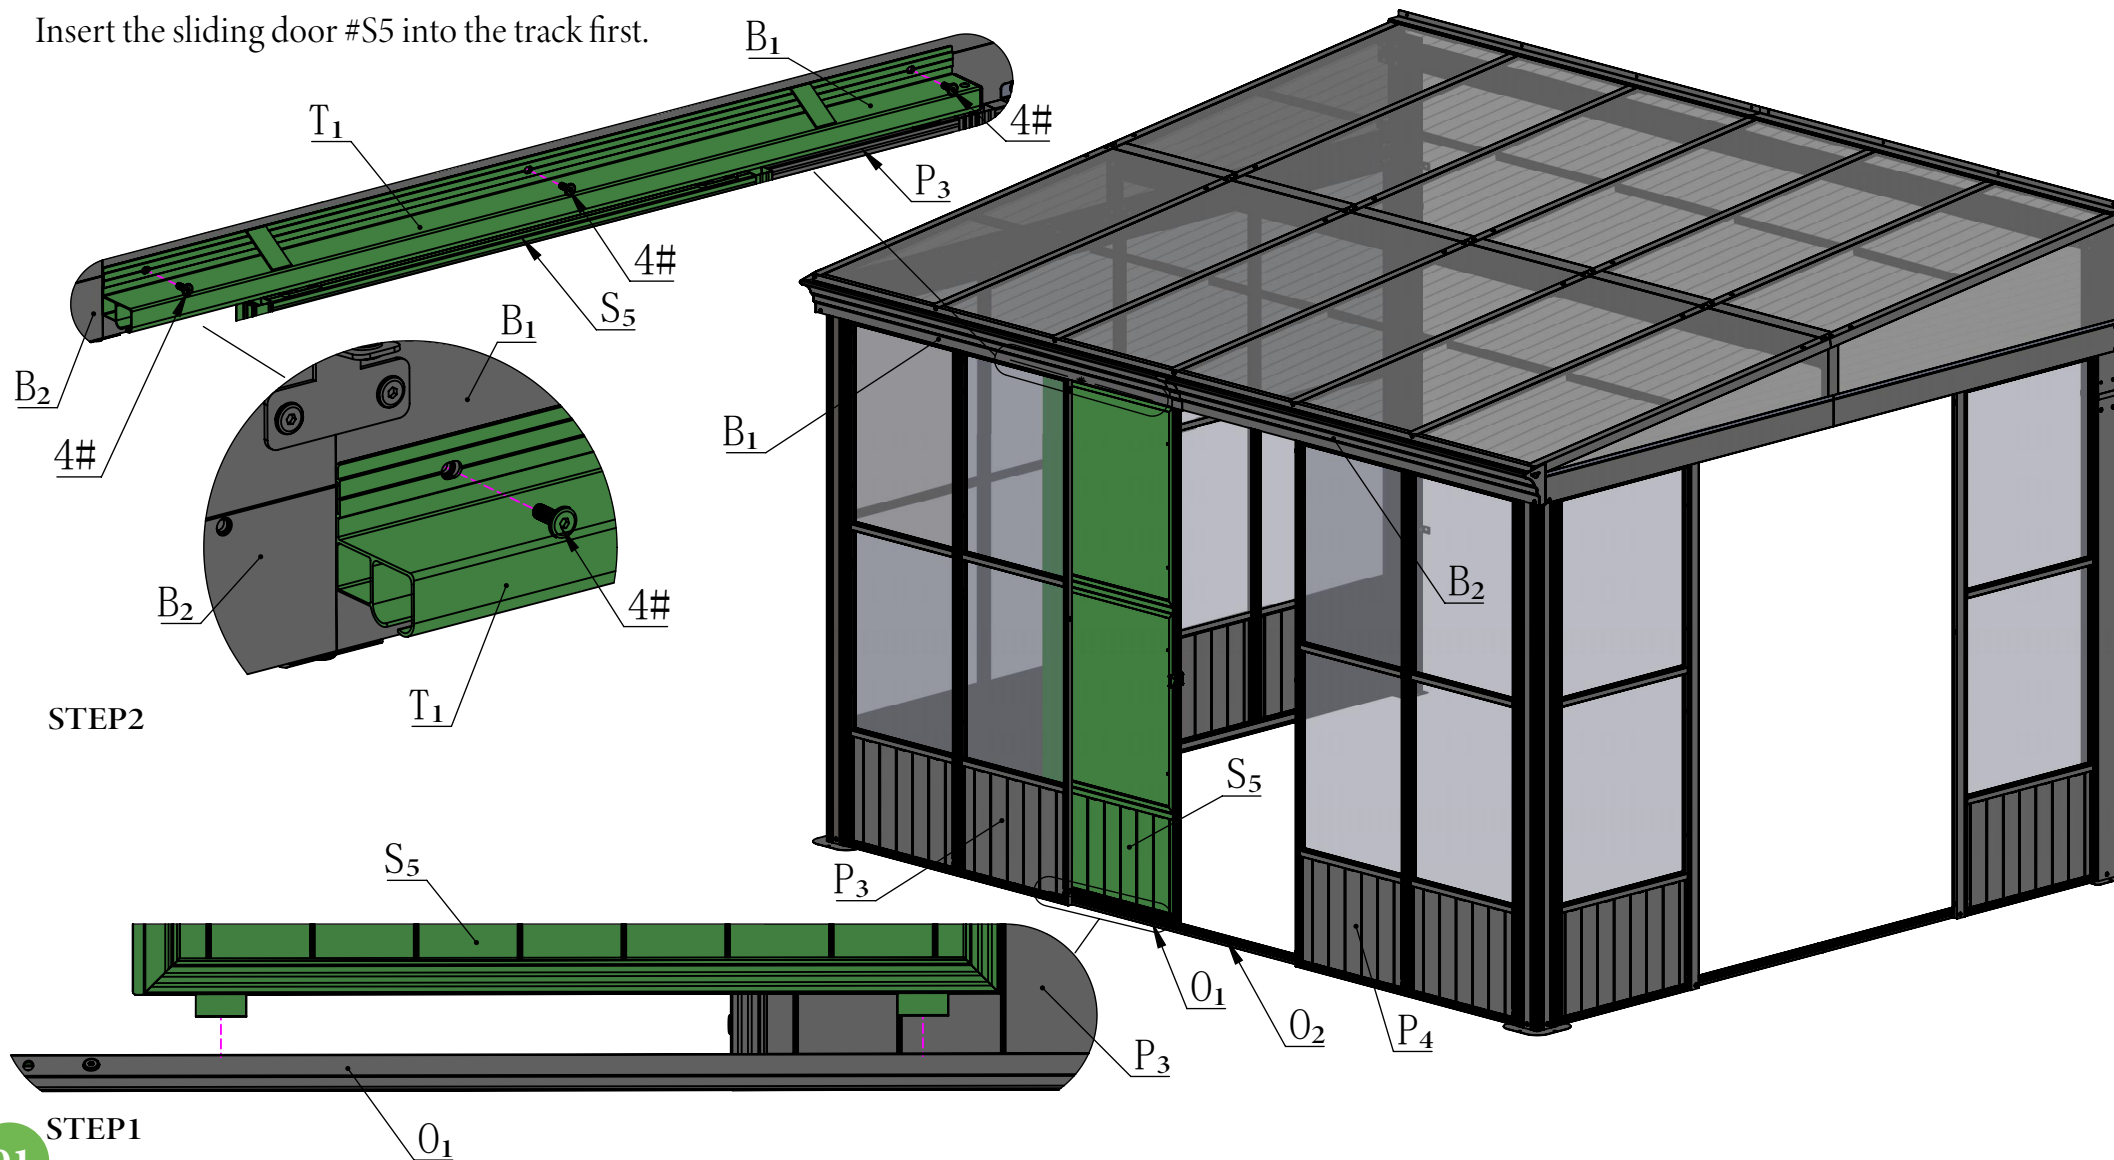




M6*16

4#


3X

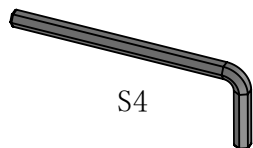



S4

16#


1X



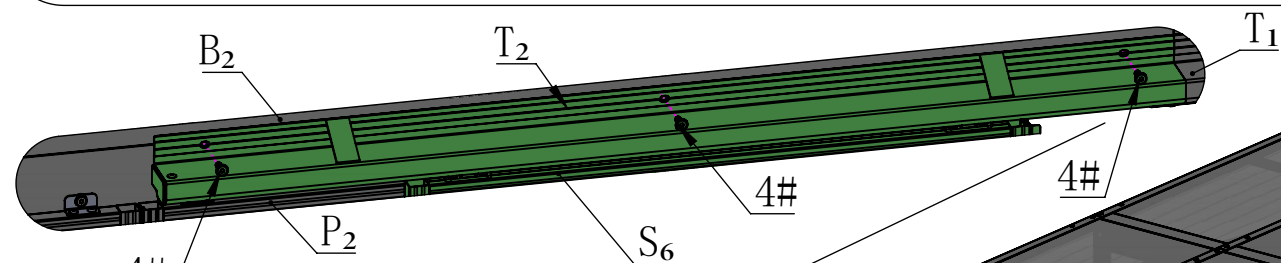






STEP2

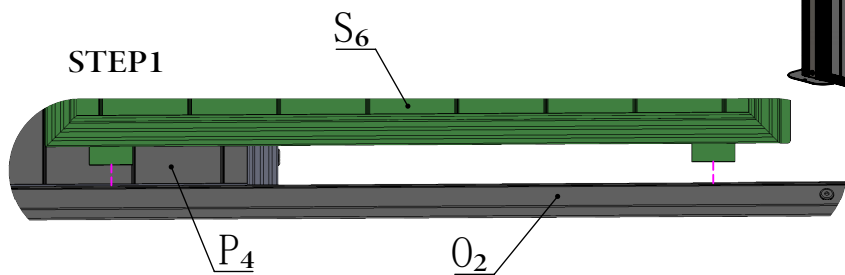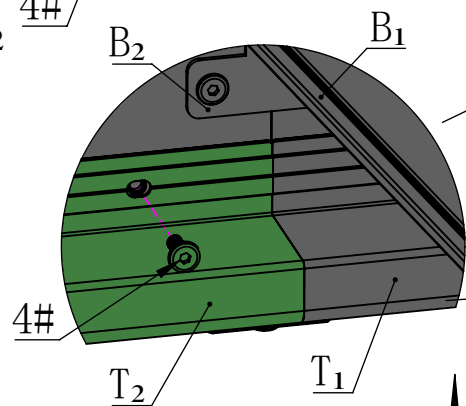

STEP1

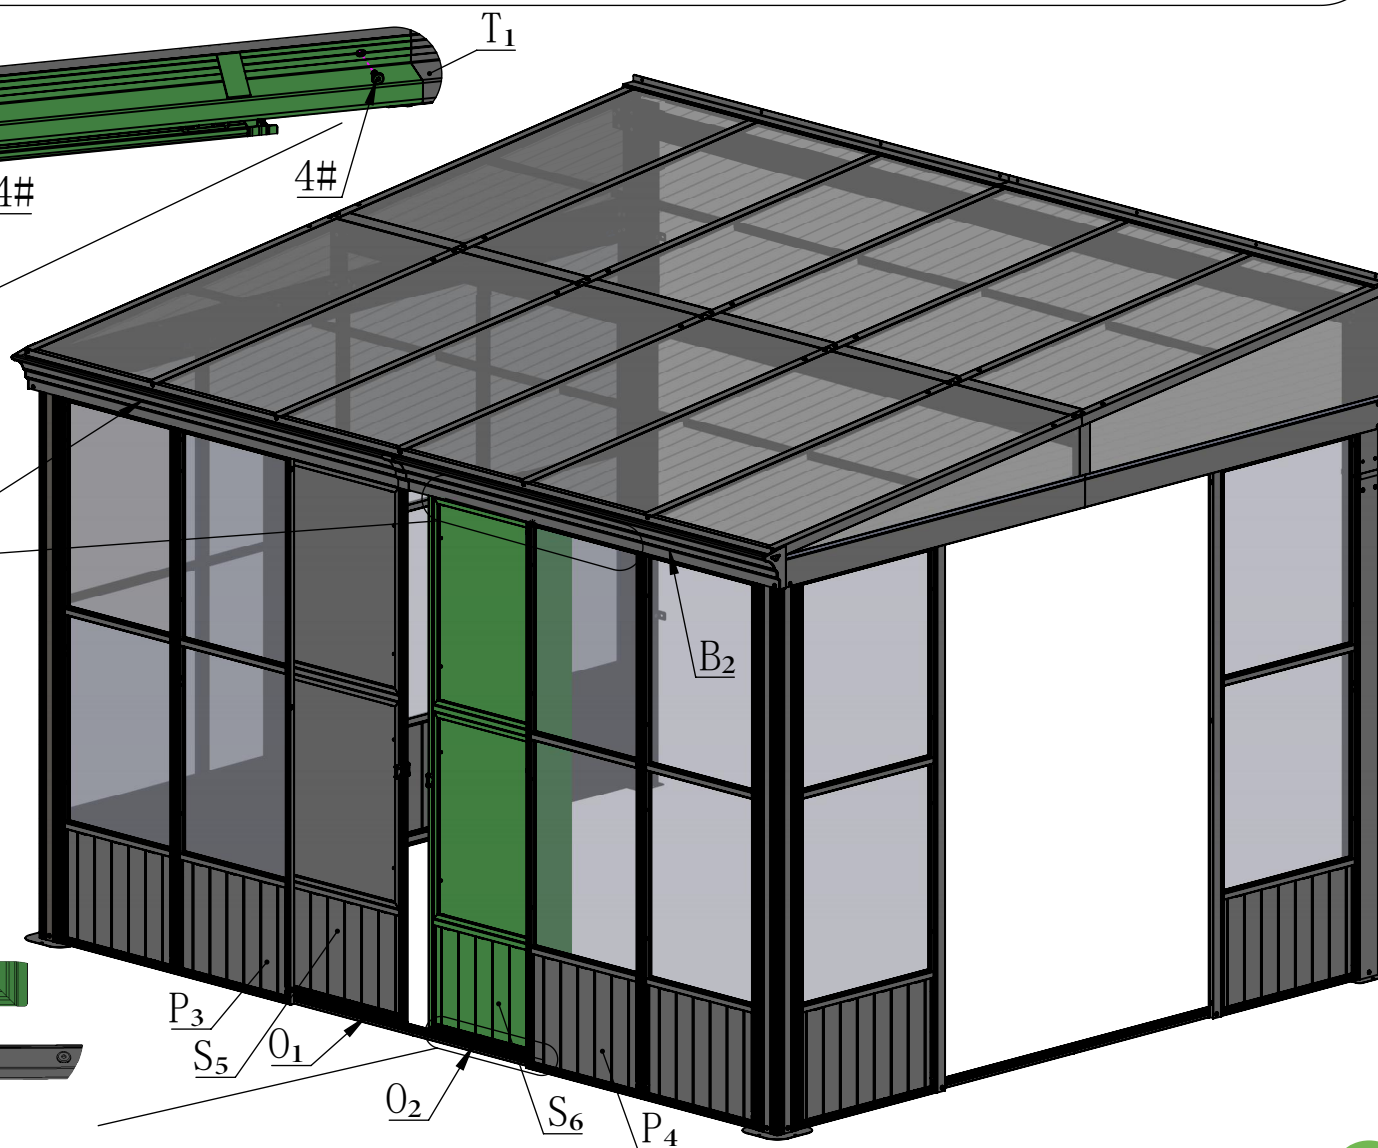


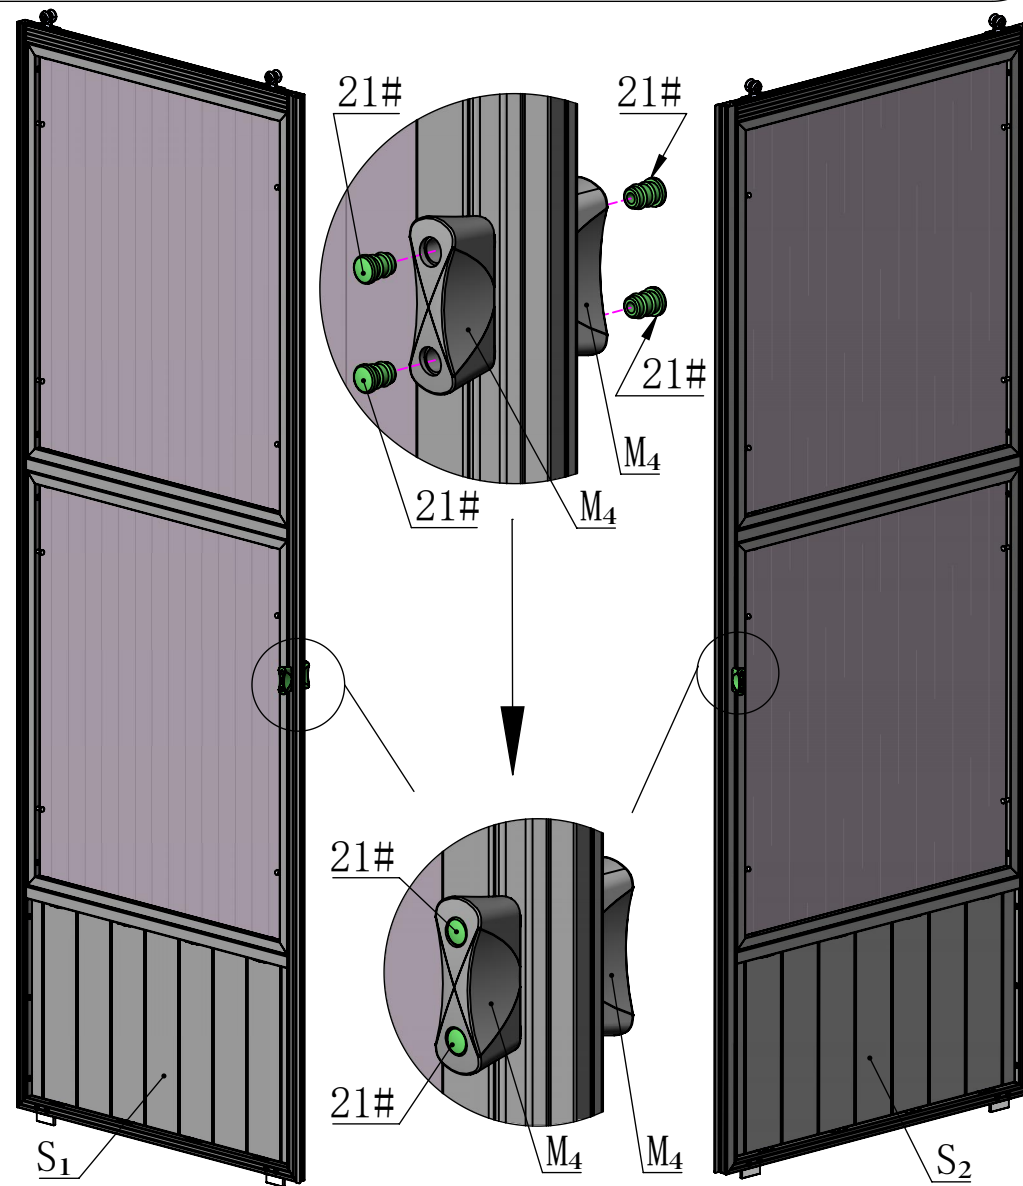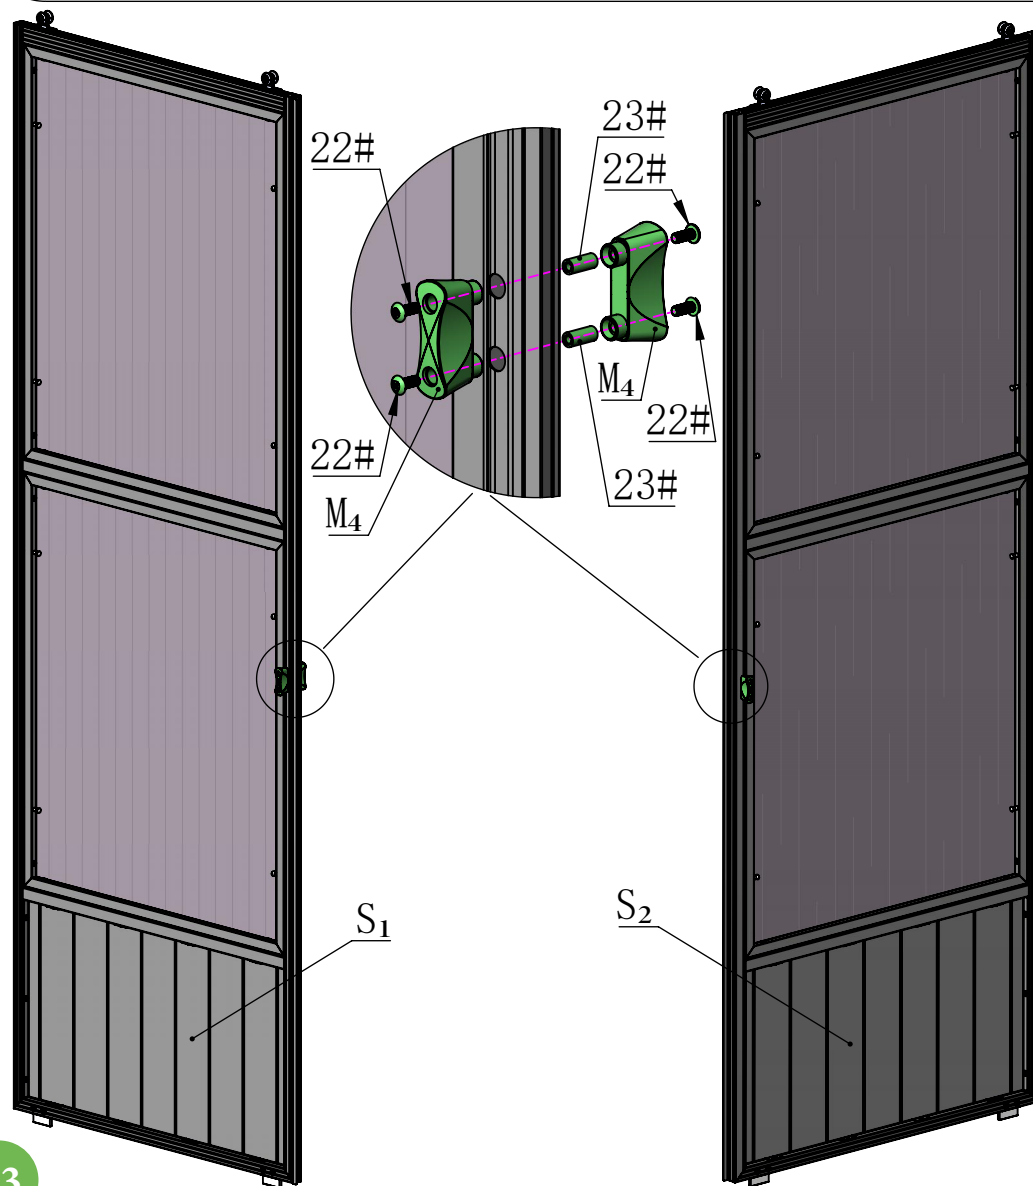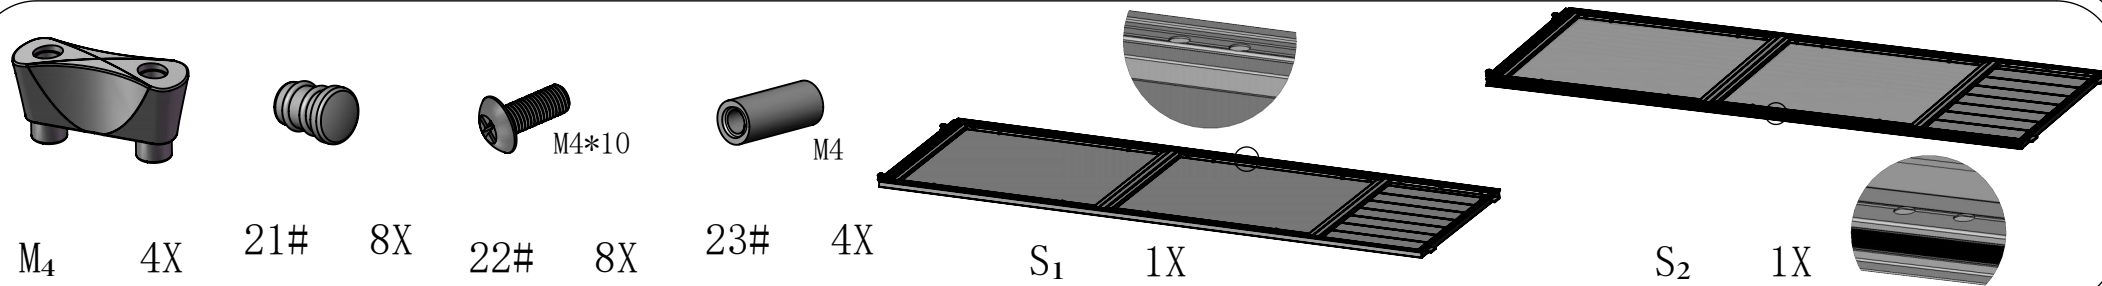

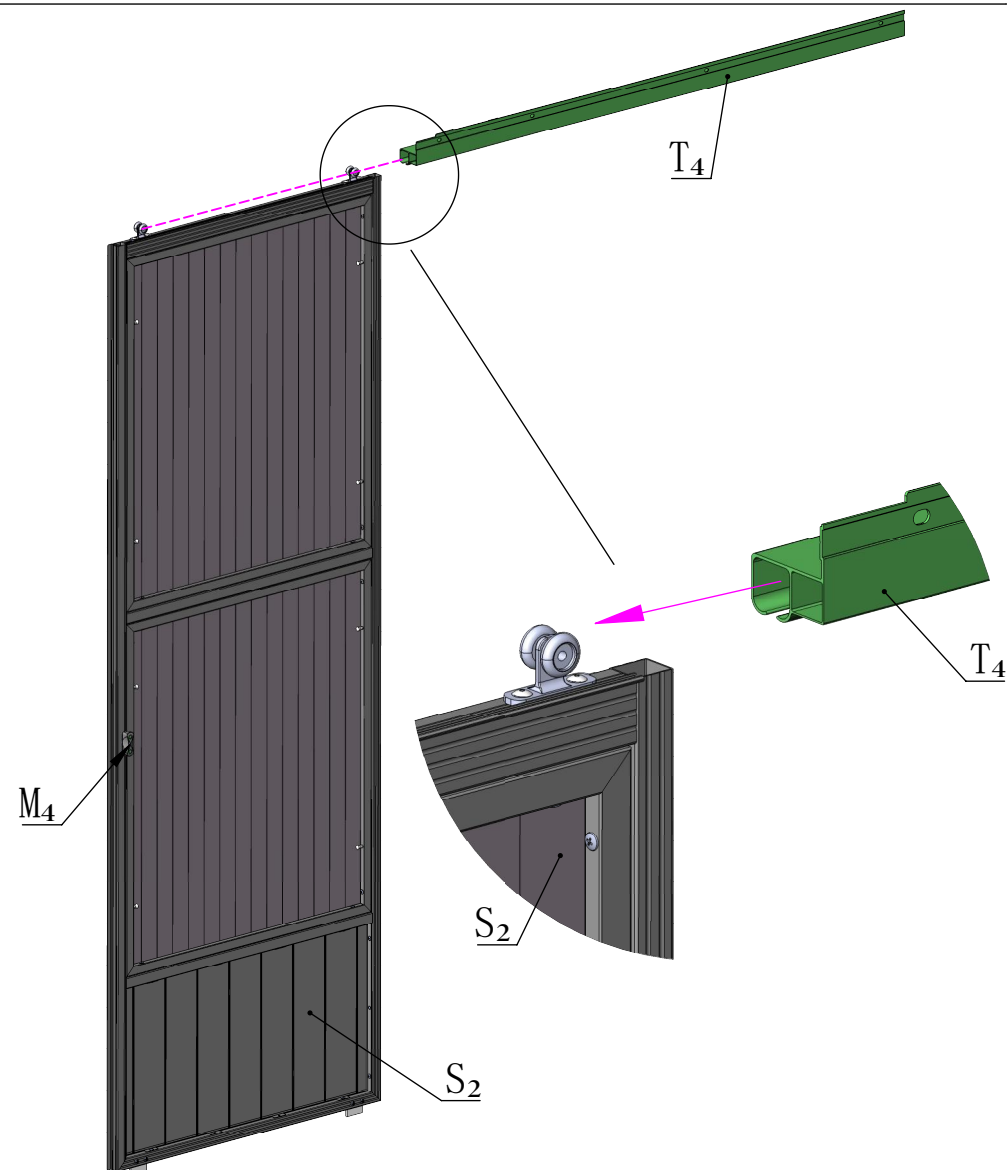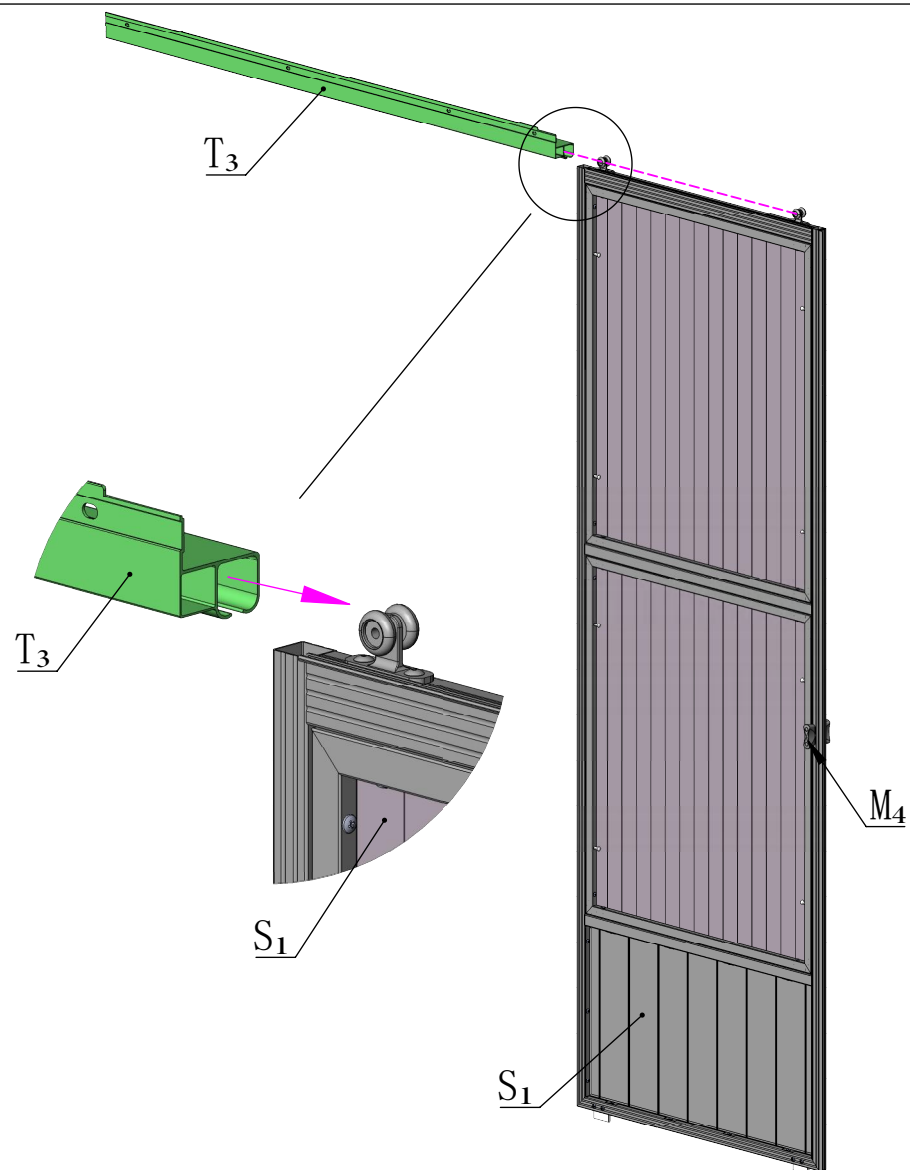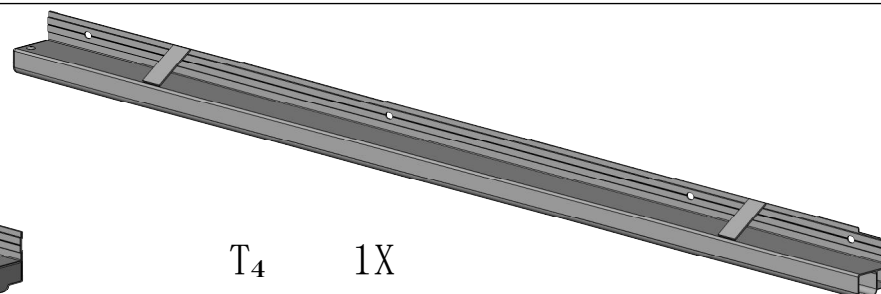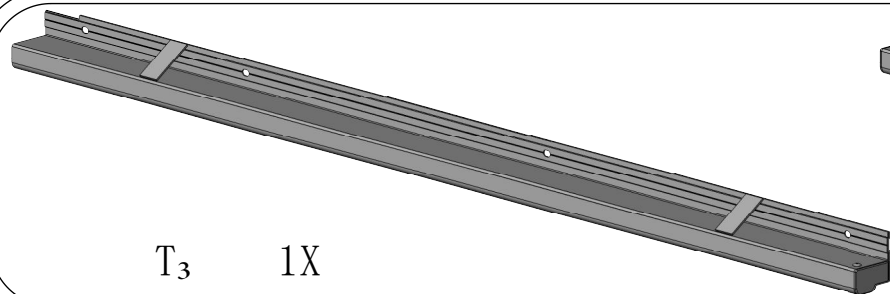





M6*16

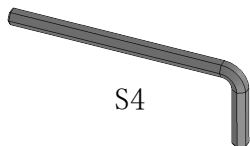


S4

4# 4X


16# 1X

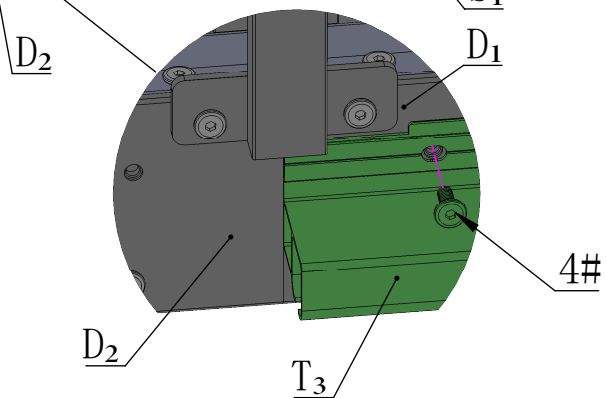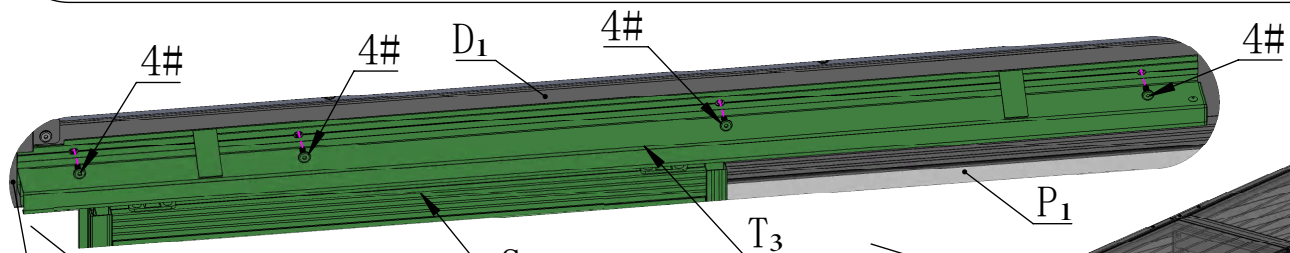

STEP2

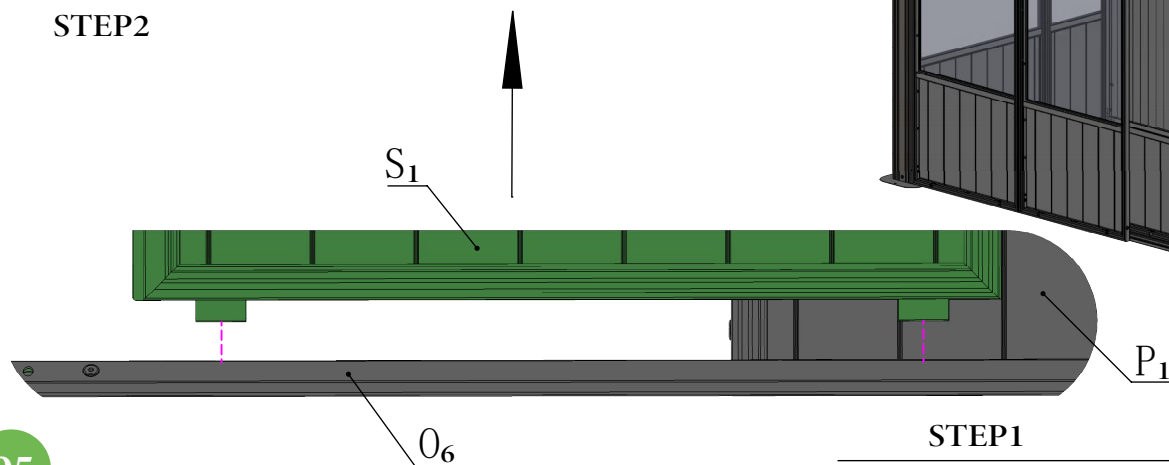


STEP1

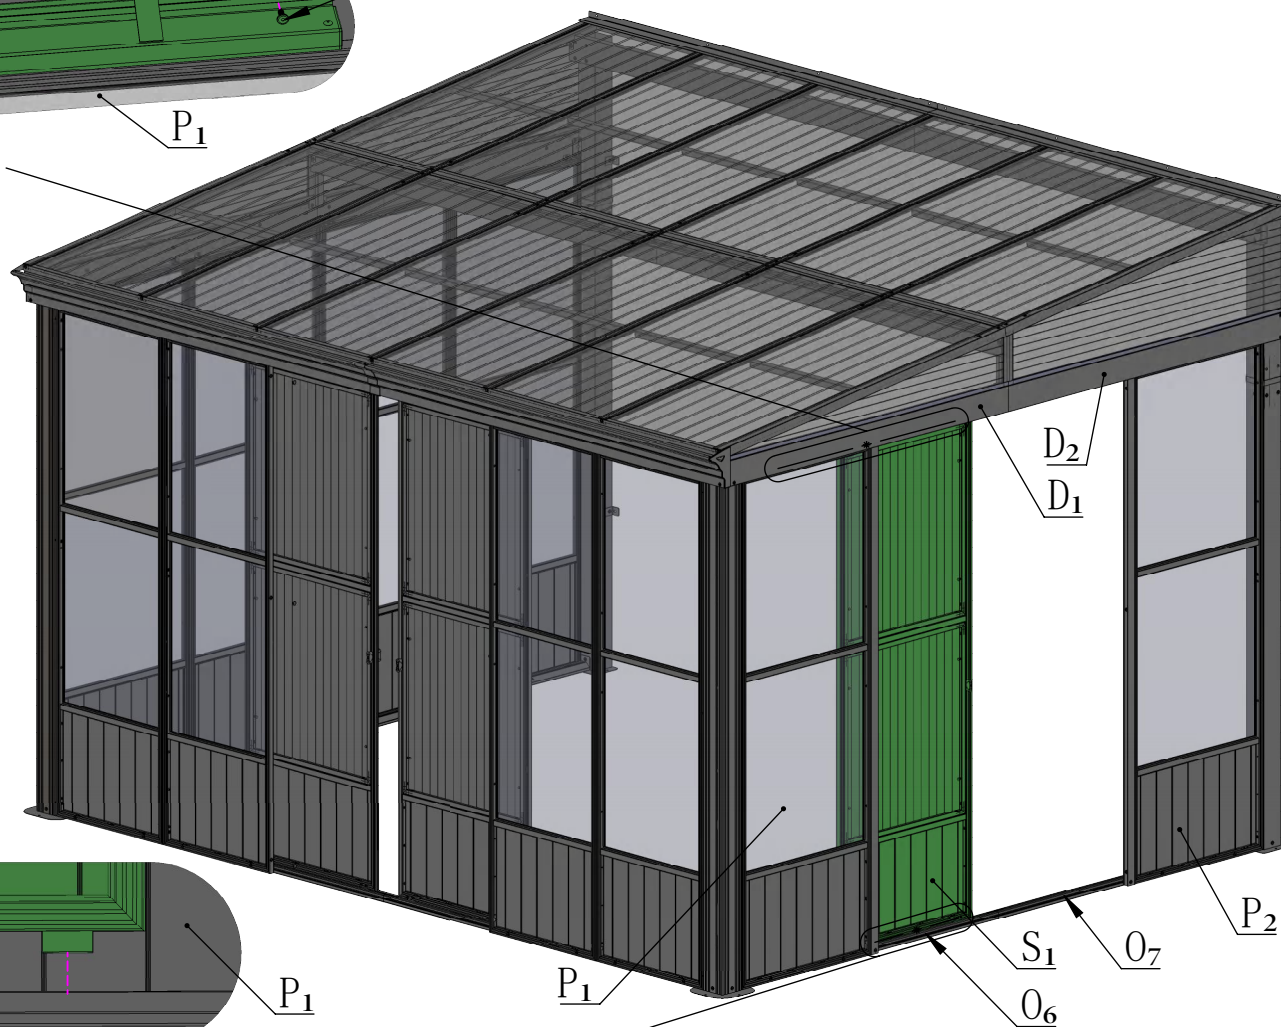




M6*16


4# 4X

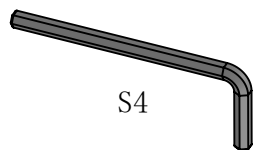


S4

16# 1X

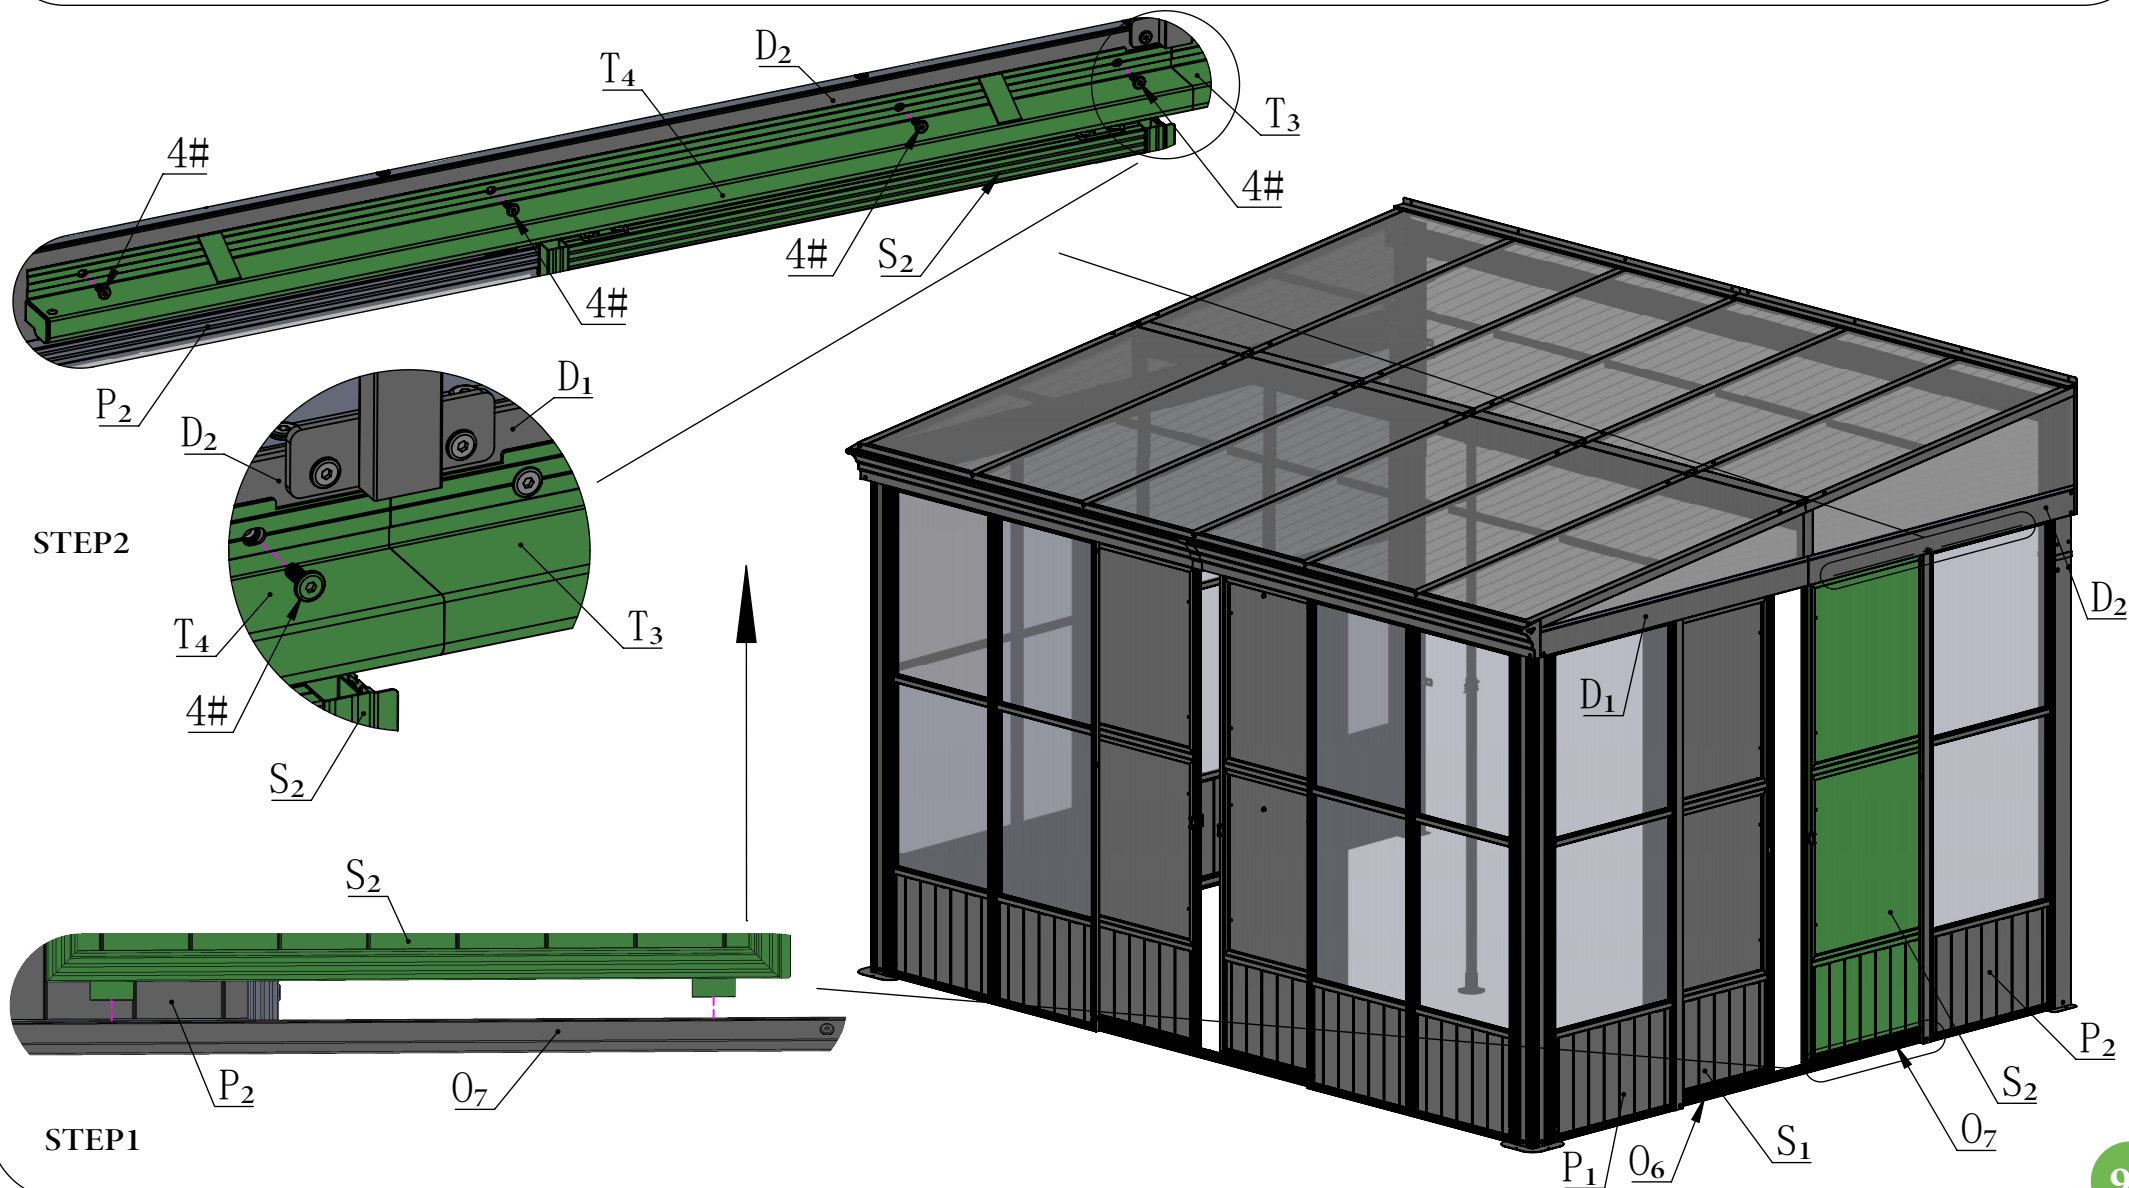

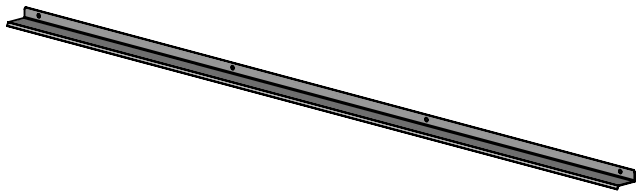

R1 2X



9#

ST6.0*70




8X






10#

8X

Note: If you do not consider fixing on the wall, you can skip this step. (This step requires drilling holes in the wall for fixing.)

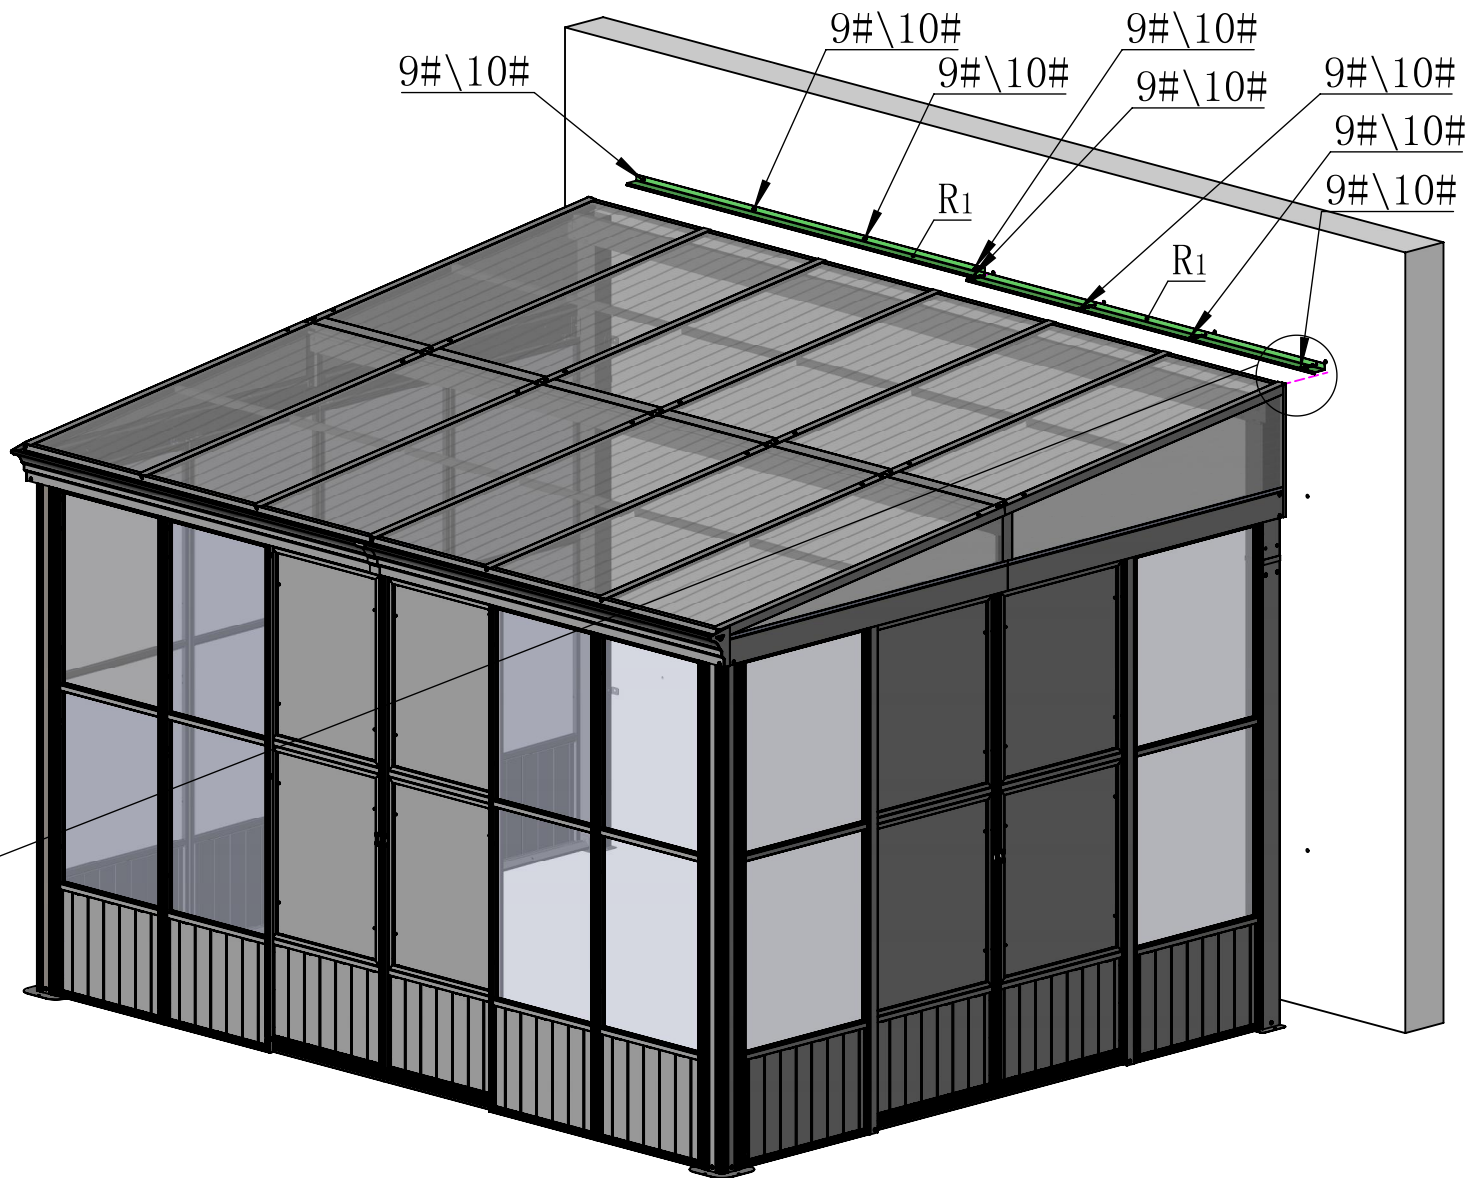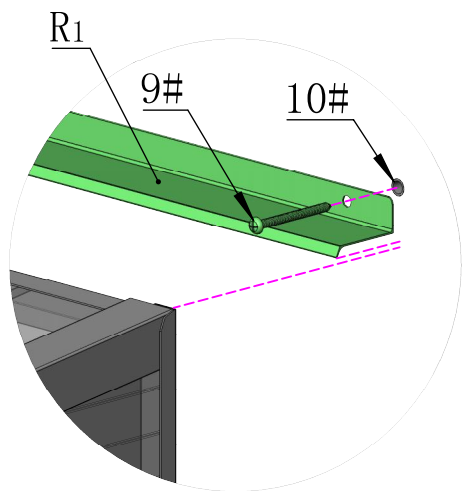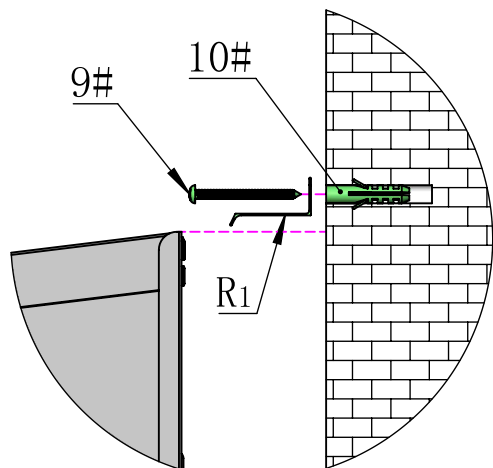

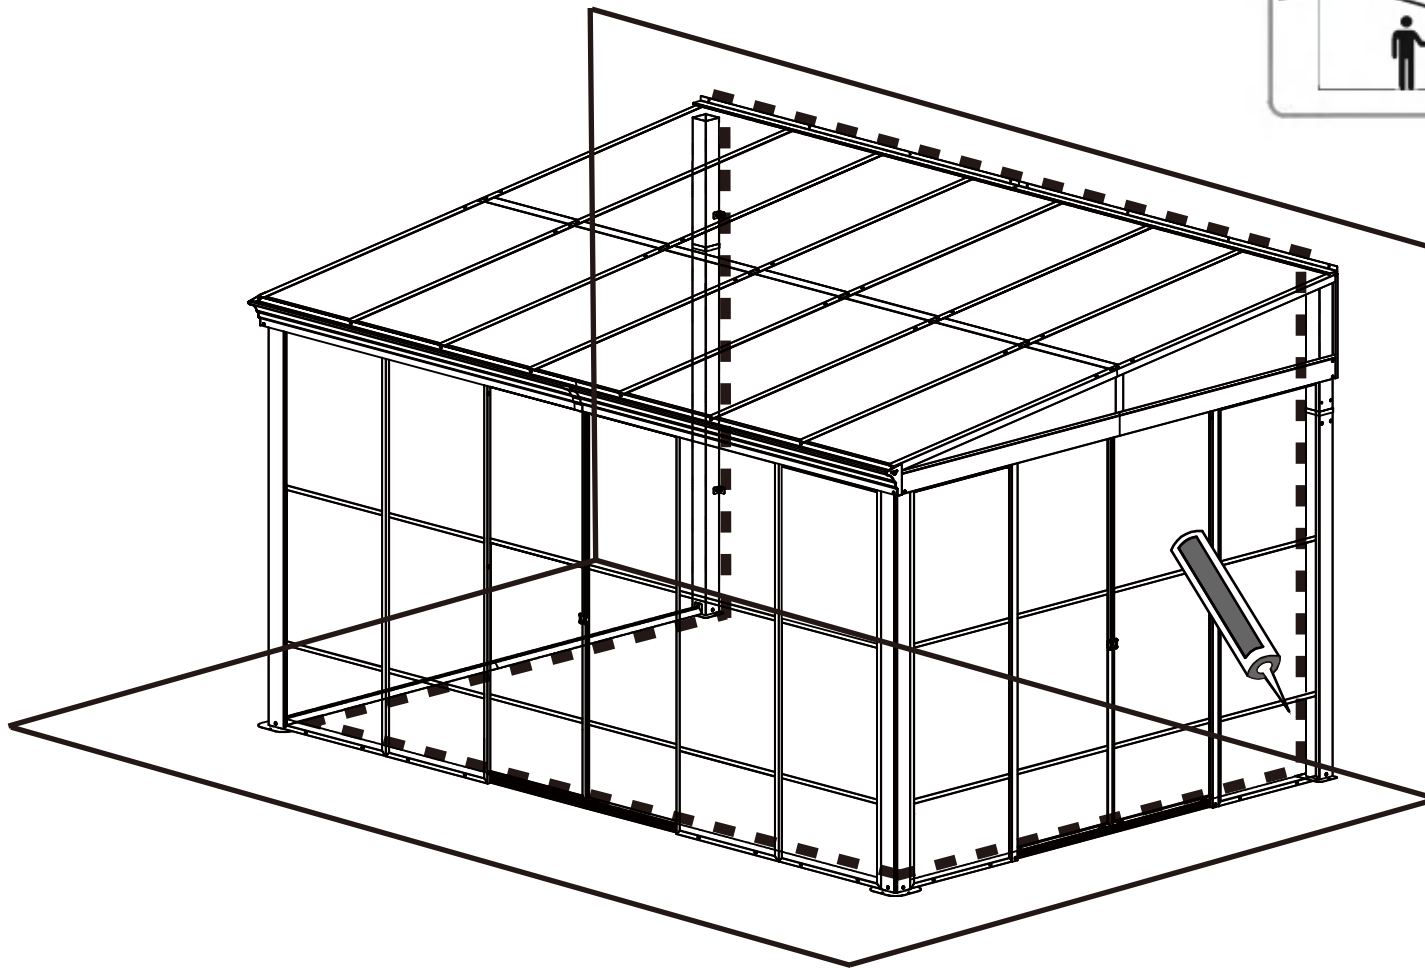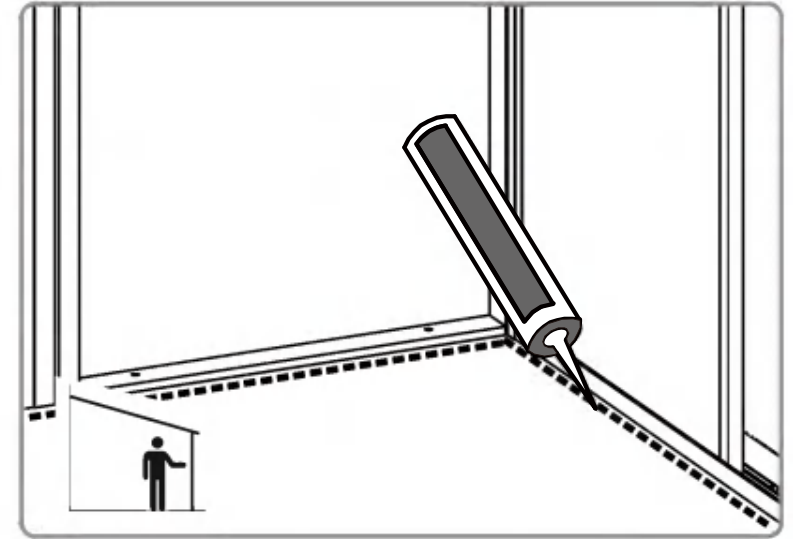


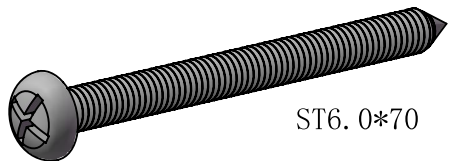

ST6. 0*70

9#



6X

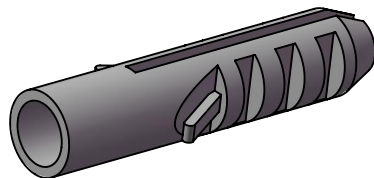


10#

6X


Note: If you do not consider fixing on the wall, you can skip this step. (This step requires drilling holes in the wall for fixing.)

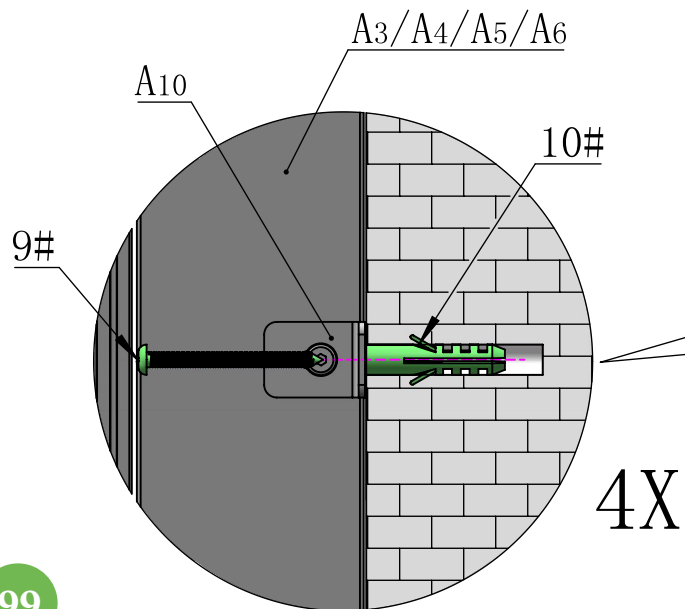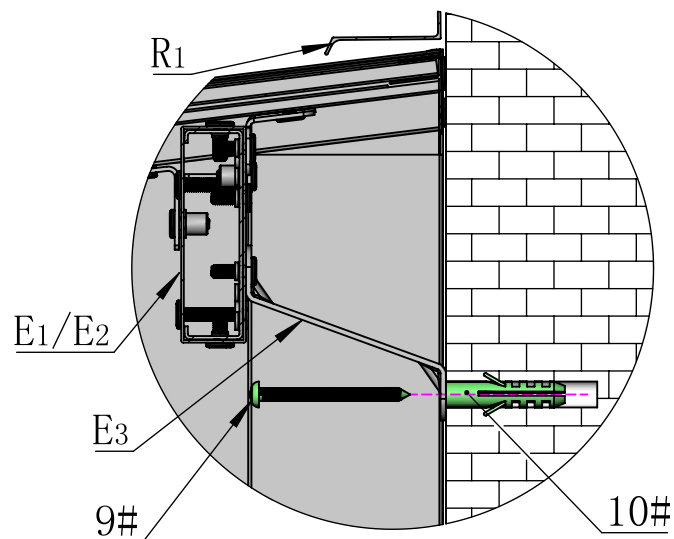

4X

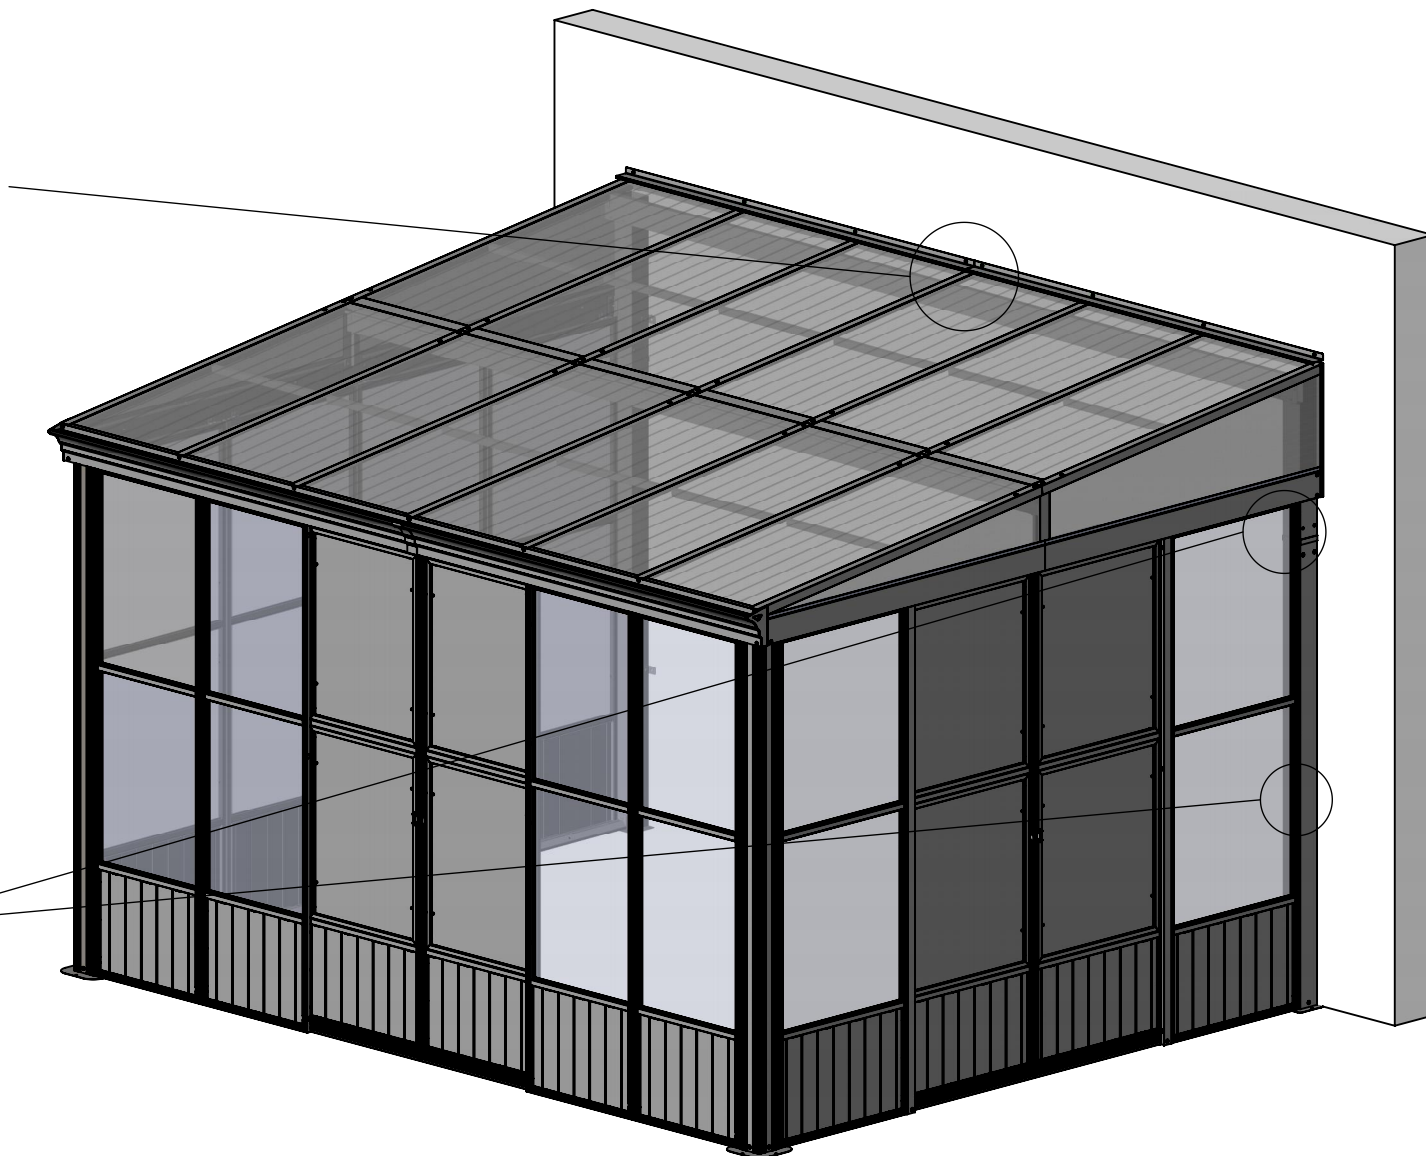

After completing the assembly, you can decide whether to install screens based on your needs.

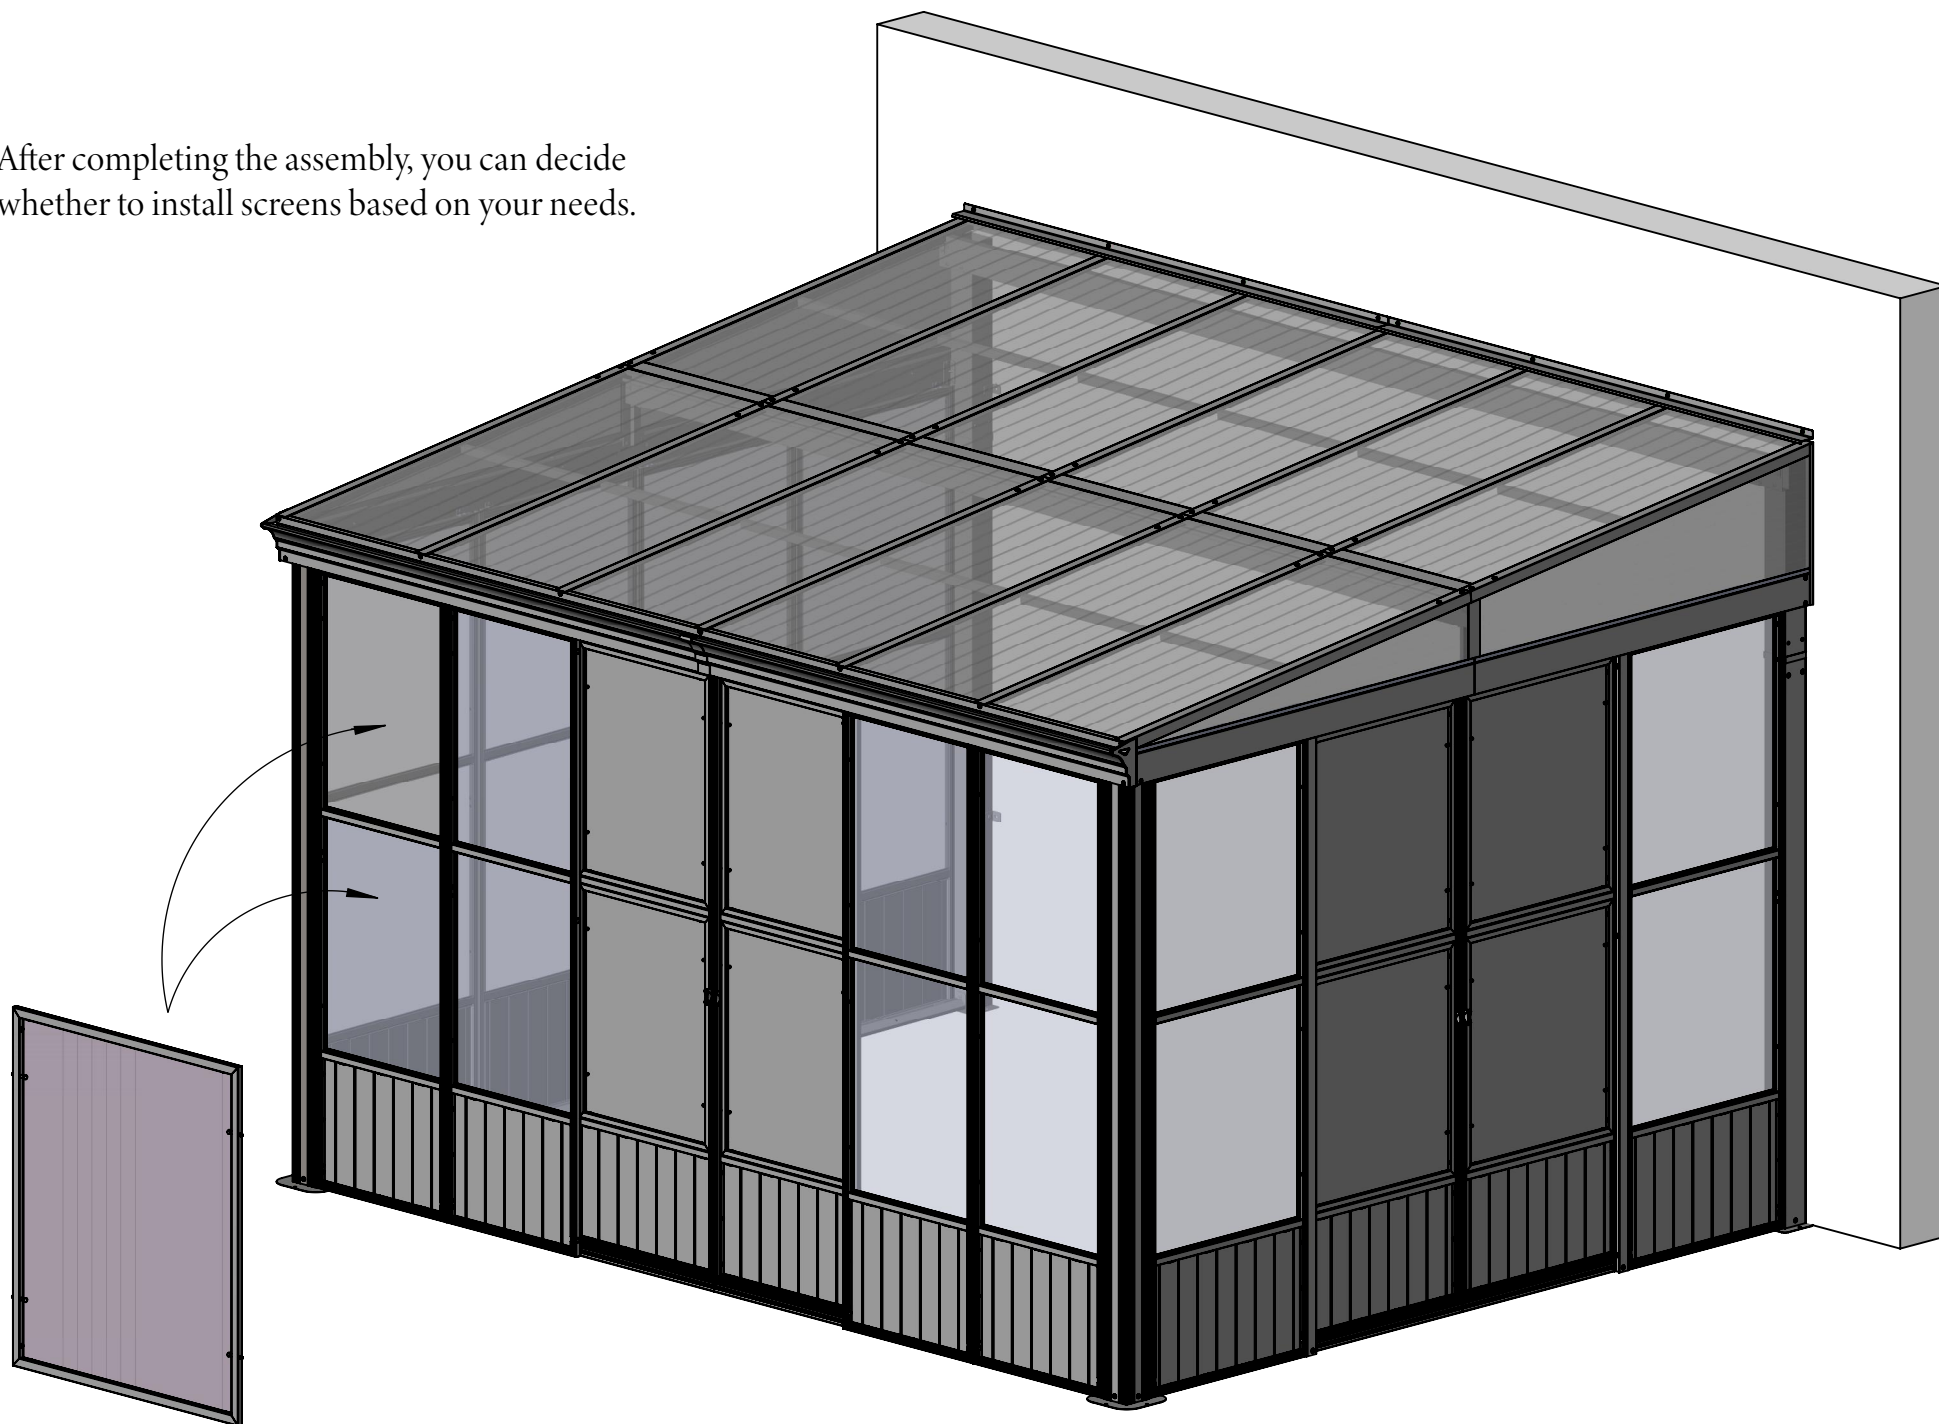

Care and Cleaning

Wash frame part with mild soap and water, rinse thoroughly.

Do not use bleach, or other solvents on the frame parts.

Please check periodically that the sunroom is anchored properly to the floor or ground to enjoy its safe usage.

Please check periodically that all screws are tight to maintain the solidity of the structure.

Please remove any snow accumulation at all times.

Warranty

Frames

Frames constructions are warranted to be free from defects in material and workmanship for 1 year from item purchased. Damage to frame from negligence won't be covered by this warranty.

Bolts & nuts

Bolts and nuts are warranted to be free from defects in material and workmanship for 1 year from item purchased. Damage from exposure to chemicals (including not only oils ,spills, fluids) won't be covered by this warranty.

Warranty Limitation

This warranty is for the original purchase order only. (Order number required). This warranty is non-transferable. Domi outdoor living is responsible for the free replacement part including shipping charges for the 1 year warranty.

Warranty Exclusion

This warranty does not cover products subject to negligence, abuse usage, inappropriate installation. Domi outdoor living reserves the right to explain warranty exclusions. When the replacement item is applied, the 1 year warranty automatically expires. Please feel free to contact us for applying warranty.



RESORT COMFORT IN YONR
OWN BACKYARD

Support:



Business cooperation contact email:

marketing@domioutdoorliving.com

After-sales contact email:

service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.