







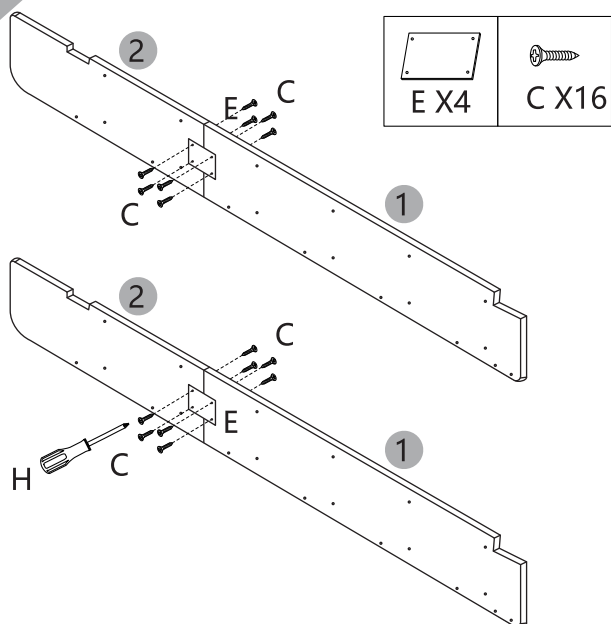


INSTALLATION MANUAL

After opening the package, sort out the accessories according to the accessory list, and then start the installation


			
A X2	B X2	C X18	D X40
			
E X4	F X2	G X1	H X1

S1




Step 1: First, using screws C and E, connect ① and ②


S3

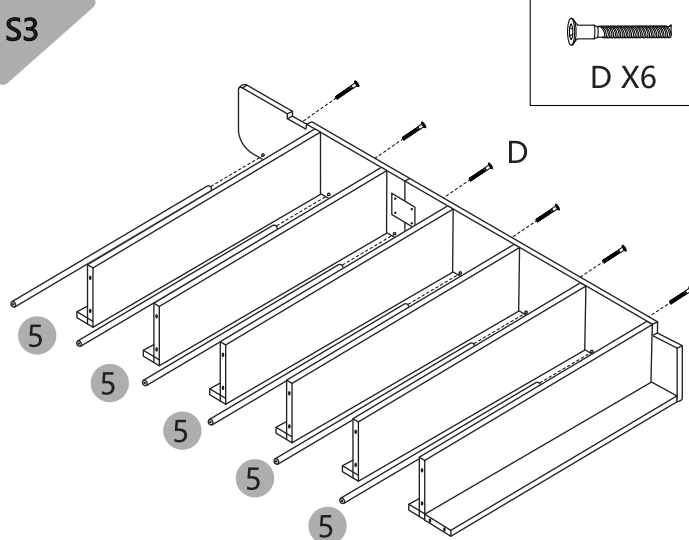

Step 3: Fasten wooden board ⑤ with screws D, tighten it

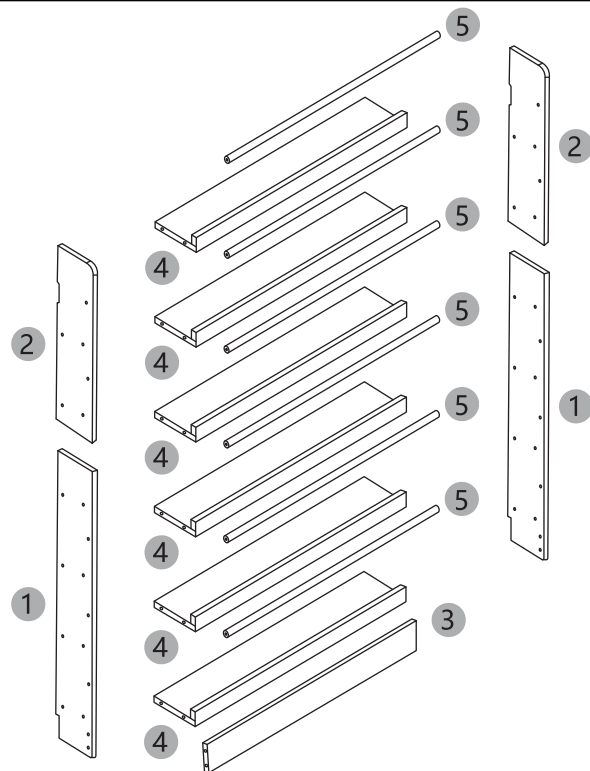


S2

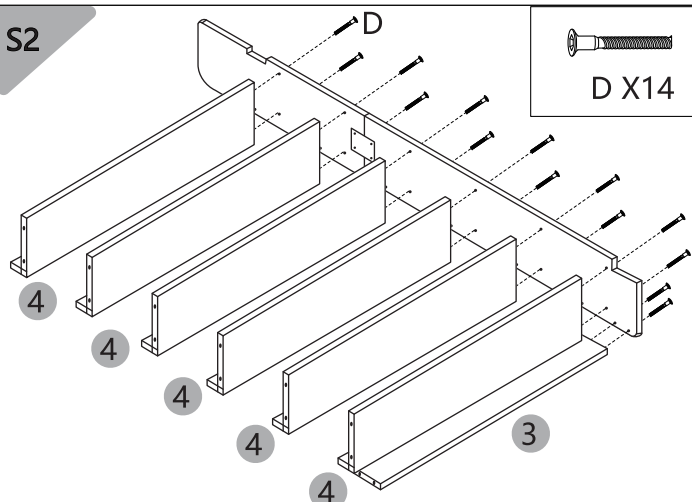


Step 2: After Step 1, One side of the wooden board, Fasten wooden board ④ with screws D, and then install the bottom skirting board ③

S4

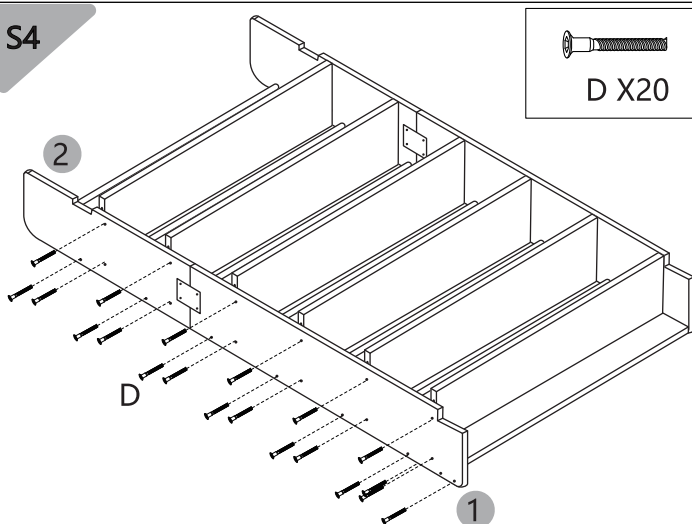


Step 4: Complete the installation of the other side of the wooden board with screws D

S5

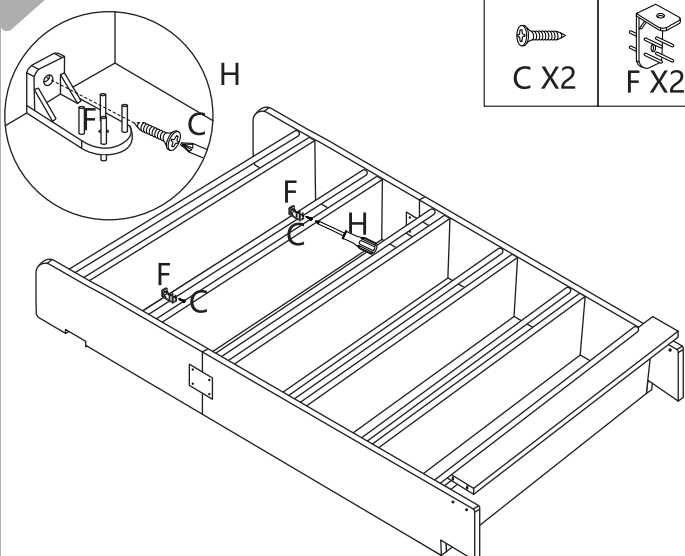


Step 5: Anti tipping device, can be installed with tools H, screws C, and F, with one side attached to the wall and the other side attached to the wooden board

S6

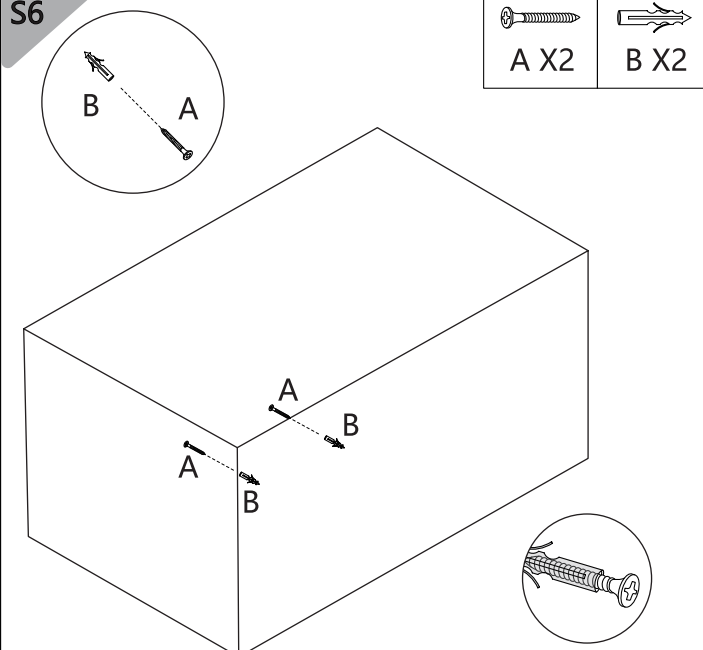


Step 6: Insert screw A into the expansion screw B

S7

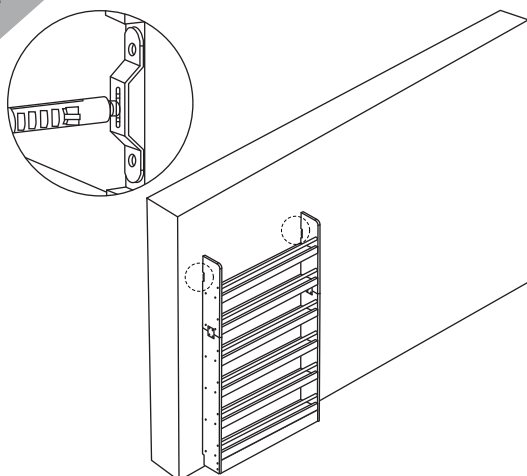


Step 7: Installation of fixed iron sheet on the back

S9

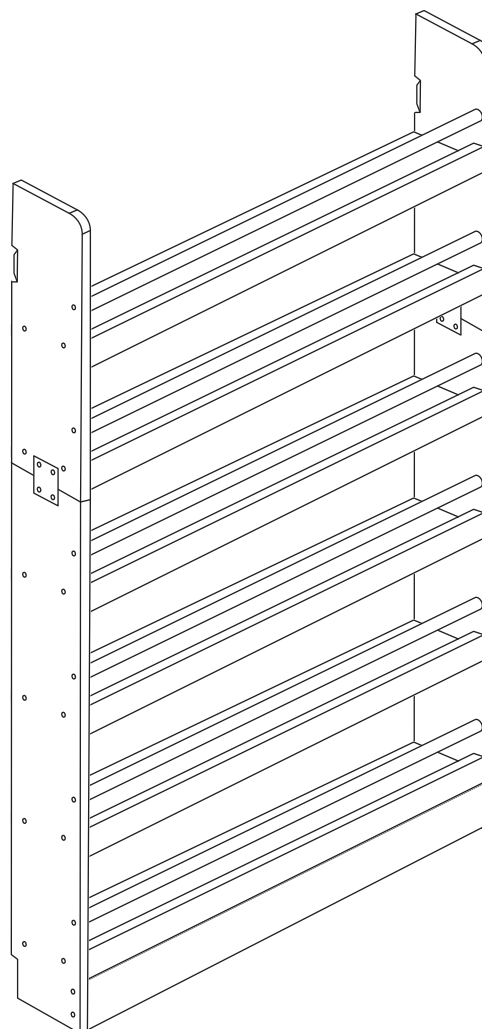

Step 9: Complete the installation

S8

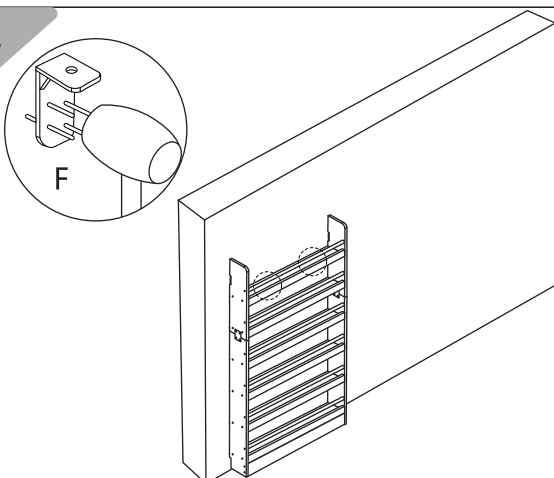

Step 8: Anti tipping device F can also be used under wooden boards, with the short part attached to the board and the long part attached to the wall for installation