



Installation Tools



Measure the distance between the hook's center holes.

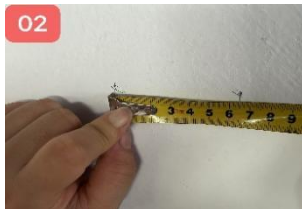

On a horizontal line connecting these two center points, mark the wall for drilling according to the measured distance.

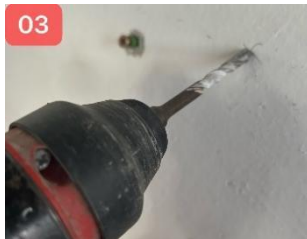

Use an impact drill to create holes at the marked center points on the wall, with a drilling depth of approximately 5cm.



Gently tap the expansion plastic plugs into the drilled holes.



Screw the provided screws into the expansion plugs, ensuring they protrude about 5mm from the wall.



Align the center point of the hooks with the protruding screws and hang them.