













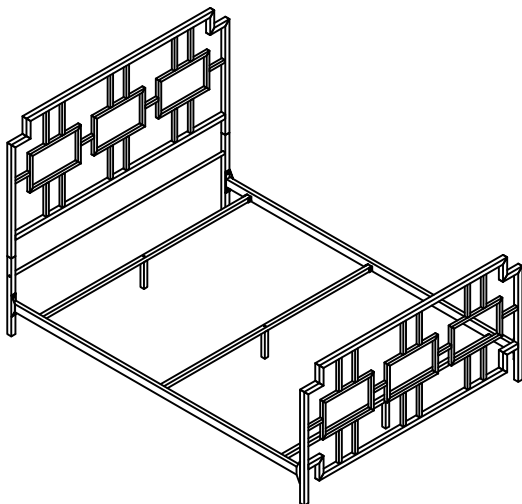


ASSEMBLY INSTRUCTION


METAL QUEEN BED

A Headboard  1pc	B Footboard  1pc	C Bar  1pc	D Side rail  2pcs
E Slats  3pcs	F Extension leg  2pcs	G Support leg  3pcs	H Bolt 1/4",51mm  2pcs
I Bolt 1/4",44mm  9pcs	J Bolt 1/4",19mm  8pcs	K Nut 1/4",25mm  6pcs	L Flat washer  25pcs
M Allen wrench 4x4mm  1pc	N Wrench 11.3mm  1pc		

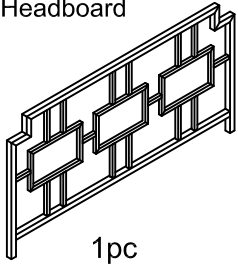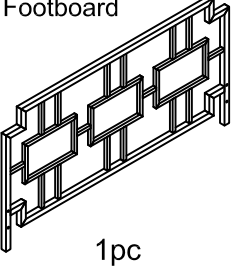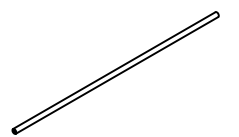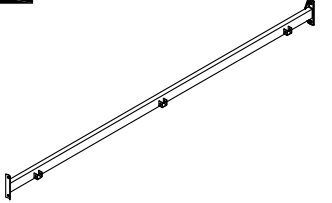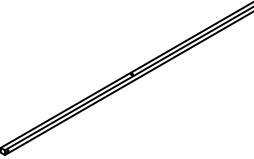


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1 Assemble the Headboard (A) to the extension leg (F).

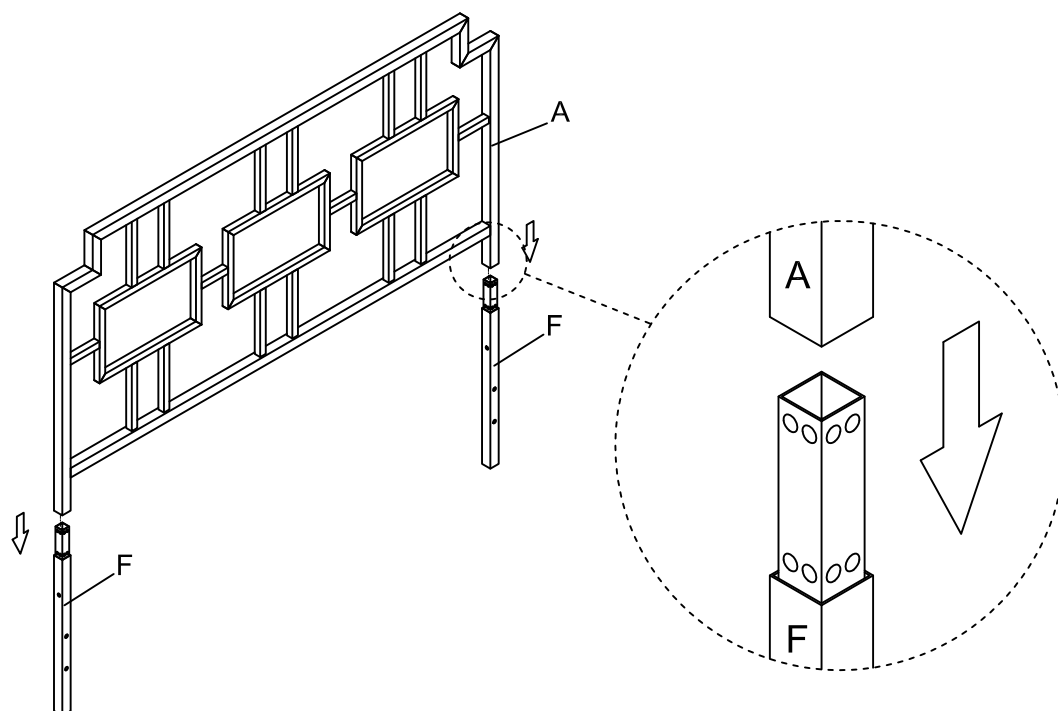


2 Assemble the bar (C) to the extension leg (F) with 2 pcs bolts (H), then fastened using allen wrench (M).

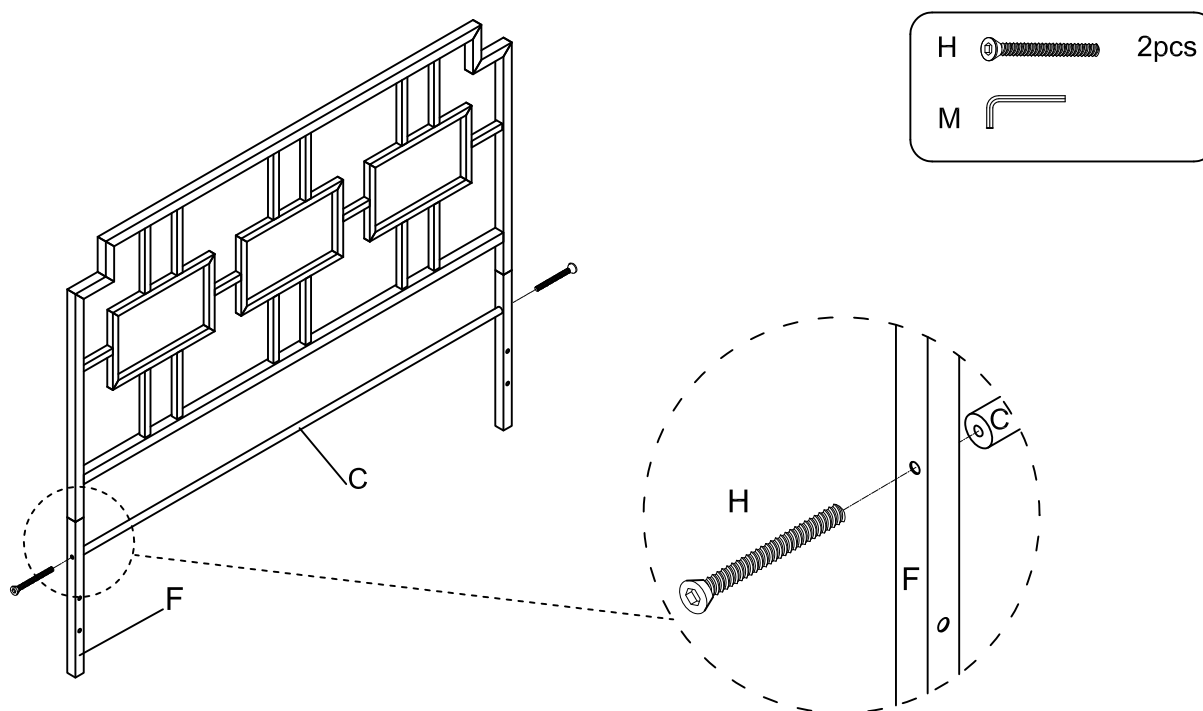


3

Assemble the side rail (D) to the extension leg (F) and the footboard (B) with 8 pcs bolts (J) and 8 pcs flat washer (L), then fastened using allen wrench (M).

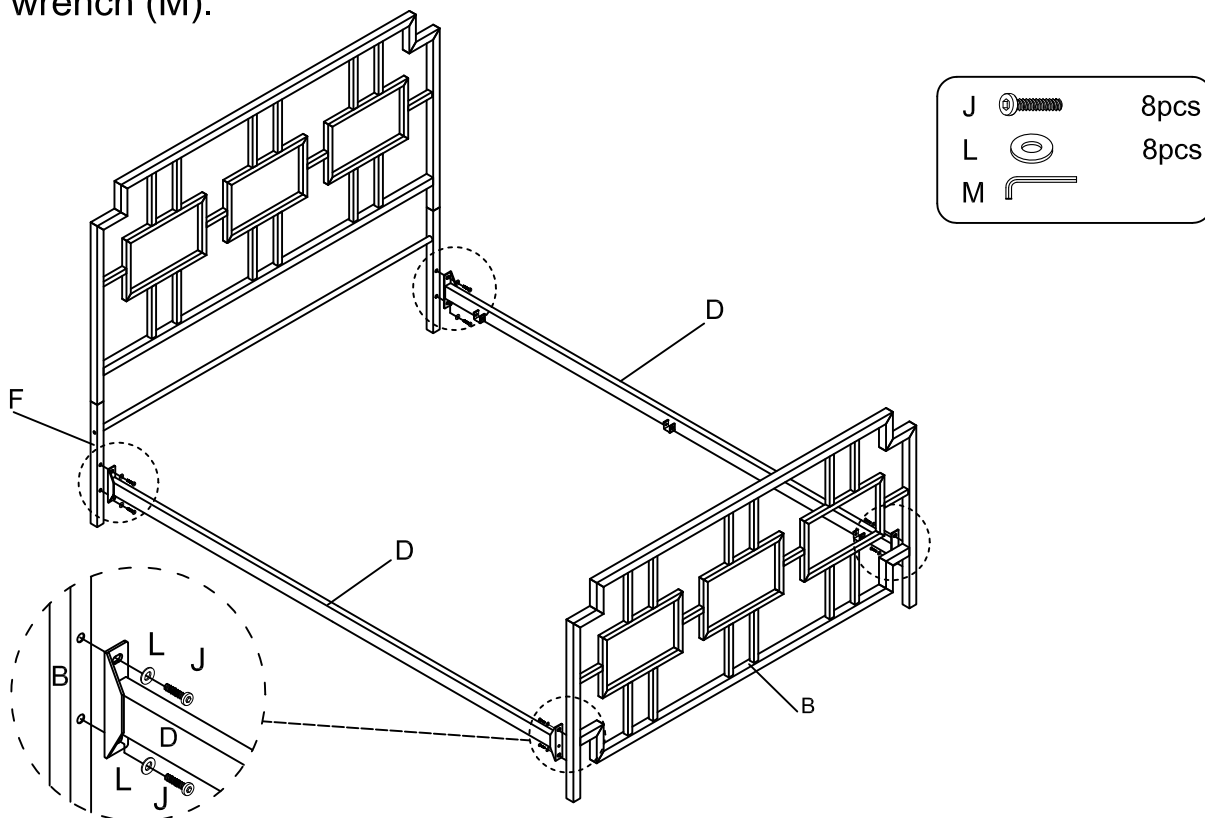


4

Assemble the slat (E) to the support leg (G) with 1pc bolt (I) and 1pc flat washer (L) for each support leg (G), then fastened using allen wrench (M).

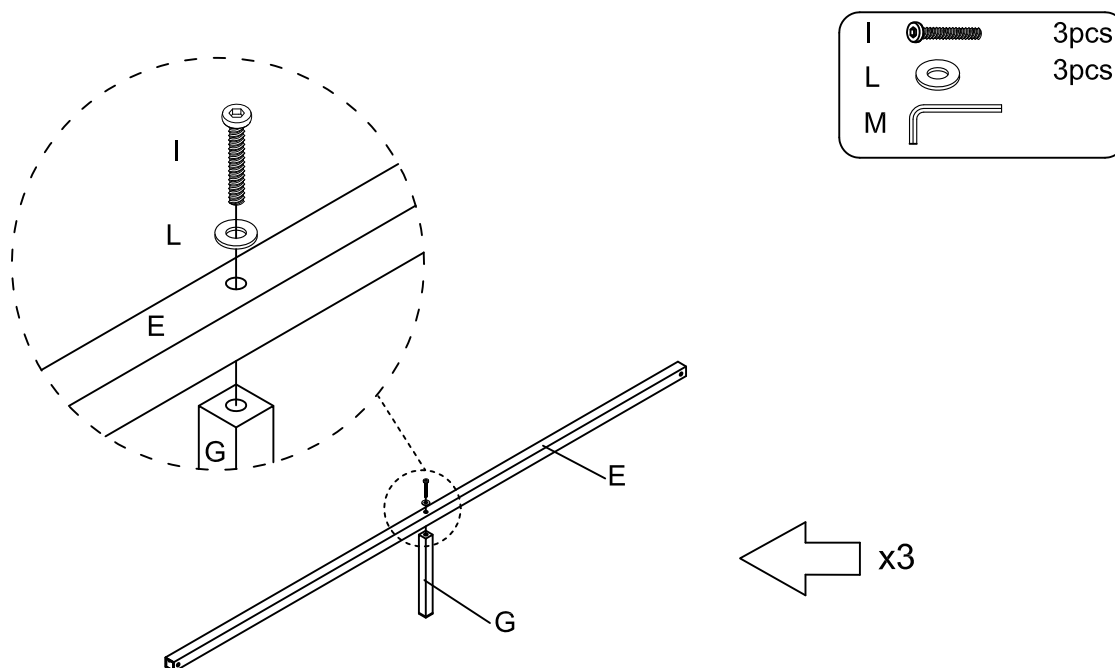

5

Assemble the slat (E) to the side rail (D) with 1 pc bolt (I), 1pc nut (K) and 2 pcs flat washer (L) for each end of slat (E), then fastened using allen wrench (M) and wrench (N).

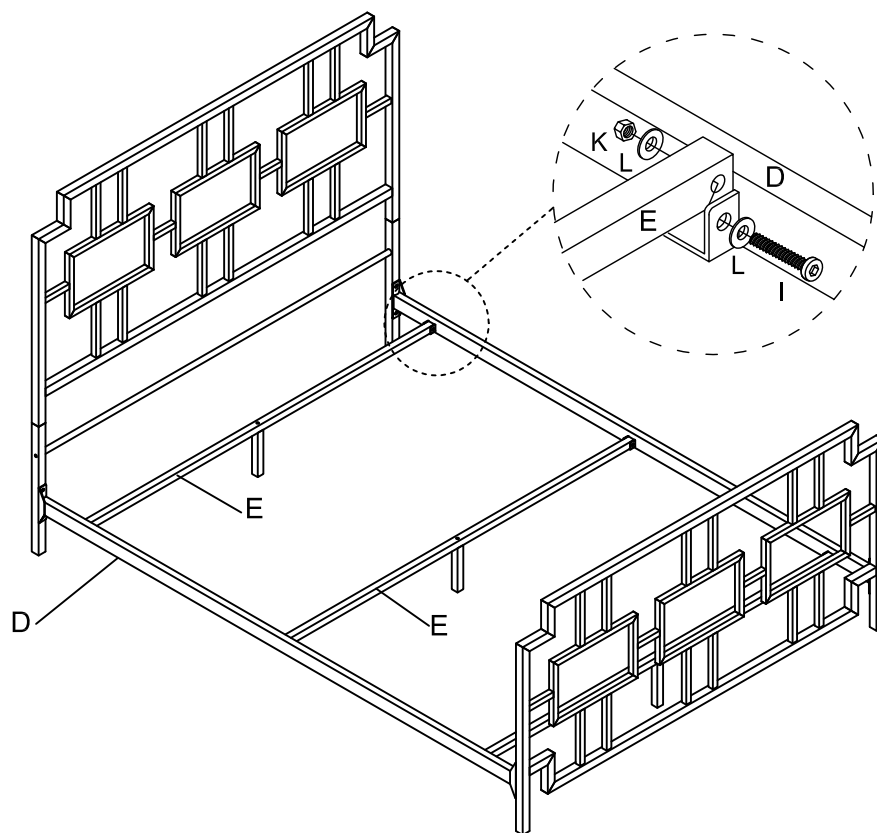

I		6pcs
K		6pcs
L		12pcs
M		
N		

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.