

THE
CREDENZA
ASSEMBLY INSTRUCTIONS



CONGRATS!
YOU'RE NOW THE OWNER OF A BEAUTIFUL PIECE OF ART.

CARE:

This is an heirloom piece of furniture that will bring joy for generations. Nurture your credenza by using coasters for any beverages needing a rest. Treat wood with any generic wood cleaner and polish using a non-abrasive rag for extra love.

SHOW IT OFF:

HARDWARE INCLUDED:




10 WOODEN DOWELS




16 SHORT SCREWS



8 LONG SCREWS

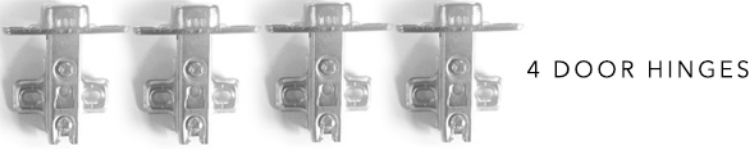

4 DOOR HINGES



4 SHELF PEGS

**PLEASE NOTE: EXTRAS MAY BE INCLUDED*

METAL LEGS ONLY:



4 METAL LEGS
(GOLD OR STEEL)



12 NUTS + WASHERS

1 WRENCH


TAPERED WOOD LEGS ONLY:




4 TAPERED WOOD LEGS



BOTTOM: PART A

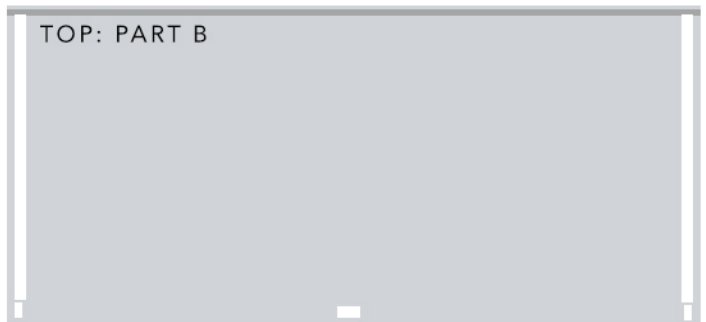

TOP: PART B

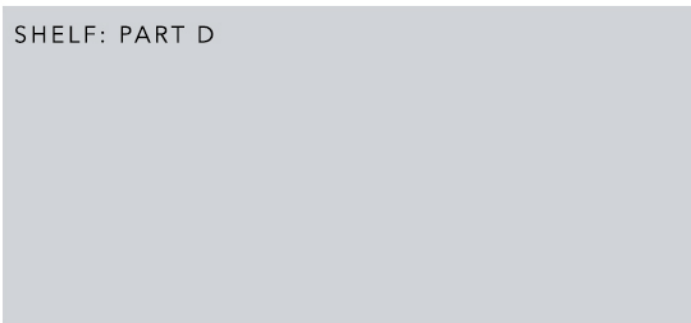


SHELF: PART D


DIVIDER: PART C



DOORS: PARTS E+F
(ART PRINTED ON ONE SIDE)

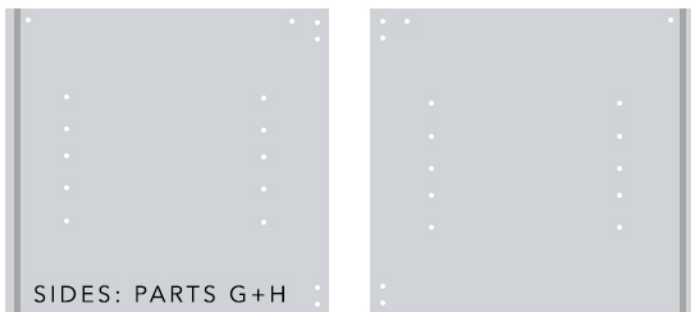


SIDES: PARTS G+H

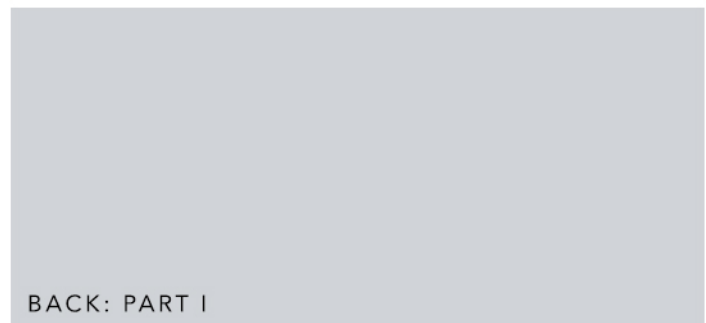

BACK: PART I

YOU WILL NEED:

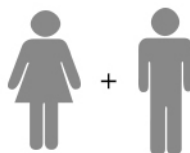

SCISSORS, PHILIPS HEAD SCREWDRIVER + A PARTNER IN CRIME FOR ASSEMBLY

STEP 1: UNPACK BOX ENSURE ALL CONTENTS ARE INCLUDED. MISSING ANYTHING?

STEP 2: SPREAD OUT ALL CONTENTS. KEEP WOODEN PIECES PROTECTED BY LAYING THEM ON CARDBOARD SHEETS INCLUDED.

STEP 3: FIND TOP PIECE (PART B) AND LAY FLAT ON TOP OF CARDBOARD WITH RAILS AND HOLES FACING UP.



STEP 4: TAKE THE BACK SIDE (PART I) OF CREDENZA AND SLIDE IT IN THE GROOVES ON BOTH SIDE WALLS AND PRESS FIRMLY INTO PLACE.

STEP 5: GRAB SIDES (PART G+ H) AND INSERT 2 DOWELS ON BOTTOM OF EACH SIDE. SECURE TIGHTLY IN HOLES ON PART B. DO NOT USE A HAMMER.



STEP 6: INSERT A DOWEL ON EACH END OF THE DIVIDER (PART C). SECURE IN FRONT OF TOP PIECE.



STEP 7: TAKE FOUR LONG SCREWS AND SECURE THEM WITH SCREWDRIVER IN THE FOUR CORNERS OF THE TOP PIECE AS SHOWN.

STEP 8: TAKE BOTTOM (PART A) AND SECURE TWO DOWELS ON EACH SIDE OF THE BOTTOM.




STEP 9: FLIP IT OVER AND SECURE ONTO SIDES AND BACK, FITTING THE GROOVE INTO BACKSIDE PIECE. LINE UP DOWELS AND FIT IN HOLES.

STEP 10: SECURE THE BOTTOM TO THE SIDES WITH FOUR LONG SCREWS (TWO ON EACH SIDE) USING A SCREWDRIVER. (SHOWN WITH ARROWS)




STEP 11 (METAL LEGS): LINE UP ALL 4 LEGS AND SECURE WITH 3 BOLTS AND 3 WASHERS PER LEG. TIGHTEN WITH WRENCH.

STEP 11 (WOOD LEGS): LINE UP METAL PEG TIP WITH SOCKET ON THE CREDENZA. TURN CLOCKWISE TO TIGHTEN.

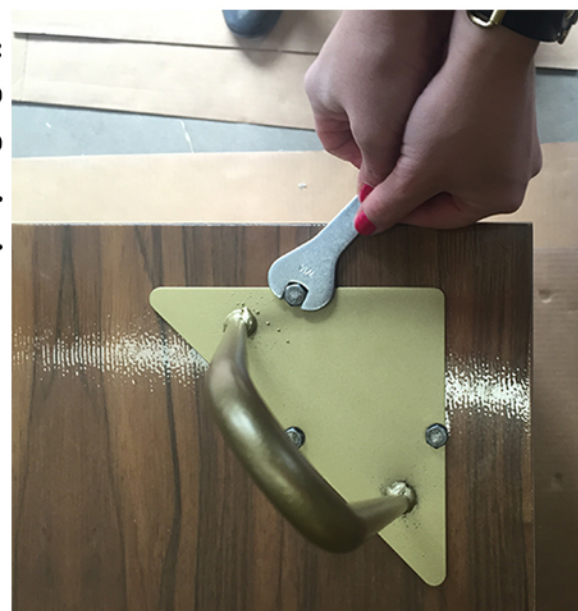

STEP 12: FLIP CREDENZA ON SIDE TO PREPARE FOR DOOR INSTALLATION. KEEP USING PROTECTIVE CARDBOARD.

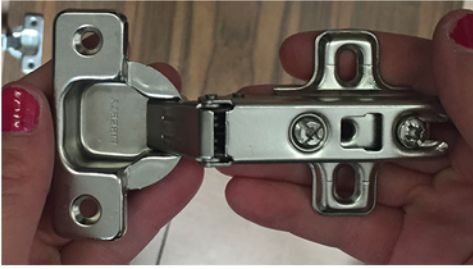

STEP 13: OPEN EACH OF THE 4 HINGES BY LIFTING THE LEFT SIDE OF THE HINGE FROM THE RIGHT.

STEP 14: INSERT HINGES IN THE CIRCLE HOLES LOCATED ON THE INSIDE OF EACH DOOR. LINE UP DOOR TO THE SIDE RESTING ON THE FLOOR.



STEP 15: USE THE SCREWDRIVER AND SHORT SCREWS TO SECURE. 4 SCREWS PER HINGE. PRESS DOWN TIGHTLY AS YOU SCREW. FLIP CREDENZA AND REPEAT WITH OTHER SIDE. FLIP CREDENZA RIGHT SIDE UP. IF DOORS DO NOT ALIGN, GENTLY ADJUST THE TOP HINGE BY LOOSENING TOP SCREW.

STEP 16: PLACE 4 SHELF PEGS INTO DESIRED SHELF LEVEL ON THE INSIDE OF THE CREDENZA.

STEP 17: GENTLY MANEUVER SHELF INTO CREDENZA AND LAY ON TOP OF PEGS.

STEP 18: CONGRATS! YOU MADE IT. YOU DESERVE A COCKTAIL.

SHOW IT OFF!