



Assembly Instructions

NO	PARTS LIST			QTY
A		Seat cushion	730x705x540mm	1pc
B		Underframe	660x530x285mm	1pc

NO	HARDWARE			QTY
C		Allen key	M5x30x80mm	1pc
D		Bolt	$\frac{1}{4}$ "x20mm	8pcs
E		Washer	$\frac{1}{4}$ "x19x1.2mm	8pcs
F		Spring washer	$\frac{1}{4}$ "x2mm	8pcs

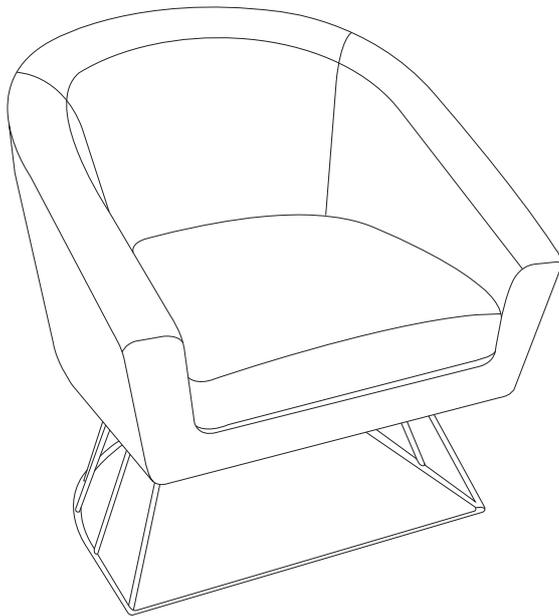

STEP : 1

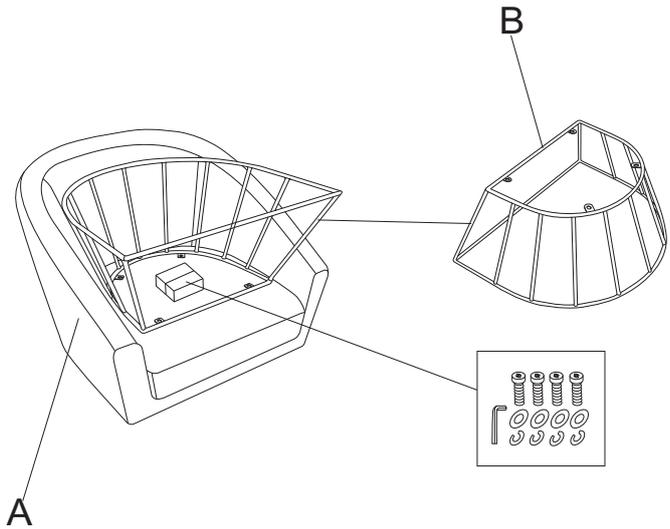

STEP : 2

