
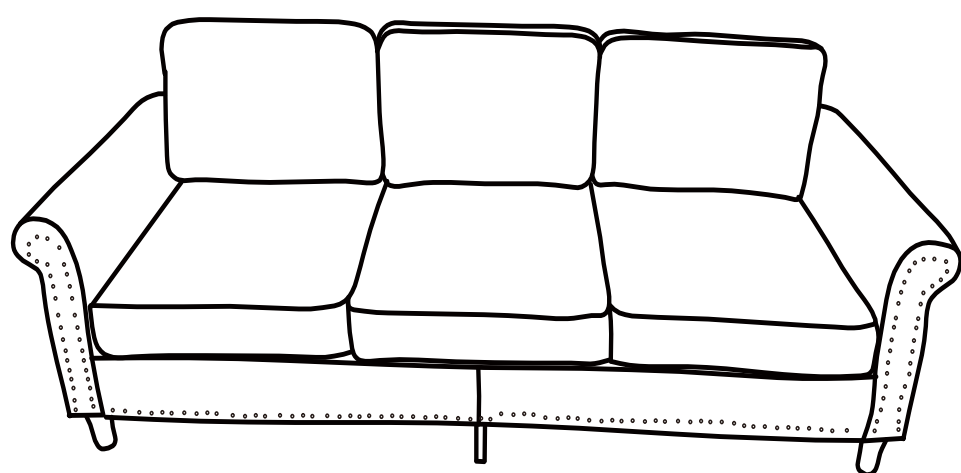






ASSEMBLY INSTRUCTION

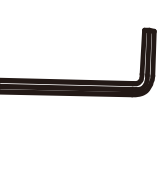


Part list

1  X1	2  X1	3  X2 (L+R)	4  X2 (L+R)
5  X3	6  X3	7-1  X1	7-2  X1
8-1  X1	8-2  X1	9  X2	10  X4
A  X4	B  X4	C  X4	D  X4
E  X1	F  M6*35MM X4	G  M6*20MM X4	H  X1
L  M6*20MM X2			


1 Place the handrails (1 and 2) as shown in the figure and screw in the bolts (A).

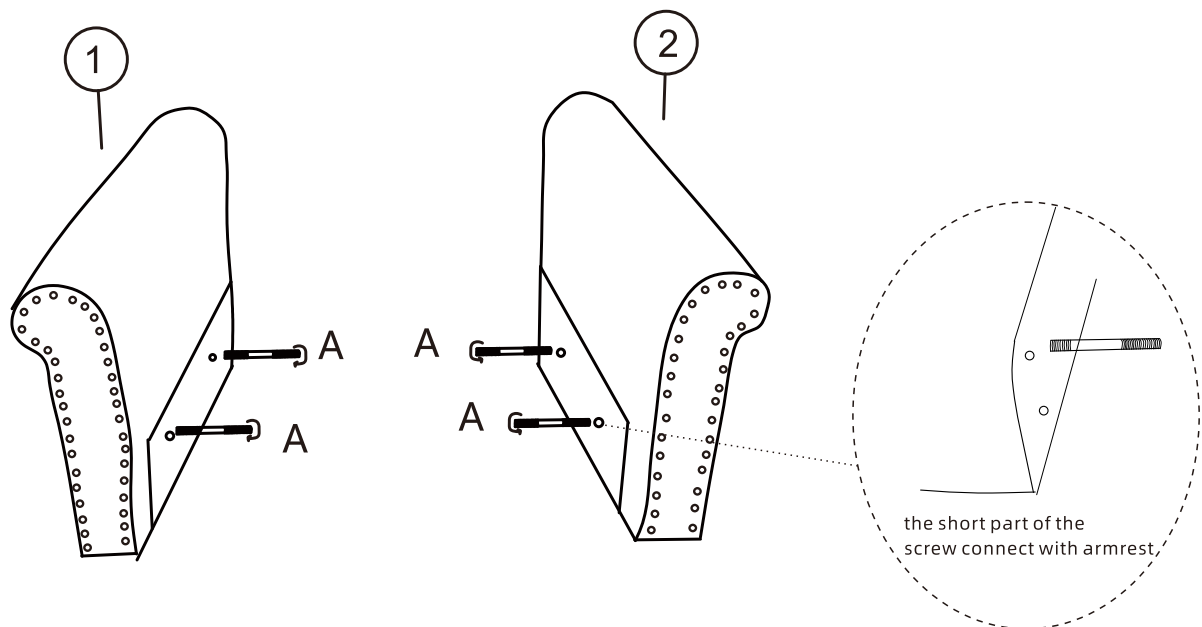


2 Place the seat cushion (4) as shown in the figure, use bolts (F) to fix the column (8-1) under 4, and use bolts (F and G) to fix the column (8-2) under the seat cushion (4).

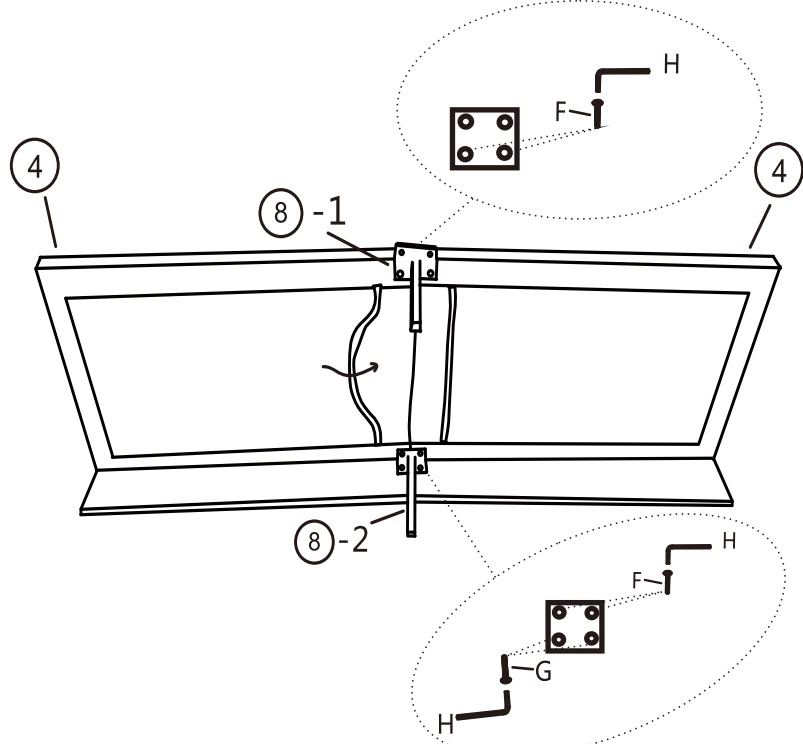


3 Use bolts (L) to secure the latch (7-1) at the position shown in the figure.

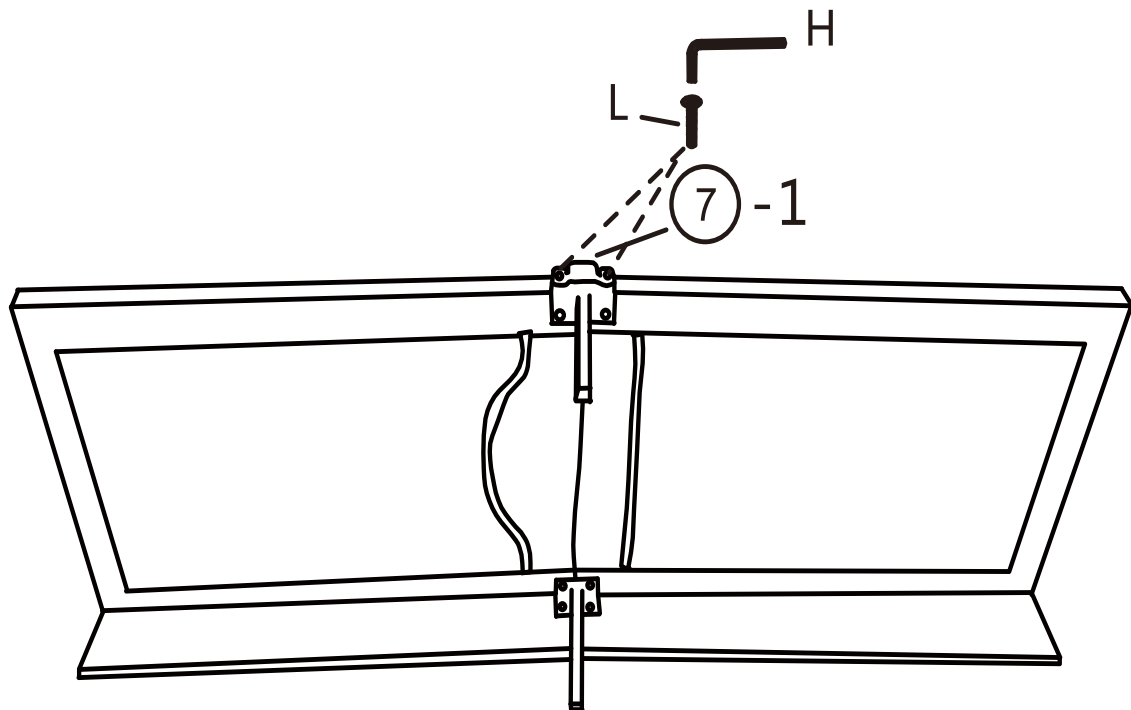


4 Use nuts (C) and washers (D) to secure the seat cushion (4) and armrest (1 and 2) through bolts (A).

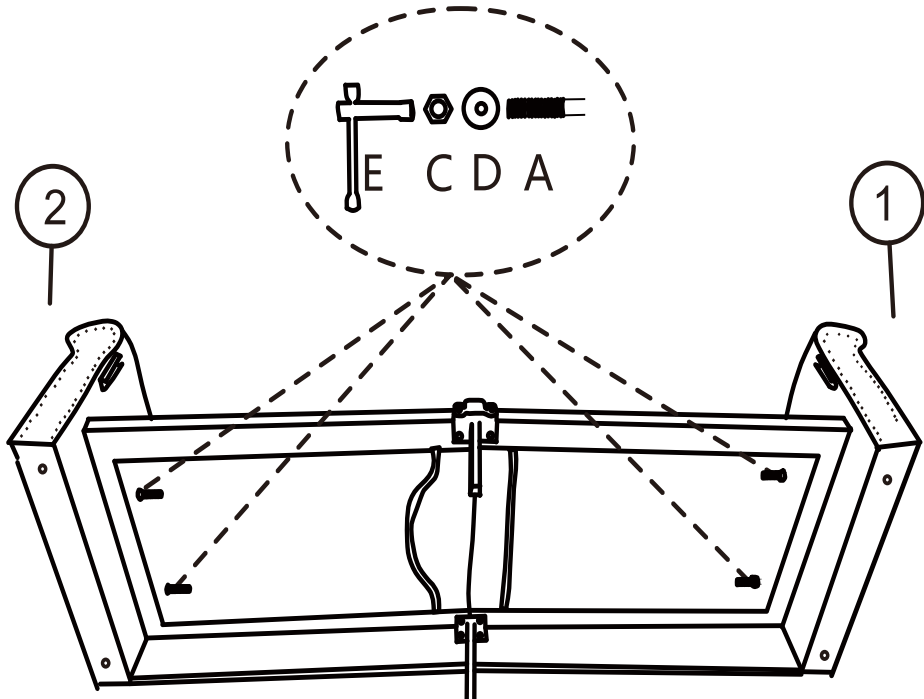


5 Fix the wooden legs (10) and washers (B) under the handrails (1 and 2).

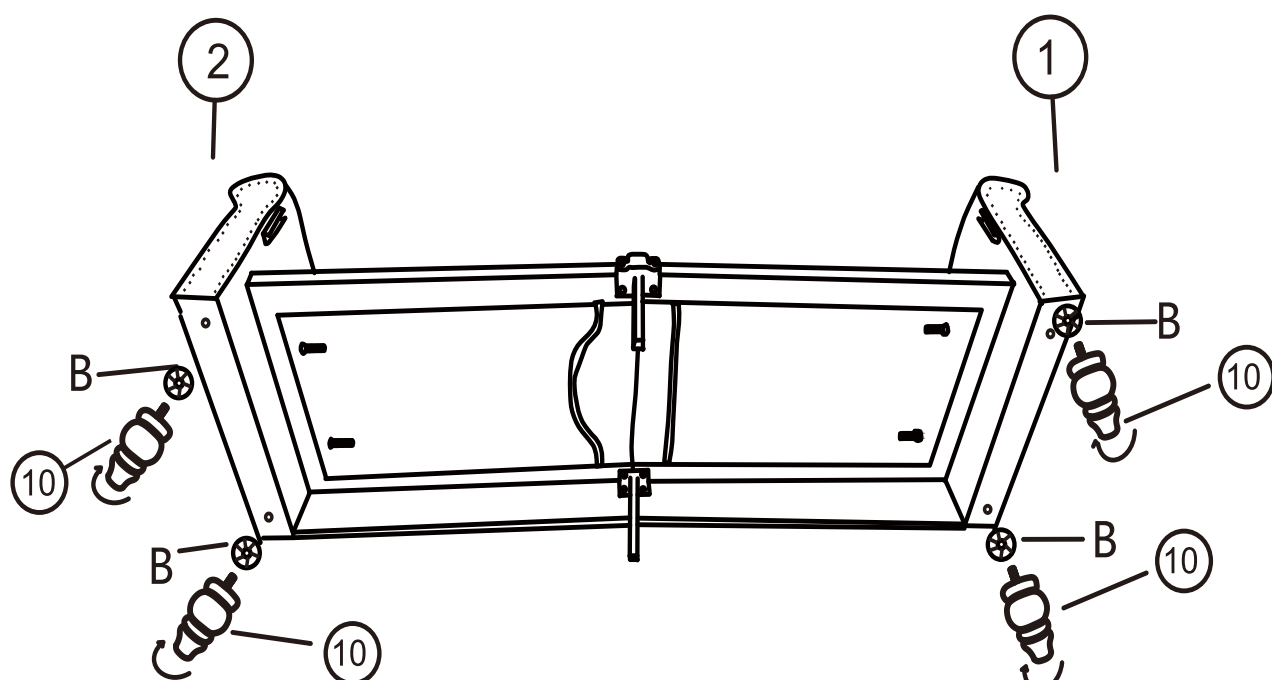


6 Connect the connecting tube (9) to the backrest (3).

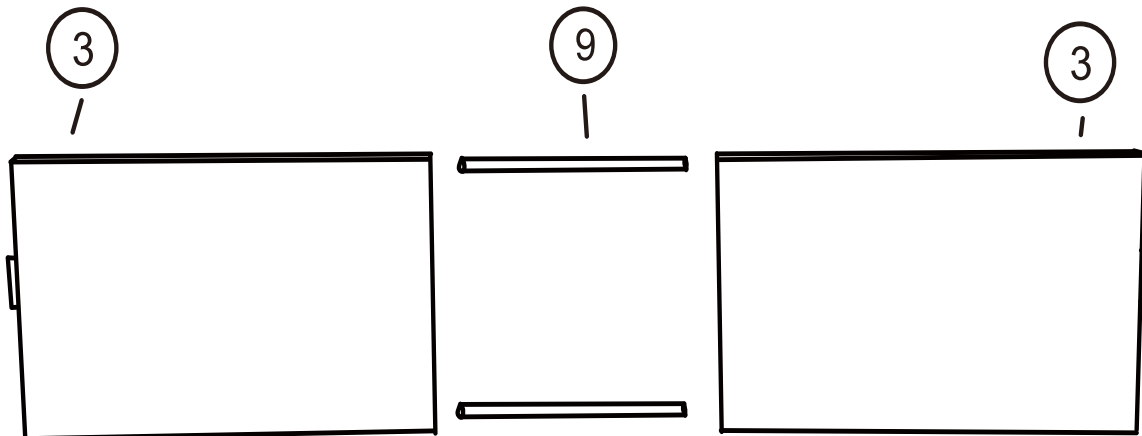


7 Use bolts (L) to secure the latch (7-2) to the backrest (3).

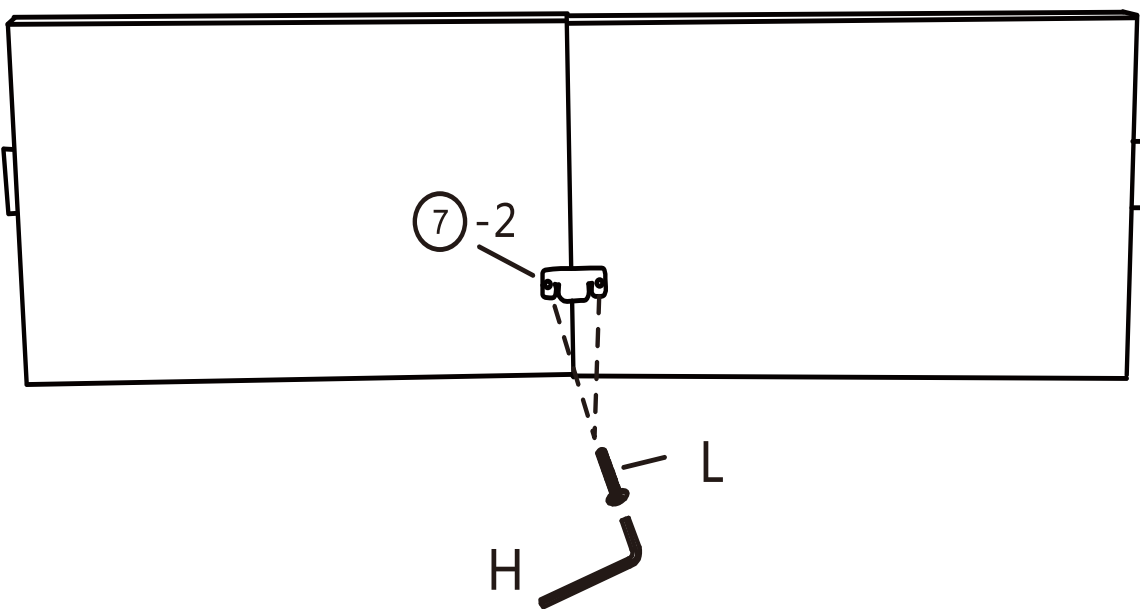


8 Insert the backrest (3) into the fixing buckle on the armrest of the sofa, fix the buckle as shown in the figure, and also fix the lock buckles (7-1 and 7-2) on the backrest and seat cushion as shown in the figure.

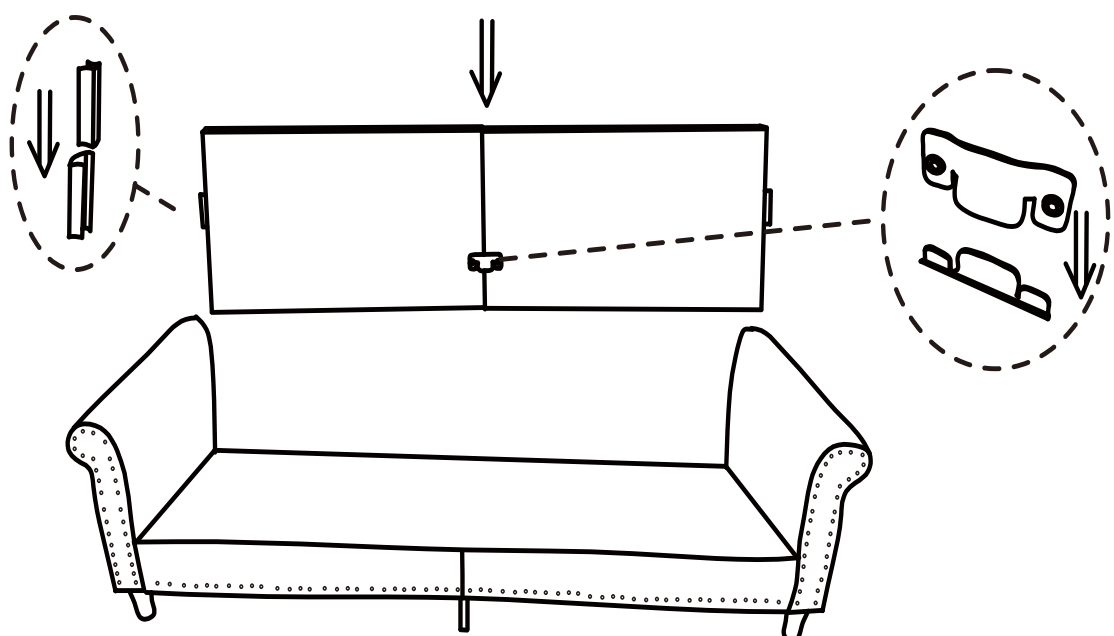

9 Place the seat cushion (5) and backrest (6) on the sofa.

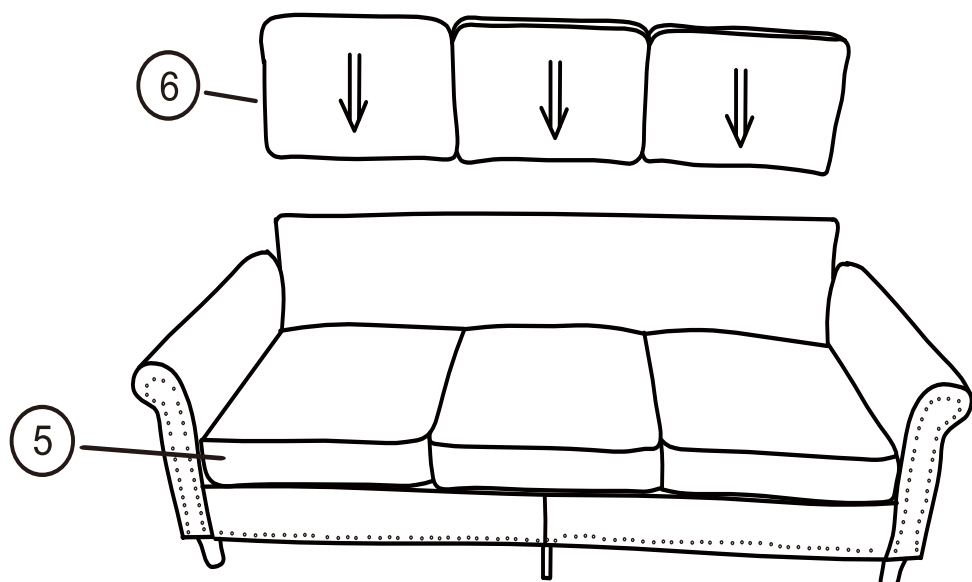

10

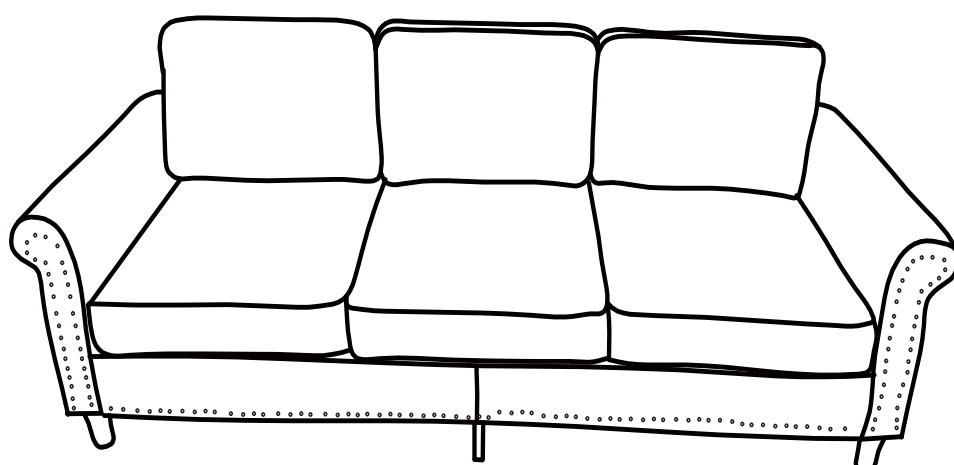

The cushion bag is filled with high rebound sponge, and after tearing off the compression film, it can return to its normal size within 48 hours. A hand tap can accelerate the rebound speed