






ASSEMBLY INSTRUCTION


NO.:DK-260889

A  ×1	B  ×1	C  ×1
D  ×2	①  M6*20mm x4	②  M6 x1

STEP 1

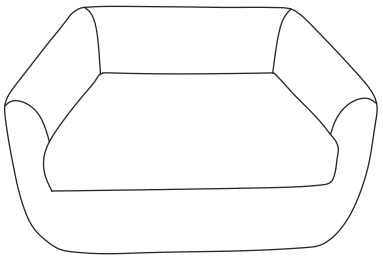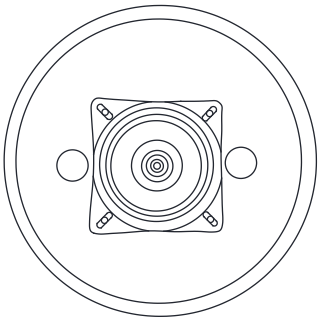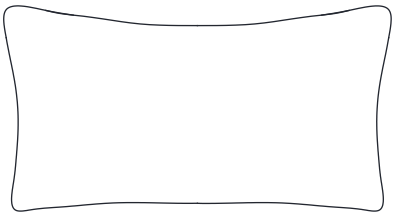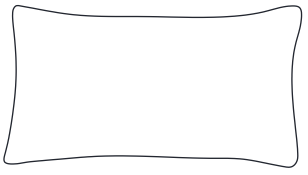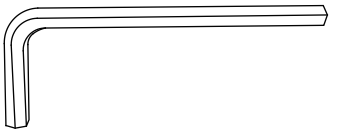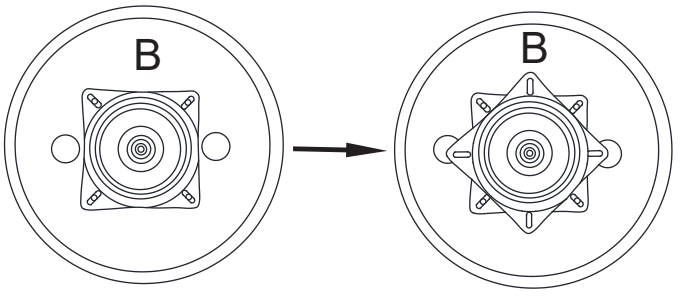


STEP 2

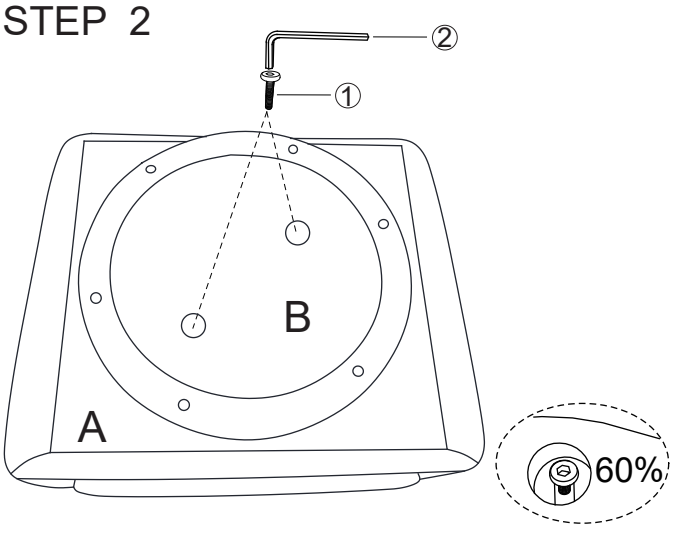


do not fully tighten

STEP 3

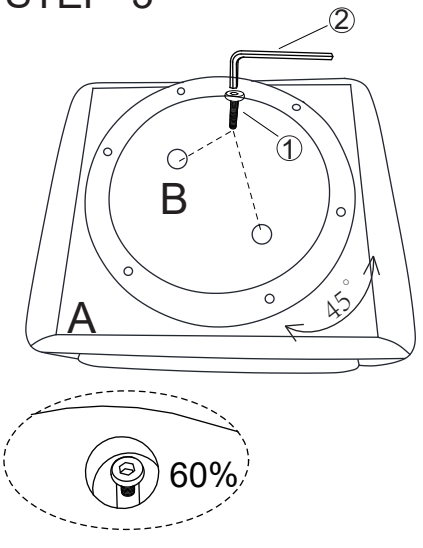

do not fully tighten

STEP 4

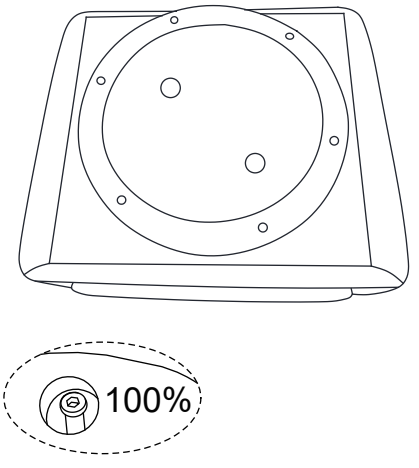

Tighten all the bolts which pre-attached on the step 2&3

STEP 5

