

# WB9202

## TALL & WIDE STORAGE CABINET

### ⚠ WARNING: ADULT ASSEMBLY REQUIRED

This product contains hardware that before assembled, can pose a choking hazard to children under the age of 3 years. Care should be taken when unpacking and assembly of this product.


### SAFETY NOTE

To prevent accidental tipping, we strongly recommend this product be anchored to the floor or wall. It is the consumer's responsibility to ensure this unit is installed according to all applicable regulations and used in a safe manner consistent with its intended purpose.

### PACKING LIST

| REF | QTY | DESCRIPTION                    |
|-----|-----|--------------------------------|
| 1   | 30  | CONFIRMAT SCREW 13MM x 50MM LG |
| 2   | 1   | 4MM HEX KEY ALLEN WRENCH       |
| 3   | 2   | HANDLE PULL BAR                |
| 4   | 8   | ADJUSTABLE SHELF PINS          |
| 5   | 20  | 8MM x 32MM DOWEL               |
| 6   | 4   | 8-32 x 1¼" LG PAN HEAD SCREW   |

### HARDWARE & TOOLS REQUIRED

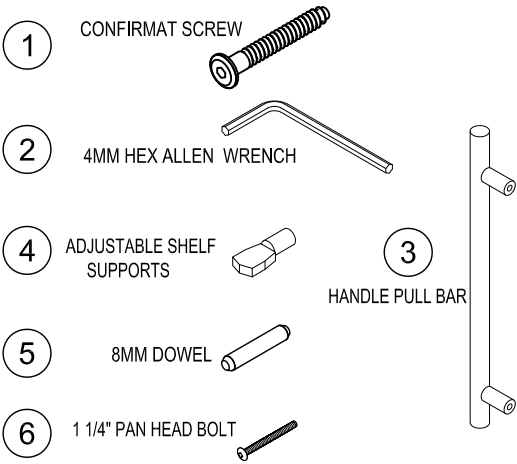

**WHITNEY BROTHERS**  
EDUCATIONAL FURNITURE FOR CHILDREN  
For assistance, please call us toll free  
1-(800)-225-5381  
[WWW.WHITNEYBROS.COM](http://WWW.WHITNEYBROS.COM)

### ASSEMBLE INSTRUCTIONS


1. READ ALL THE ASSEMBLY INSTRUCTIONS BEFORE STARTING TO ASSEMBLE THE ITEM.
2. OPEN THE HARDWARE PACK, SORT AND IDENTIFY THE DIFFERENT FASTENERS YOU WILL BE USING.
3. FOLLOW EACH STEP IN ORDER AND MAKE SURE ALL FASTENERS ARE TIGHTENED WHEN FINISHED.
4. DO NOT USE POWER DRIVERS. IT IS TOO EASY TO OVER TIGHTEN OR STRIP THE FASTENERS WITH POWER TOOLS!

### STEP 1

THE TOP, FIXED SHELF AND THE BOTTOM ARE ATTACHED TO THE SIDES USING DOWELS TO LINE UP THE PARTS AND THEN THEY ARE SECURED WITH 50MM CONFIRMAT SCREWS. LOOK AT THE DIAGRAM TO SEE WHICH HOLES ARE DOWEL HOLES.

START BY LINING UP THE TOP AS SHOWN IN THE DIAGRAM. THE GROOVE IN THE TOP LINES UP WITH THE GROOVE IN THE RIGHT SIDE (YOU ARE LOOKING AT THE BACK OF THE CABINET).


ATTACH THE TOP USING THREE CONFIRMAT SCREWS THROUGH THE SIDE. TIGHTEN SECURELY USING THE HEX ALLEN WRENCH. REPEAT THE SAME PROCESS FOR THE SHELF AND THE BOTTOM.

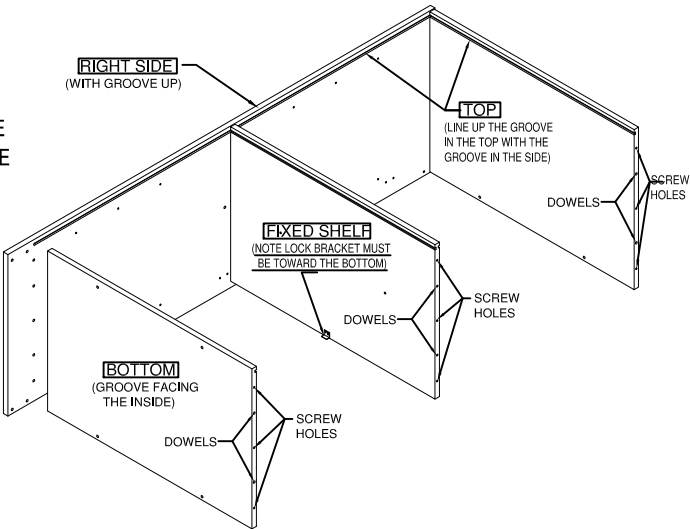

### STEP 2

ATTACH THE TOP FRONT STRETCHER AND FIXED SHELF SUPPORT AS SHOWN. THESE PARTS ARE THE SAME SO EITHER ONE FITS IN EITHER POSITION. GENTLY TAP TWO DOWELS IN THE LONG EDGE AND FIT THE STRETCHER INTO THE HOLES IN THE UNDERSIDE OF THE TOP. ATTACH WITH A CONFIRMAT SCREW THROUGH THE SIDE.


REPEAT THE SAME PROCESS FOR THE SHELF SUPPORT.

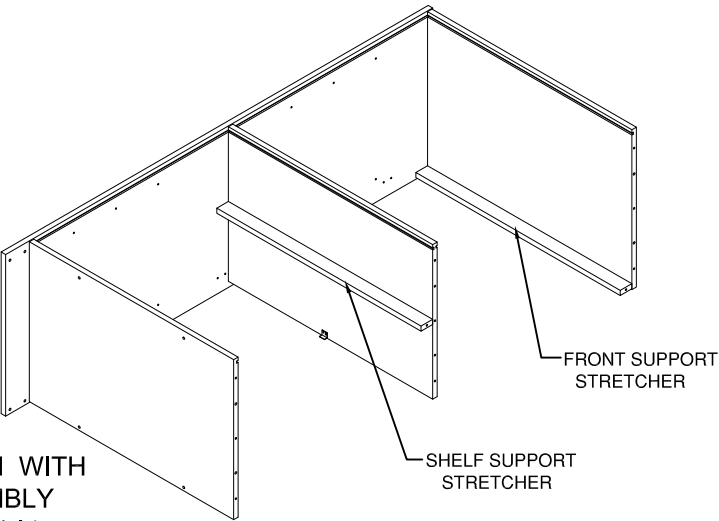

FOR ADDITIONAL INSTRUCTION WITH THESE STEPS SEE OUR ASSEMBLY VIDEO AT: [www.whitneybros.com/video](http://www.whitneybros.com/video)

### STEP 3


ATTACH THE KICKBOARDS AS SHOWN. GENTLY TAP TWO DOWELS IN THE LONG EDGE AND FIT THE KICKBOARDS INTO THE HOLES IN THE UNDERSIDE OF THE BOTTOM. ATTACH WITH TWO CONFIRMAT SCREWS EACH THROUGH THE SIDE. SLIDE THE TWO BACK SECTIONS INTO THE GROOVES AS SHOWN.

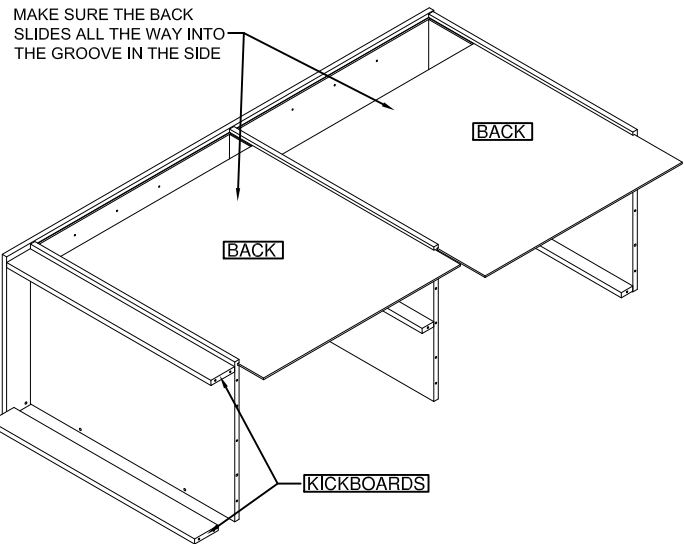

### STEP 4

GENTLY TAP DOWELS IN THE ENDS OF THE TOP, SHELF & THE BOTTOM. WITH THE HELP OF AN ASSISTANT, SLIDE THE LEFT SIDE INTO PLACE & LINE UP THE DOWELS WITH THE HOLES. TAKE CAUTION TO MAKE SURE THE BACKS ARE ENTERING THE GROOVE AND GENTLY TAP THE PANEL INTO PLACE. SECURE WITH CONFIRMAT SCREWS.

IF YOU HAVE DIFFICULTY LINING UP ALL THE PARTS, IT MAY BE EASIER TO ROLL THE CABINET ONTO THE RIGHT SIDE AND YOU WILL BE ABLE TO SEE WHICH PARTS NEED MOVING.

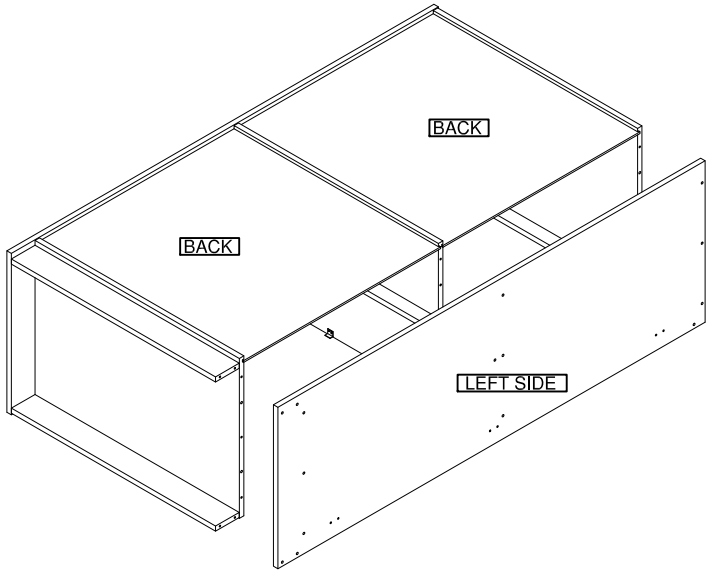

### STEP 5


WITH THE HELP OF AN ASSISTANT, STAND THE CABINET UPRIGHT. INSERT (8) ADJUSTABLE SHELF PINS TO THE DESIRED HEIGHT OF THE SHELVES. SLIDE IN AND PLACE SHELF ON PINS.

ATTACHING THE DOORS. THE RIGHT HAND DOOR HAS THE LOCK ASSEMBLY. UNFOLD THE HINGES SO THEY ARE FLAT. SLIDE THE HINGES ON TO THE HINGE PLATE ATTACHED TO THE SIDE. WHEN THE HINGE ENGAGES THE HOOK ON THE FRONT OF THE PLATE, PUSH DOWN ON THE END OF THE HINGE ARM TO SNAP IT INTO THE LOCKED ON POSITION.

THE HINGES ARE "SOFT CLOSING" AND DO NOT ALLOW THE DOORS TO SLAM SHUT. START TO CLOSE THE DOOR AND LET THE HINGE COMPLETE THE CLOSING CYCLE.

FORCING THE DOOR TO CLOSE COULD LOOSEN THE SCREWS THAT ATTACH THE HINGES.


IF YOU DO NOT LIKE THE SELF CLOSE FEATURE IT CAN BE SHUT OFF BY SLIDING A BUTTON ON EACH HINGE CUP.

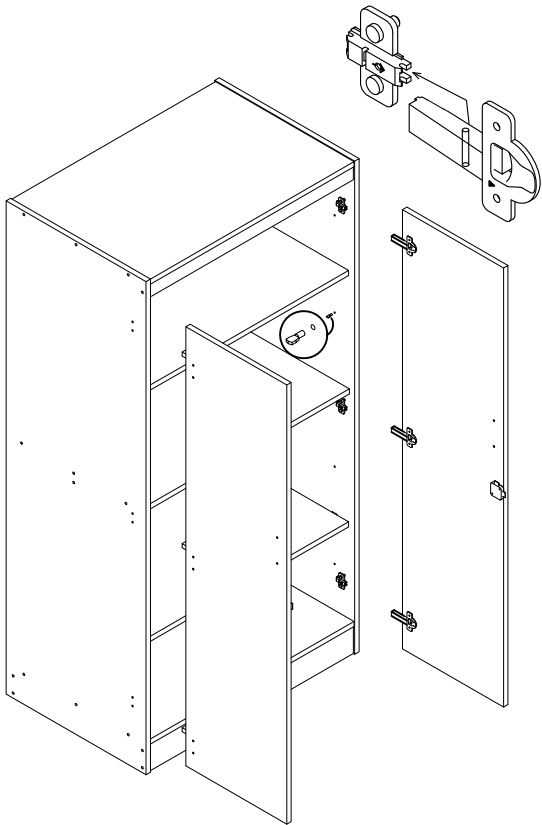

### STEP 6

ATTACH THE DOOR HANDLES USING THE 1¼" BOLTS. MAKE SURE THE BOLT THREADS ENGAGE THE HANDLE THREADS SMOOTHLY AND THEN TIGHTEN THE BOLTS.

**NOTE:** MAKE SURE CABINET IS SITTING SQUARE AND ON LEVEL GROUND. USE THE HINGE INSTRUCTIONS BELOW TO FINE TUNE THE GAPS AROUND YOUR DOORS.

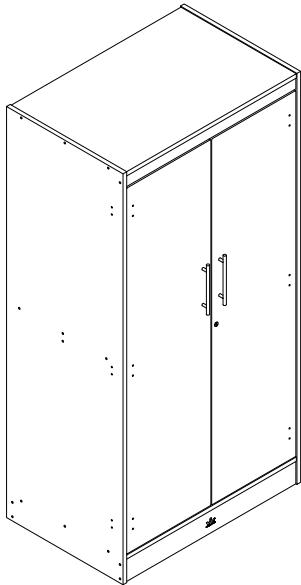

IF THE DOOR ALIGNMENT NEEDS CHANGING **MAKE SMALL ADJUSTMENTS TO EACH HINGE** INSTEAD OF TRYING TO MAKE ALL THE ADJUSTMENTS ON ONE.

ADJUST THE REAR SCREW TO MOVE THE DOOR IN OR OUT. TO MAKE THE FACE OF DOUBLE DOOR CABINETS EVEN.

ADJUST THE FRONT SCREW TO MOVE THE DOOR LEFT OR RIGHT TO ALIGN WITH THE EDGE OF THE CABINET

FOR SMALL OR LIGHT DOORS THE SOFT CLOSE ACTION CAN BE TURNED OFF ON ONE HINGE TO MAKE THE DOOR CLOSE FASTER. SLIDE THE GRAY SWITCH FORWARD. THE DOOR MUST BE CLOSED ONCE FOR THE DEACTIVATION TO BE COMPLETE. TO TURN THE SOFT CLOSE BACK ON SIMPLY SLIDE THE SWITCH BACK.