

PENDANT LIGHT (ROD)

Assembly Instructions

MODEL#: PND-2125



CAUTION

- Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation.

- Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning of the circuit breaker or by removing the fuse at the fuse box.

TOOLS REQUIRED



Ladder



Safety glasses



Electrical tape



Phillips screwdriver




Flat blade screwdriver




Pliers




Wire strippers

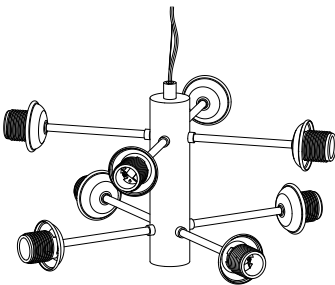


Fixture

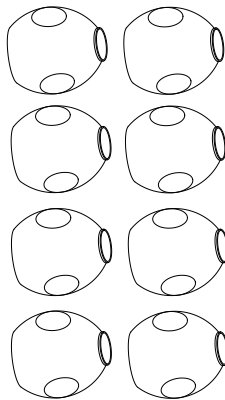

Glass shades




Long Rods



Short Rods



Iron rings

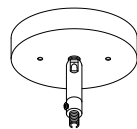

Canopy



Mounting Screws



Bolt Nut



Mounting Screws



Wire Nuts

*PARTS SHOWN MAY DIFFER SLIGHTLY PER LIGHT FIXTURE

PENDANT LIGHT (ROD)

Assembly Instructions


MODEL#: PND-2125

STEP 1

Screw the rods to the fixture. Make sure to feed the branchwires of the fixture through the rods during assembly. Remove or add rods to adjust the height.

Remove Iron ring from lamp body, Install the glass shade, use the Iron ring to secure the glass shade on the lamp body, Other lampshades refer to the same method.

Please do not lock the iron ring too tight to avoid glass crack when assembling glass.

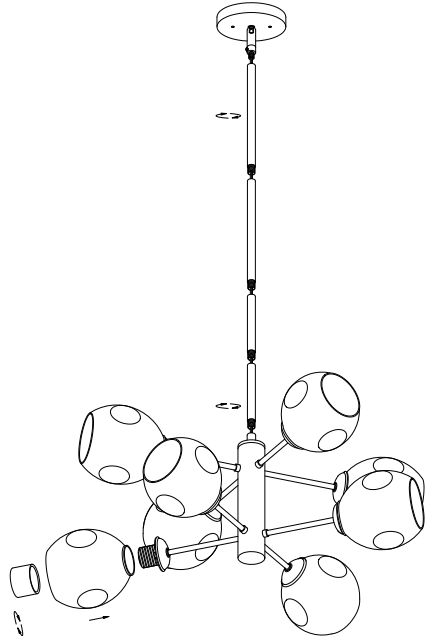

STEP 3


Make the electrical connection from the junction box to the fixture. Connect the ground wire to the mounting unit using the preinstalled green ground screw. Then, connect the positive, negative and ground wires with the supplied wire nuts. Secure with electrical tape

Connect Clear, Brown, Gold or Black Parallel Wire without tracer (round & smooth) or Black Fixture Wire to:

Black or Red Supply Wire or Insulated Wire (other than green) with copper conductor.


Connect Clear, Brown, Gold or Black Parallel Wire with tracer (square & ridged) or White Fixture Wire to:

White Supply Wire or Insulated Wire (other than green) with silver conductor




STEP 2

Use the mounting screws to attach the mounting unit to the junction box

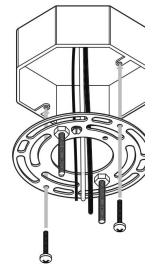

STEP 4

Place the canopy over the mounting unit and secure the fixture with the cap nuts.

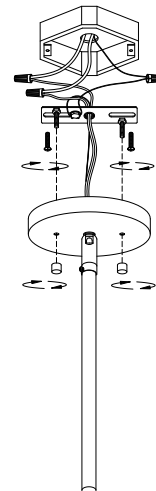

STEP 5

Install bulb (not included). E26 TYPE A 60 Watt or less watt.

