


Installation Instructions

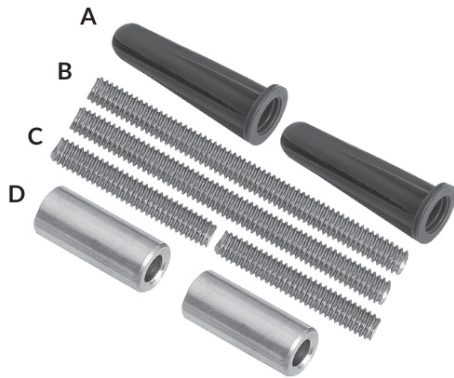


Parts Included

- A. (2) anchors
- B. (2) long threaded rods
- C. (2) short threaded rods
- D. (2) spacers
- E. Letters or numbers ordered (not pictured)


Tools Required

- + Drill with appropriate drill bit
- + Tape
- + Templates ([print from website at: montaguemetal.com/templates/](http://montaguemetal.com/templates/))
- + Level

Vertical mount



Horizontal mount

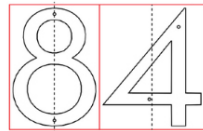

Printing Tip:

To print the correct number/letter template, print the image using "Letter (8.5 x 11 in)" paper size and look for an option "Scale" set it to 100% and click the "Print" button to create your output.

Step 1.

Space your numbers or letters using the red box on the downloaded templates. Once the red edges are lined up you will have 1/2" of spacing in between each number or letter. Use tape to secure house number templates together.

Step 3.

For a floating number/letter appearance, slide spacers over the threaded rod in the back. For a flat mount, omit spacers. Optional: Apply a thin layer of epoxy or other adhesive to the end of the exposed studs before mounting.

Step 2.

Tape template at desired location. Use a level to align template. Drill holes according to template. Drill hole size should be 1/4" if using masonry anchors. 3/16" if you are not using masonry anchors.

Step 4.

Firmly press the house number or letter rods into the previously drilled holes. Note: Gently tapping with a hammer over a piece of wood may be necessary to fully seat the number.

5387

