











# Installation Diagram of Three Doors and Six Floors for Shoe Cabinet

							
3CM flat head thick screw	Handle	Handle screw	Door plate buckle	3CM flat head thin screw	Adjusting foot	Magnet	Fastener
A*16	B*3	C*3	D*36	E*12	F*4	G*6	H*12

**Tips:** When installing, tighten the screws seven times, and then tighten them after all!

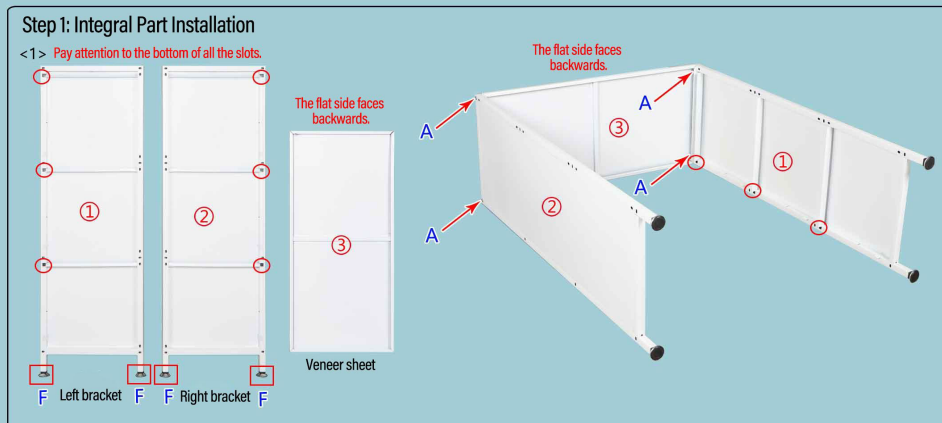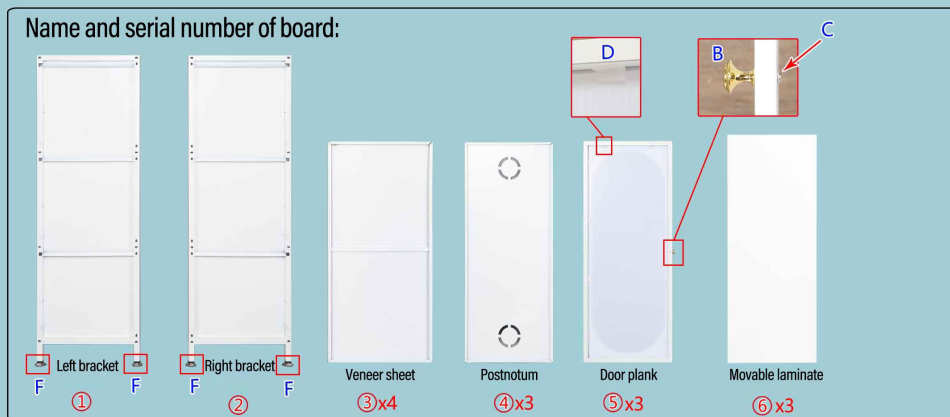


<2>

The flat side faces down.



Back plate  
(three pieces in total)

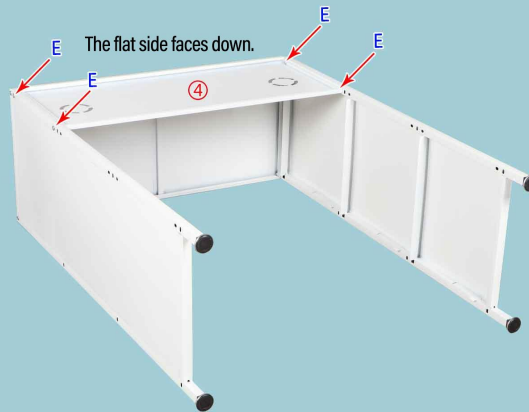


<3>

The flat side faces backwards.



veneer sheet  
(four pieces in total)

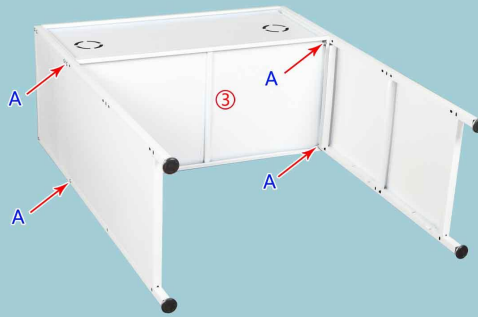

<4>

The flat side faces backwards.




veneer sheet  
(four pieces in total)

The flat side faces down.



Back plate  
(three pieces in total)

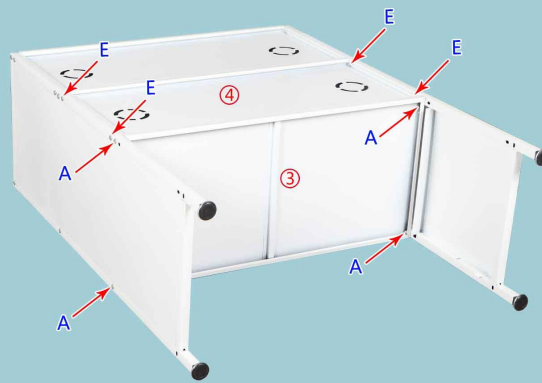

<5>

The flat side faces backwards.




veneer sheet  
(four pieces in total)

The flat side faces down.




Back plate  
(three pieces in total)

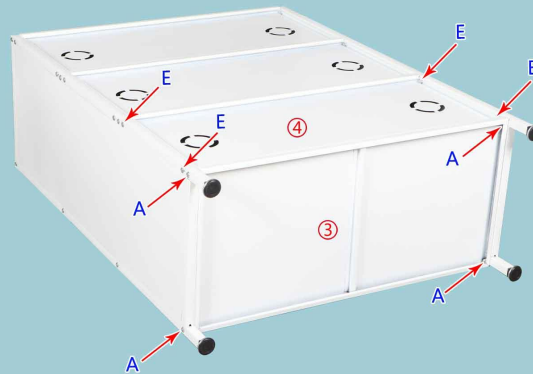

<6> Overall alignment

The flat side faces up.

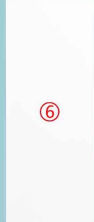

Movable laminate (3 pieces in total)



<7>



door plank  
(three pieces in total)



1: Insert the spring pin into the groove.



2: Press the spring pin on the other side of the door panel into the slot and push it into the door panel.

<8>



Complete the map!