


3-Seater Sofa **Assembly Manual** **S7039**

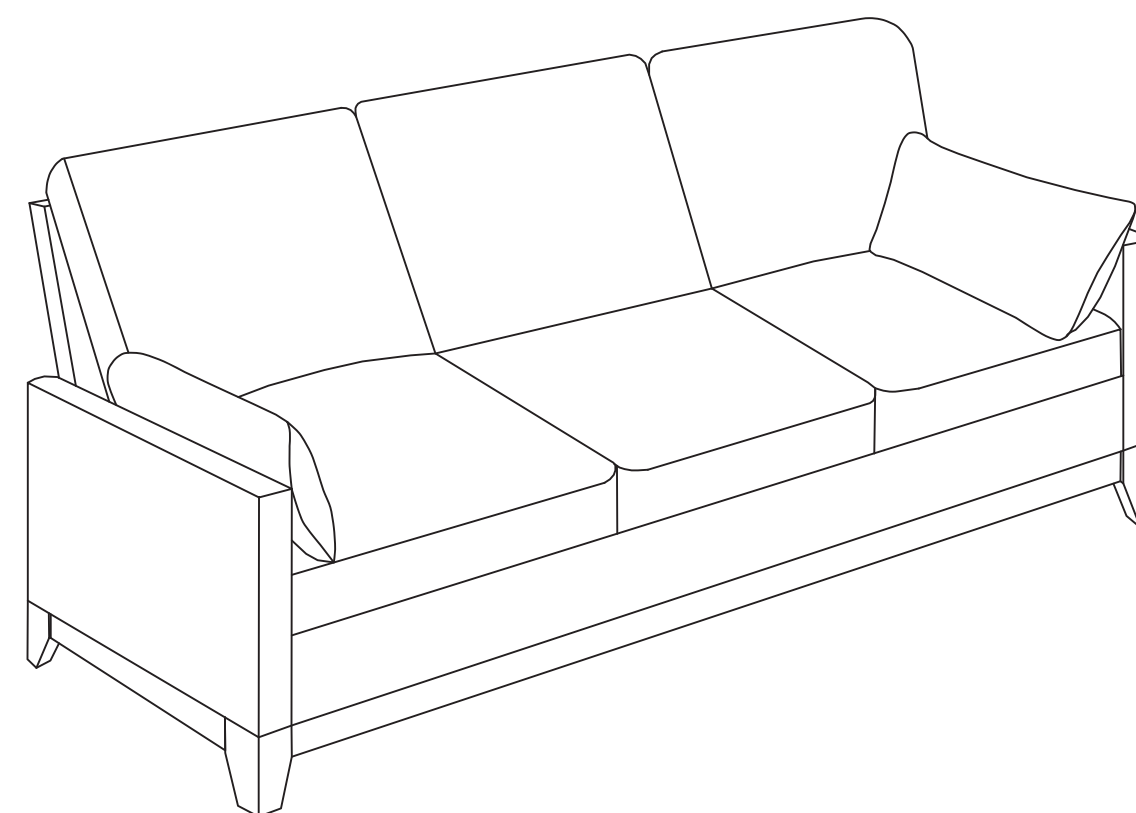



CAUTION

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE
FOR ASSEMBLY, IT IS RECOMMENDED THAT TWO PEOPLE WORK TOGETHER,
AS THE PRODUCT INVOLVES MANY COMPONENTS INSTALLATIONS.








Our E-mail address: CS.furniture@outlook.com.

COMPONENTS

BOX A BODY

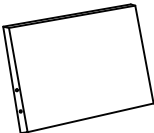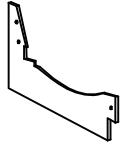A  Seat frame 2PCS	B  Back frame 2PCS	C  Center Support 1PC	D  Back Cushion 3PCS	E  Seat Cushion 3PCS
---	---	--	--	---

BOX B BASE

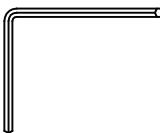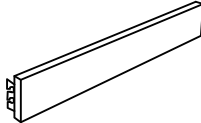F  Armrest (Left) 1PC	G  Armrest (Right) 1PC	I  Back Cover 1PC	J  Connector 2PCS	L  L-Cleat 2PCS
M  Leg 4PCS	P  Bolt M8*80mm 2PCS	Q  Bolt M8*55mm 19PCS	R  Bolt M8*20mm 5PCS	S  Allen key 1PC
T  Allen Key 1PC	U  Washer M8*22mm 13PCS	V  Washer M8*16mm 15PCS	W  Butterfly nut 2PCS	X  Pillow pad 2PCS
Y  Welt 4PCS	H  Front panel 1PC	N  Decorative strip 1PC	O  Decorative strip 2PCS	

Design Exquisite Furniture For Your Home

PRODUCT WARRANTY

- 1-year limited on cover against splitting, peeling, and/or tearing.
- 1-year limited on internal and external frame structure.
- 1-year limited on cushioning material, seat springs and mechanism.


Contact us:

We make all efforts to guarantee that the products you receive are in excellent condition. If there are any parts missing or damaged, the Customer Service Team will be happy to provide free replacements for you. We have professional warehouses where the current inventory of parts is enough so that they will arrive in your hands as fast as possible.


Assistance with assembly or product details is available; don't hesitate to get in touch with us to get priority service.
Our E-mail address: CS.furniture@outlook.com.

 **CS.furniture@outlook.com**


- 1** Attach the rear L-Cleat (L) to the Left & Right Armrest (G)&(F) by using the Bolt (Q), flat washer (V), tighten all the Bolts by using the Allen Key (S).

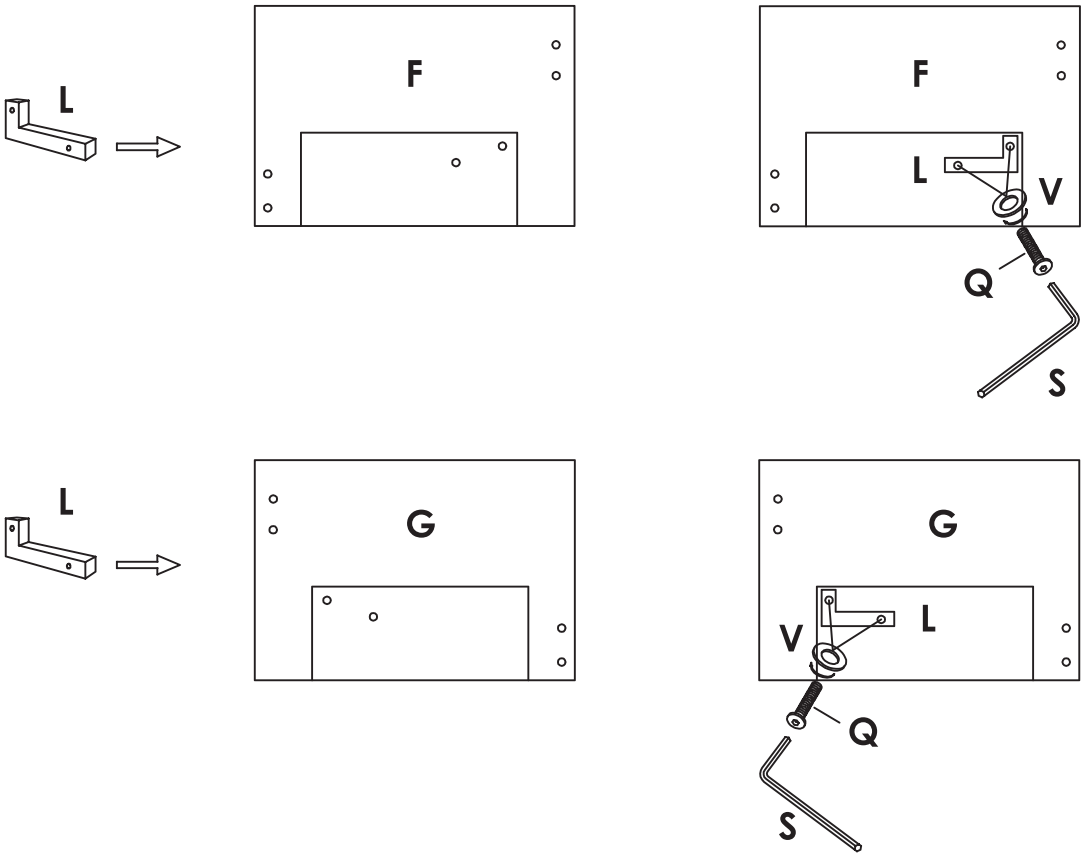


- 2** Attach the Bolt (R), flat washer (U) to the Left & Right Armrest (F&G) by using the Allen key (S), 50% tighten.

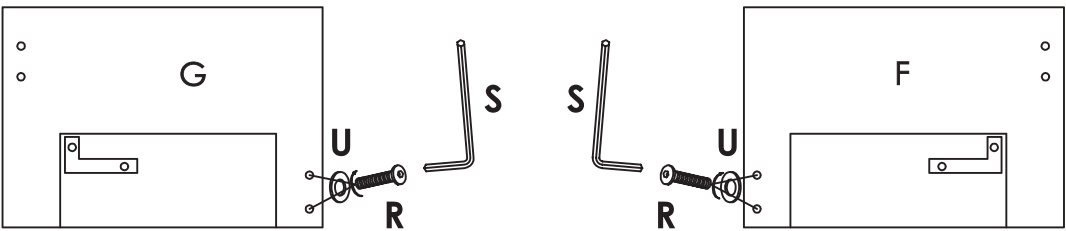


- 3** Hang the front panel (H) hook on the Armrest(F/G) screws and then tighten the screws.

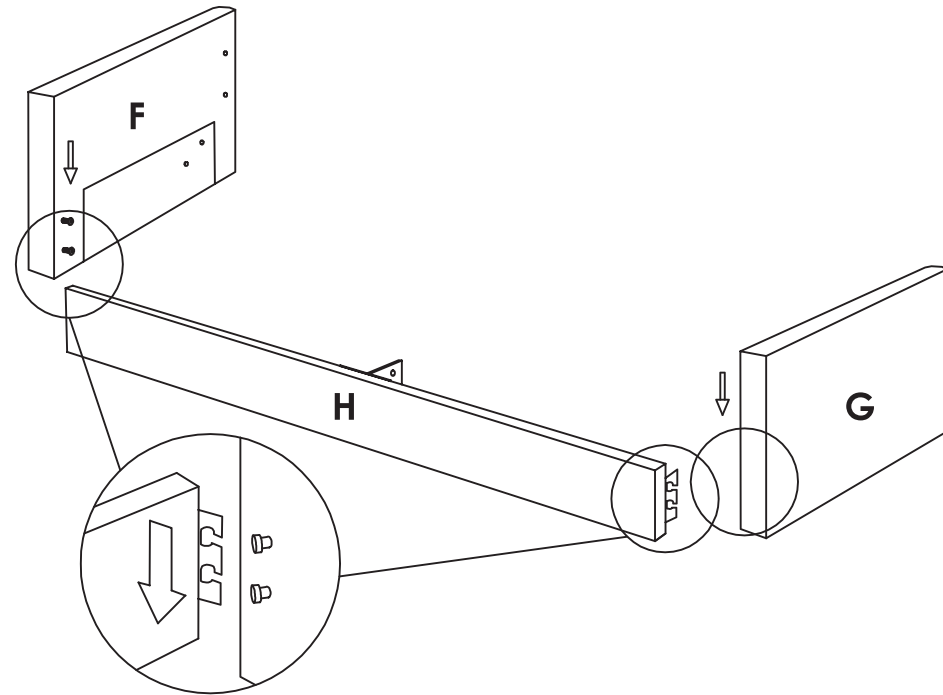


- 4** Attach the center support(C) to the front panel(H) by using the Bolt(R), Tighten all the Bolts by using the Allen Key(S).

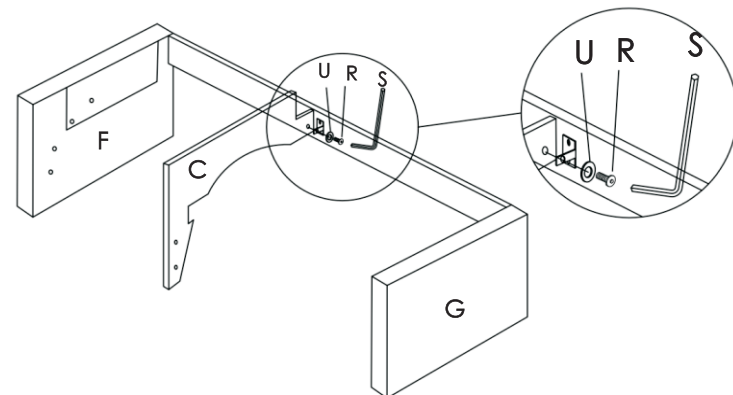



- 5** Attach the back frame (B) to the armrest (G/F) with bolt (Q) and flat washer (U), make sure the side with the Velcro is facing upwards, as shown below, and tighten all bolts with the Allen Key(S).

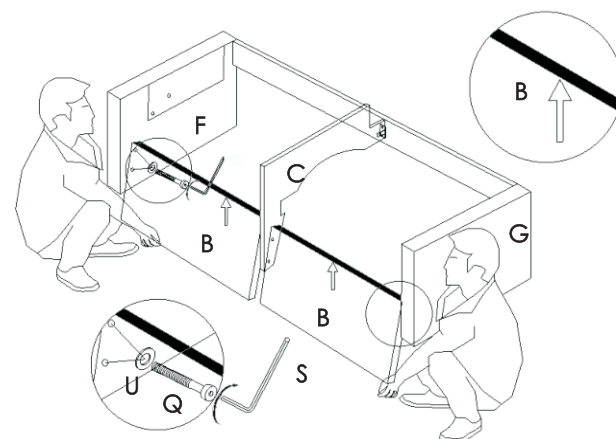


- 15** Attach the Back cushion (D), Seat cushion(E) and Pillow(X) to the sofa.

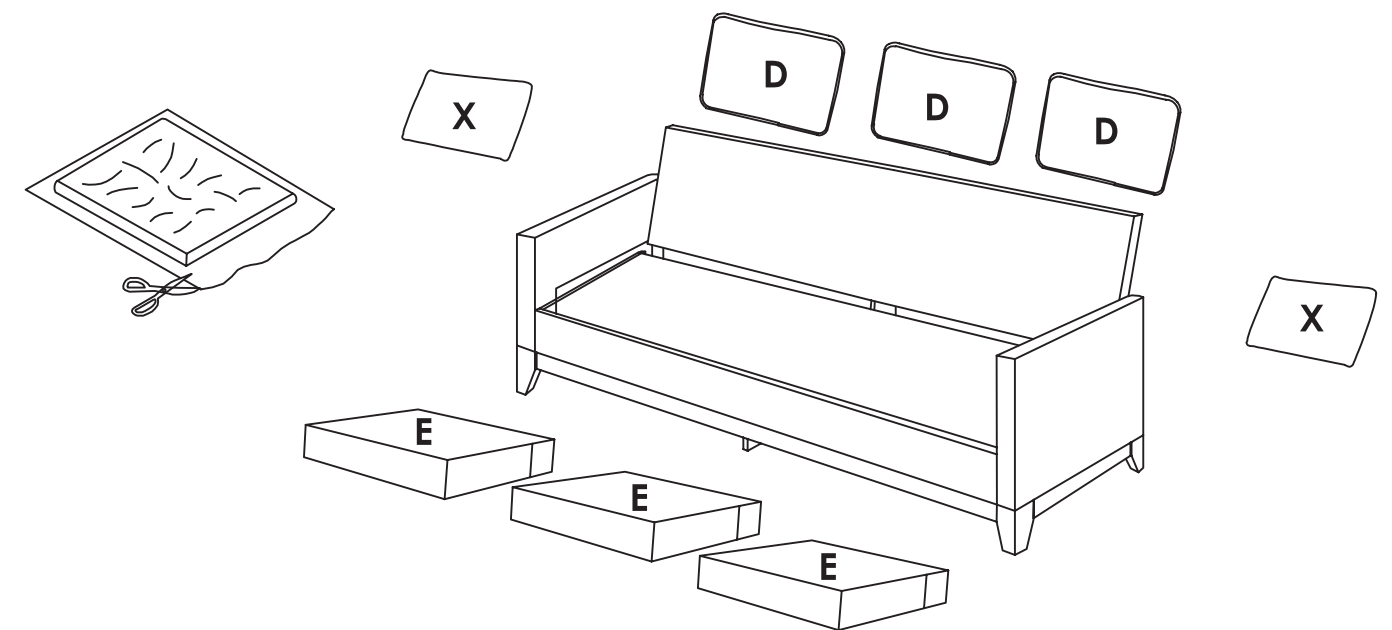

- 16** Assembly completed, It's ready to use.

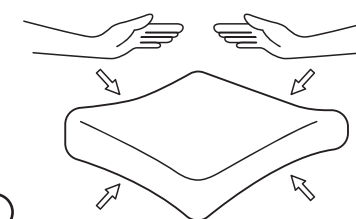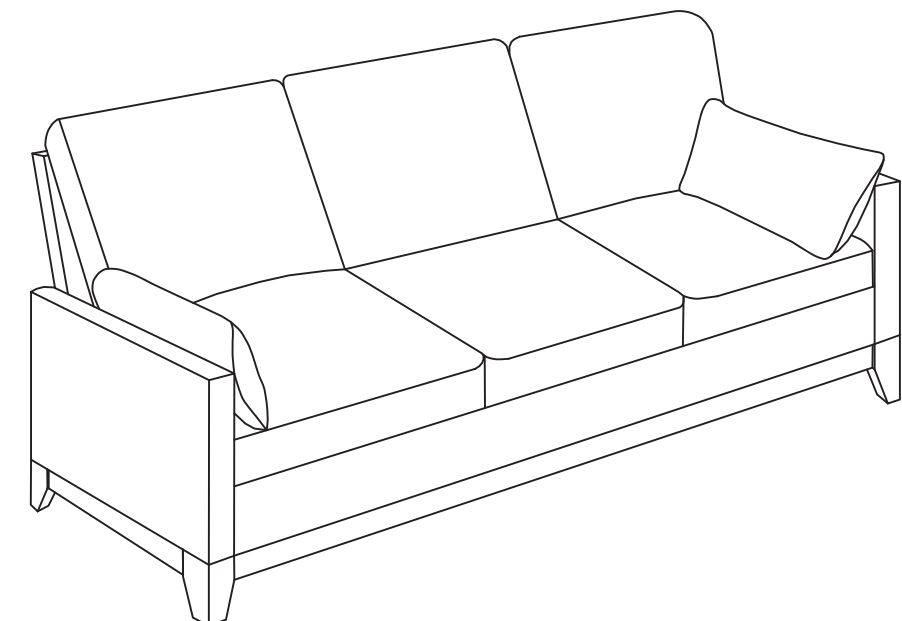

- ①** Due to package compression for better shipment, the fabric may have wrinkles, these wrinkles will gradually disappear.

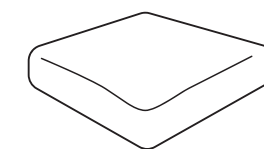


- ②** Please be patient and wait for the cushions to return to its fluffy state, which may take 48 to 72 hours.




Wait for 48-72 hours


- 12** Attach the back cover(I) to the Back frame(B) end and armrest back with velcro.

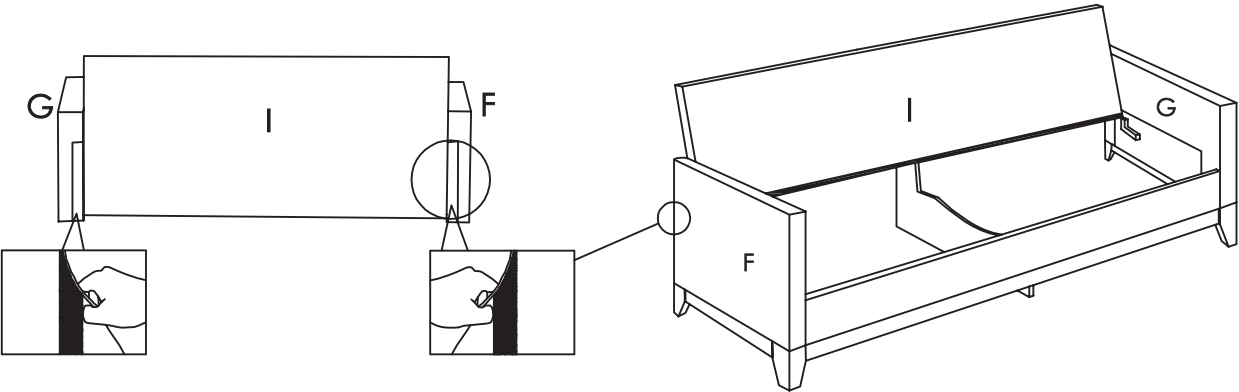


- 13** 13.1 Pull the seat frame support bar from the horizontal position to the vertical position.
13.2 Attach the Seat frame(A) by using the Connector(J).

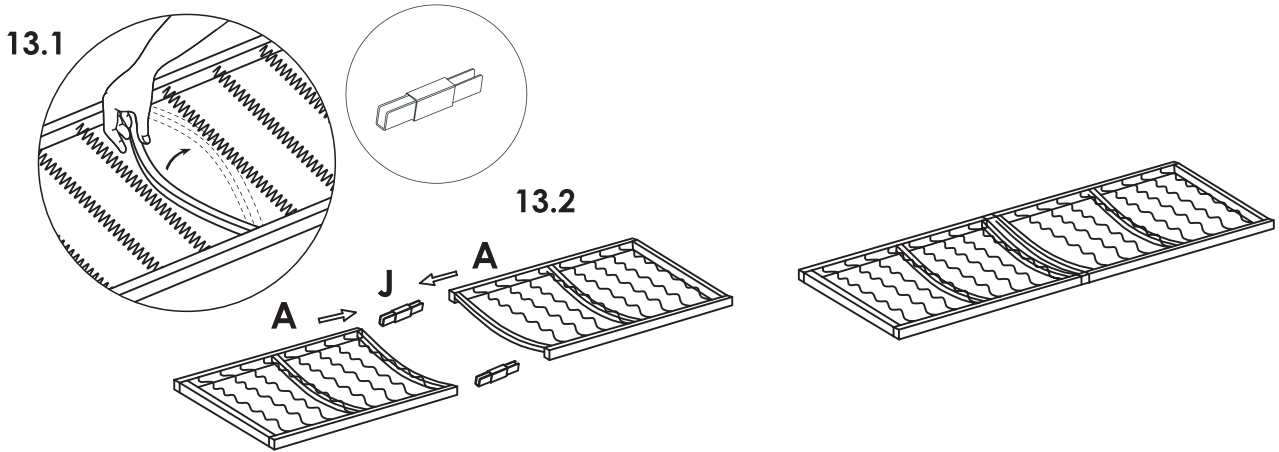


- 14** Place the seat frame (A) into the sofa.

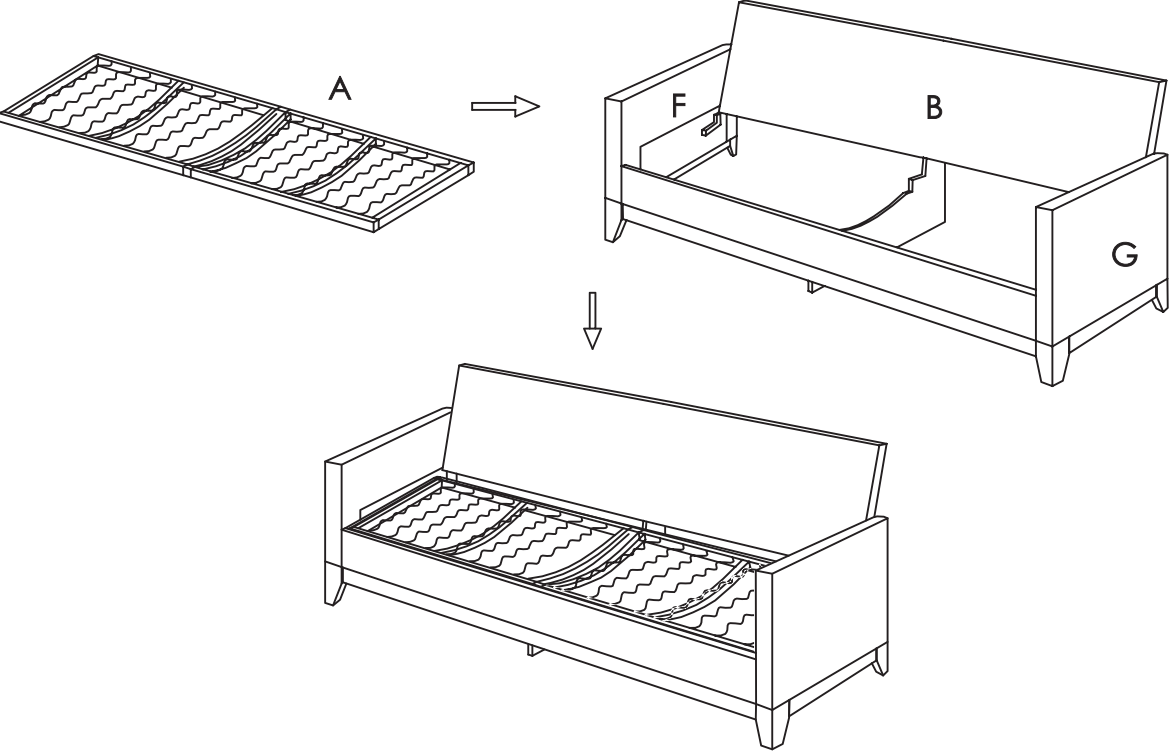


- 6** Attach the two back frames(B) by threading bolt (P), flat washer(U) and butterfly nut (W), through the center support (C), tighten all the Bolts by using the Allen Key (S).

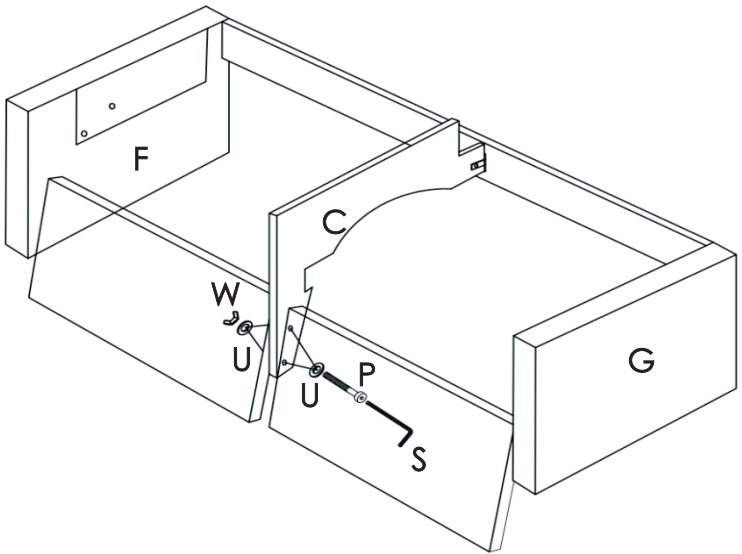


- 7** Attach the legs (M) to the Left & Right Armrest (G)&(F) by using the Bolt (Q), flat washer(V), tighten all the Bolts by using the Allen Key (T).

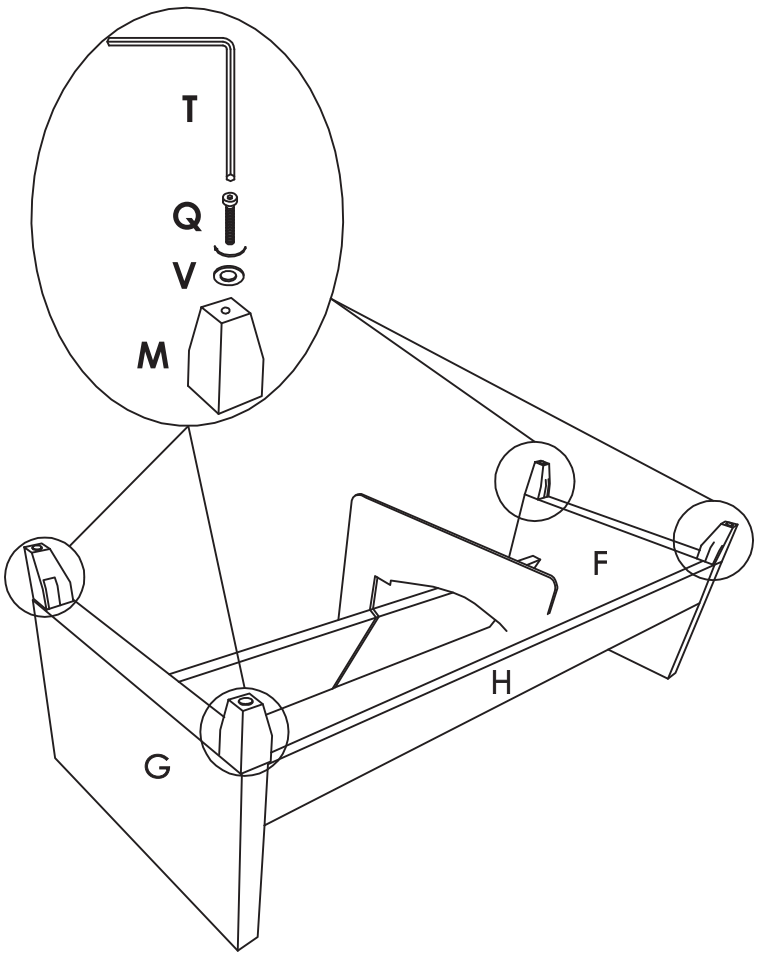


8 Attach the foot welt (Y).

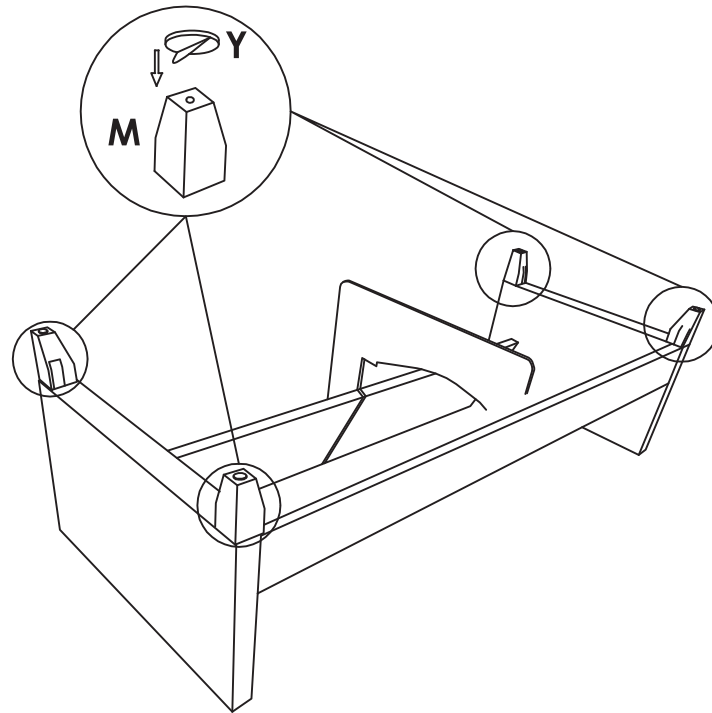

9 Attach the Decorative strip (O) to the Left & Right Armrest (G)&(F) by using the Bolt (Q) and flat washer (V), ensure the side with the label faces inward, and tighten all the Bolts by using the Allen Key (T).

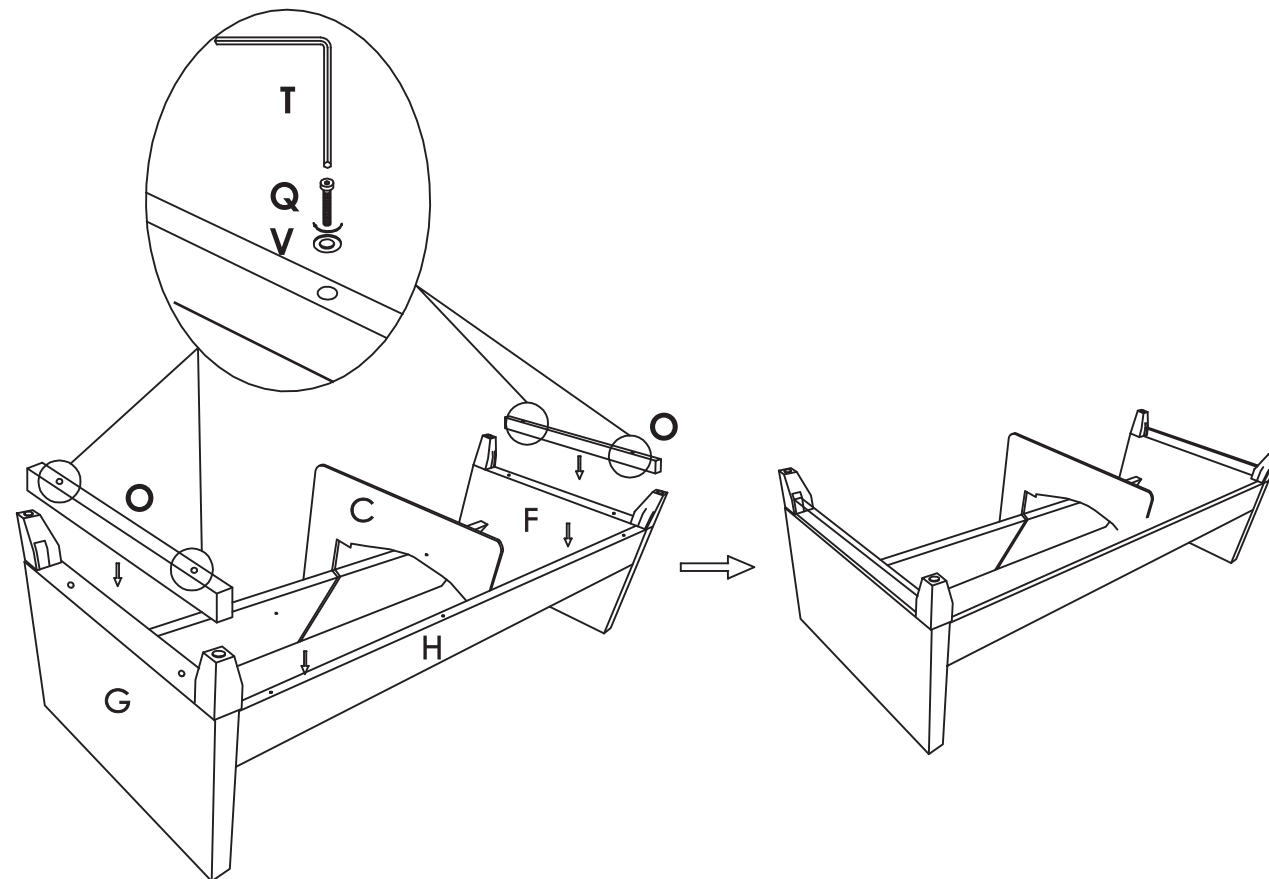

10 Attach the Decorative strip (N) to the Front panel (H) by using the Bolt (Q), flat washer (V), ensure the side with the label faces inward, and tighten all the Bolts by using the Allen Key (T).

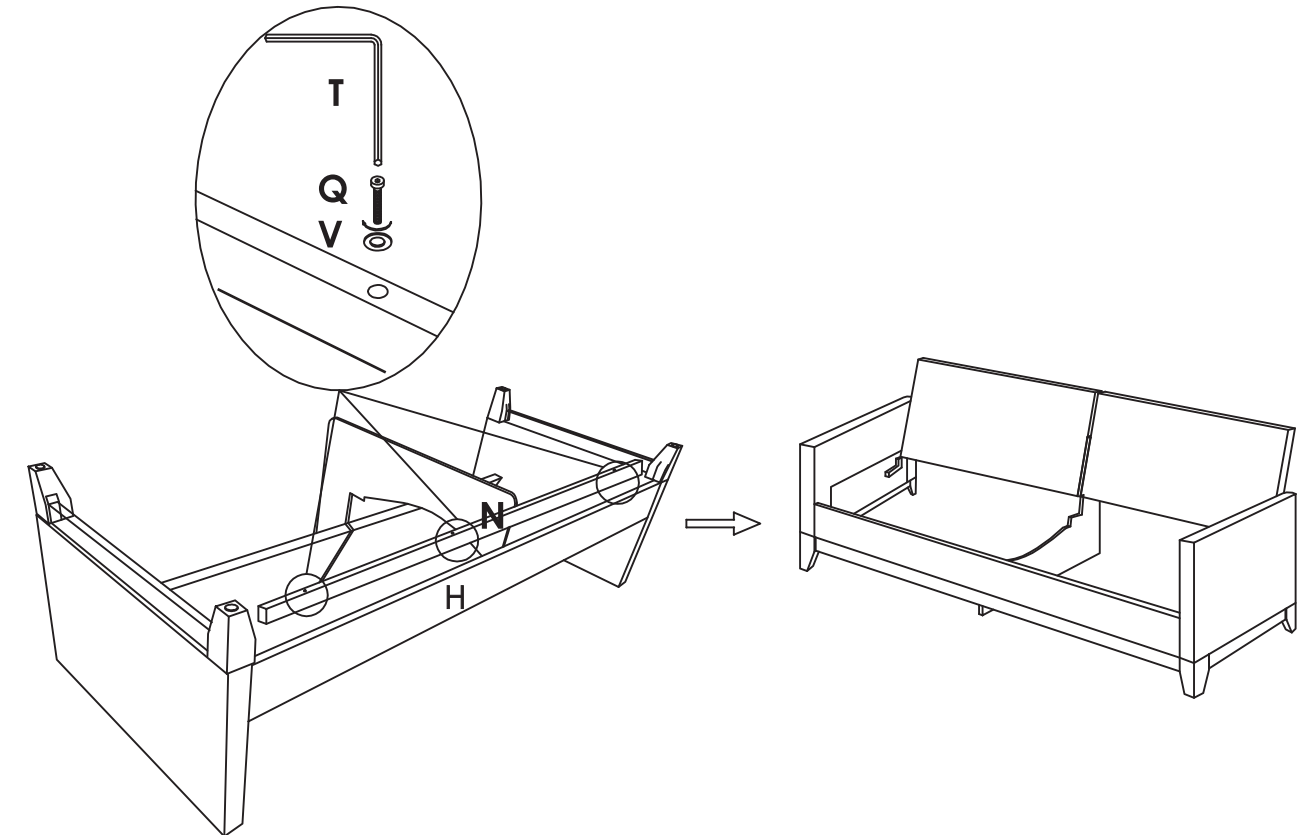

11 Attach the back cover(I) to the back frame(B).

