
# Storage Cabinet

**Assembly Instructions - Please keep for future reference**

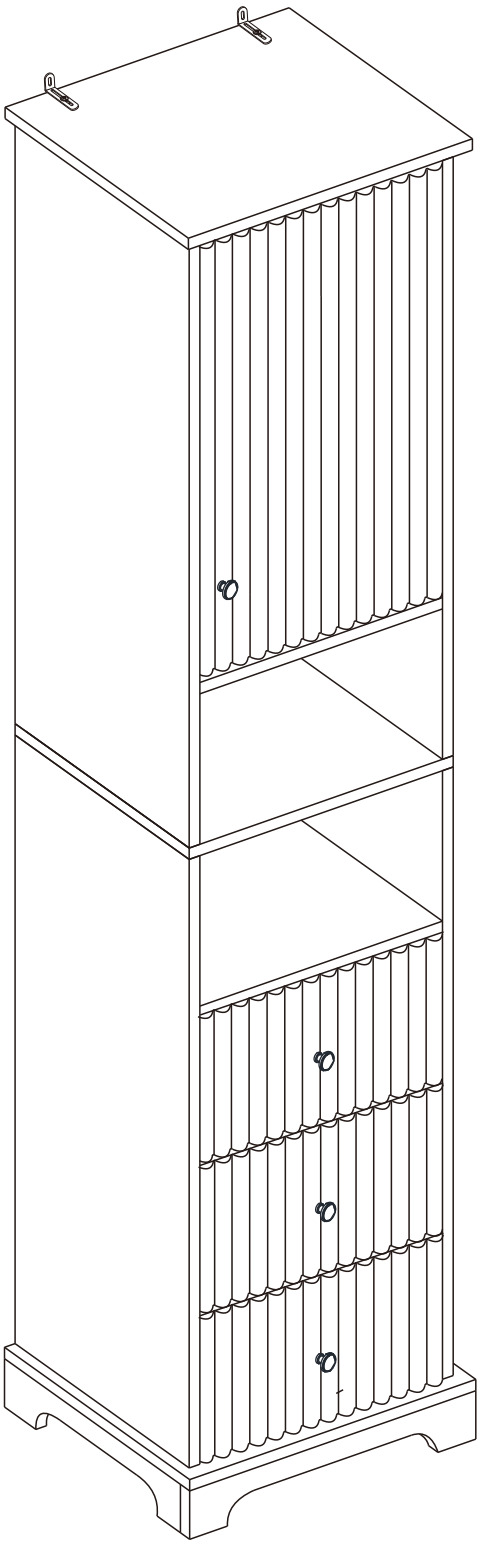

**Important – Please read these instructions fully before starting assembly**

# Safety and Care Advice

## Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

## WARNING
**In order to help prevent overturning – please follow these instructions**


To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

# Using Camlocks


## Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

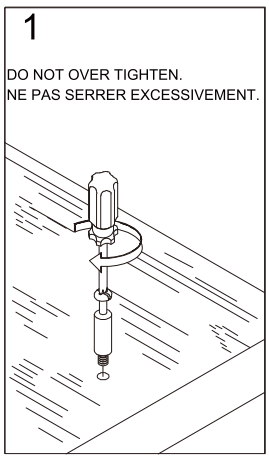


## Step 2


Push the male camlock into the entry hole.

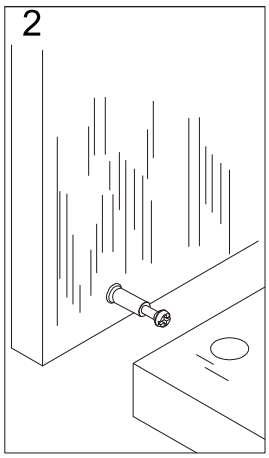


## Step 3

Insert the female camlock as shown in the instruction.

Note： ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

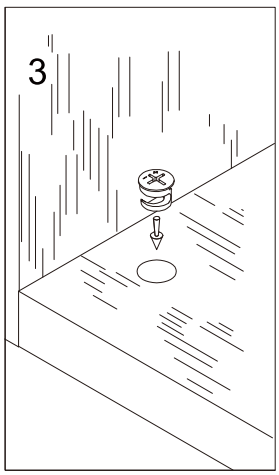



## Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

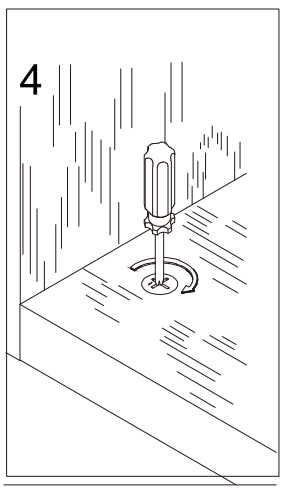


# Assembly Instruction

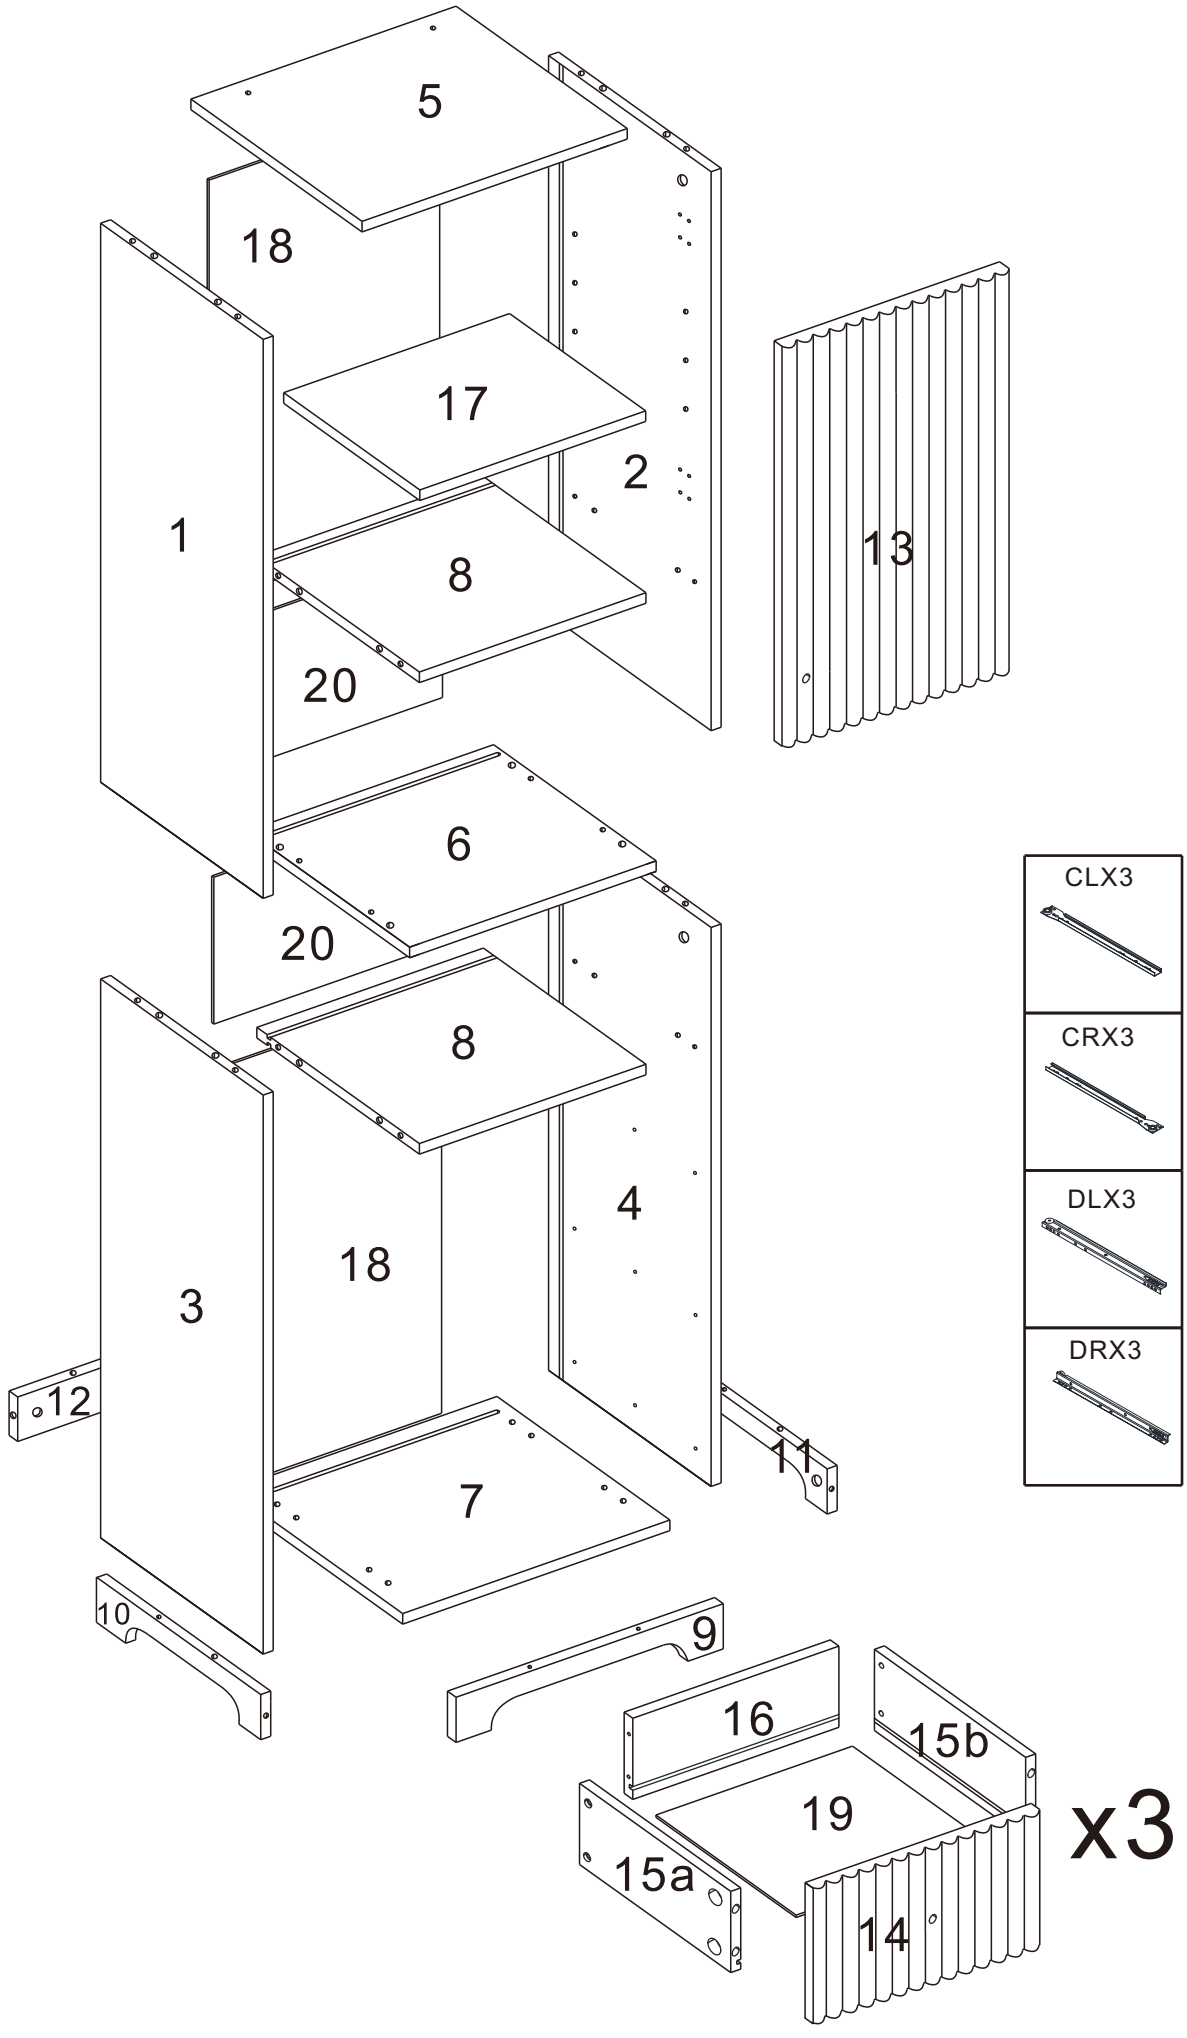



# Components - Fittings


## Please check you have all the panels listed below


Note:The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.

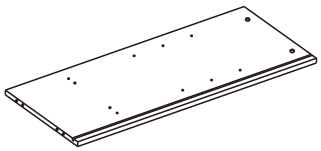

1 x 1

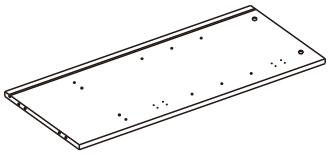

2 x 1

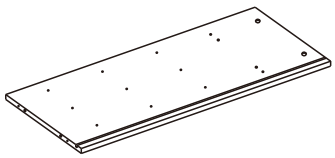

3 x 1

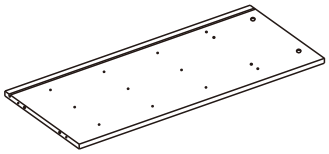

4 x 1

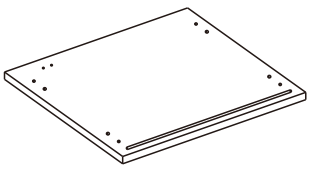

5 x 1

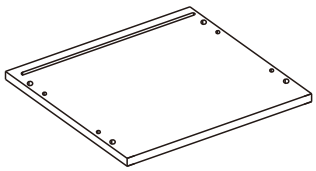

6 x 1

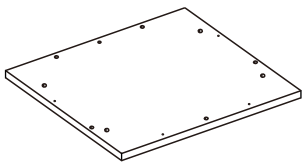

7 x 1

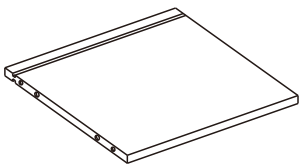

8 x 1

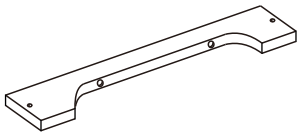

9 x 1

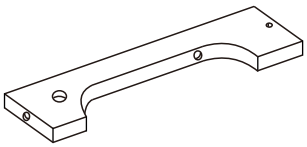

10 x 1

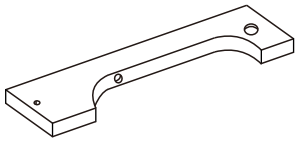

11 x 1

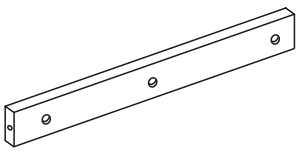

12 x 1

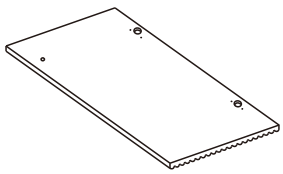

13 x 1

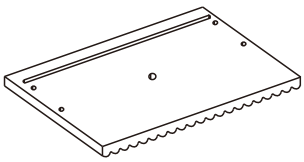

14 x 3

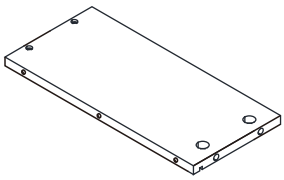

15a x 3

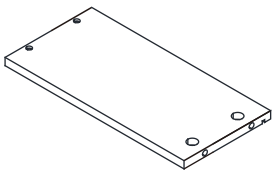

15b x 3

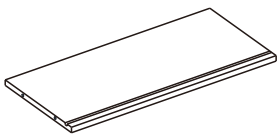
16 x 3

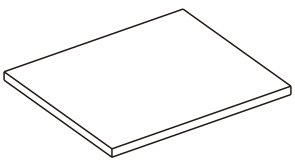
17 x 1

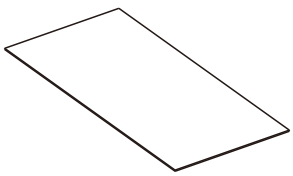
18 x 2

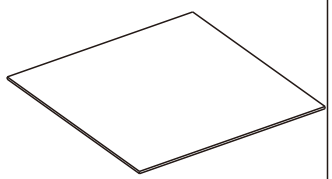
19 x 3

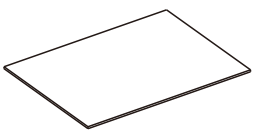
20 x 2

A x33



B x33



C x29



D x8



ø5x40mm

E x16



ø4x30mm

F x36



ø3x10mm

G x12



ø4x14mm

H x4



ø4x25mm

I x4



J x2



K x2



L x1



M x2



ø3x12mm

N x8




O x8



ø3x16mm


P x4





Q x8





## step 1

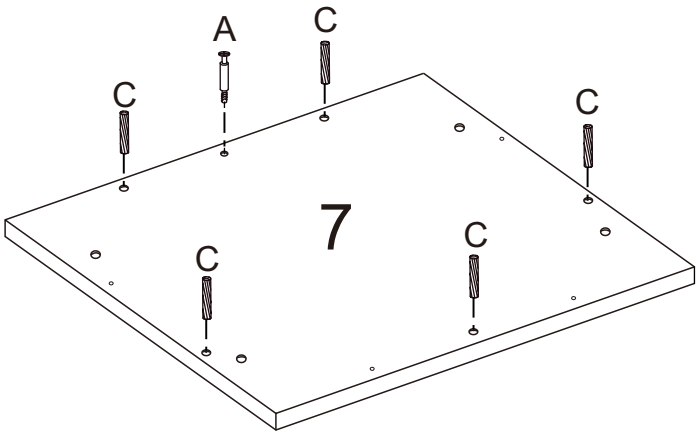




| | |
|---|---|
| A x1 |  |
| C x5 |  |

## step 2

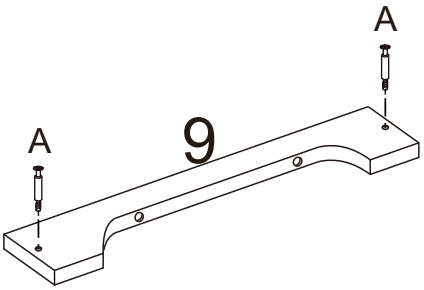


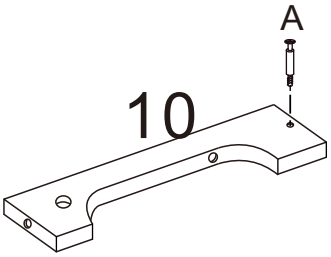
| | |
|---|---|
| A x4 |  |
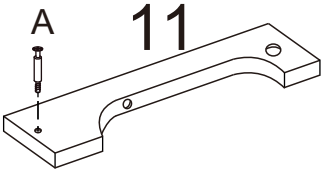
## step 3





B

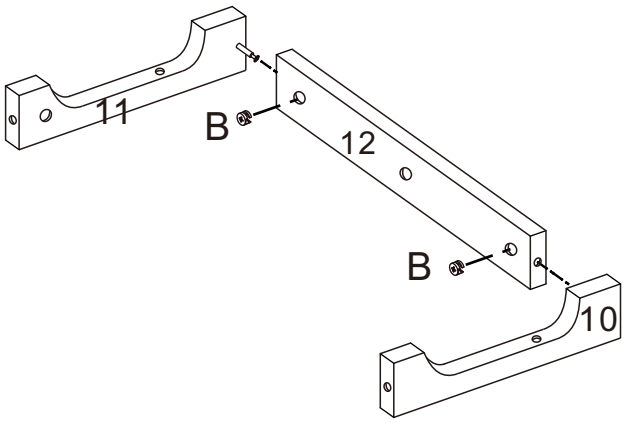

x2

## step 4

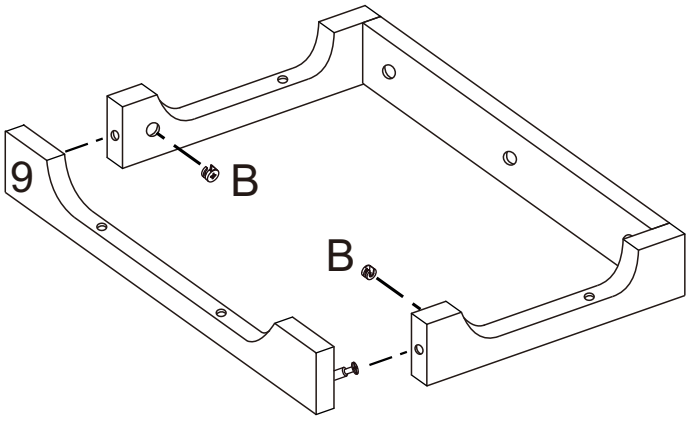



B




x2

## step 5

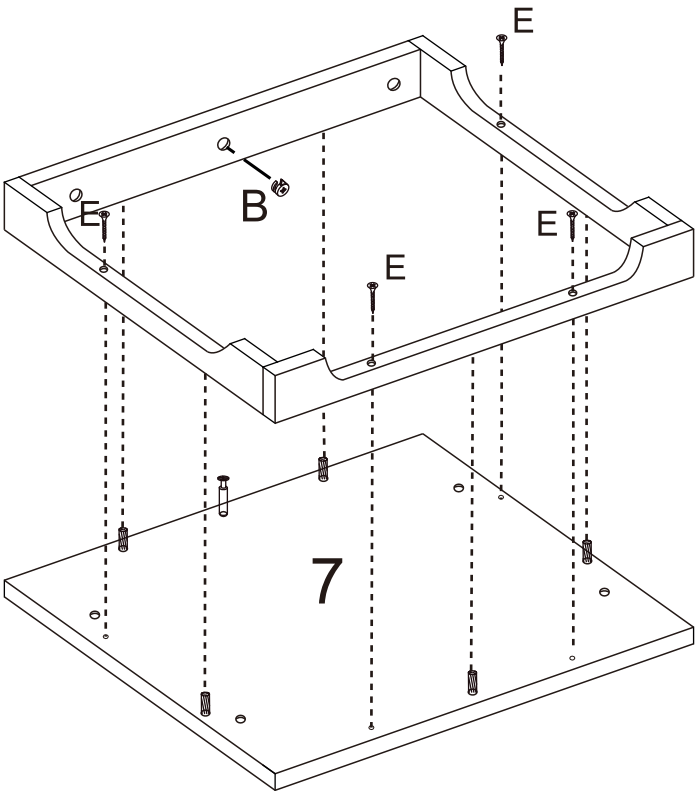



| | |
|---|---|
| B  x1 | |
| E  x4 | |


## step 6

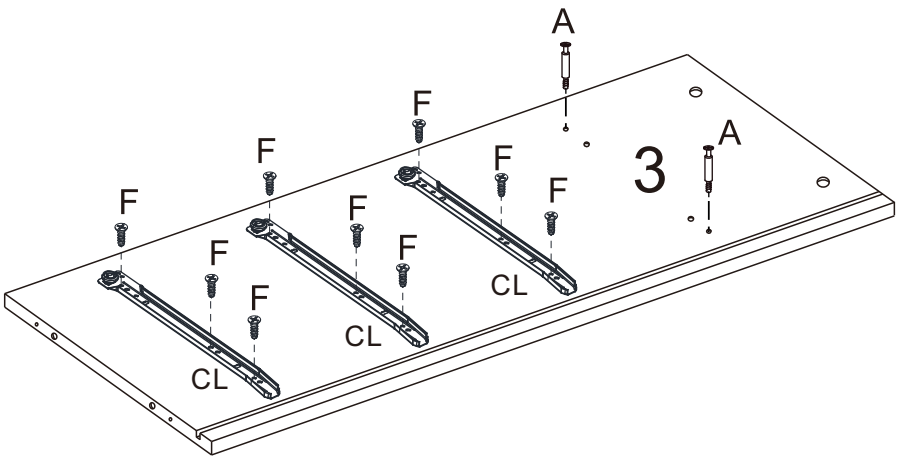




| | |
|---|---|
| CL  x3 | |
| A  x2 | |
| F  x9 | |

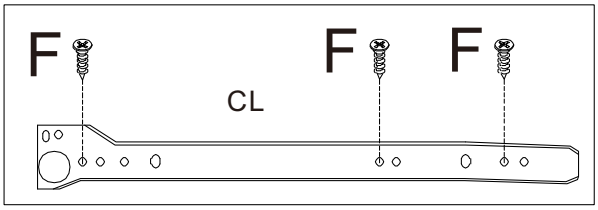


## step 7

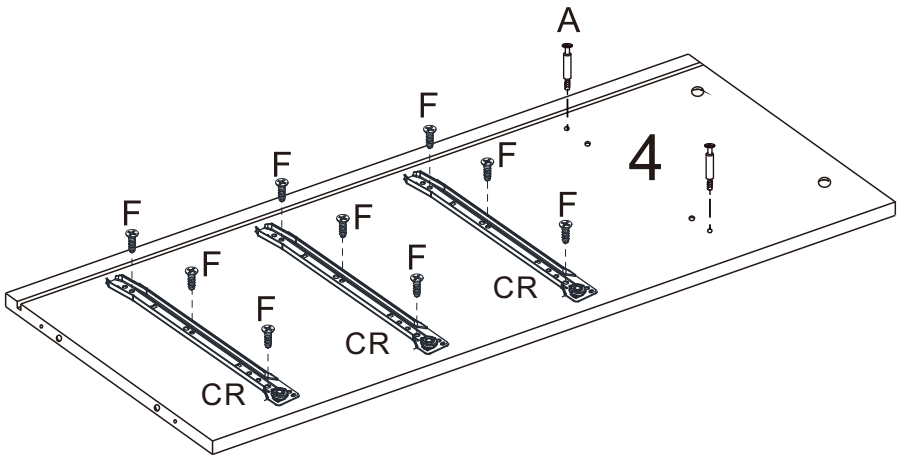



| | |
|---|---|
| CR<br>x3 |  |
| A<br>x2 |  |
| x9 |  |

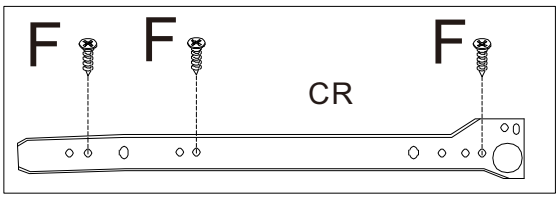




## step 8

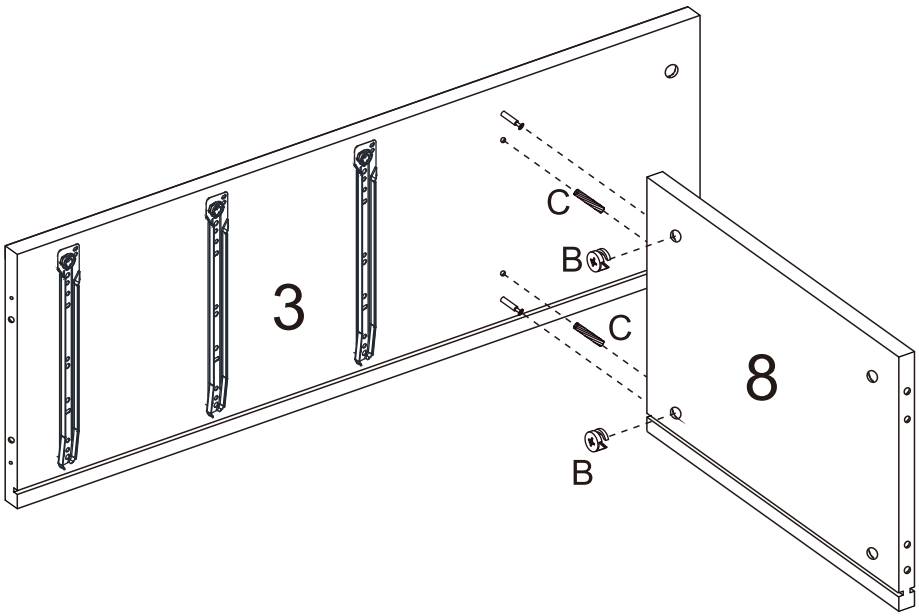



| | |
|---|---|
| B<br>x2 |  |
| C<br>x2 |  |

## step 9

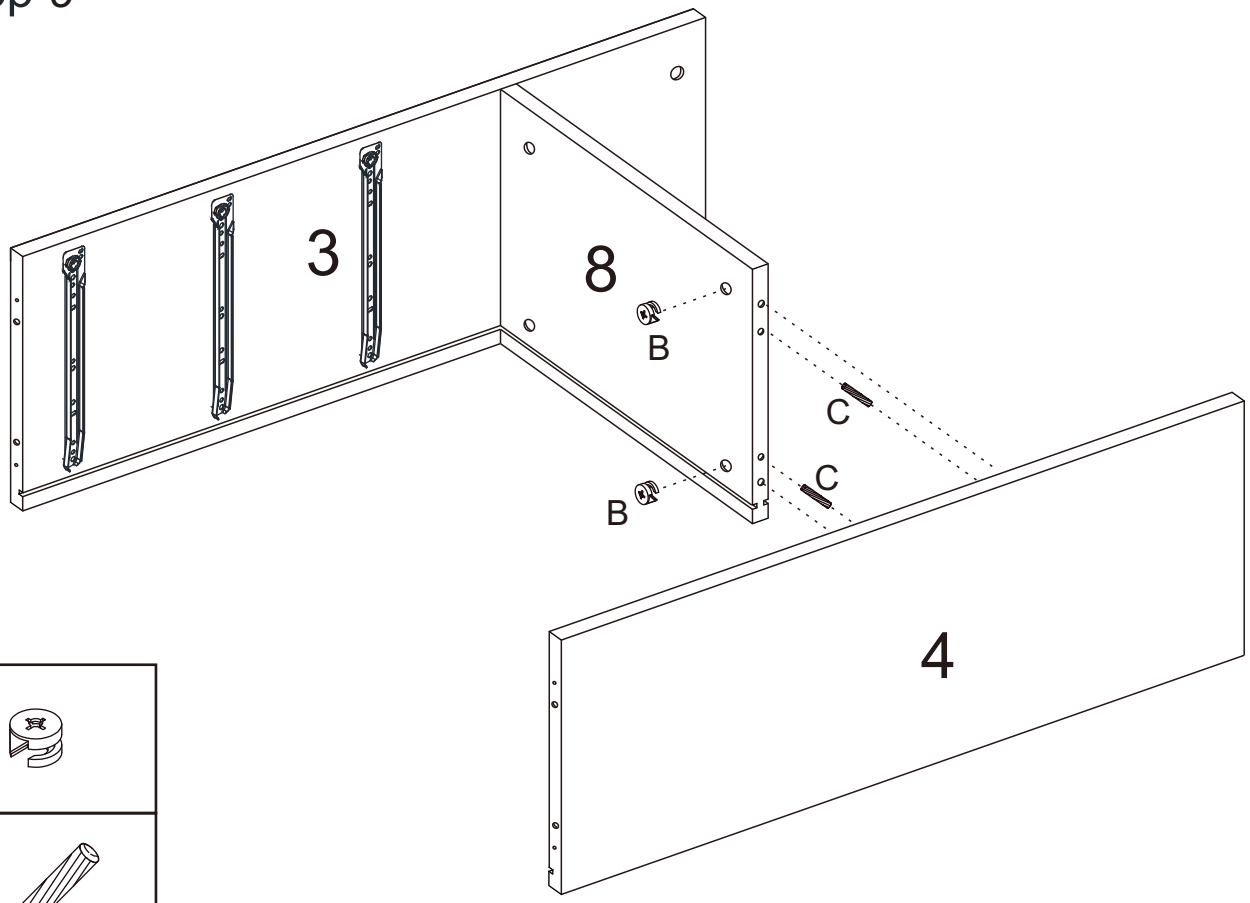



| | |
|---|---|
| B  x2 | |
| C  x2 | |


## step 10

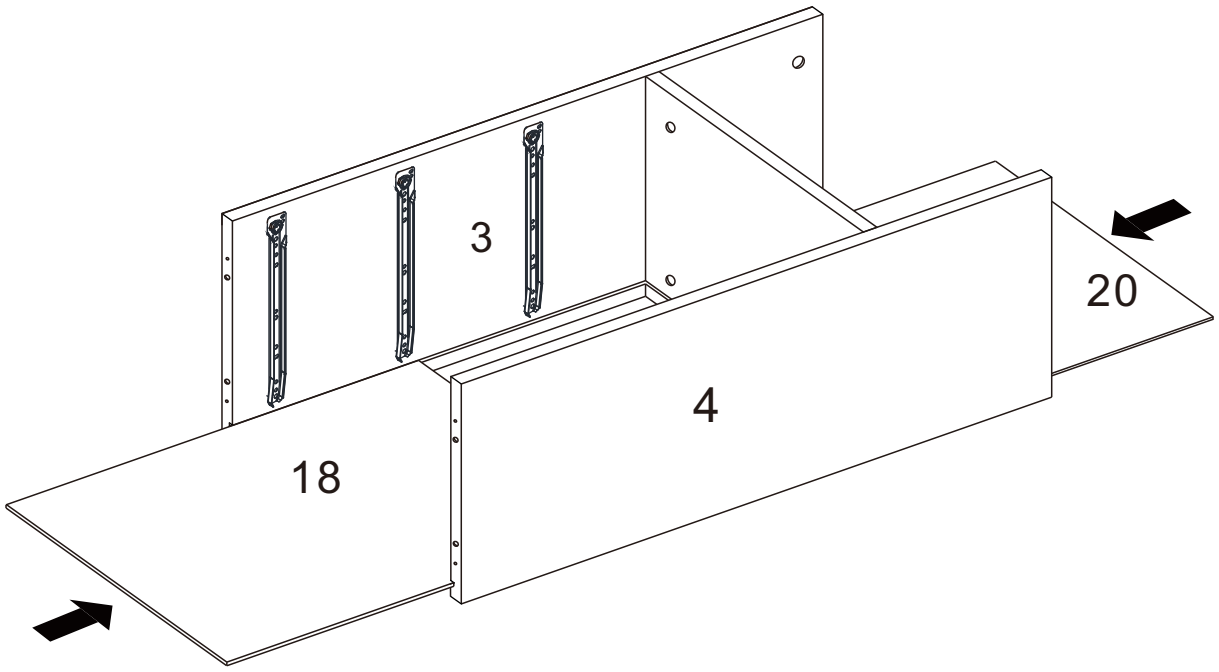


## step 11

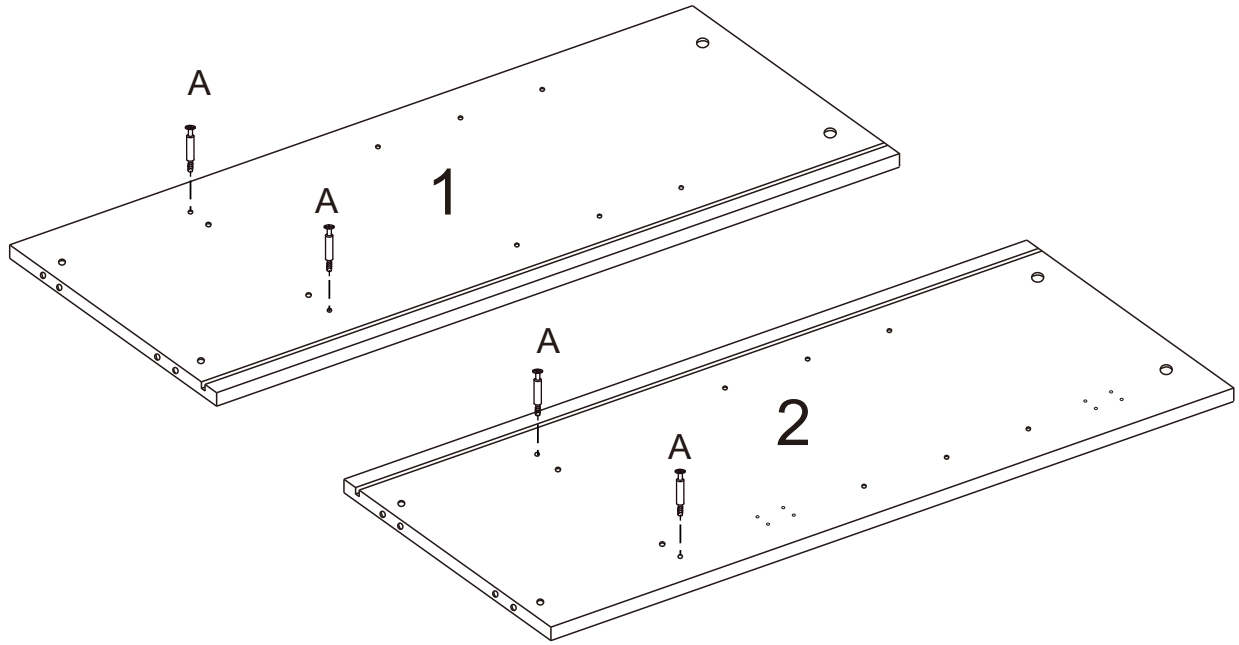


A
x4




## step 12

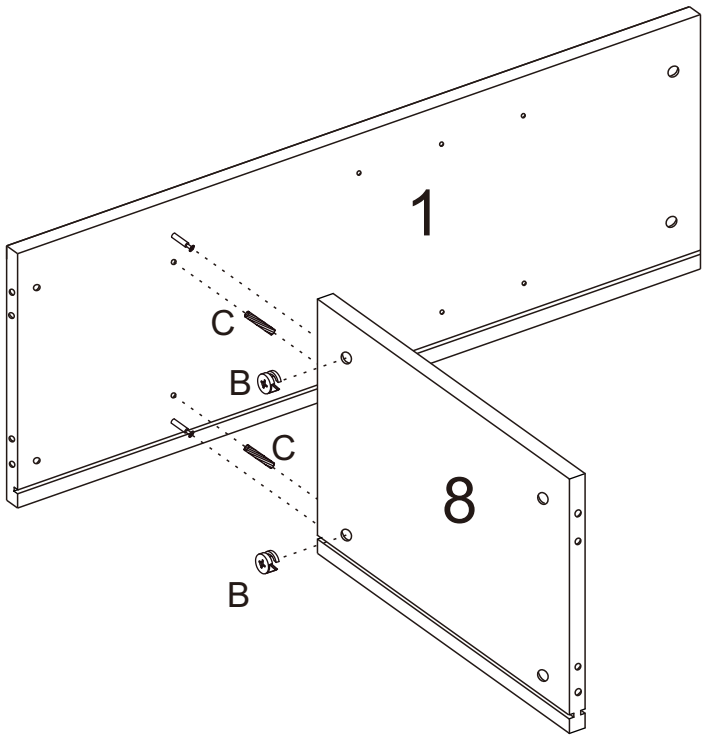



B
x2




C
x2




## step 13

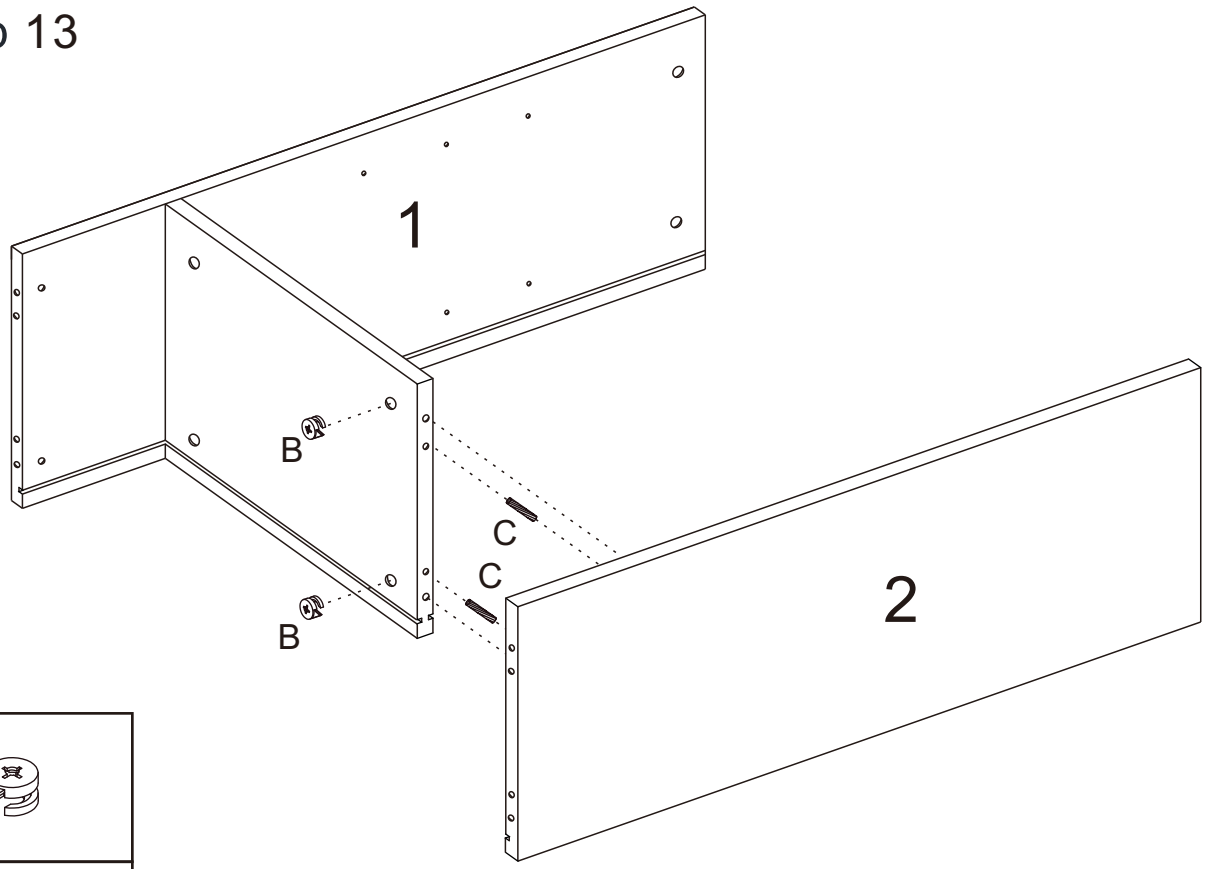


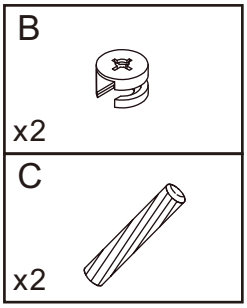

## step 14

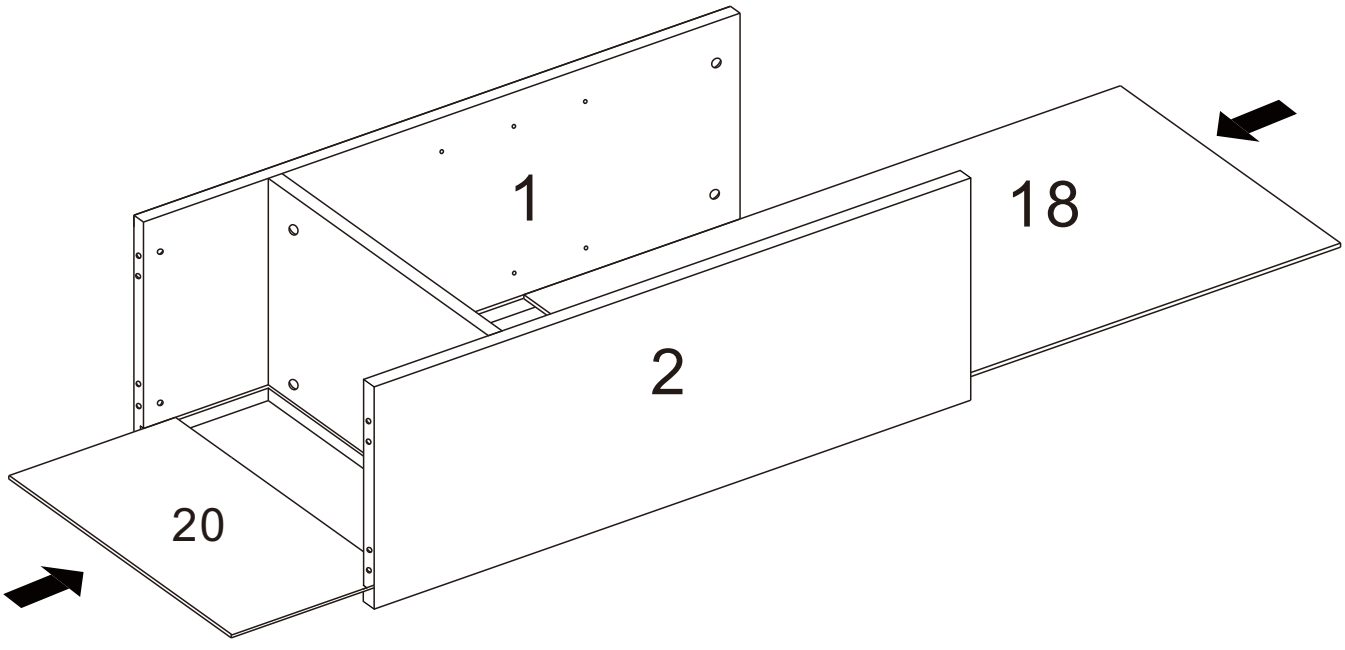

## step 15

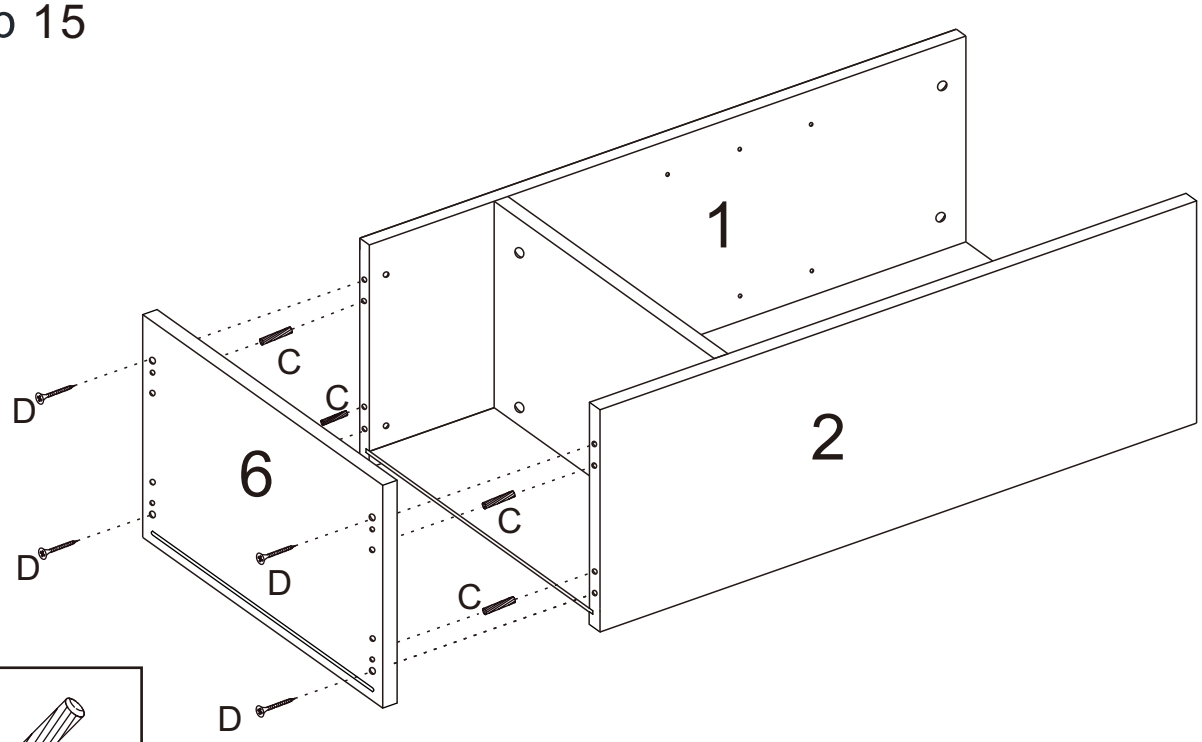



C
x4




D
x4




## step 16

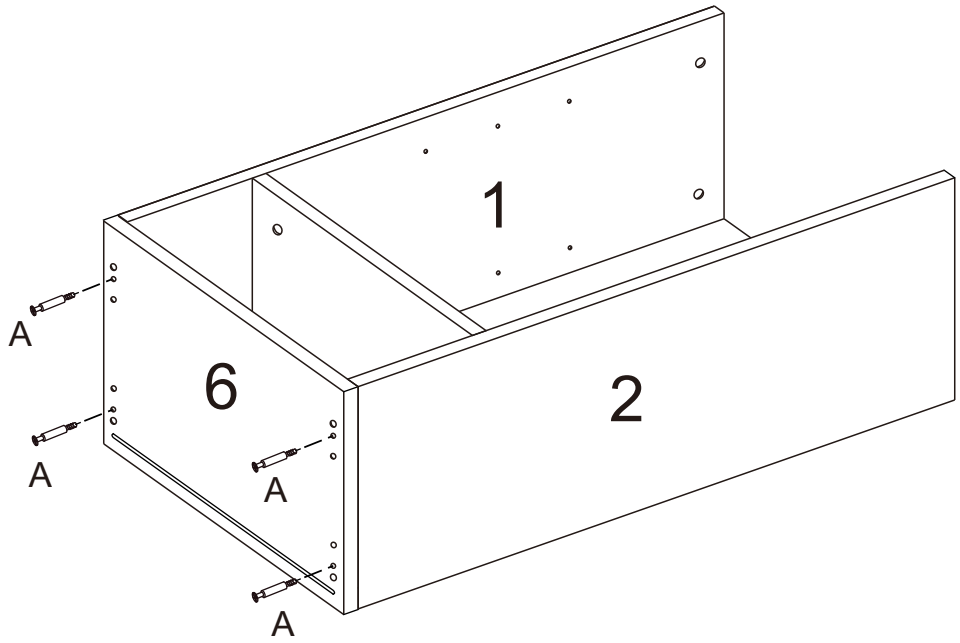



A
x4





## step 17

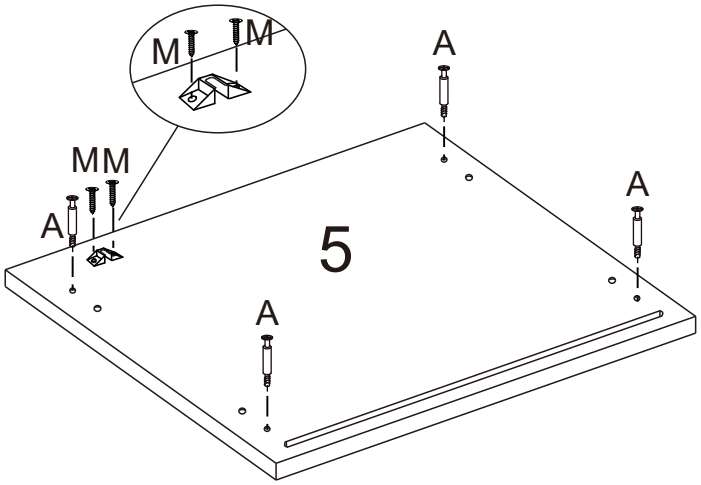



| | |
|---|---|
| A<br>x4 |  |
| L<br>x1 |  |
| M<br>x2 |  |

## step 18

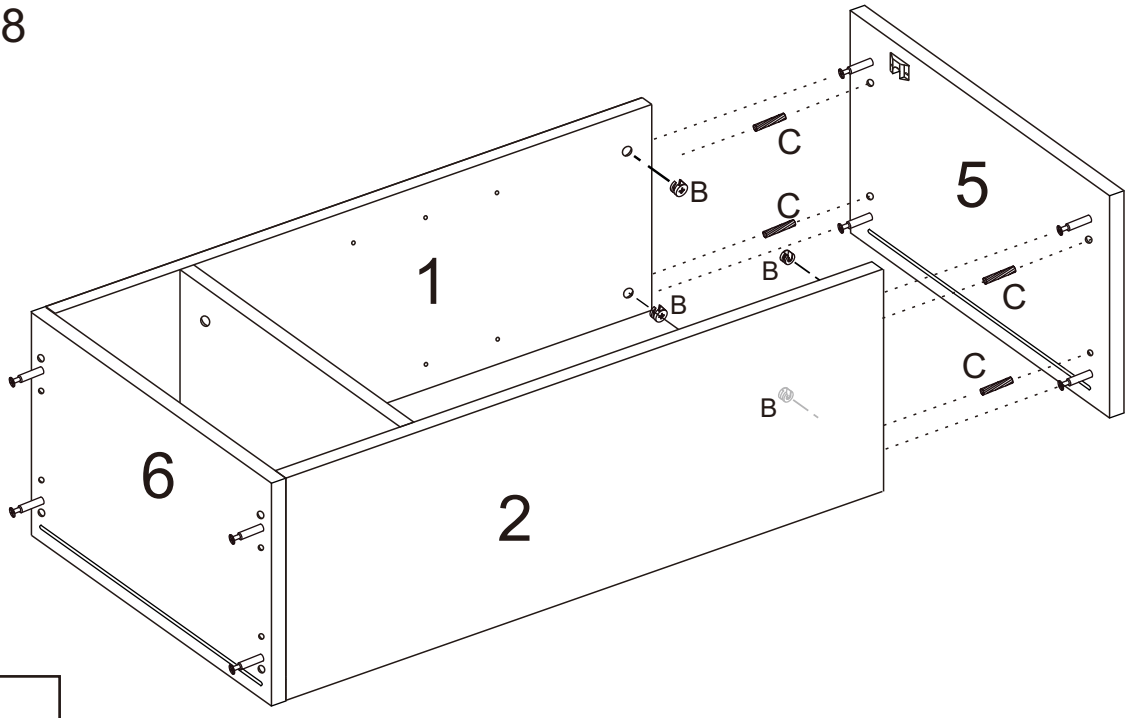


| | |
|---|---|
| B<br>x4 |  |
| C<br>x4 |  |


step 19

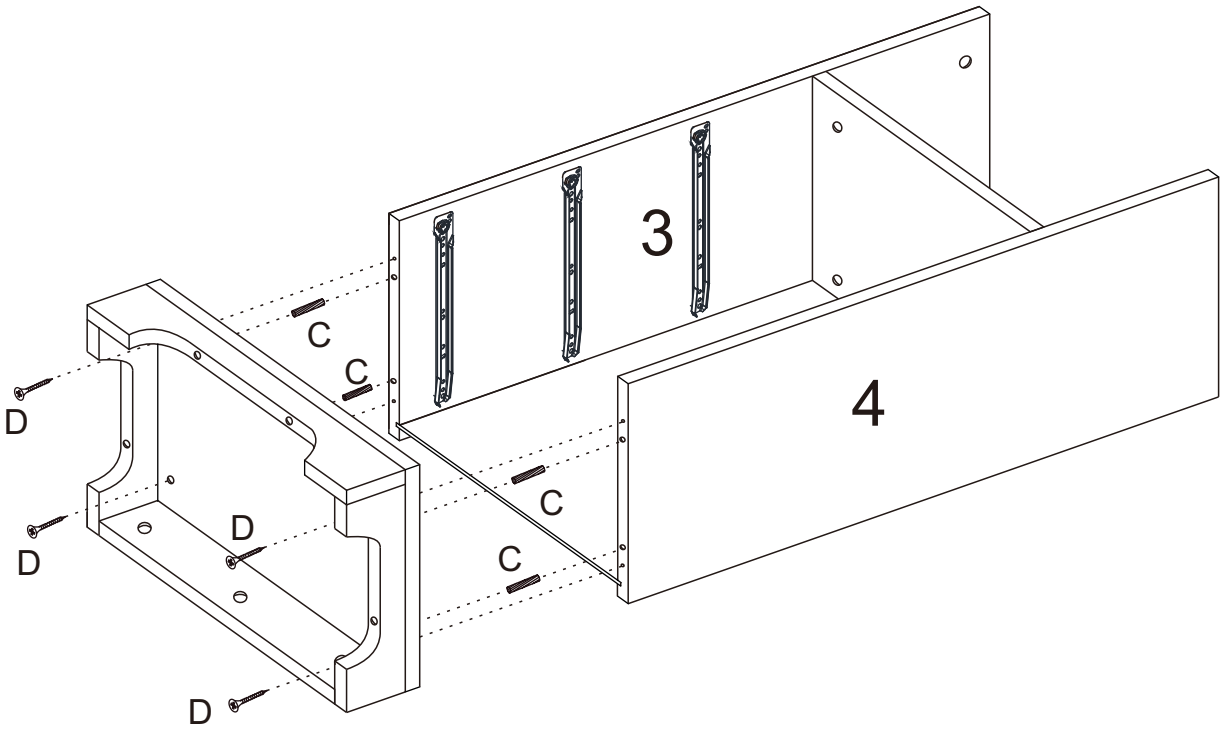




C
x4

D
x4


# step 20

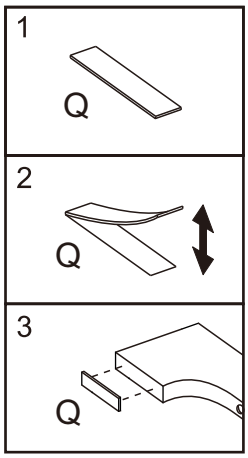


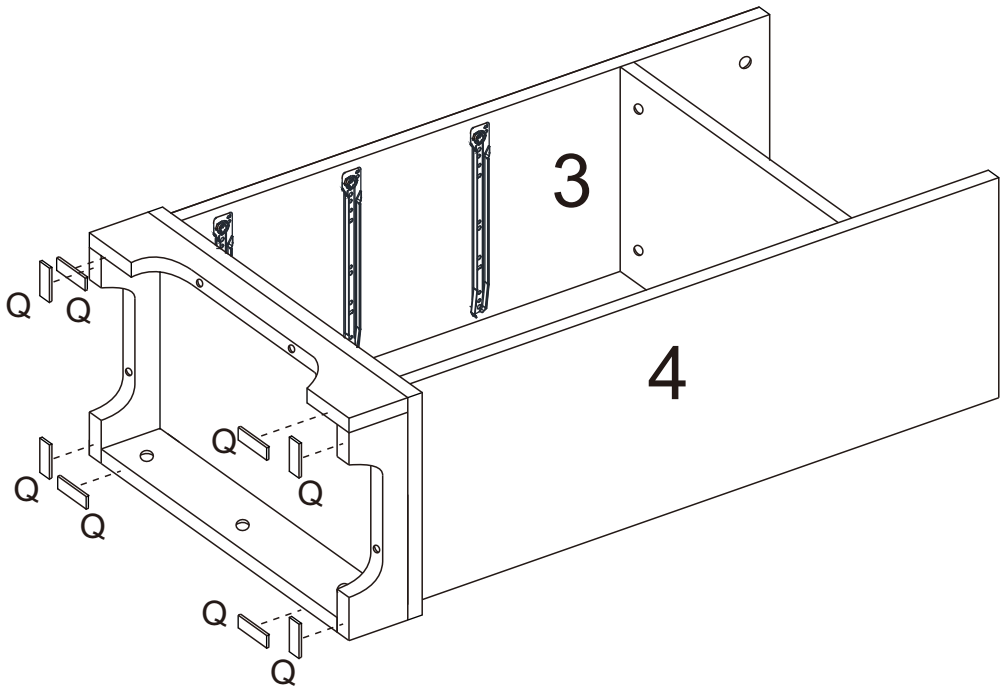


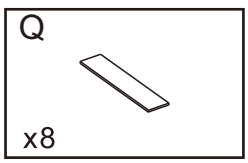


# step 21

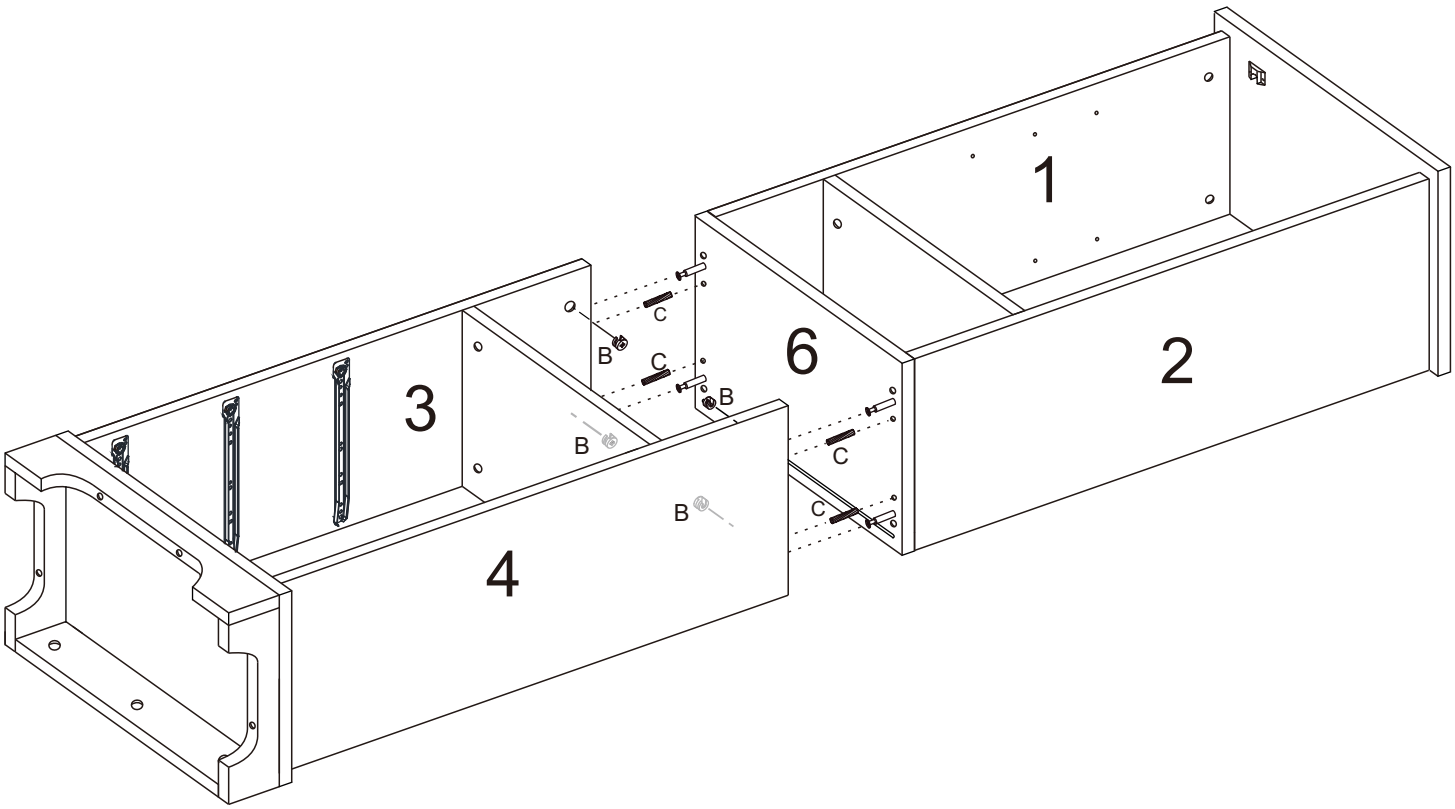


| | |
|---|---|
| B  x4 | |
| C  x4 | |


## step 22

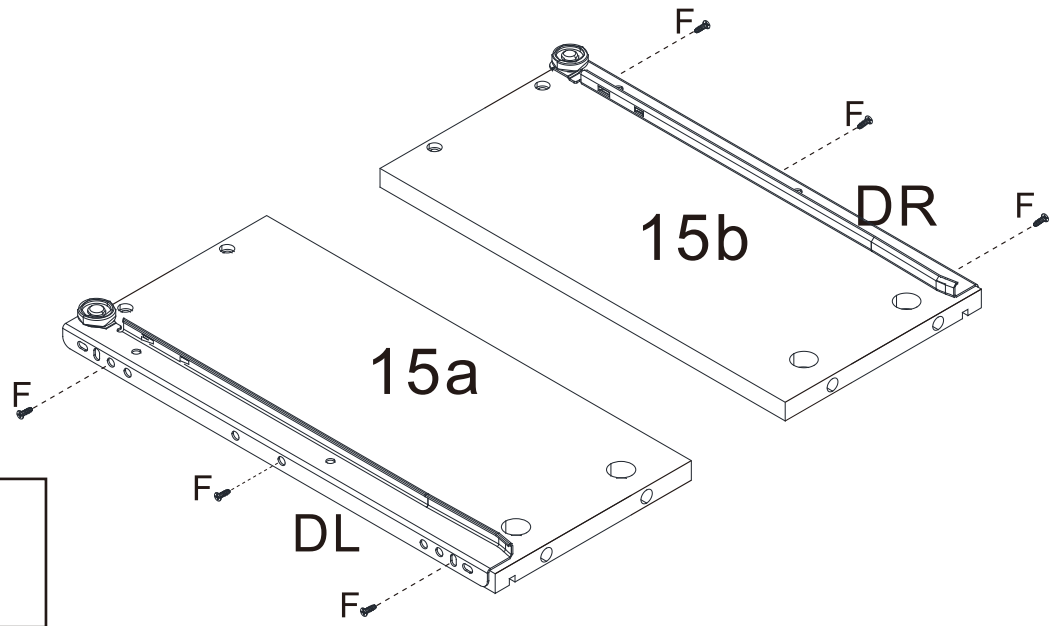


| | |
|---|---|
| F  x18 | |
| DL  x3 | |
| DR  x3 | |

X3


## step 23

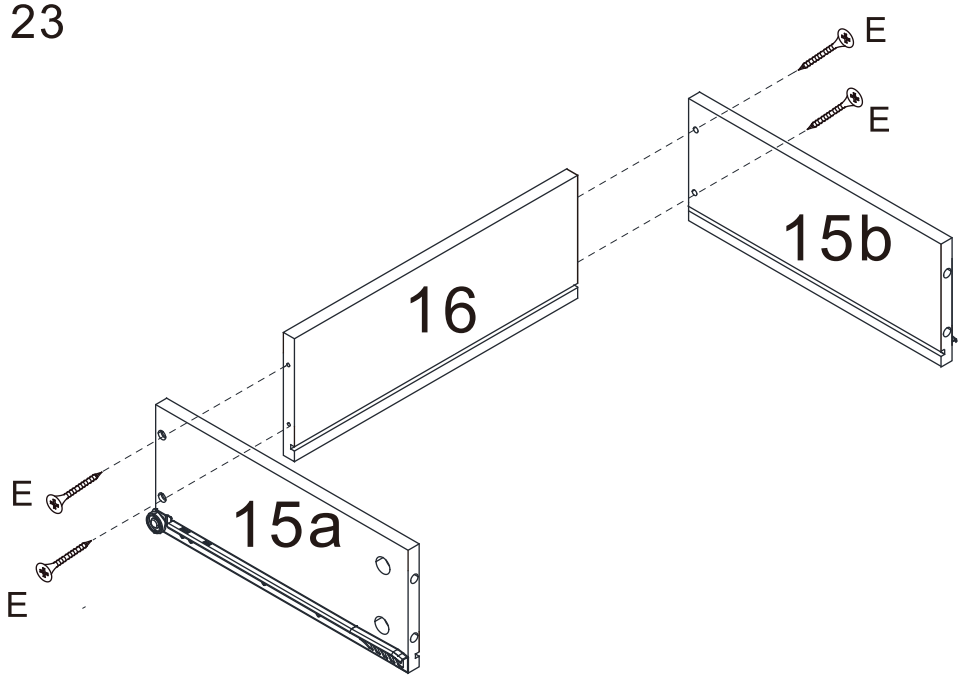



| |
|---|
| E  x12 |

X3


## step 24

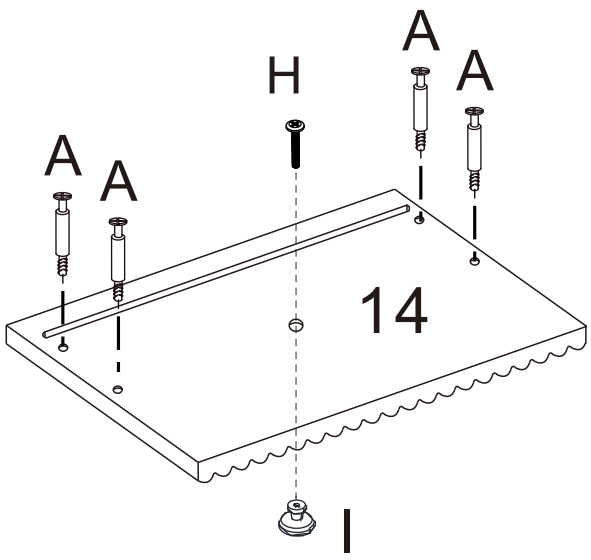


| | |
|---|---|
| A x12 |  |
| H x3 |  |
| I x3 |  |

X3


## step 25

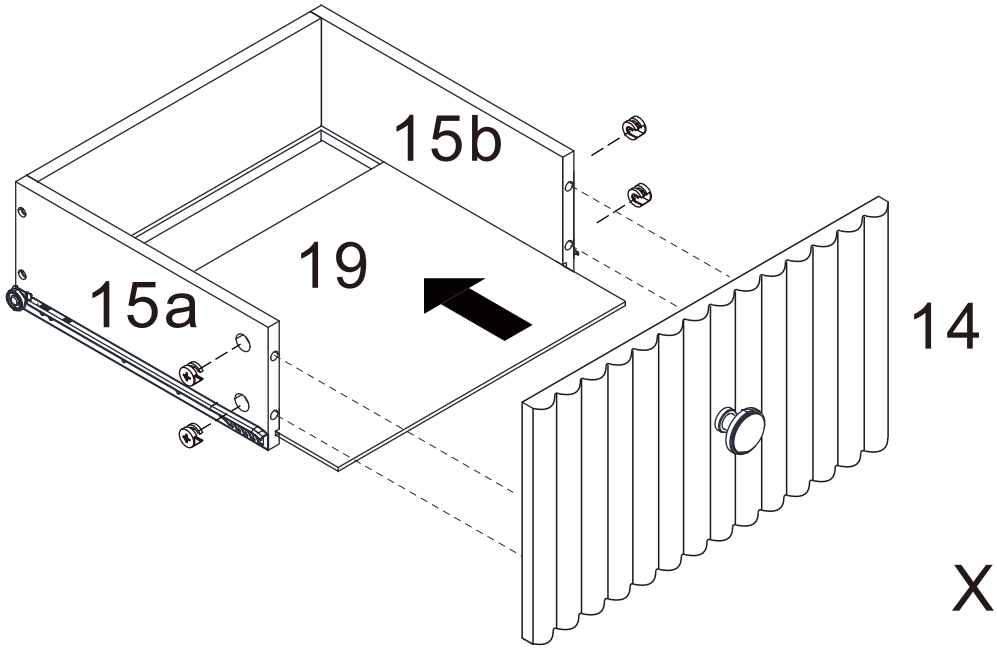


| | |
|---|---|
| B x12 |  |


X3


step 26

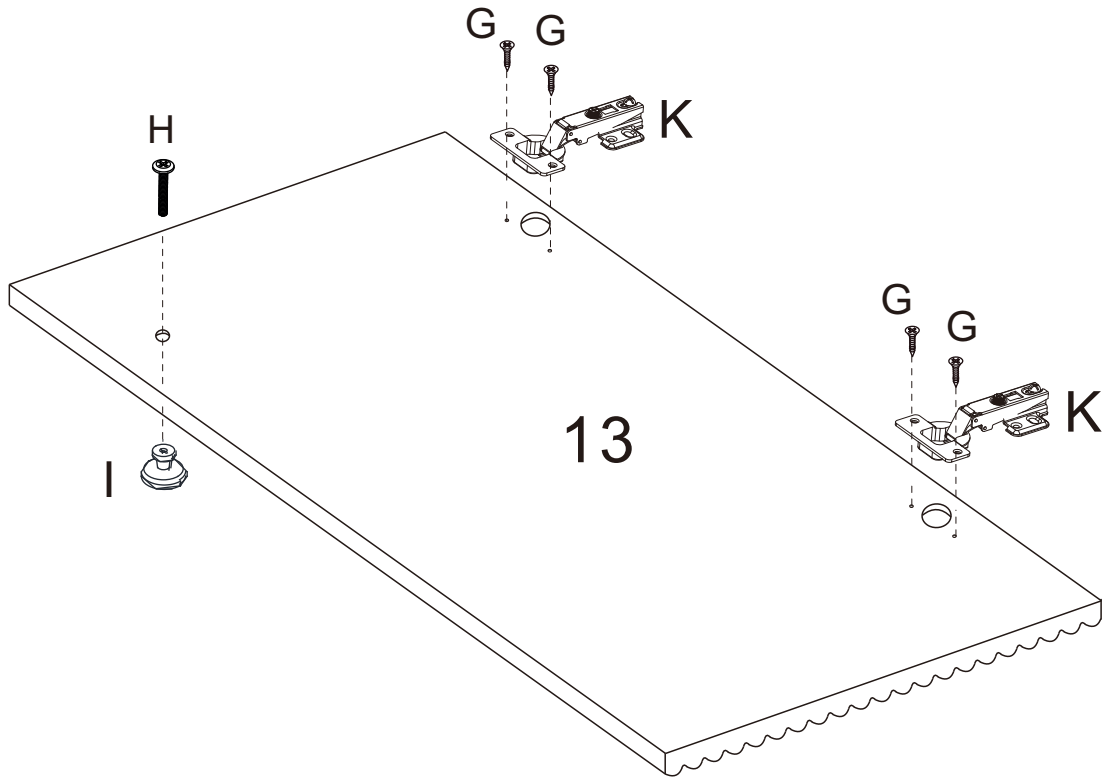




| | |
|---|---|
| G  x4 | |
| H  x1 | |
| I  x1 | |
| K  x2 | |

step 27

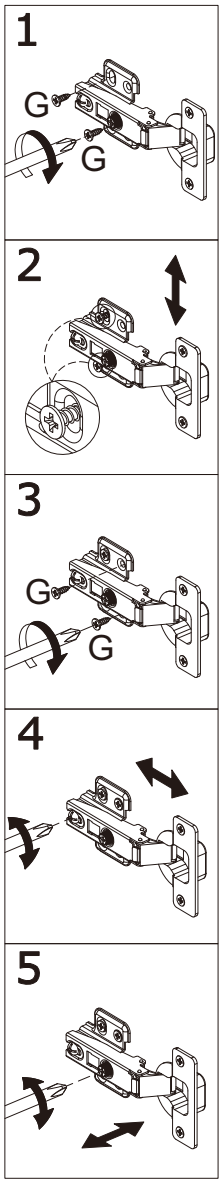


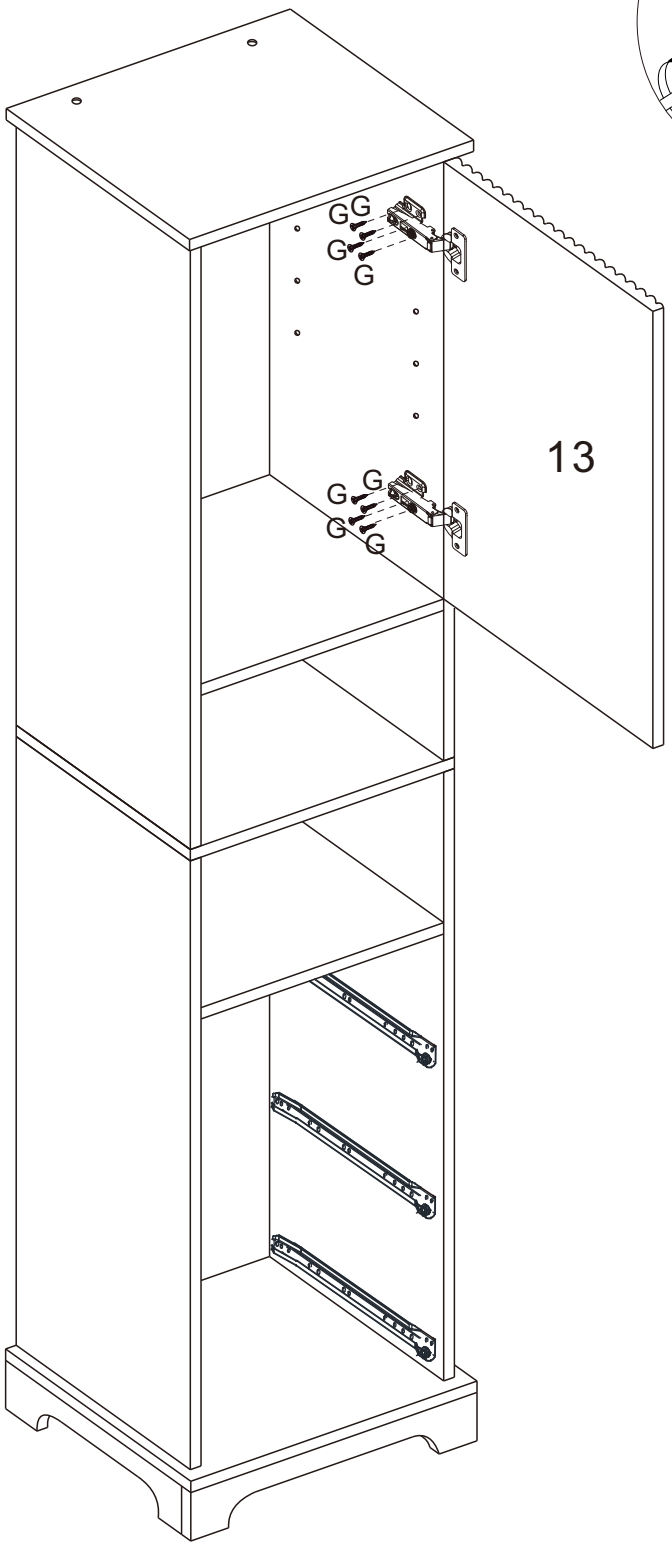


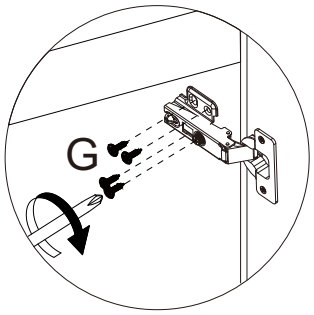
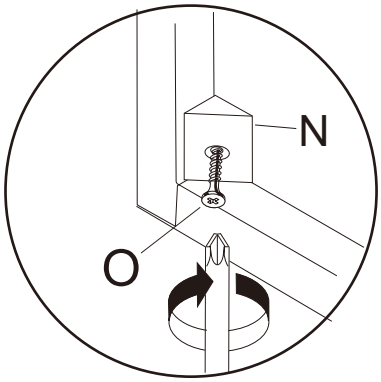


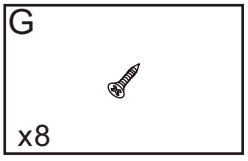
step 28

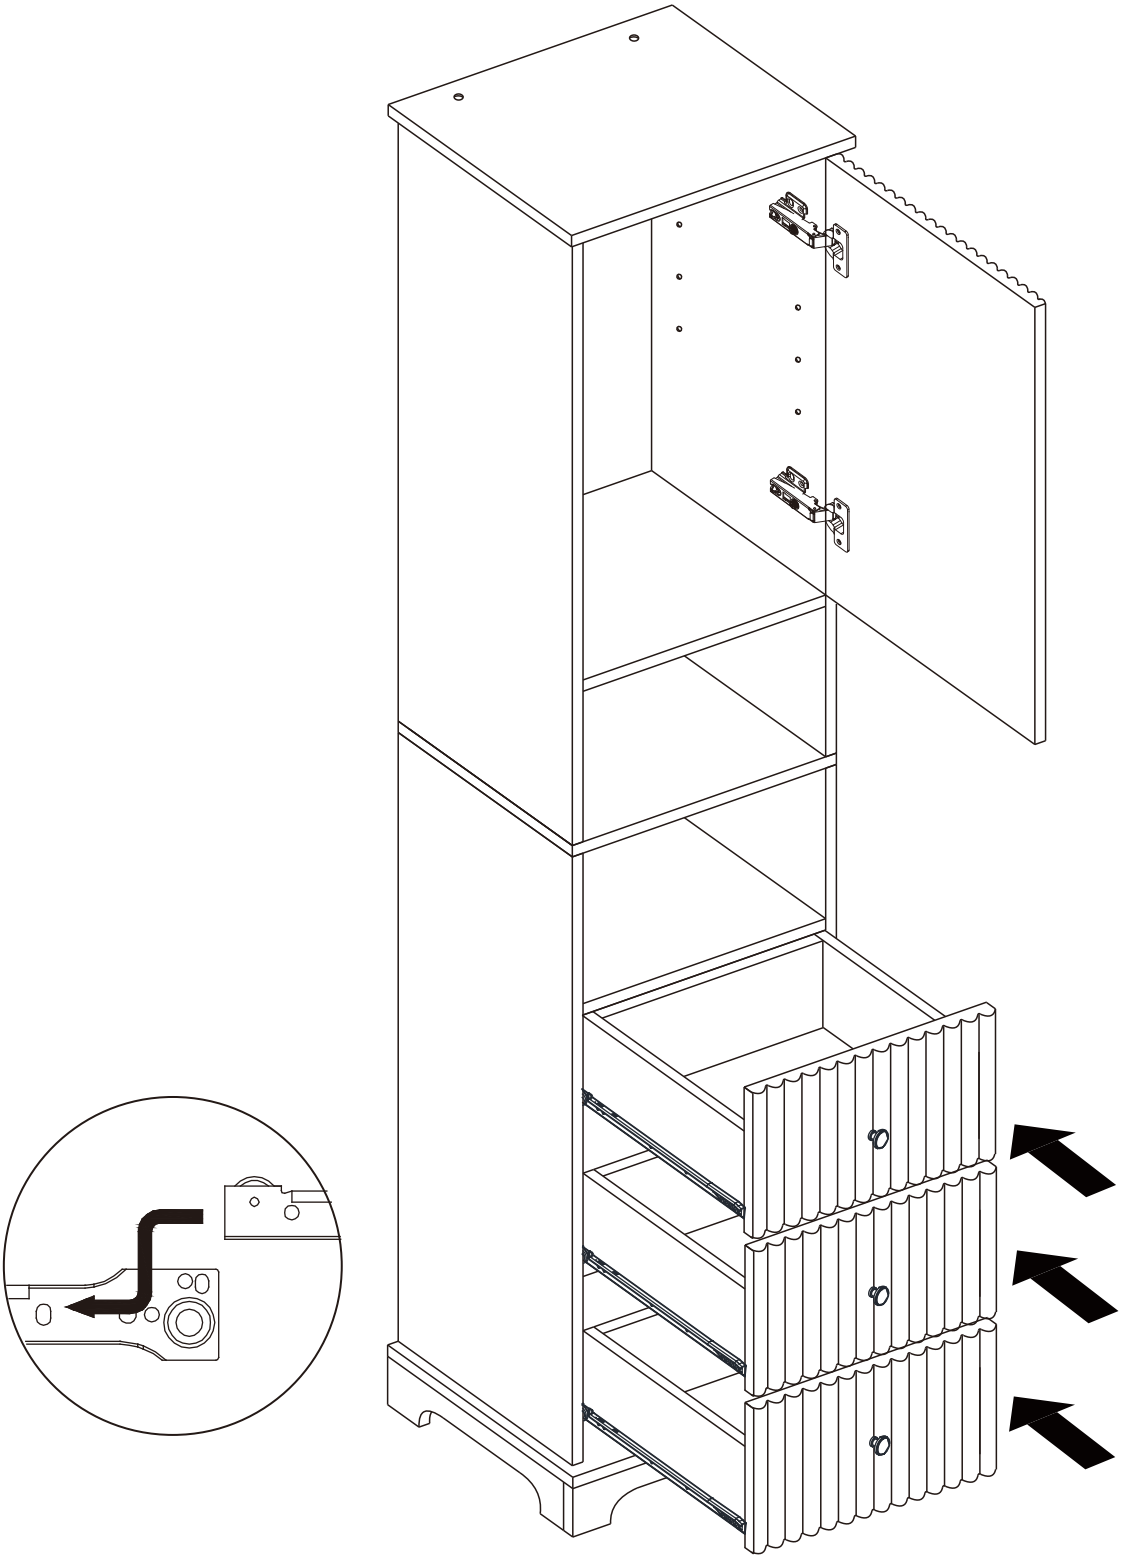


step 29

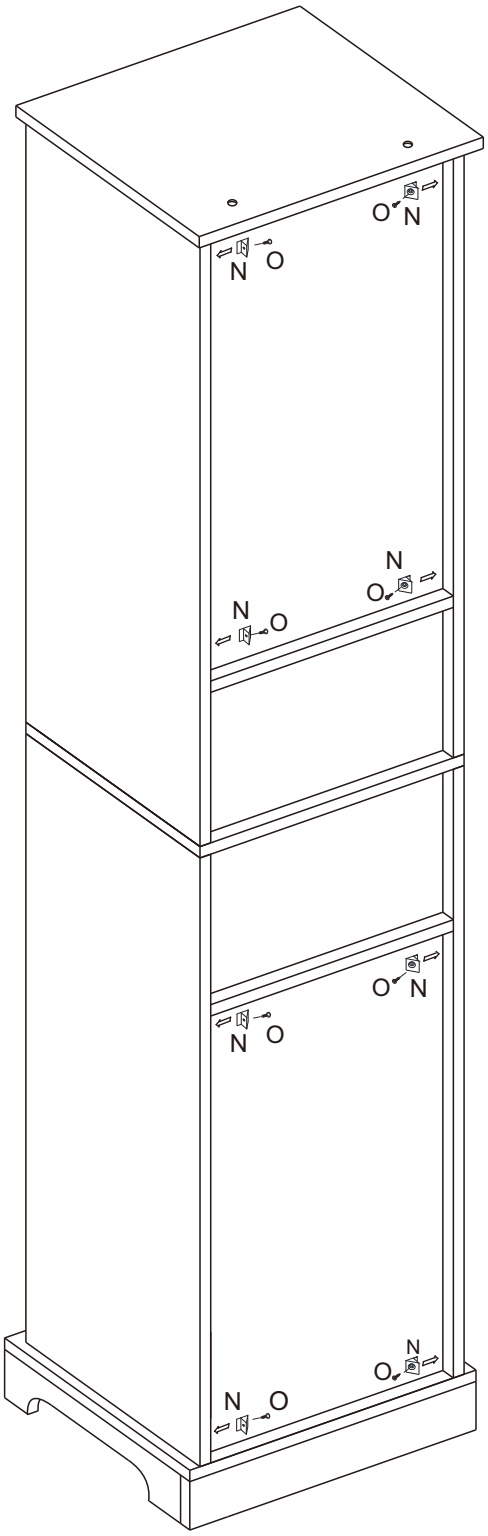




| | |
|---|---|
| N  x8 | |
| O  x8 | |

step 30

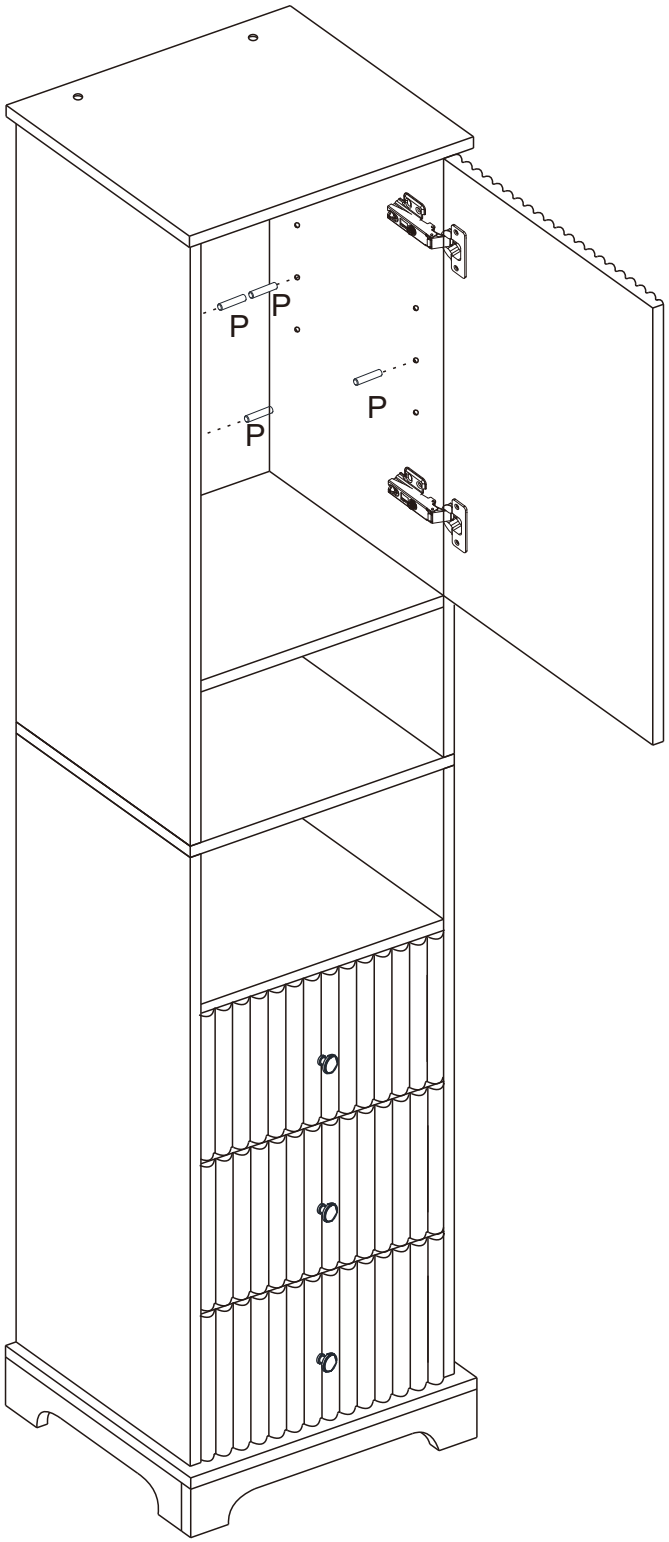

step 31

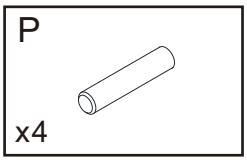

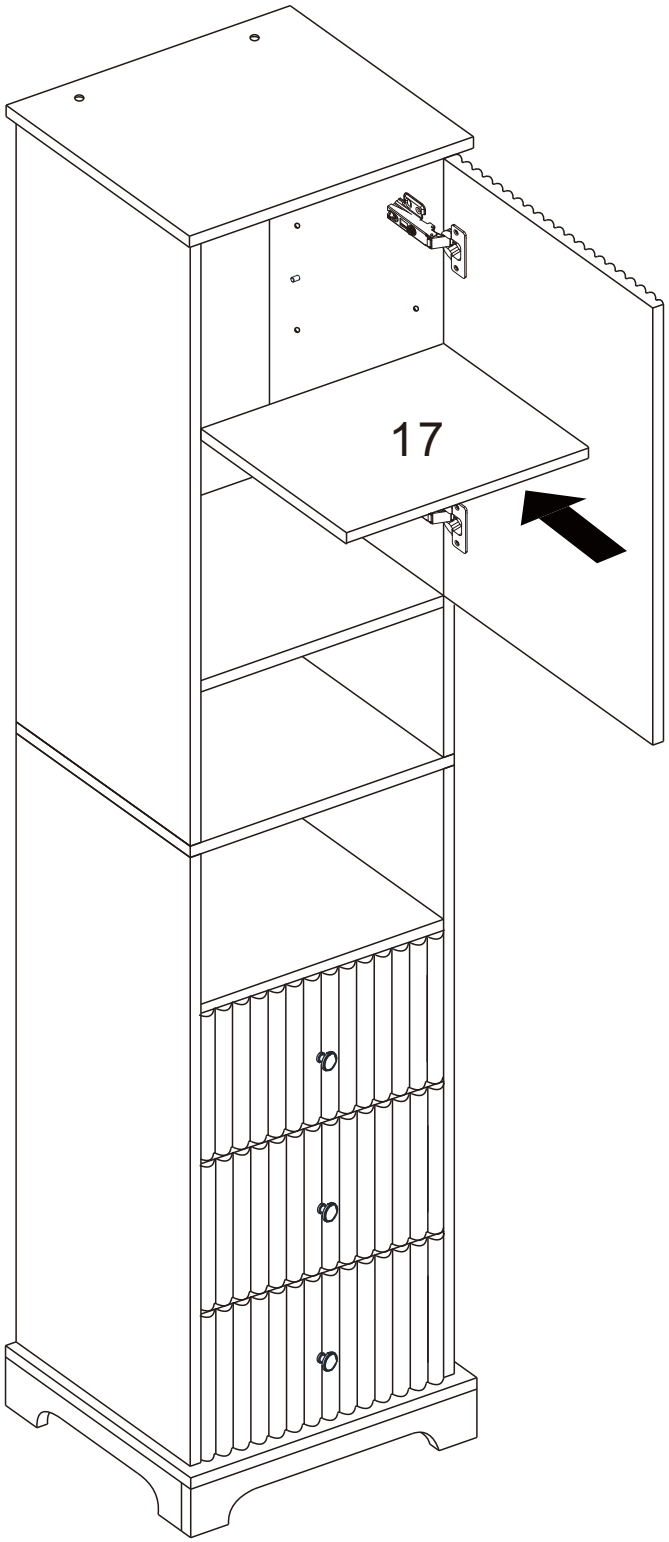step 32

