


Round Raised Garden Bed


Instructions for Assembly

Dimensions L48" x W48" x H18"

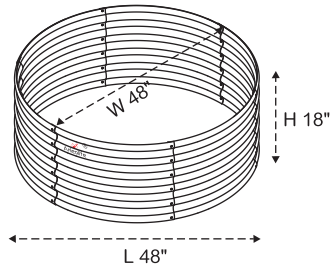

DUE TO THE MANUFACTURING PROCESS BED SIZING MAY VARY +/-2"(50MM)

TOOLS PROVIDED

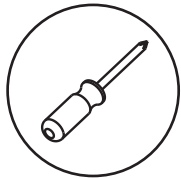

Screwdriver



A pair of gloves



1 PERSON
ASSEMBLY



UP TO 30 MIN.
ASSEMBLY

Tip: If possible, an **electric drill** could be recommended for shortening your installing time.

Color your Gardenlife



Anleolife provides different shapes, different lengths & heights, different colors, you can do more with your great imagination.

	ANG001	ANG002	ANG003	ANG004
Shape	Oval	Oval	Oval	Oval
Dimension	72"x36"x24"H	72"x36"x24"H	96"x48"x24"H	96"x48"x24"H
Capacity	269 Gal.	269 Gal.	478 Gal.	478 Gal.
Color	Quartz Grey	Antique White	Quartz Grey	Antique White
Material	Galvanized Steel	Galvanized Steel	Galvanized Steel	Galvanized Steel
Open Bottom	✓	✓	✓	✓
Weatherproof	✓	✓	✓	✓
Anti-Rust	✓	✓	✓	✓
Package	1 Pack	1 Pack	1 Pack	1 Pack

	ANG005	ANG006	ANG007	ANG009
Shape	Round	Round	Retangular	Retangular
Dimension	48"x48"x18"H	48"x48"x18"H	96"x48"x18"H	72"x36"x18"H
Capacity	179 Gal.	179 Gal.	359 Gal.	202 Gal.
Color	Quartz Grey	Antique White	Quartz Grey	Quartz Grey
Material	Galvanized Steel	Galvanized Steel	Galvanized Steel	Galvanized Steel
Open Bottom	✓	✓	✓	✓
Weatherproof	✓	✓	✓	✓
Anti-Rust	✓	✓	✓	✓
Package	2 Pack	2 Pack	1 Pack	1 Pack



	ANG010	ANG011	ANG012	ANG013
Shape	Oval	Oval	Oval	Oval
Dimension	72"x24"x18"H	96"x48"x18"H	144"x36"x18"H	144"x36"x18"H
Capacity	135 Gal.	359 Gal.	404 Gal.	404 Gal.
Color	Quartz Grey	Quartz Grey	Quartz Grey	Antique White
Material	Galvanized Steel	Galvanized Steel	Galvanized Steel	Galvanized Steel
Open Bottom	✓	✓	✓	✓
Weatherproof	✓	✓	✓	✓
Anti-Rust	✓	✓	✓	✓
Package	1 Pack	1 Pack	1 Pack	1 Pack



Enjoy Your Garden Time



Anleolife®

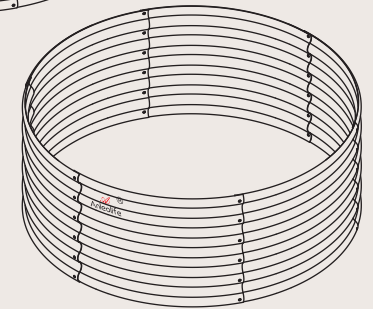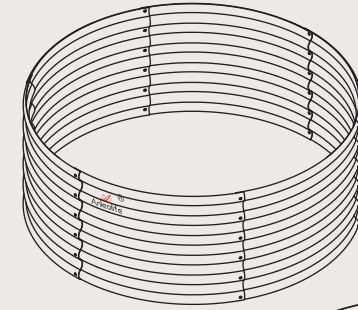

Sturdy



Permeability



Protection



Weather Resistant



Rust Resistant



Easy Assembly

INSTRUCTION MANUAL

Galvanized Raised Garden Bed


ANG005 / ANG006



PACKING LIST


A

Curved Panels

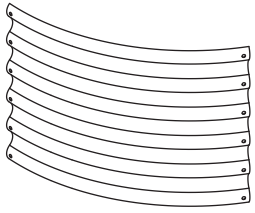

6 pcs

B



M6 Dacromet Wingnuts

36 pcs

C


M6x 16mm Dacromet Screws




36 pcs

ASSEMBLY STEPS:


1 Overlap the A curved panels assemblies & align the empty connector holes.

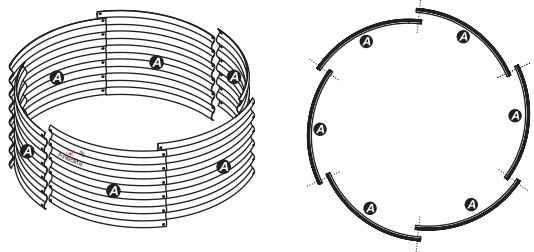


2 Secure and tighten the panels with B wingnuts and C screws.

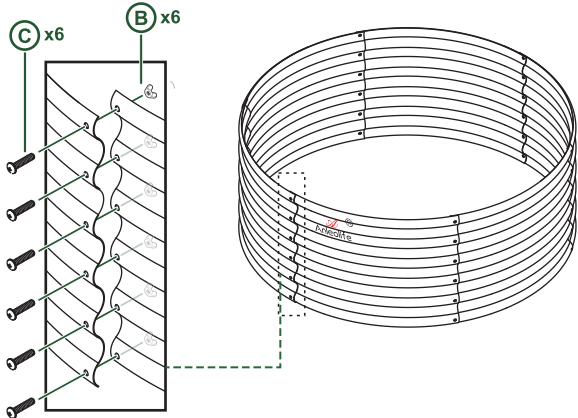

Make sure to keep the wingnuts inside and the screws outside, tighten them for reinforcement. Failure to tighten the wingnuts and screws to its maximum may cause failure

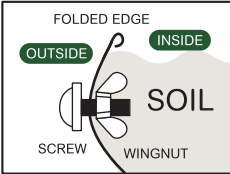

3 Repeat steps 1 & 2 to assemble another round garden bed.

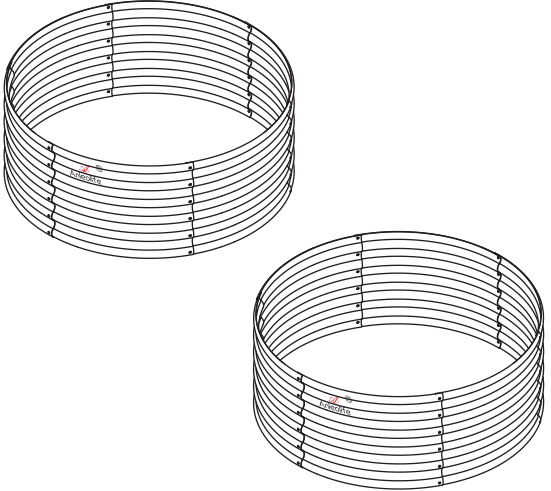

HELP CENTER

If you need any help, please feel free to contact us anytime. We are here to help. Visit us at: www.anleolifeshop.com

- Product Information
- Online Inquiry
- Item Assembly
- Orders FAQs
- Returns & Refunds

NOTICE

- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Be aware that some parts are heavy, the protective equipment such as closed toe shoes is recommended, a pair of gloves is provided.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions.