


Assembly Manual

Bookcase


BK001

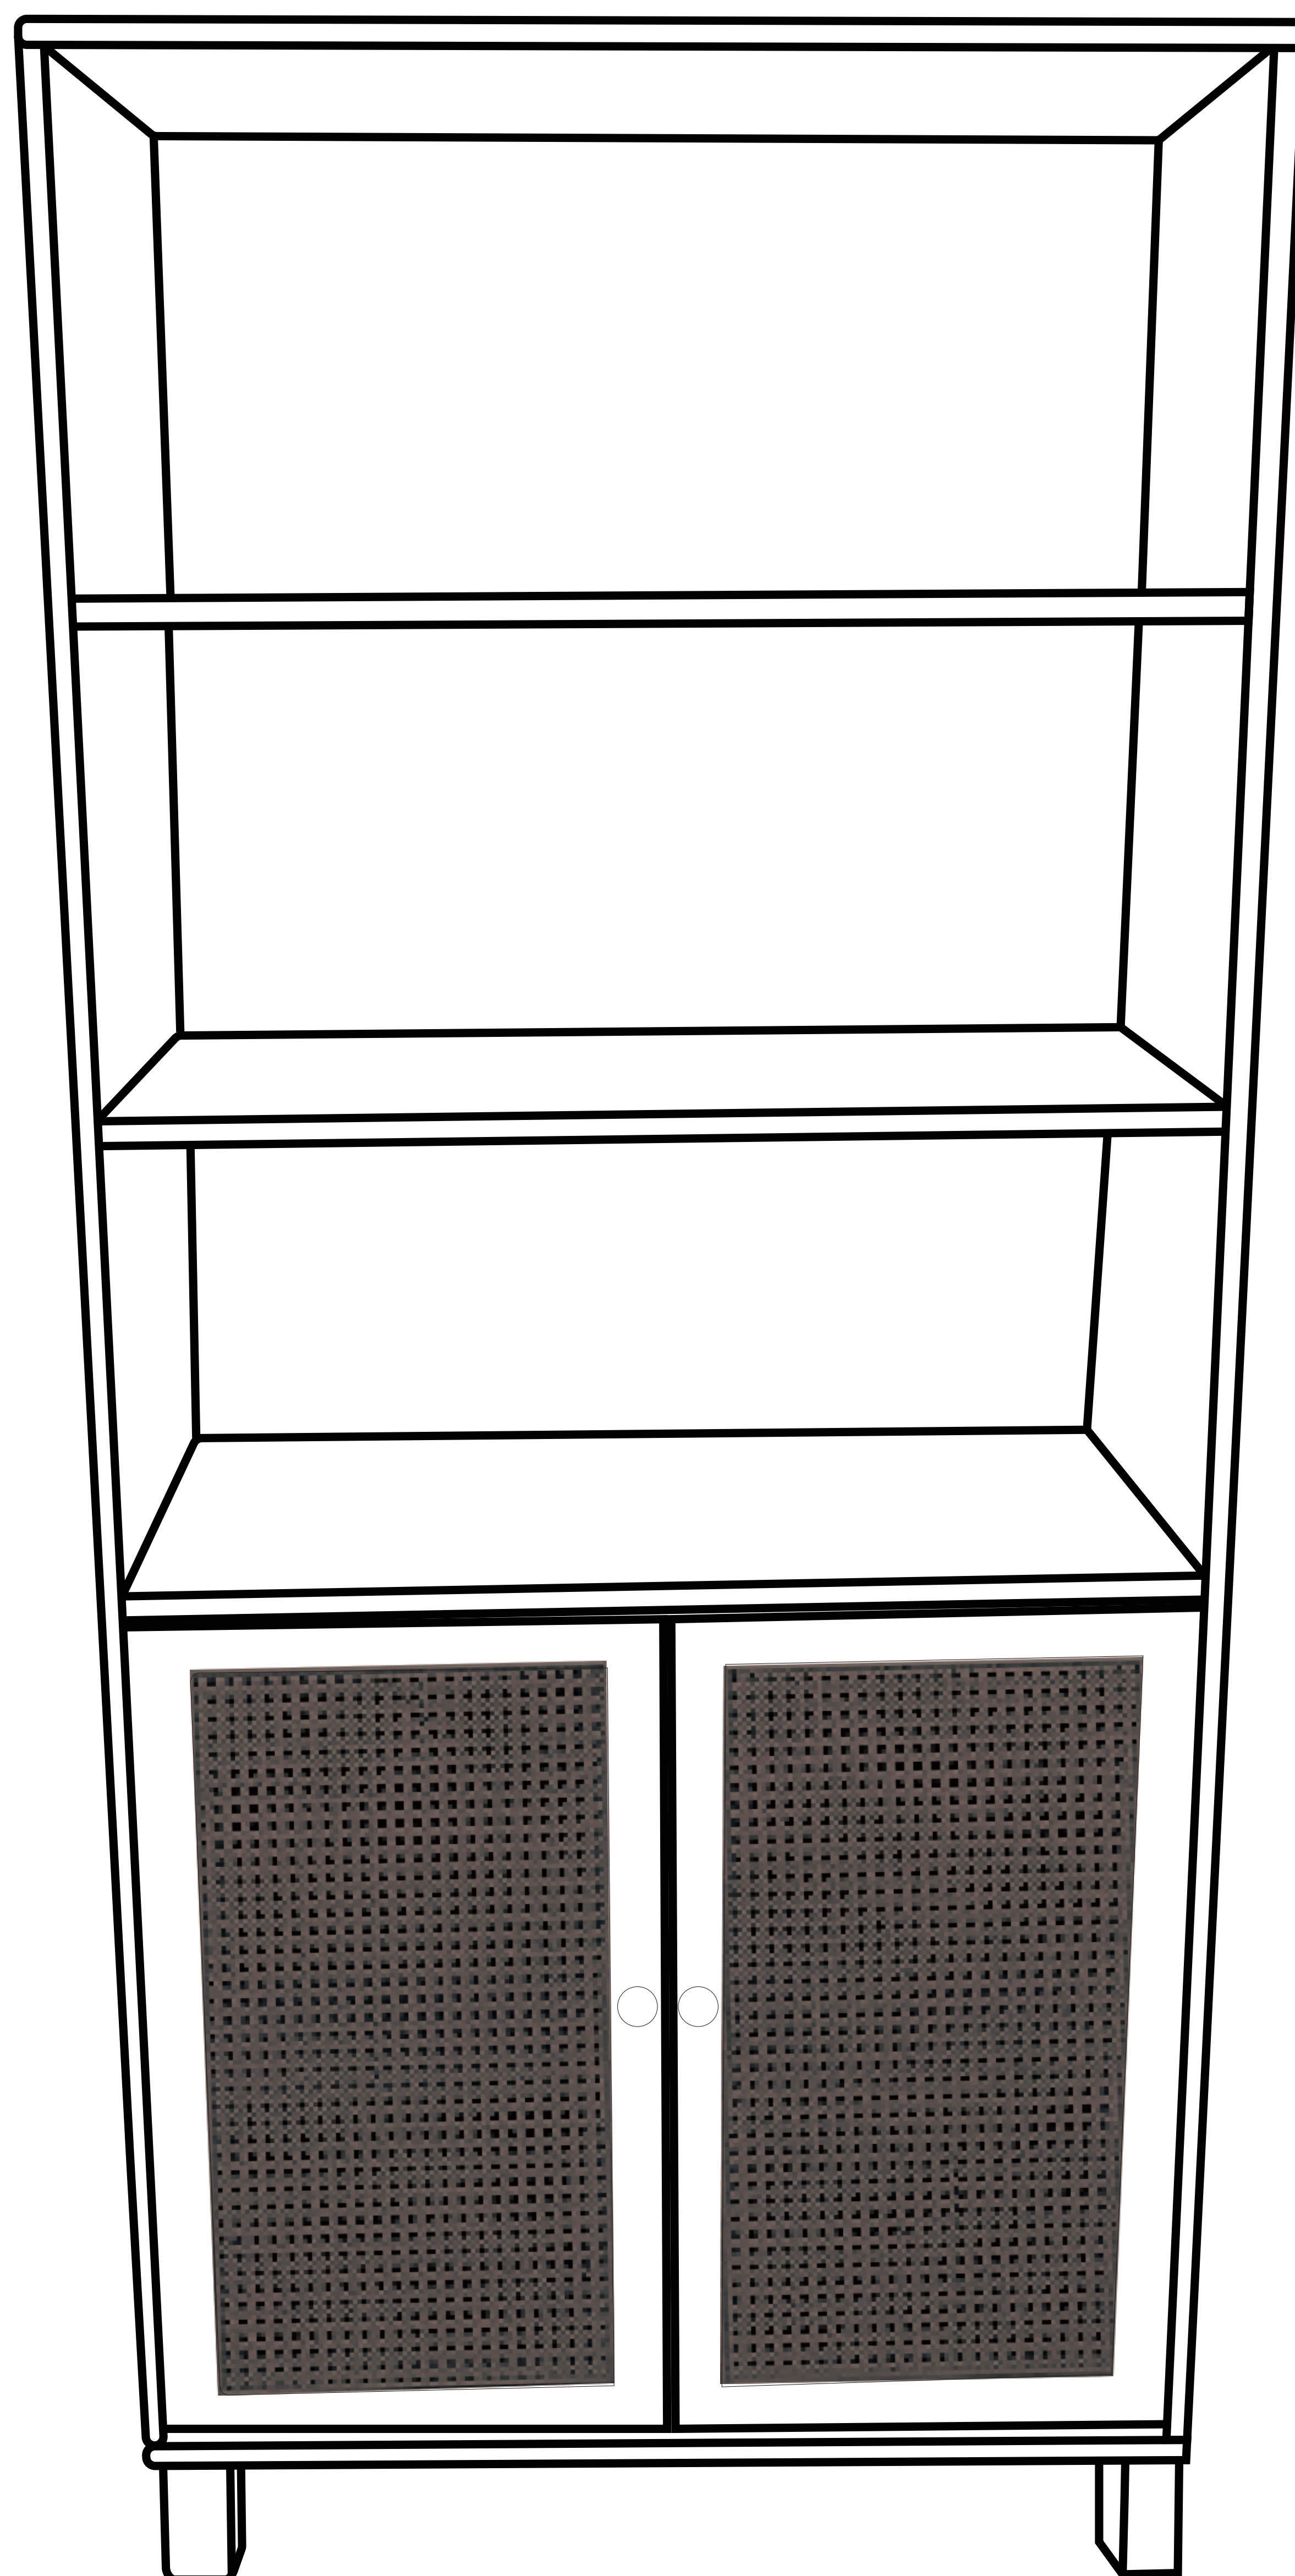

Please read this manual carefully before any operation and keep it properly for future use.

If any problems on our product, please feel free to contact us at **ecservice@isunon.com**.


Exploded View

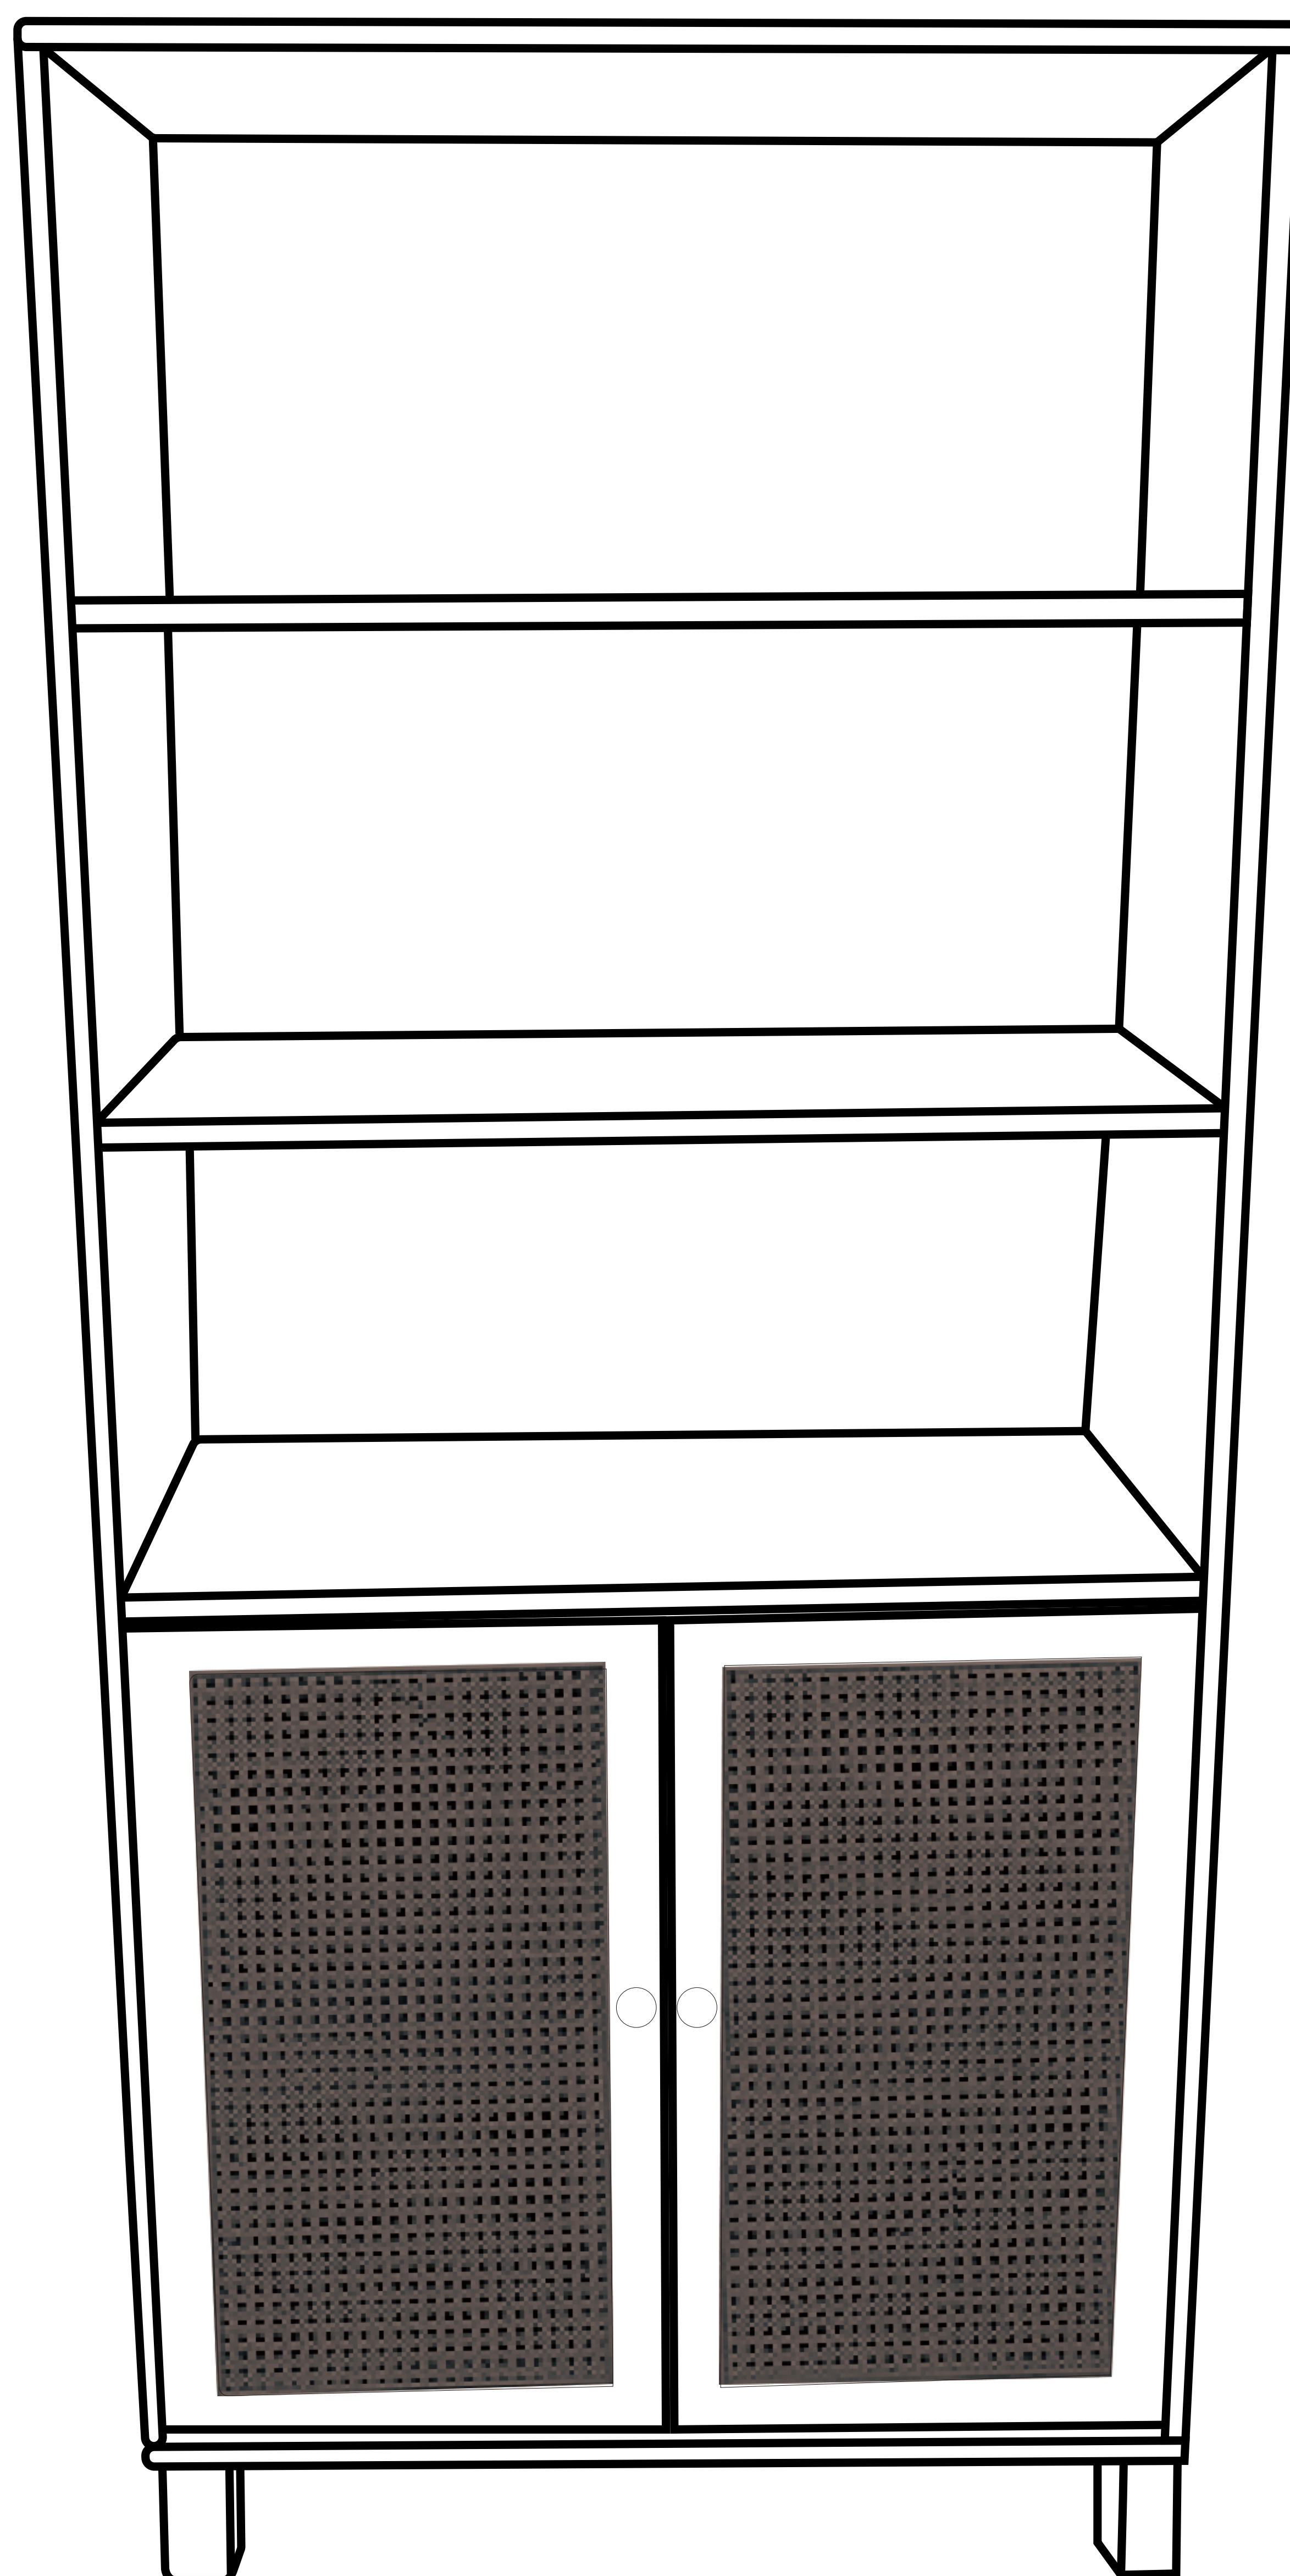

Components List












15 min














Assembly Time

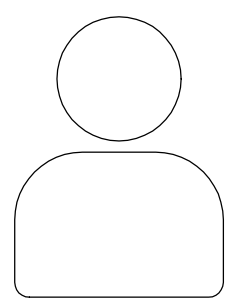

One People

Note:The number after "+" sign indicates the extra piece(s).

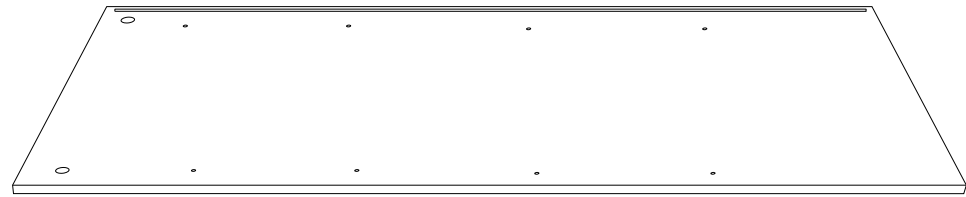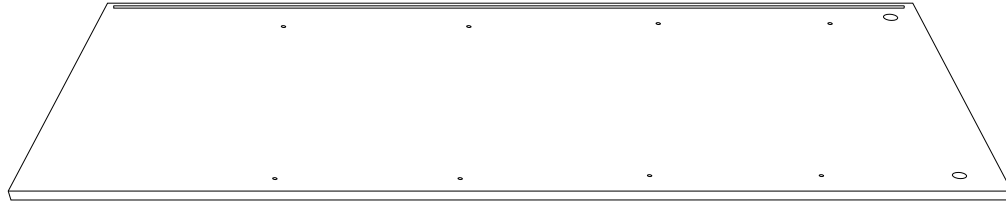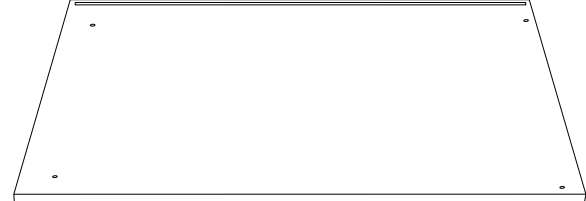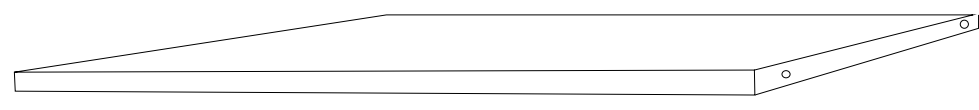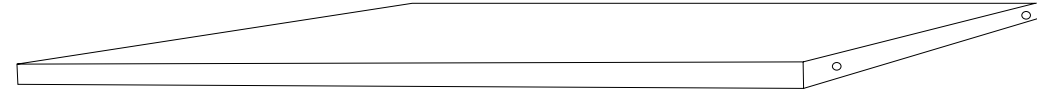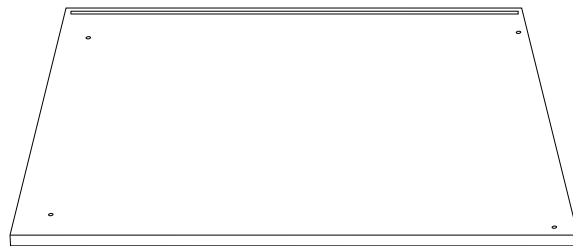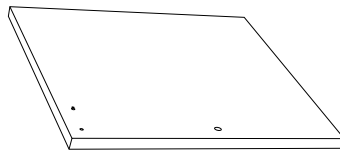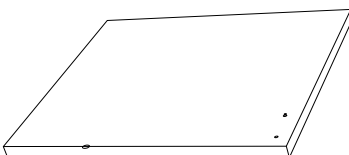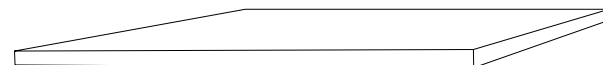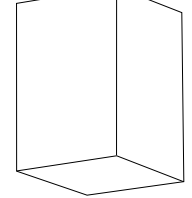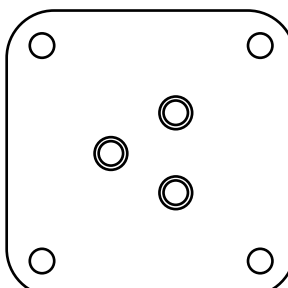
 1 *1	 2 *1	 3 *1
 4 *1	 5 *1	 6 *2
 7 *1	 8 *1	 9 *1
 10 *1	 11 *2	 12 *4
 13 *4		

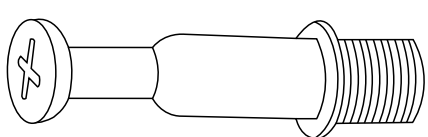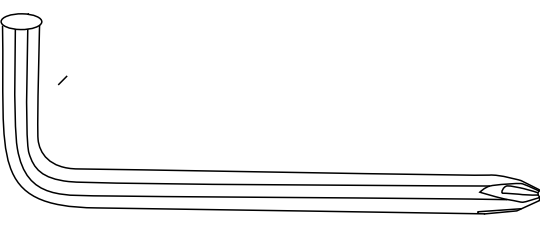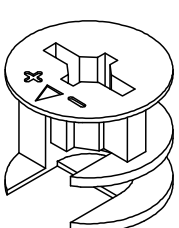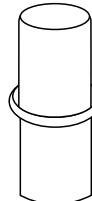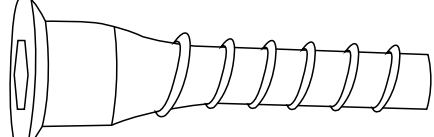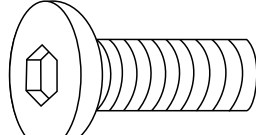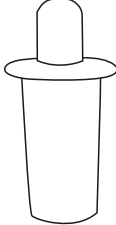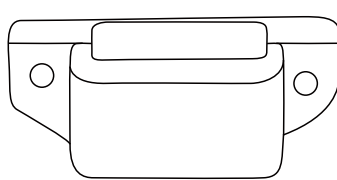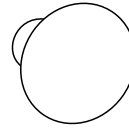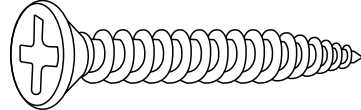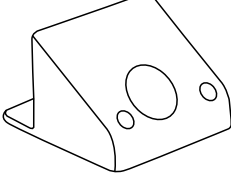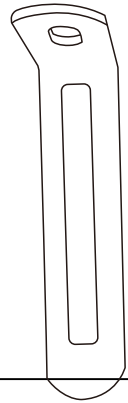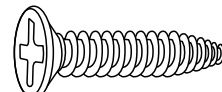
A 	B 	C 	D 	E 	F 
lock pin	Allen wrench	Klix cam	Board support	Wooden dowel	Bolt M7x35mm
8+1	1	8+1	8+1	4+1	4+1
G 	H 	I 	J 	K 	L 
Bolt M4x20mm	Bolt M3x13mm	Bolt M4x25mm	Door shaft	Magnetic piece	Magnetic piece
12+2	8+1	2+1	4+1	2+1	2+1
M 	N 	O 	P 	Q 	R 
handle	Bolt M3x15mm	Stabilizer	Bolt M4x30mm	Stabilizer	plastic component
2+1	14+2	12+2	2+1	2+1	2+1
S 					
Bolt M4x16mm					
16+2					


Assembly Instruction

STEP 1


Screw lock pins(A) into holes on standing board(1) using Allen wrench(B), and attach board supports(D) and wooden dowels(E) to the top board.

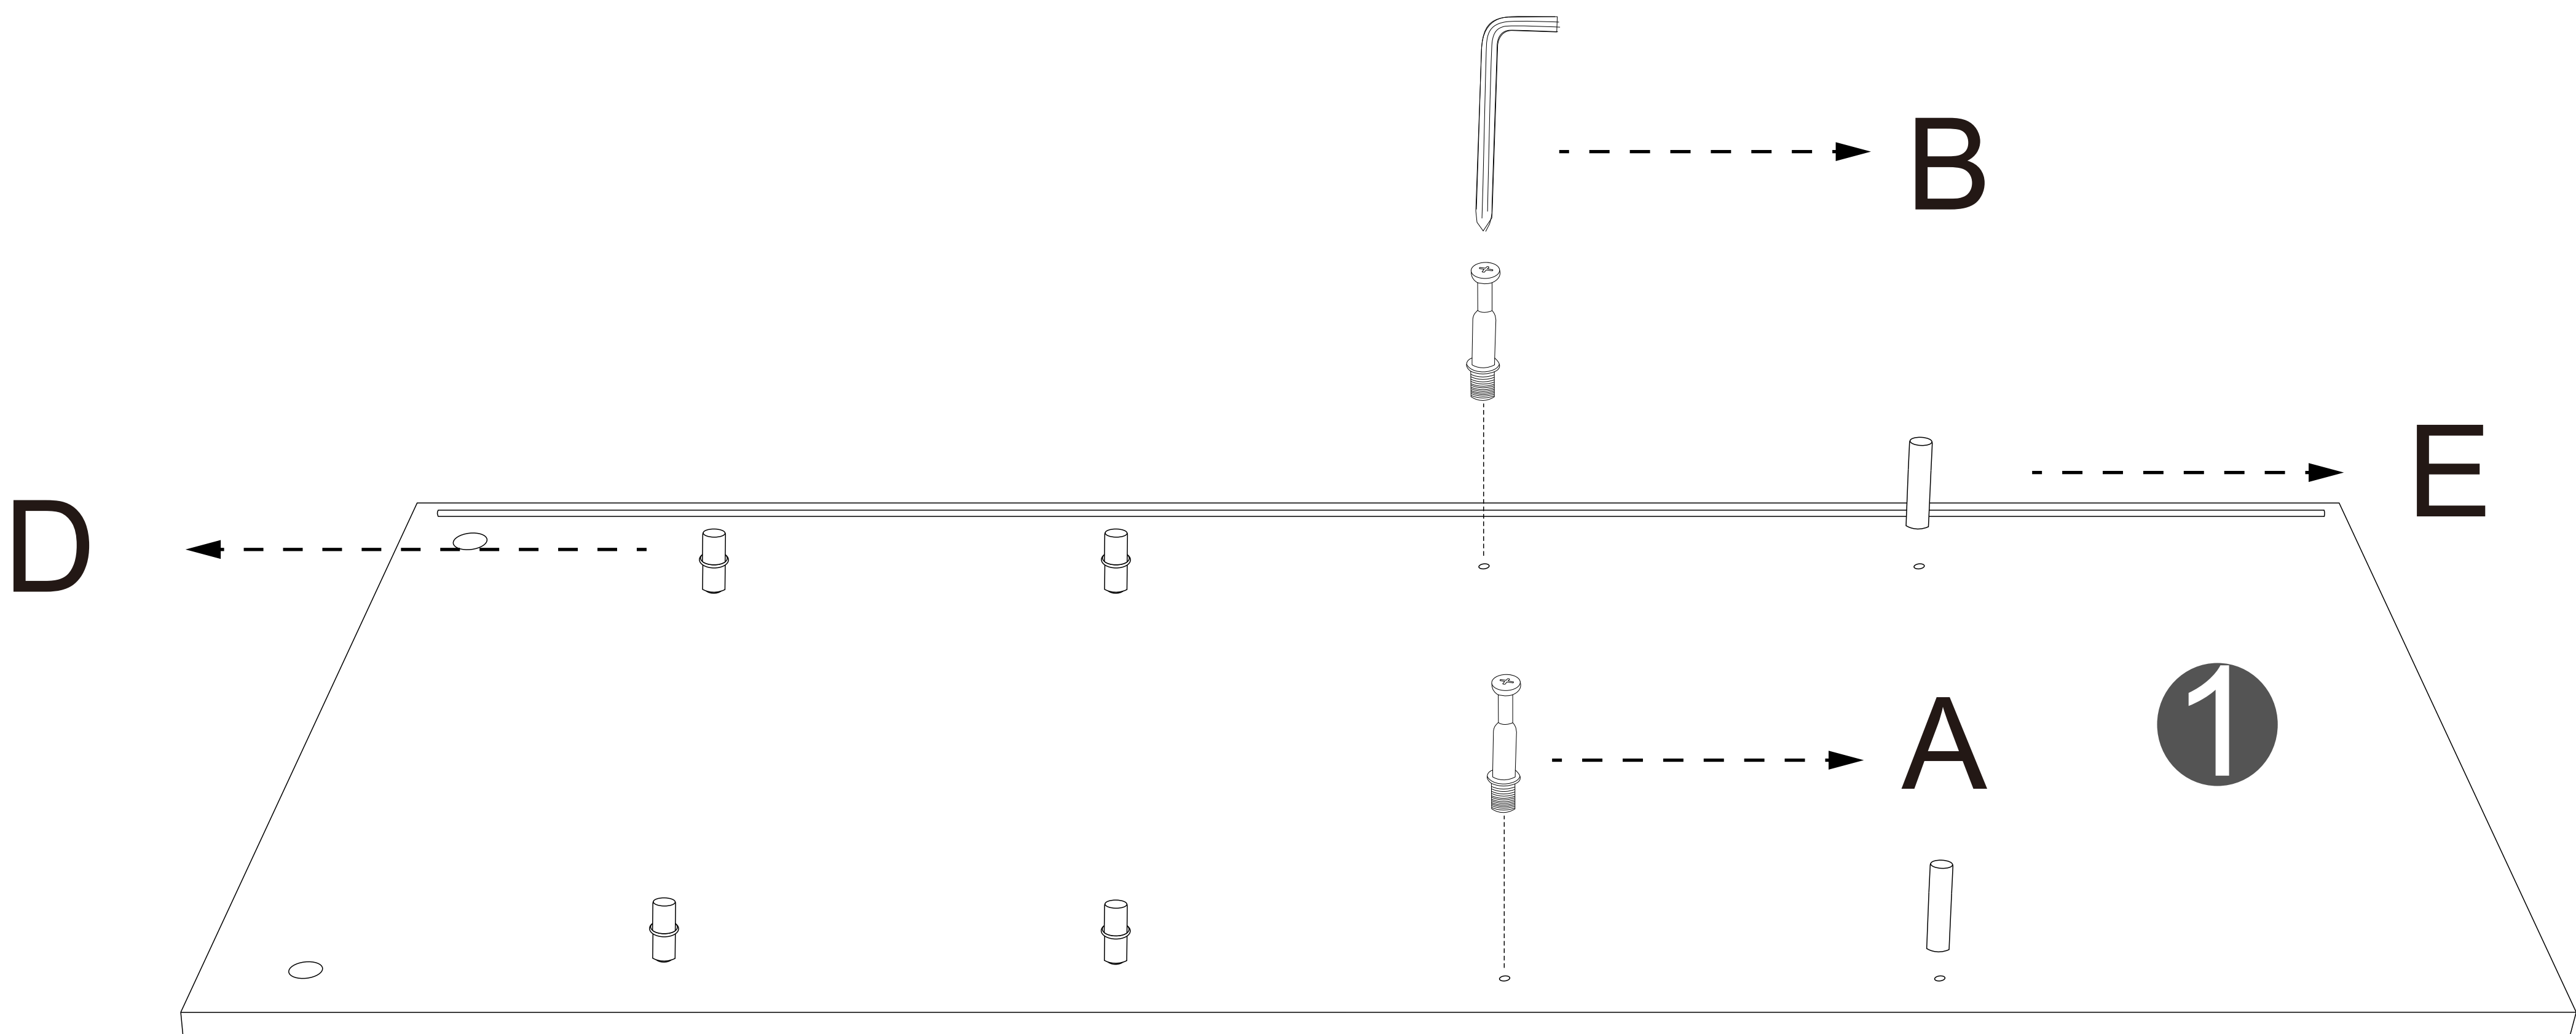


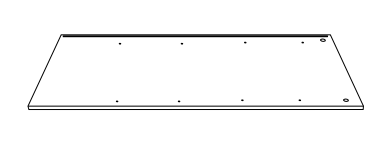 **1***1

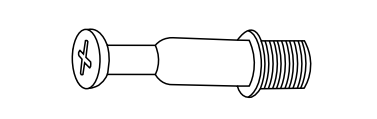 **A***2


 **B***1

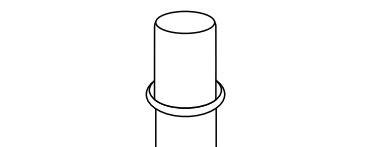
 **D***4

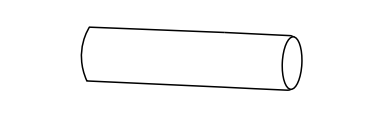
 **E***2

STEP 2


Screw lock pins(A) into holes on standing board(2) using Allen wrench(B), and attach board supports(D) and wooden dowels(E) to the top board.

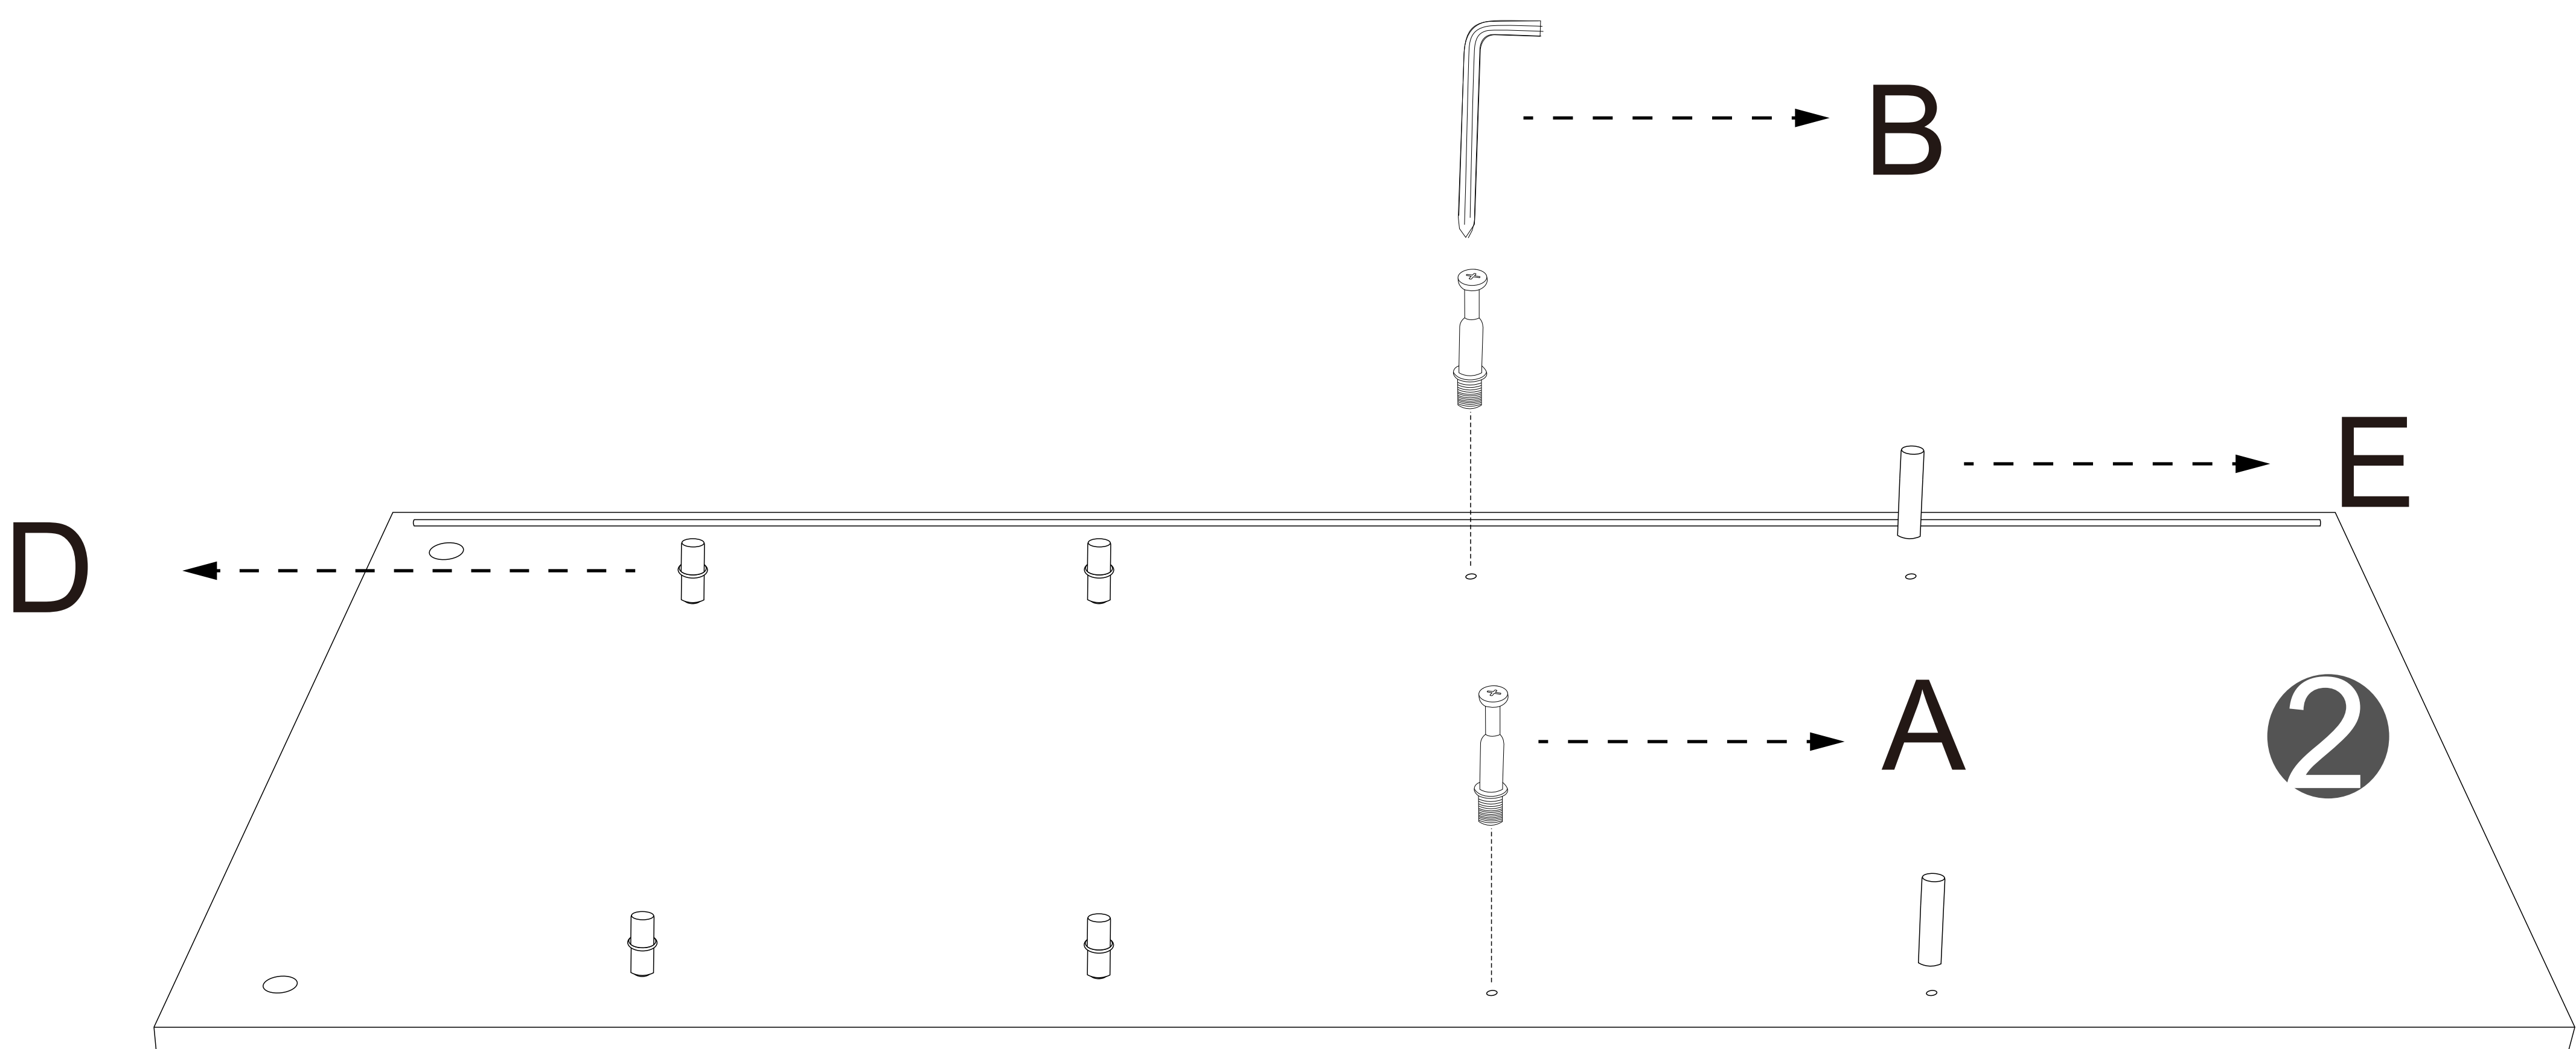


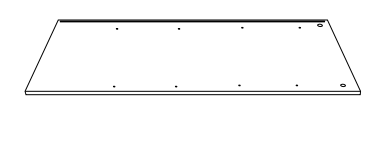 **2***1

 **A***2

 **B***1


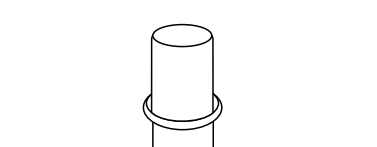
 **D***4

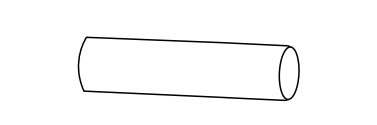 **E***2


Assembly Instruction

STEP 3

Screw lock pins(A) into holes on top board(3) using Allen wrench(B).

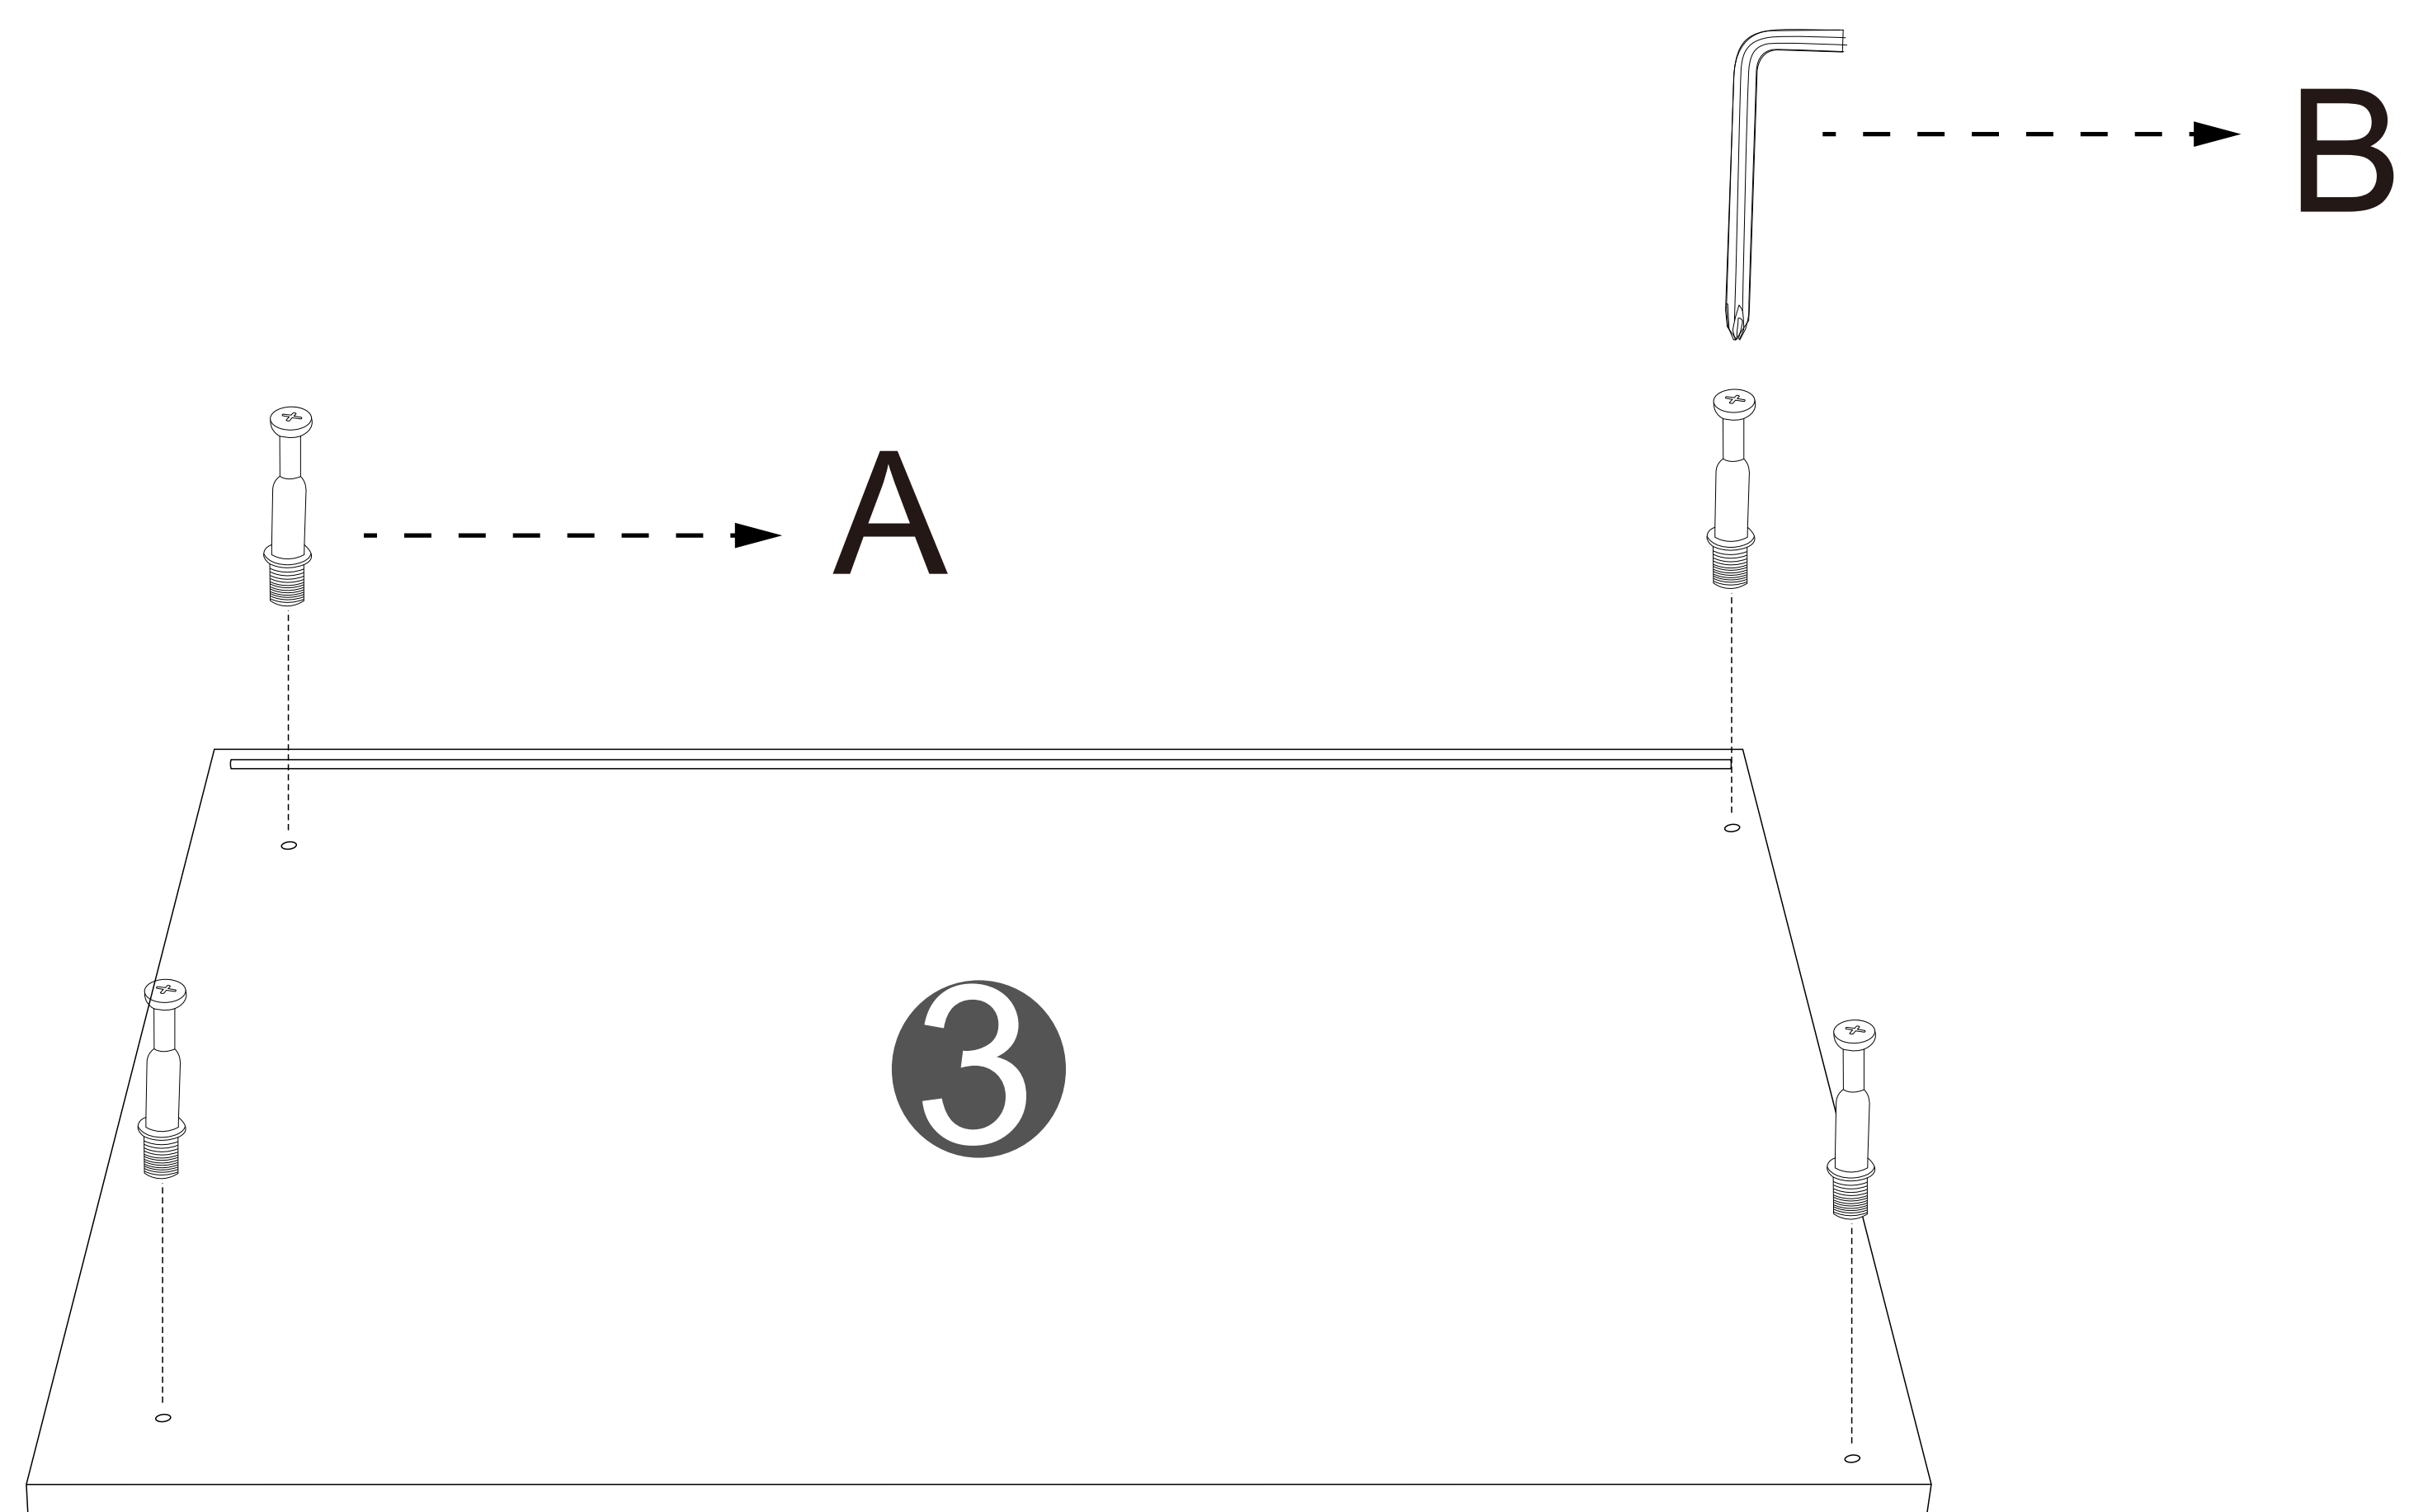



A*4

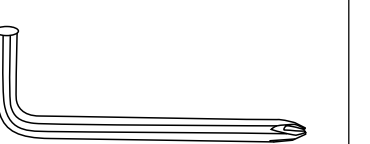

B*1

STEP 4

Attach top board and the board(4) to the left standing board(1).

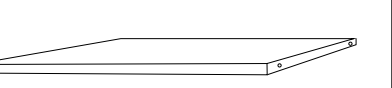
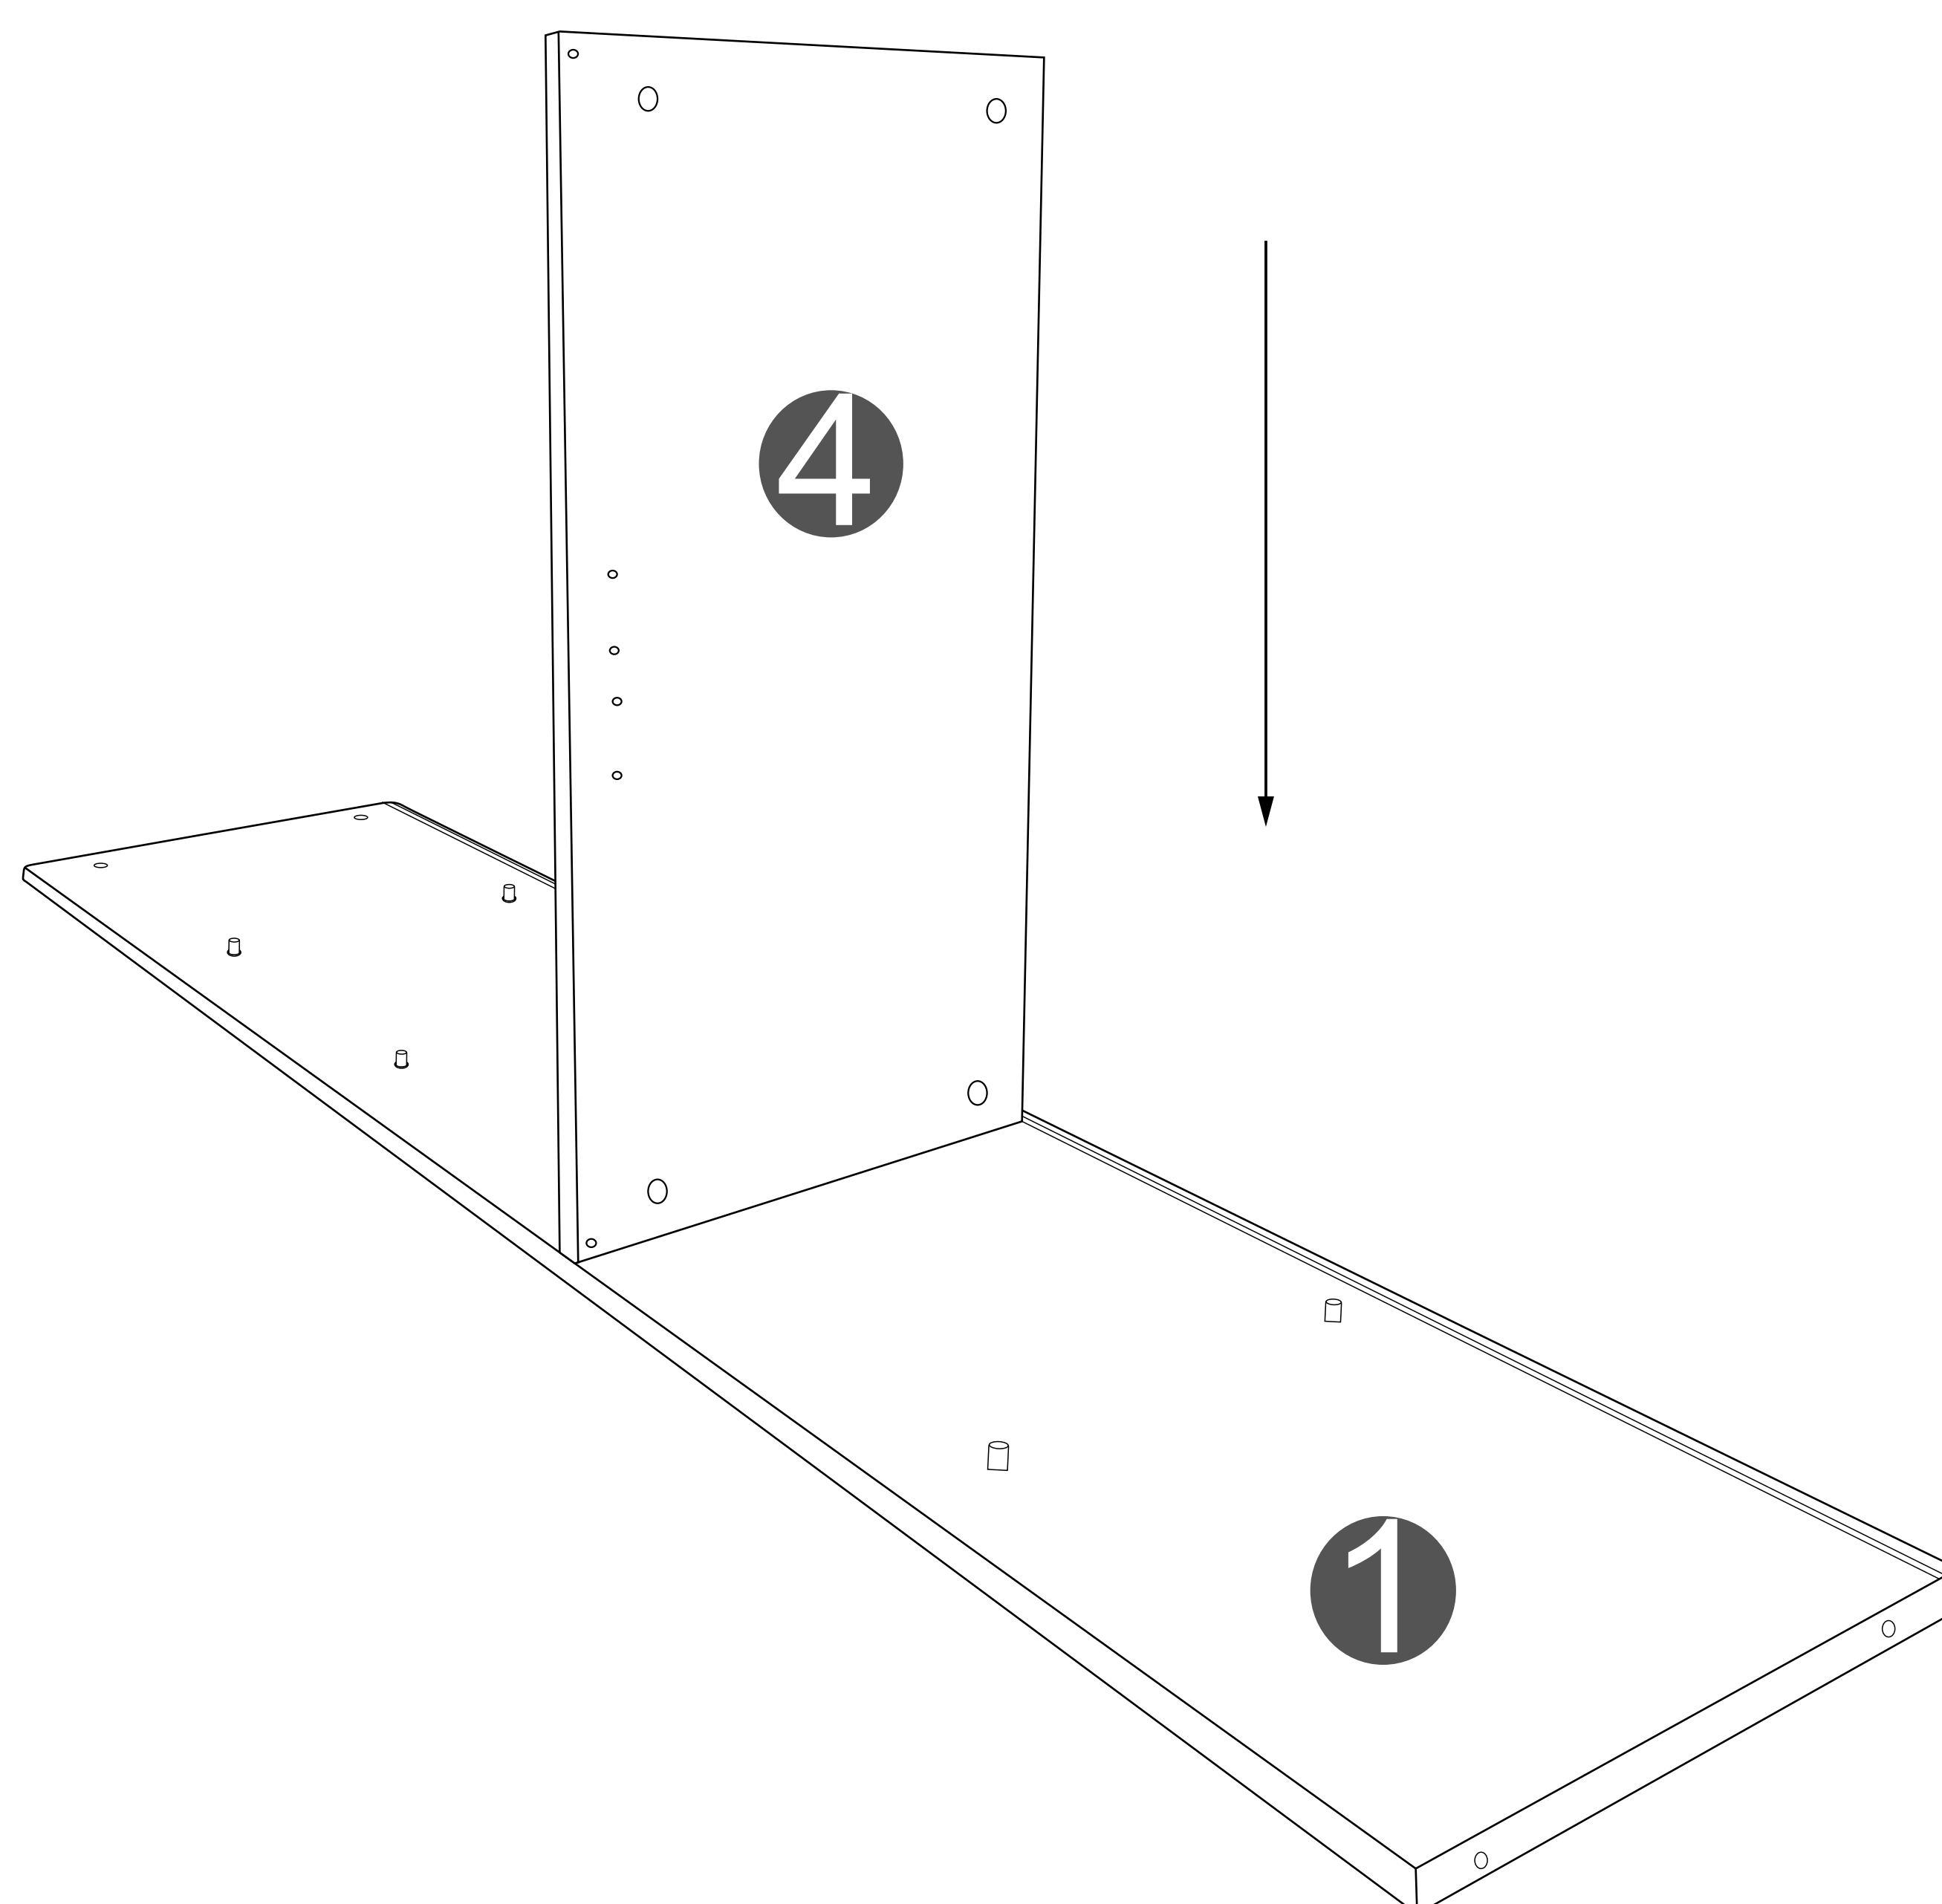


4*1


Assembly Instruction

STEP 5

Attach Klix cams(C) to the boards, and lock them using Allen wrench(B).

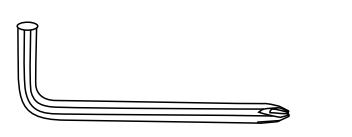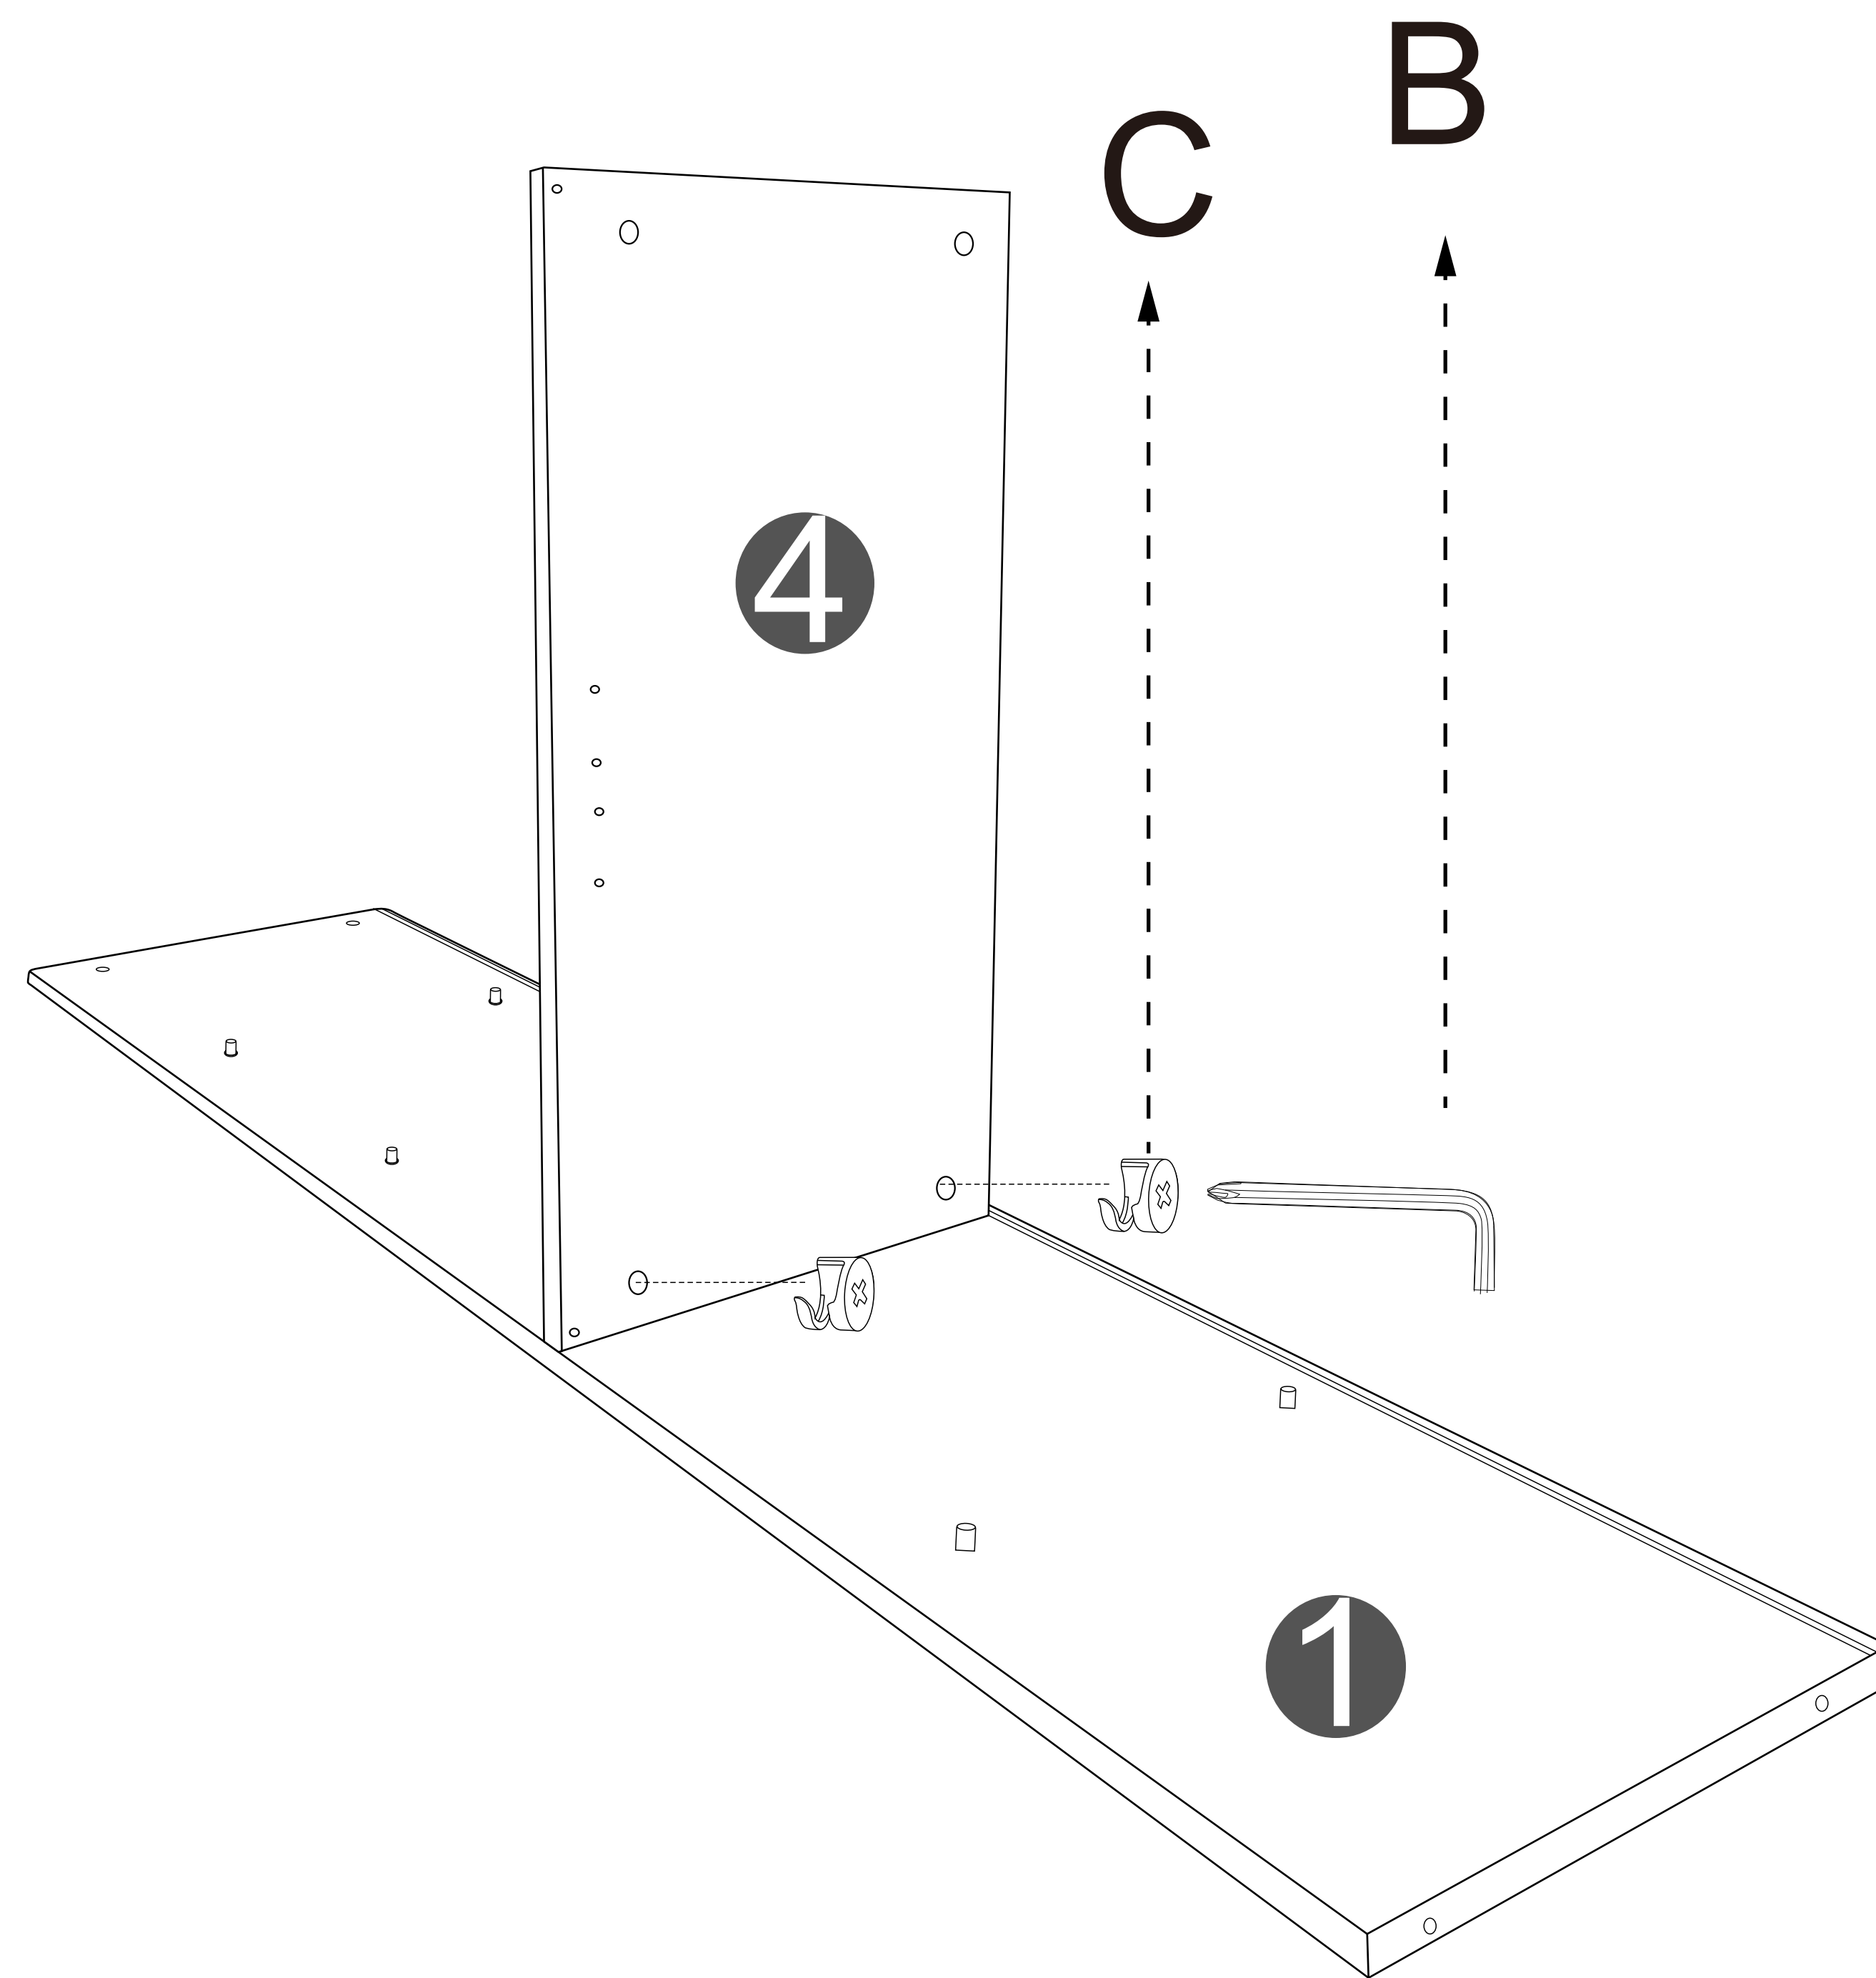


B*1

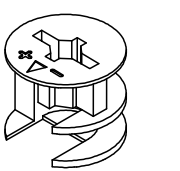

C*2

STEP 6

Attach layer board(5) to the left standing board.

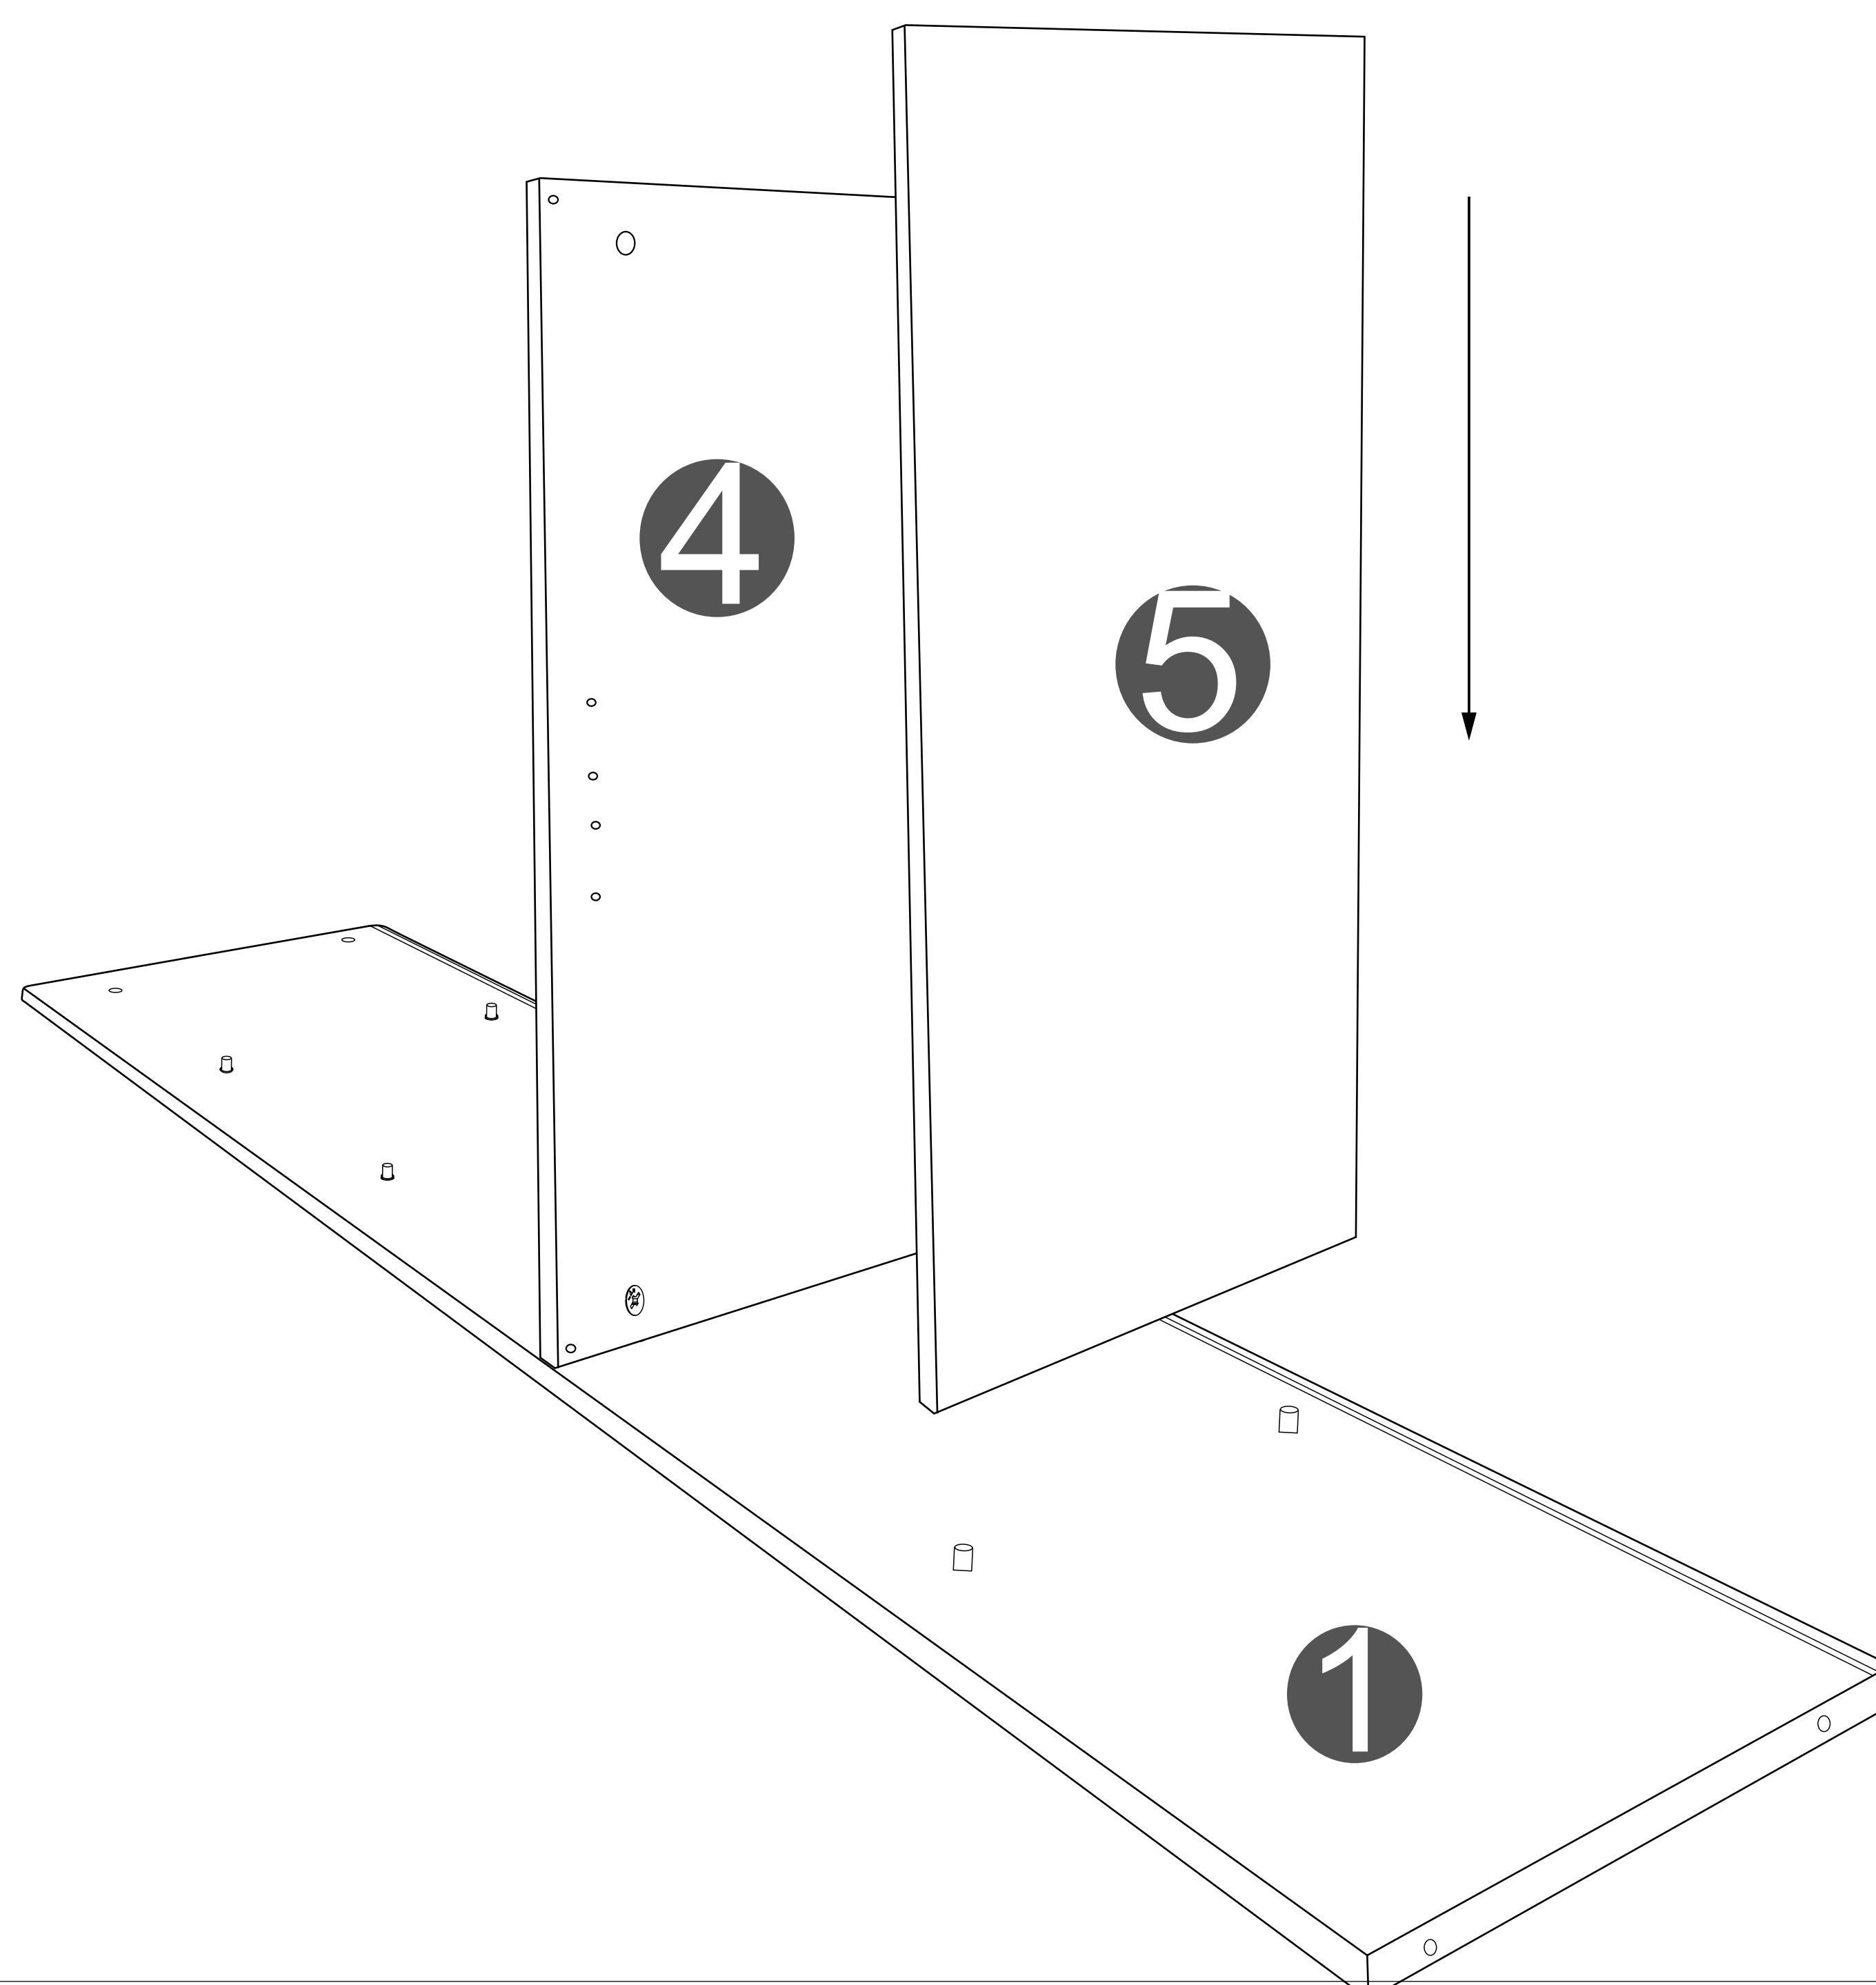


5*1

Assembly Instruction


STEP 7

Attach magnetic pieces(K) to the boards(4) using bolts(H) and Allen wrench(B).

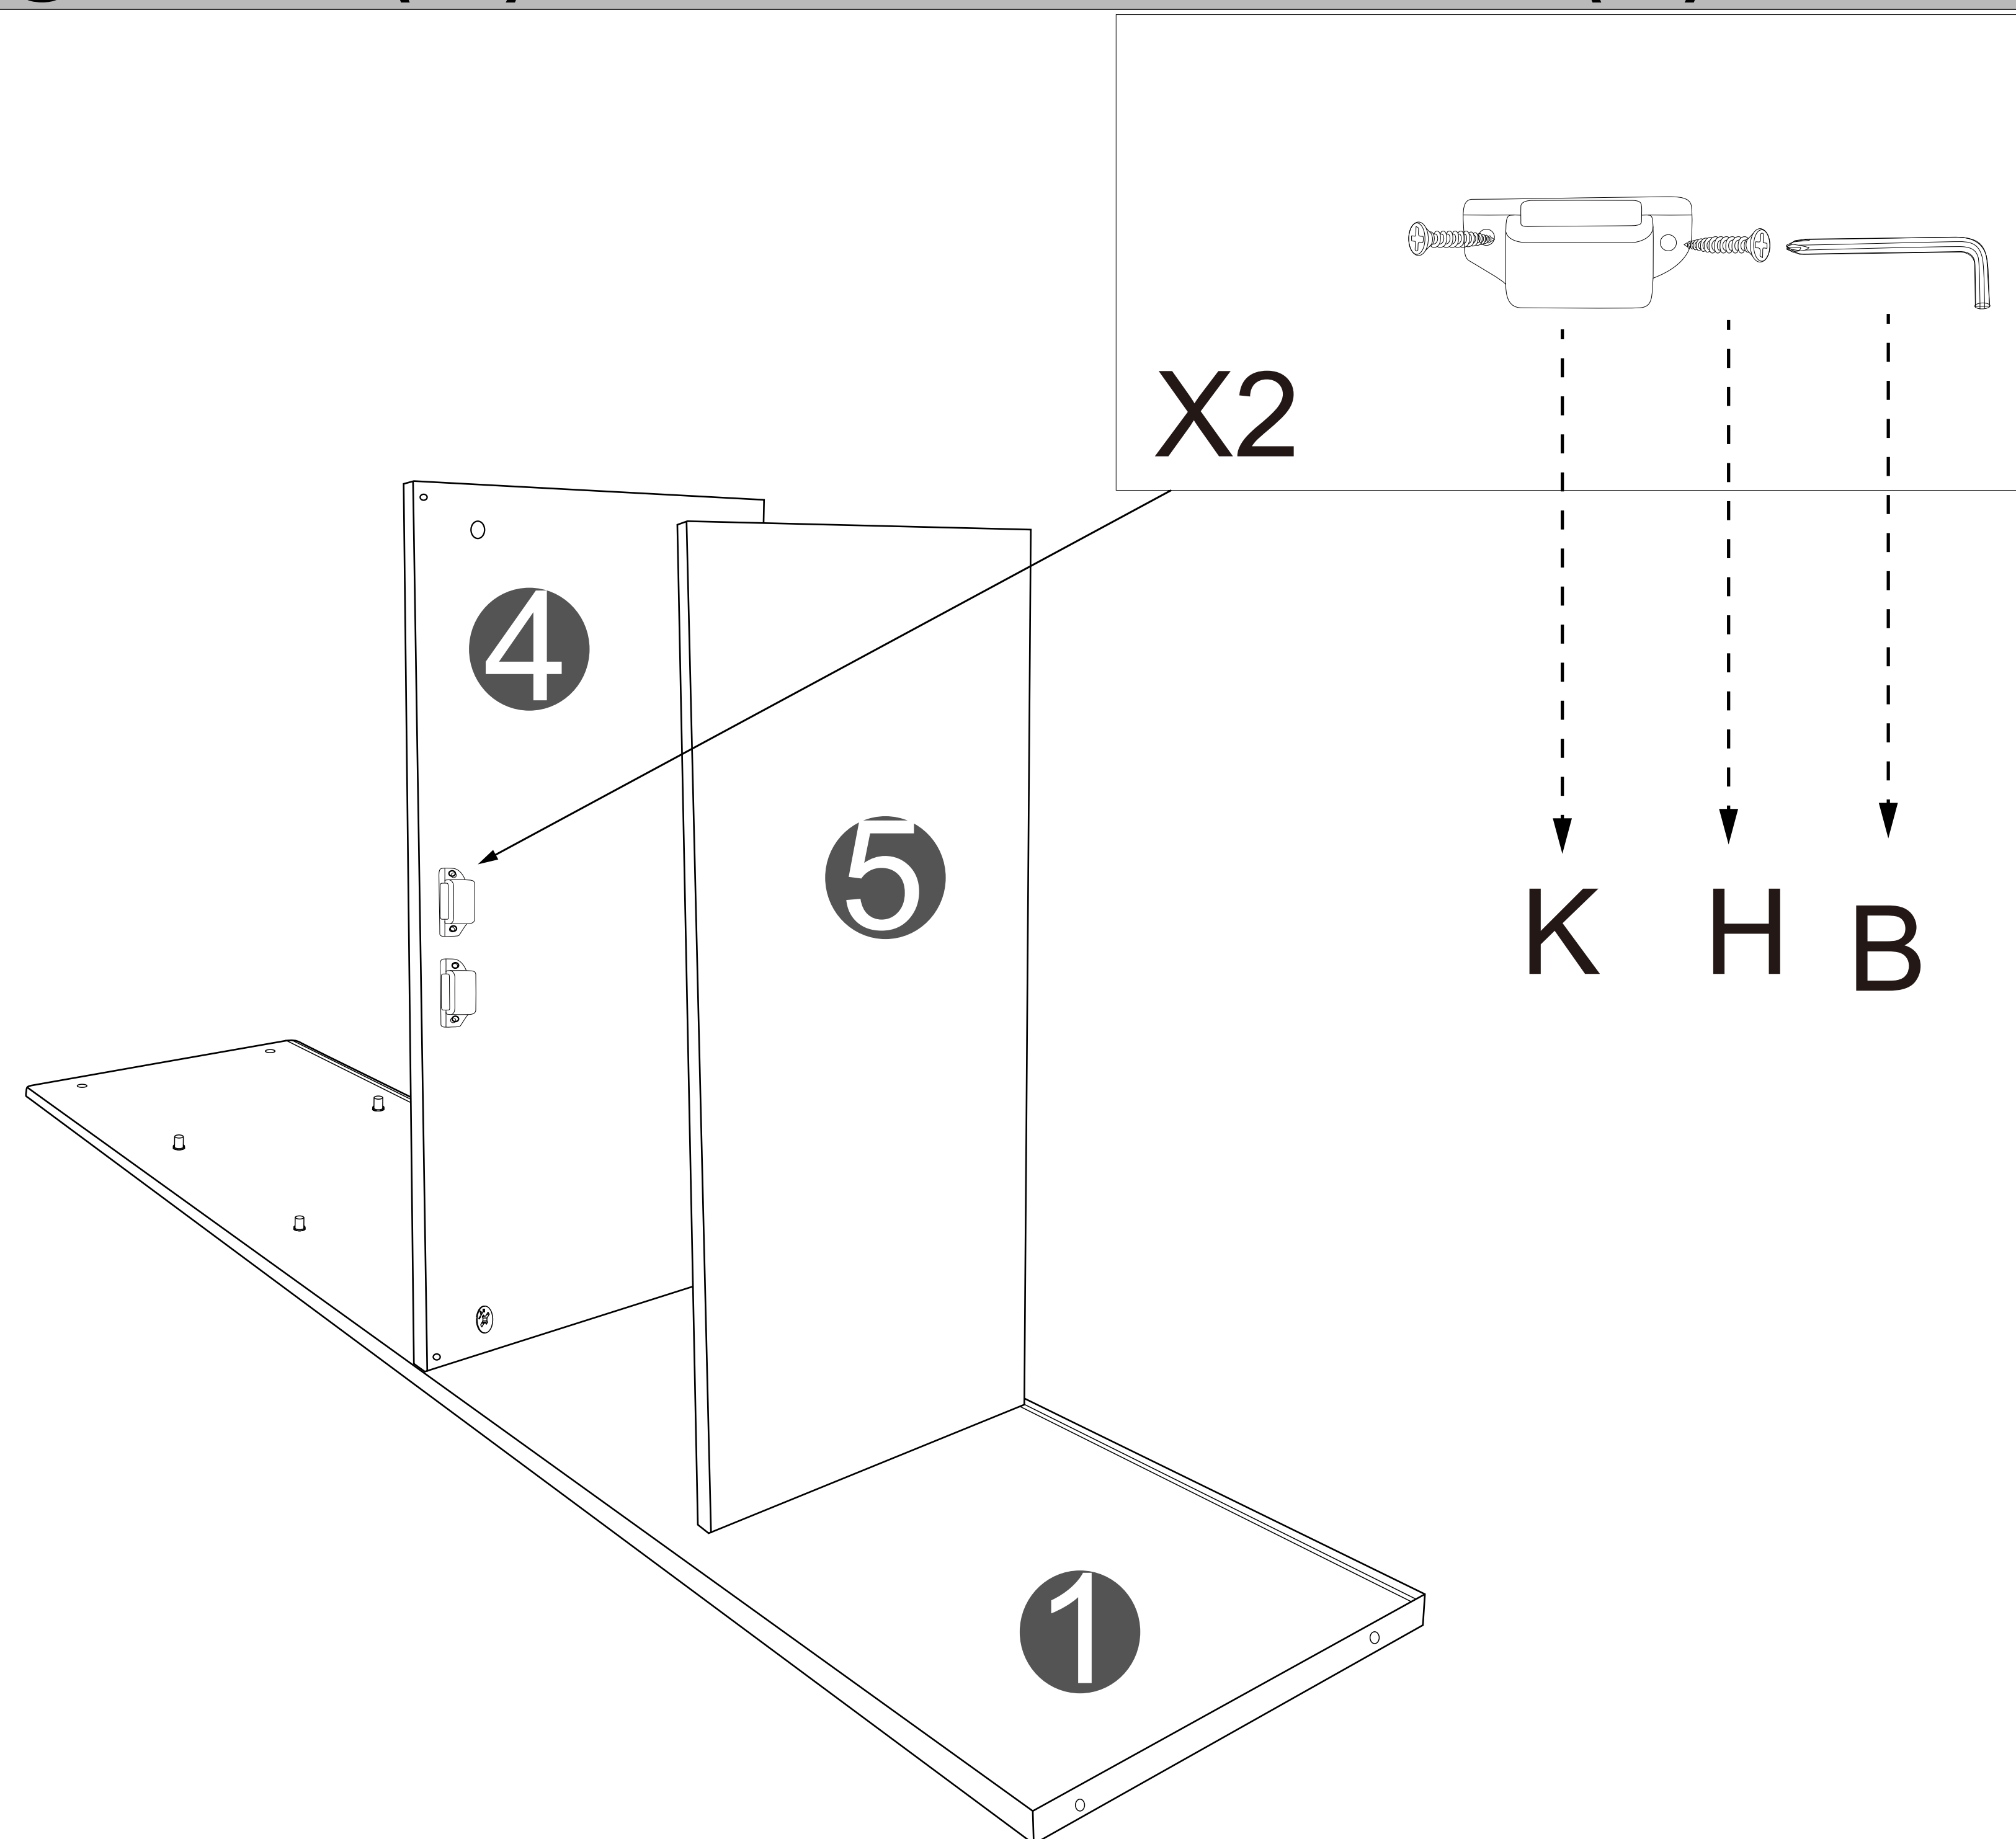

STEP 8



Attach right standing board(2) to the boards, and attach Klix cams(C) to the boards then lock them.

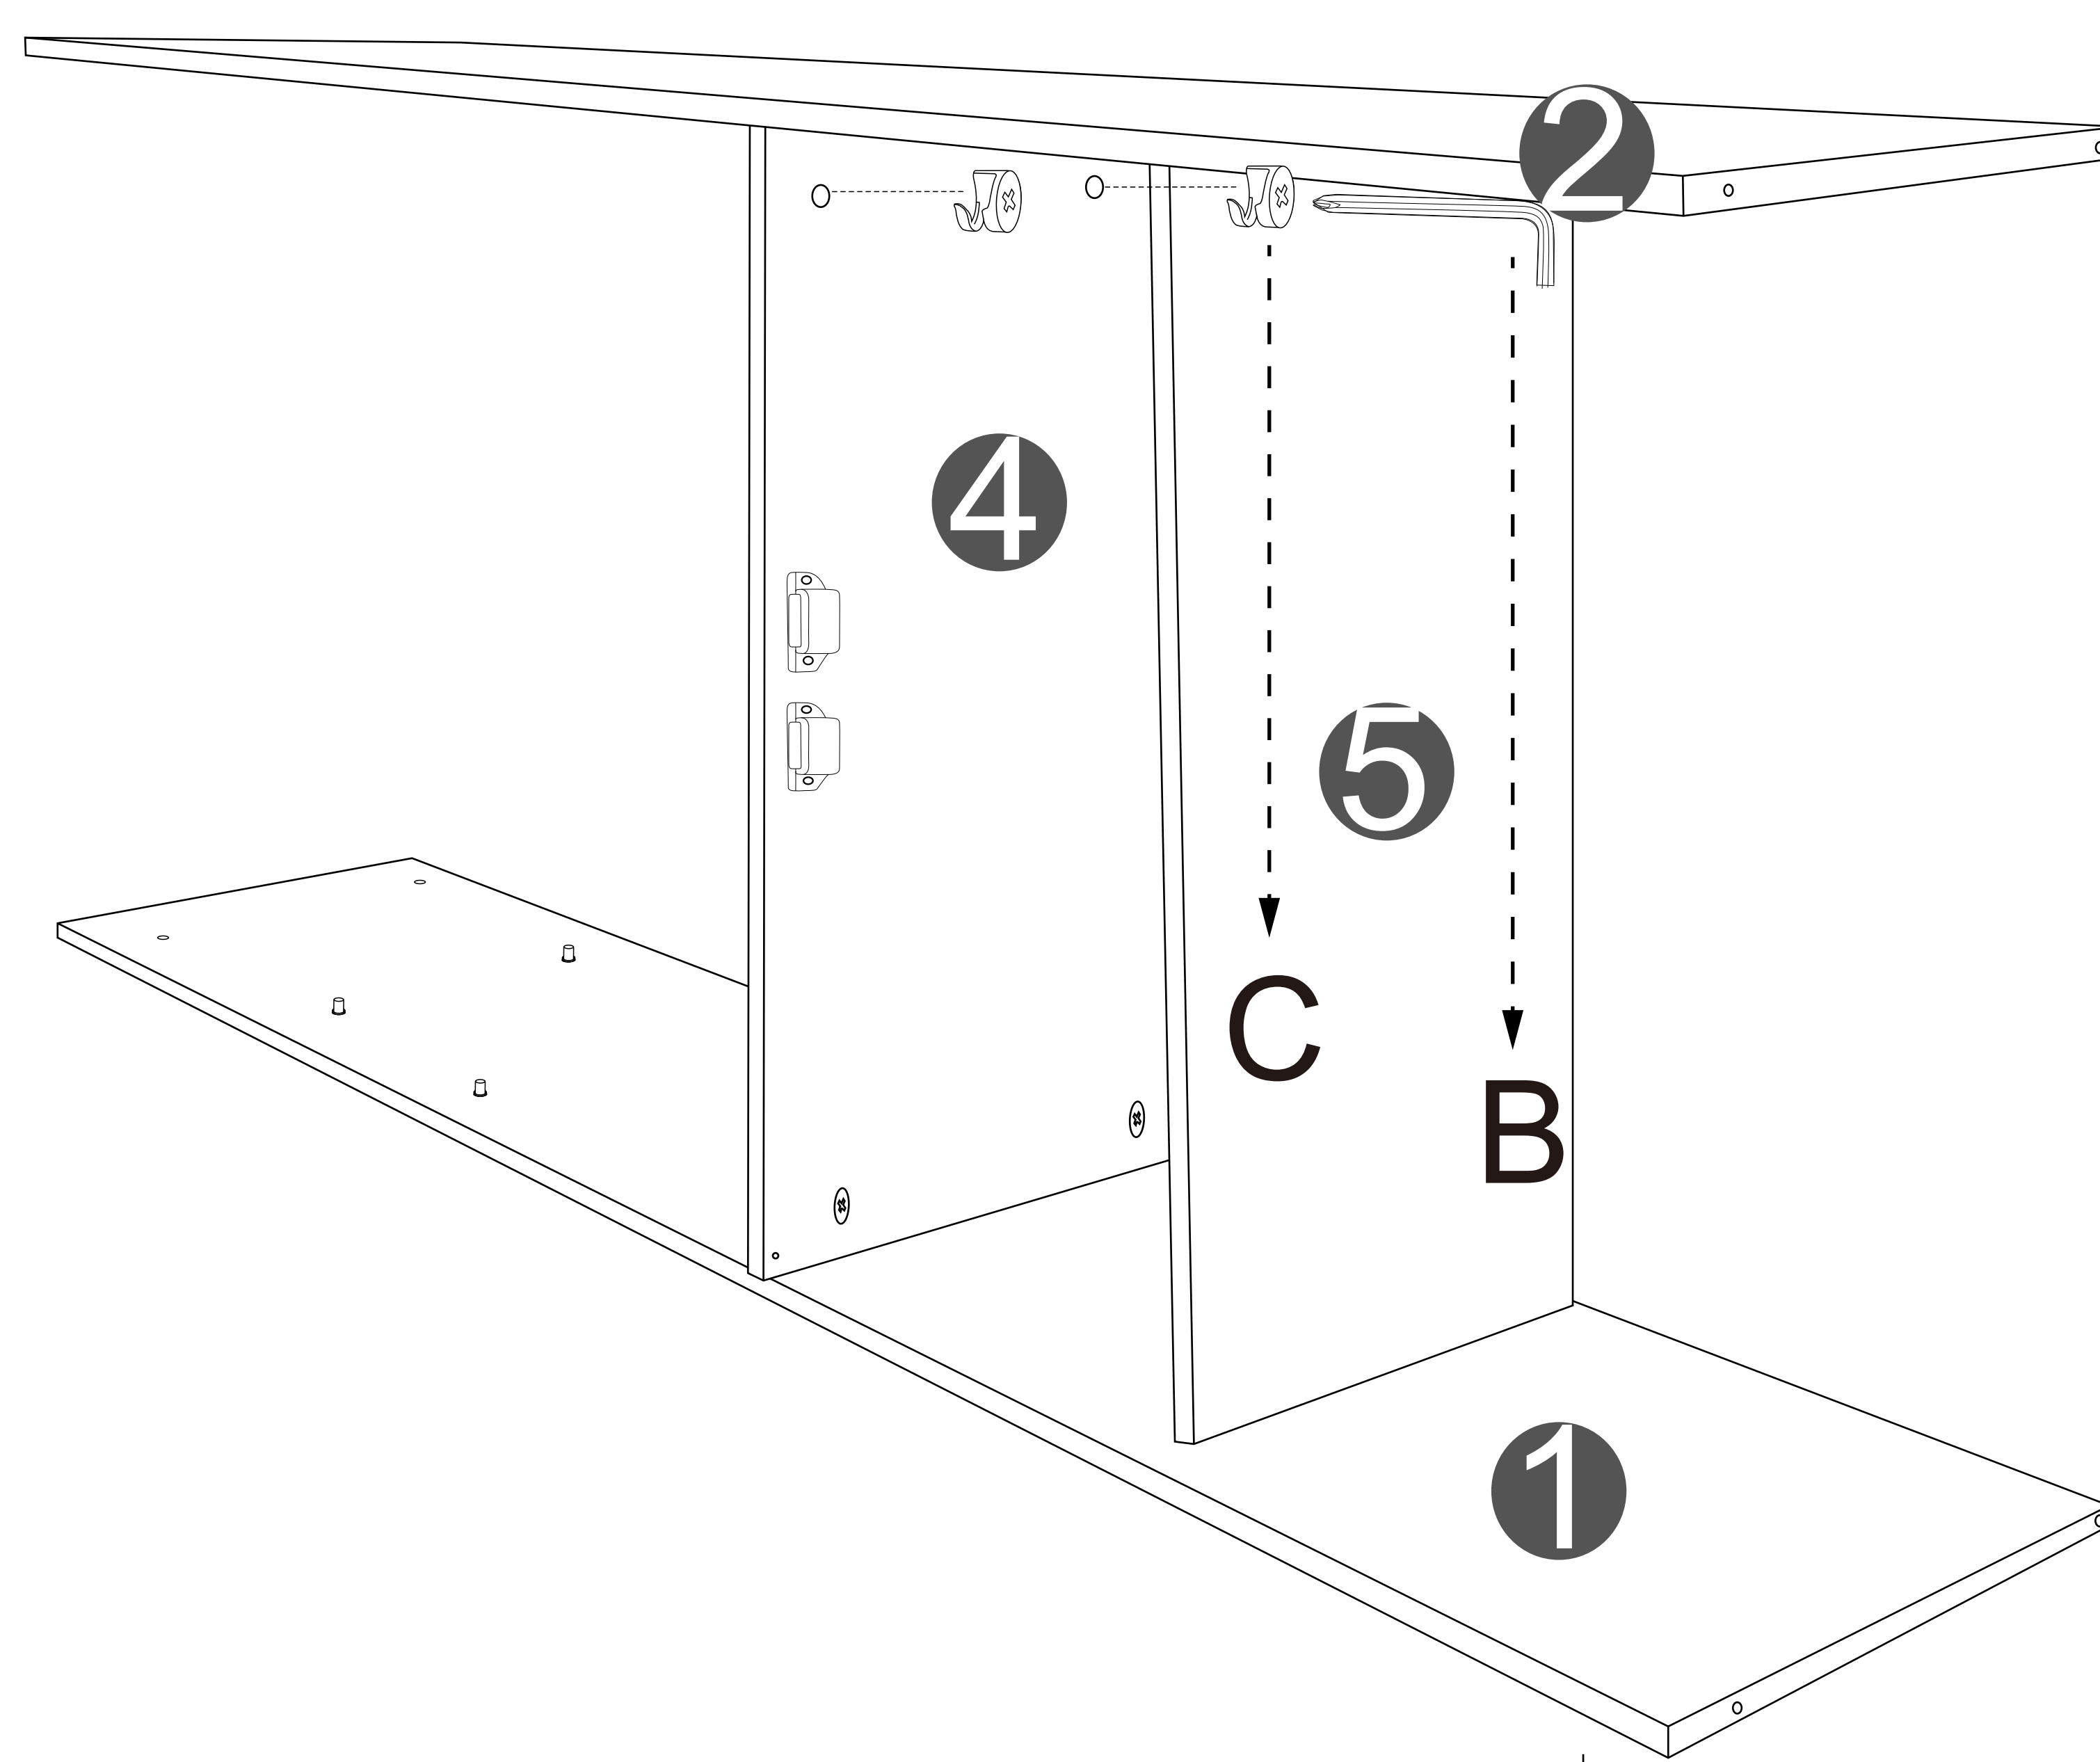

Assembly Instruction



STEP 9

Attach Klix cams(C) to the boards(1&2), and lock them using Allen wrench(B).

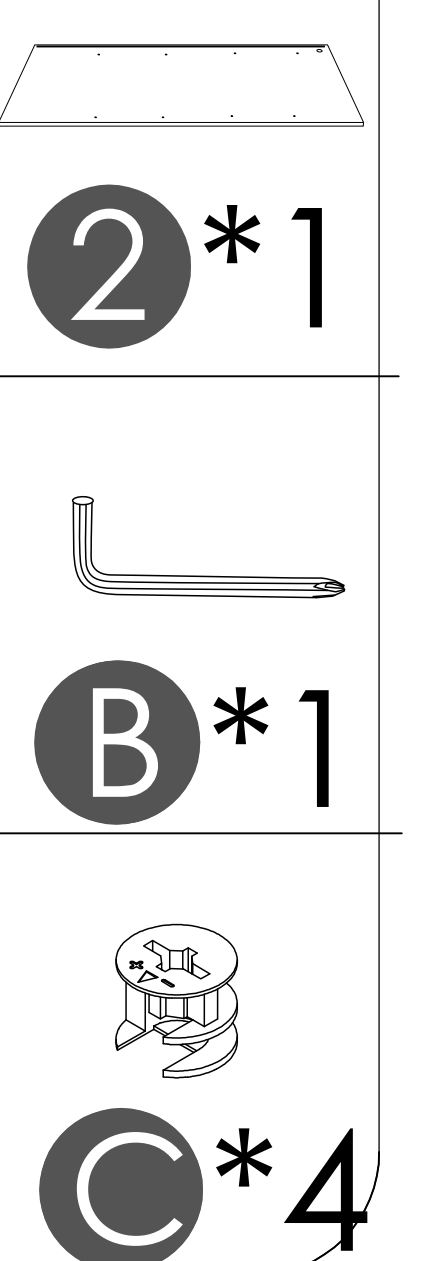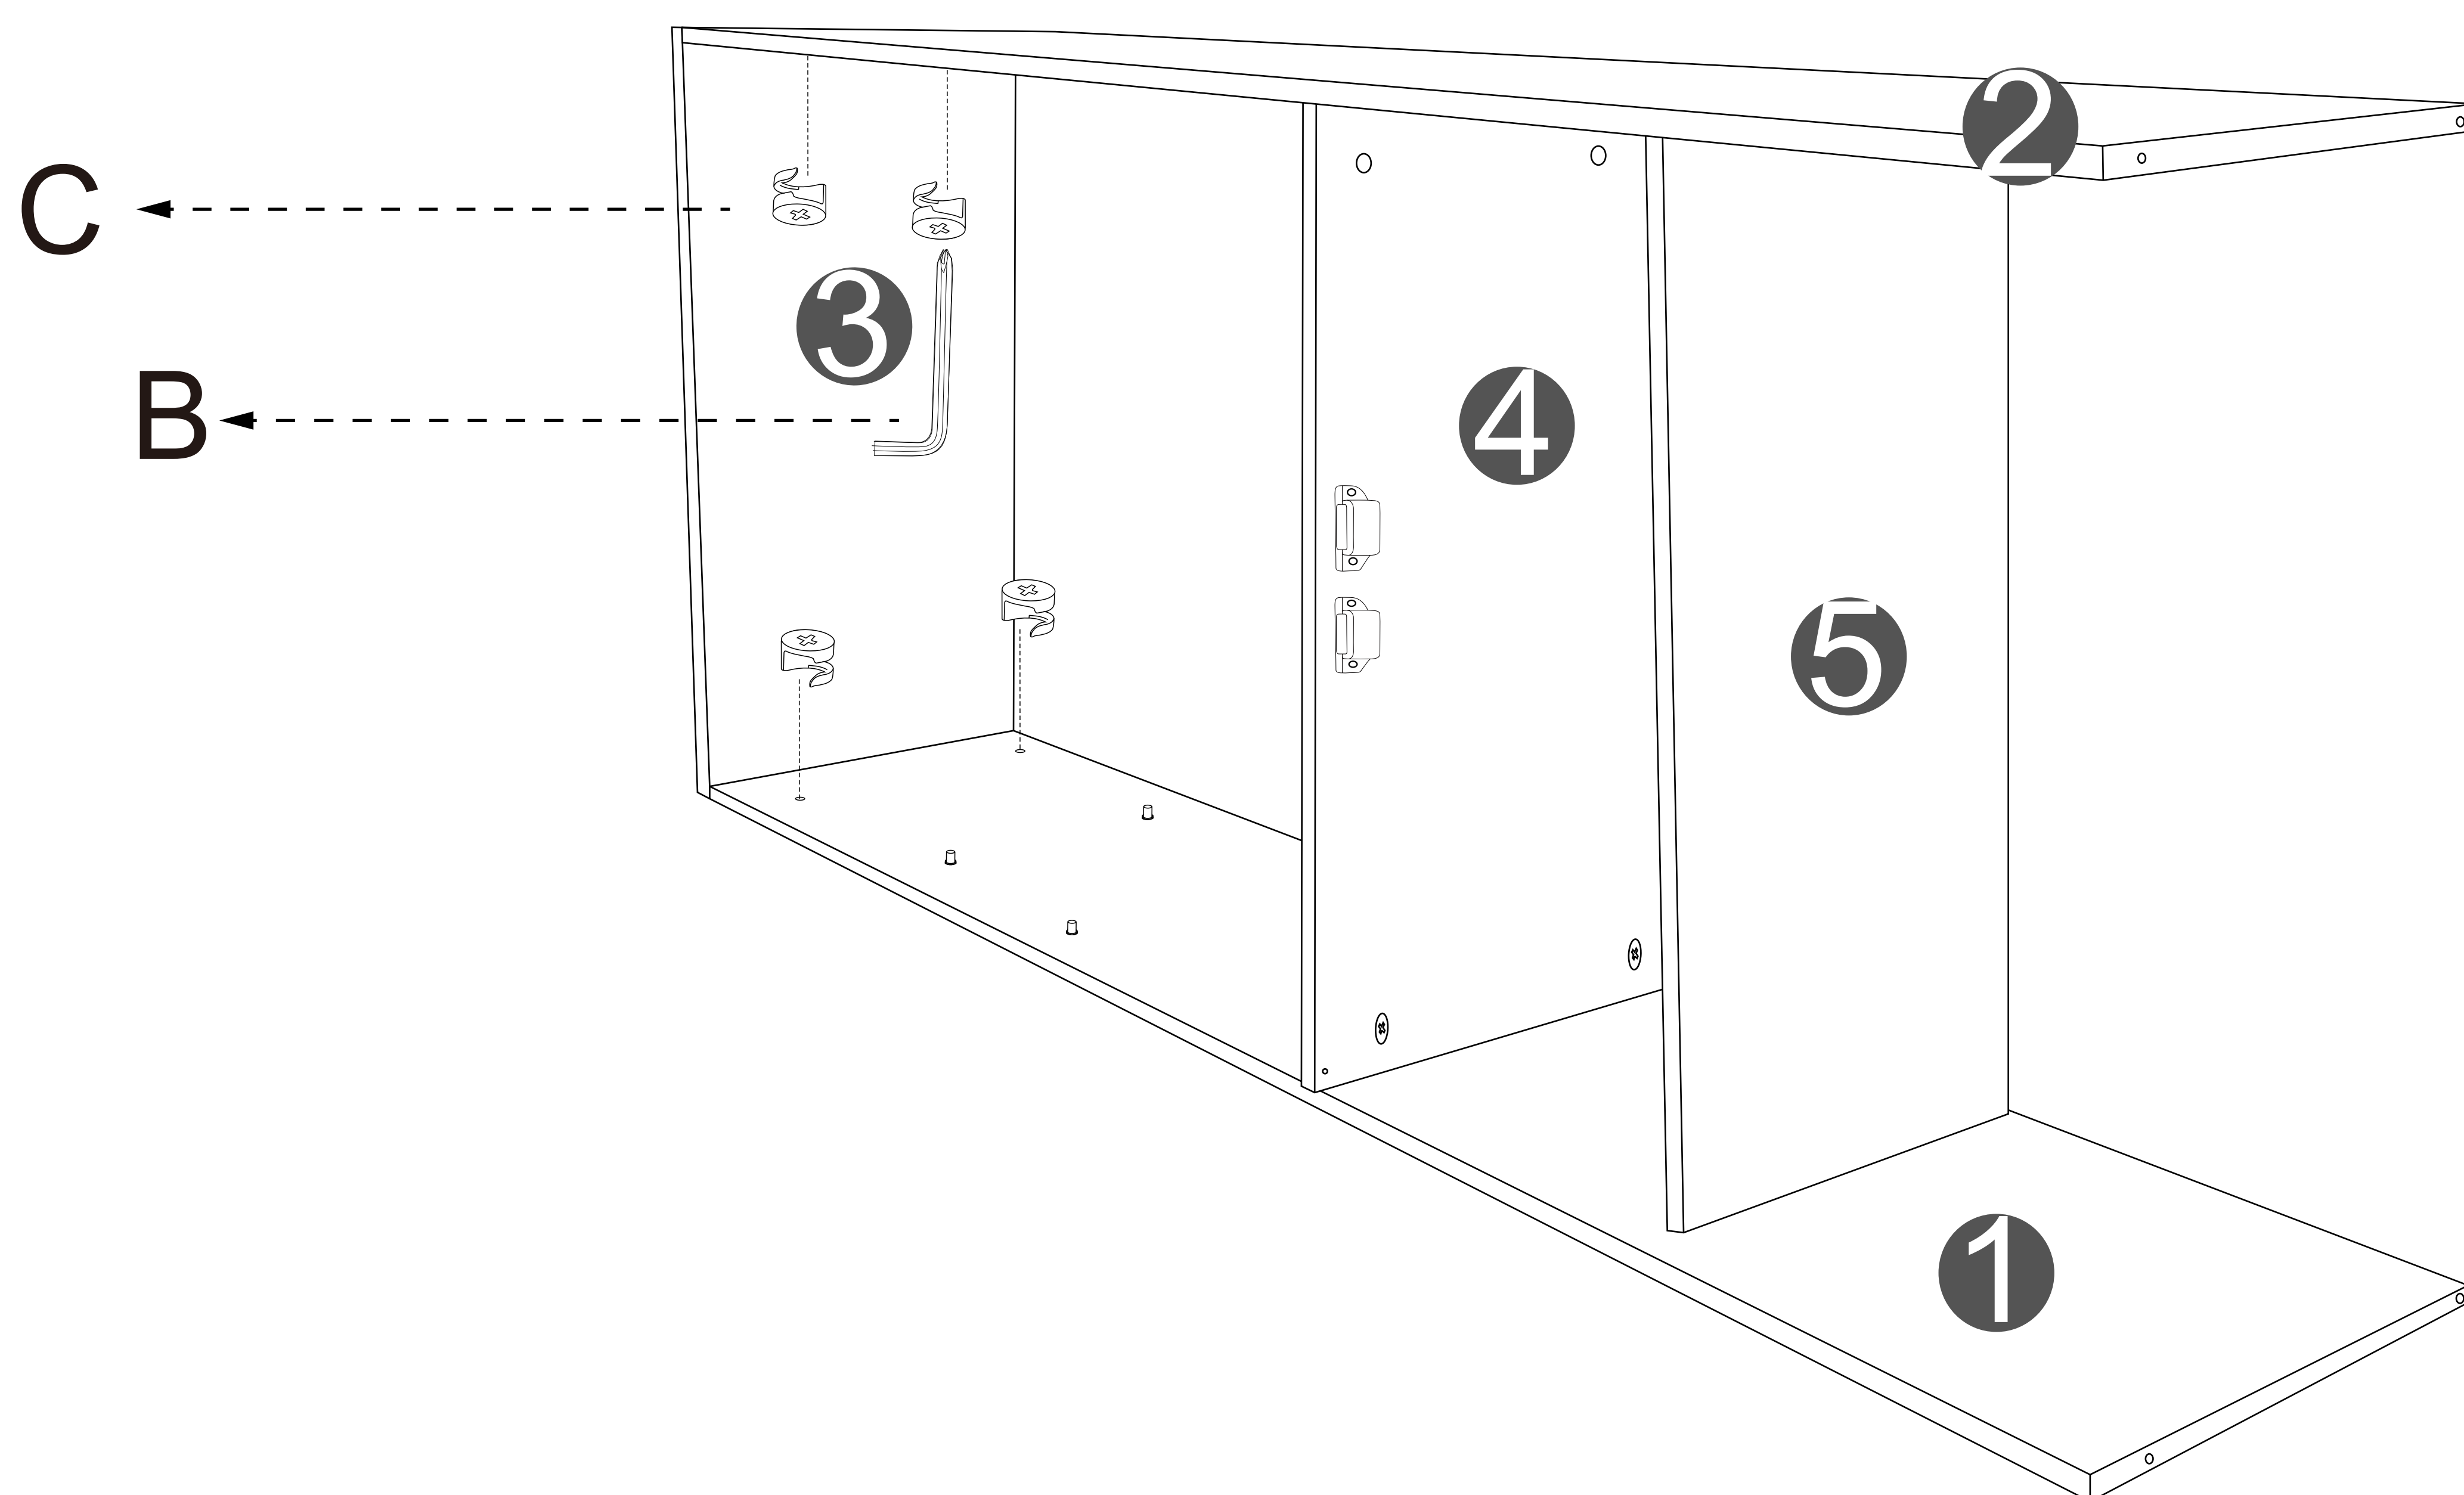

STEP 10


Attach boards(6) and strip(7) to the frame.

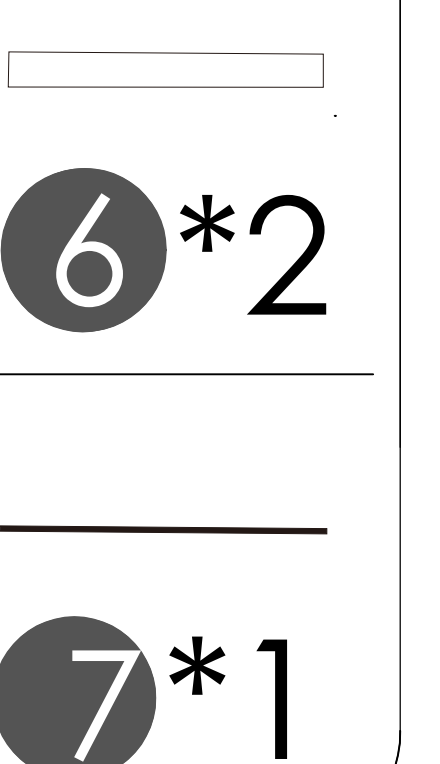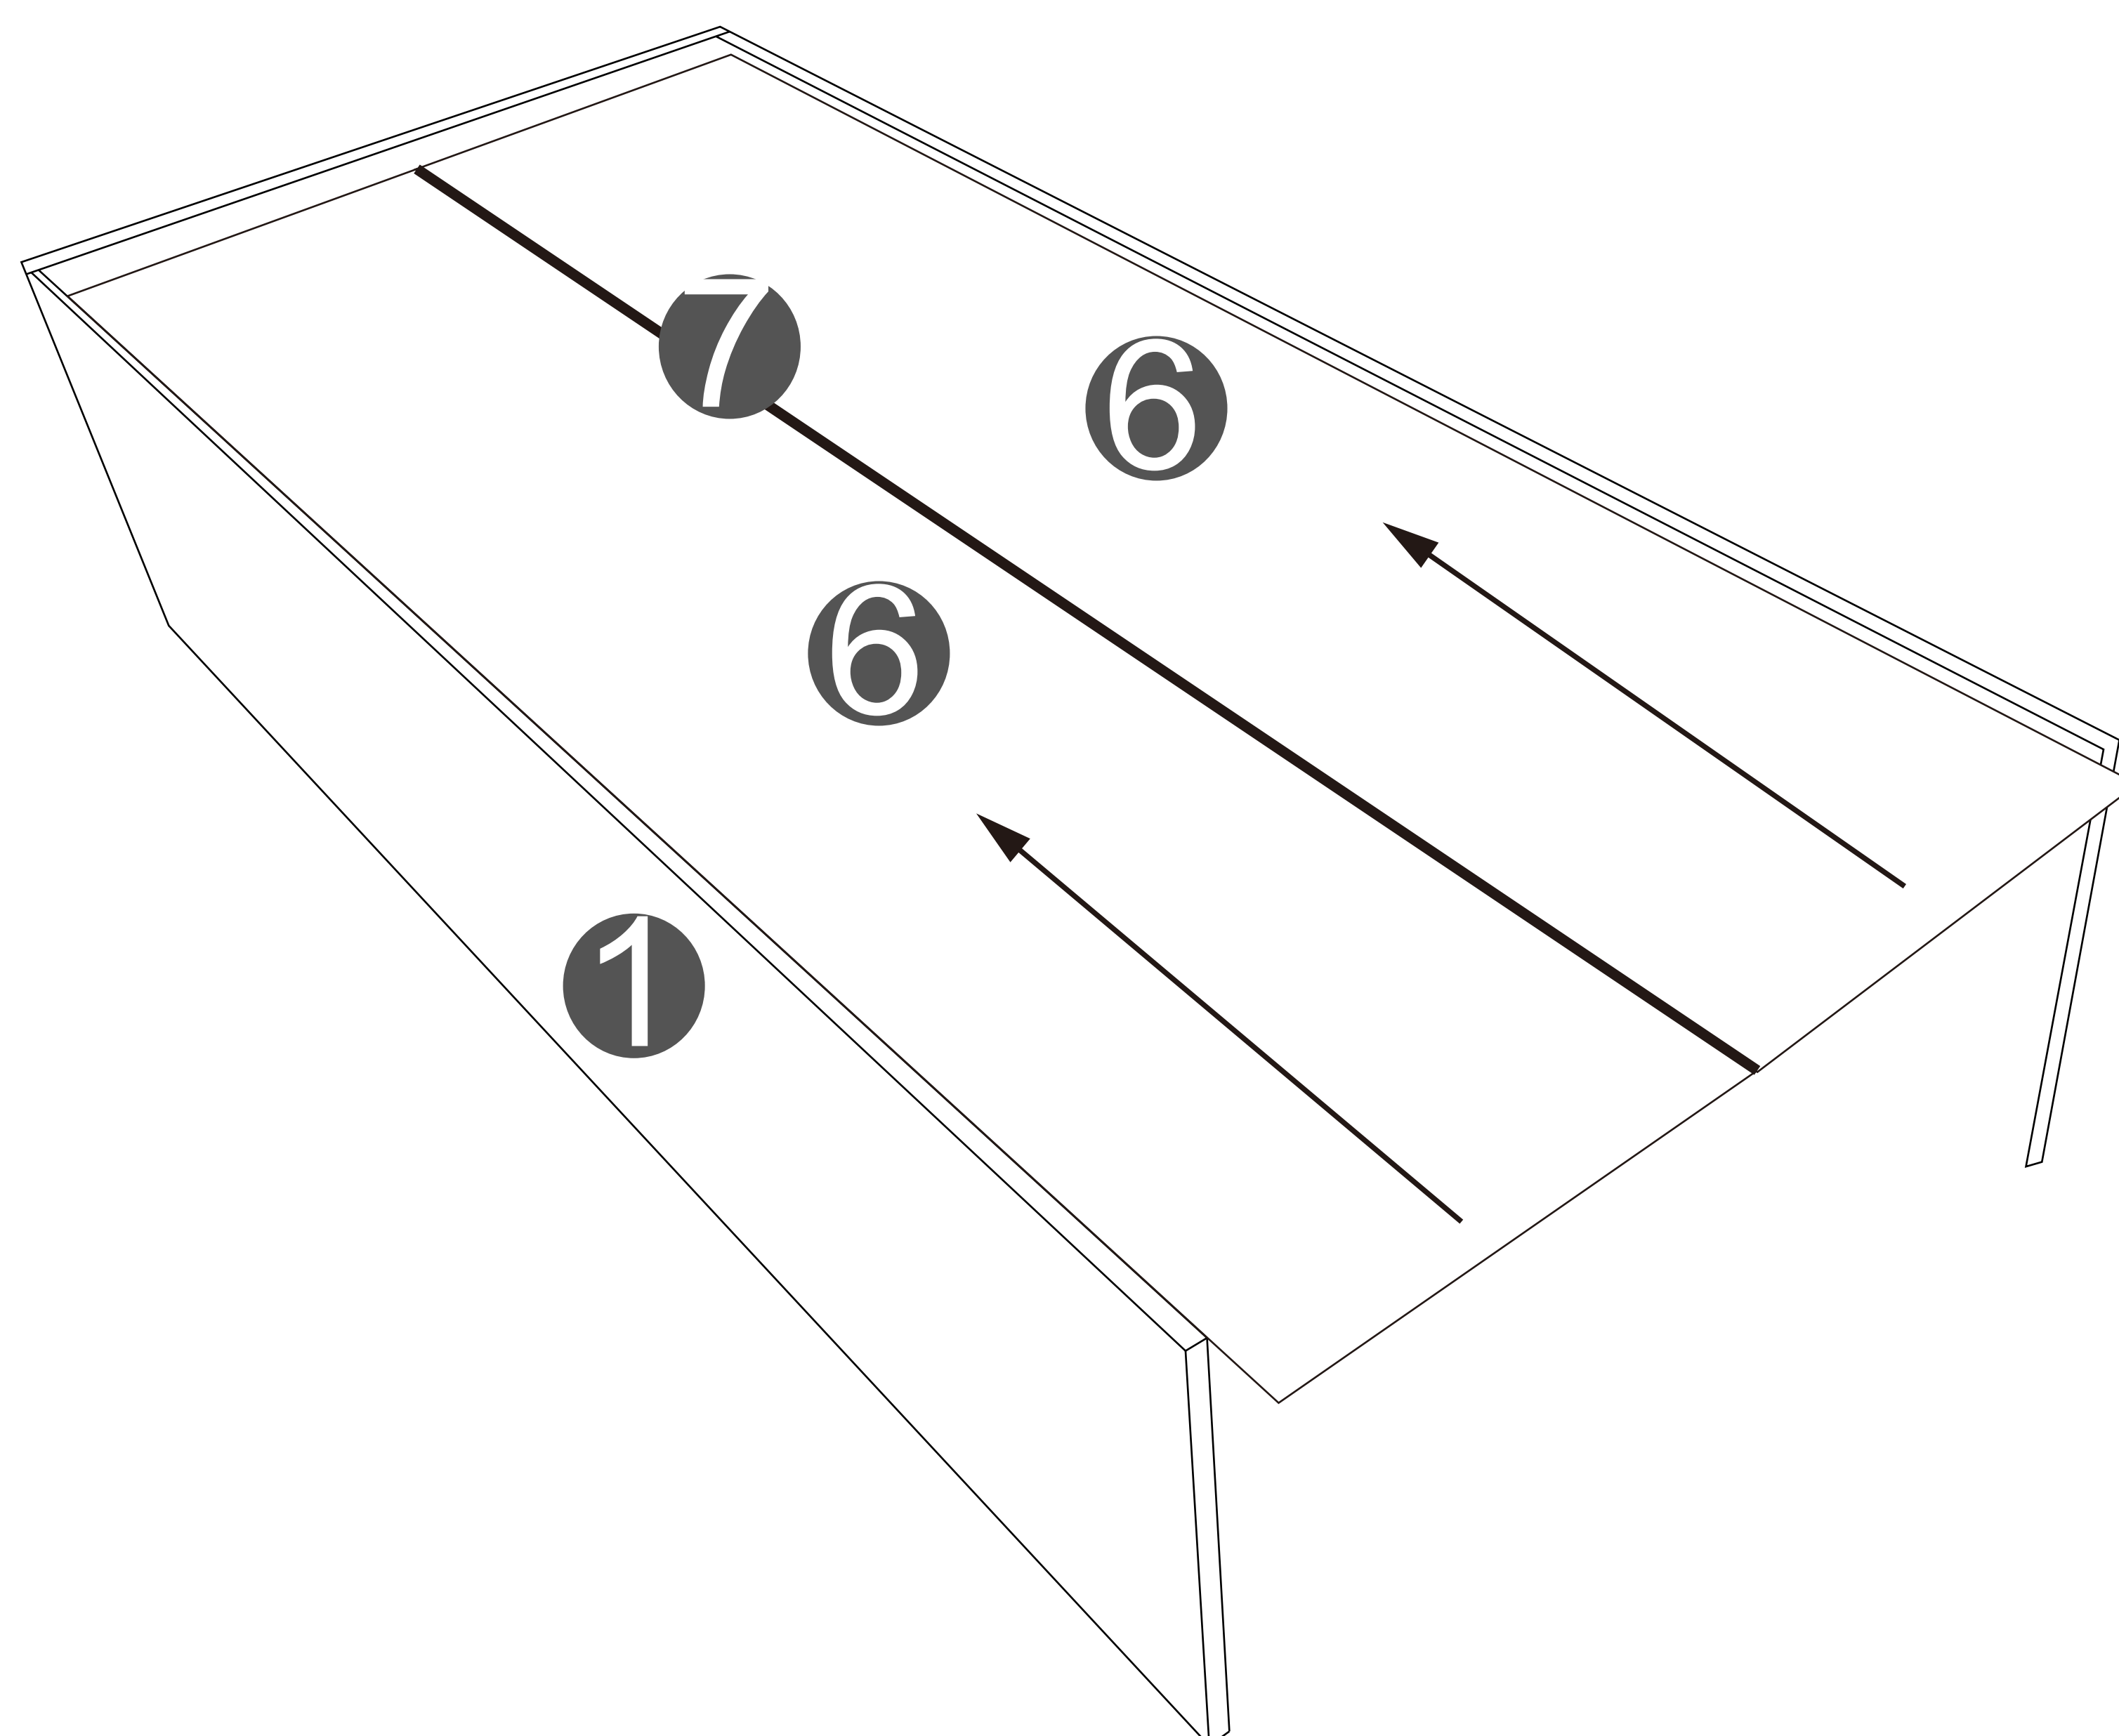

Assembly Instruction

STEP 11

Attach bottom board(8) to the standing boards using bolts(F).



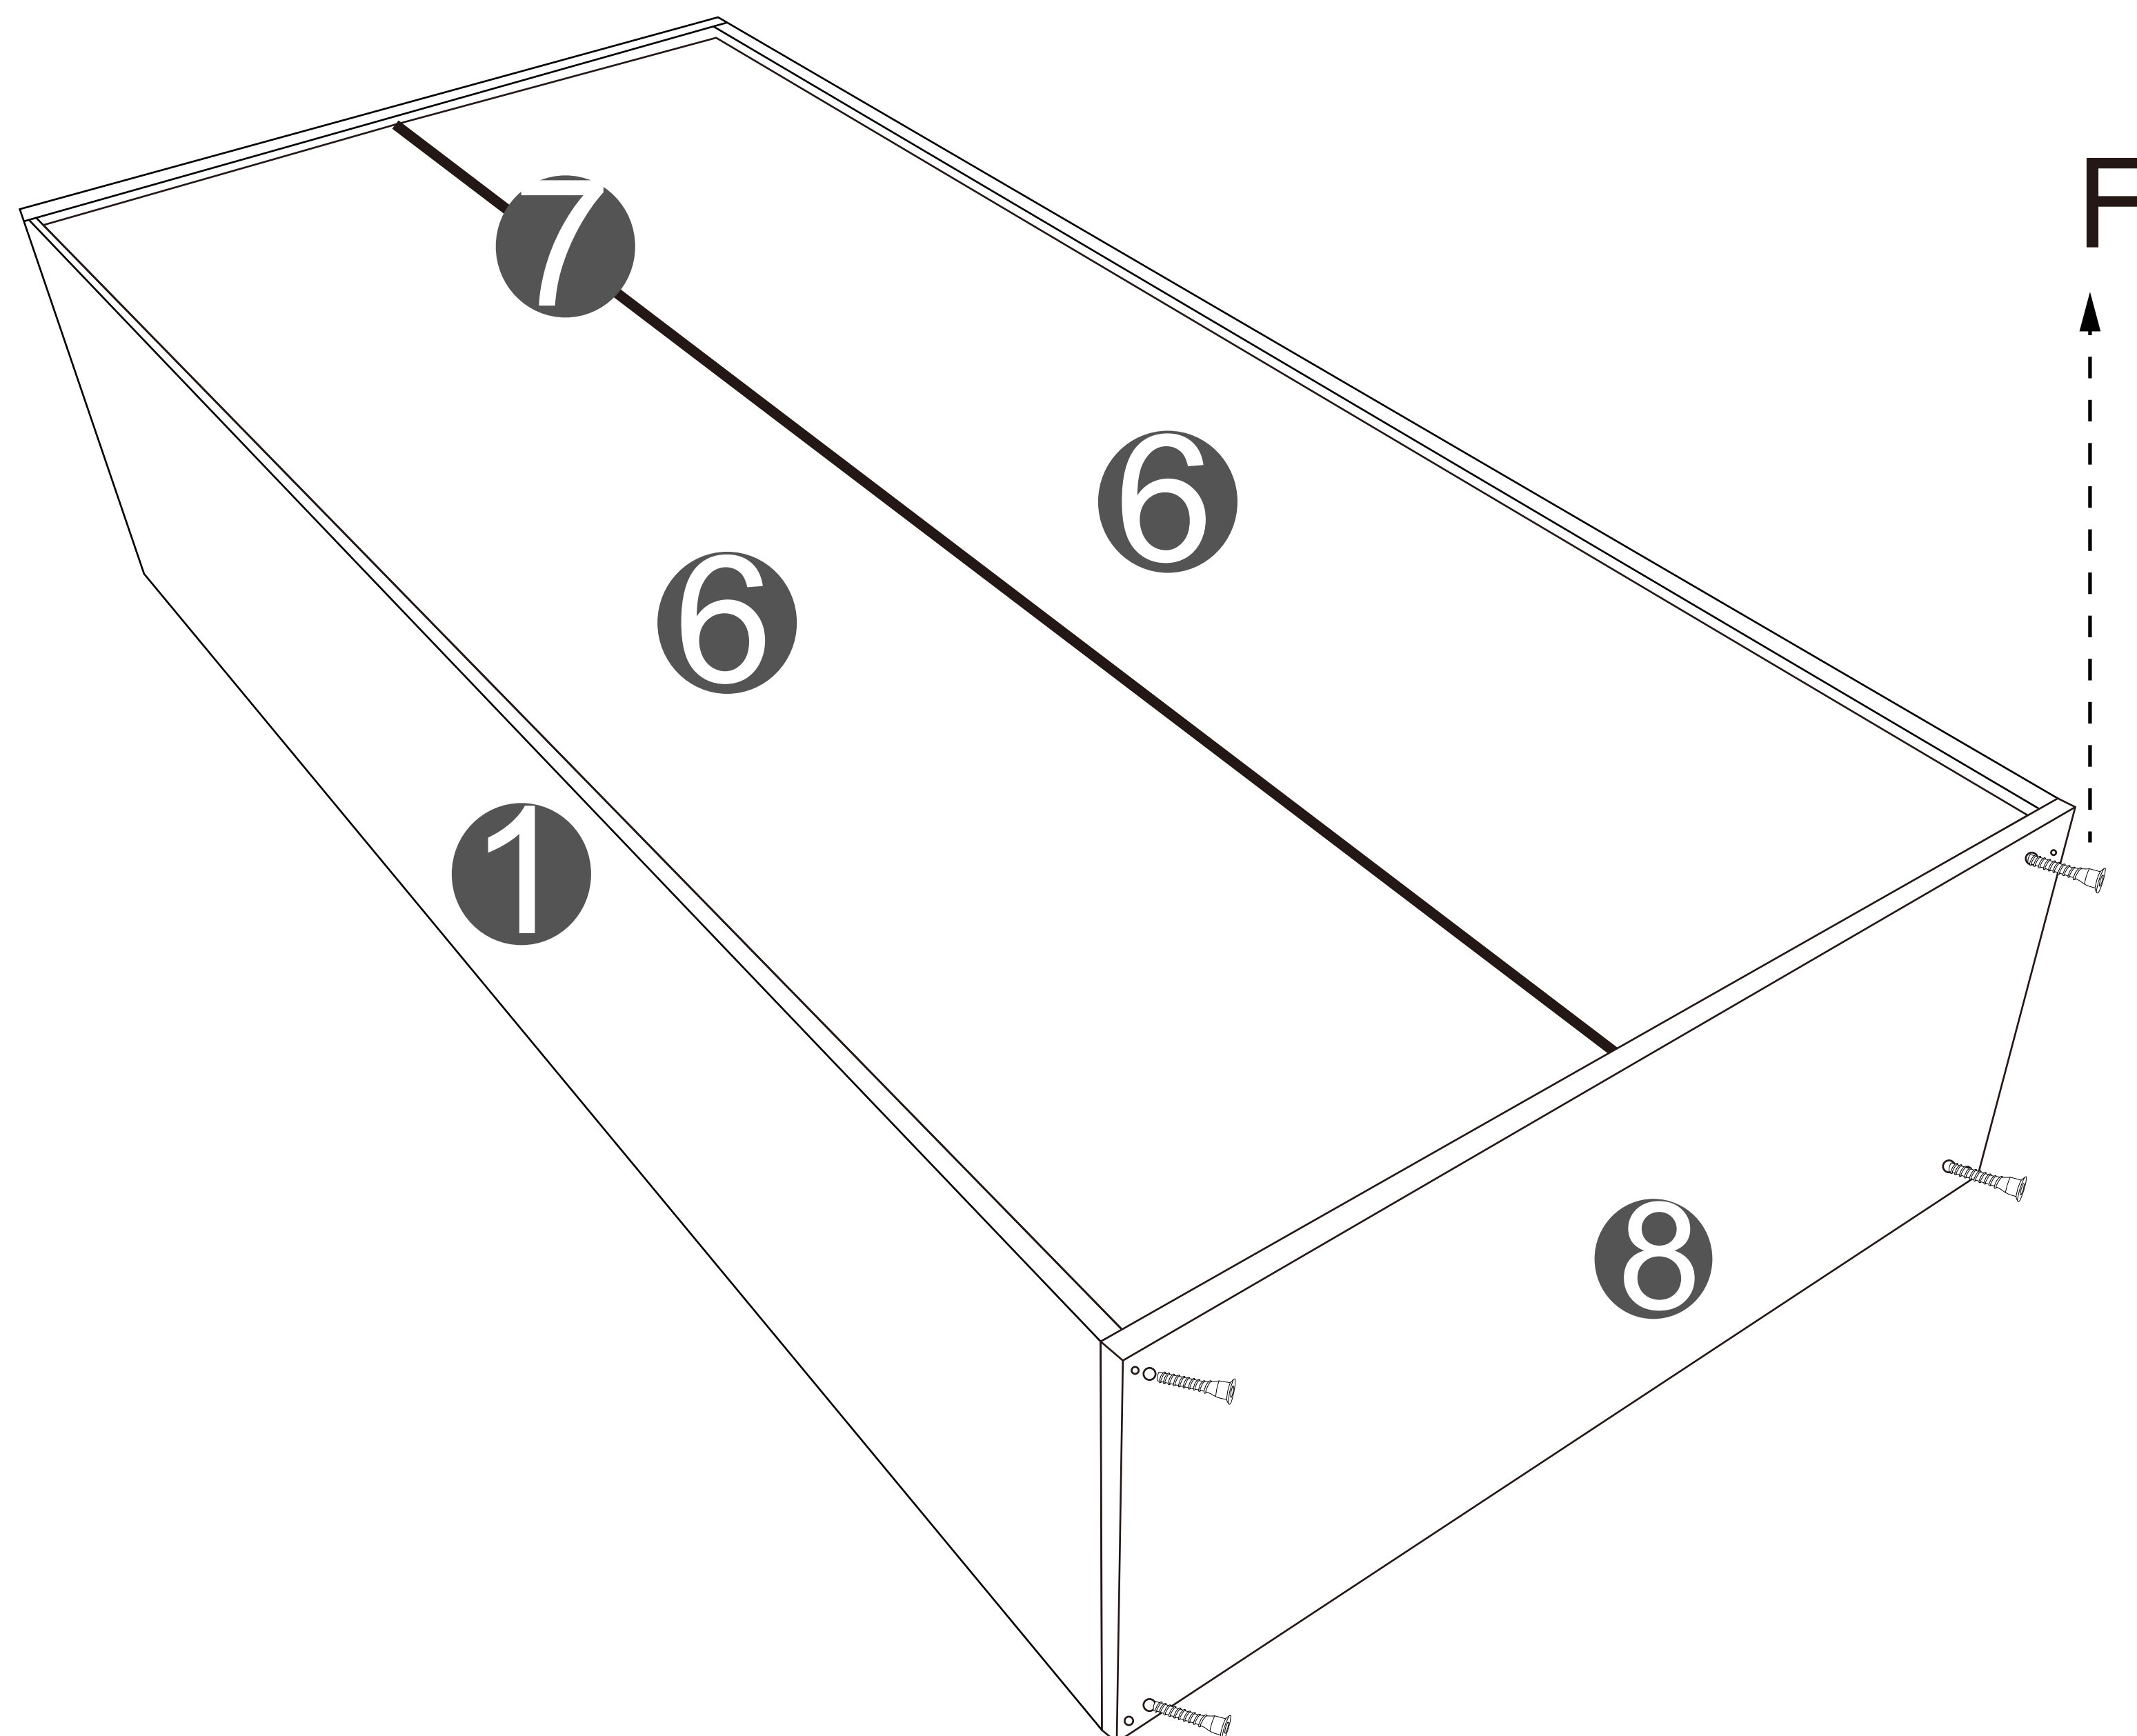


8*1

F*4

STEP 12

After installing the base plate, connect (12) and (13) with (G), paying attention to the direction of the arrow. Once assembled, use S to immediately attach them to the base plate, which has a lead hole

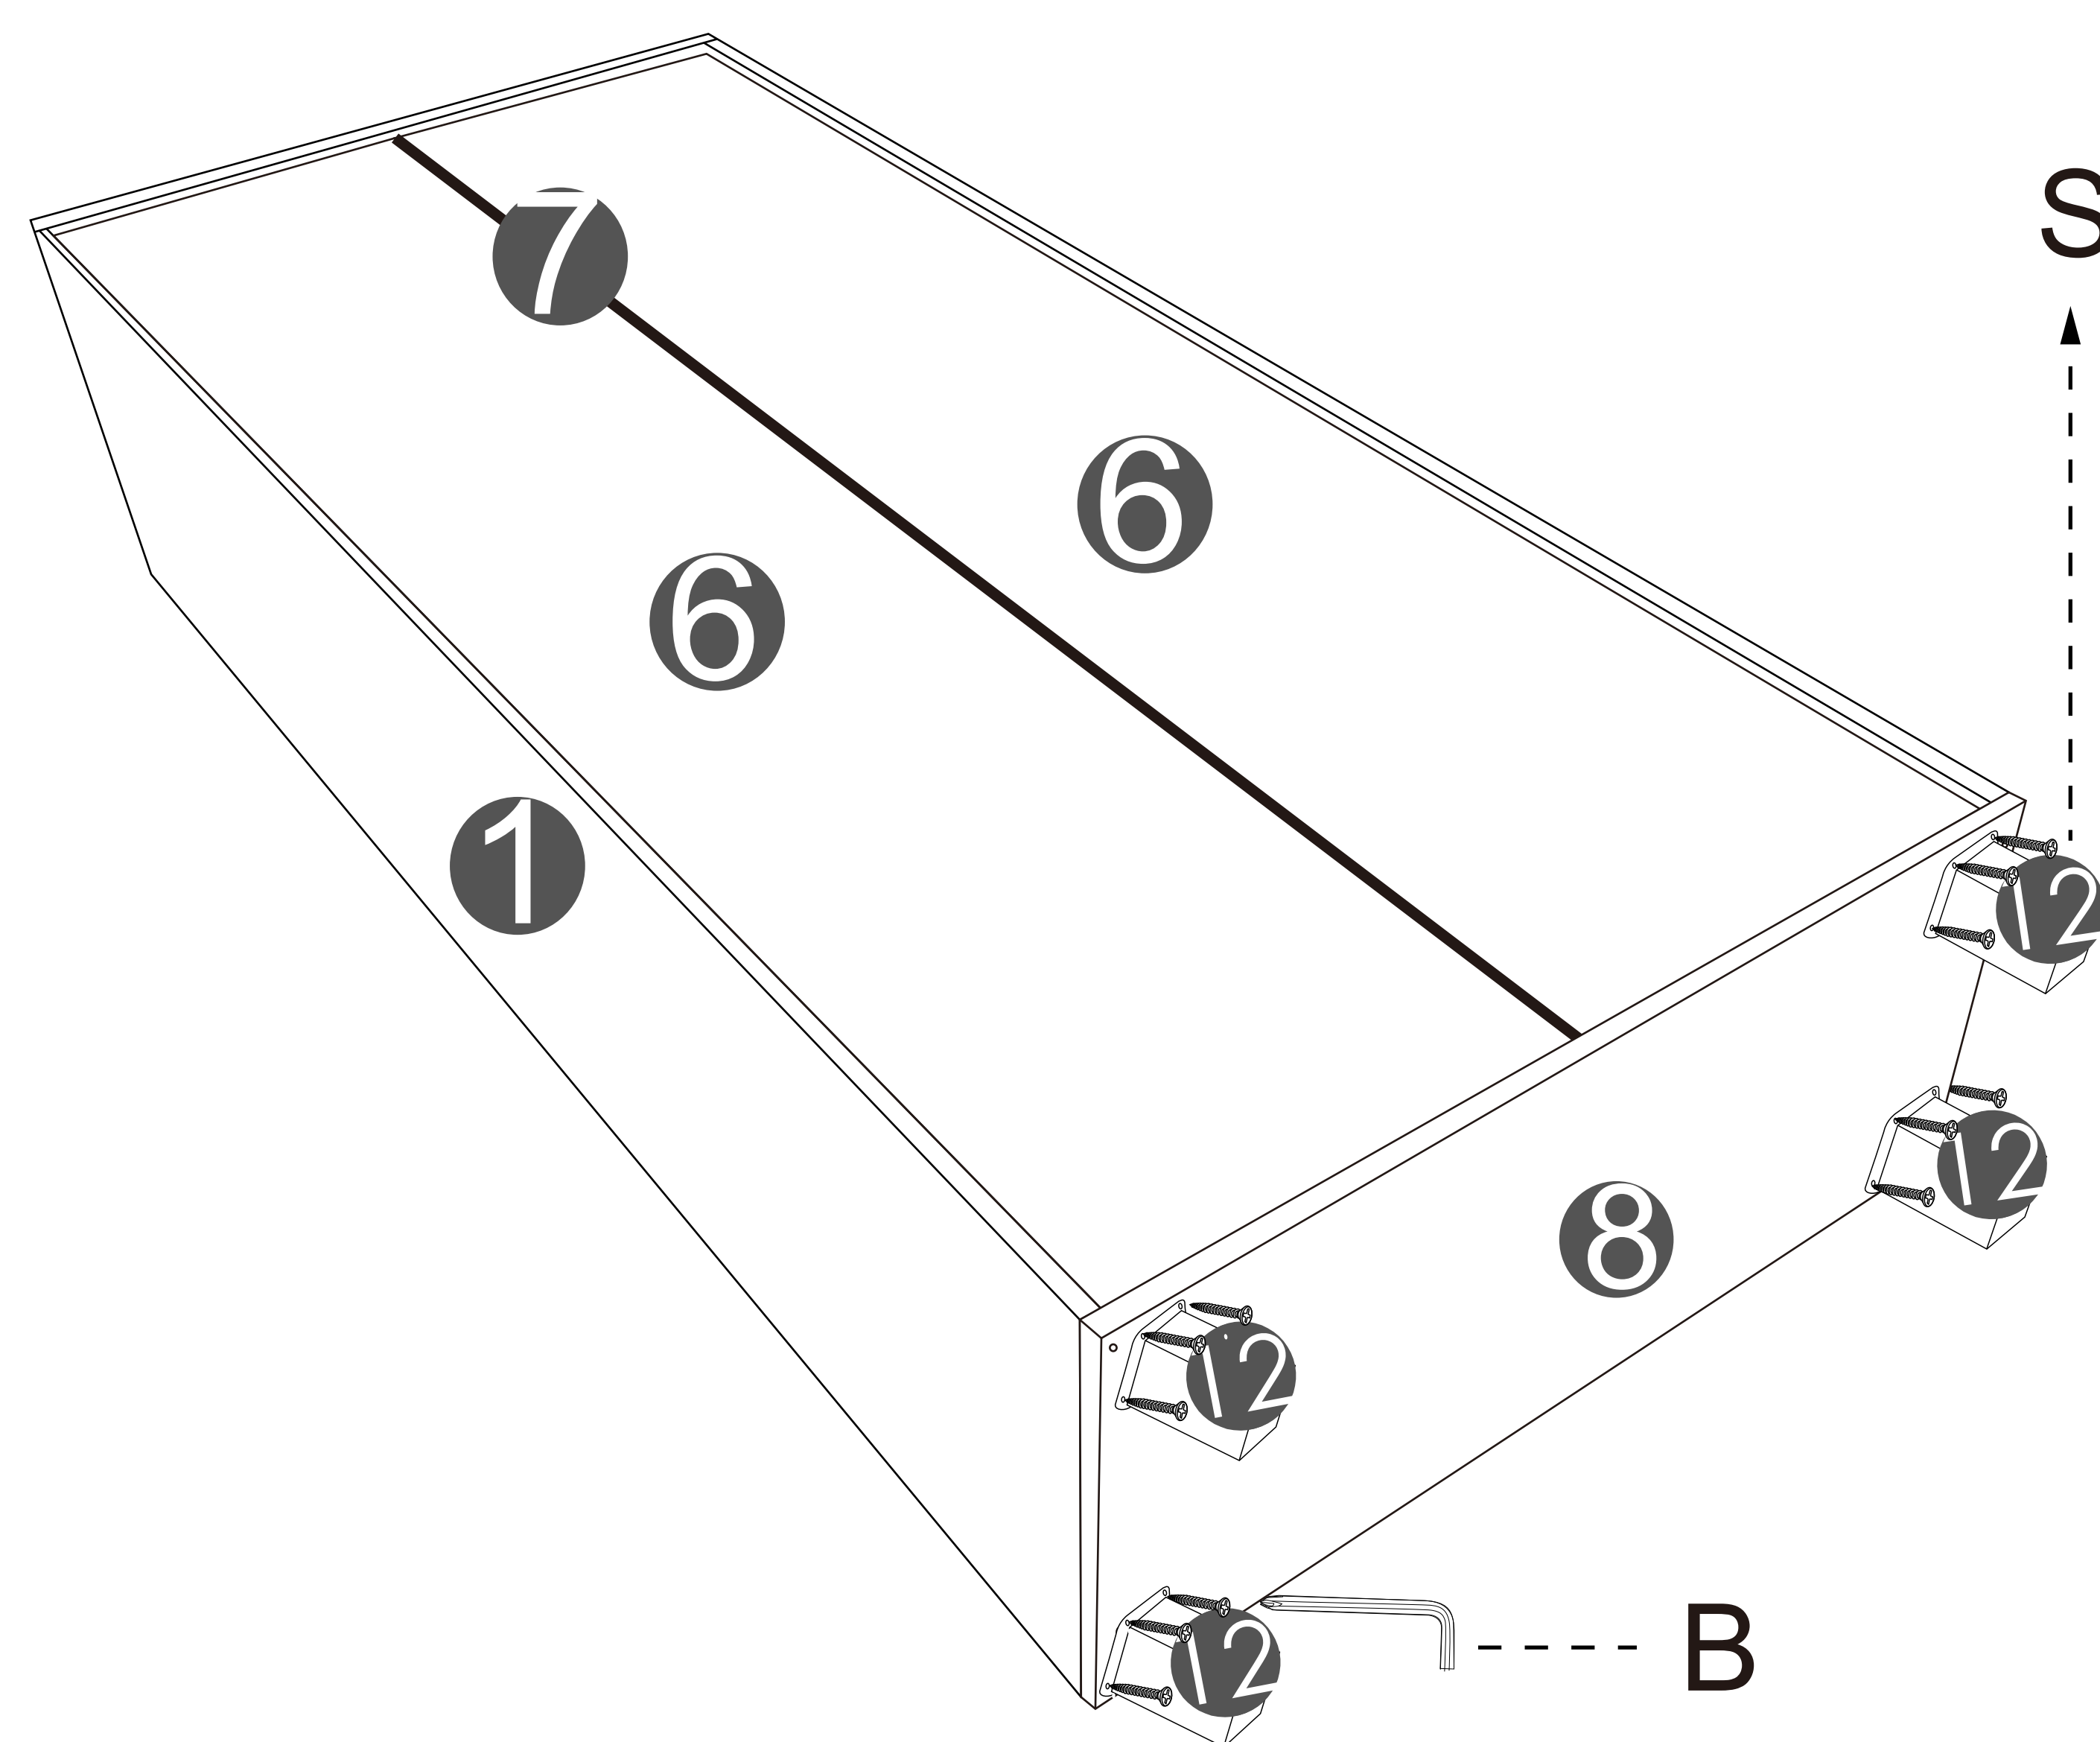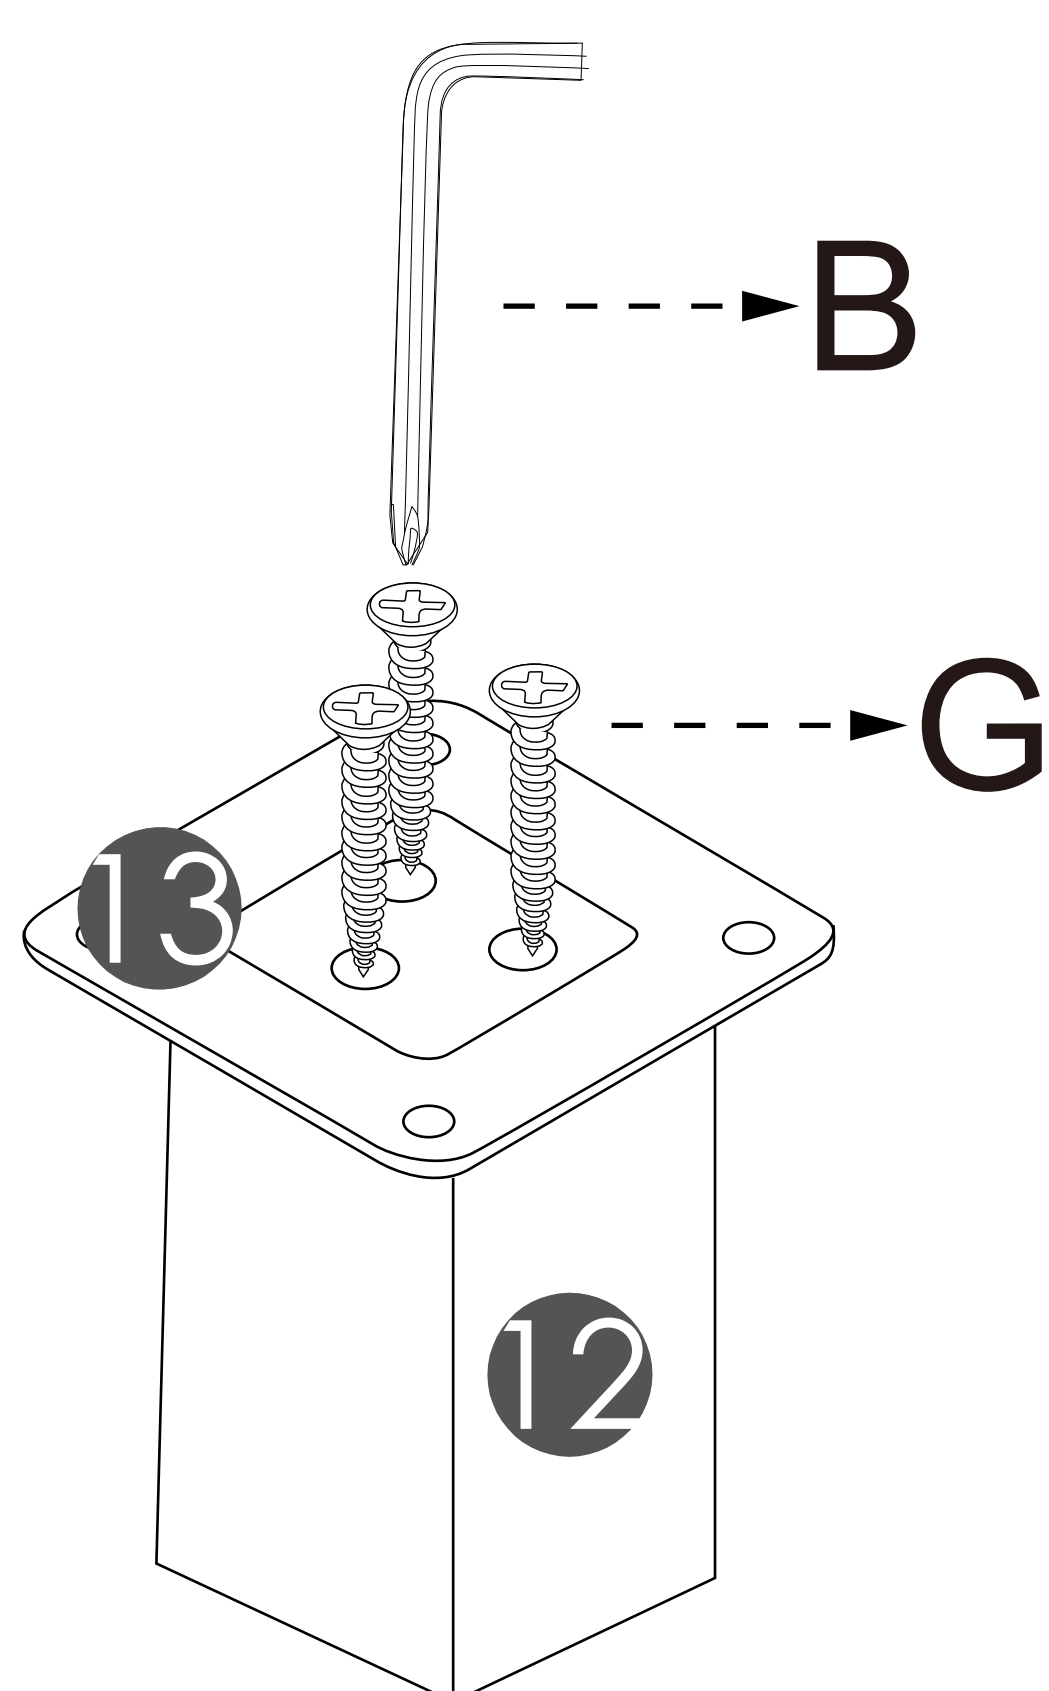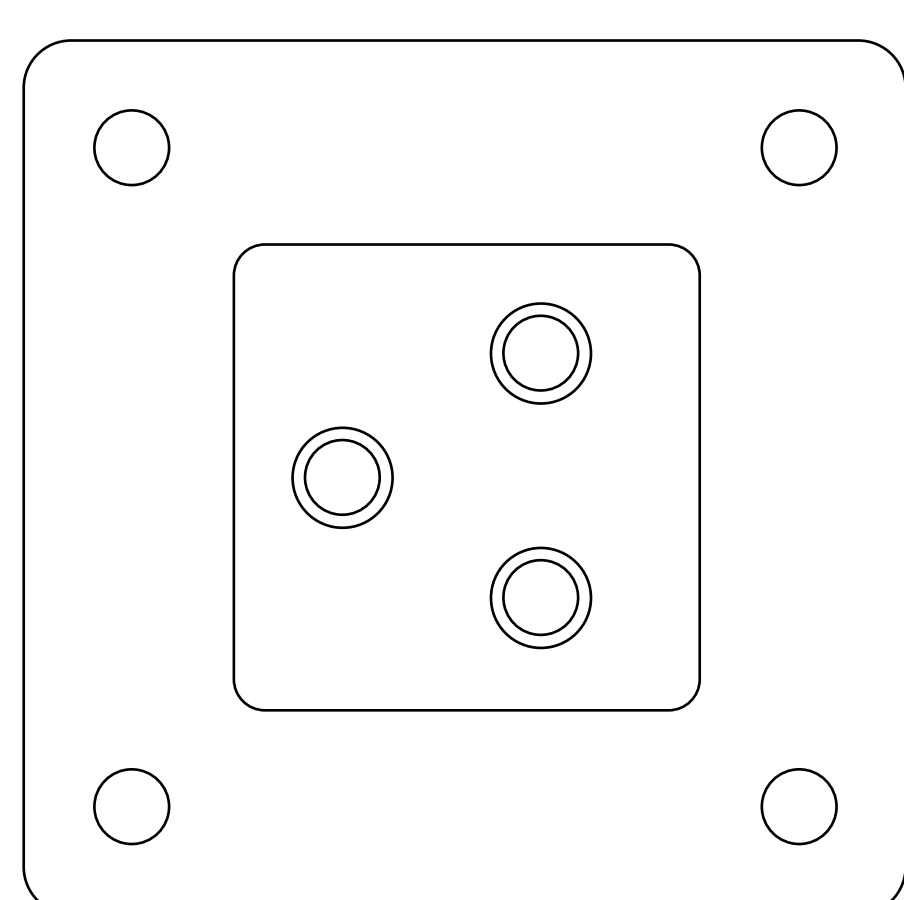

12*4

13*4

B*1



G*12

S*16

Assembly Instruction



STEP 13

Attach magnetic pieces(L) to the door board(9) using bolts(H) and Allen wrench(B), attach handles(M) to the door board using bolts(I) and Allen wrench(B), then insert door shafts(J) into the door board.

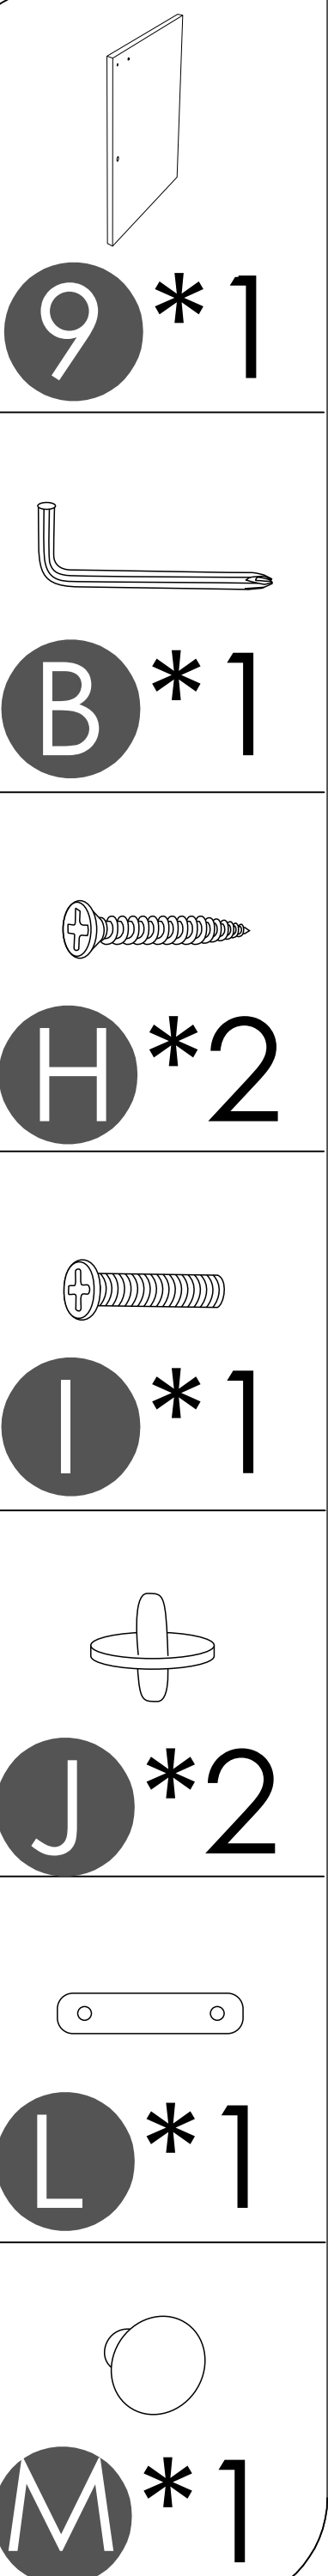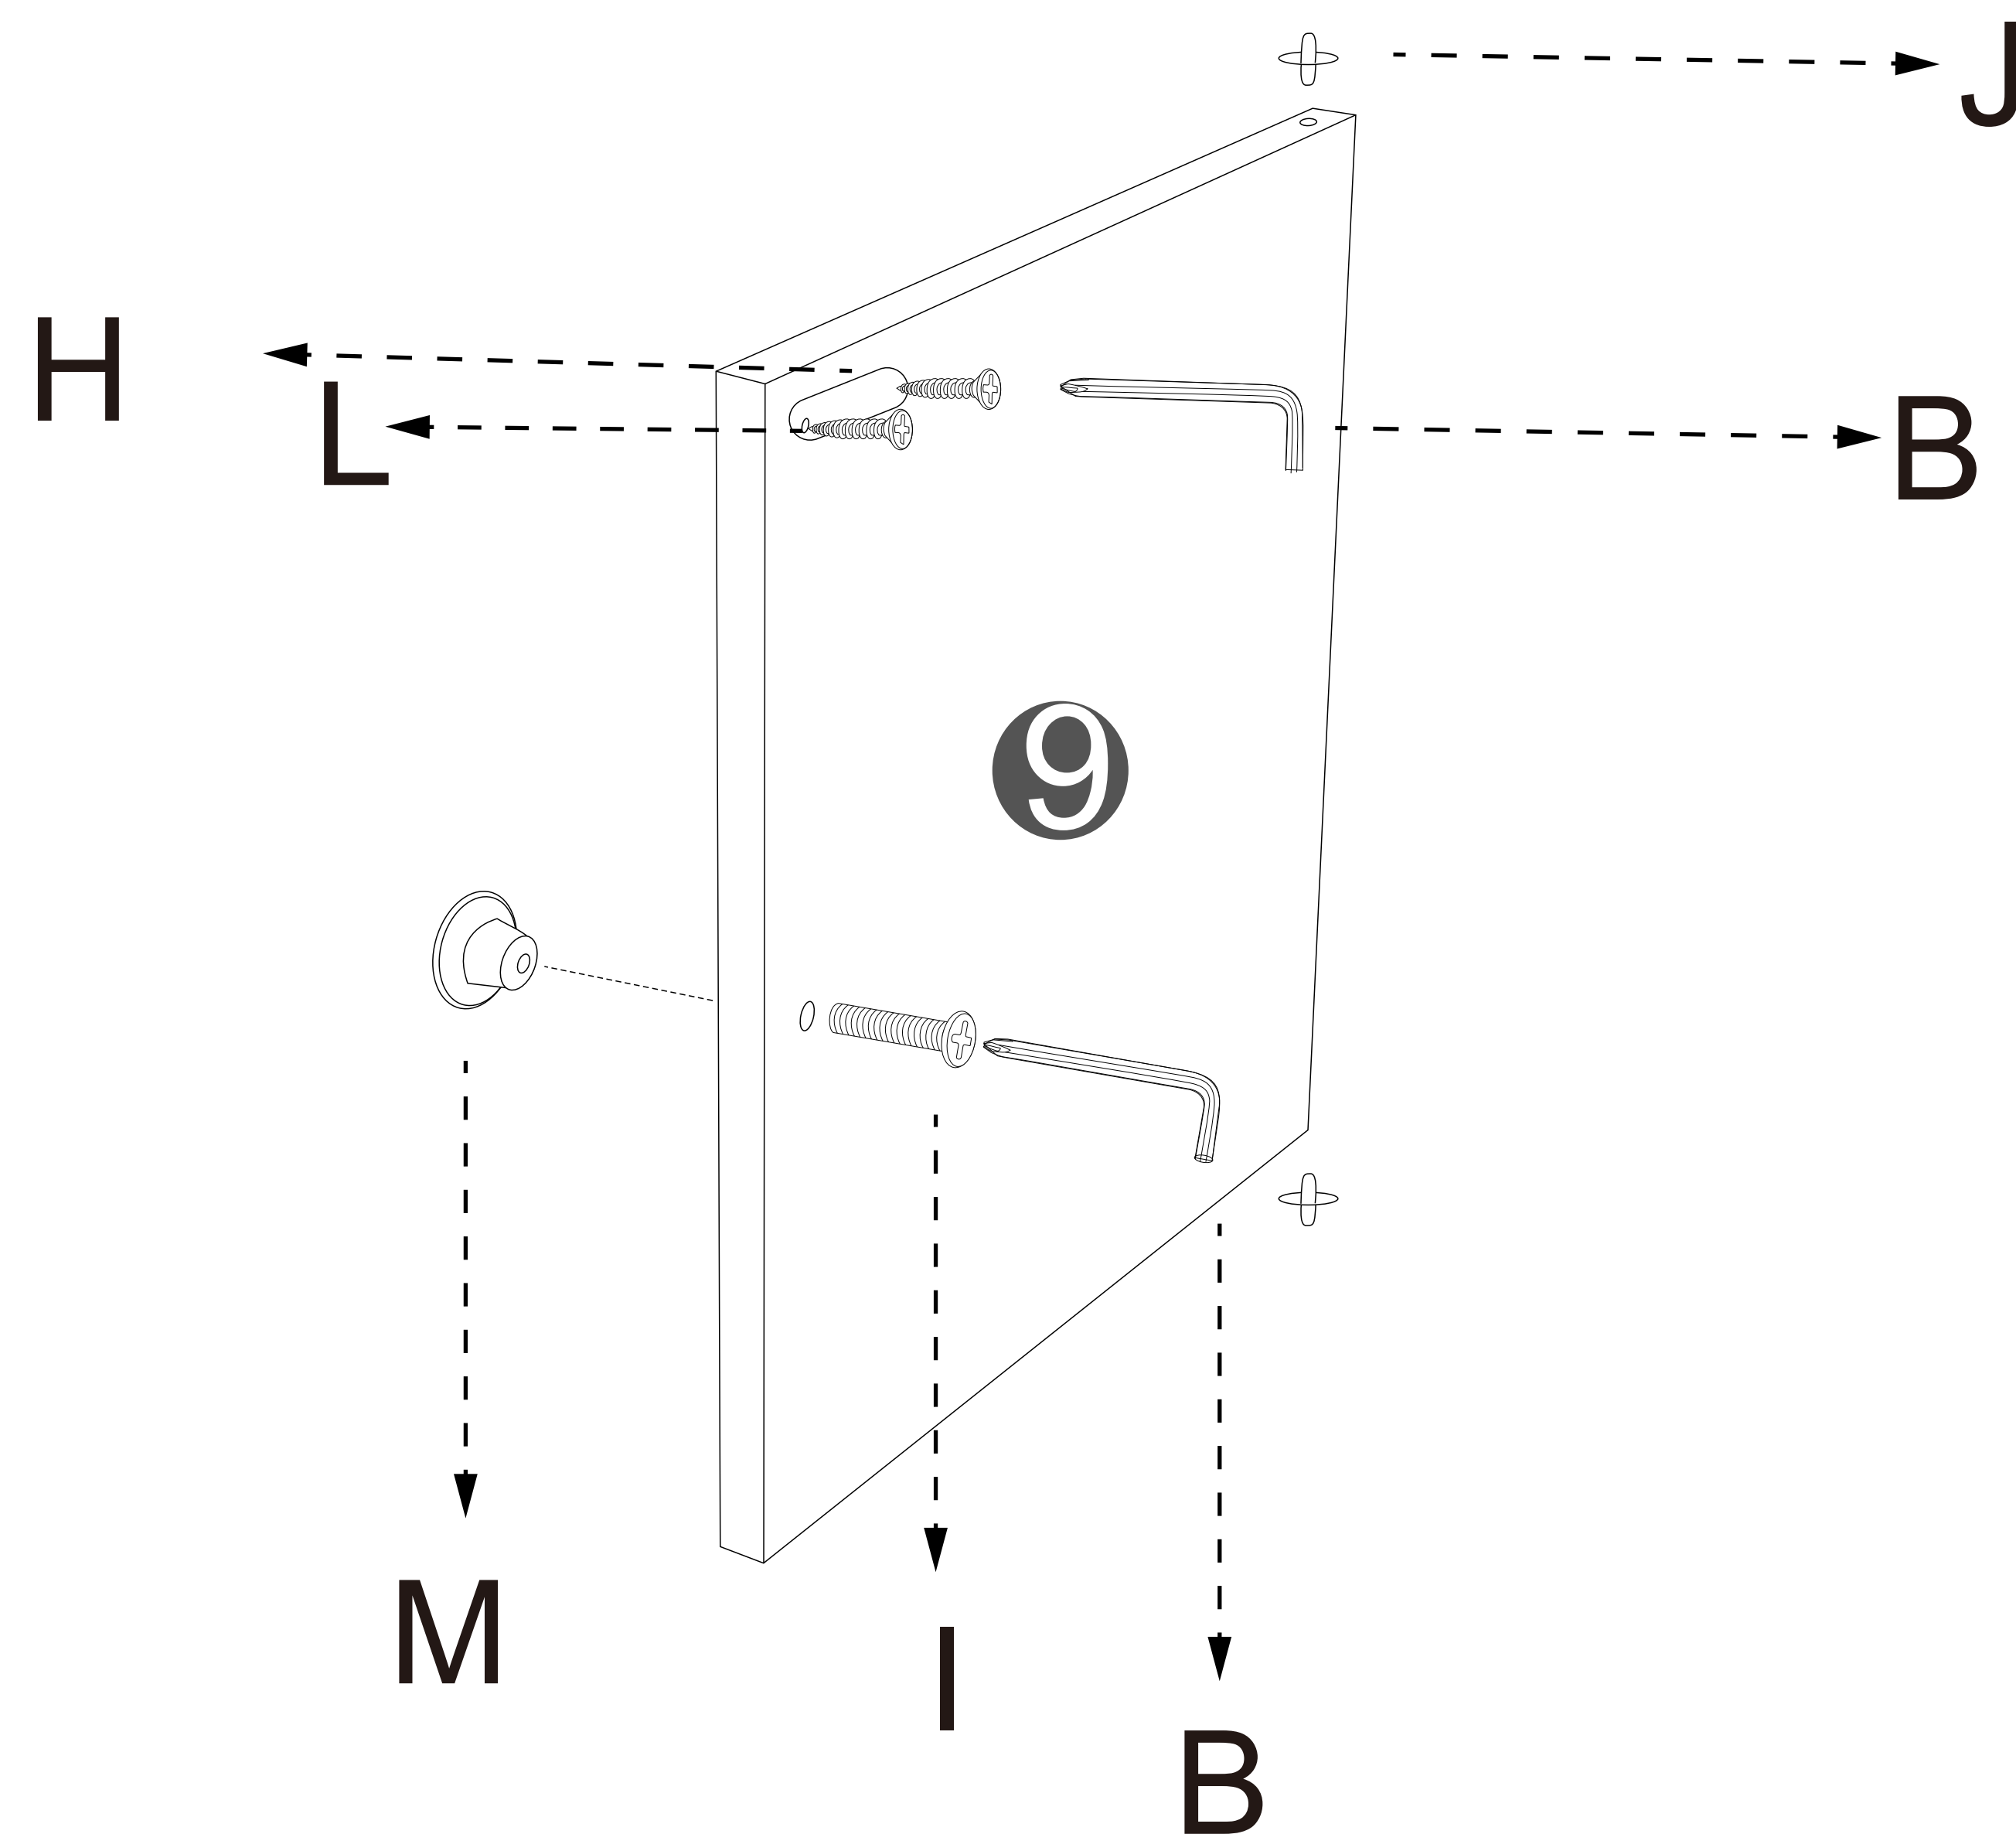

STEP 14



Attach magnetic pieces(L) to the door board(10) using bolts(H) and Allen wrench(B), attach handles(M) to the door board using bolts(I) and Allen wrench(B), then insert door shafts(J) into the door board.

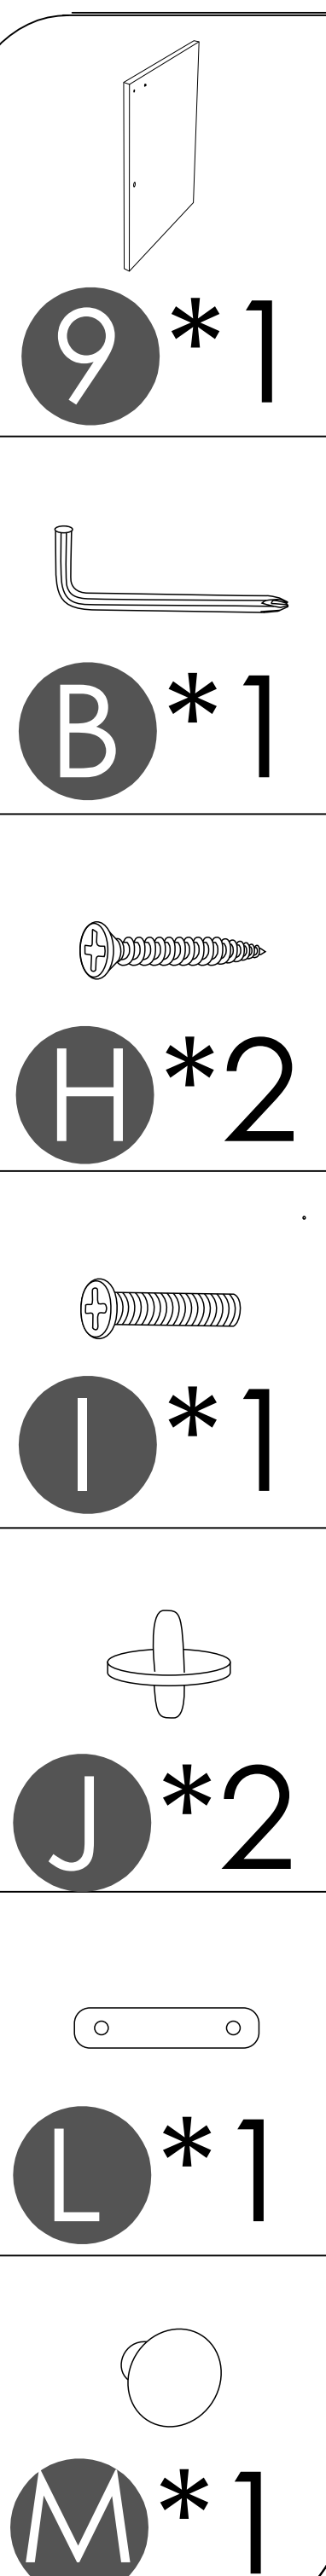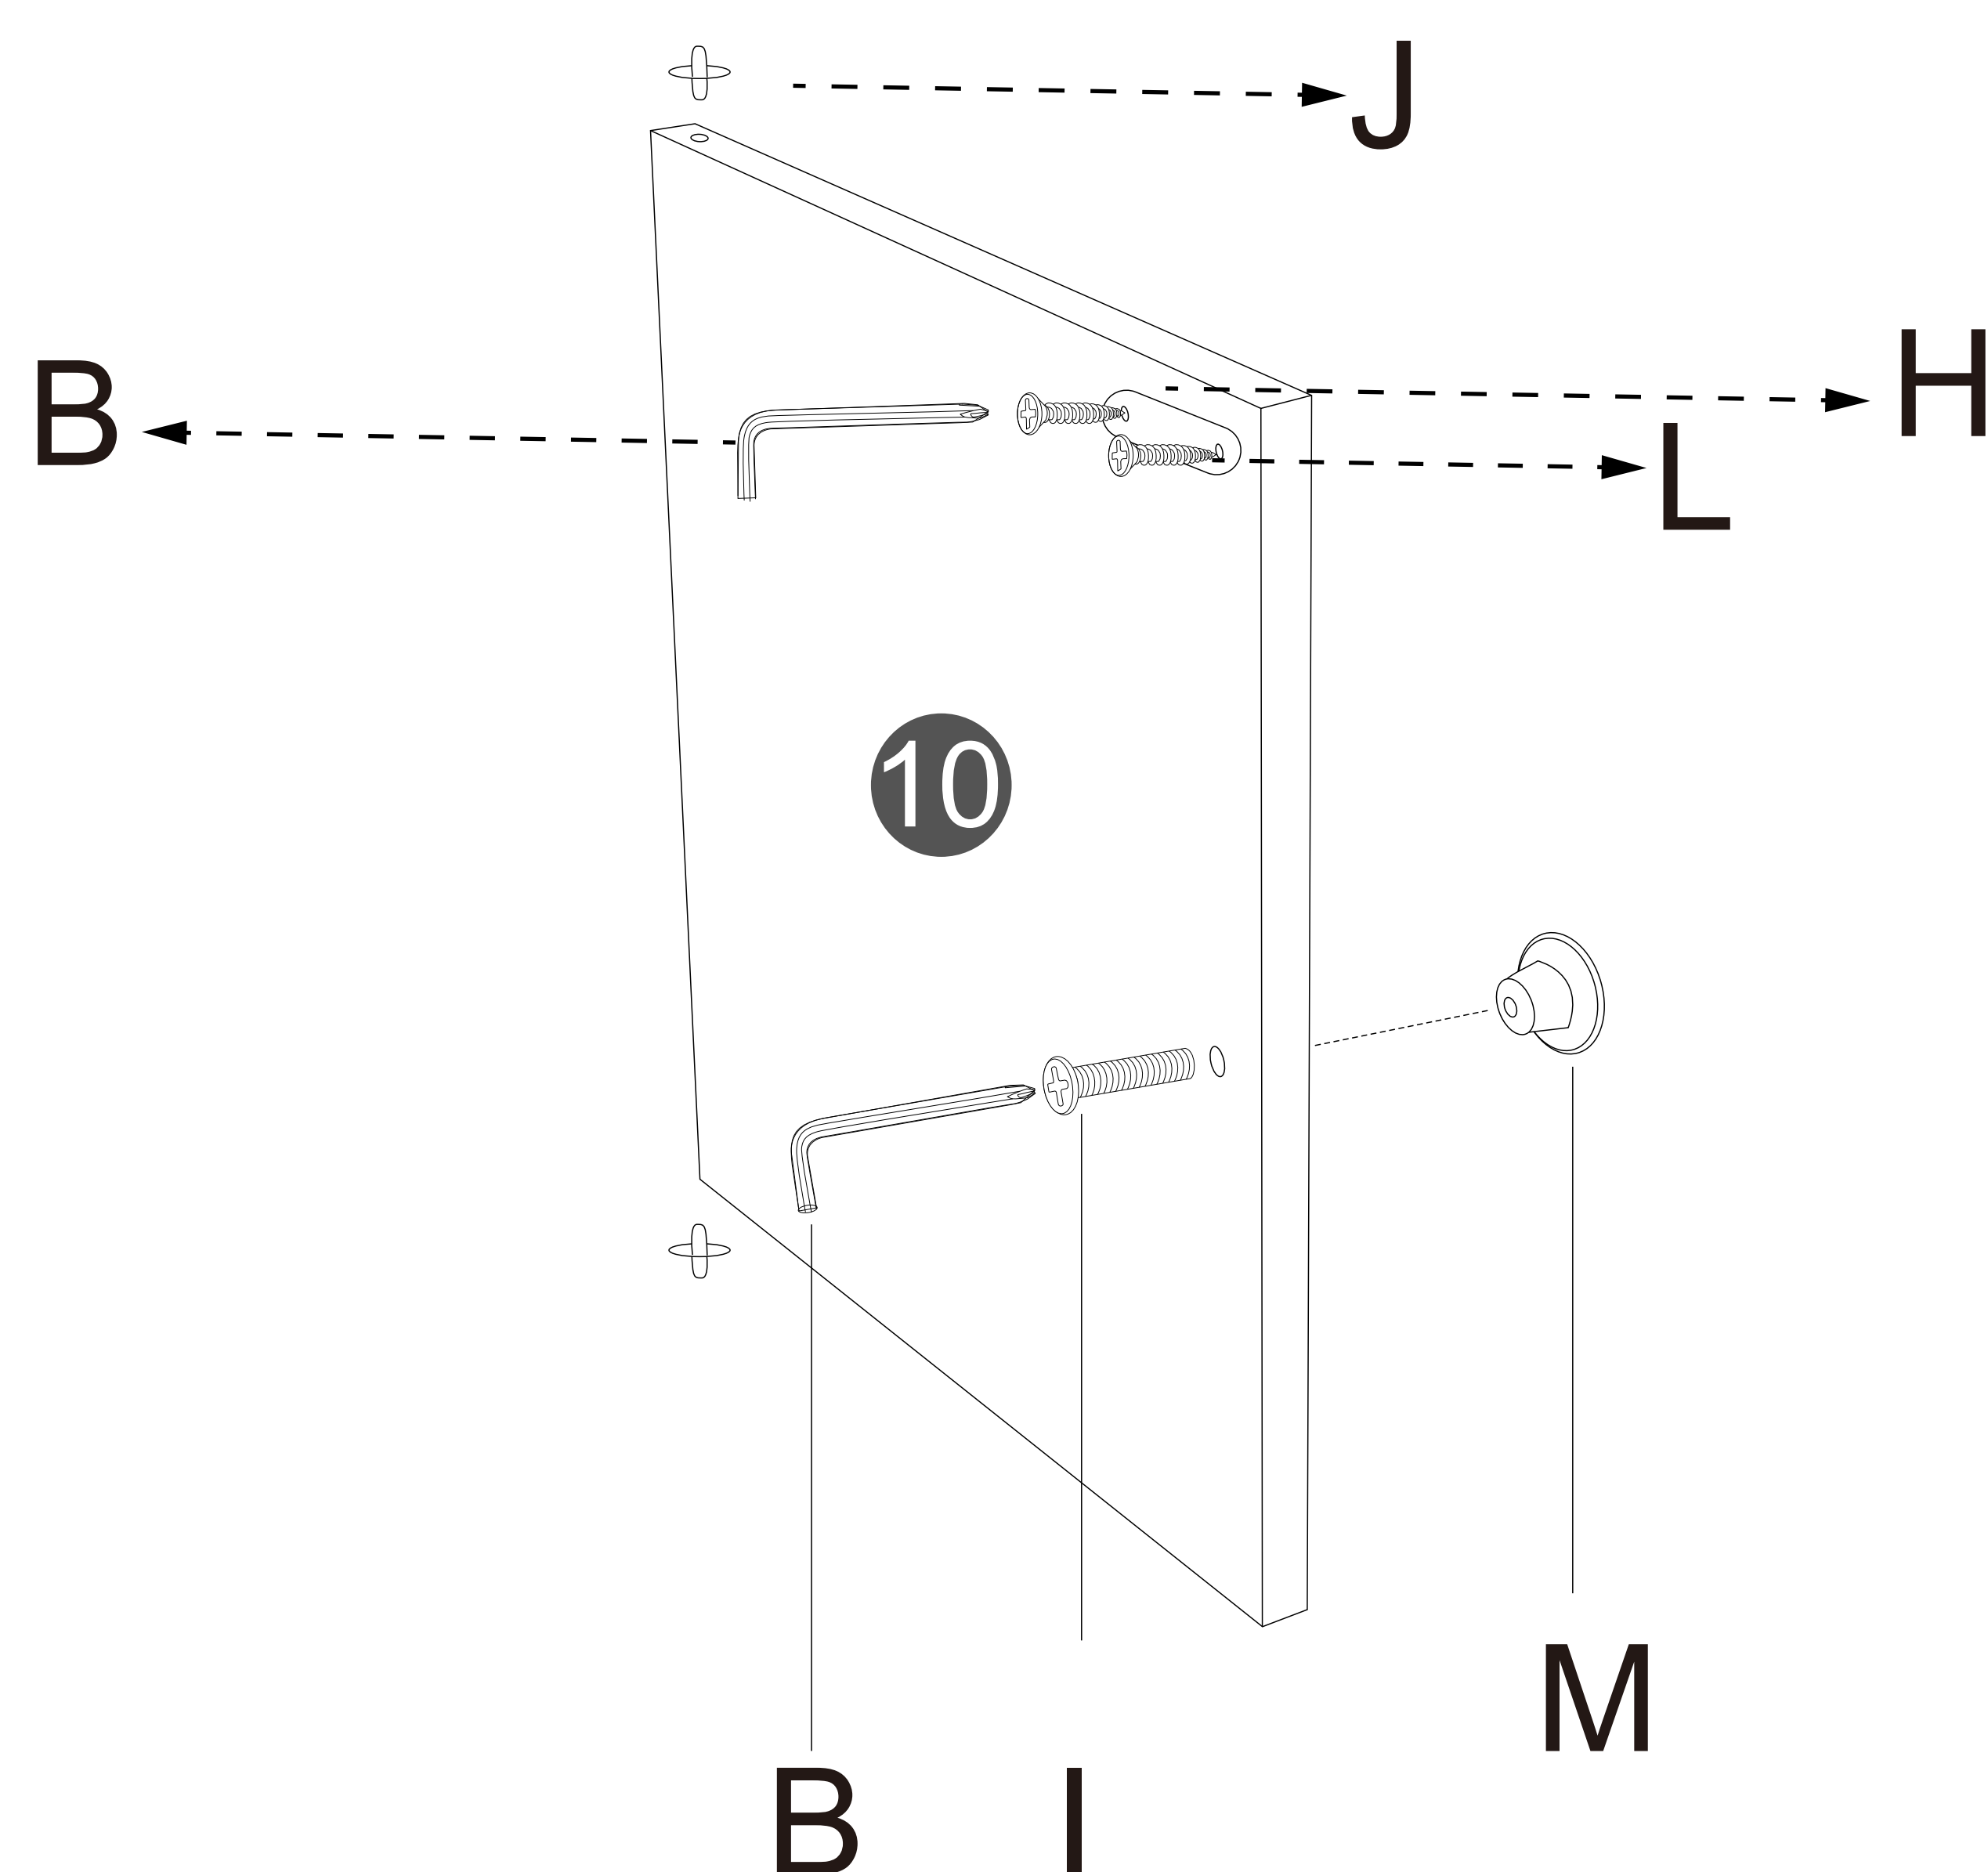

Assembly Instruction



STEP 15

Attach door boards to the cabinet after aiming the hole of door.

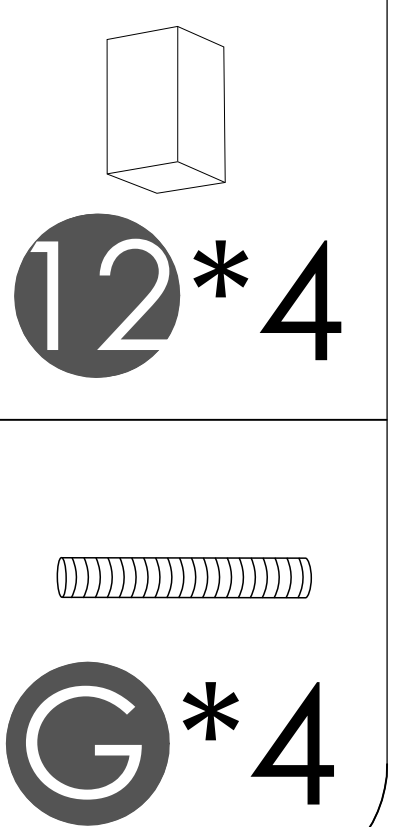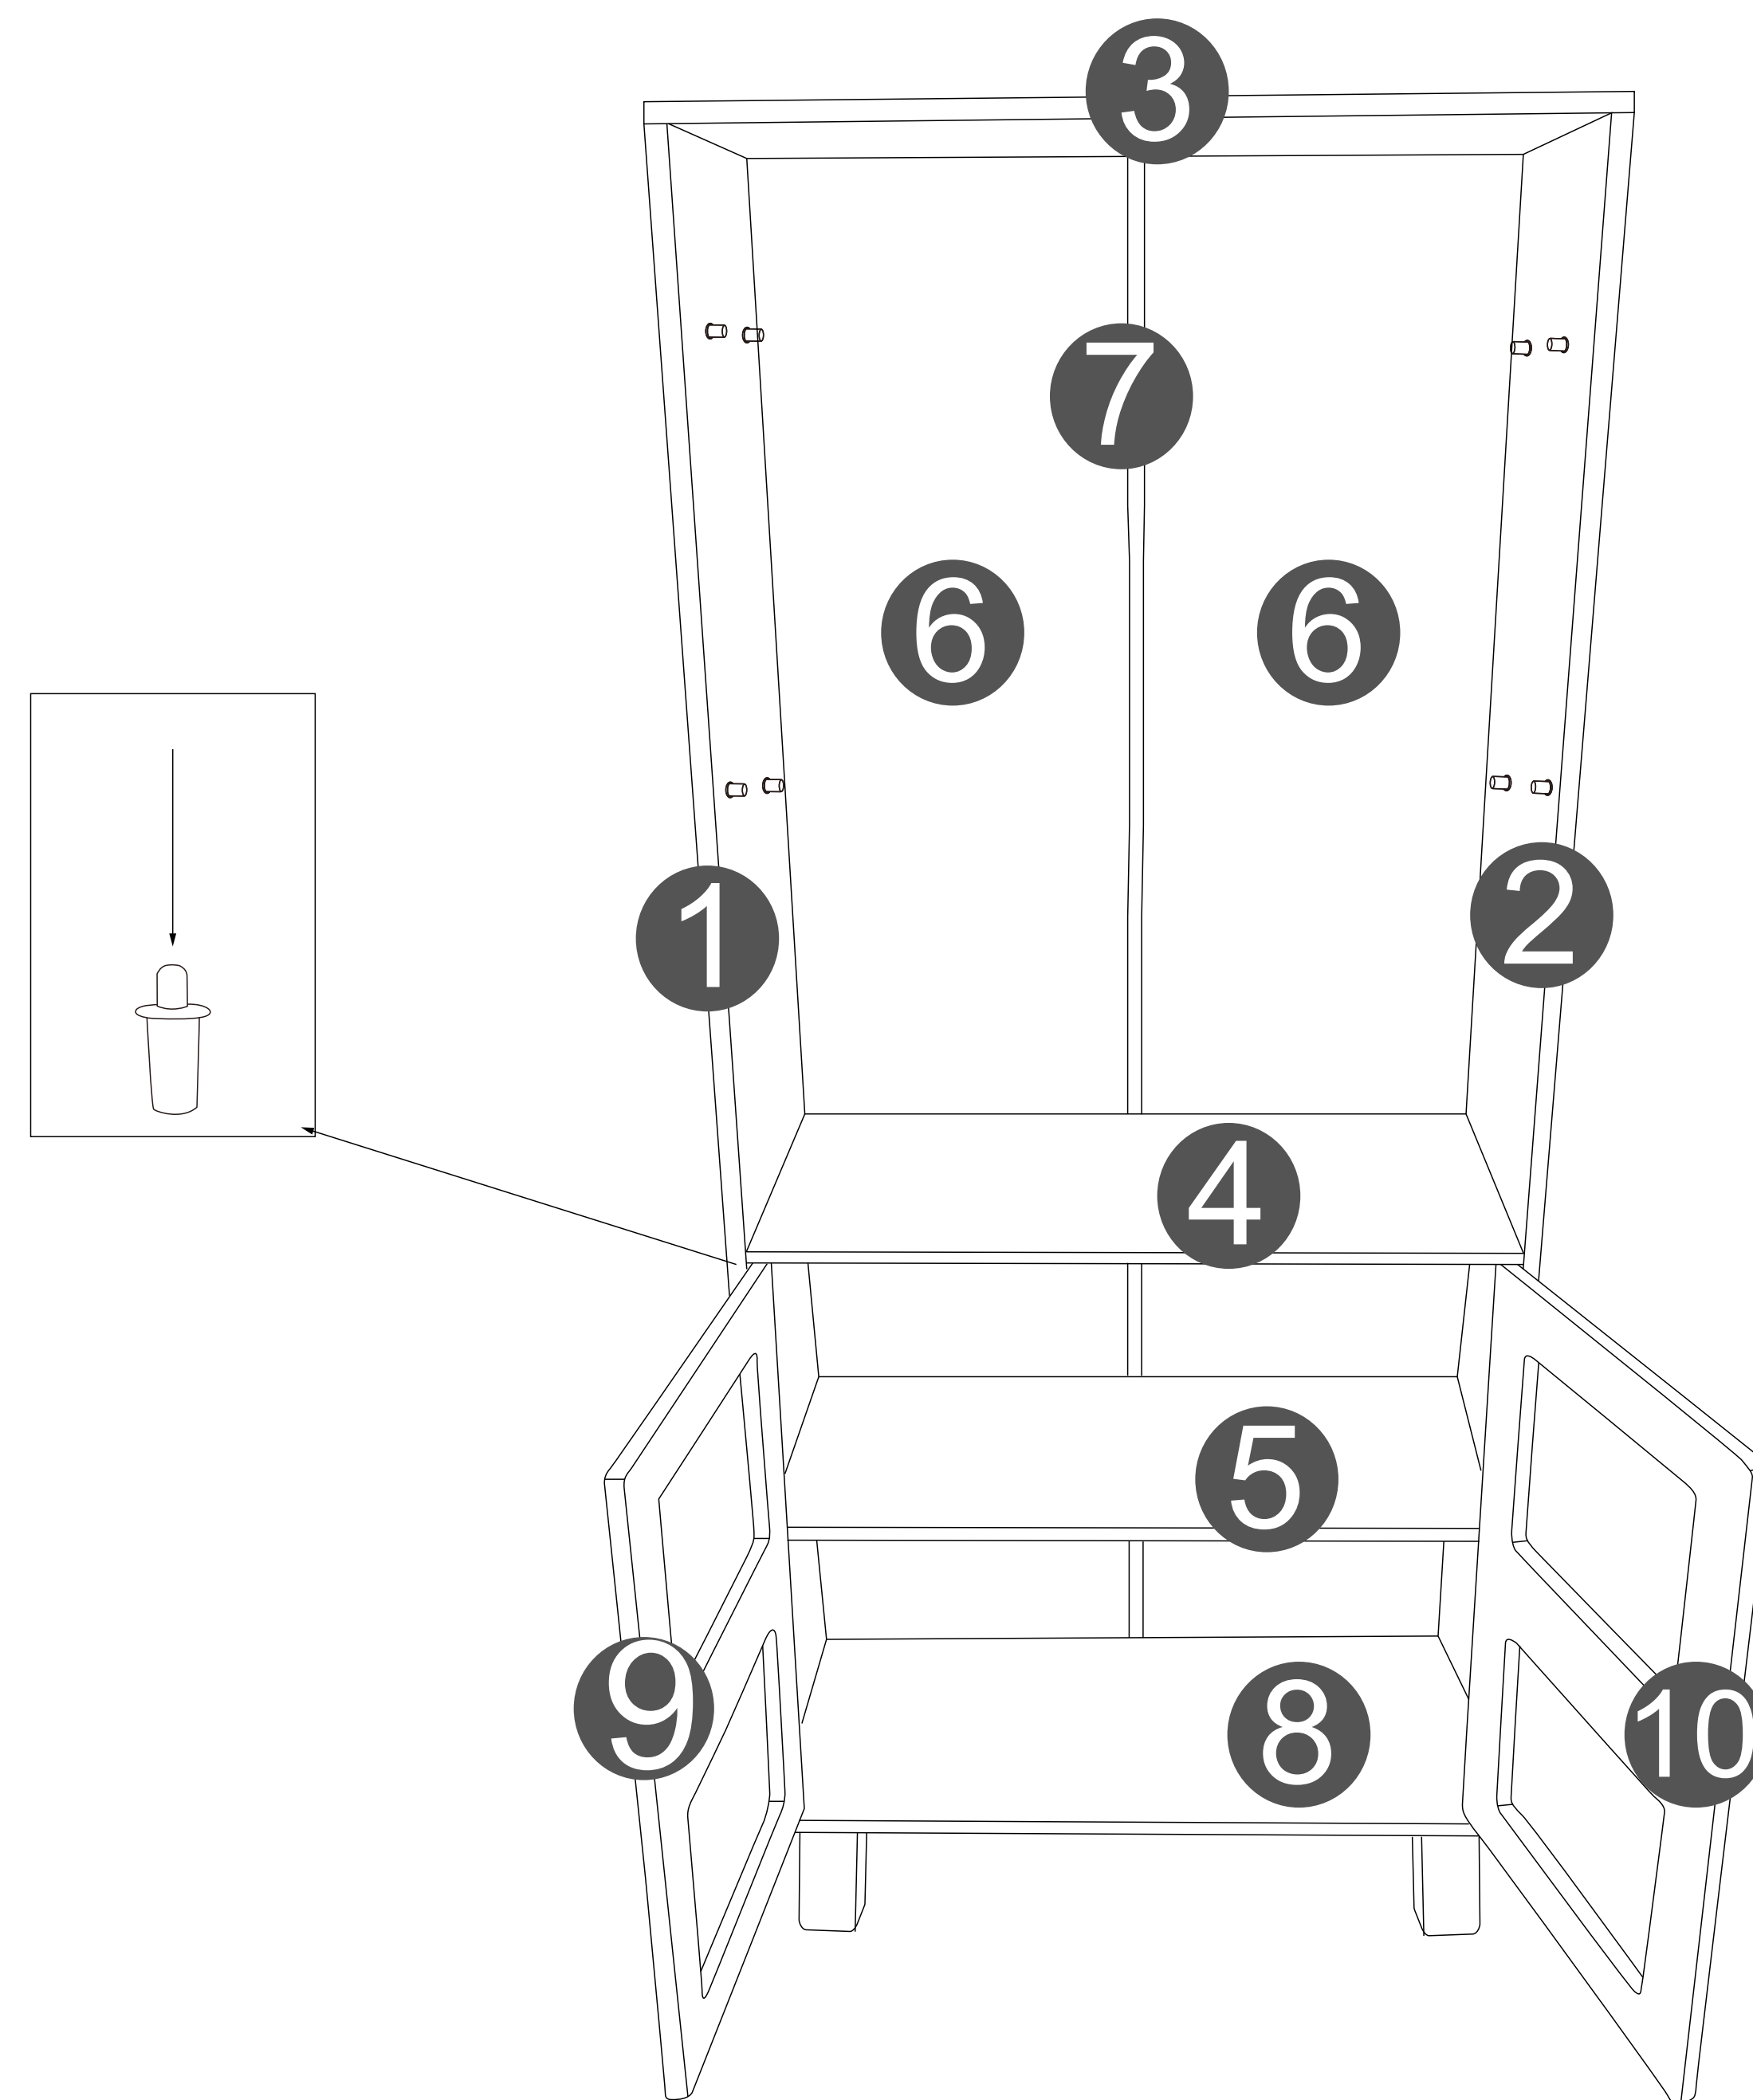

STEP 16




Attach layer boards(11) on the supports.

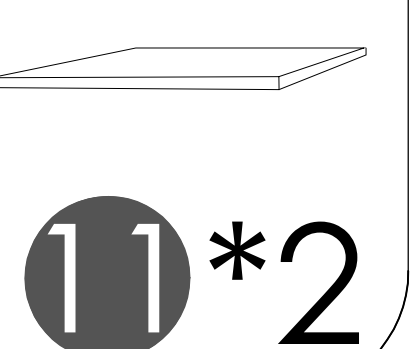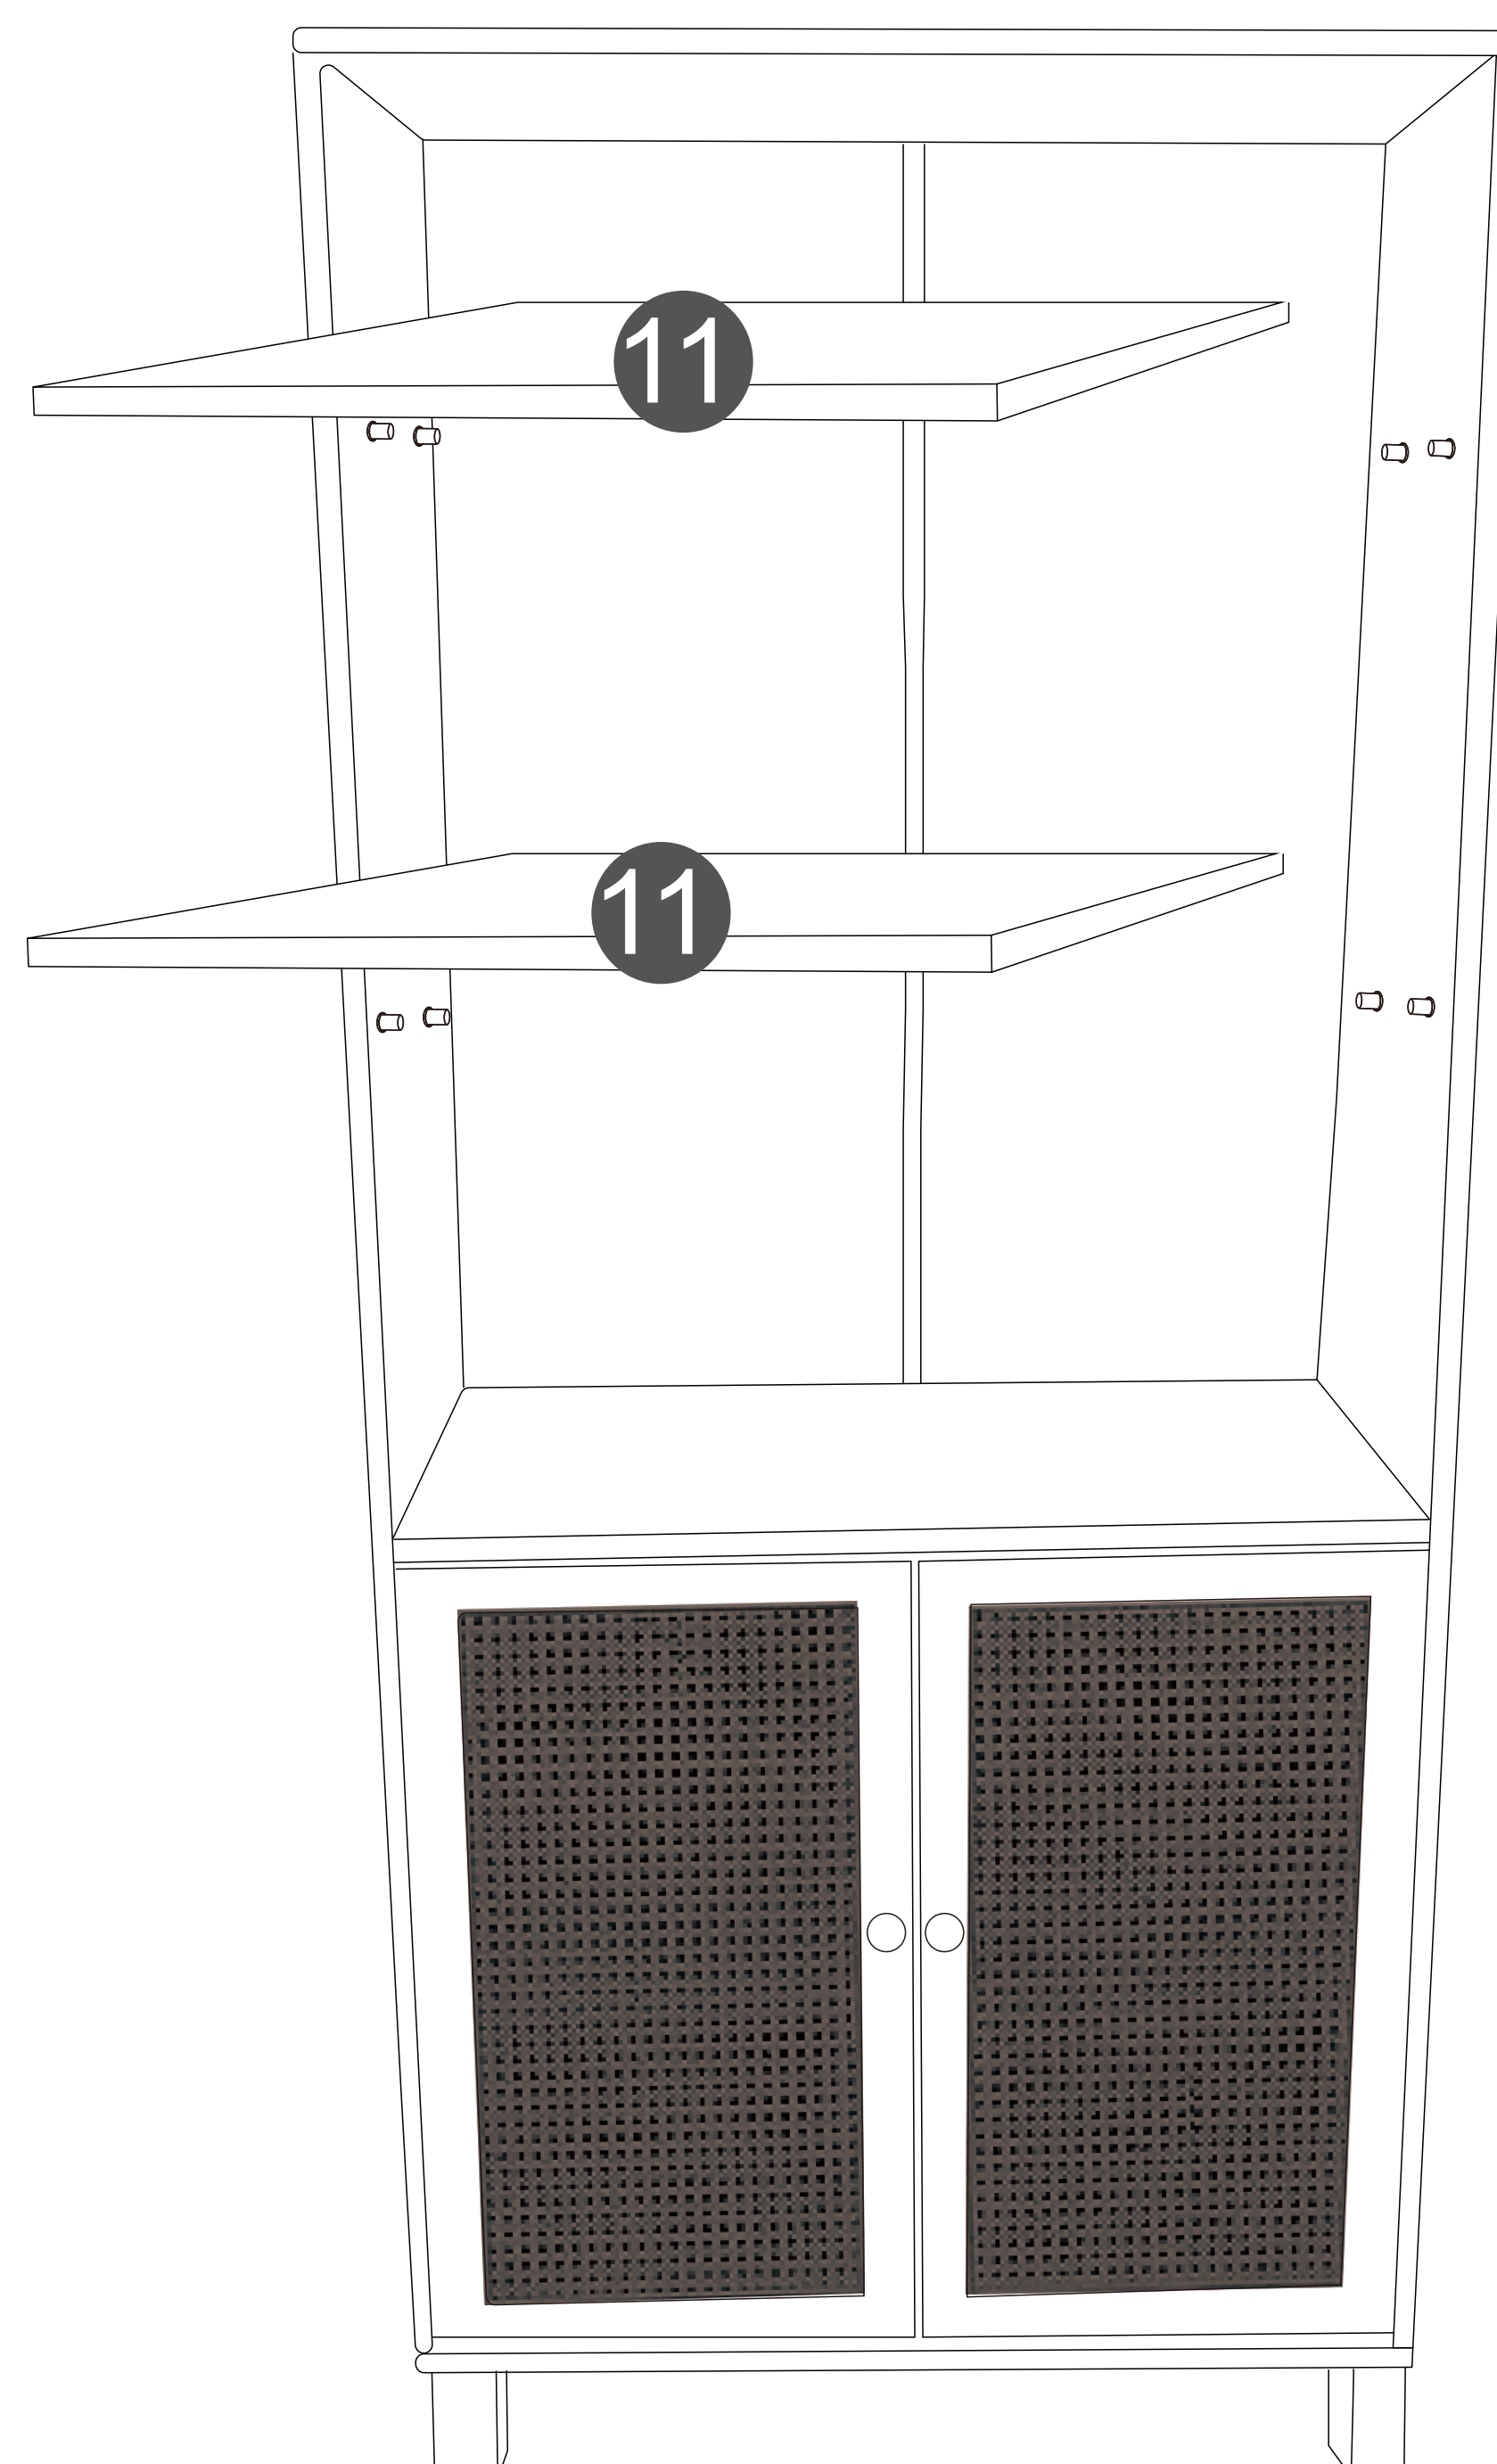

Assembly Instruction


STEP 17

Attach stabilizers(O) to the back board using bolts(N) and Allen wrench(B).

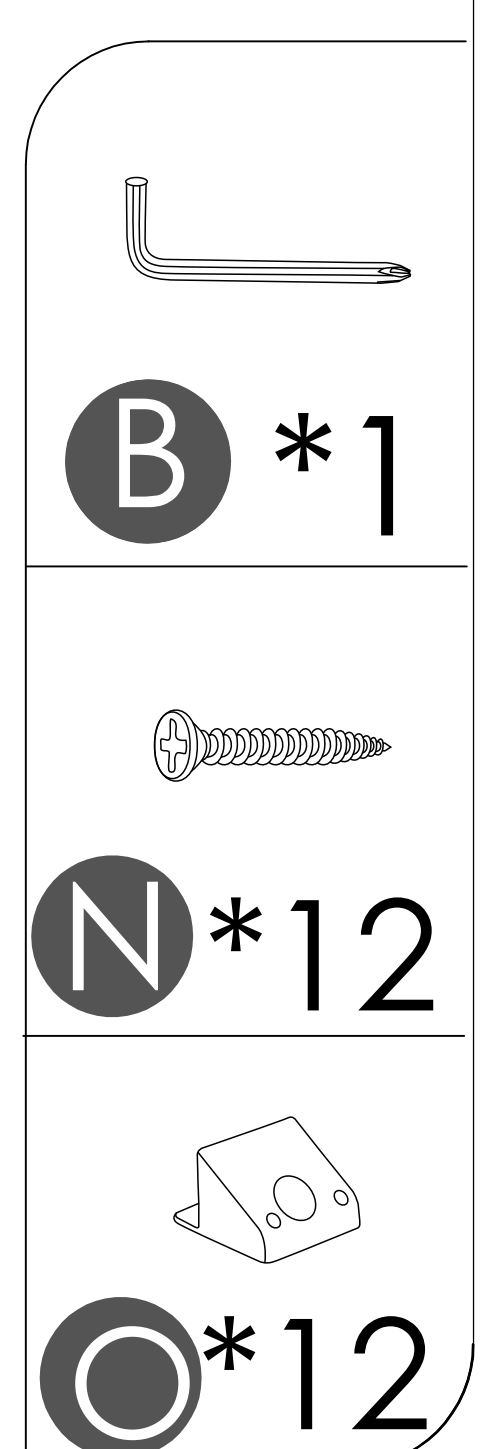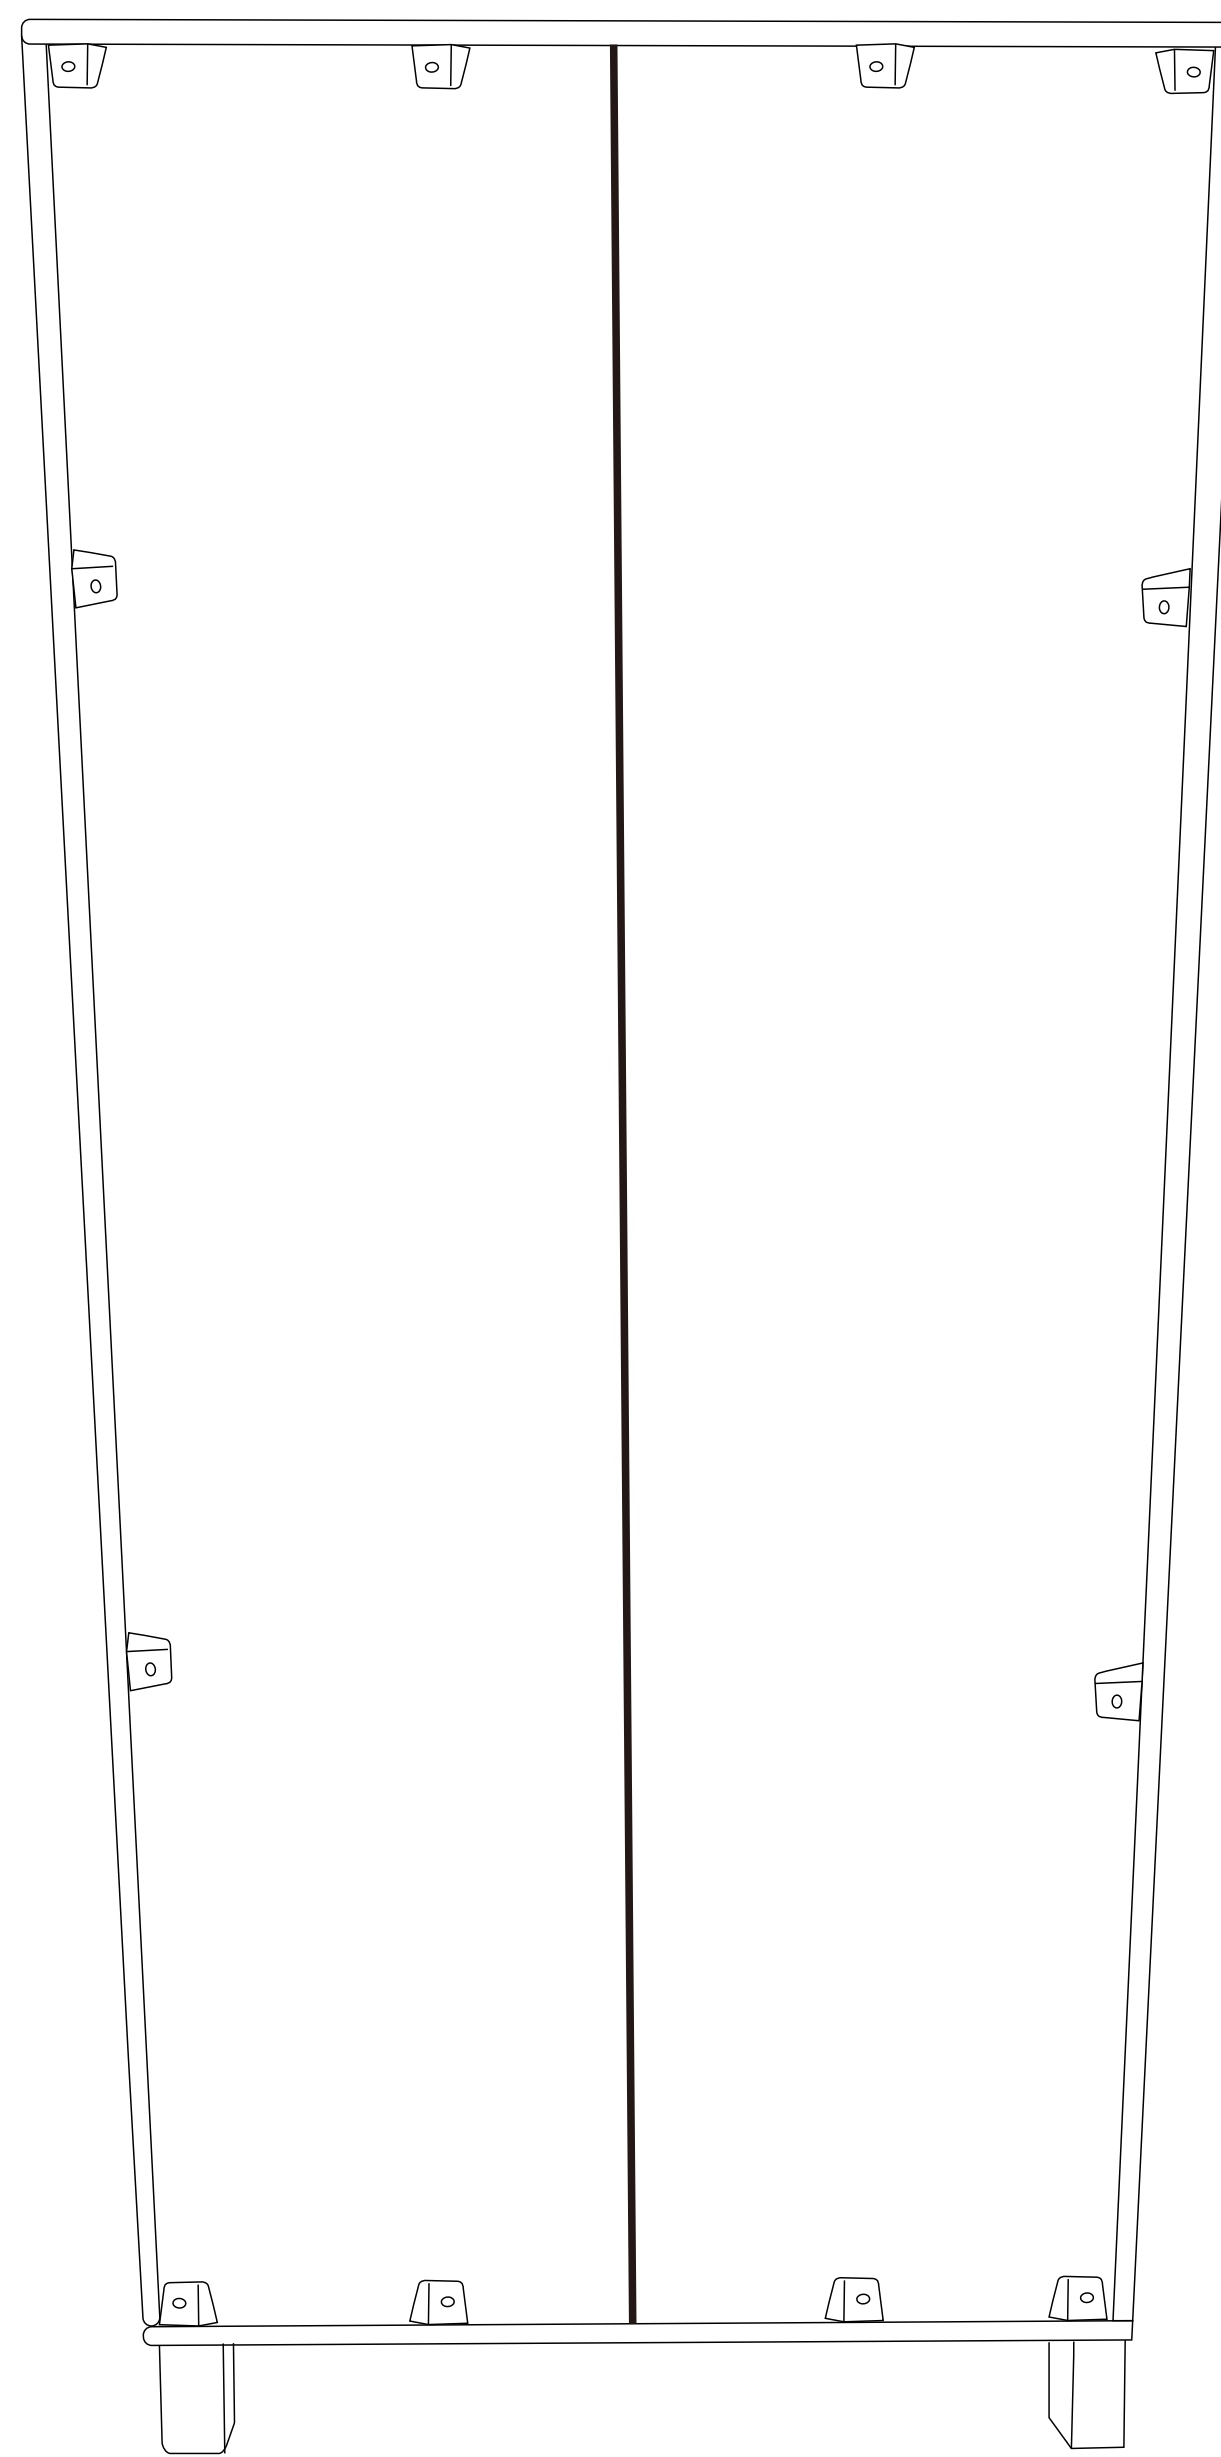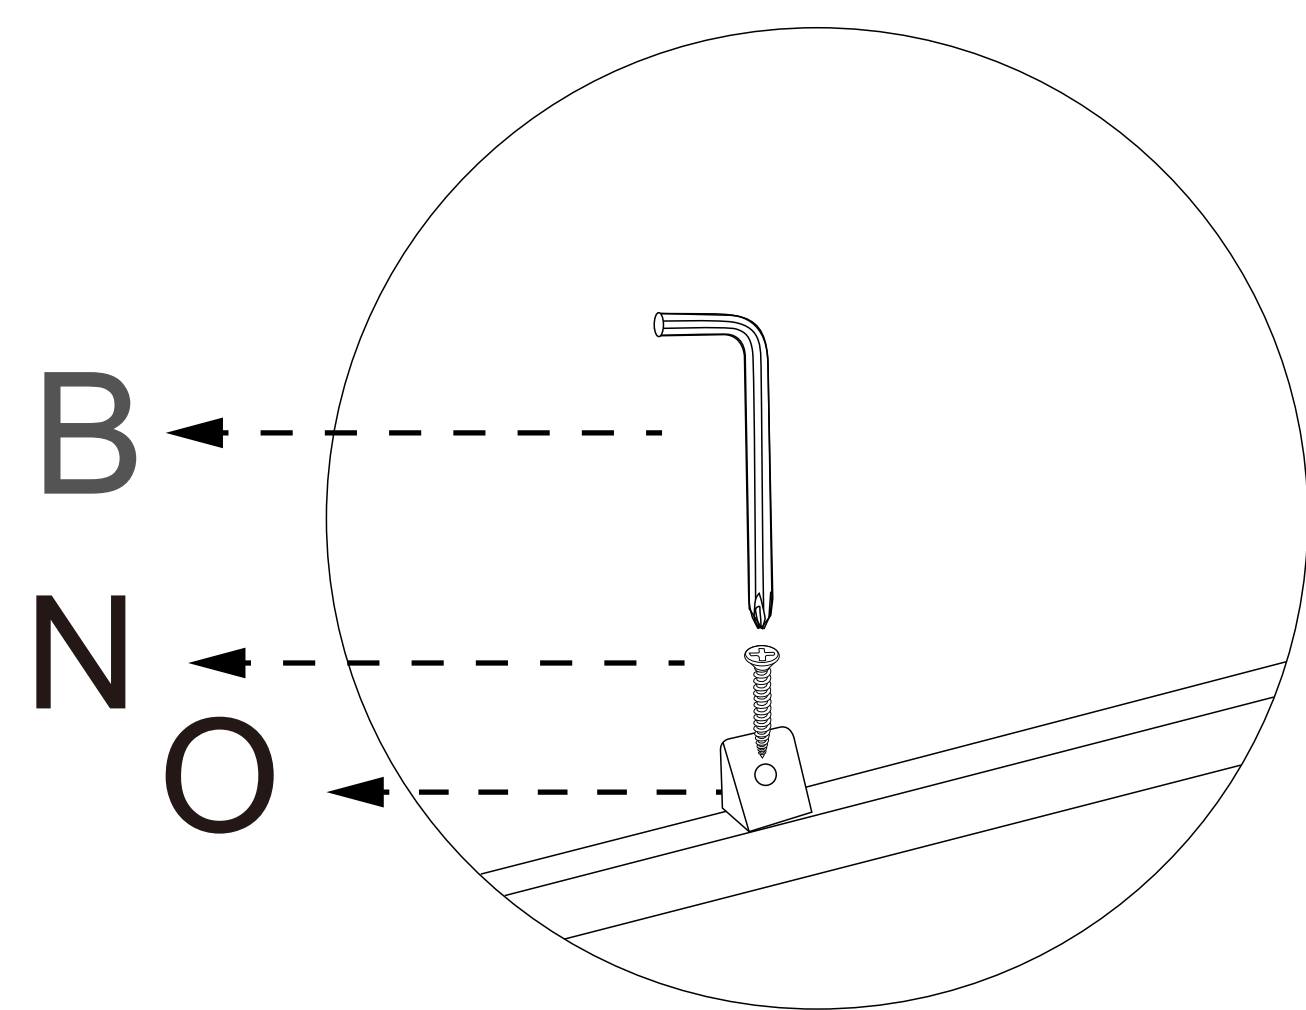

STEP 18


If you want to pin the bookcase to the wall, please attach plastic components(R) to the wall, and attach stabilizers(Q) to the top board using bolts(N), then attach stabilizers(Q) to the wall using bolts(P).

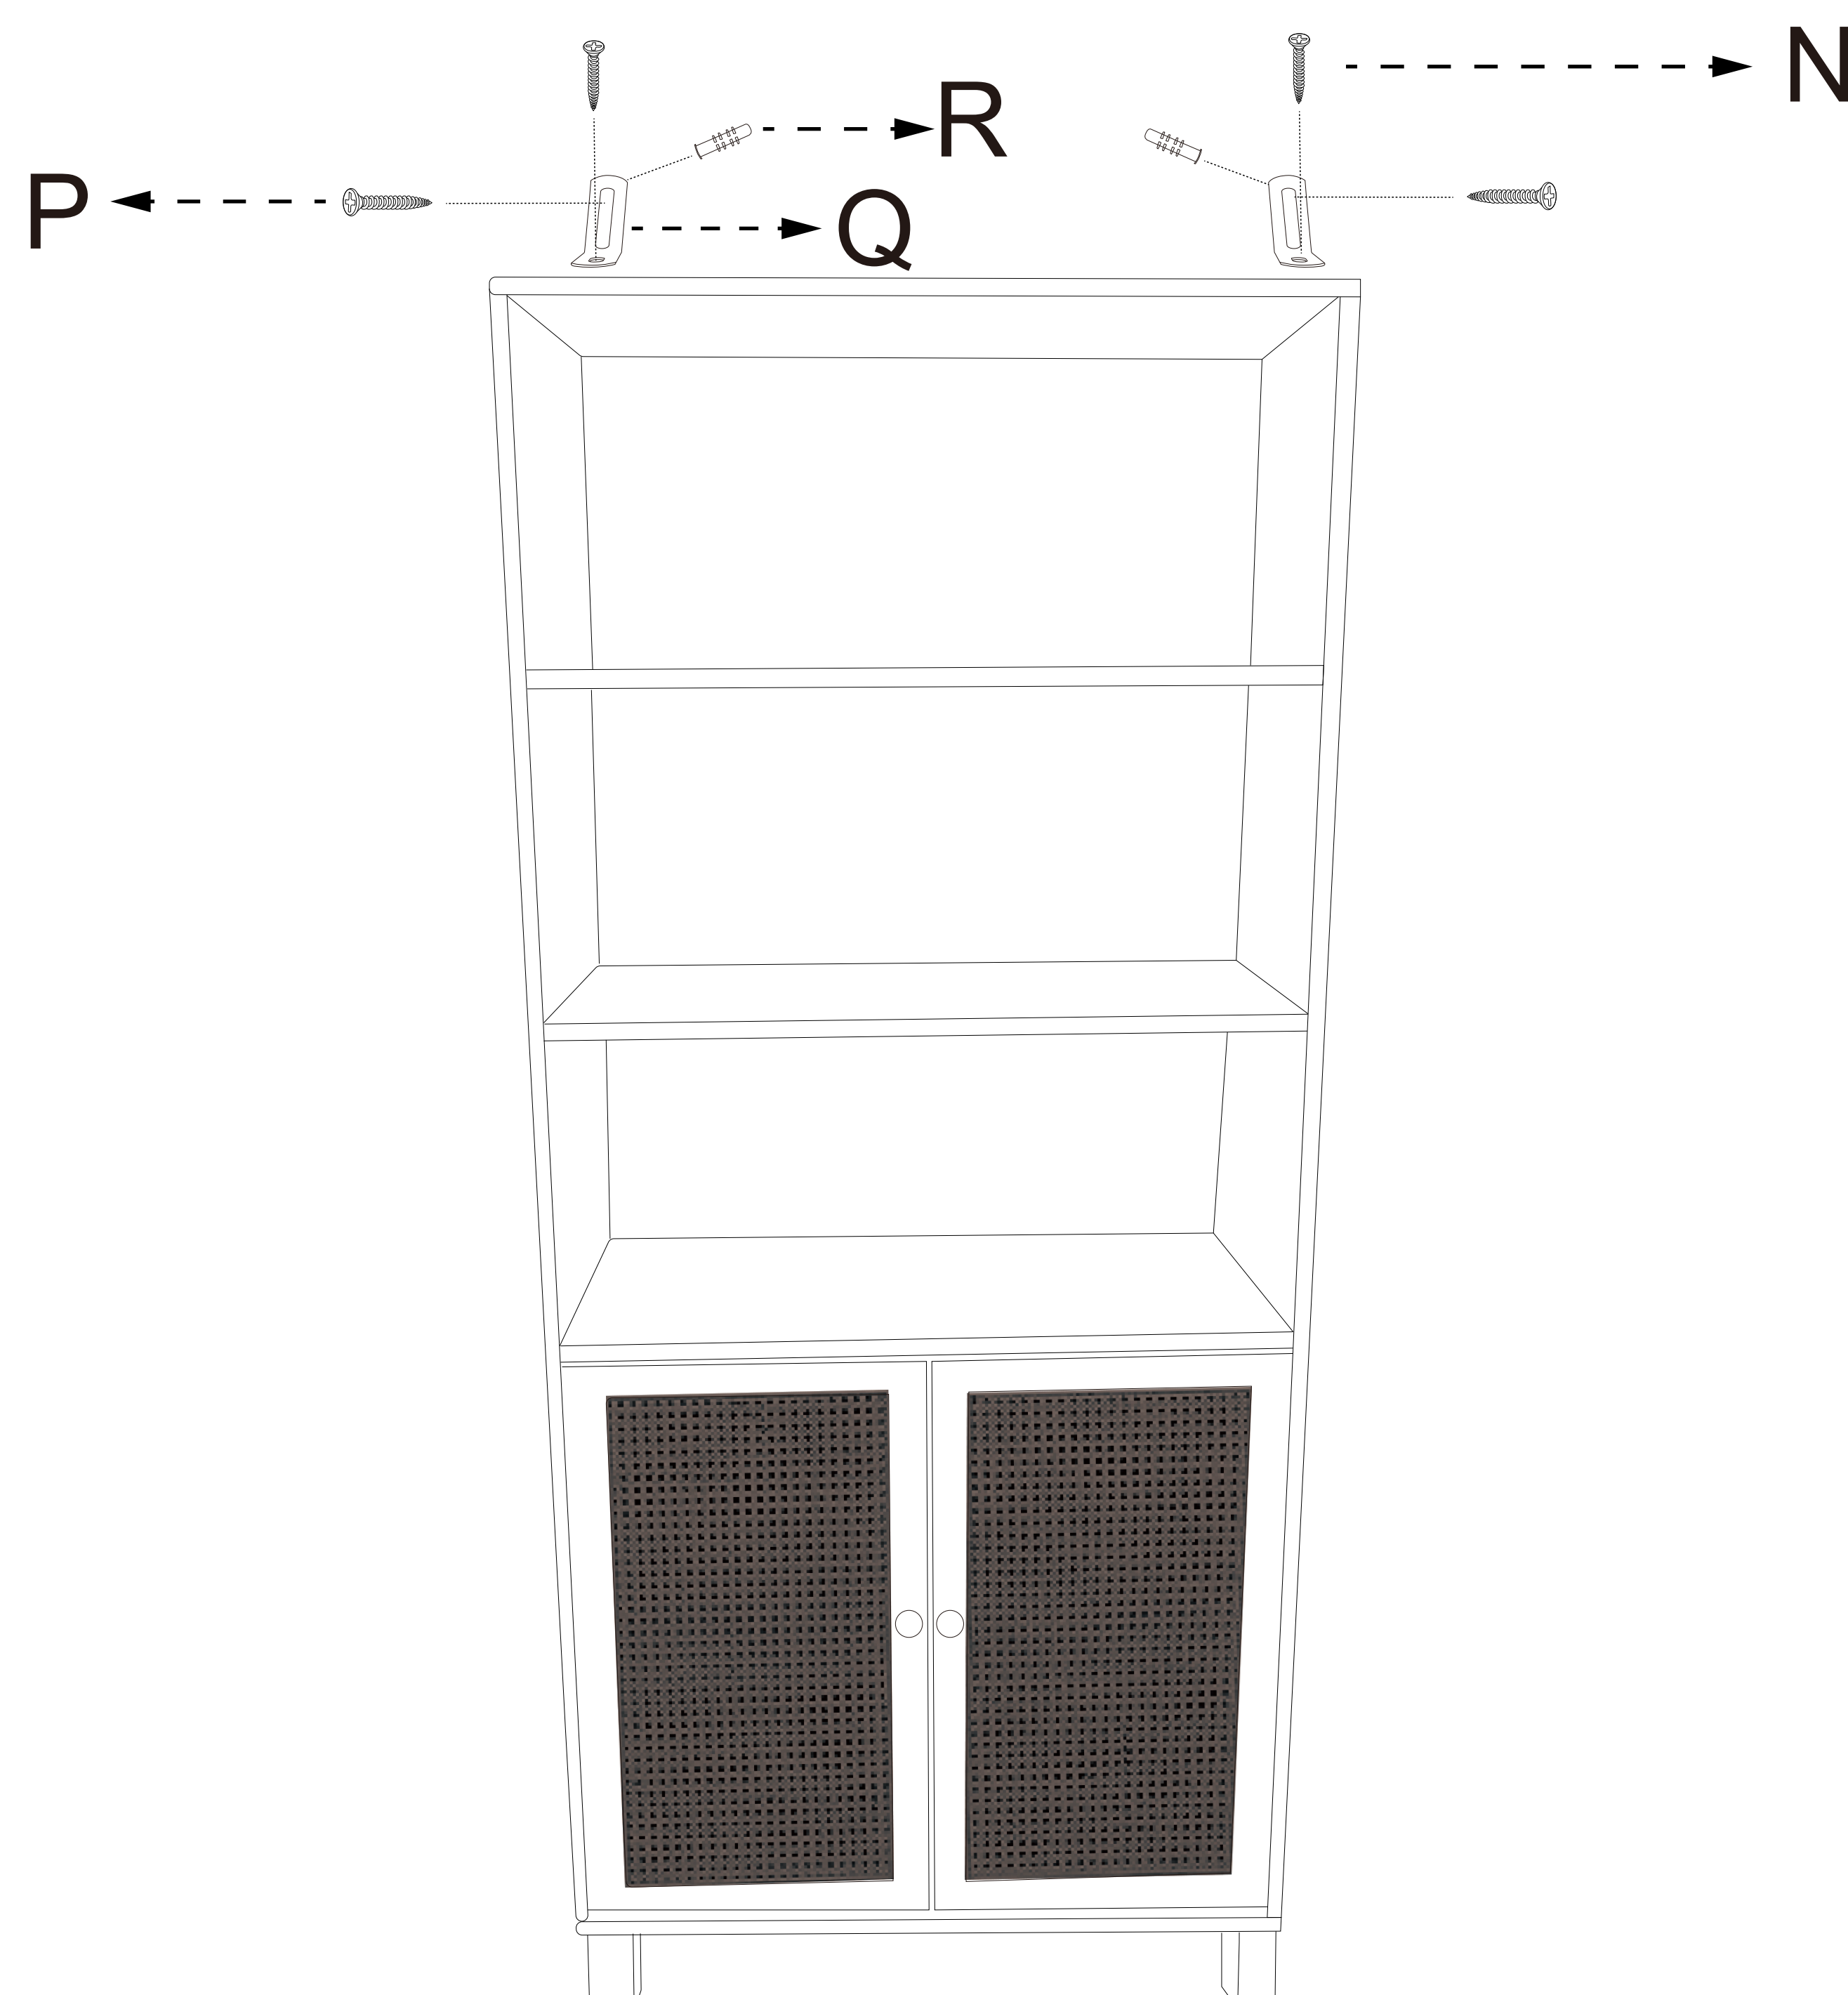

Assembly Instruction

STEP 19

The assembly is done.

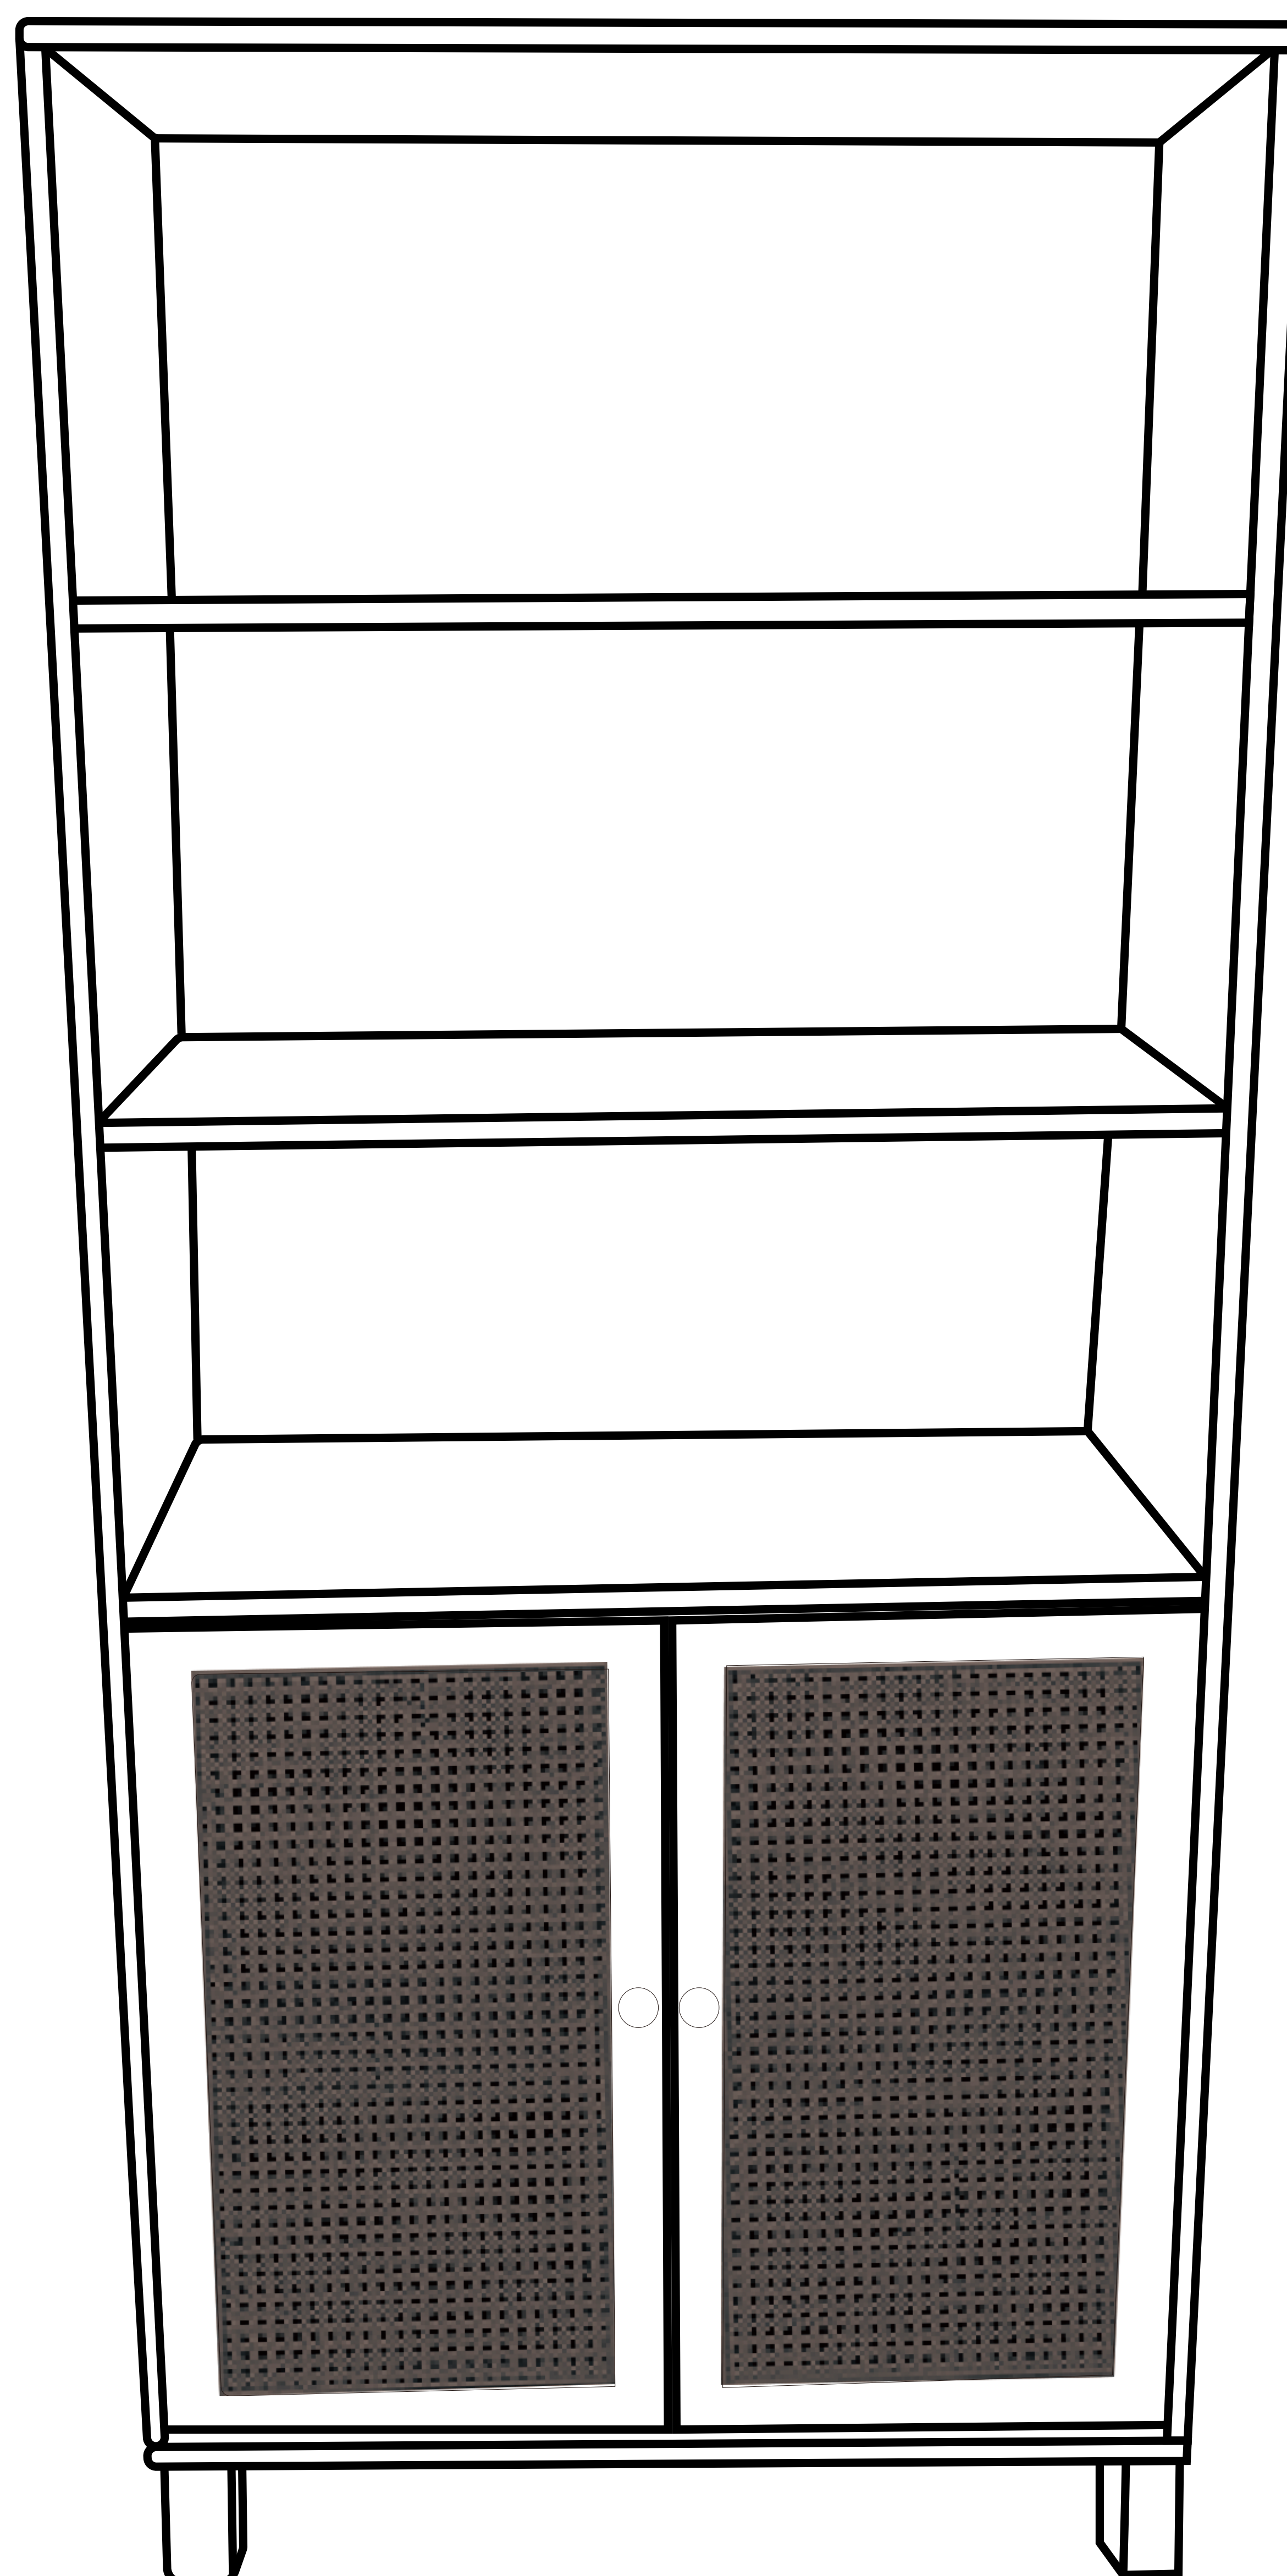

DONE