
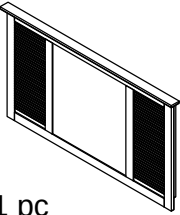
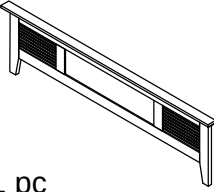
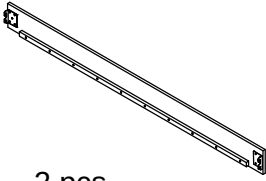

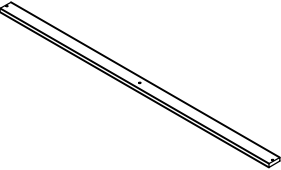

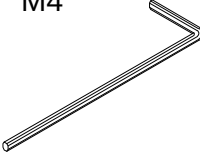
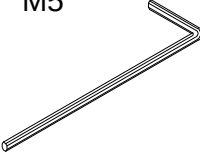


Assembly Instruction


QUEEN BED

A Headboard  1 pc	B Footboard  1 pc	C Side Rail  2 pcs	D Headboard Leg (Left & Right)  2 pcs
E Wooden Slat  4 pcs	F Wooden Support  4 pcs	G Screw-JCBC M6 x 35mm  6 pcs	H Spring Washer M6  6 pcs
I Flat Washer M6  6 pcs	J Screw CSK M4 x 25mm  8 pcs	K Allen Key M4  1 pc	L Allen Key M5  1 pc

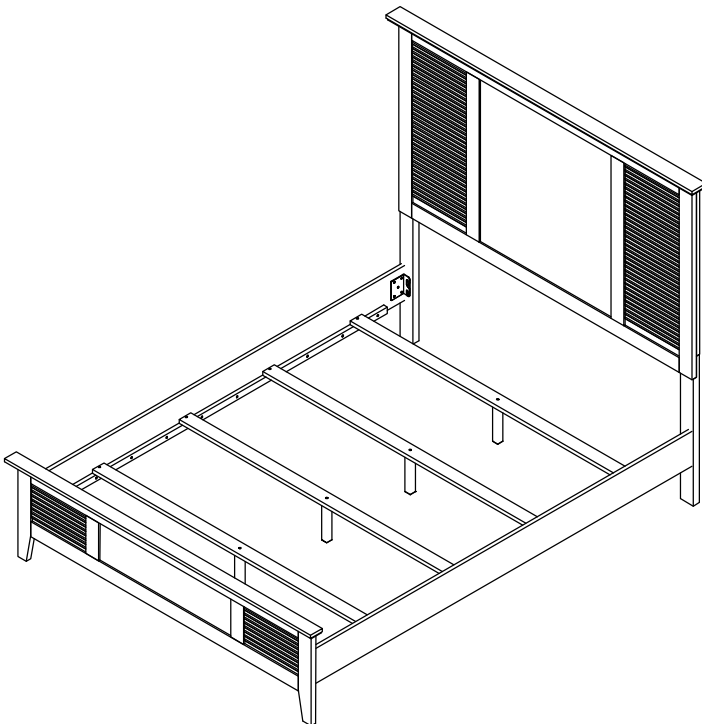


This page lists all the contents included in the box. Please take time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Attach headboard (A) & headboard leg (left & right) (D) by using screw - JCBC M6 x 35mm (G), Spring Washer (H), Flat Washer (I), and tighten by using Allen Key M4 (K).

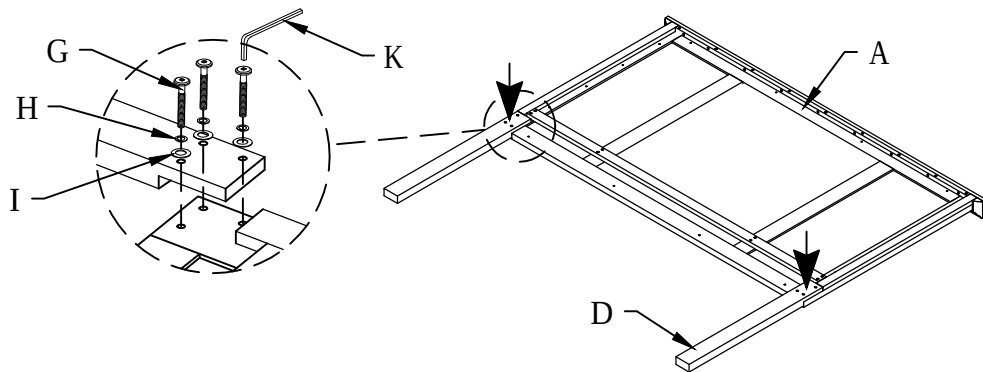

- 2** Loosen the screw from headboard leg, attached headboard (A) & footboard (B) to side rail (C) and then tighten by using Allen Key M5 (L).

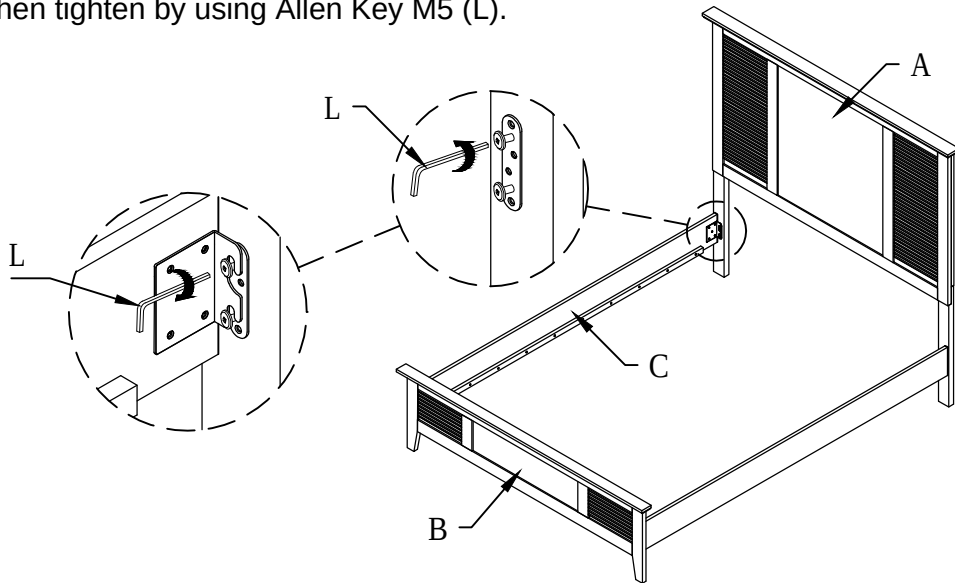

- 3** Attach the wooden support (F) to wooden slat (E) by tighten clockwise. Fix the wooden slat (E) to side rail (C) by screw CSK M4 x 25mm(J) with using screwdriver. (NO INCLUDED)

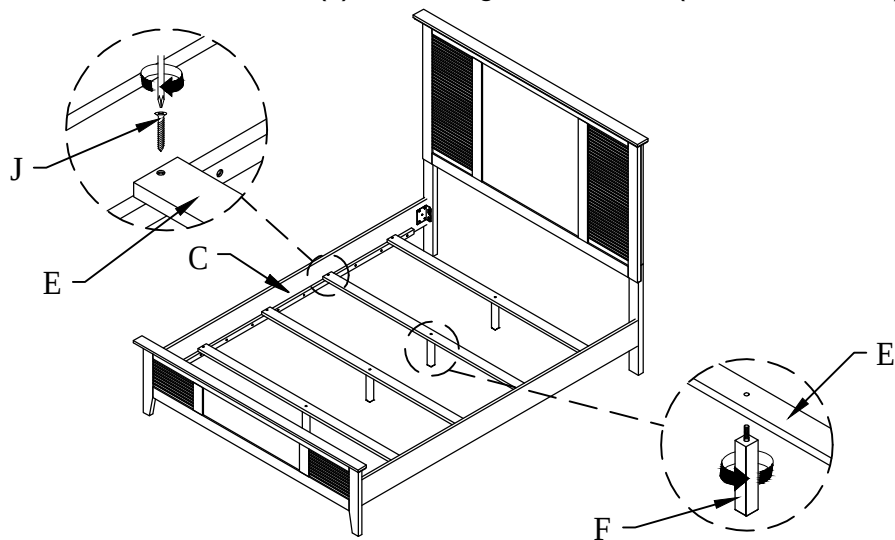

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surface with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.