


⚠ Please note: Items cannot be returned once assembled.

Installation & Assembly

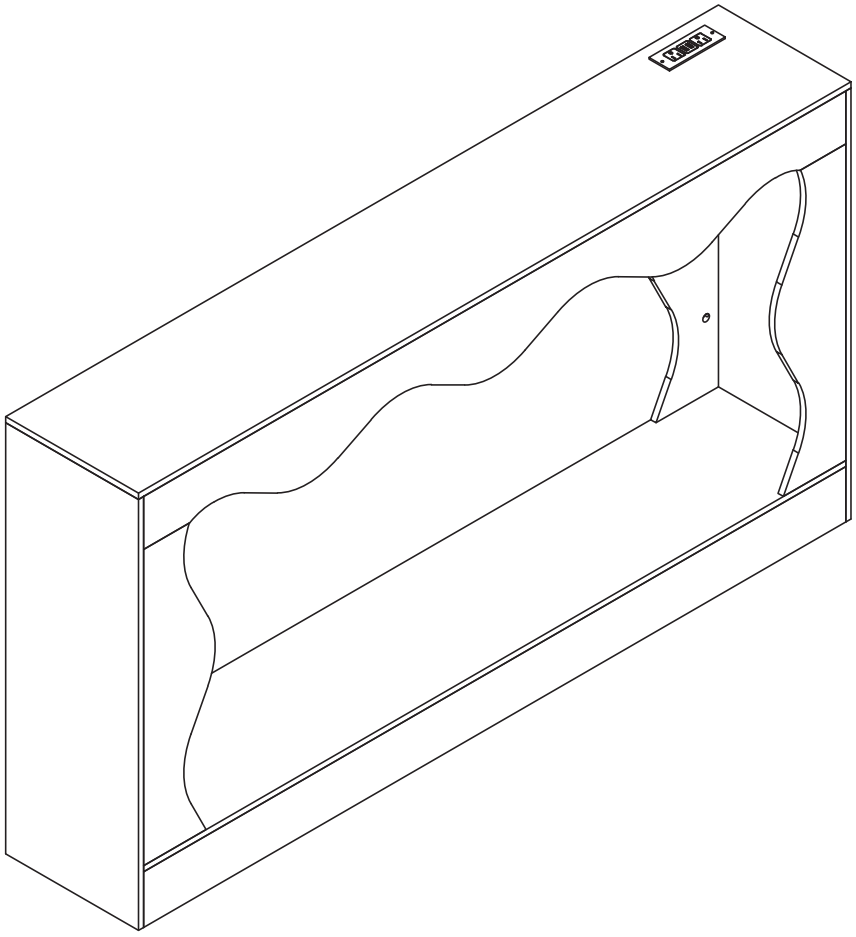


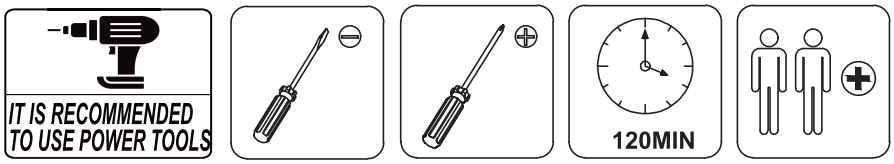


***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

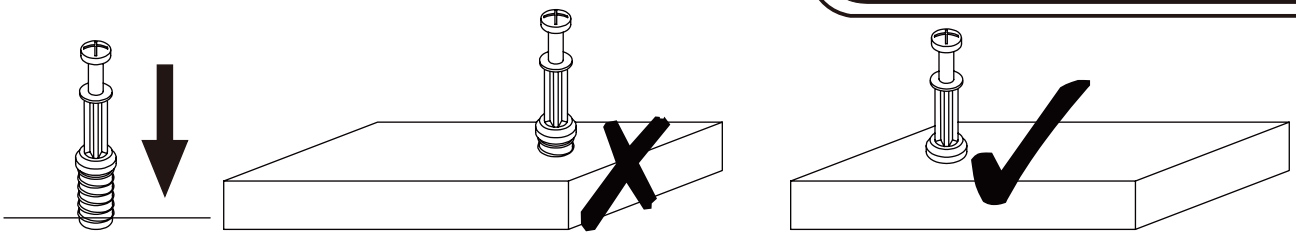


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel.Do not overtighten or undertighten.

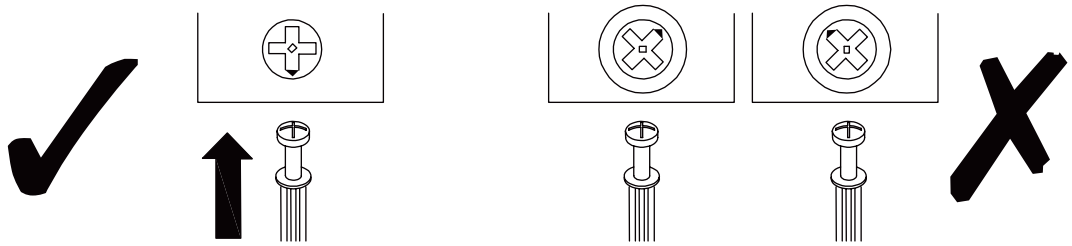











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

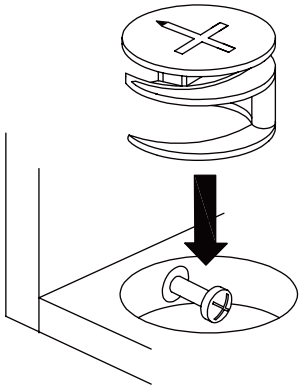


EN_ Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

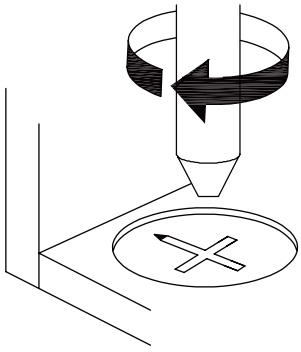


EN_ Turn cam lock clockwise to tighten.

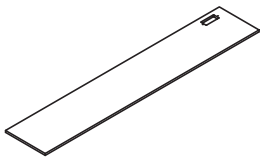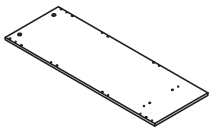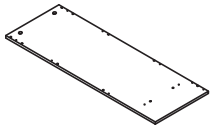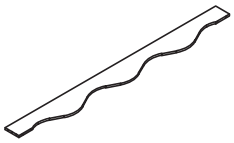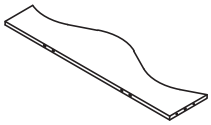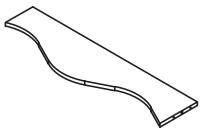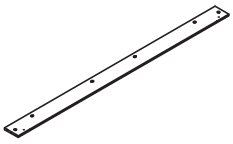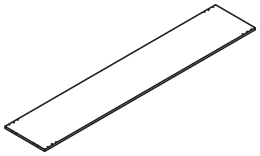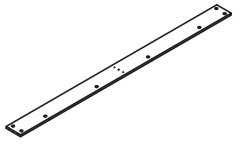NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x1	
5		x2	
6		x2	
7		x1	
8		x1	
9		x1	
10		x1	


NO.	PARTS	QTY	SPARE
	 Hardware Kit	x1	

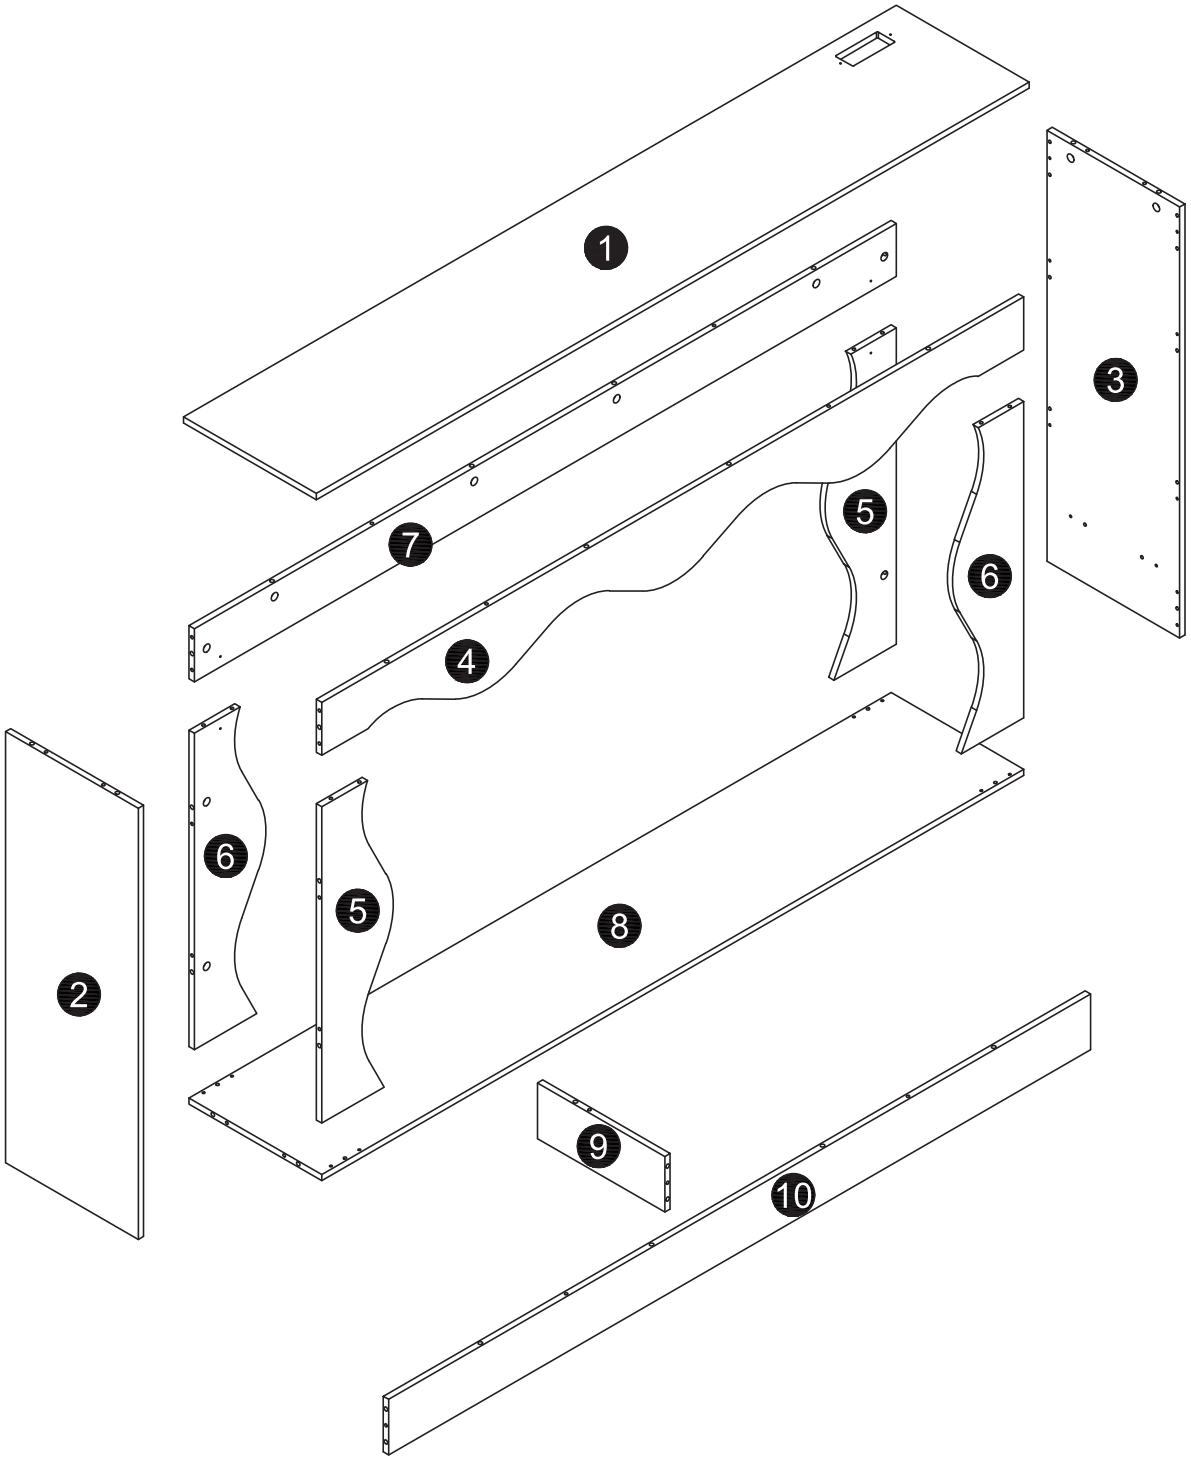

1
2
3
4
5
6
7
8
9
10


HARDWARE

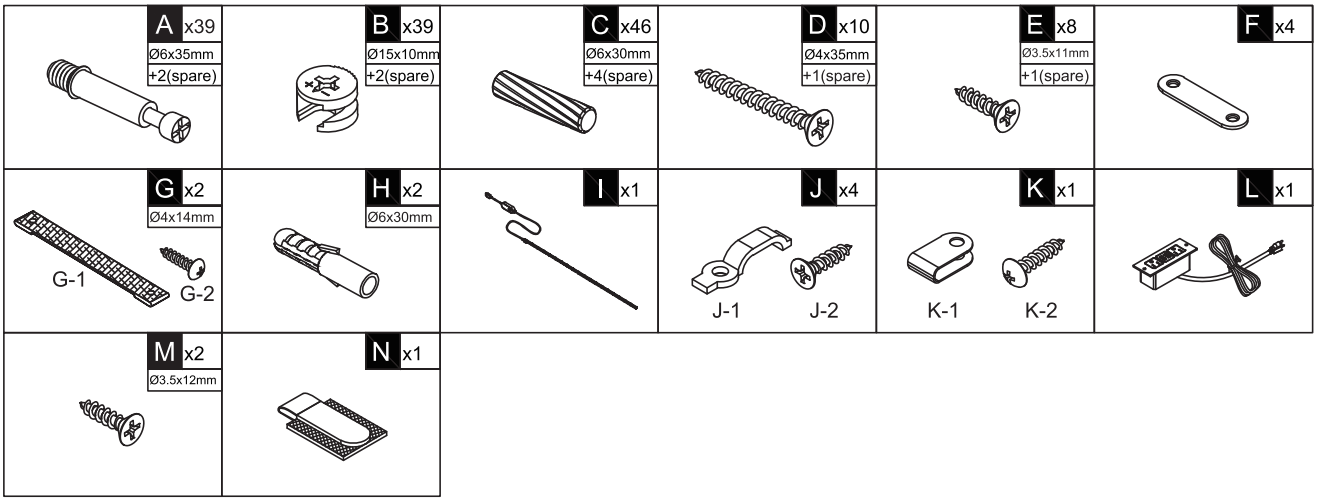

A x39
Ø6x35mm
+2(spare)
B x39
Ø15x10mm
+2(spare)
C x46
Ø6x30mm
+4(spare)
D x10
Ø4x35mm
+1(spare)
E x8
Ø3.5x11mm
+1(spare)
F x4
G x2
Ø4x14mm
G-1
G-2
H x2
Ø6x30mm
I x1
J x4
J-1
J-2
K x1
K-1
K-2
L x1
M x2
Ø3.5x12mm
N x1


01

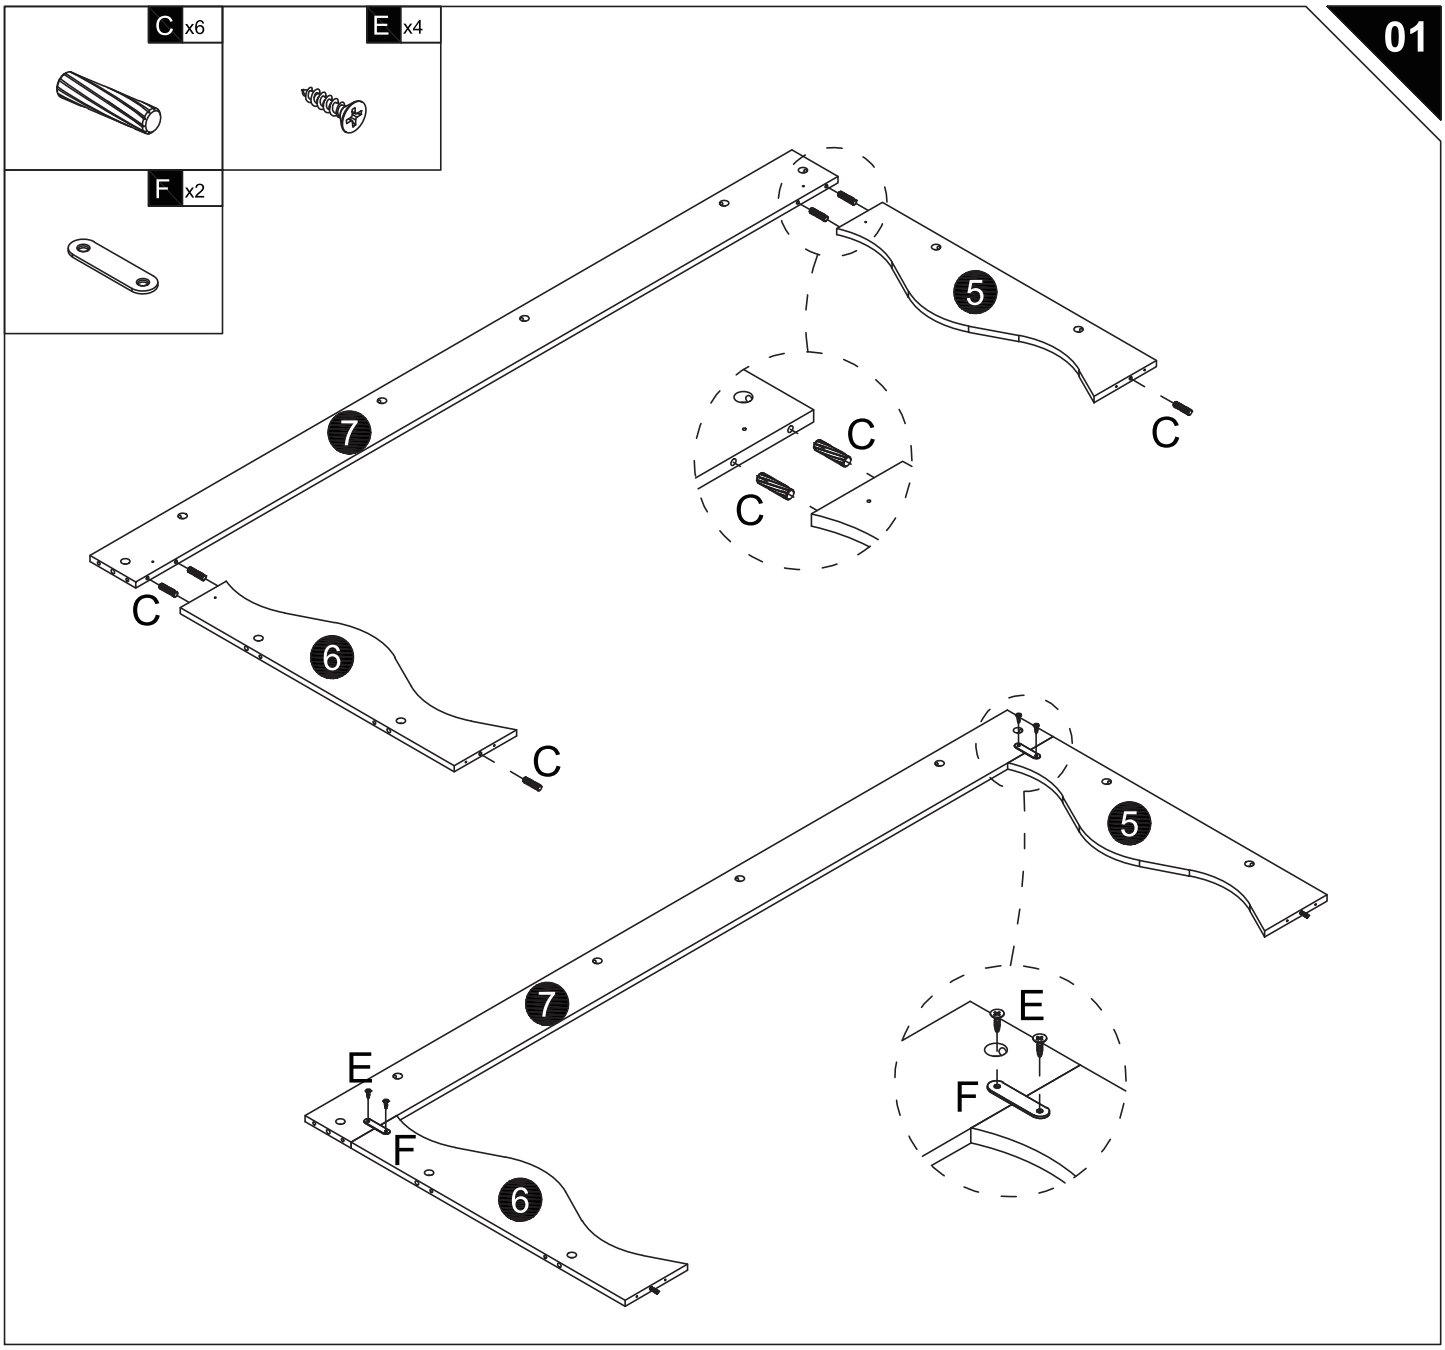
C x6
E x4
F x2
5
7
C
C
C
6
C
5
7
E
E
F
F
6

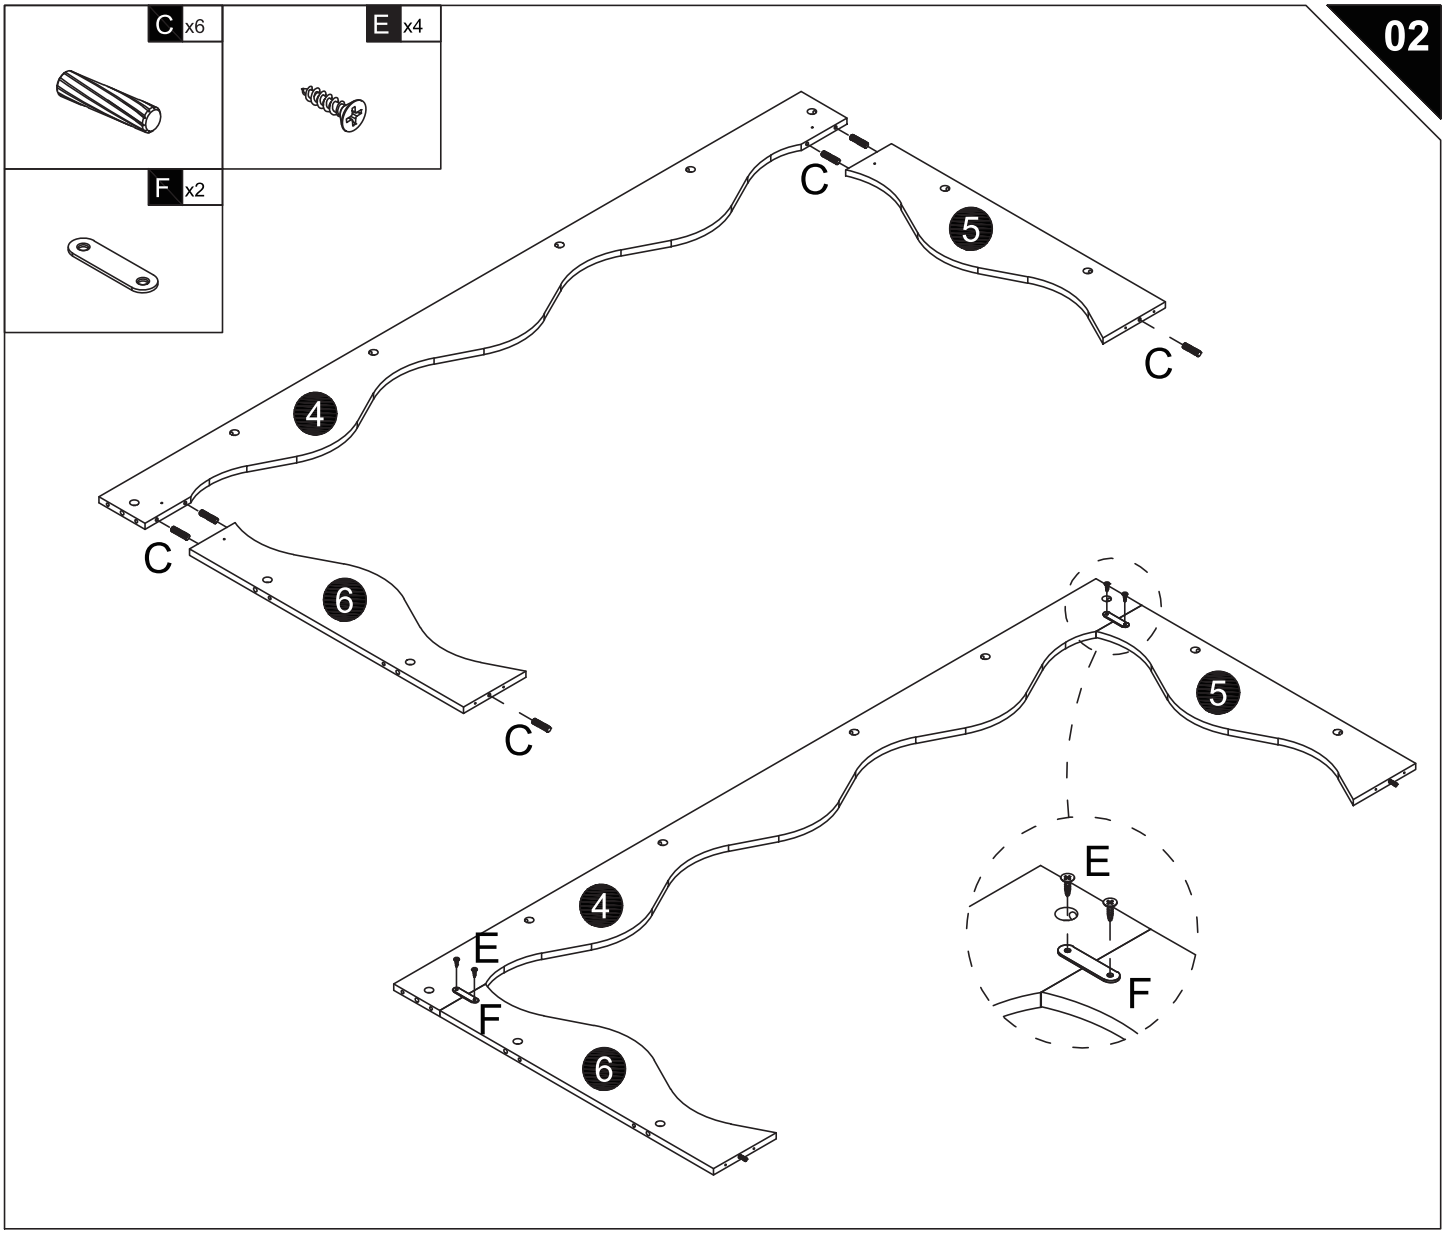

02
C x6
E x4
F x2
C
5
C
4
C
6
C
5
E
4
E
F
F
6

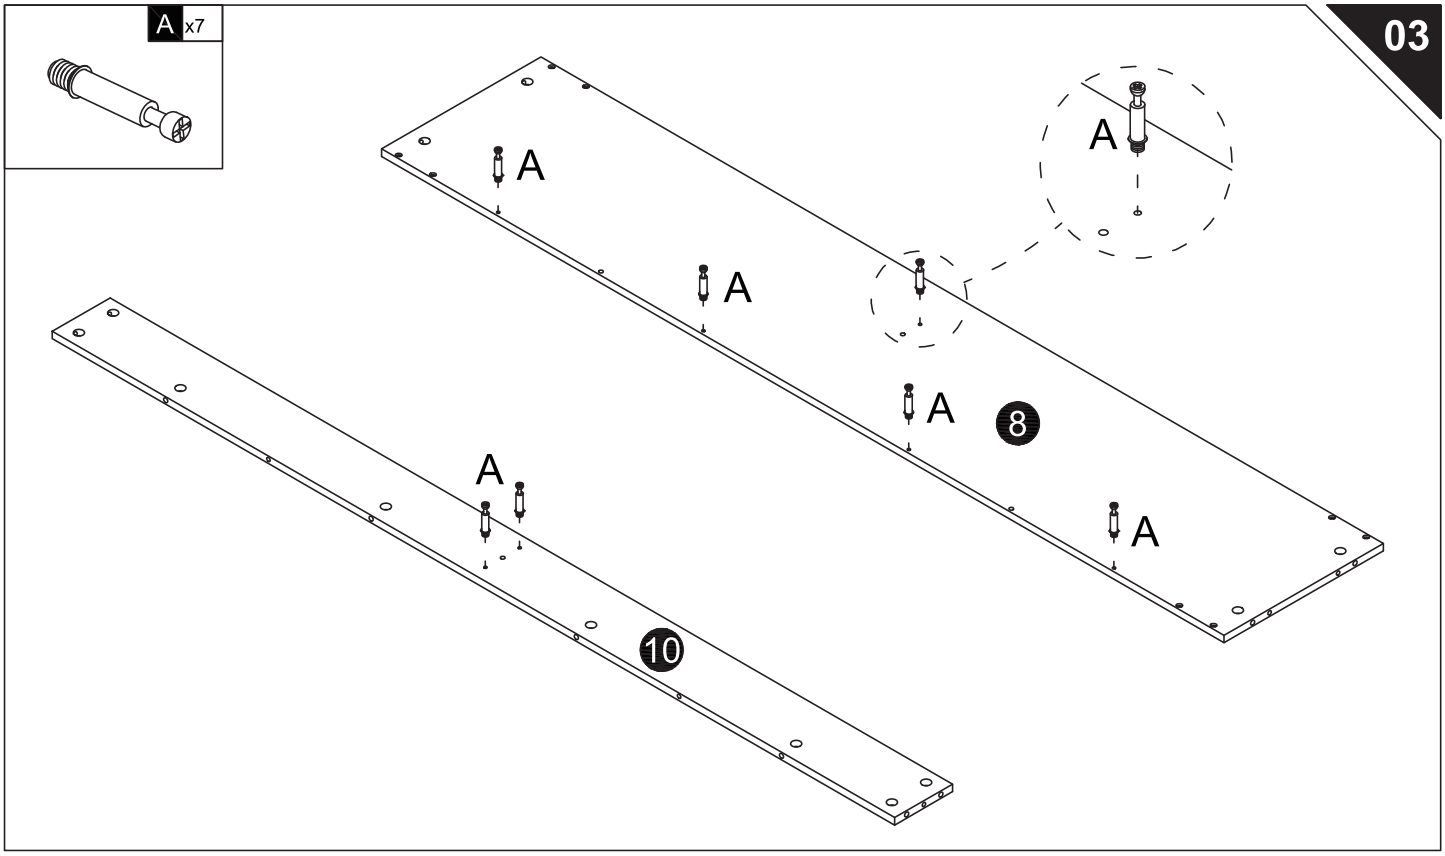

03
A x7
A
A
A
8
A
A
A
10

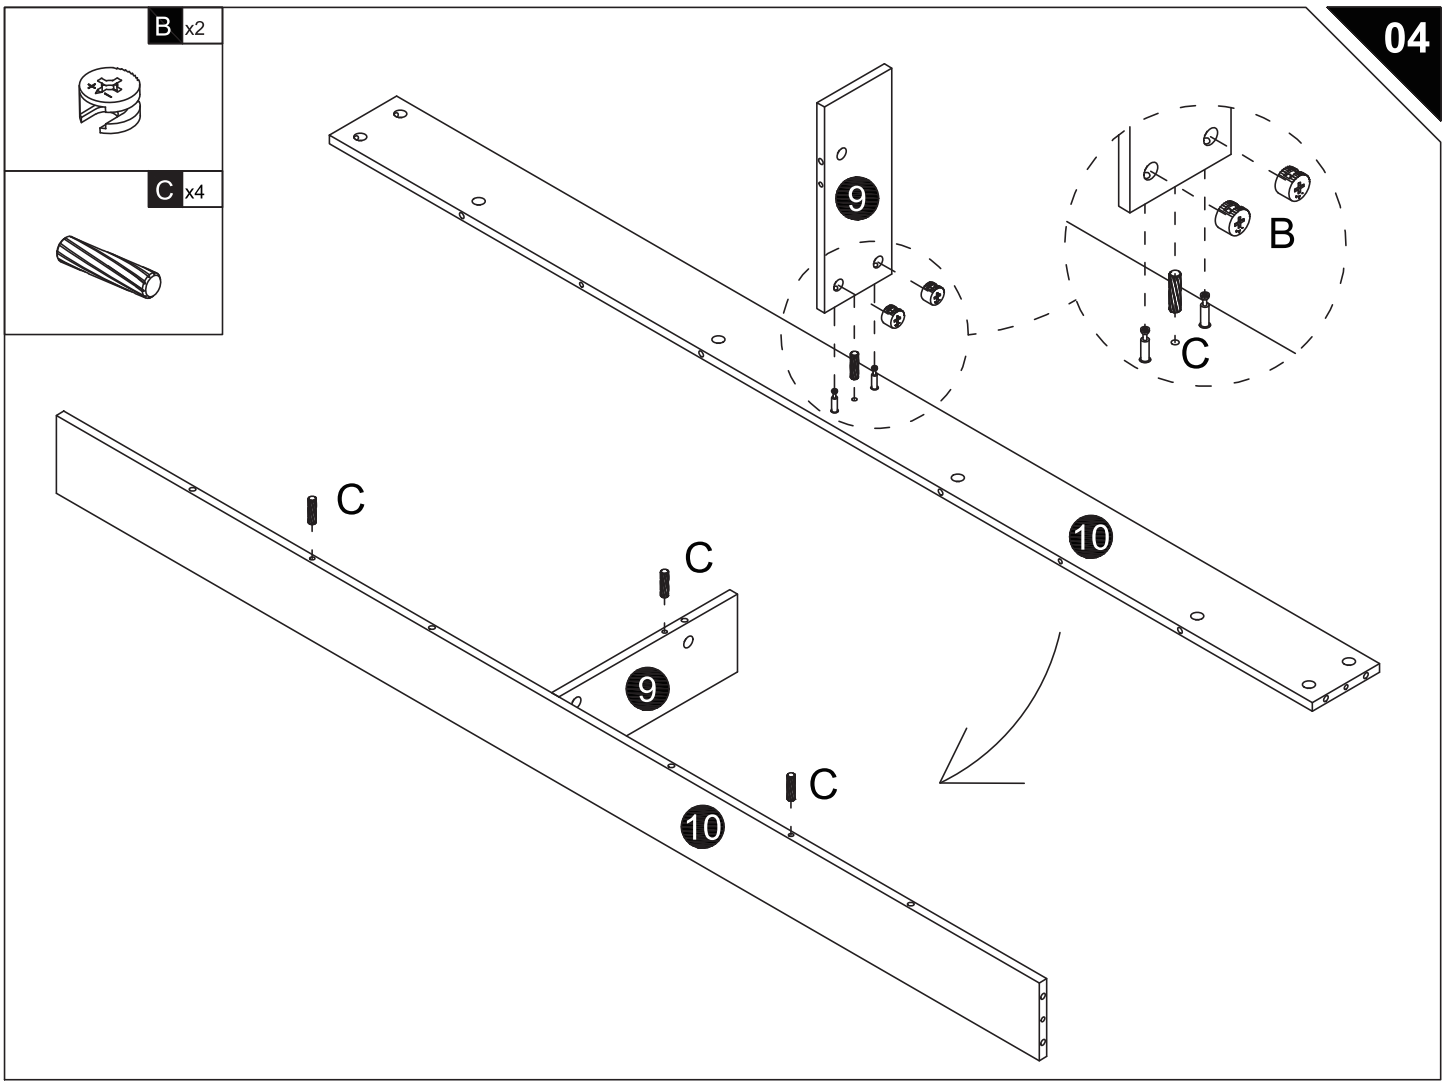
04
B x2
C x4
9
B
C
10
C
C
9
C
10

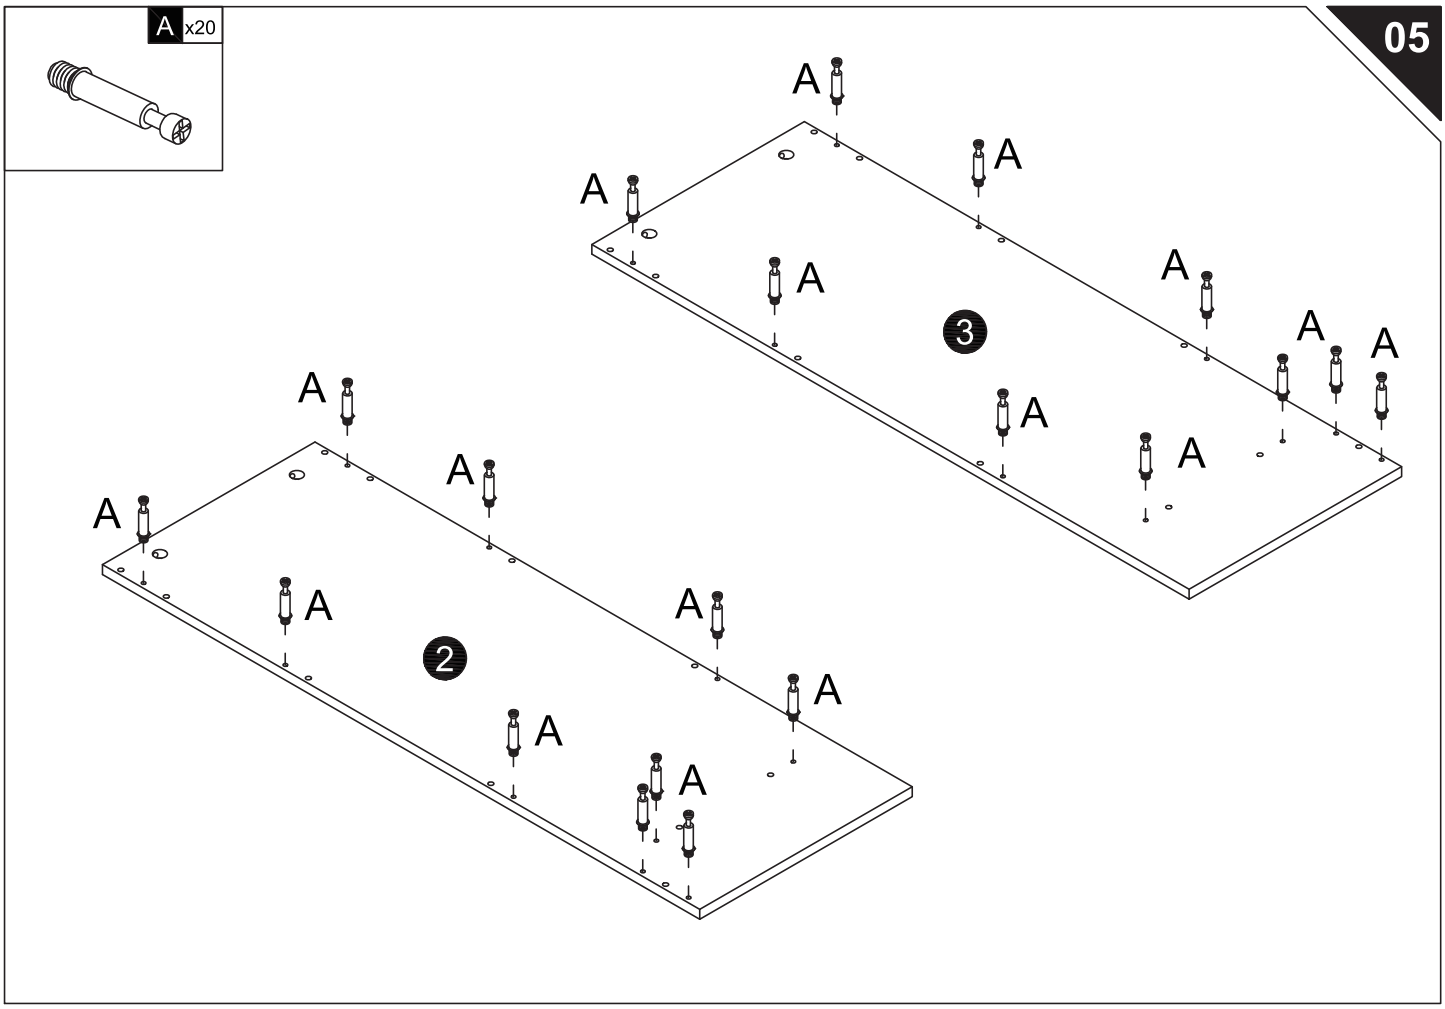

05
A x20
A
A
A
A
A
A
3
A
A
A
A
A
A
A
2
A
A
A
A
A

D x4




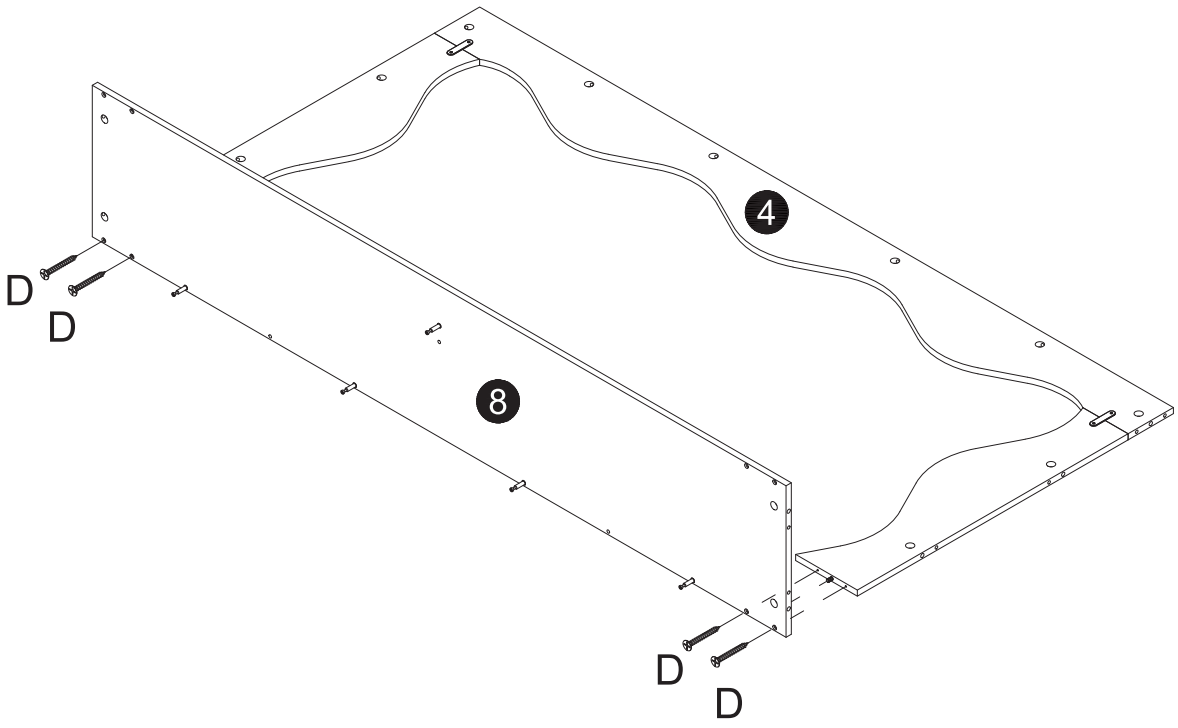


D x4



07

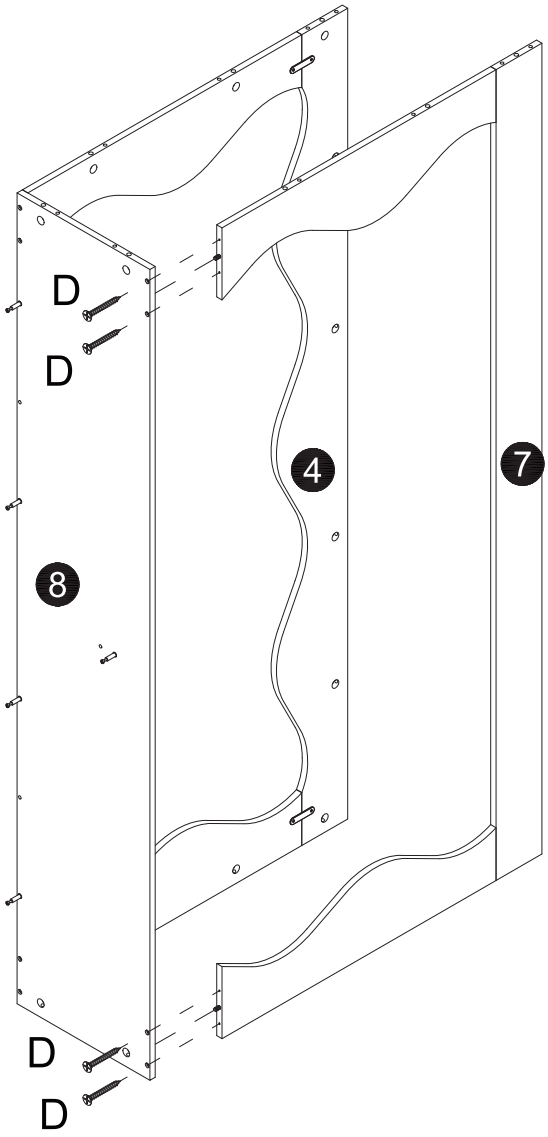


handle with care!

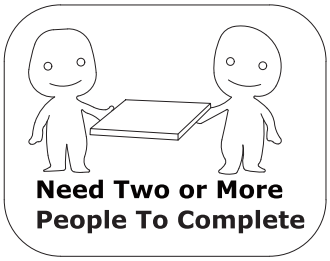

B x5




08

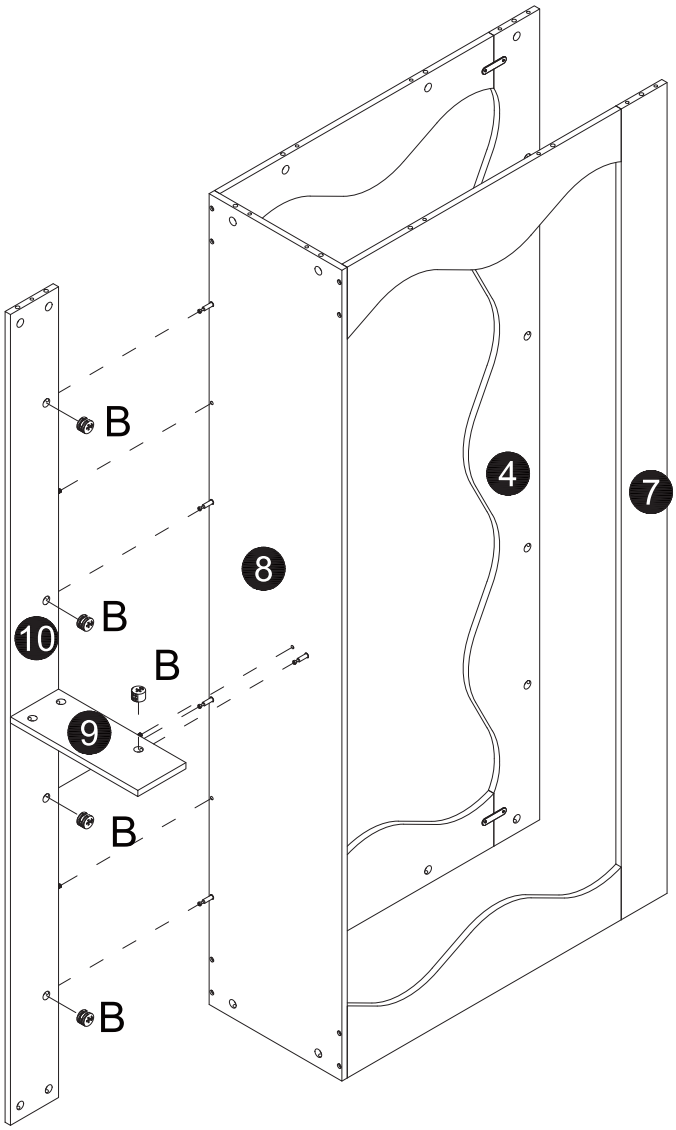

C x11




09

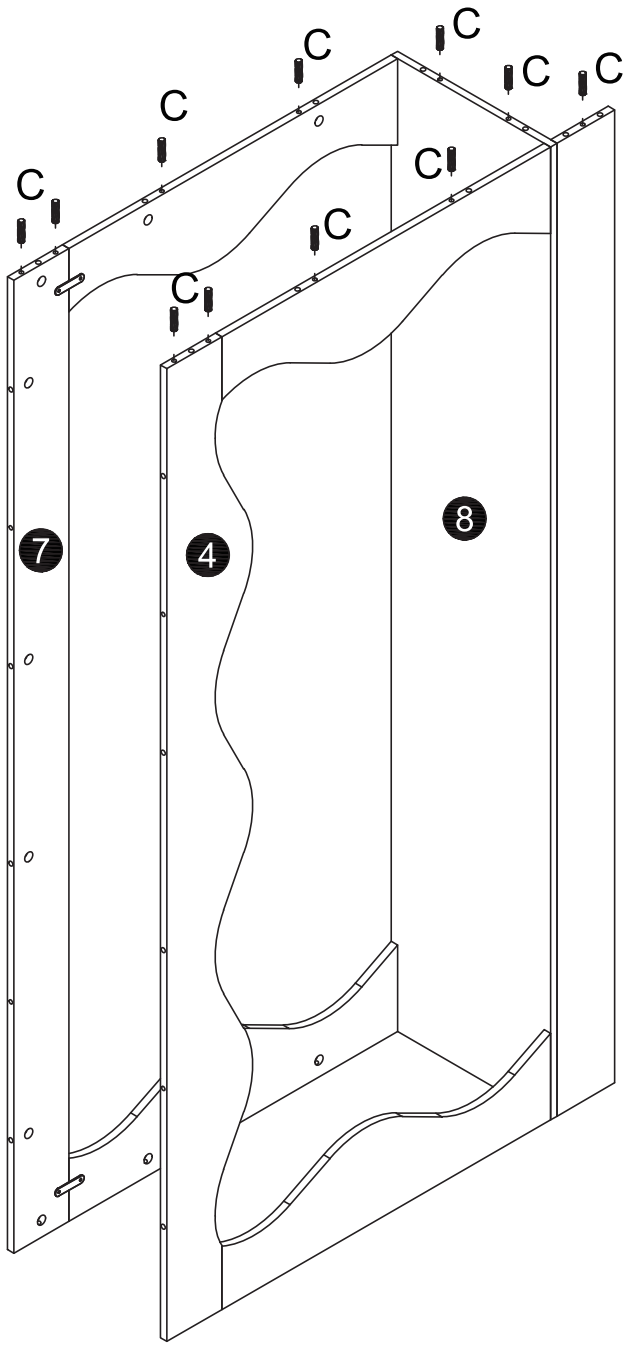



B x10




10

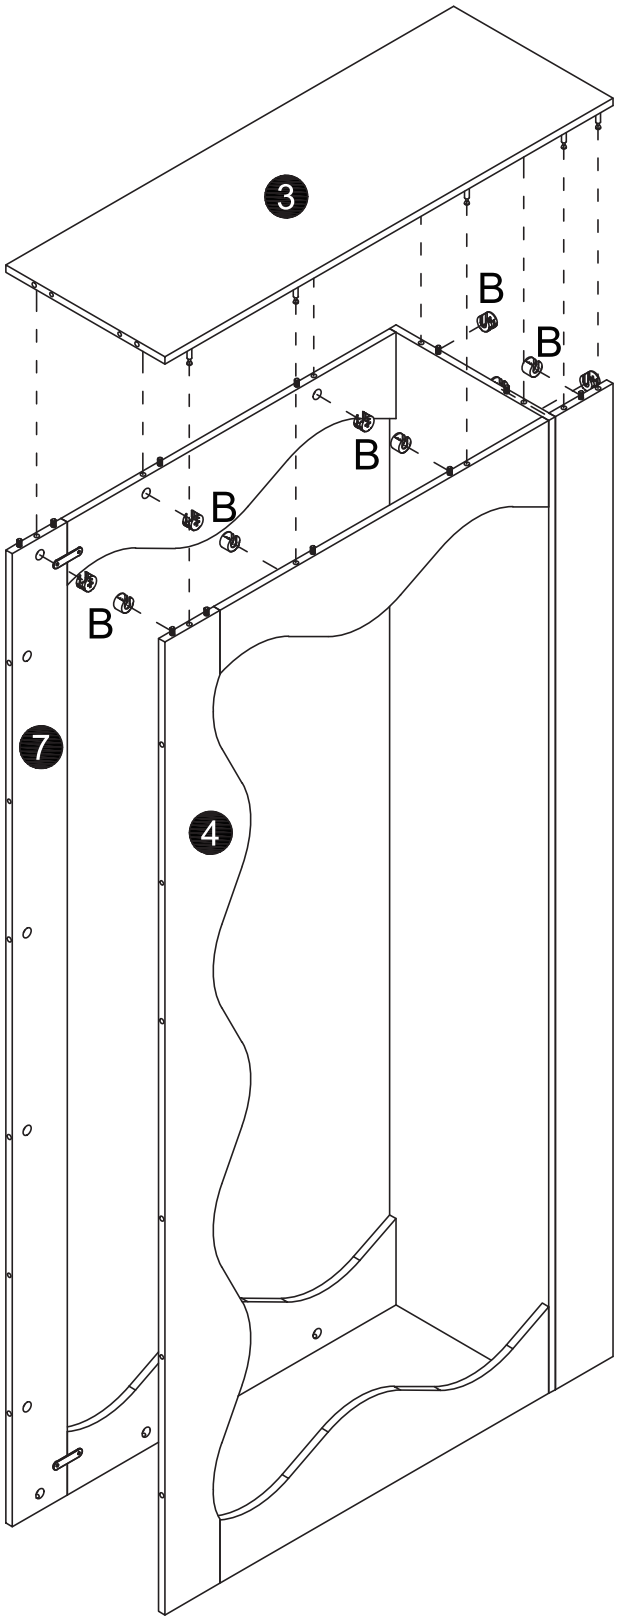

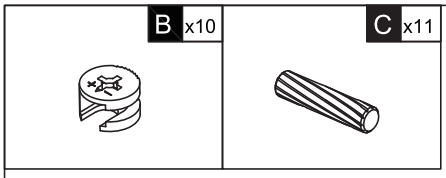


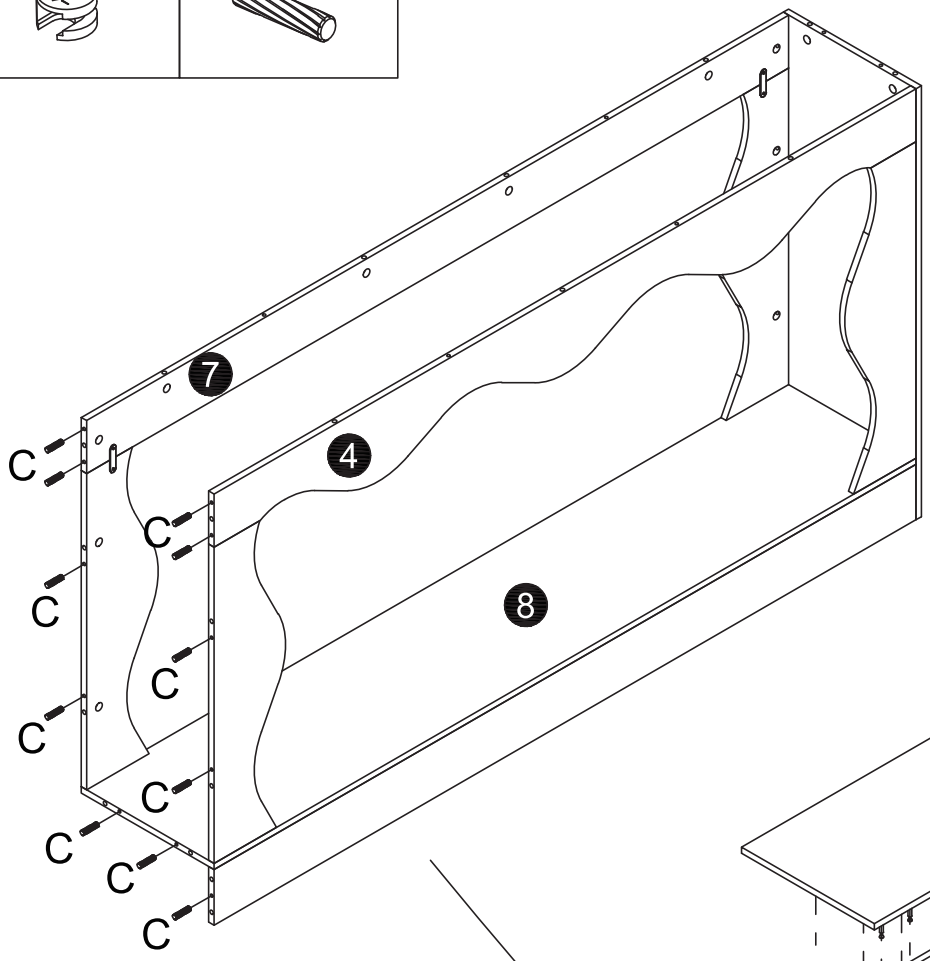


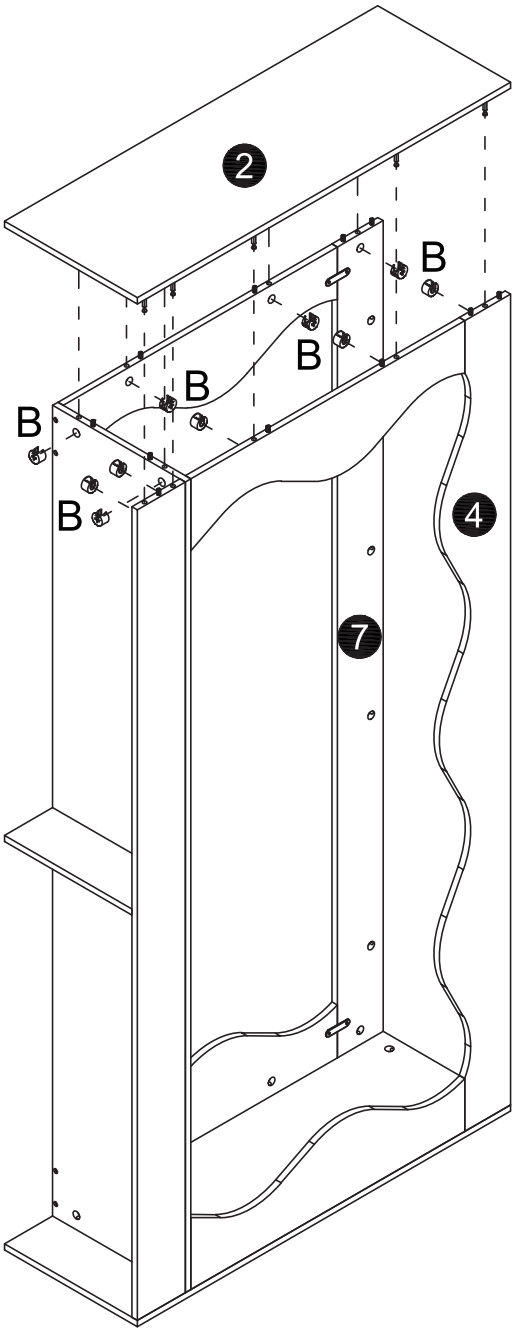



⚠ handle with care!

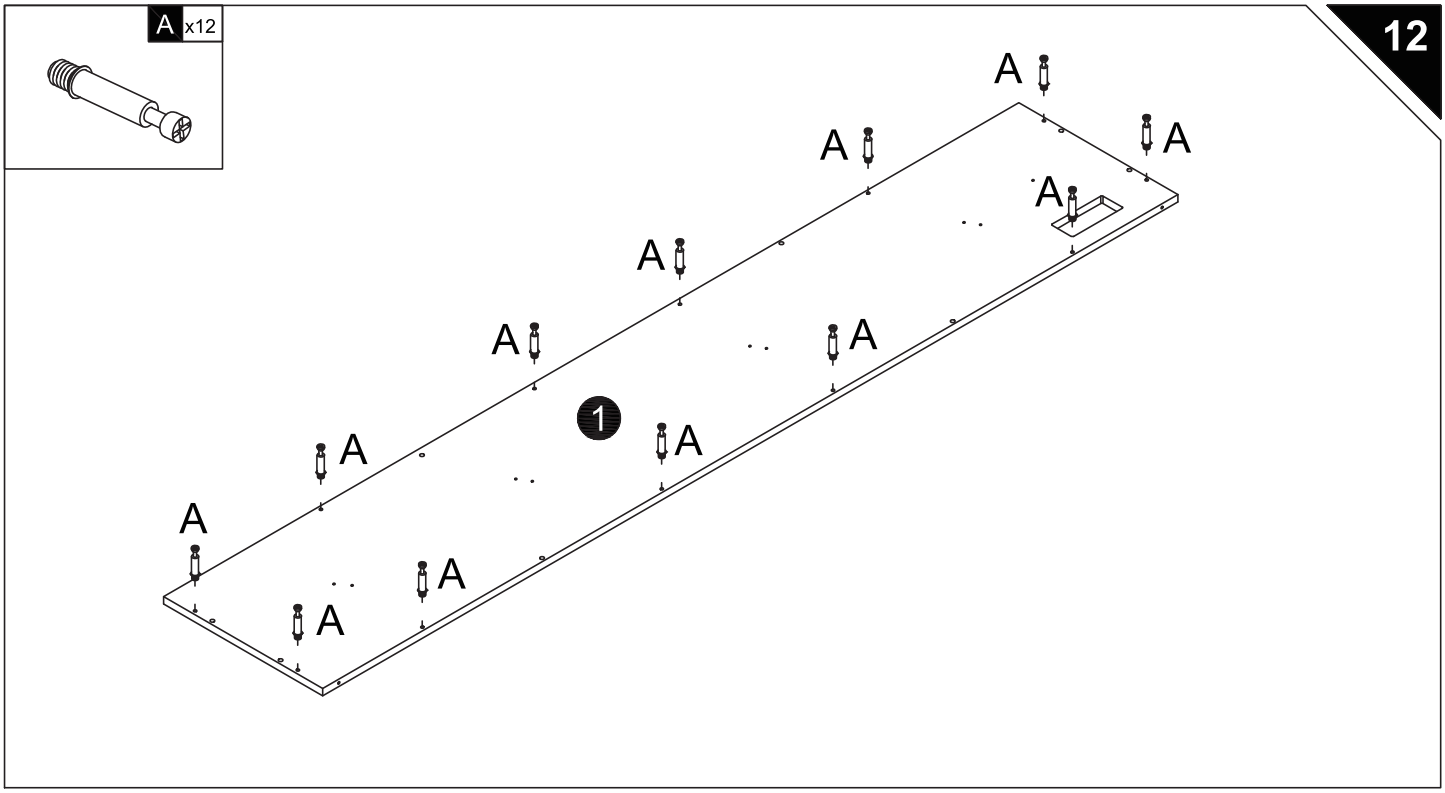

A x12
A
A
A
A
A
A
A
A
A
A
A
1

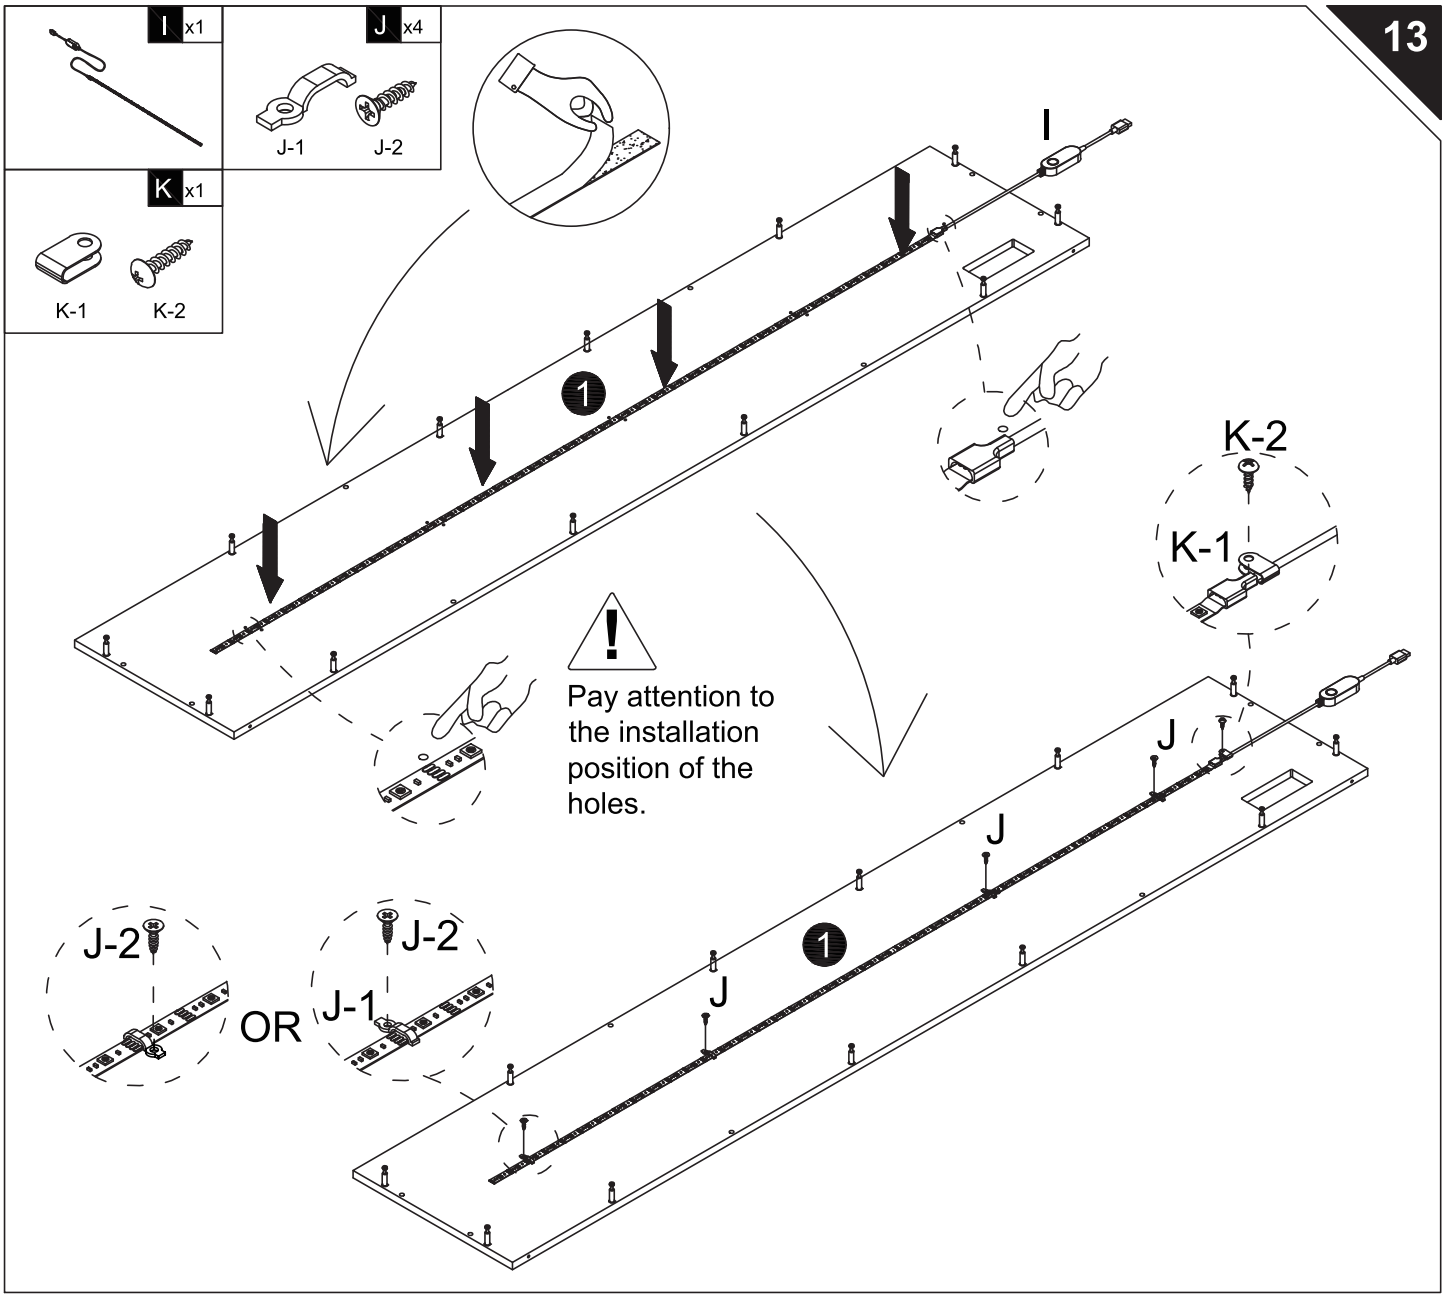
I x1
J x4
J-1
J-2
K x1
K-1
K-2
I
1
K-2
K-1
Pay attention to the installation position of the holes.
J
J
J
1
J-2
OR
J-2
J-1

14

B x12

C x8

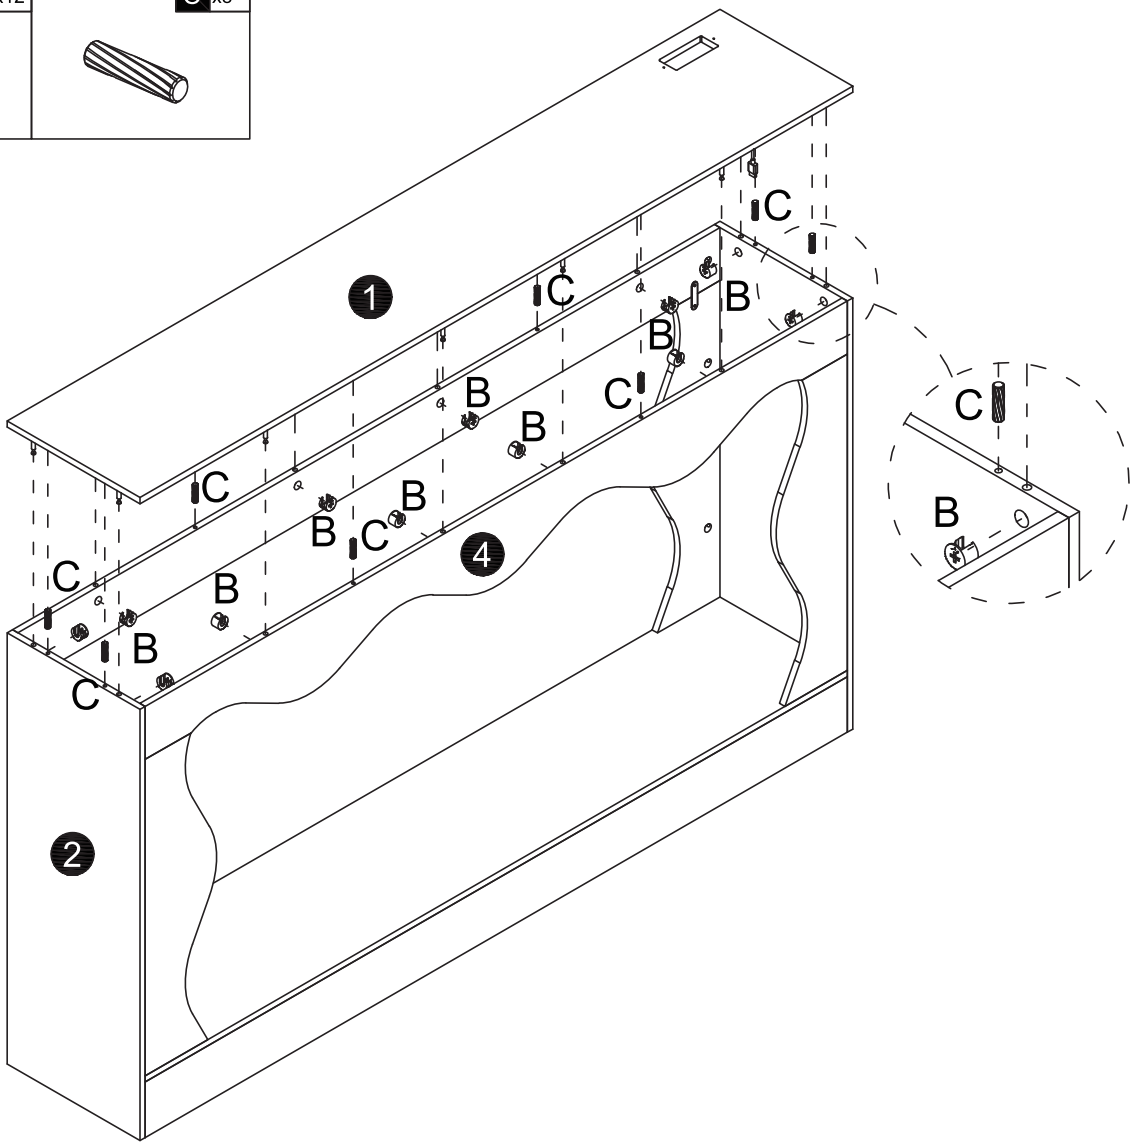


15


L x1

M x2


N x1

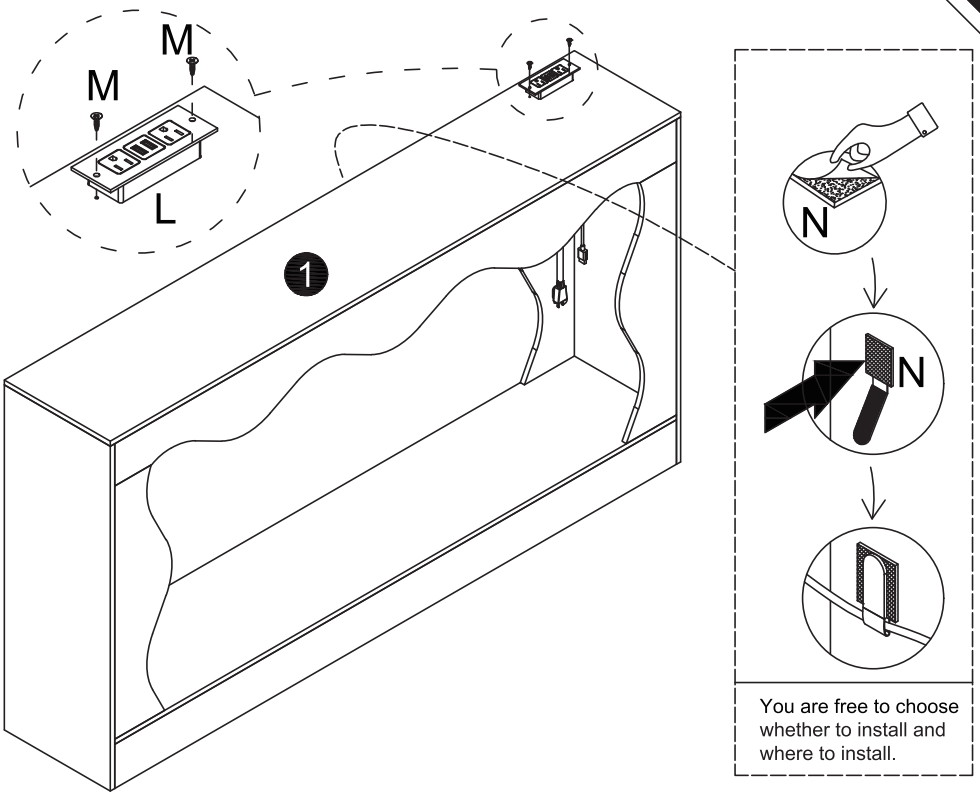


You are free to choose whether to install and where to install.

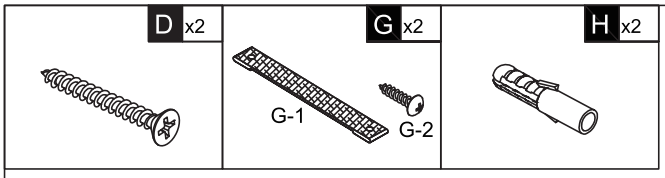


Done

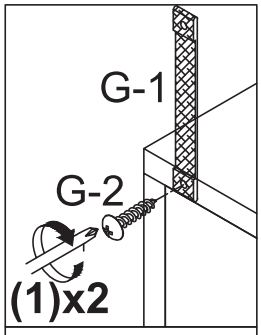


First fix the anti-rewind screw in the reserved hole of the product.

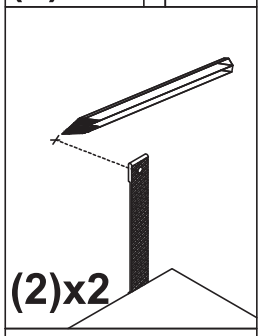


then, use a ruler to measure the approximate height of the product on the wall, and then mark it witha pen.

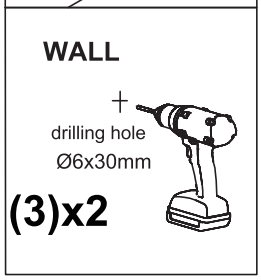

Then use a tape drill to make holes in the wall that are suitable for the product screws.

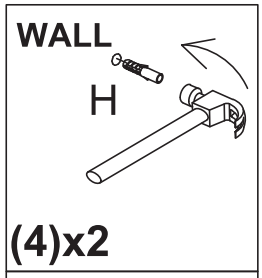

Then,put the expansion bolt into the hole

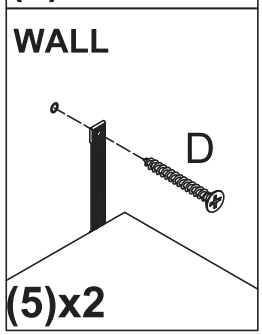

Finally,pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

