


901#

Corner cabine

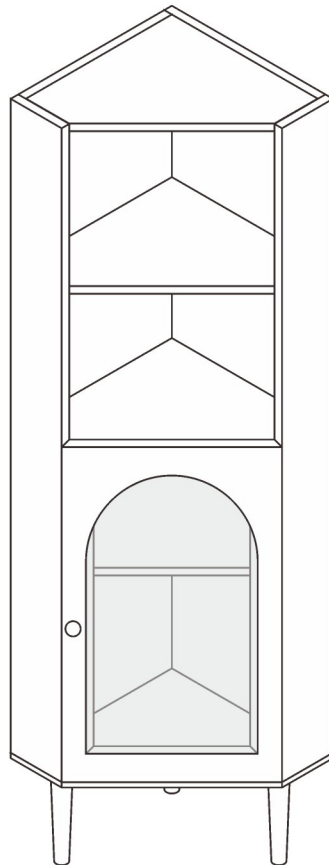

L500*W500*H1800MM



2 Persons



Assembly Guide Video




Cabinet Hinge
Adjustment Video




Drawer Glide
Adjustment Video

Installation Instructions


Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

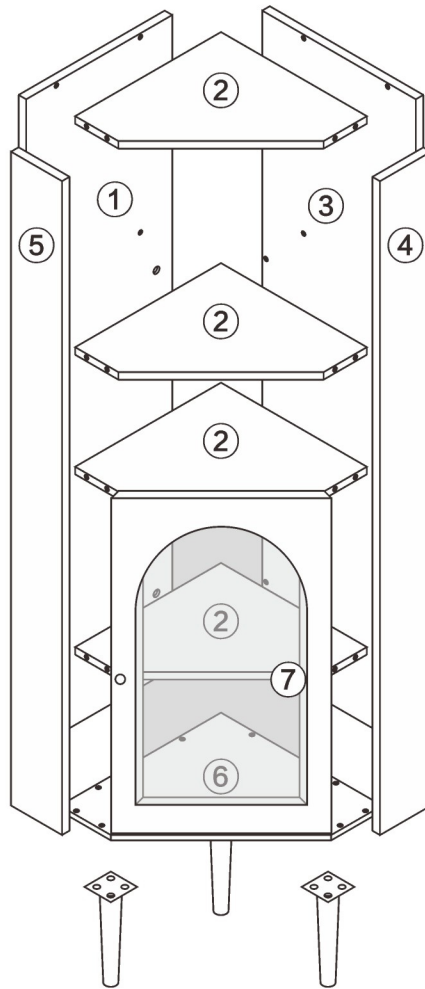

Disassembly and installation of accessories

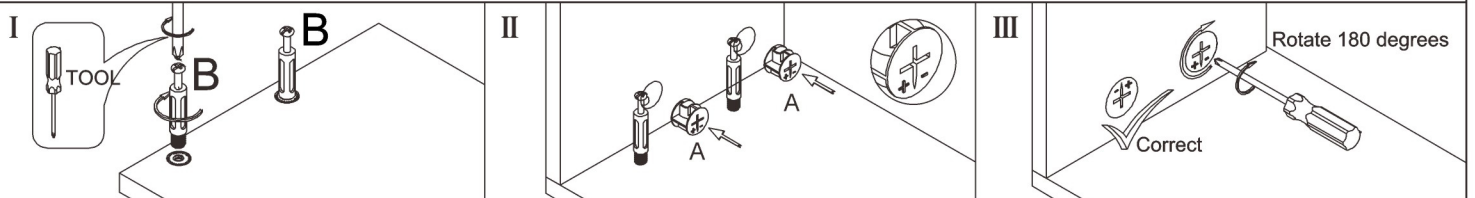


A 52PCS  15*10mm	B 52PCS  6*28mm	C 4PCS  3.5*14mm	D 12PCS  6*12mm	E 8PCS  4*12mm	F 1PCS  4*18mm	G 1PCS  4*18mm	 Tools Recommended
H 2PCS 	I 3PCS 						

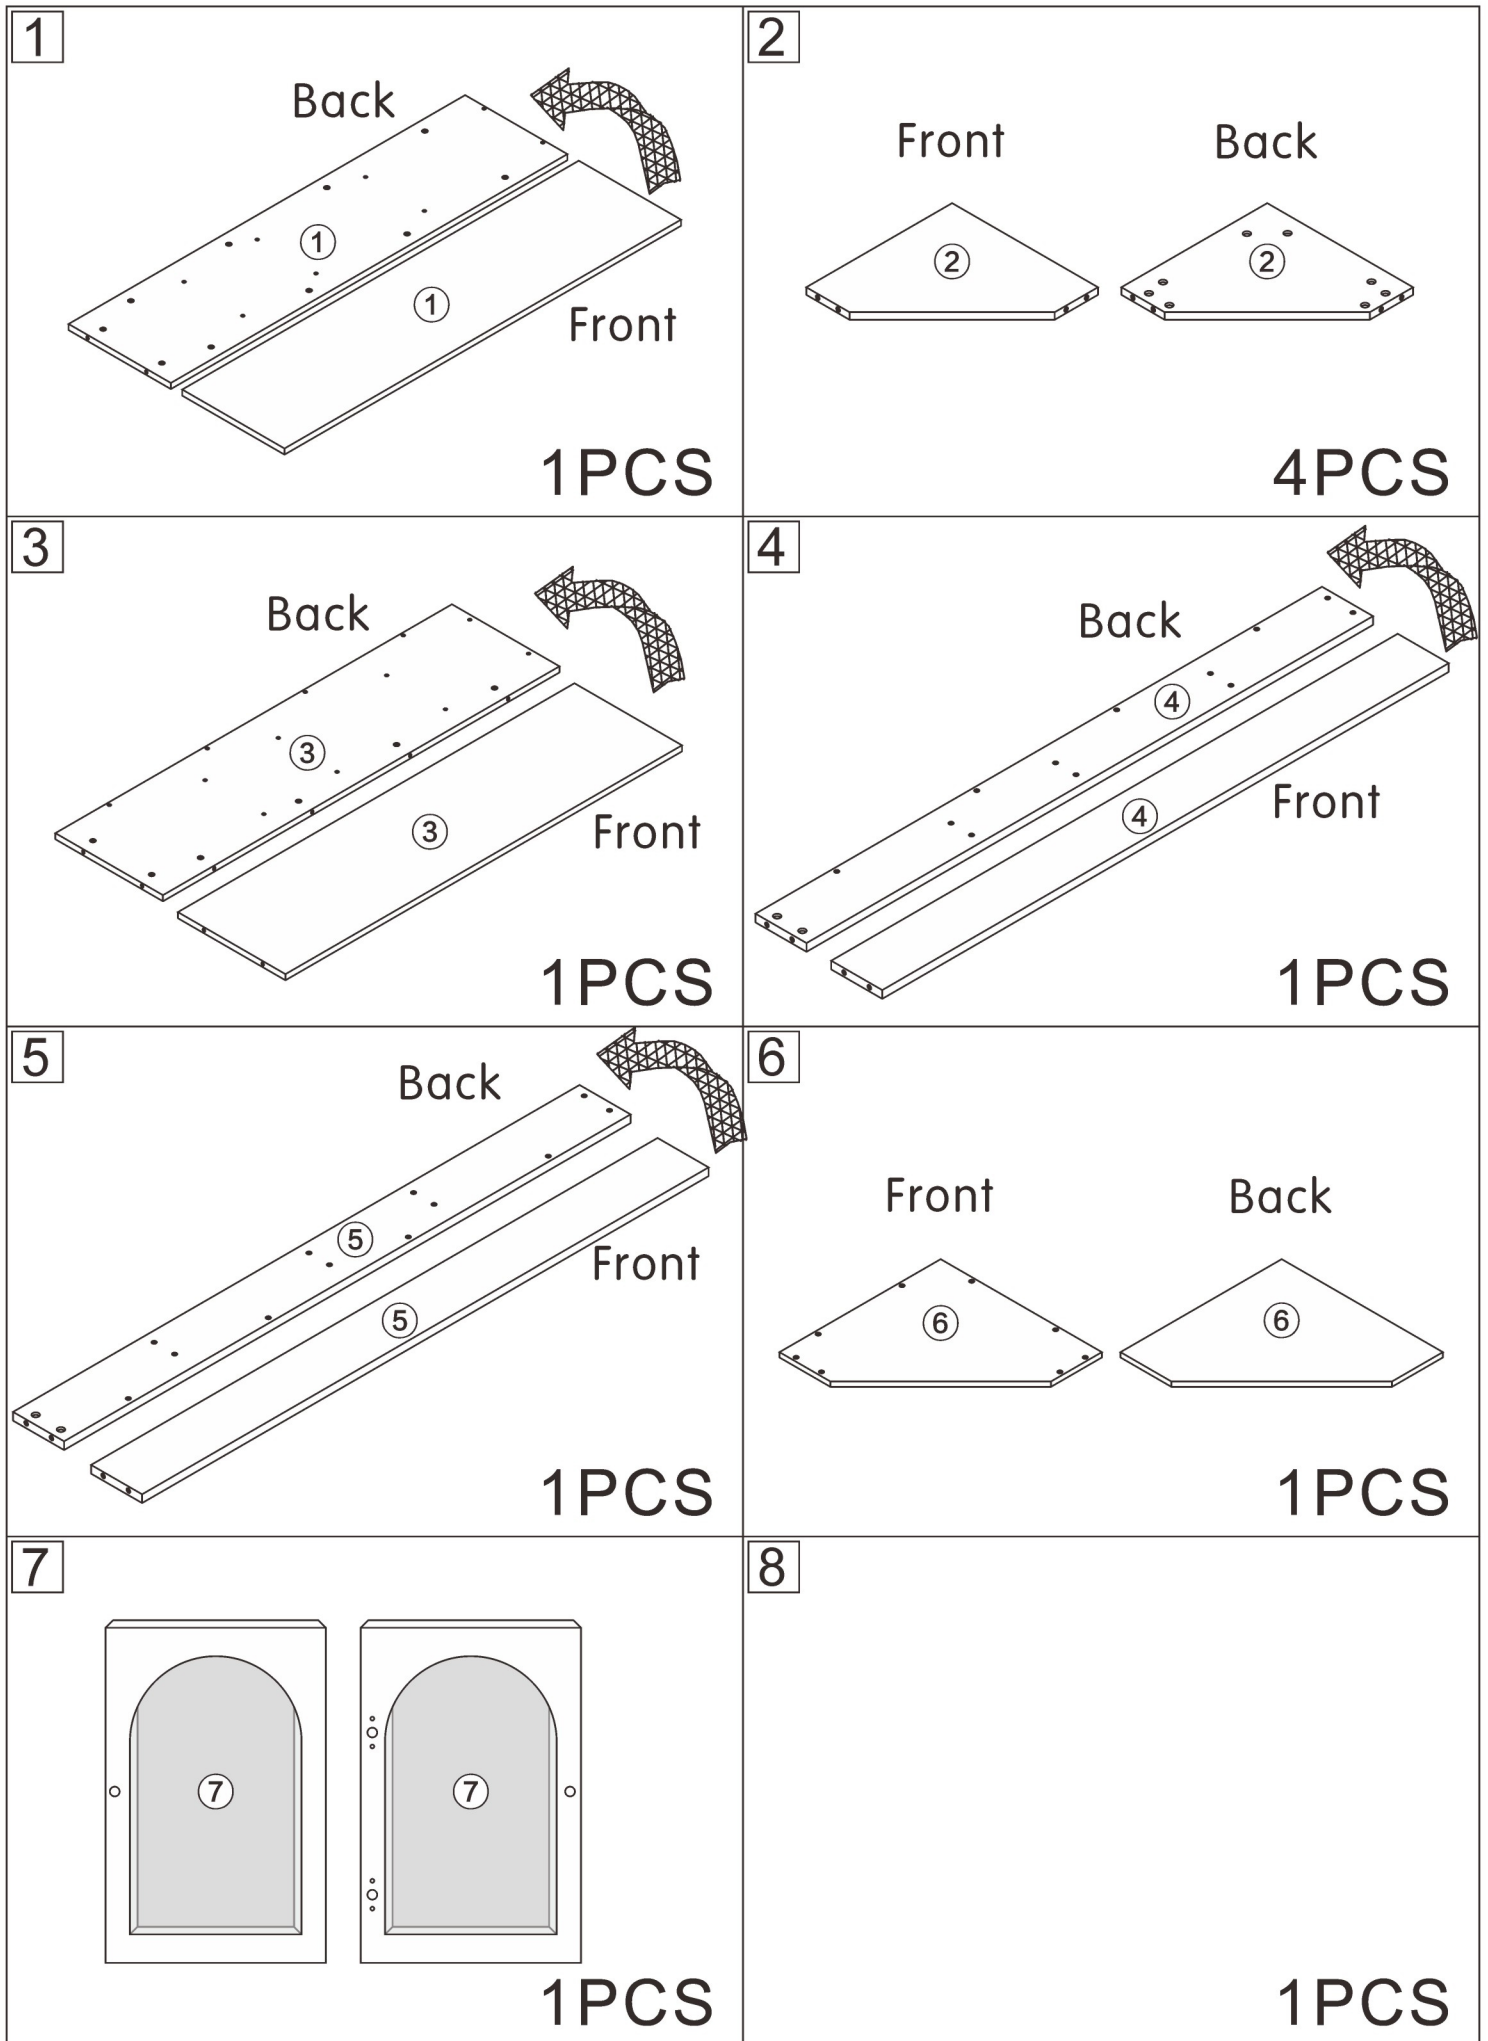


1


Bx8

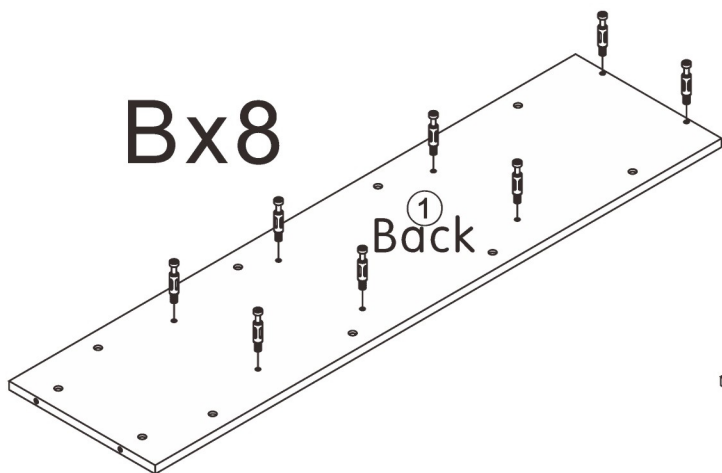


Bx12

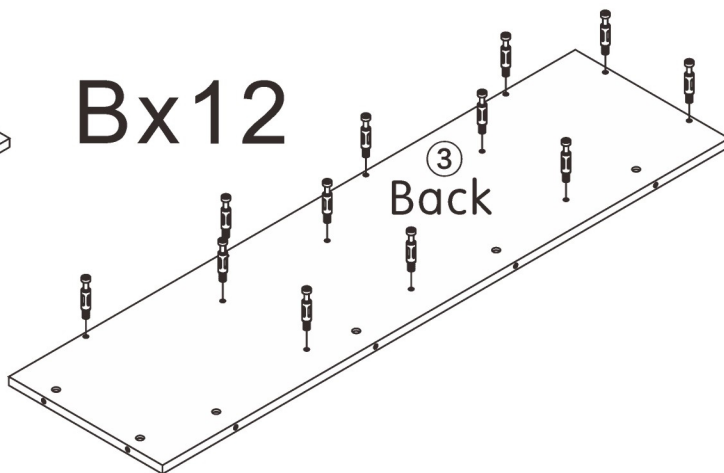


Bx12

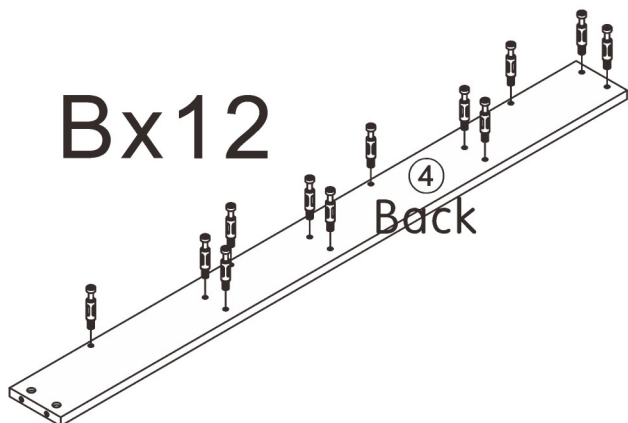

Bx12

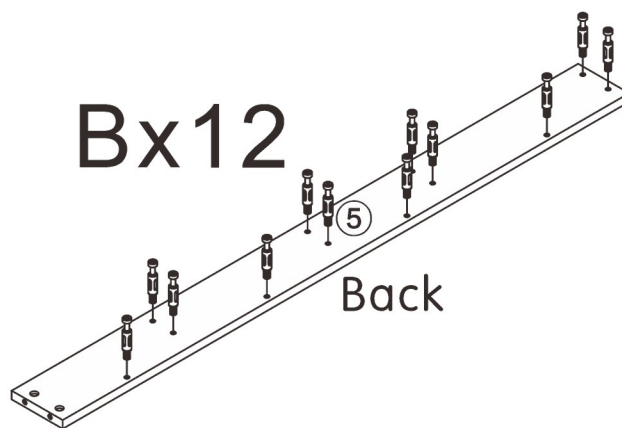

Bx8

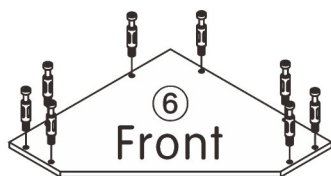


B 52PCS




6*28mm

2

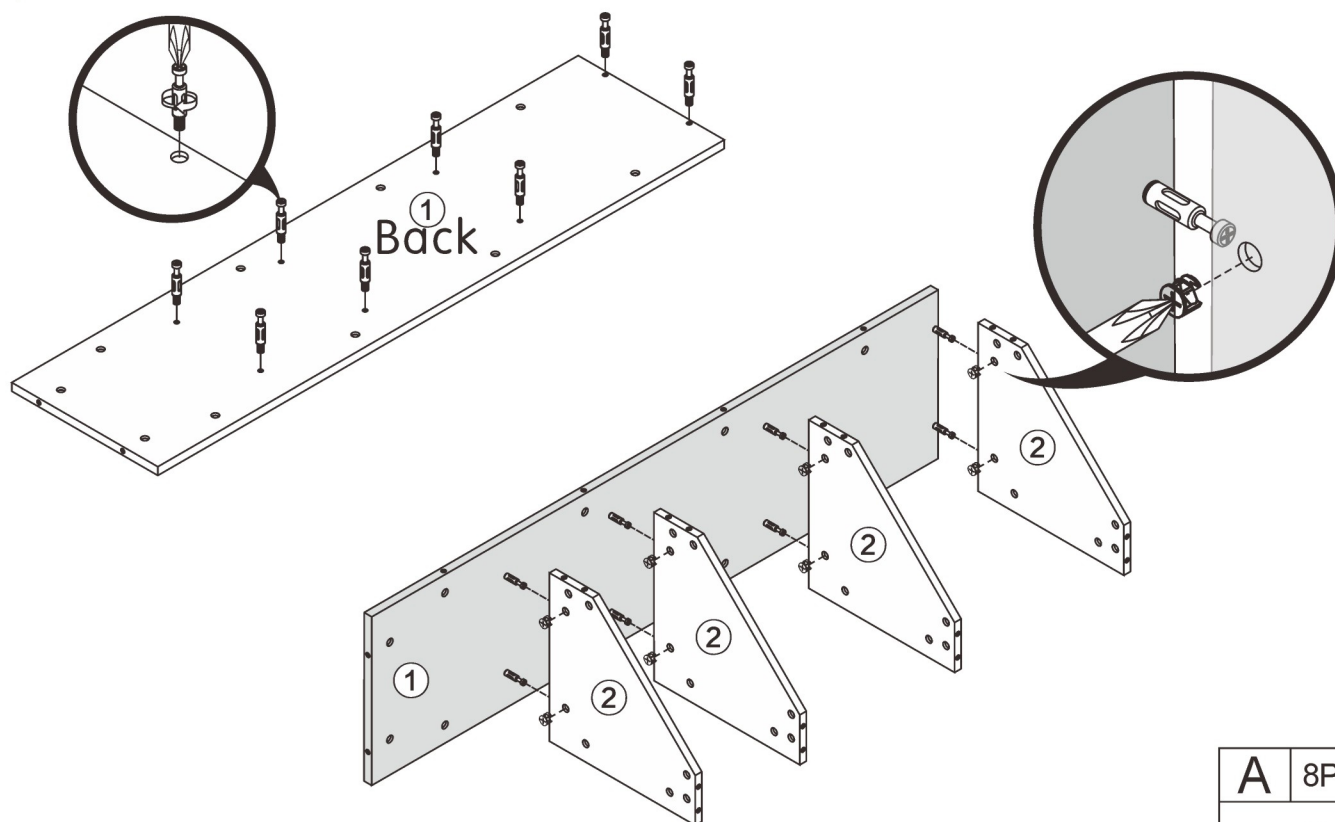


A	8PCS
	
15*10mm	

3

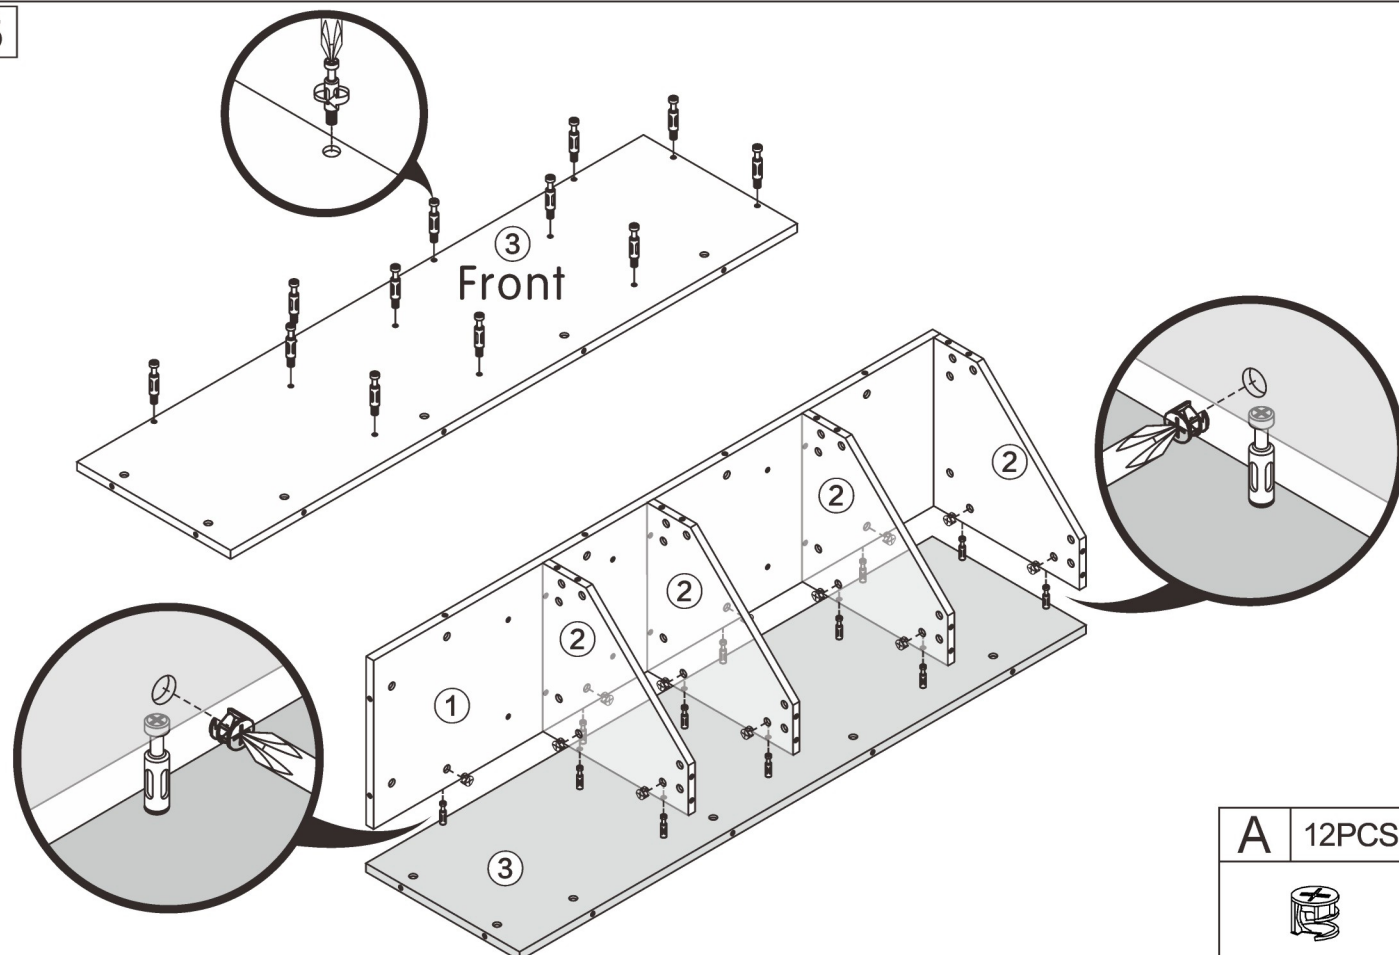


A	12PCS
	
15*10mm	


4

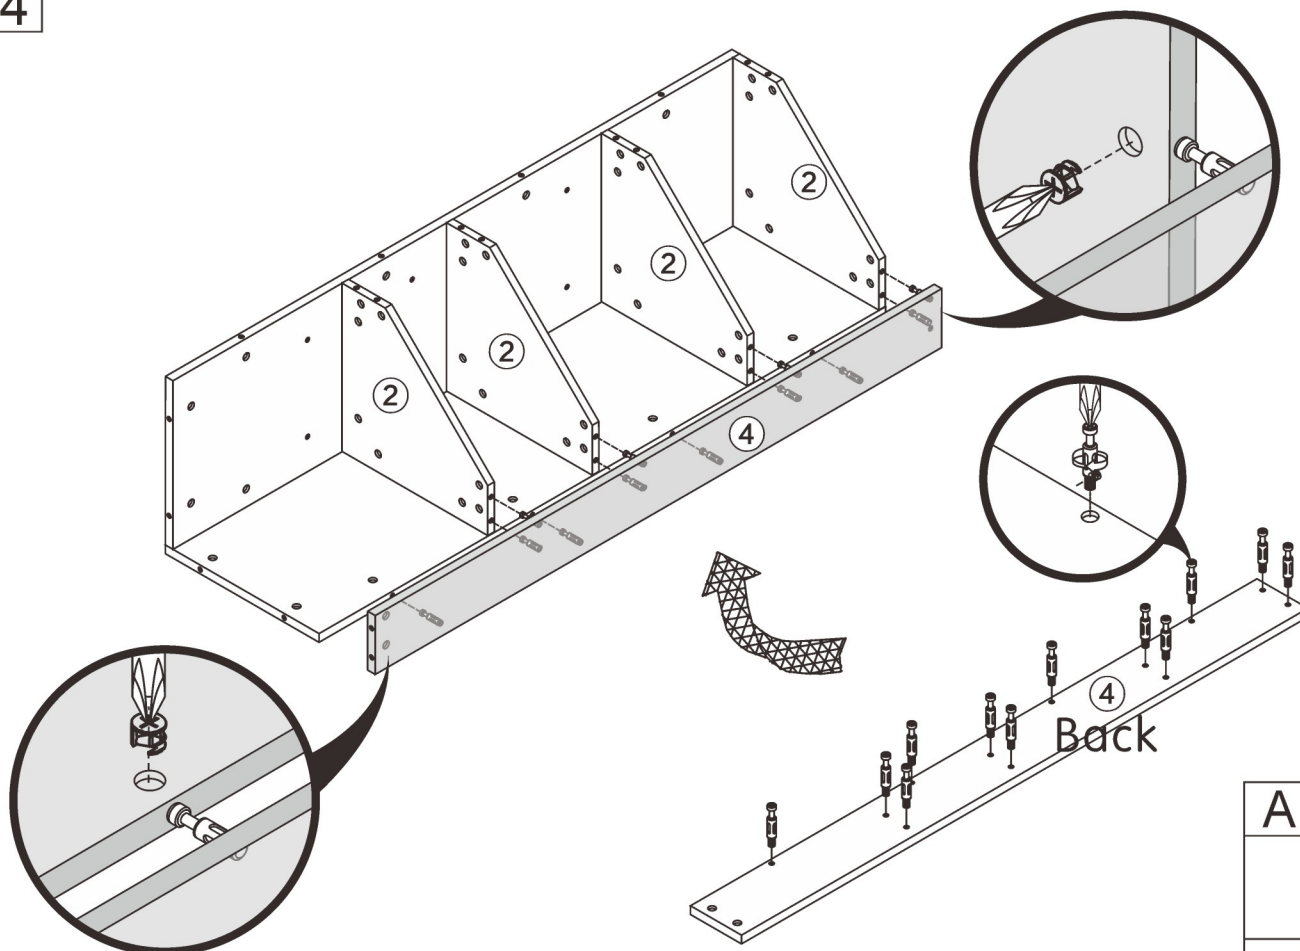

5

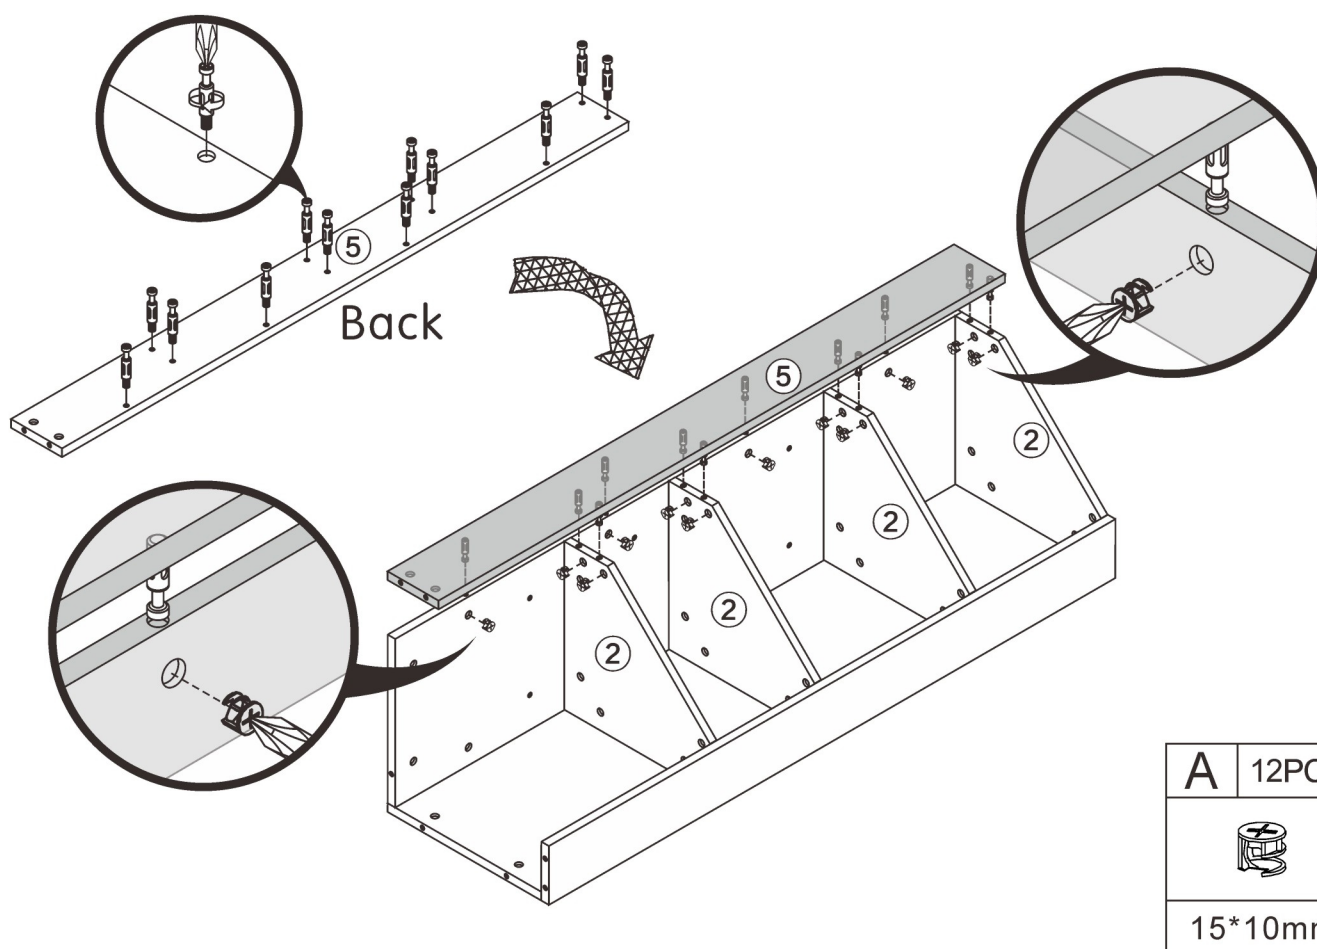



6

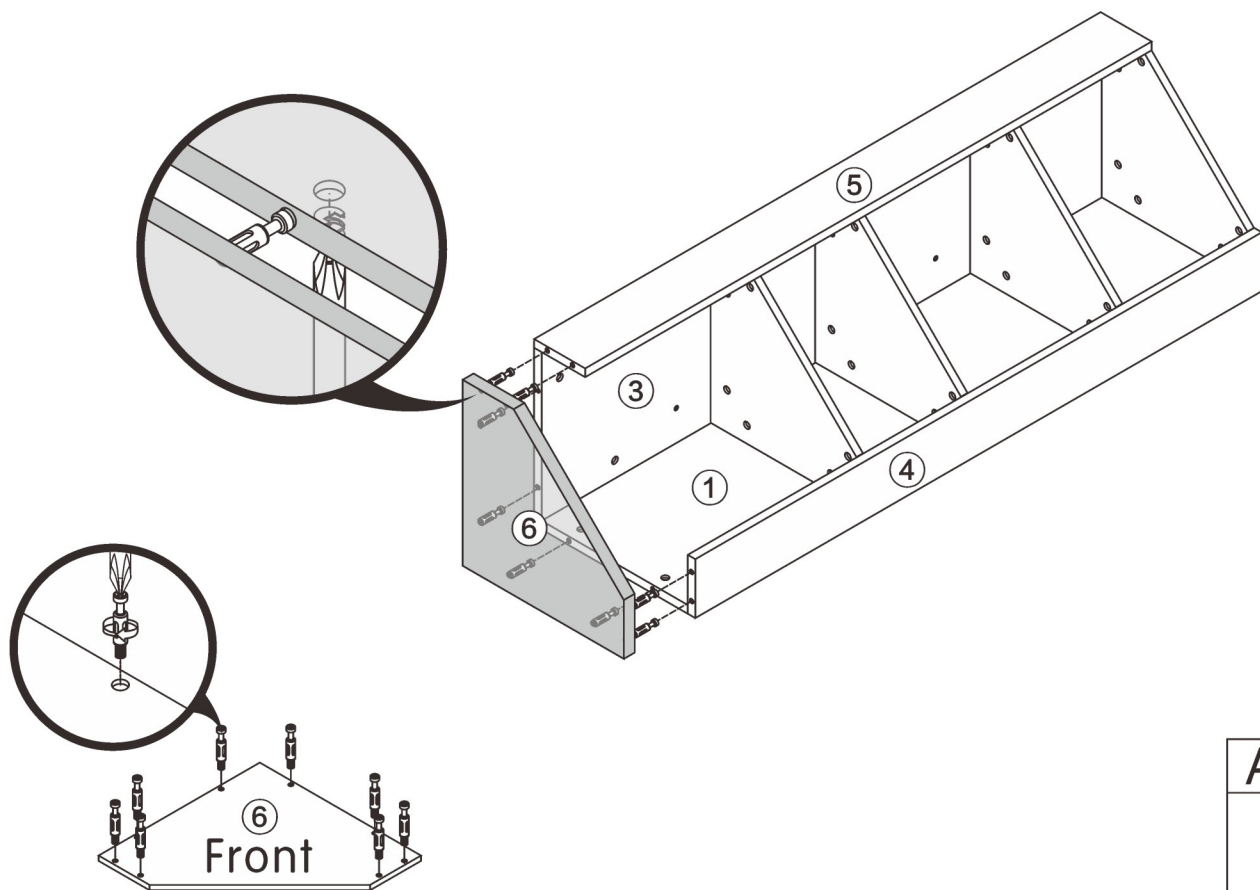


A	8PCS
	
15*10mm	

7

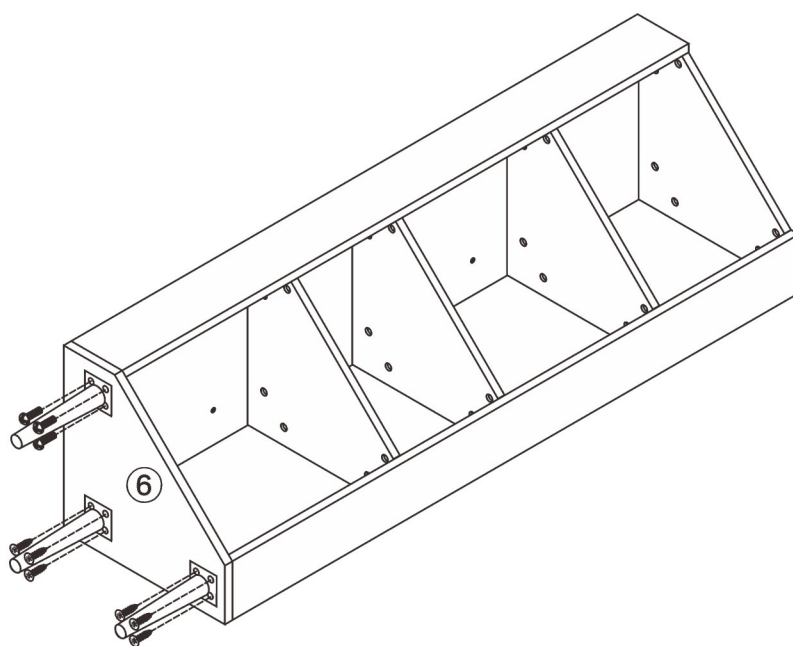

D	12PCS	I	3PCS
			
6*12mm			

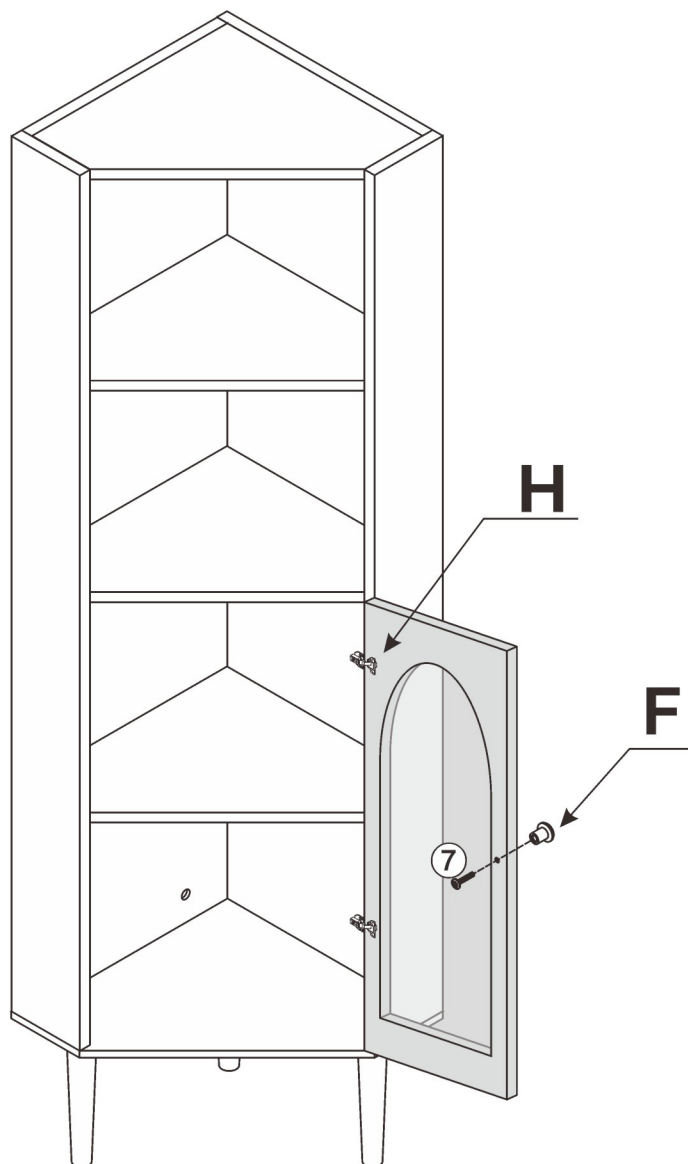

ok!

C	4PCS	F	1PCS	G	1PCS	H	2PCS
							
3.5*14mm		4*18mm		4*18mm			

