


Assembly Instructions

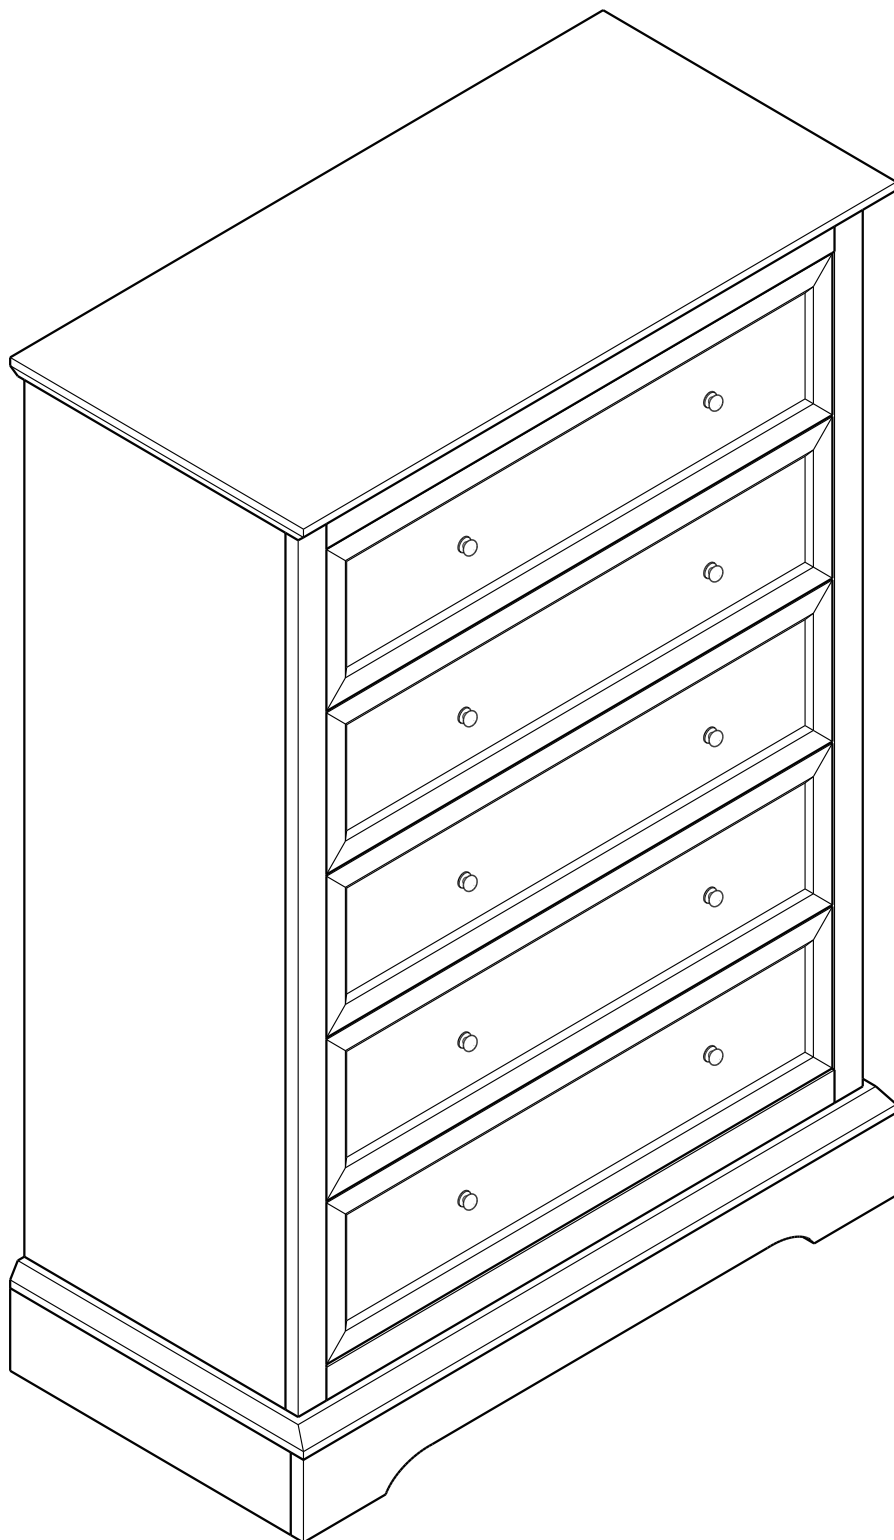

warning notice



- Open your item in the area you plan to keep it for less heavy lifting.



- Identify, sort, and count the parts before attempting assembly.



- Lay all parts on smooth flat surface.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- Do NOT use harsh chemicals or abrasive cleaners on this item.



- Never push, pull, or drag your furniture.

Teamwork



Failure to use 2 people for assembly could result in unit damage or personal injury.

Before You Start


Read through each step carefully and follow the proper order

Separate and count all your parts and hardware

Give yourself enough room for the assembly process


Have the following tools: Phillips Head Screwdriver and Hammer

Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

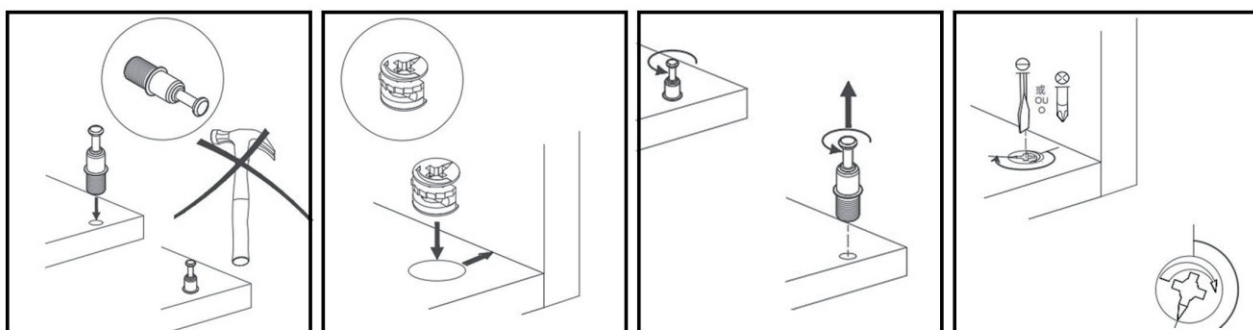


If the door panel is not sitting at a right position or angle, follow the steps below to improve.
















- (1) Loosen the hinge, adjust the door panel position (up and down) then fasten the screws to secure the hinge (Step 1), or,
- (2) Loosen the middle screw of the hinge and adjust the door panel in and out, to desired position, then fasten the screws to secure the hinge (Step 2), or
- (3) Adjust the nut at the centre of the hinge to fine tune the tilting angle of the door panel (left or right) to make the door panel to be vertical.

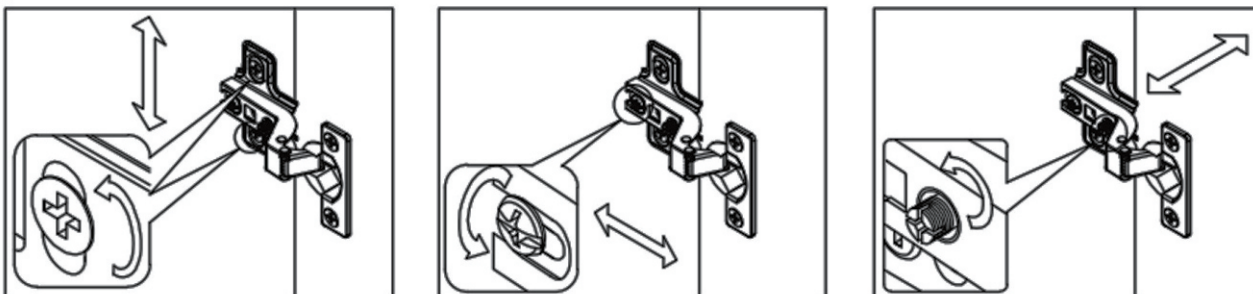

Components

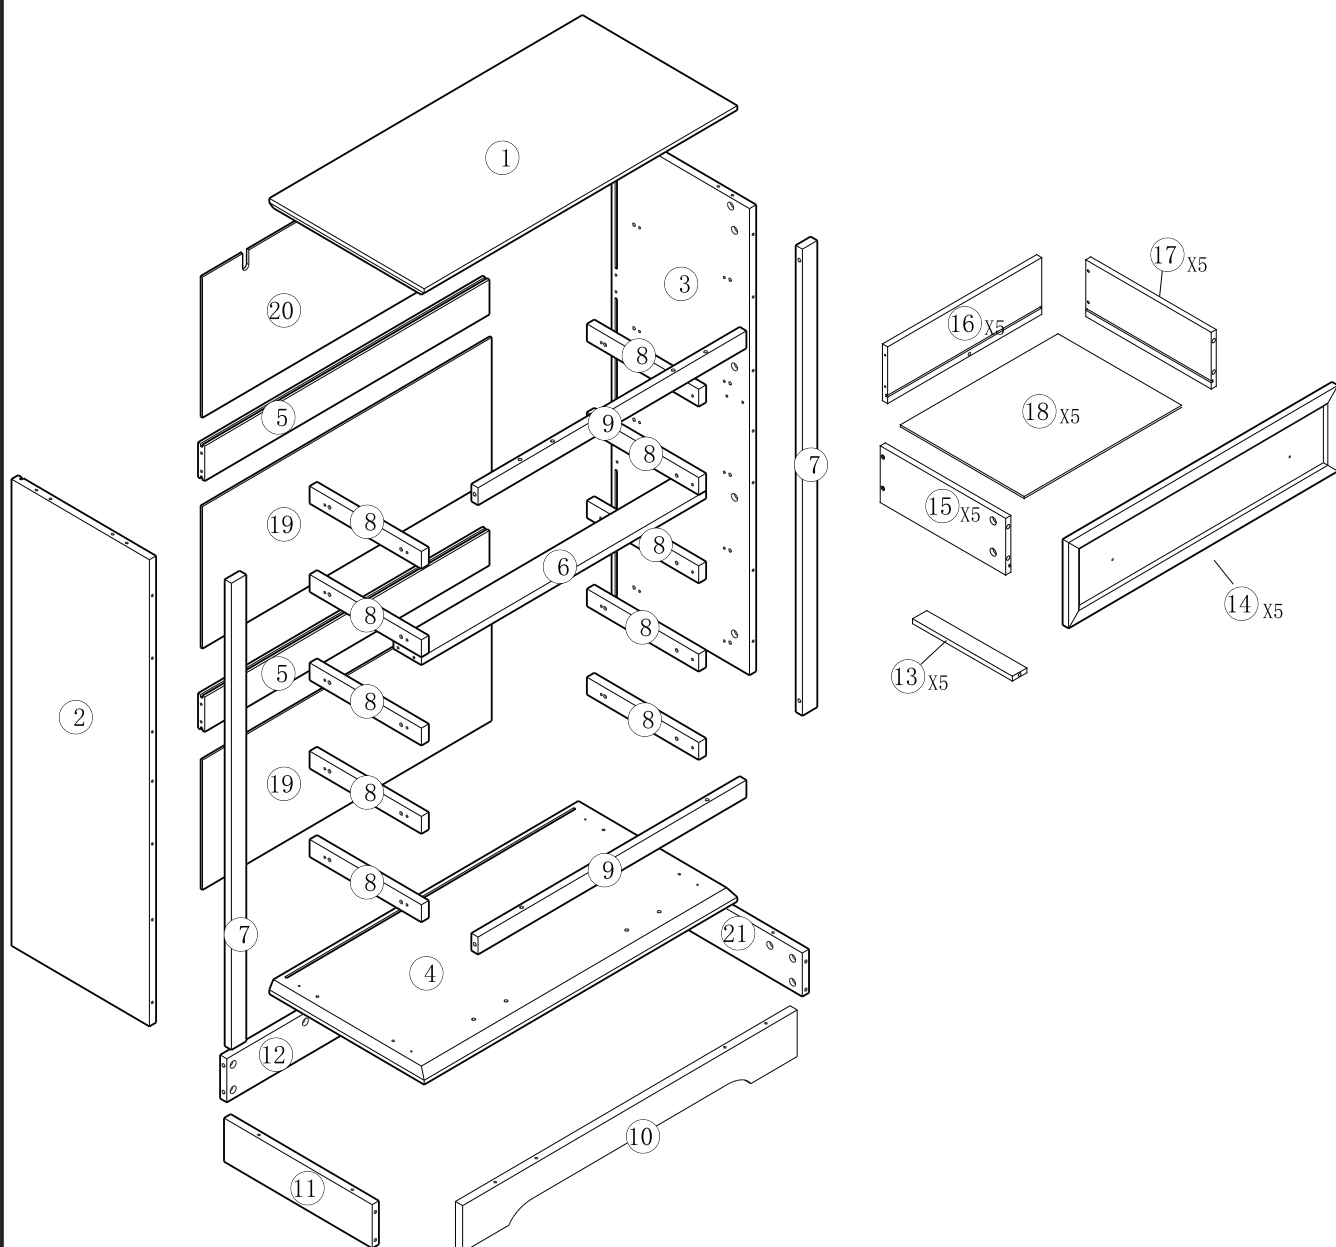


Components

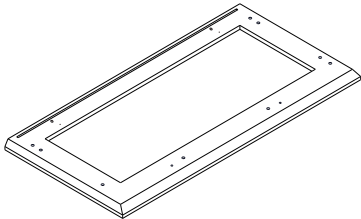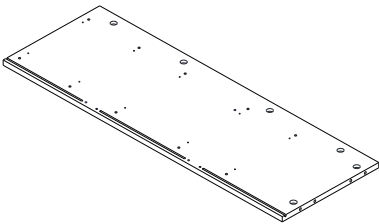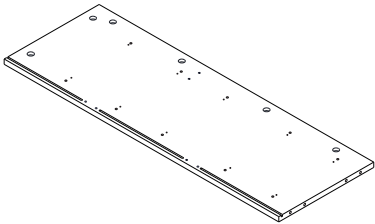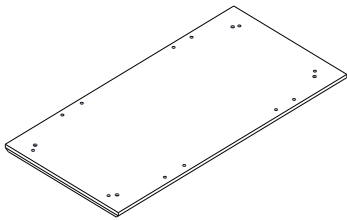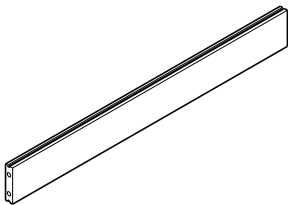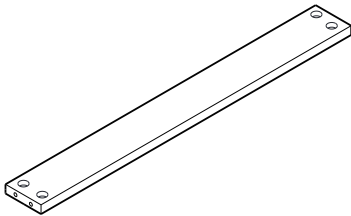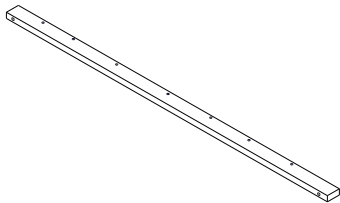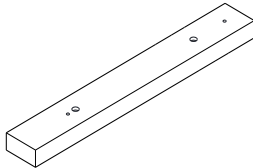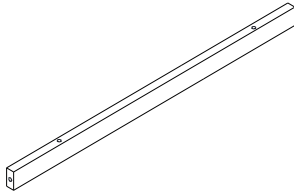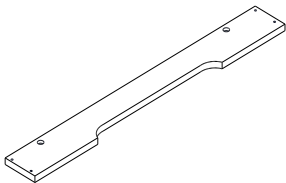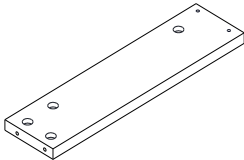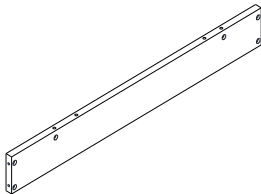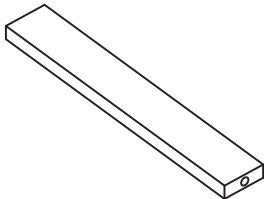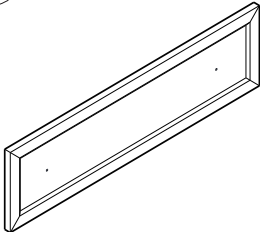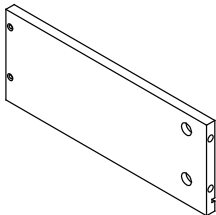
① 1PC 	② 1PC 	③ 1PC 
④ 1PC 	⑤ 2PC 	⑥ 1PC 
⑦ 2PC 	⑧ 10PC 	⑨ 2PC 
⑩ 1PC 	⑪ 1PC 	⑫ 1PC 
⑬ 5PC 	⑭ 5PC 	⑮ 5PC 

Components


①⑥ 5PC

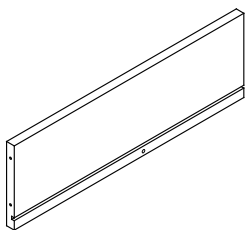


①⑦ 5PC

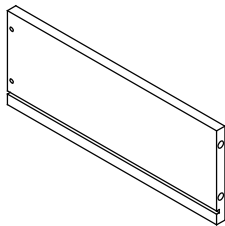


①⑧ 5PC

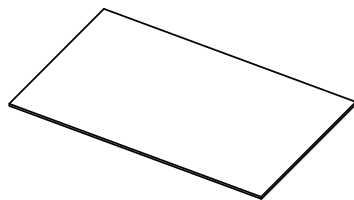


①⑨ 2PC

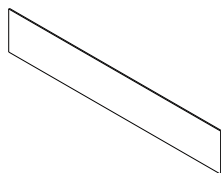












②⑦ 1PC

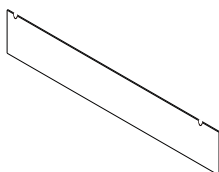

②① 1PC

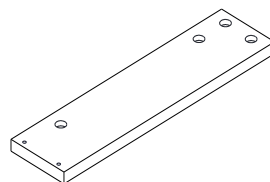


Components

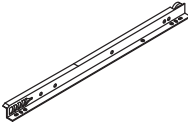 A x 69 +2	 B x 69 +2	 C x 42 +2	 M3.5x12mm D x 40 +2
 M4x35mm E x 45 +2	 M4x40mm F x 8	 G x 12	 H x 2
 M4x8mm I x 10	 J x 2	 K x 10	
 DL x 5	 DR x 5	 CR x 5	 CL x 5

Assembly Instructions


STEP 1

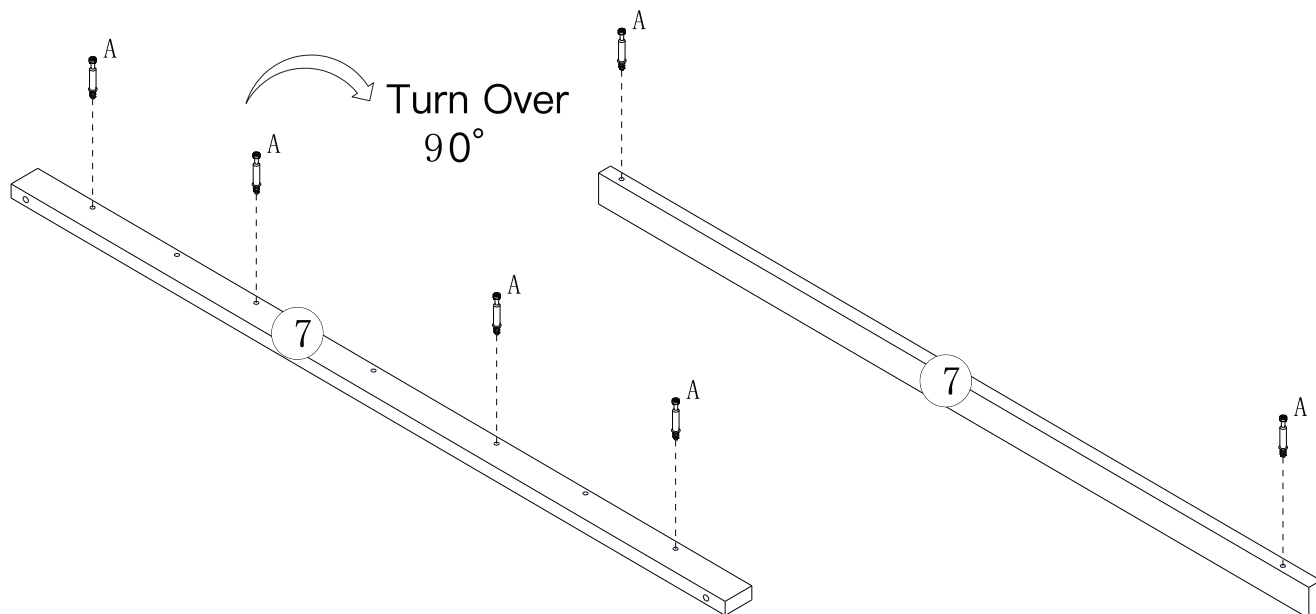

Ax12

X2

STEP 2

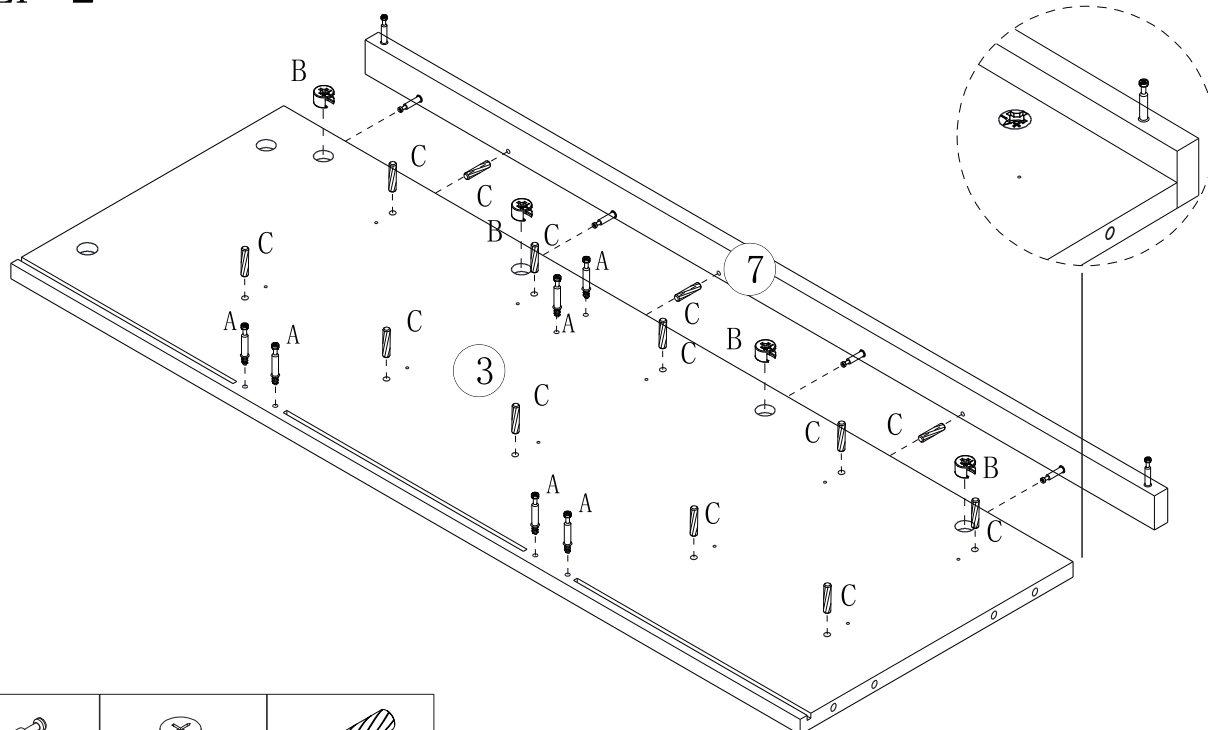

Ax6




Bx4



Cx13

Assembly Instructions


STEP 3

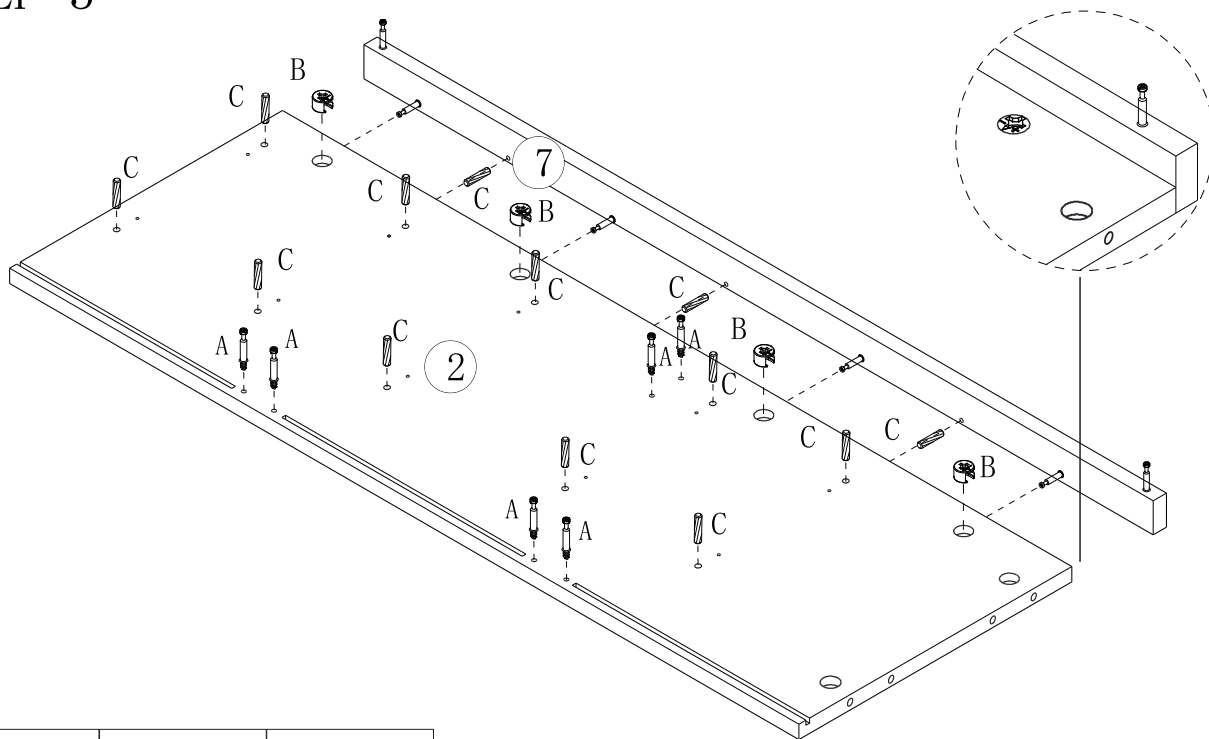

		
Ax6	Bx4	Cx13

STEP 4


Pay attention to the spacing between holes

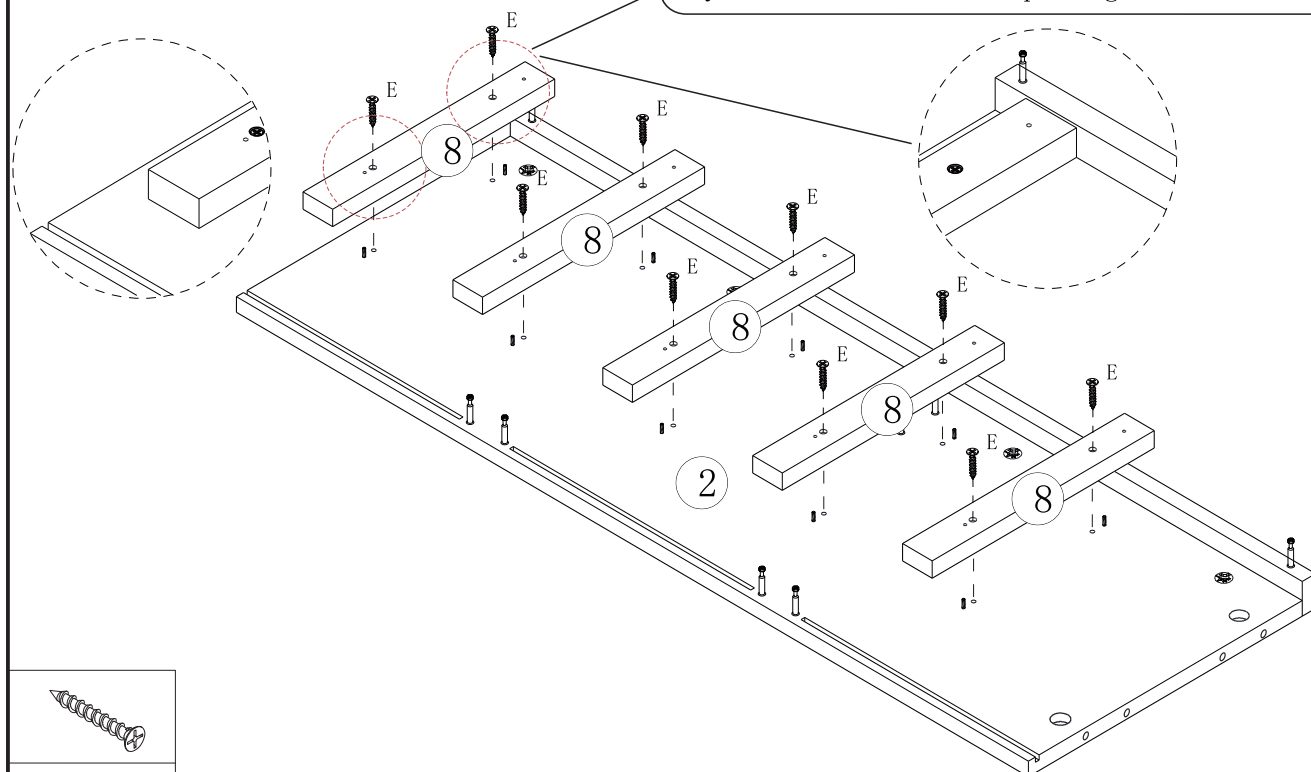



Ex10

Assembly Instructions

STEP 5

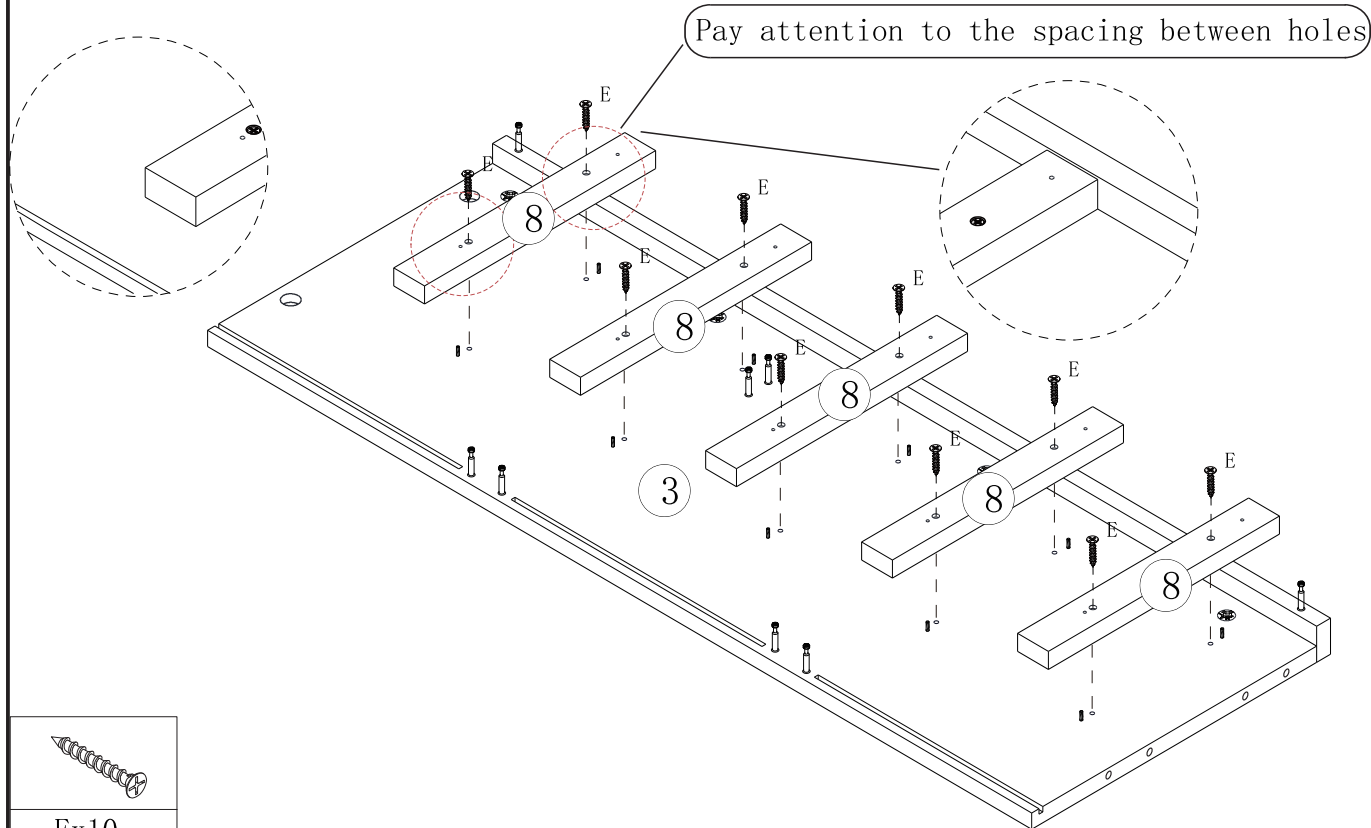


STEP 6

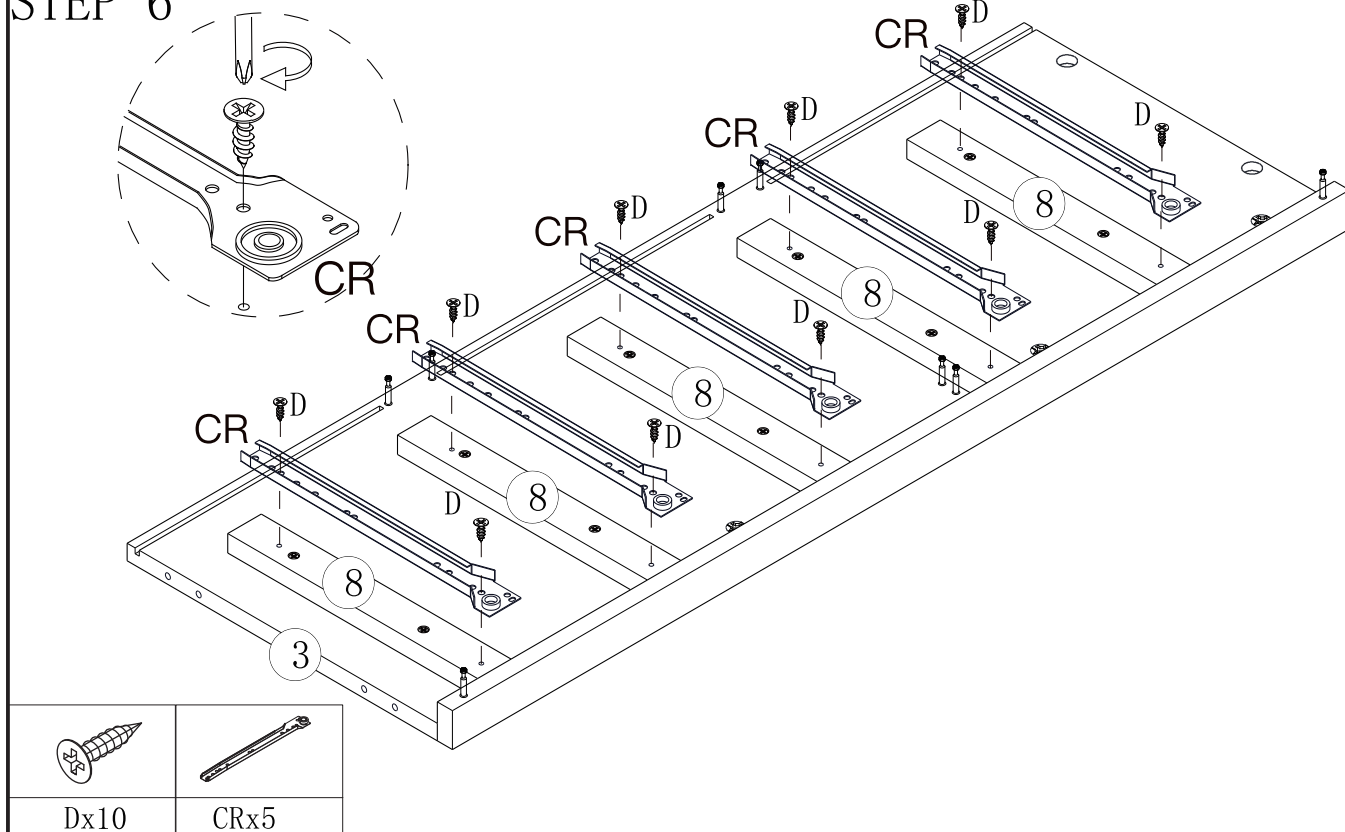


Assembly Instructions

STEP 7

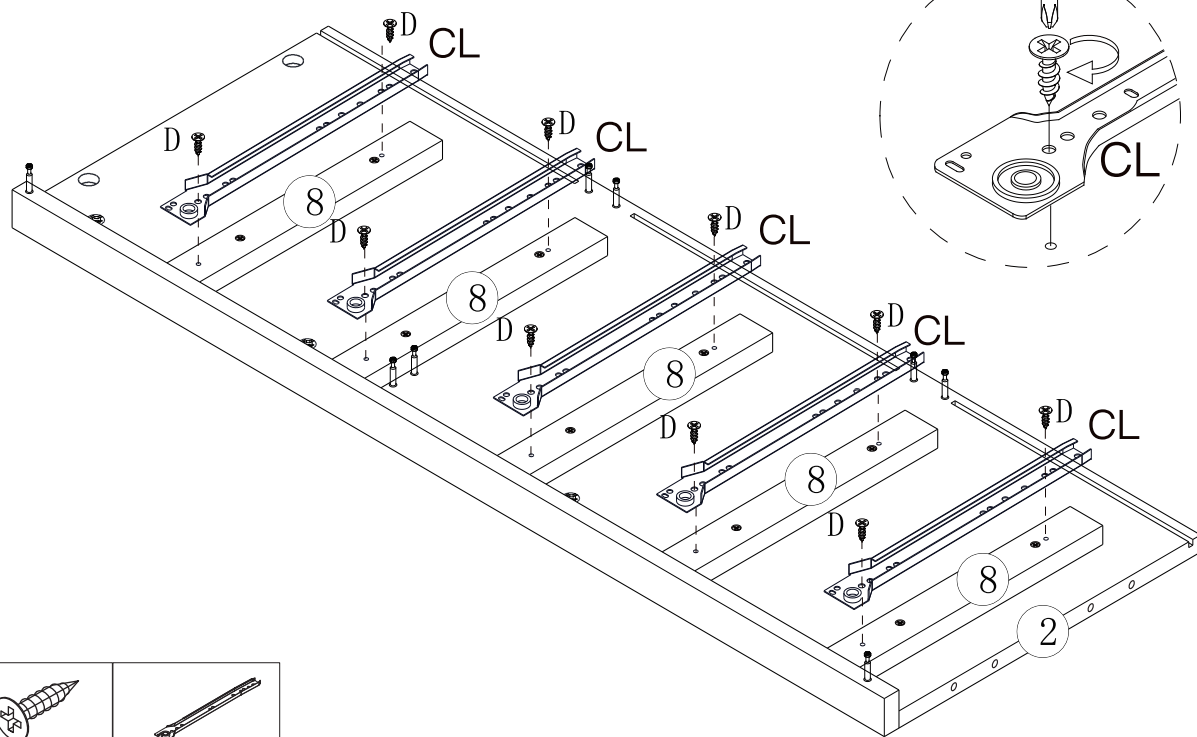


Dx10



CLx5


STEP 8

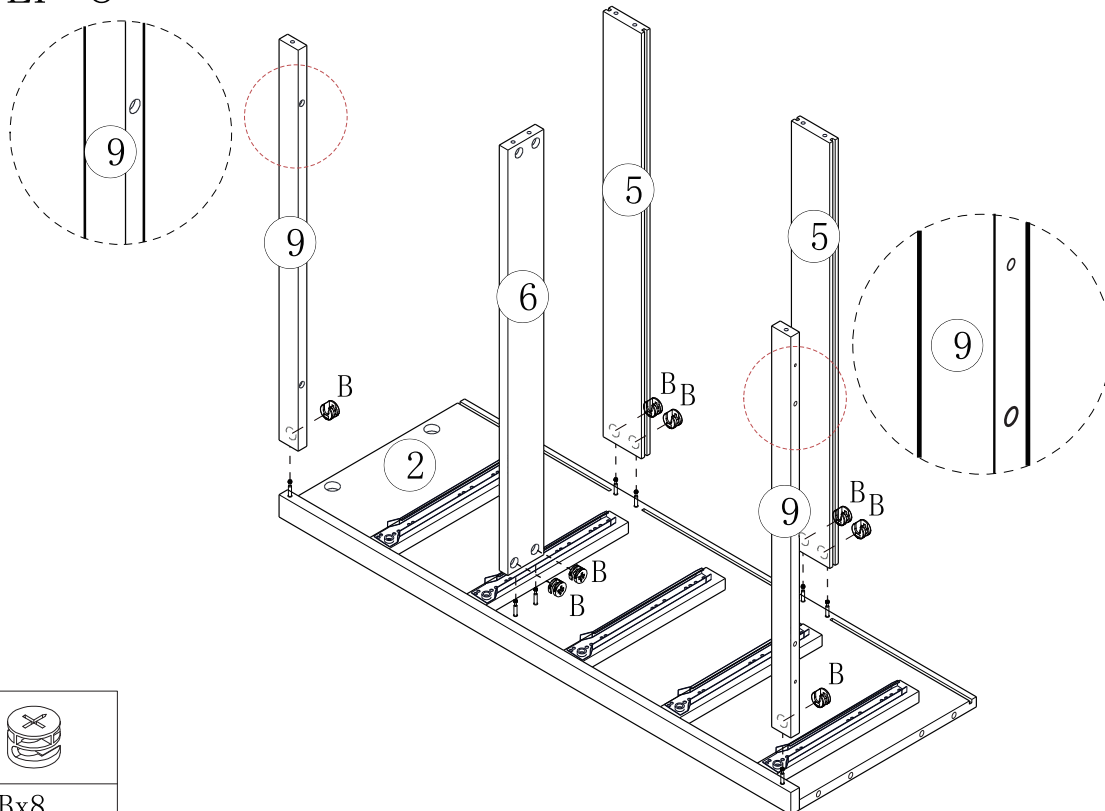

Bx8


Assembly Instructions

STEP 9

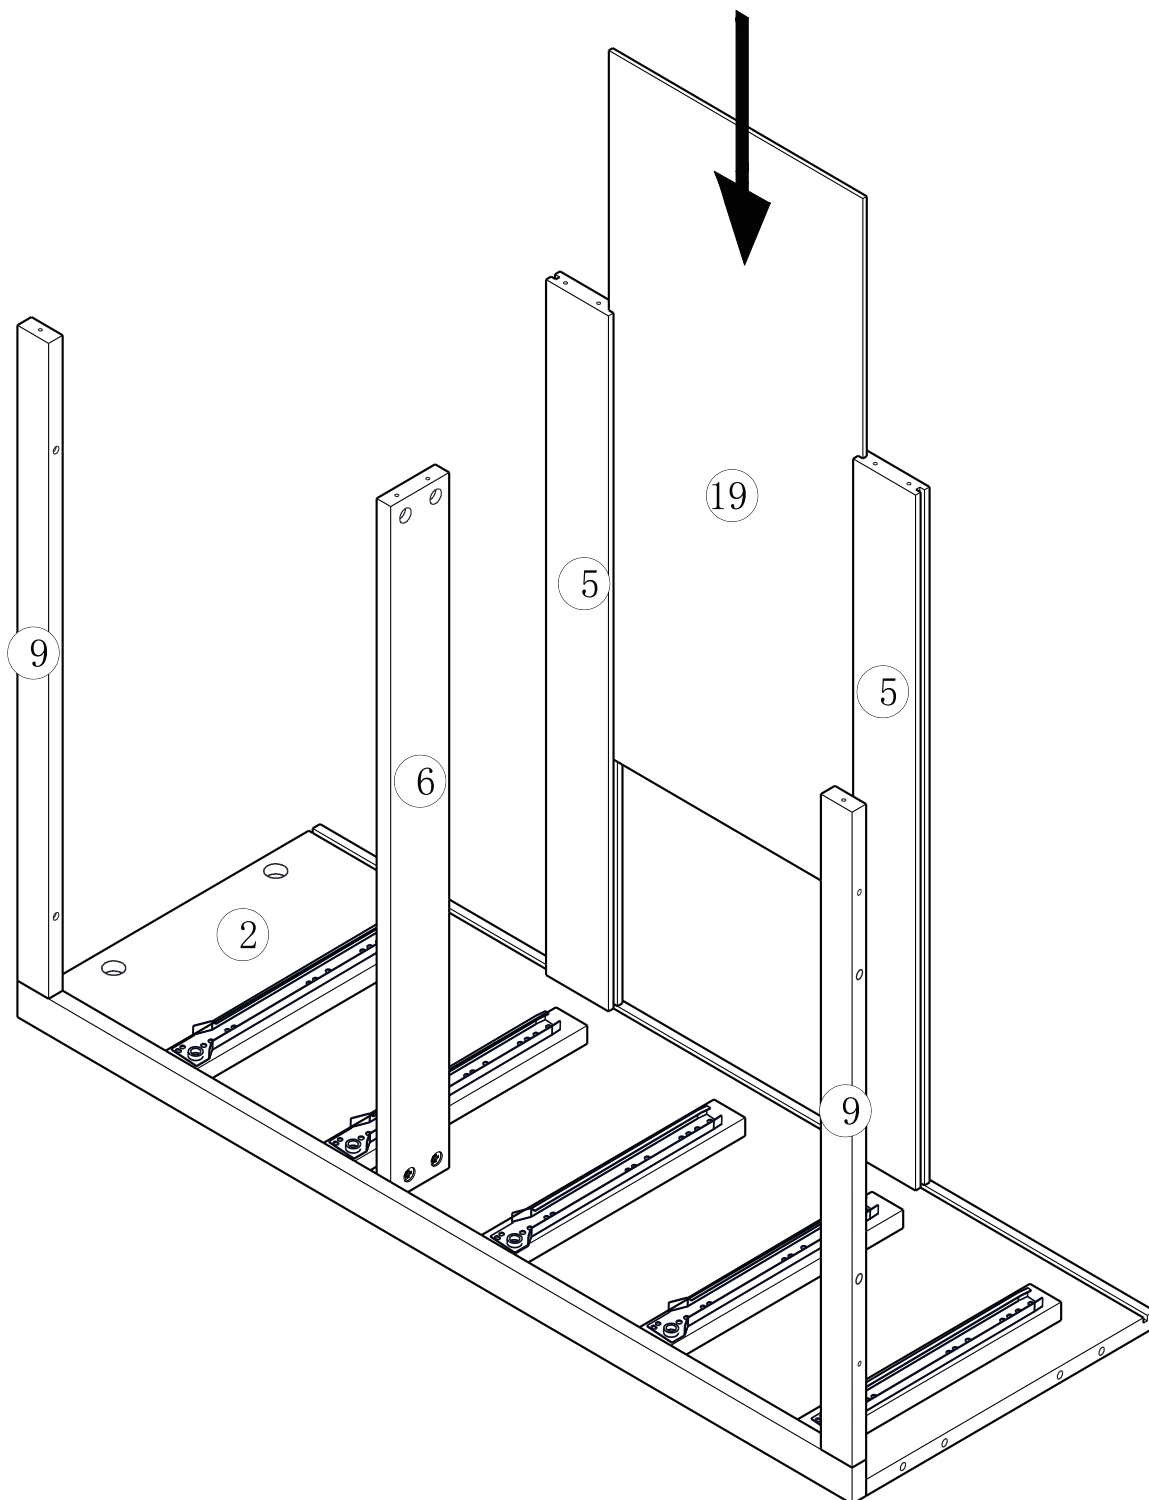

Assembly Instructions


STEP 10

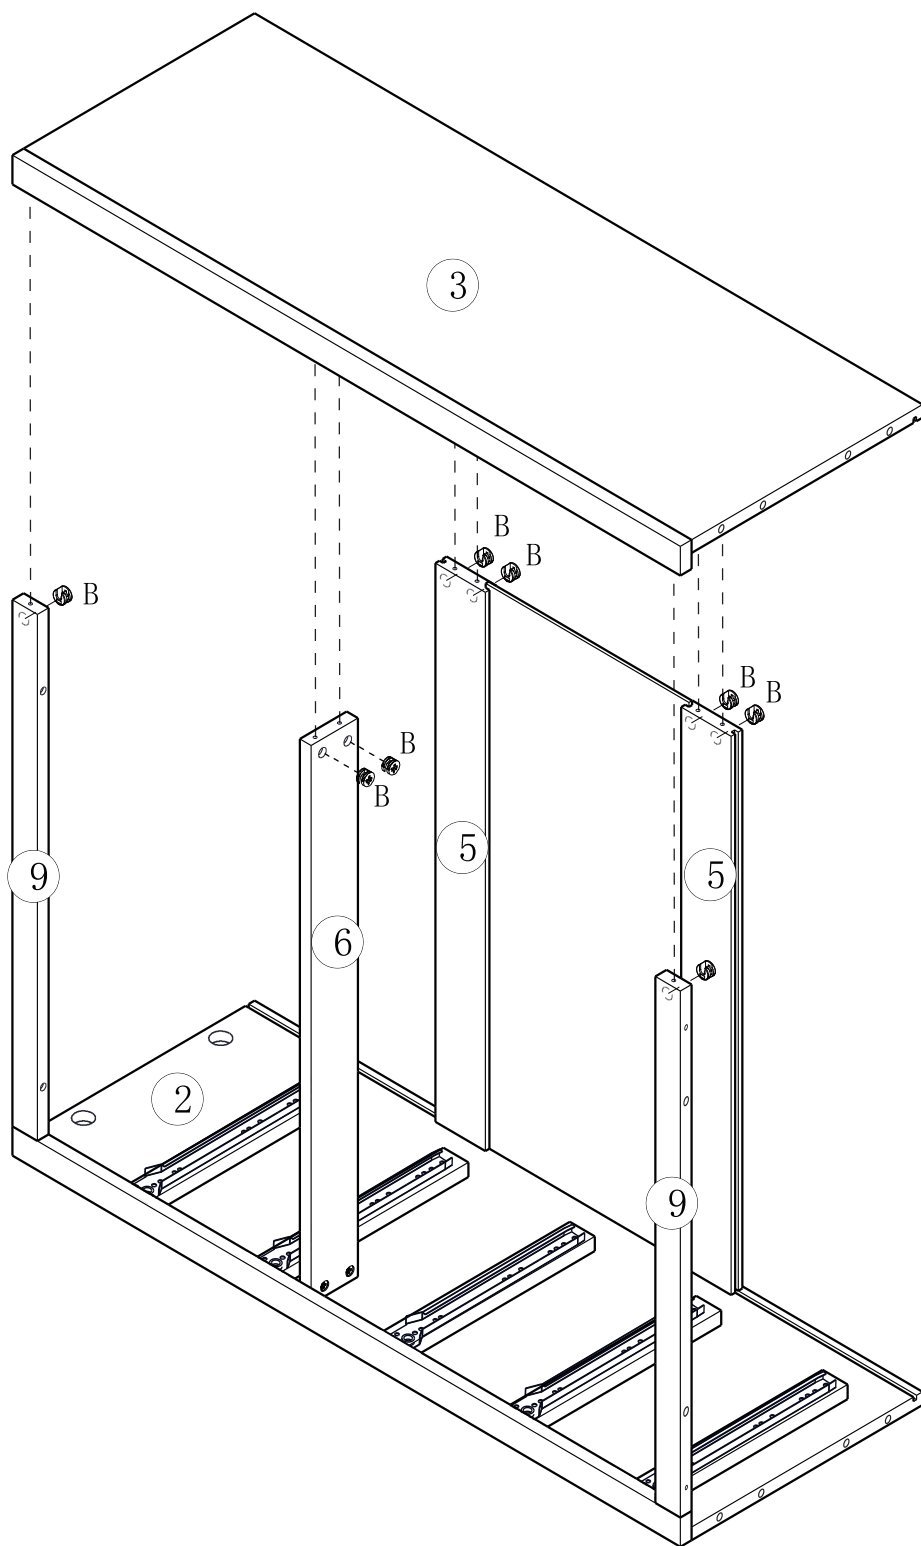

Bx8

Assembly Instructions




STEP 11

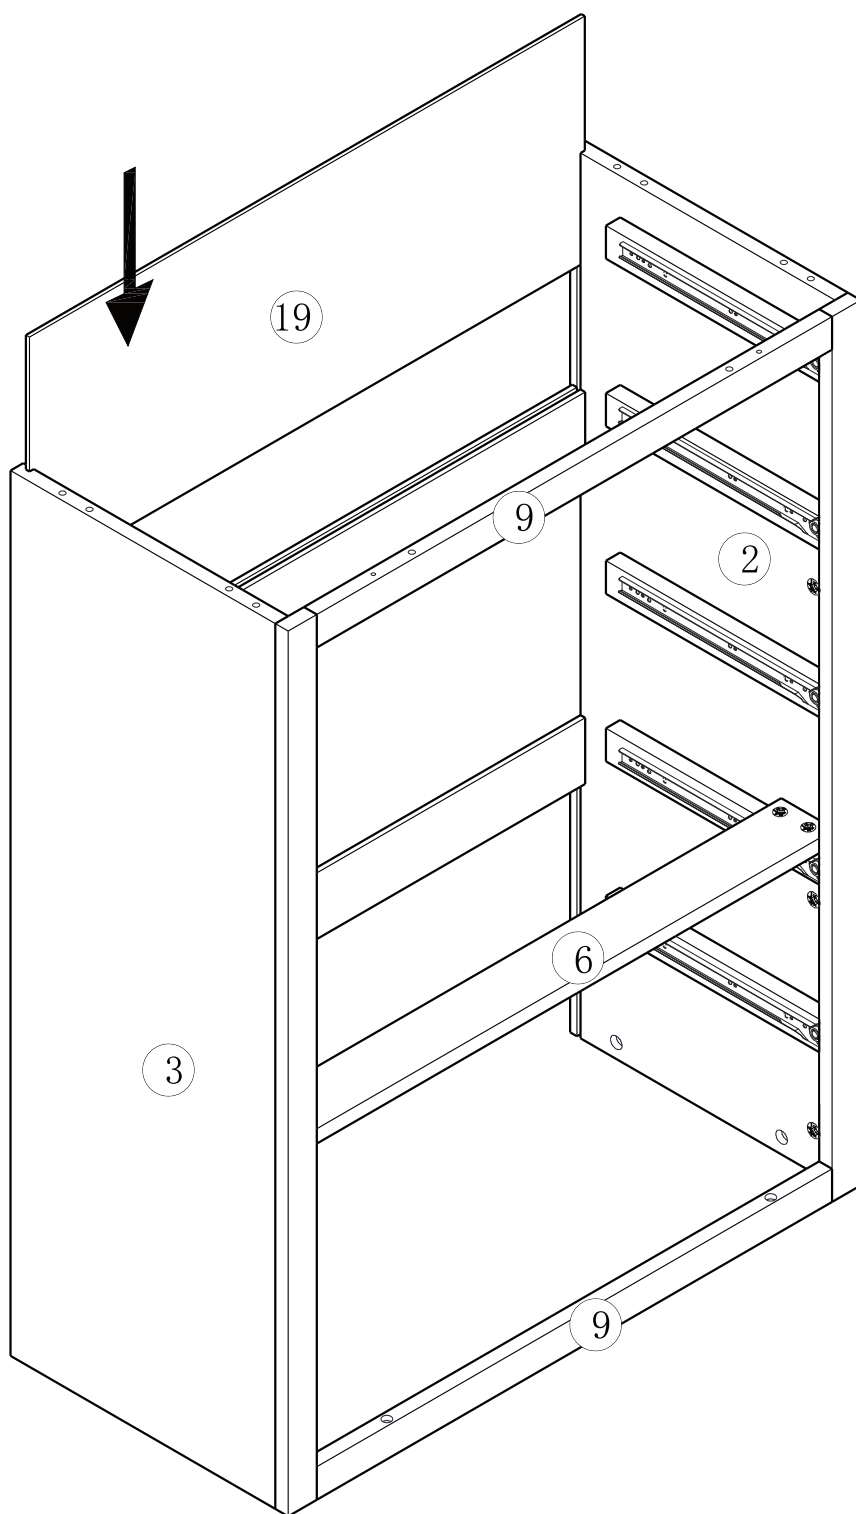





Assembly Instructions

STEP 12

Calibration: Please install the anti-tipping accessories correctly, as shown in the picture, and secure the J accessories and screws with a screwdriver.

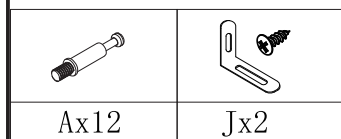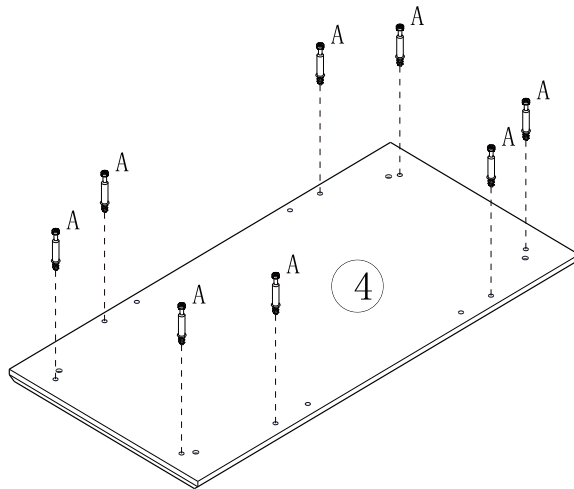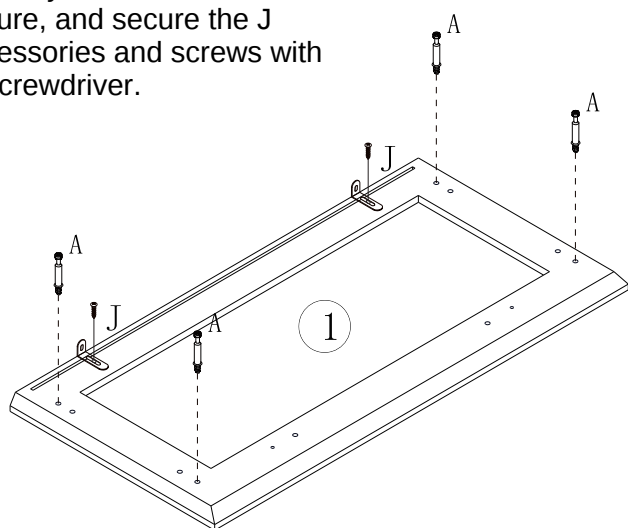


STEP 13

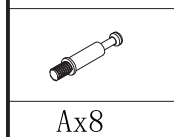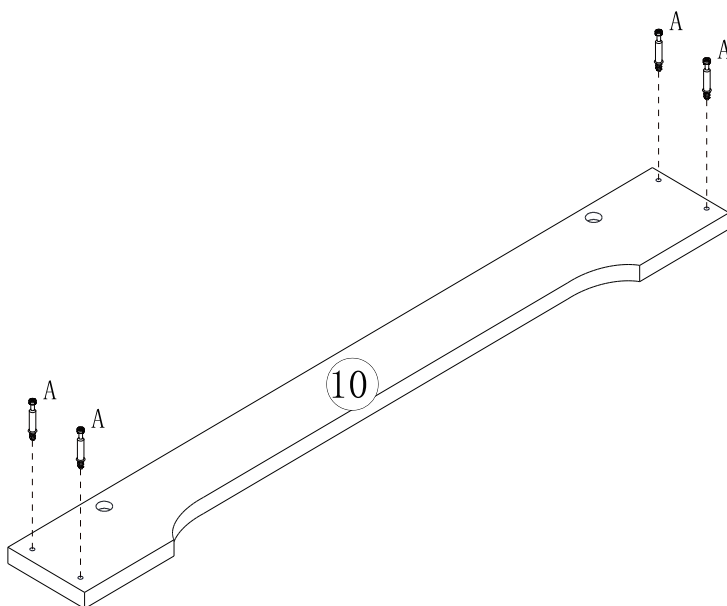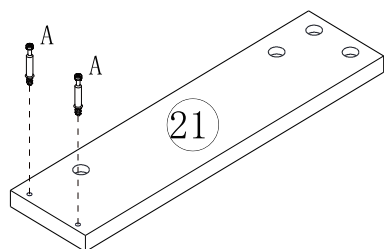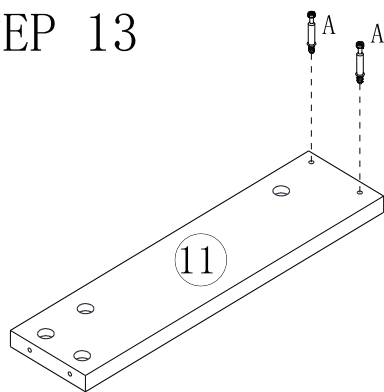

Assembly Instructions

STEP 14

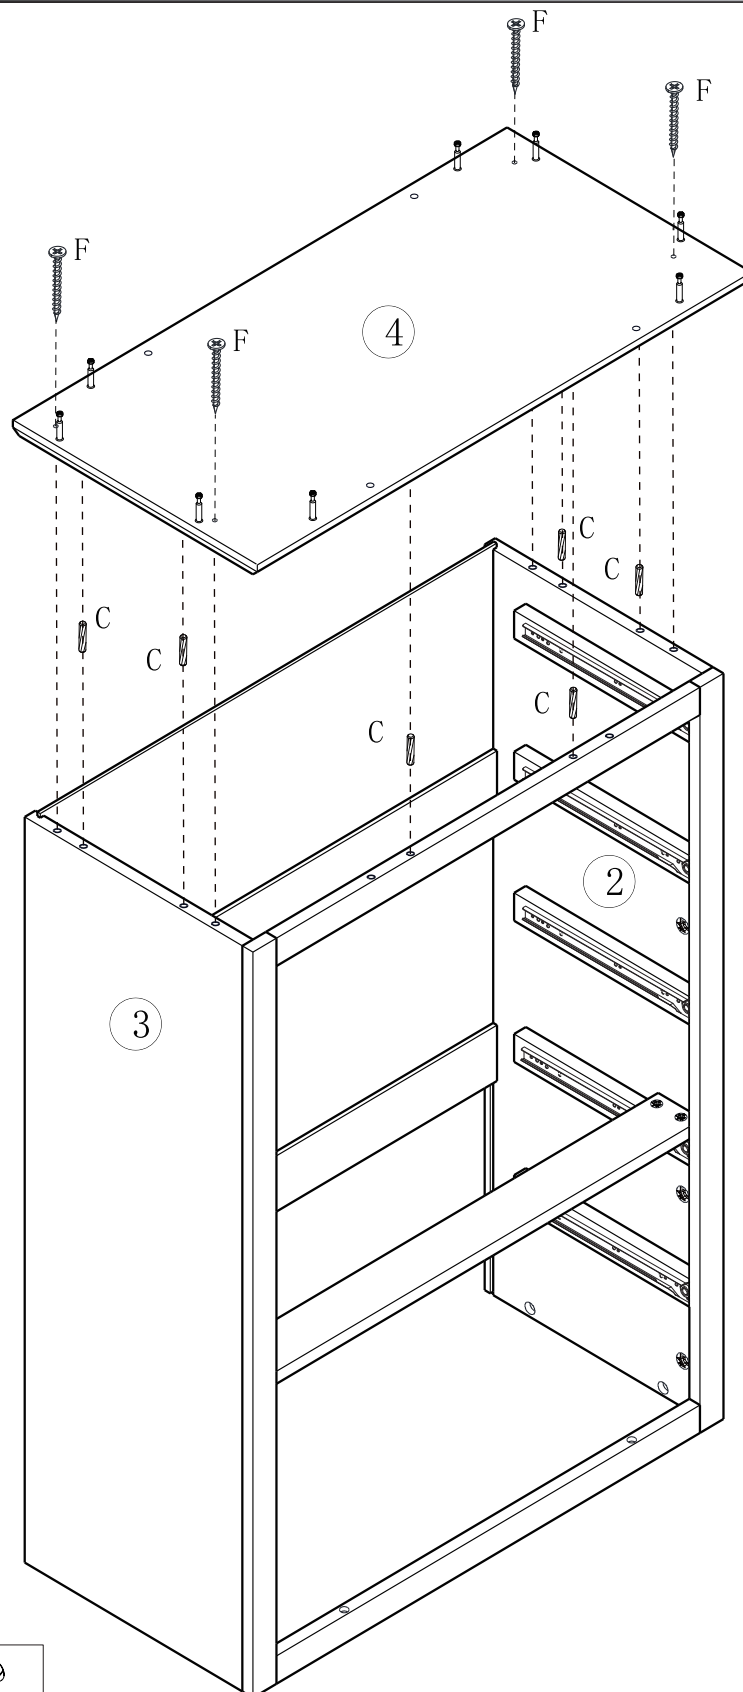


Fx4



Cx 6


Assembly Instructions

STEP 15

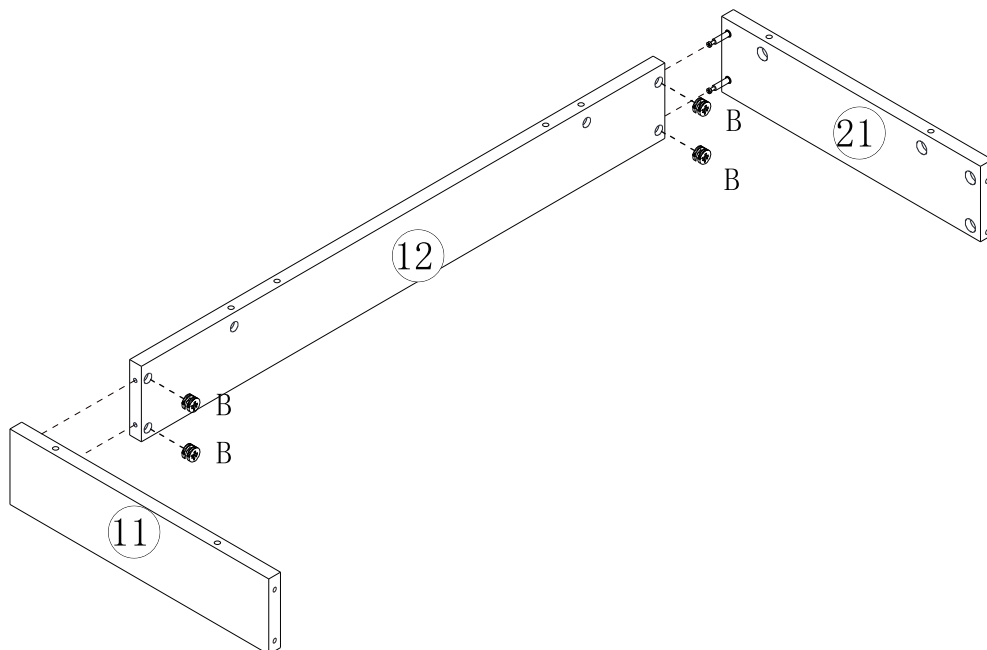

Bx4


STEP 16

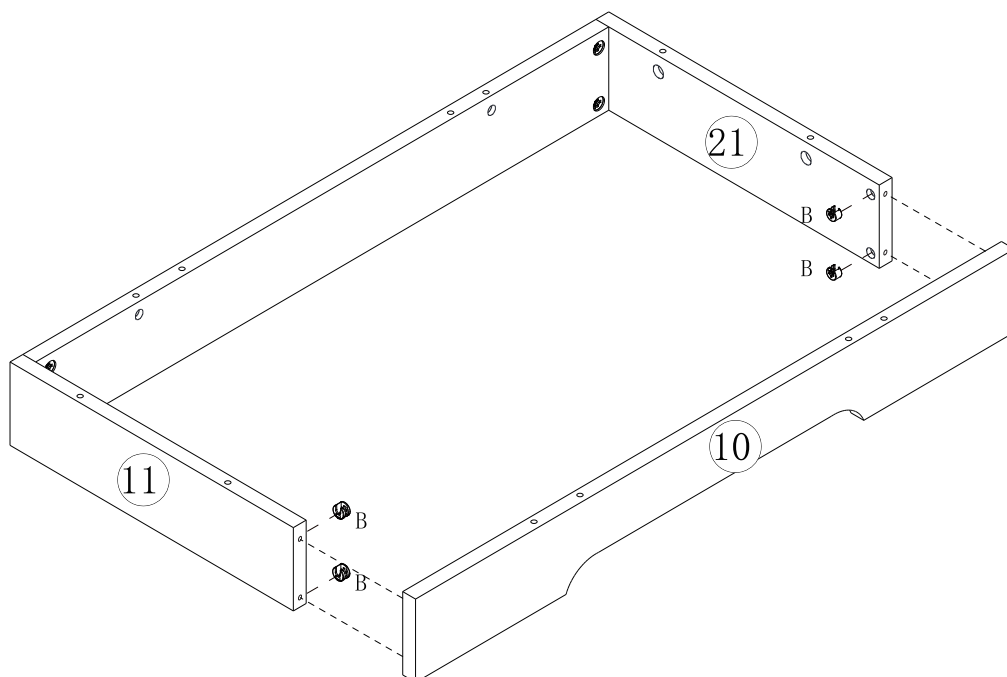

Bx4

Assembly Instructions

STEP 17

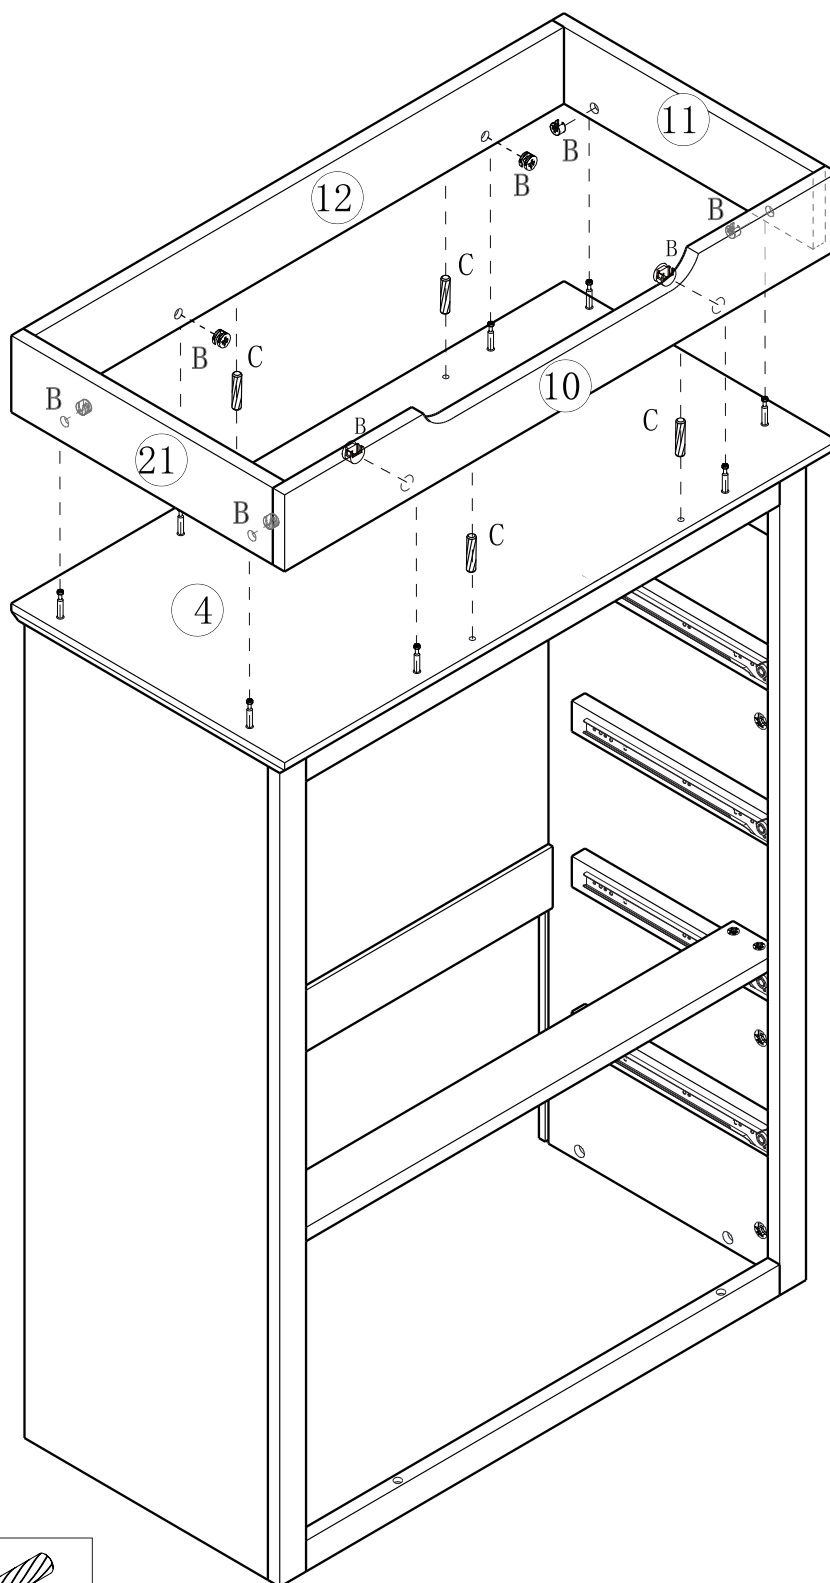


Bx8



Cx4


Assembly Instructions

STEP 18

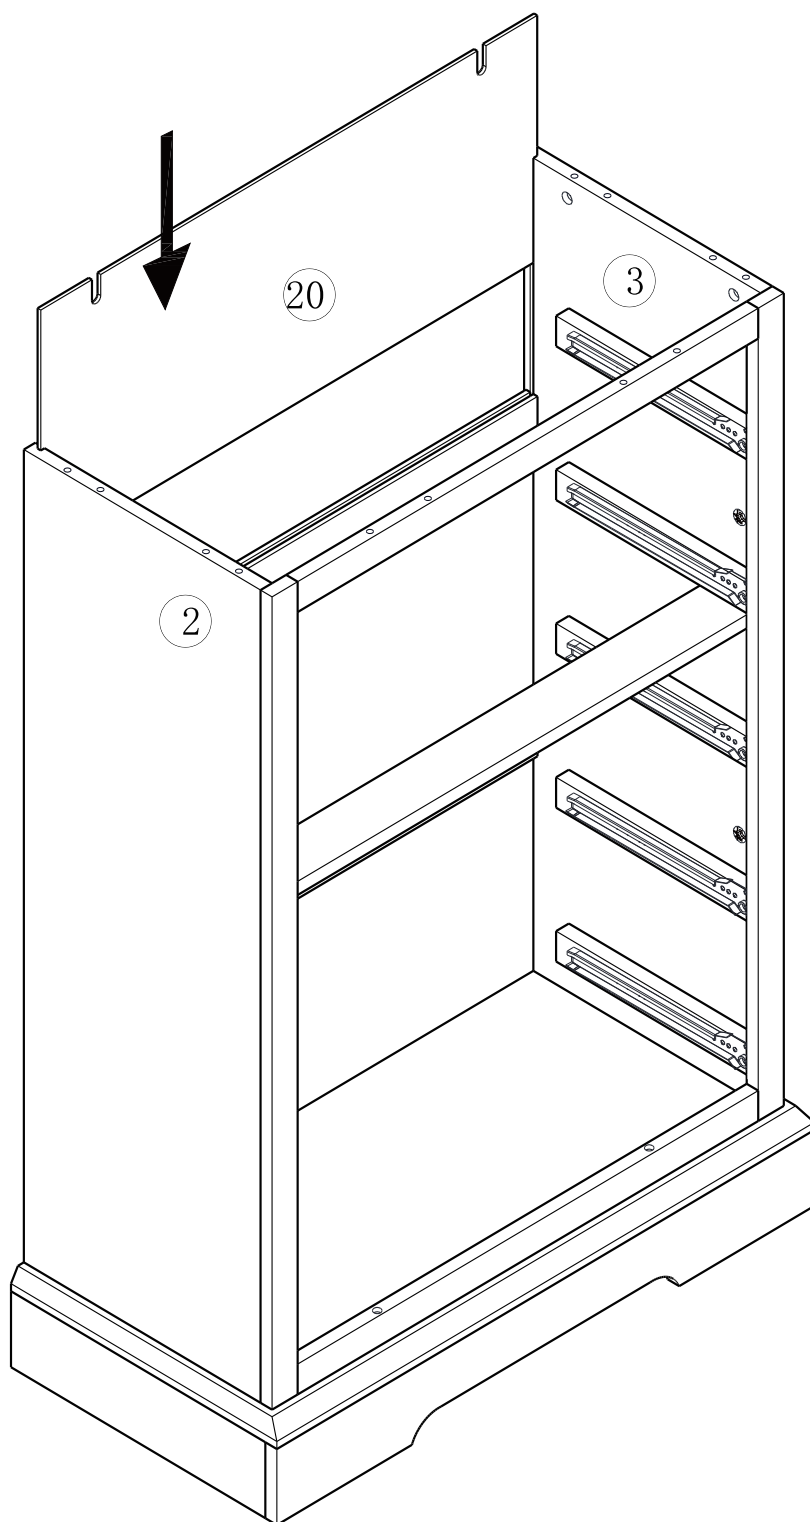

Assembly Instructions

STEP 19

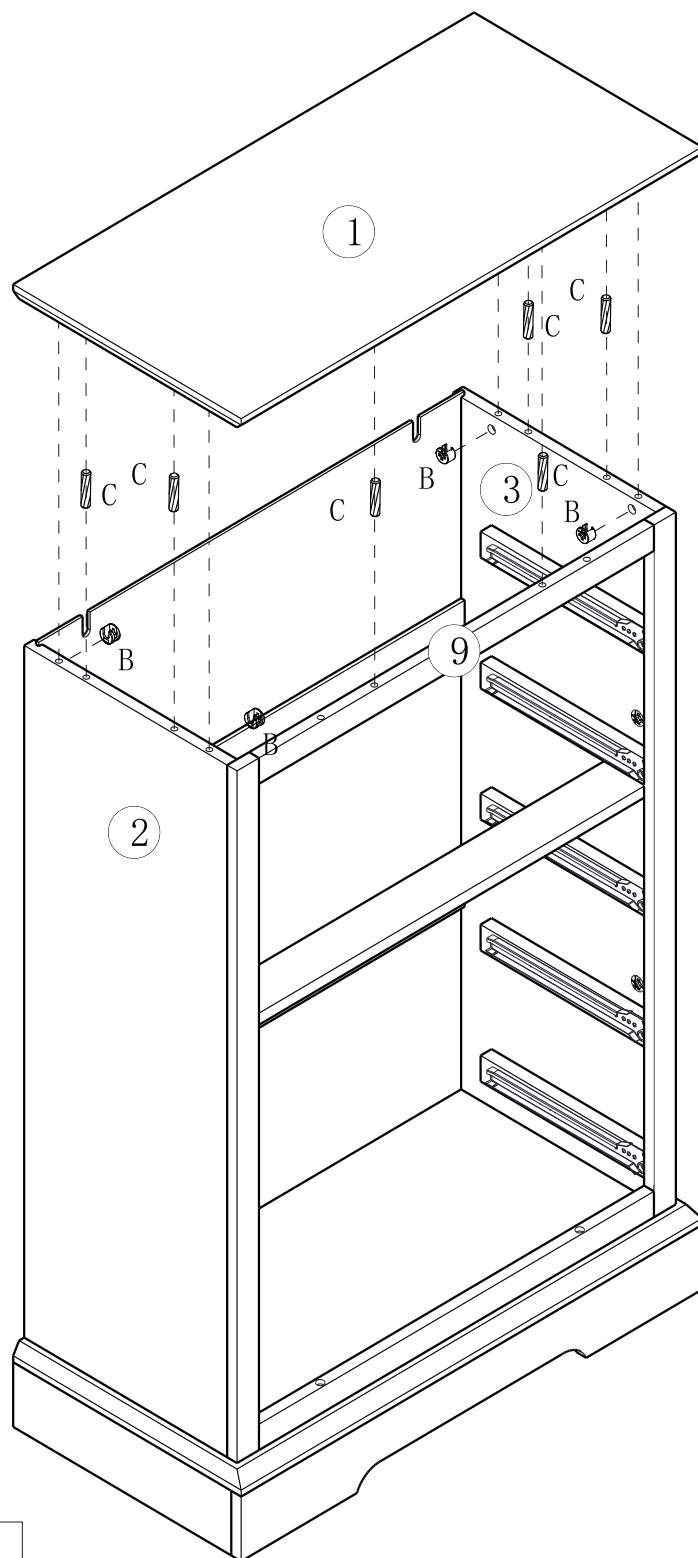



Bx4



Cx6

Assembly Instructions

STEP 20

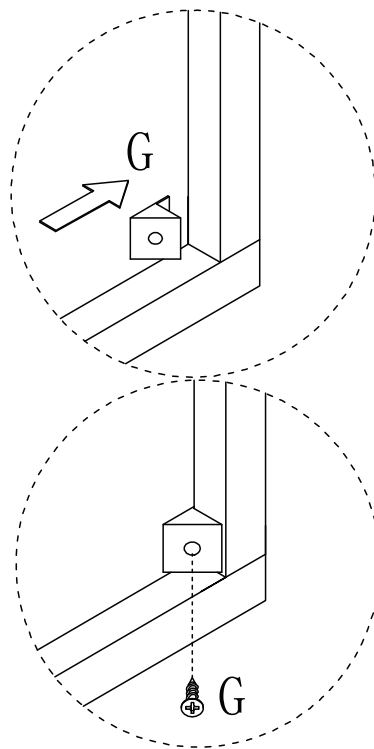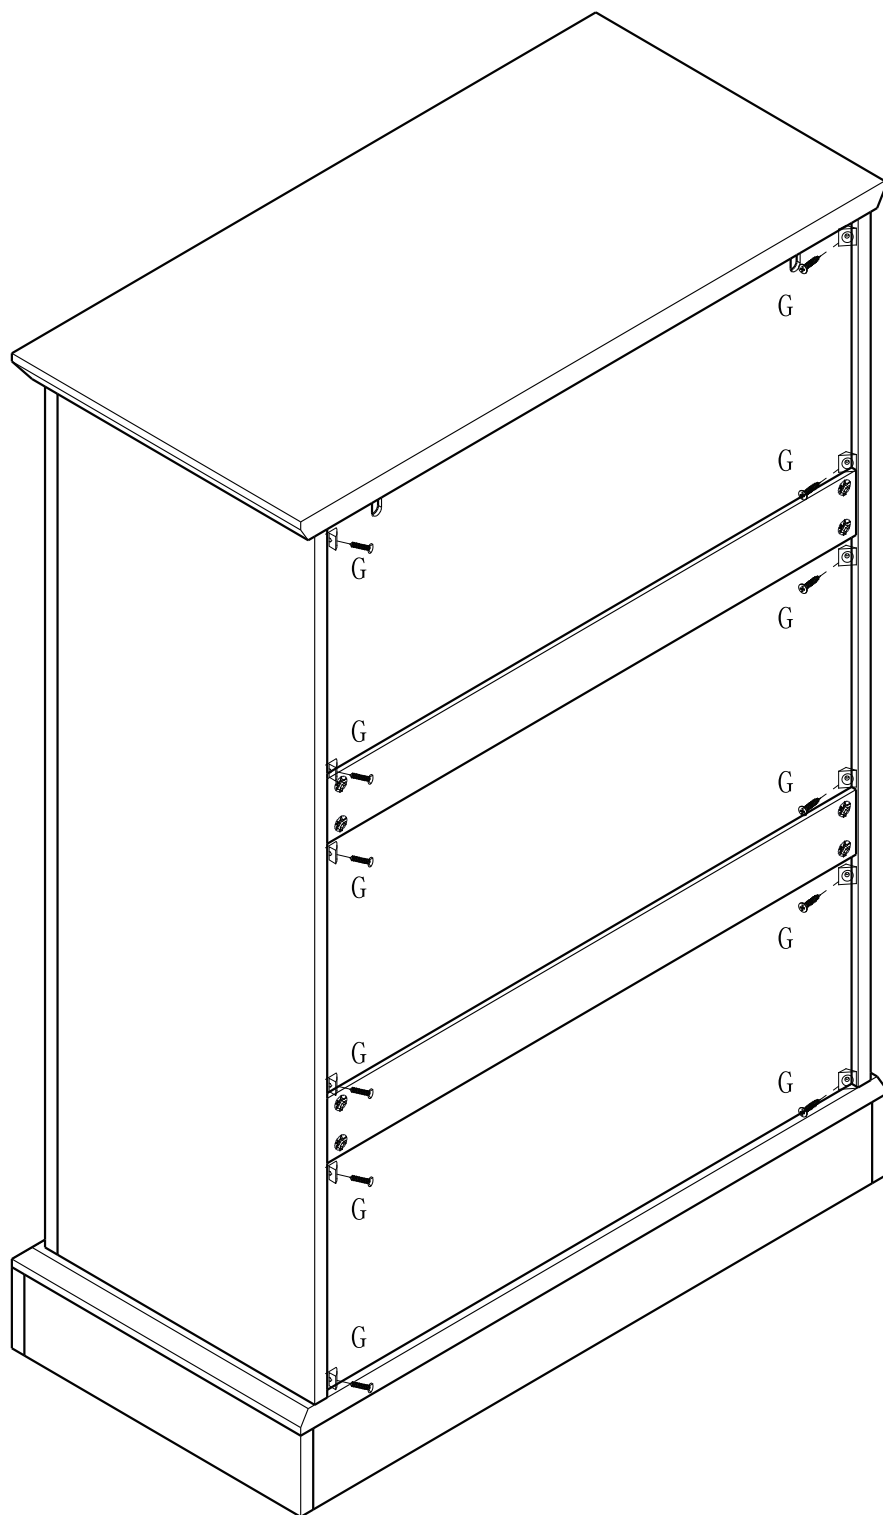



Gx12

Assembly Instructions

STEP 21

Calibration: Please install the anti-tipping accessories correctly.



1. Drill holes in the wall.
2. Use a hammer to knock the anti-tipping plastic parts into the wall holes.
3. Install the L-shaped iron piece fixing on the cabinet.
4. Use screws to link and fix the L-shaped iron piece with the expansion fittings inside the wall.

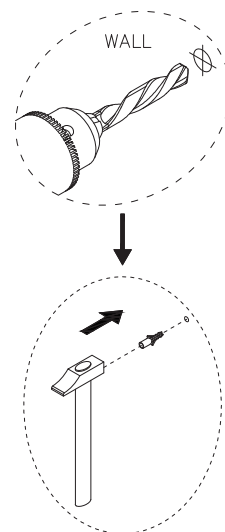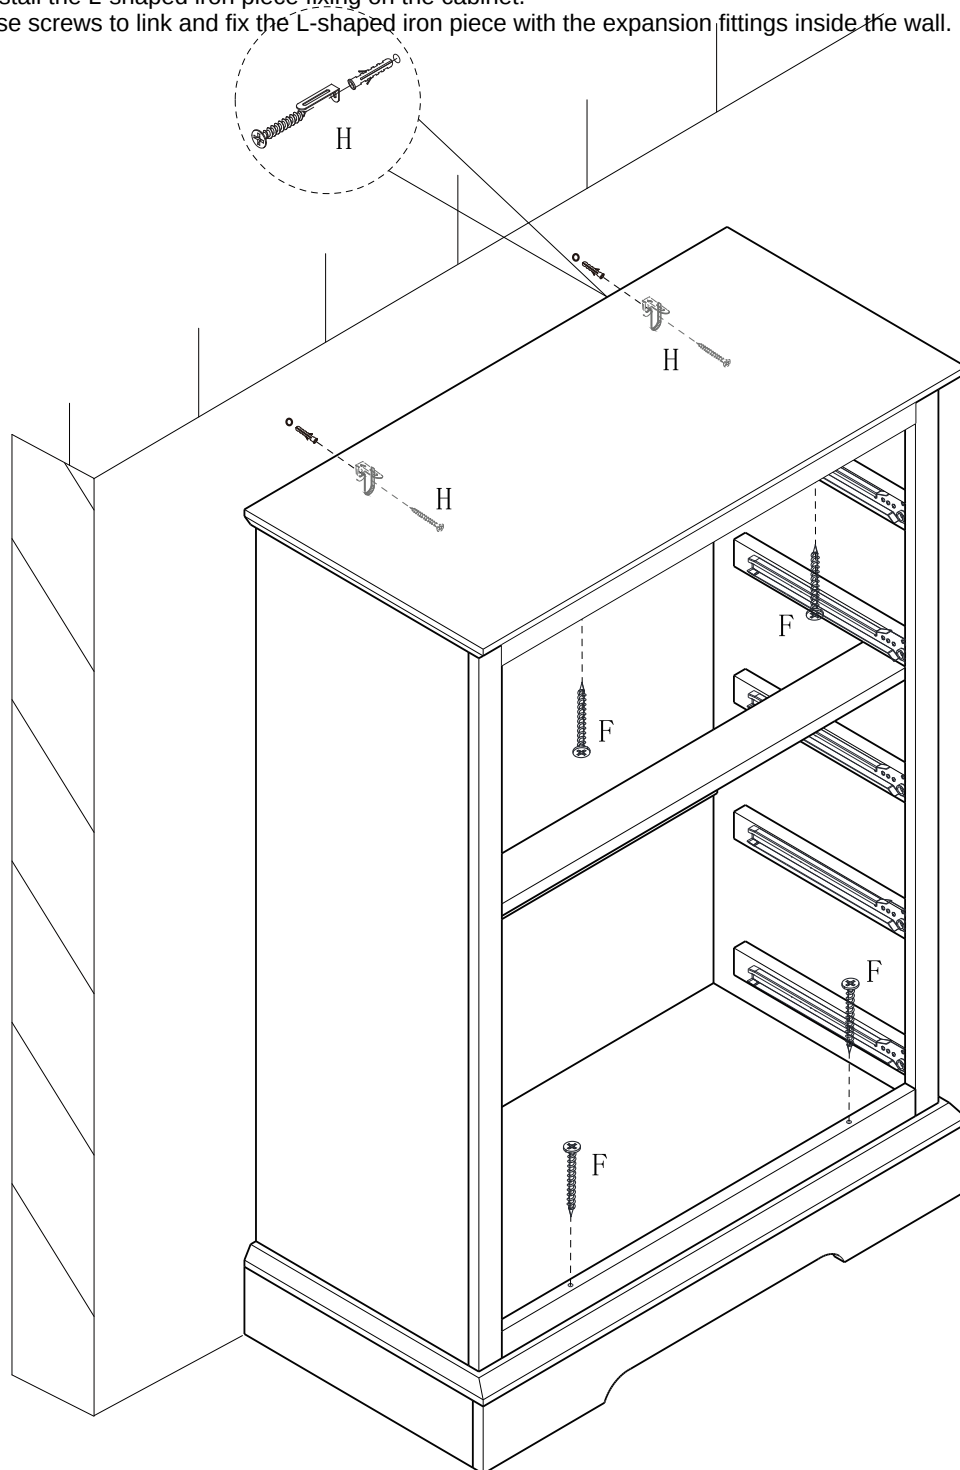

	
Hx2	Fx4

Assembly Instructions



STEP 22

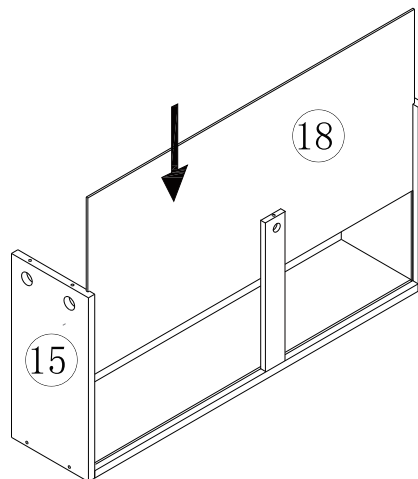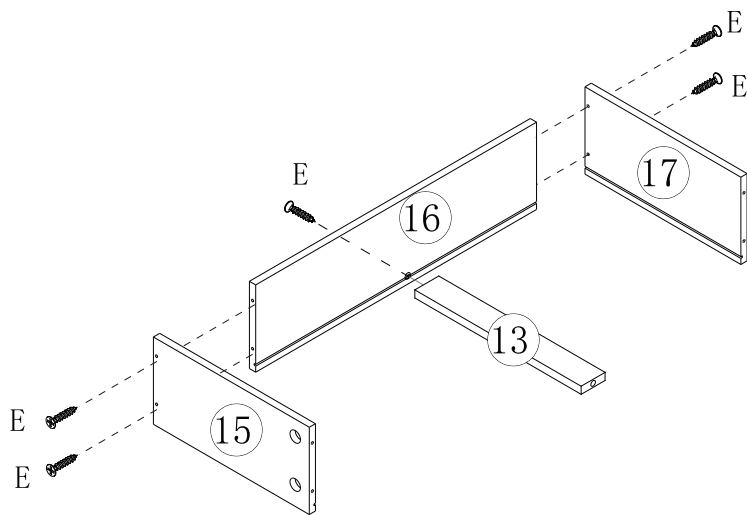

Ex25

X5

STEP 23

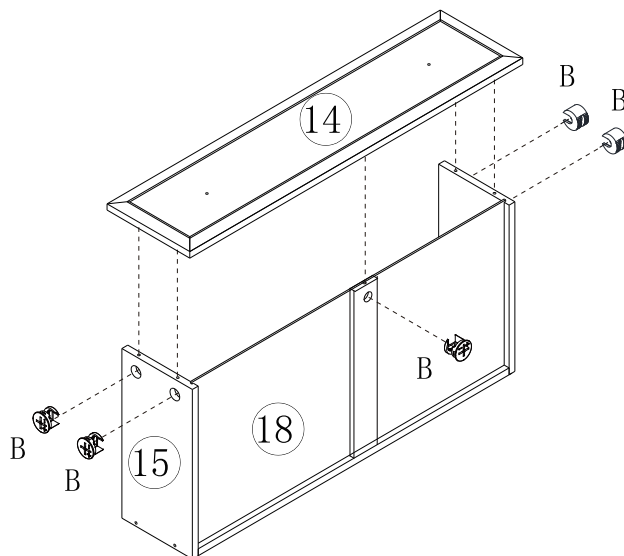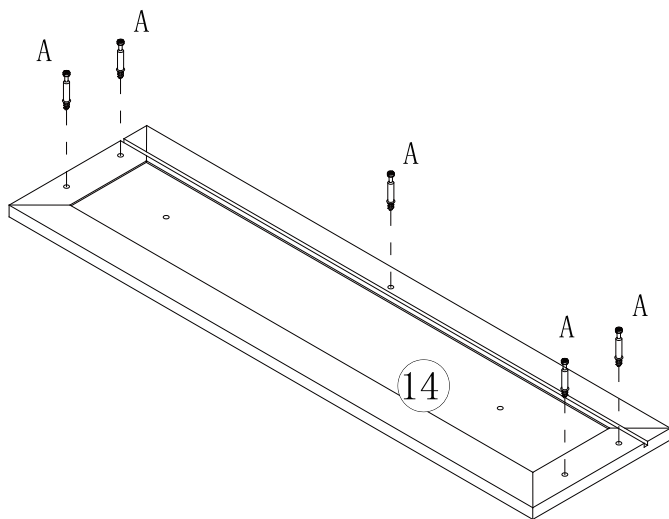

Ax25





Bx25

X5


Assembly Instructions

STEP 24

REMARK:

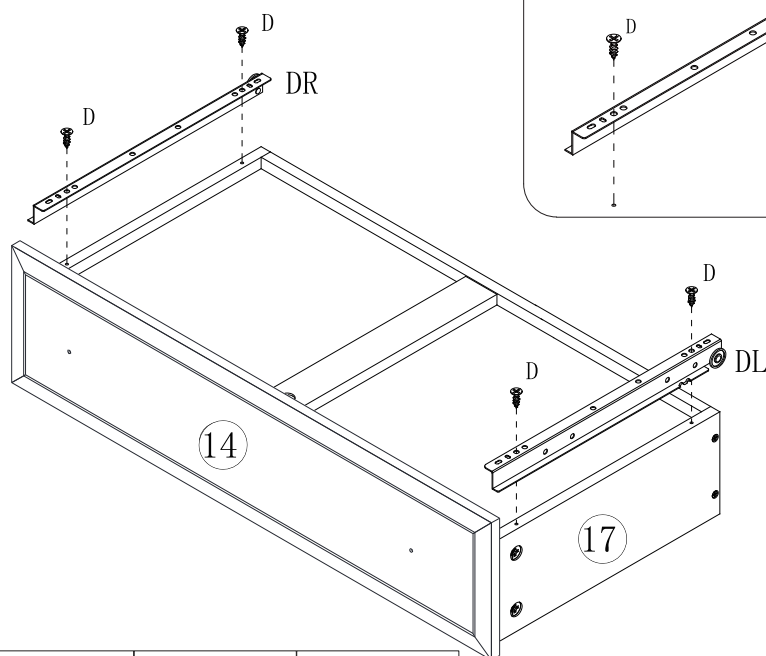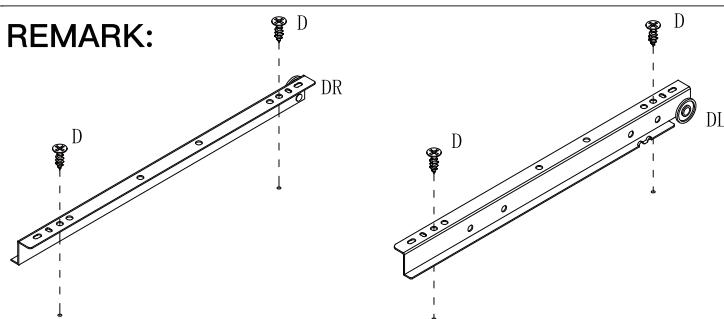

Dx20




DLx5



DRx5

X5

STEP 25

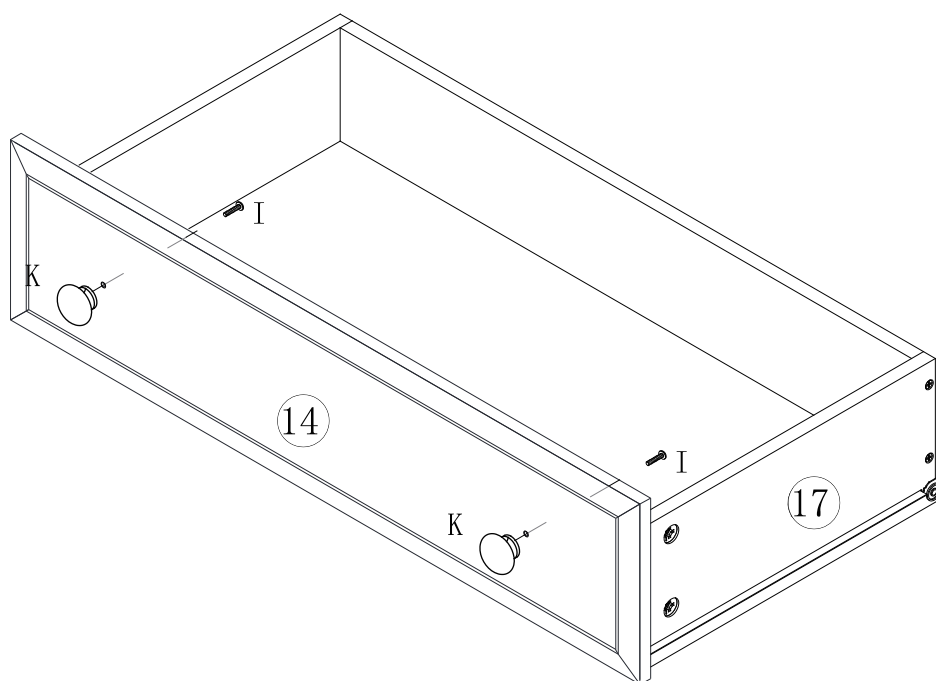

Kx10



Ix10

X5

Assembly Instructions

STEP 26

