



Start Furnishing Your Dream!

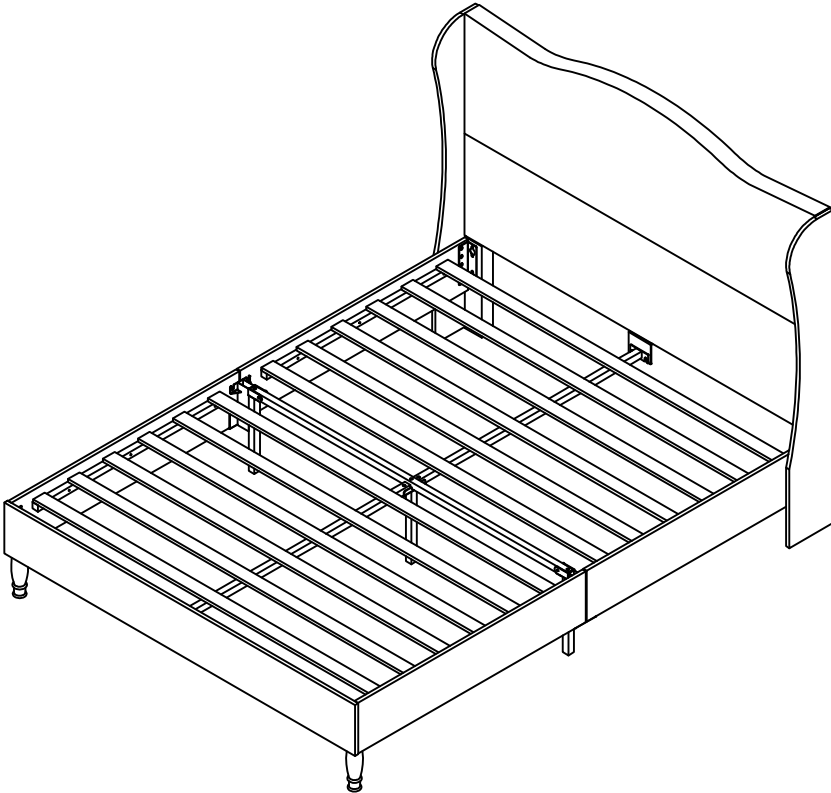








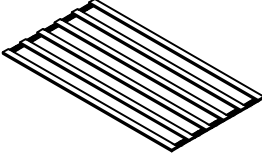
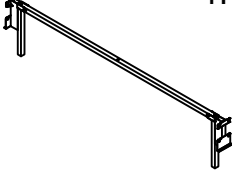
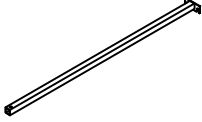





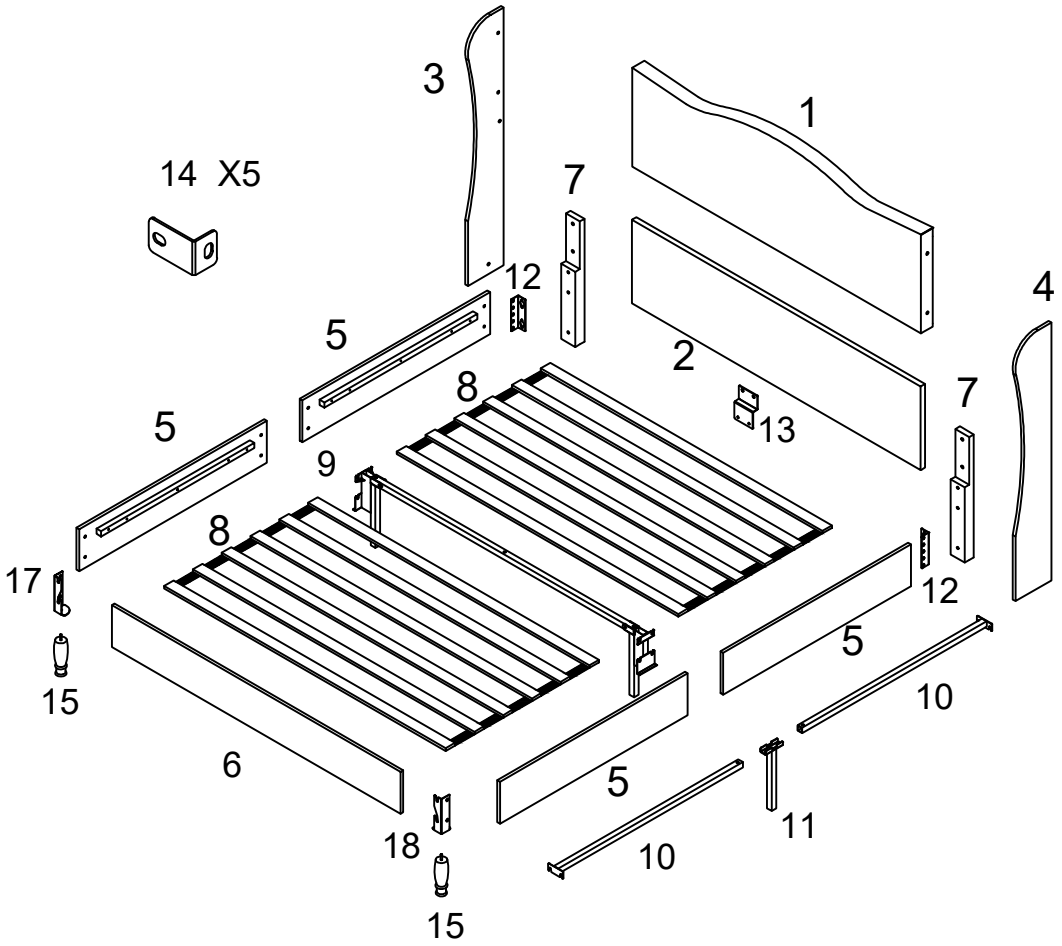

Please check that you have all the parts listed before you start assembling, if you do find that something is missing, do not continue assembly. Please contact us immediately.

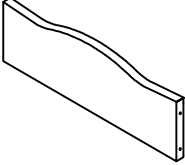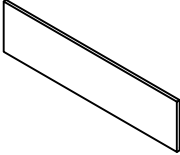NOTE: Please do not completely tighten all the hardware until the entire assembly is complete!


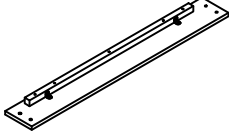
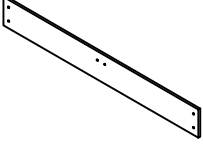




Part list




Part list

1		1PC	2		1PC	3		1PC			
4		1PC	5		4PCS	6		1PC			
7		2PCS	8		2PCS	9		1PC			
10		2PCS	11		1PC	12		2PCS	13		1PC
14		5PCS	15		2PCS	17		1PC	18		1PC

Hardware list


O 5PCS  M8 x 50mm	P 4PCS  M8 x 40mm	Q 4PCS  M8 x 35mm
R 11PCS  M8*25mm	S 23PCS  M8 x 18mm	T 8PCS  φ22*φ8.5
U 2PCS  M8		

1

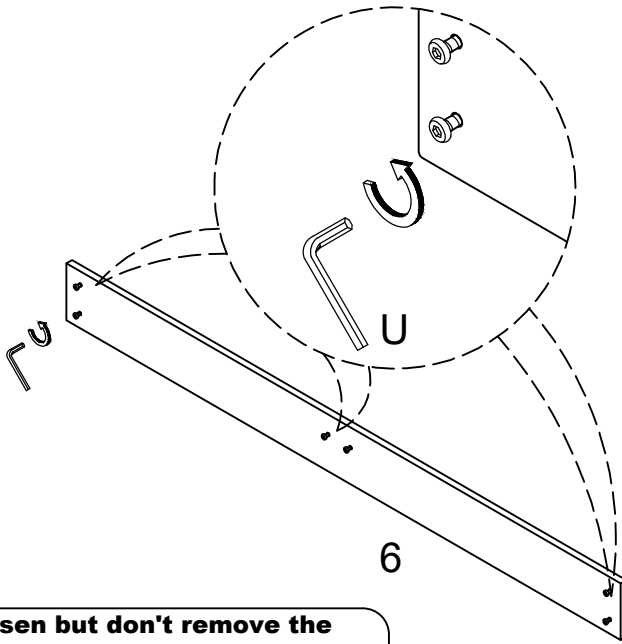


Loosen but don't remove the pre-installed screws.


2

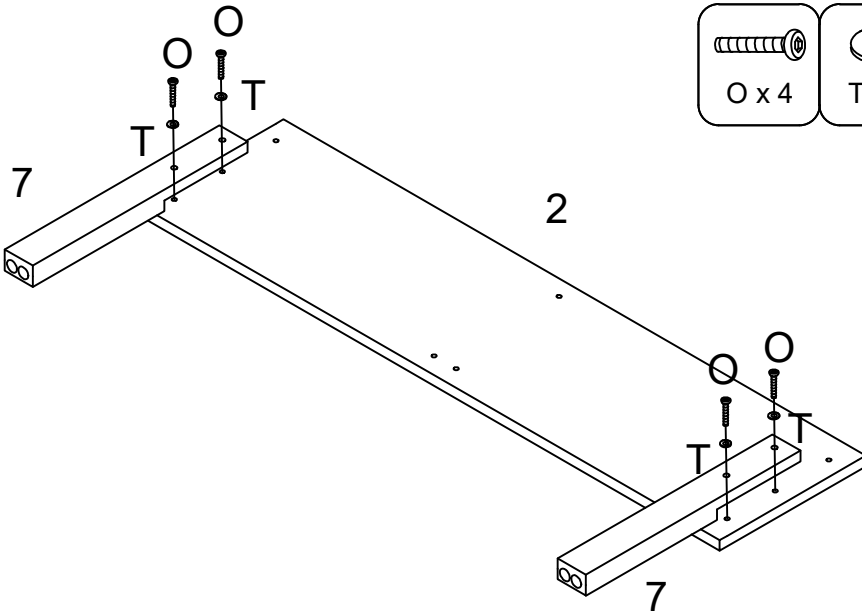


3

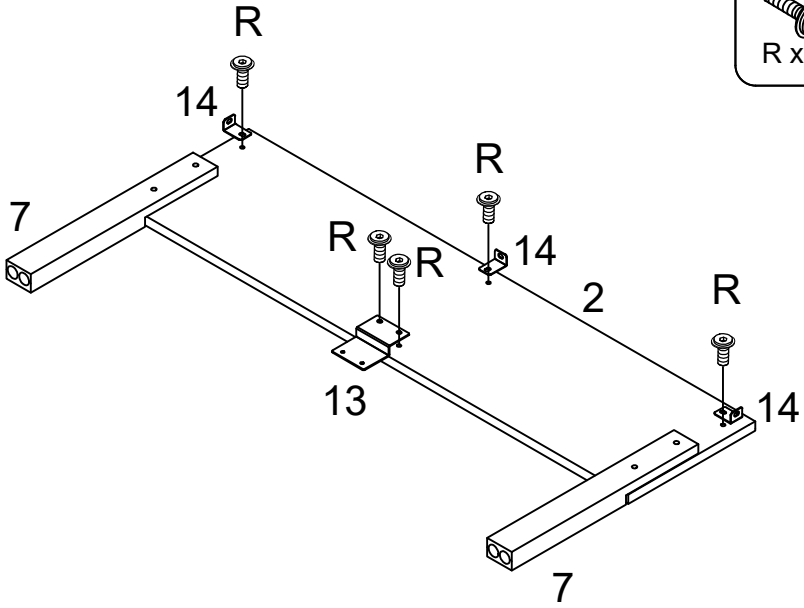


4

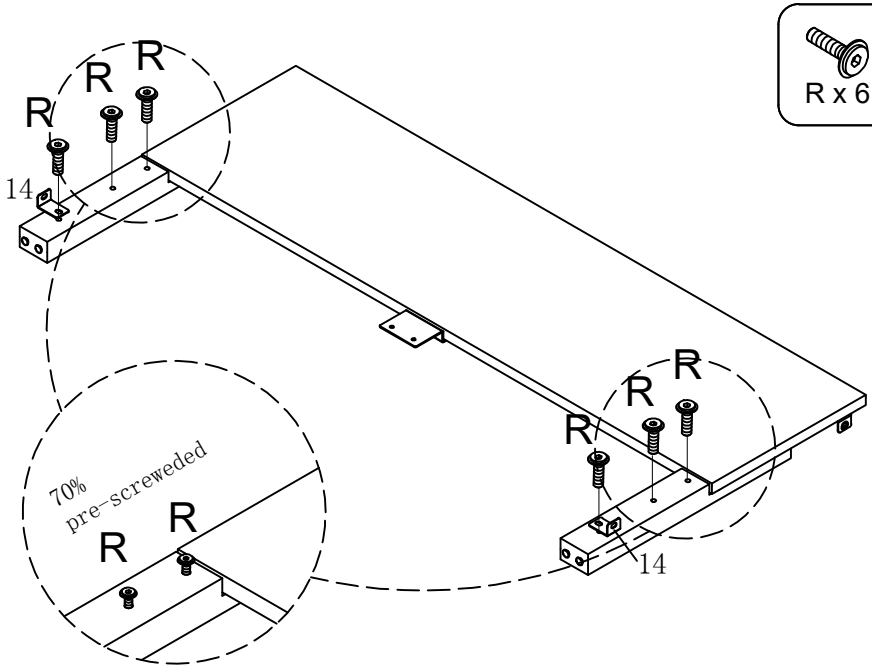

5

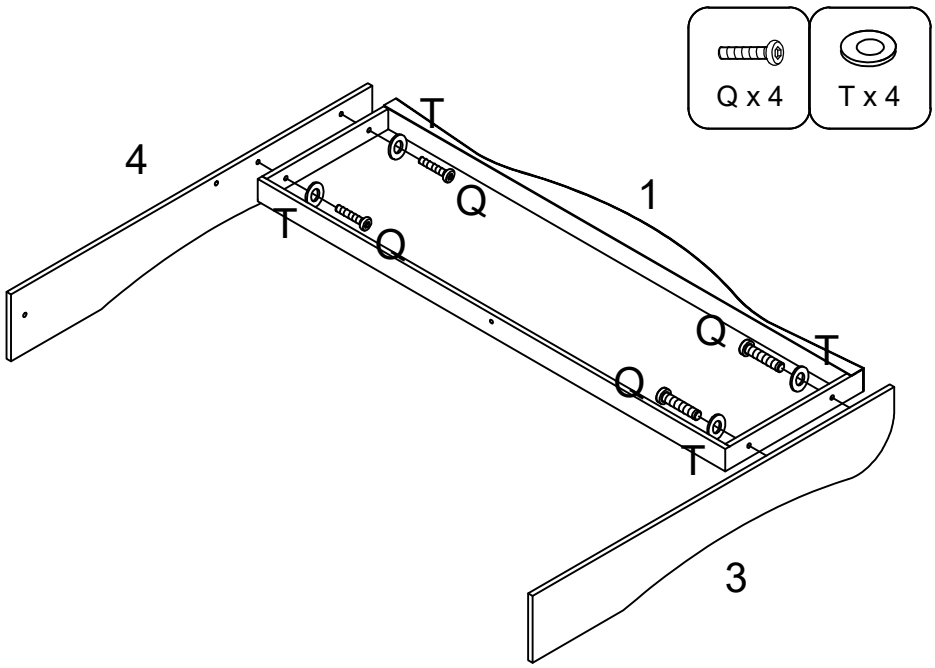


6

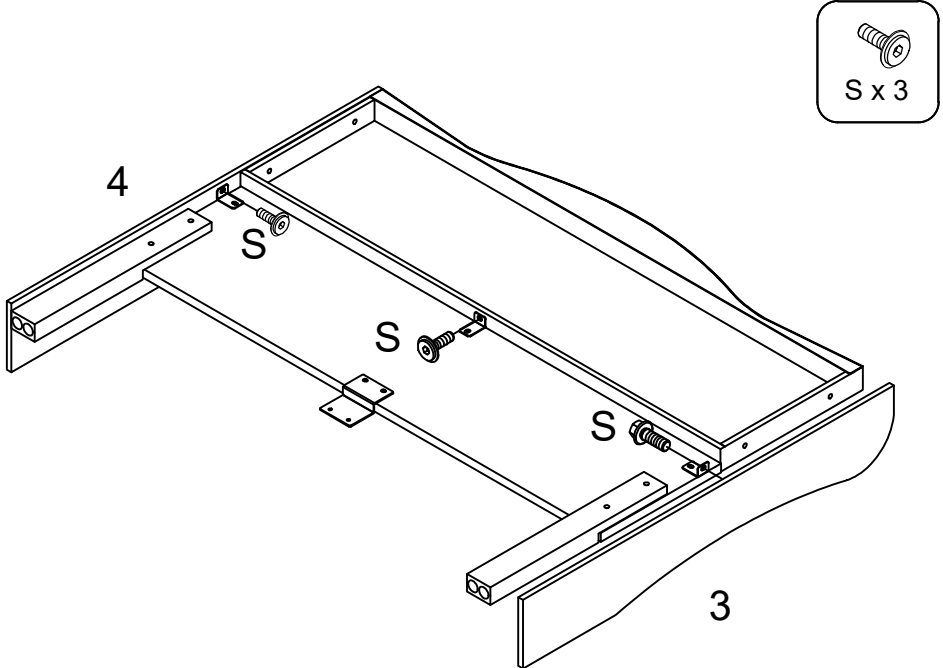


P.7

7

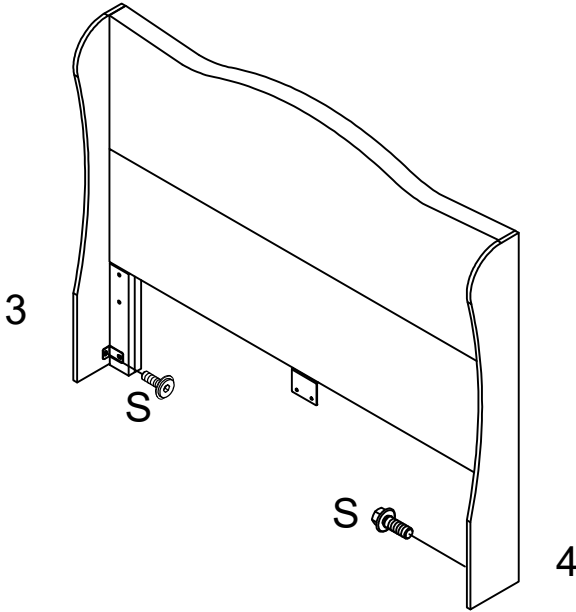


8

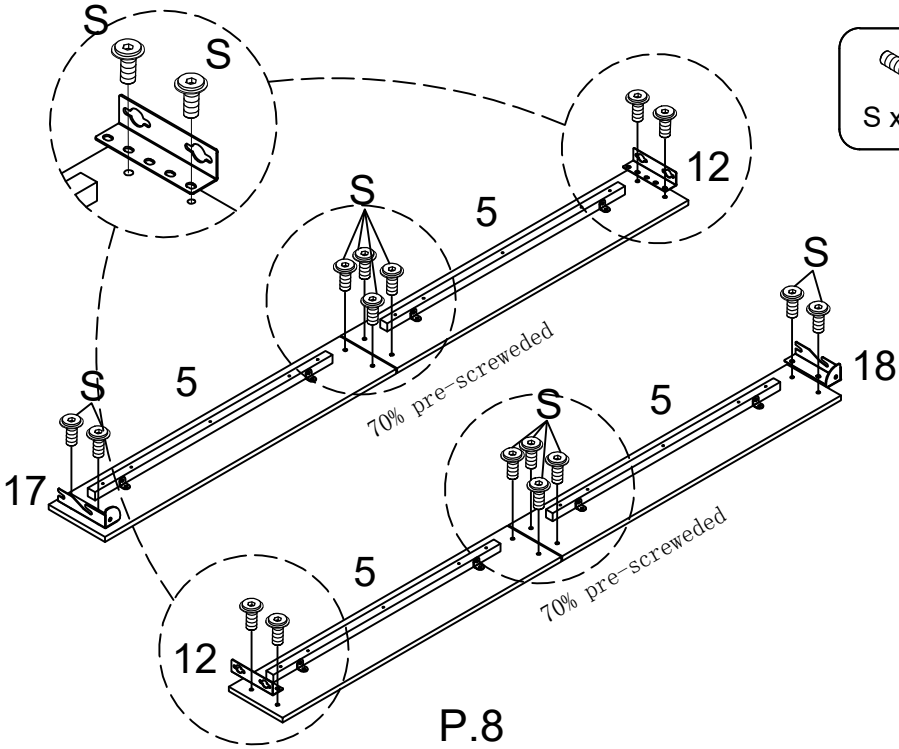


P.8


9

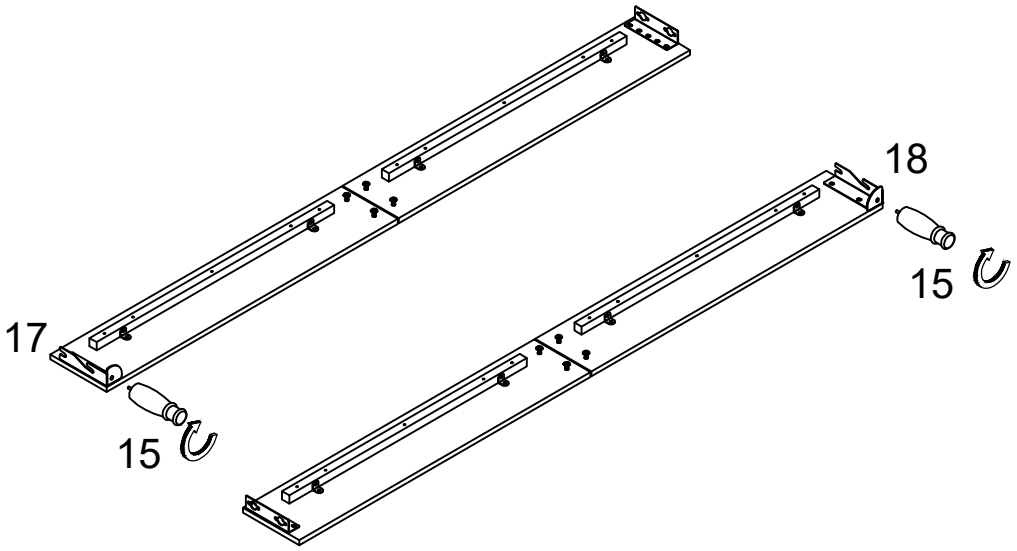


10

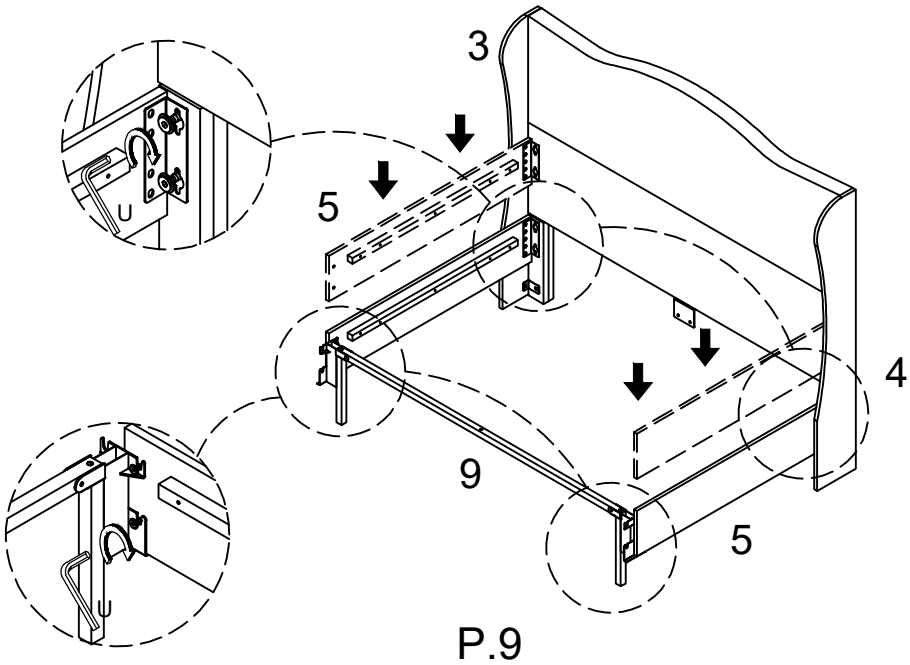



11

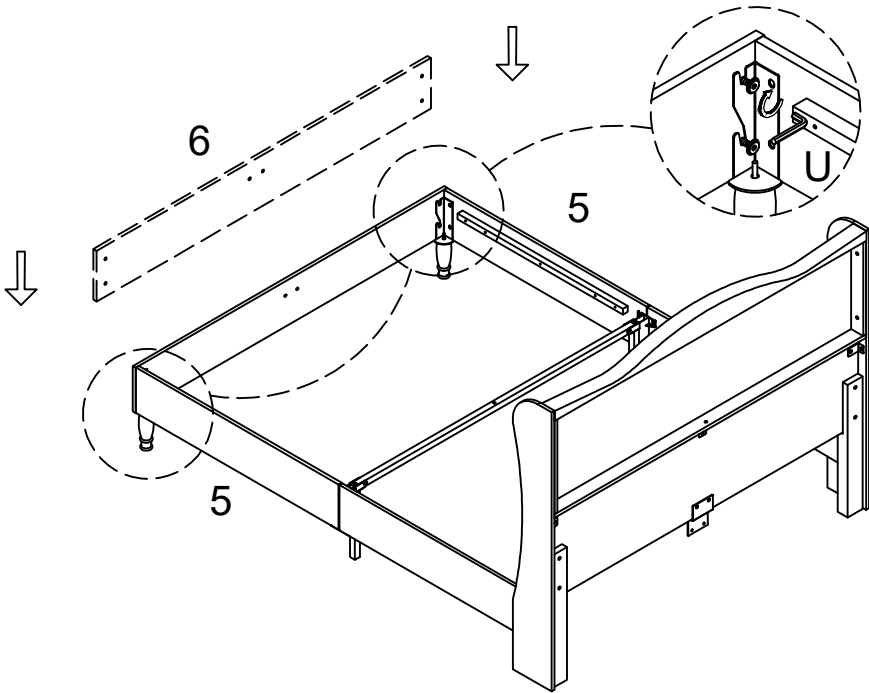



12

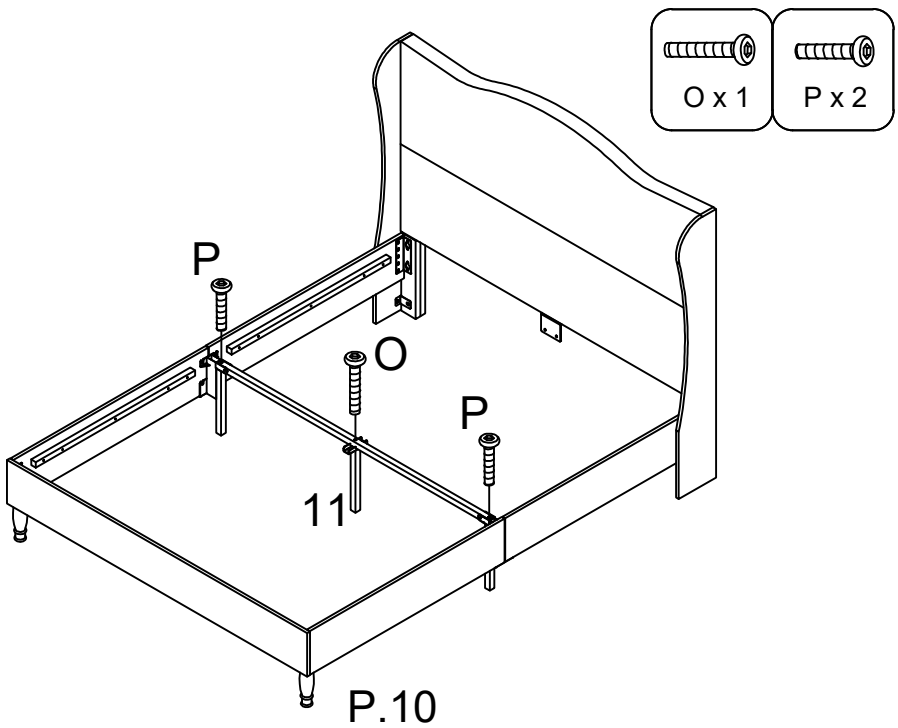


13

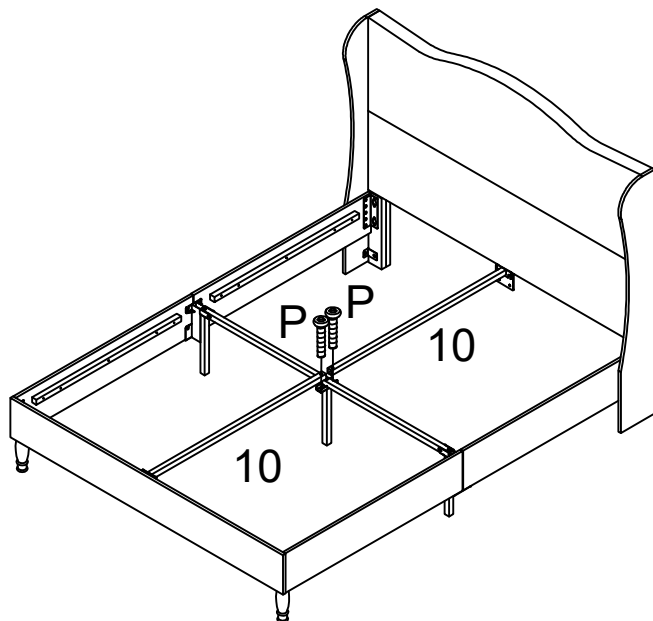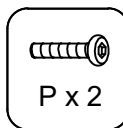


14

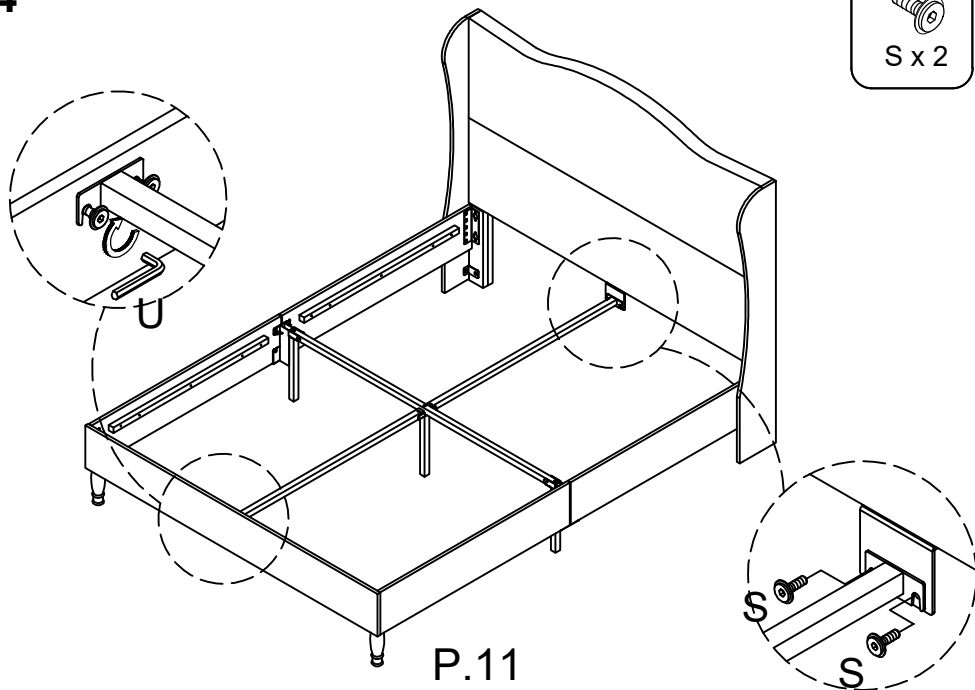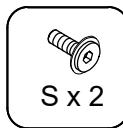

15

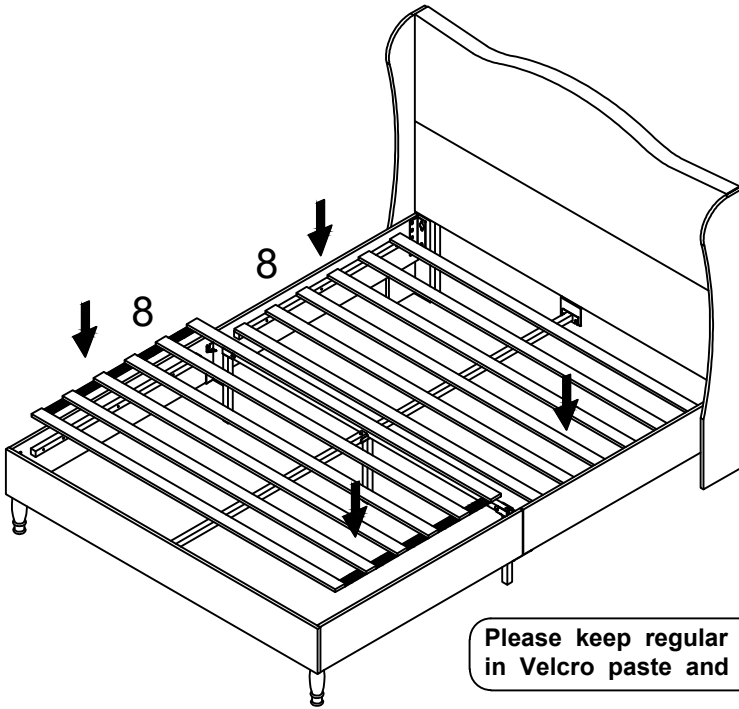

16

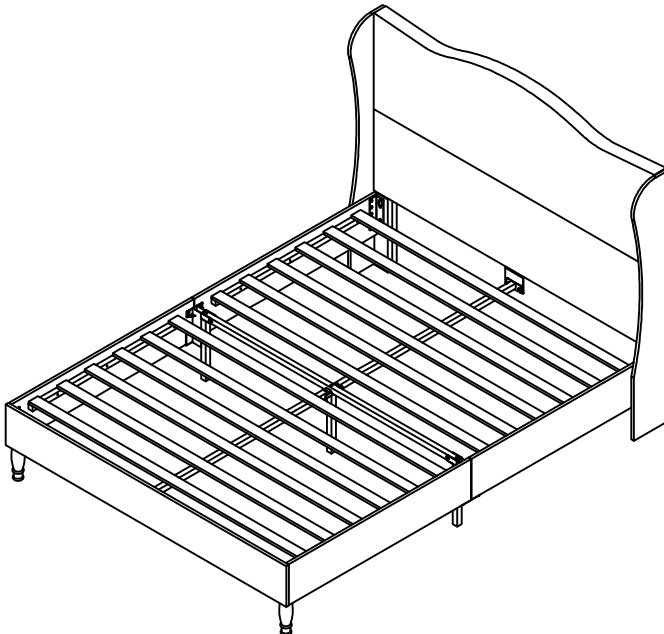

Final Assembly

P.12