


# ASSEMBLY INSTRUCTION

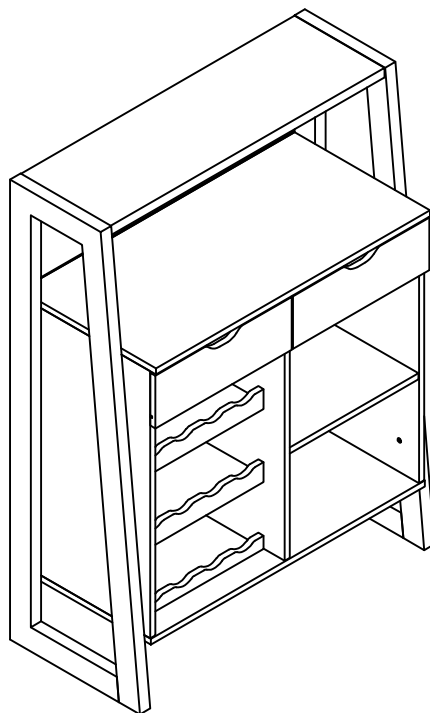


# ASSEMBLY INSTRUCTION

## **PLEASE READ BEFORE ASSEMBLING!**

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.


Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

Tip #3: Read manual before assembling, it helps!

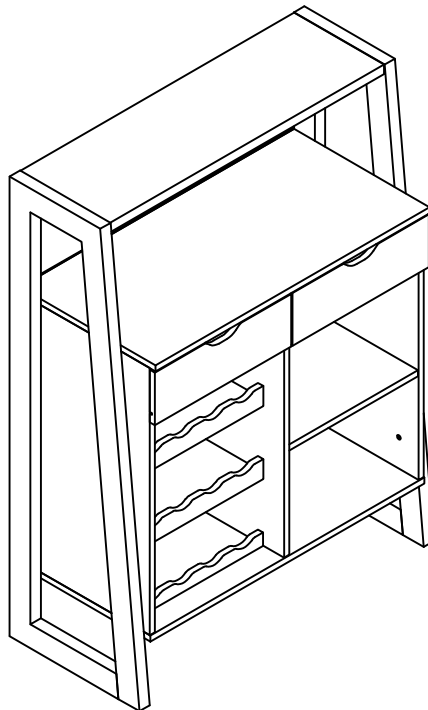








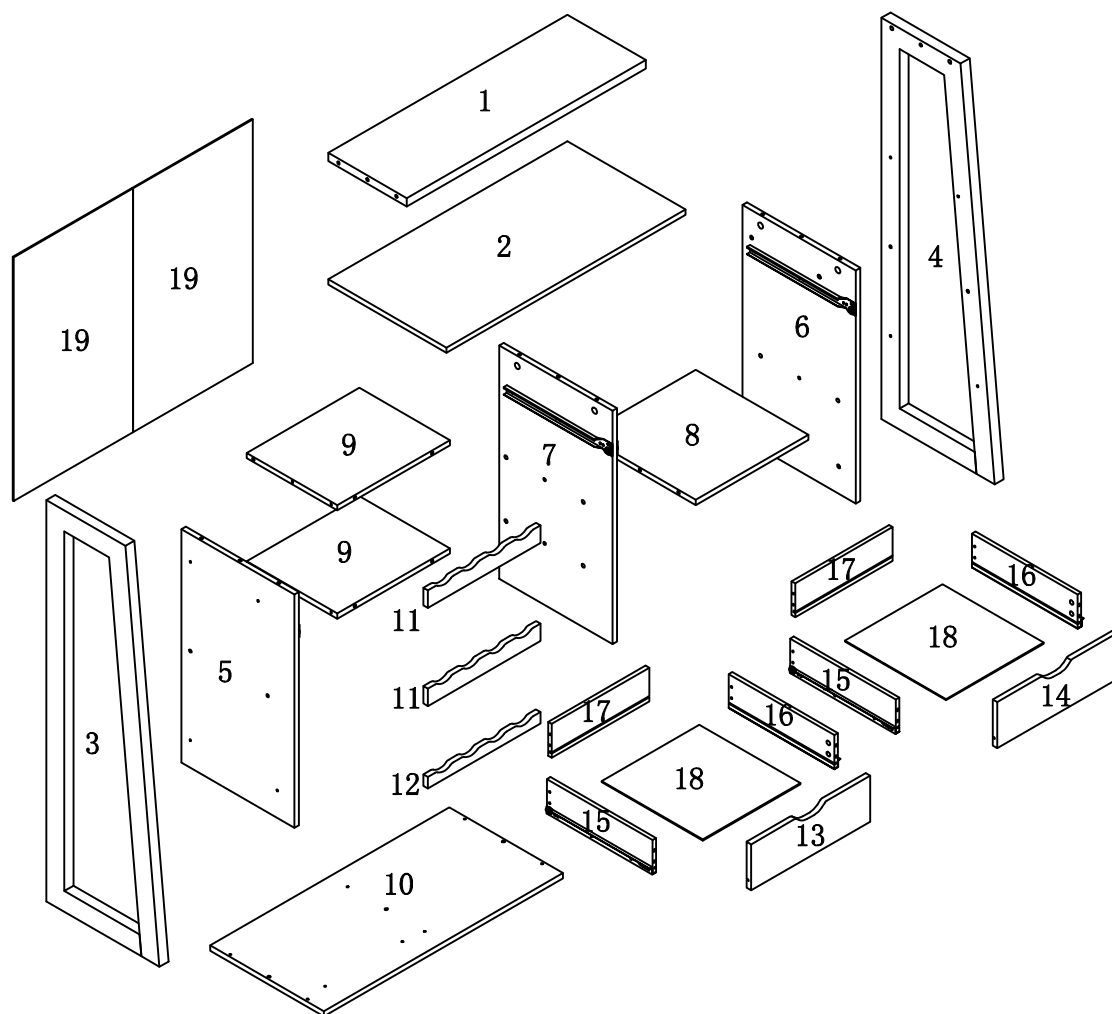












# PARTS IDENTIFICATION

---




(1)	1pc	(8)	1pc	(15)	2pcs
(2)	1pc	(9)	2pcs	(16)	2pcs
(3)	1pc	(10)	1pc	(17)	2pcs
(4)	1pc	(11)	2pcs	(18)	2pcs
(5)	1pc	(12)	1pc	(19)	2pcs
(6)	1pc	(13)	1pc		
(7)	1pc	(14)	1pc		

# HARDWARE IDENTIFICATION


A		L29	26pcs
B		Φ 15	26pcs
C		Φ 8 x 25	18pcs
D		Ø4 x 35	6pcs
E		Ø4 x 30	10pcs
F		Φ 22	4pcs
G		Φ 16	4pcs
H		Φ 8 x 40	9pcs
I		L20	30pcs
J		Φ 12	8pcs
K		L=250	8pcs
L		Ø4 x 16	3pcs
M		Ø8x40	9pcs
N		Φ12x12x1	1pc
O		Φ5x40	2pcs
P		Φ4x25	1pc
Q		197×5×1	1pc
R		M6 x 25	1pc
S		M6 x 25	8pcs
T		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

# ASSEMBLY INSTRUCTION





## HOW TO




Cam Bolt




Cam Lock

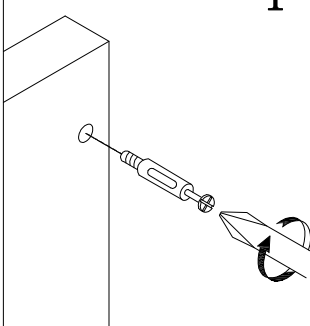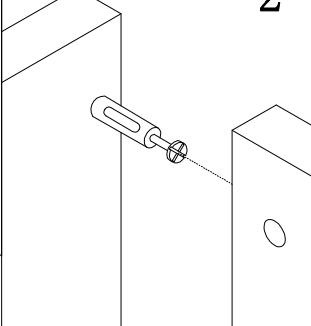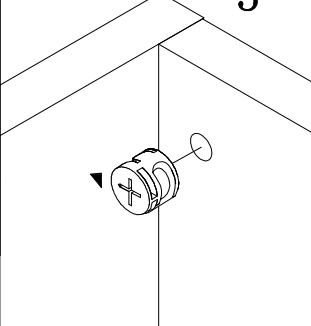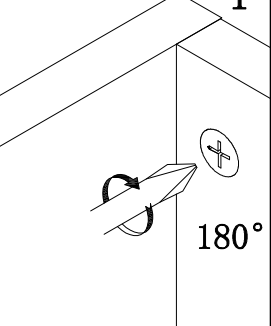1	2	3	4
			
1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.

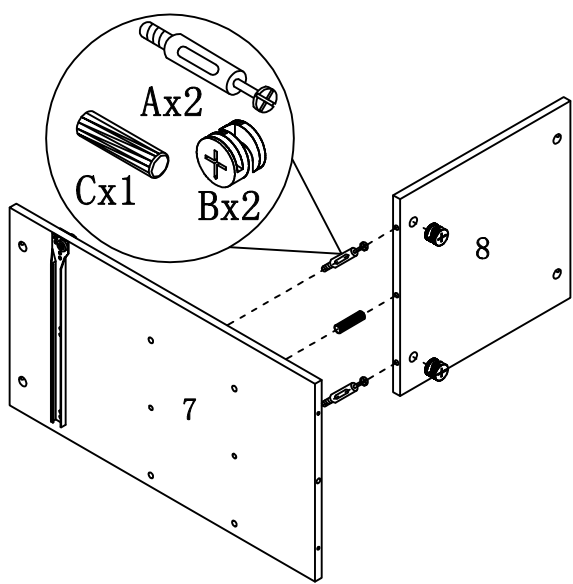

## STEP1


## STEP2

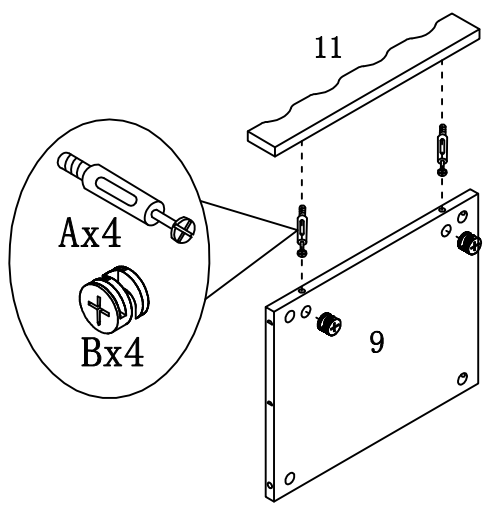

X2


# ASSEMBLY INSTRUCTION

---

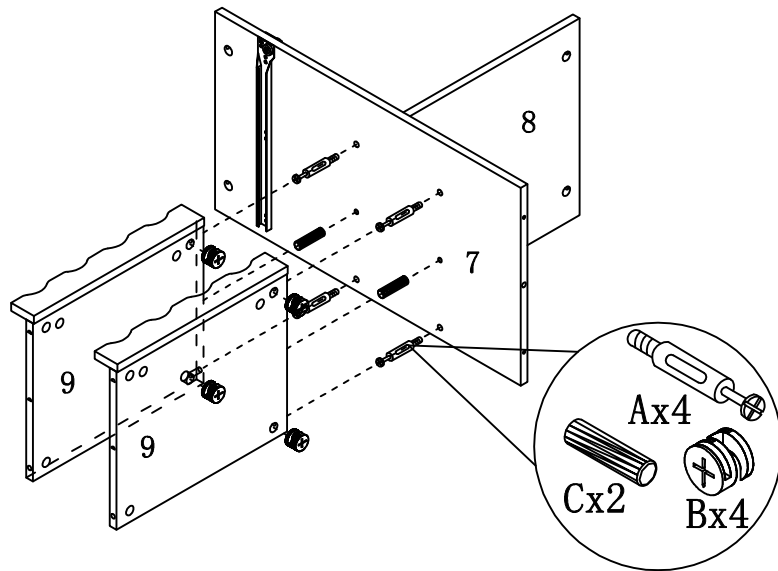


STEP3

STEP4

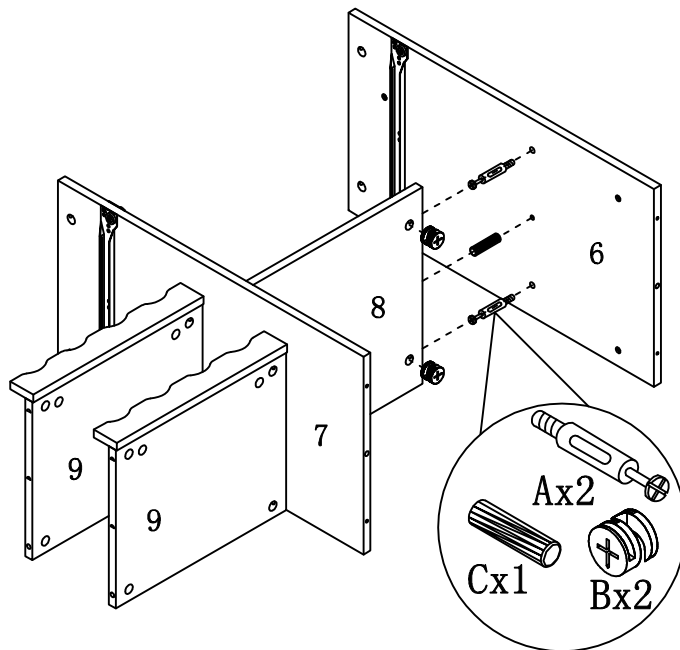


# ASSEMBLY INSTRUCTION

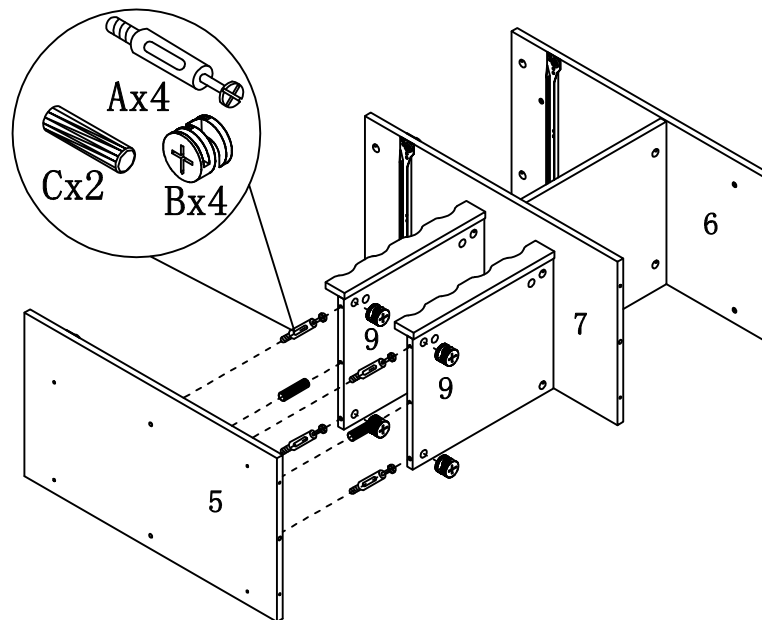


STEP5

STEP6

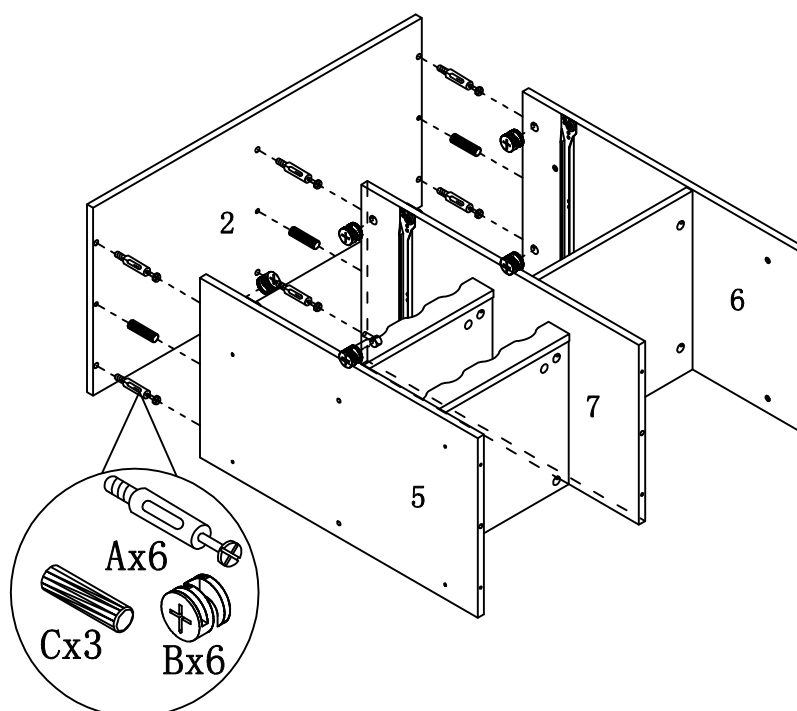


# ASSEMBLY INSTRUCTION

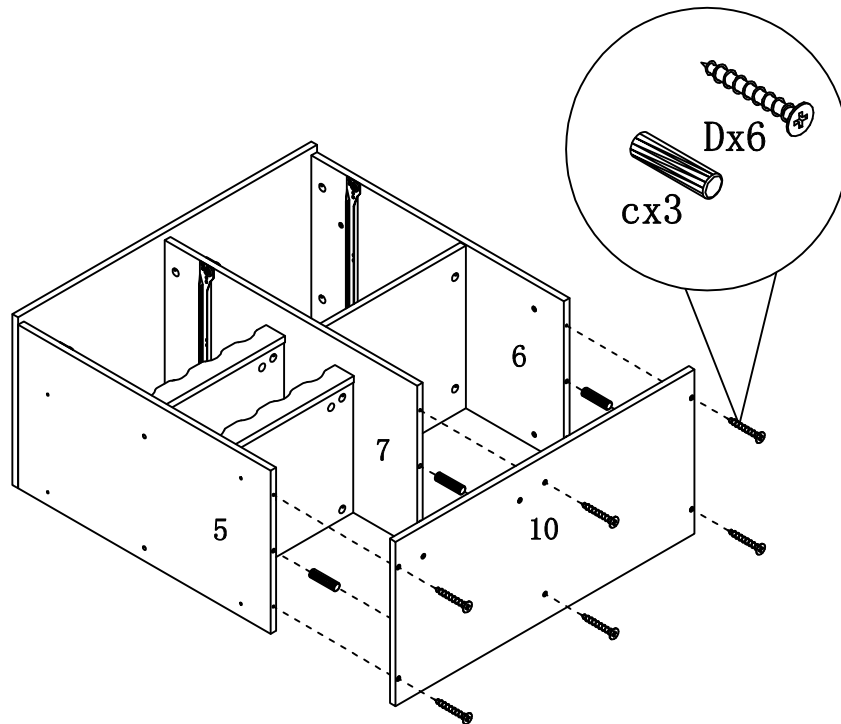


STEP7

STEP8

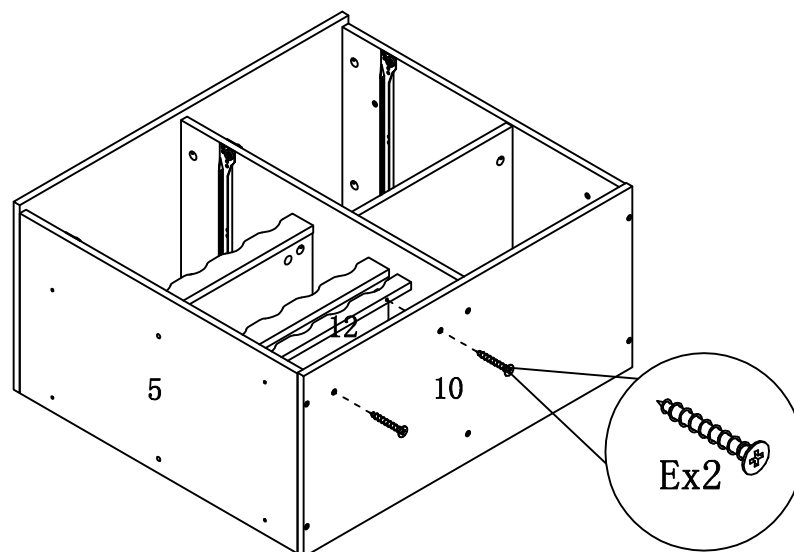




# ASSEMBLY INSTRUCTION

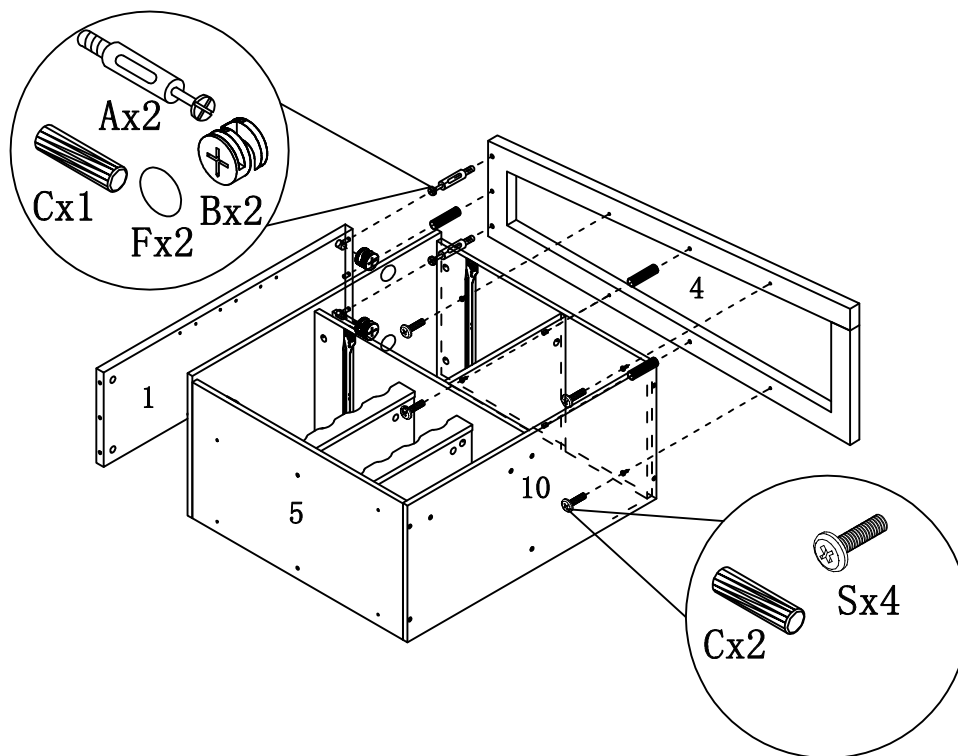


STEP9

STEP10

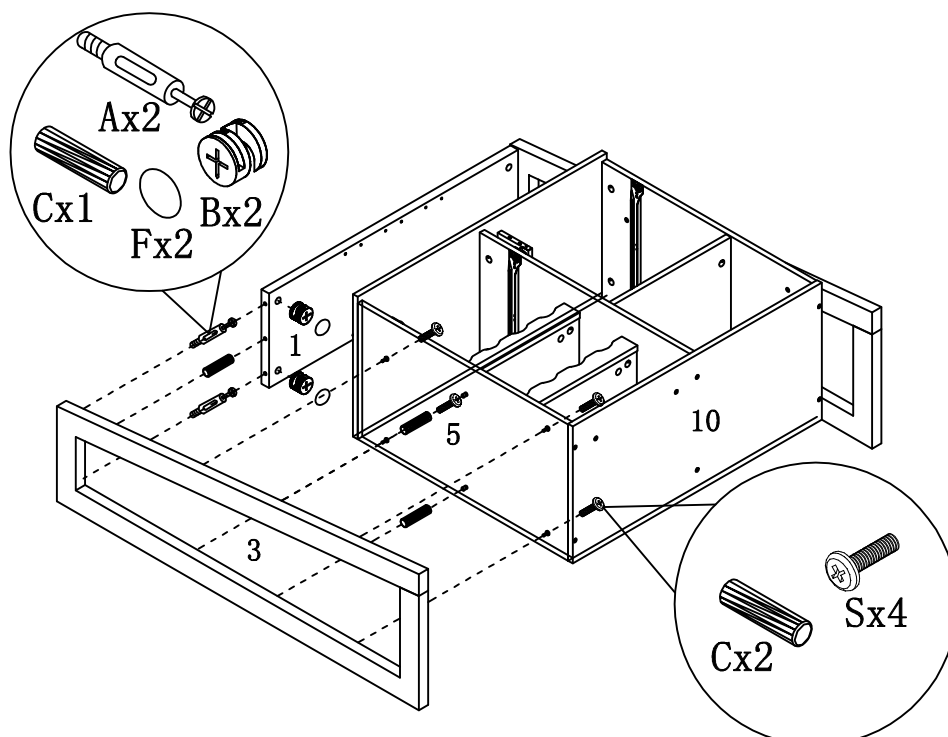


# ASSEMBLY INSTRUCTION

---

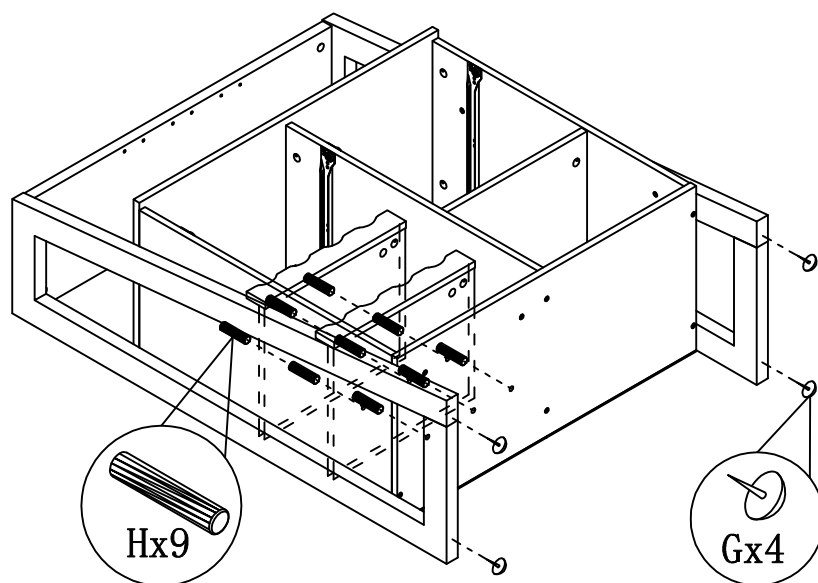


STEP11

STEP12

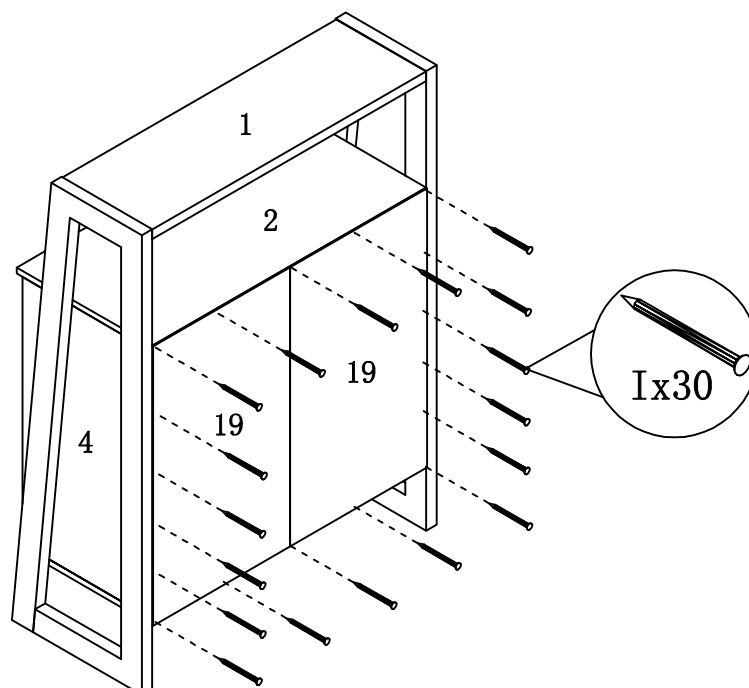


# ASSEMBLY INSTRUCTION

---

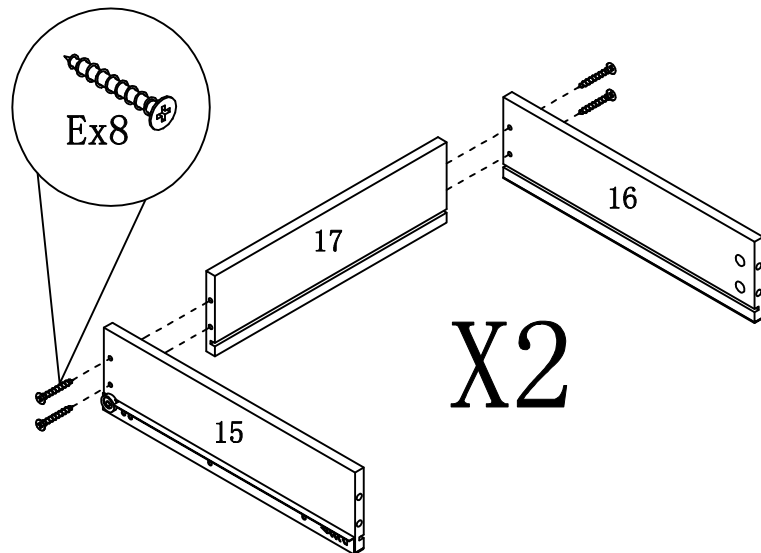


STEP13

STEP14

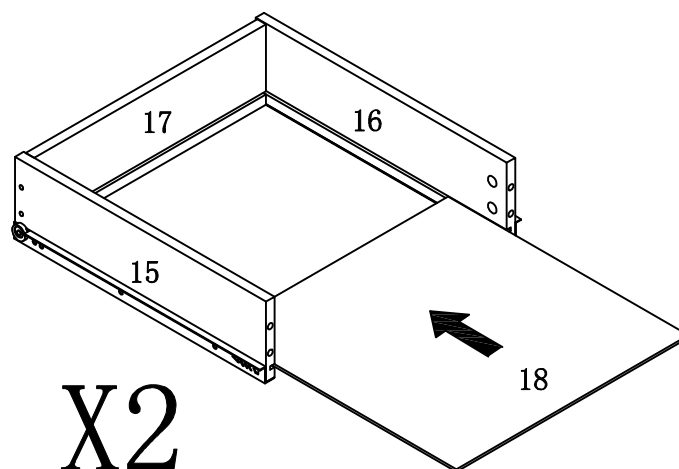


# ASSEMBLY INSTRUCTION

---

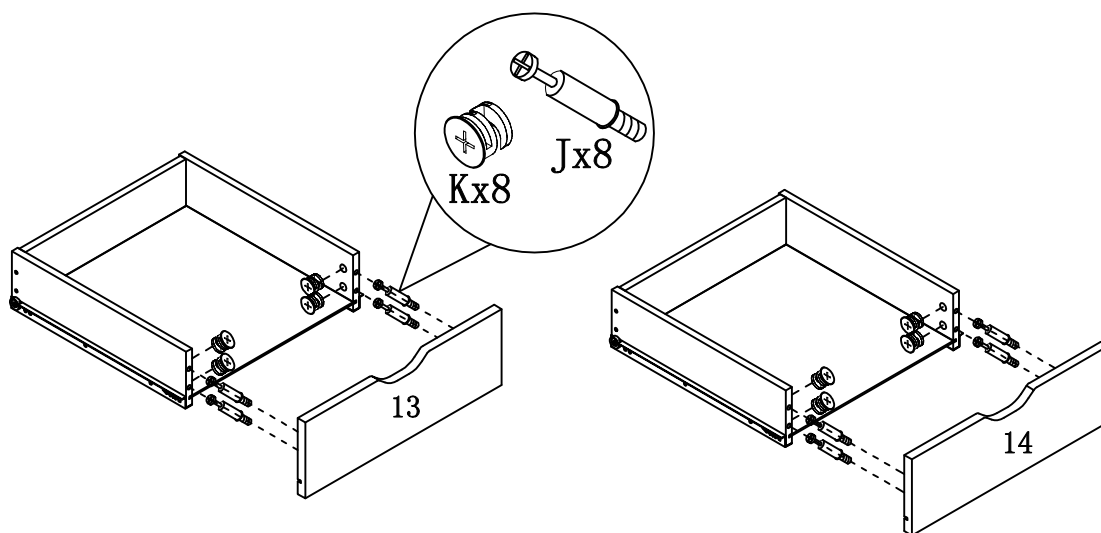


STEP15

STEP16

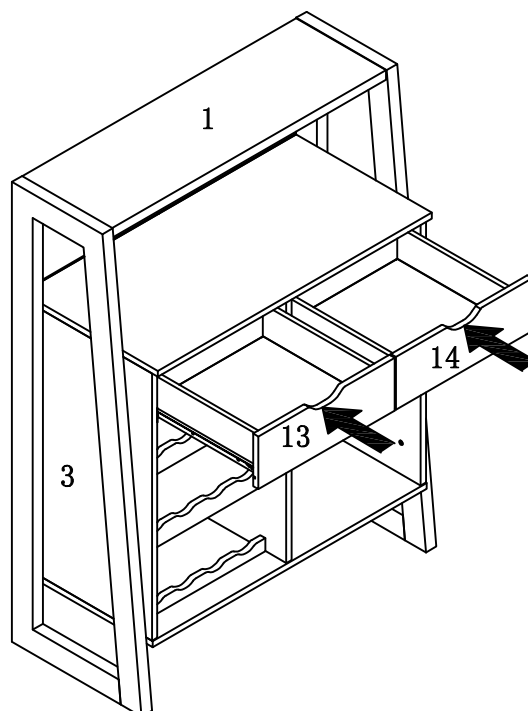


# ASSEMBLY INSTRUCTION

---

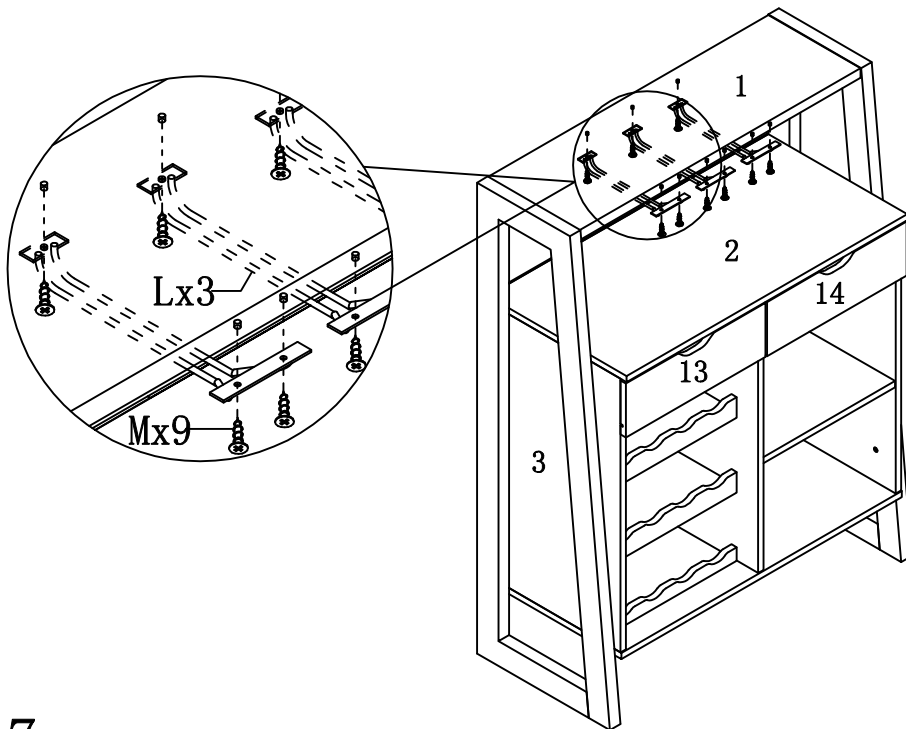


STEP17

STEP18

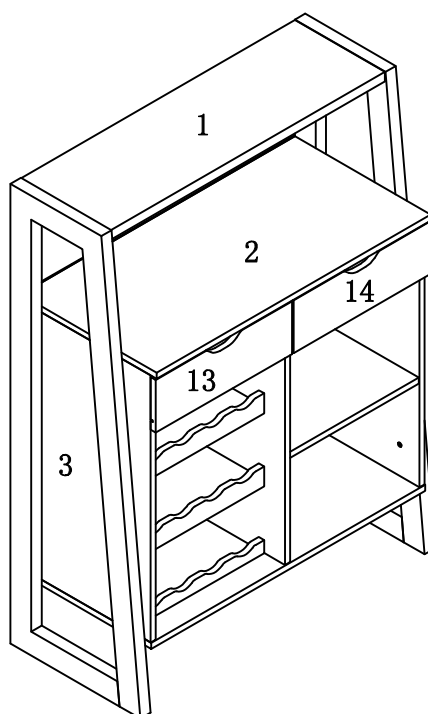

# ANTI-TIPPING STRAP INSTRUCTION

## HARDWARE (INCLUDED) :



DRYWALL ANCHOR  $\phi 8 \times 40$  X 1PC



METAL BRACKETS  $12 \times 12 \times 1$  X 2PCS



DRYWALL SCREW  $\phi 5 \times 40$  X 1PC




STRAP  $197 \times 5 \times 1$  X 1PC



FLATHEAD SCREW  $\phi 4 \times 25$  X 1PC

## TOOLS NEEDED ( NOT INCLUDED) :




DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

### STEP 1

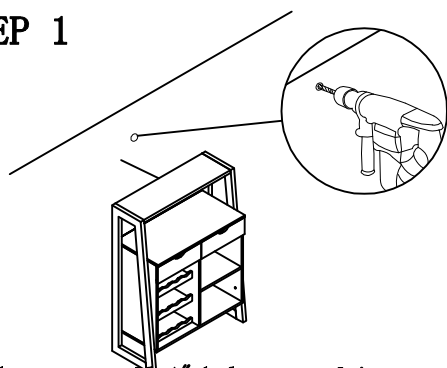


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

### STEP 2

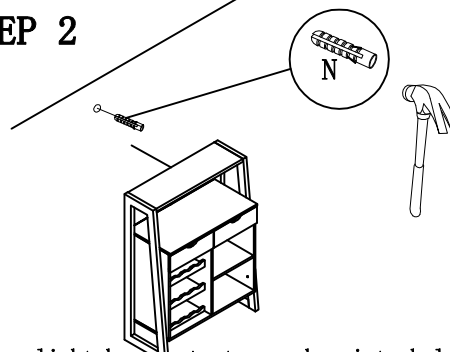


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

### STEP 3

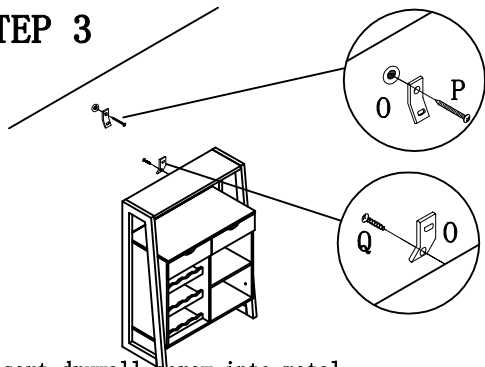

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

### STEP 4

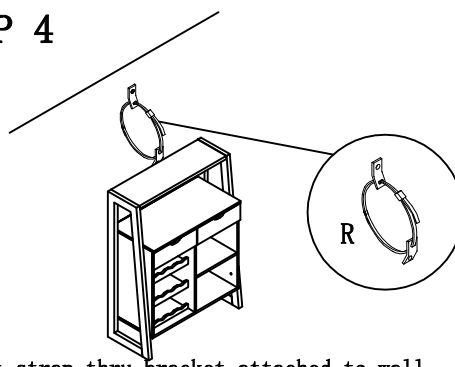

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
  2. pull lightly til strap stops.
- Assembly is complete.