





ASSEMBLY INSTRUCTION

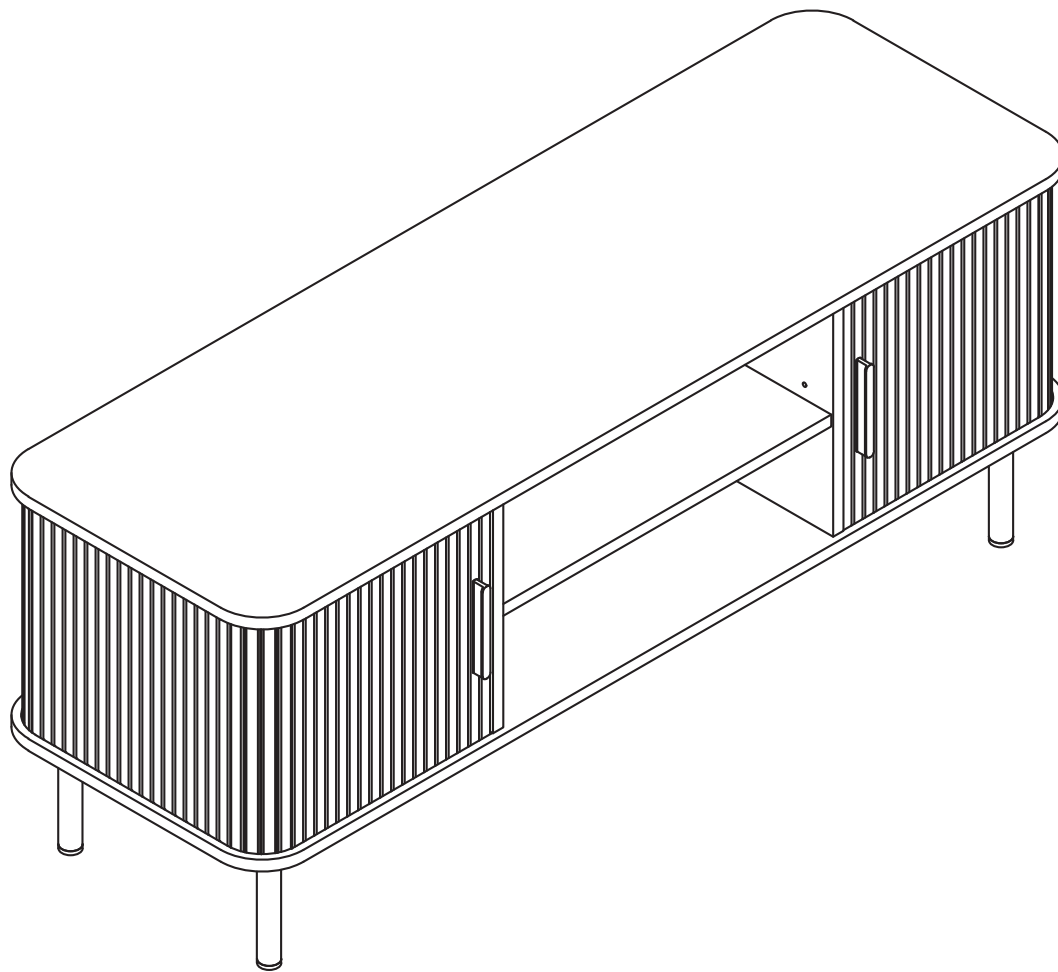

If you need any help during assembly, please contact us at **cs@wellzone.life.**
Sharing a video and a brief description of where you're stuck will help us assist you better.

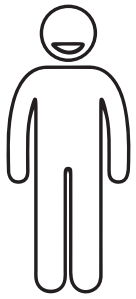

× 2

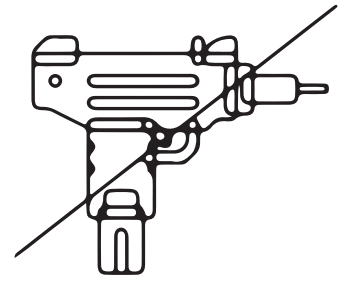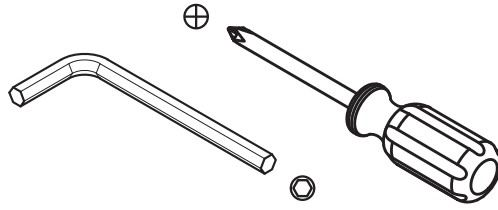

Before You Begin

Two people are recommended for the assembly.


Use the included tools.

If using a power tool, use low power and torque.



Installation of Eccentric Unit




Bolt

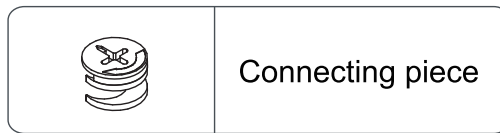


Connecting piece

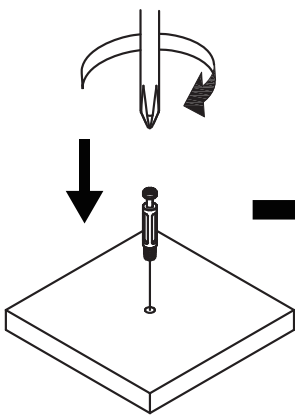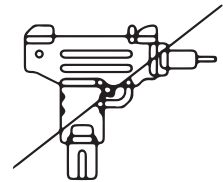


1

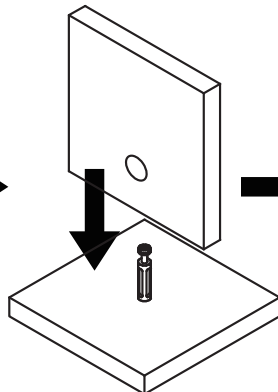




2

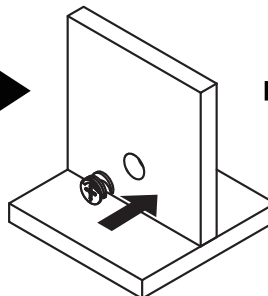


3

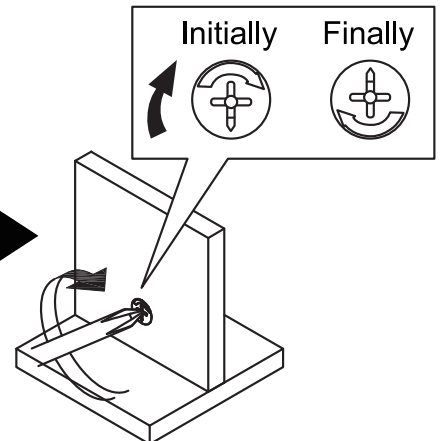

4

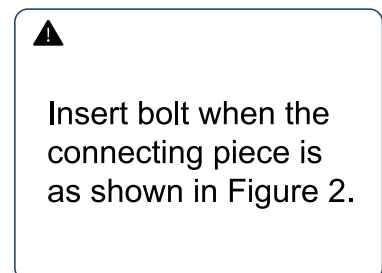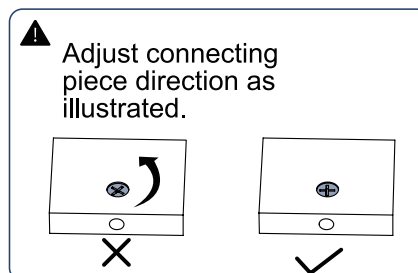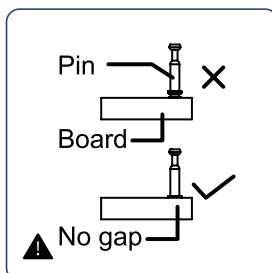

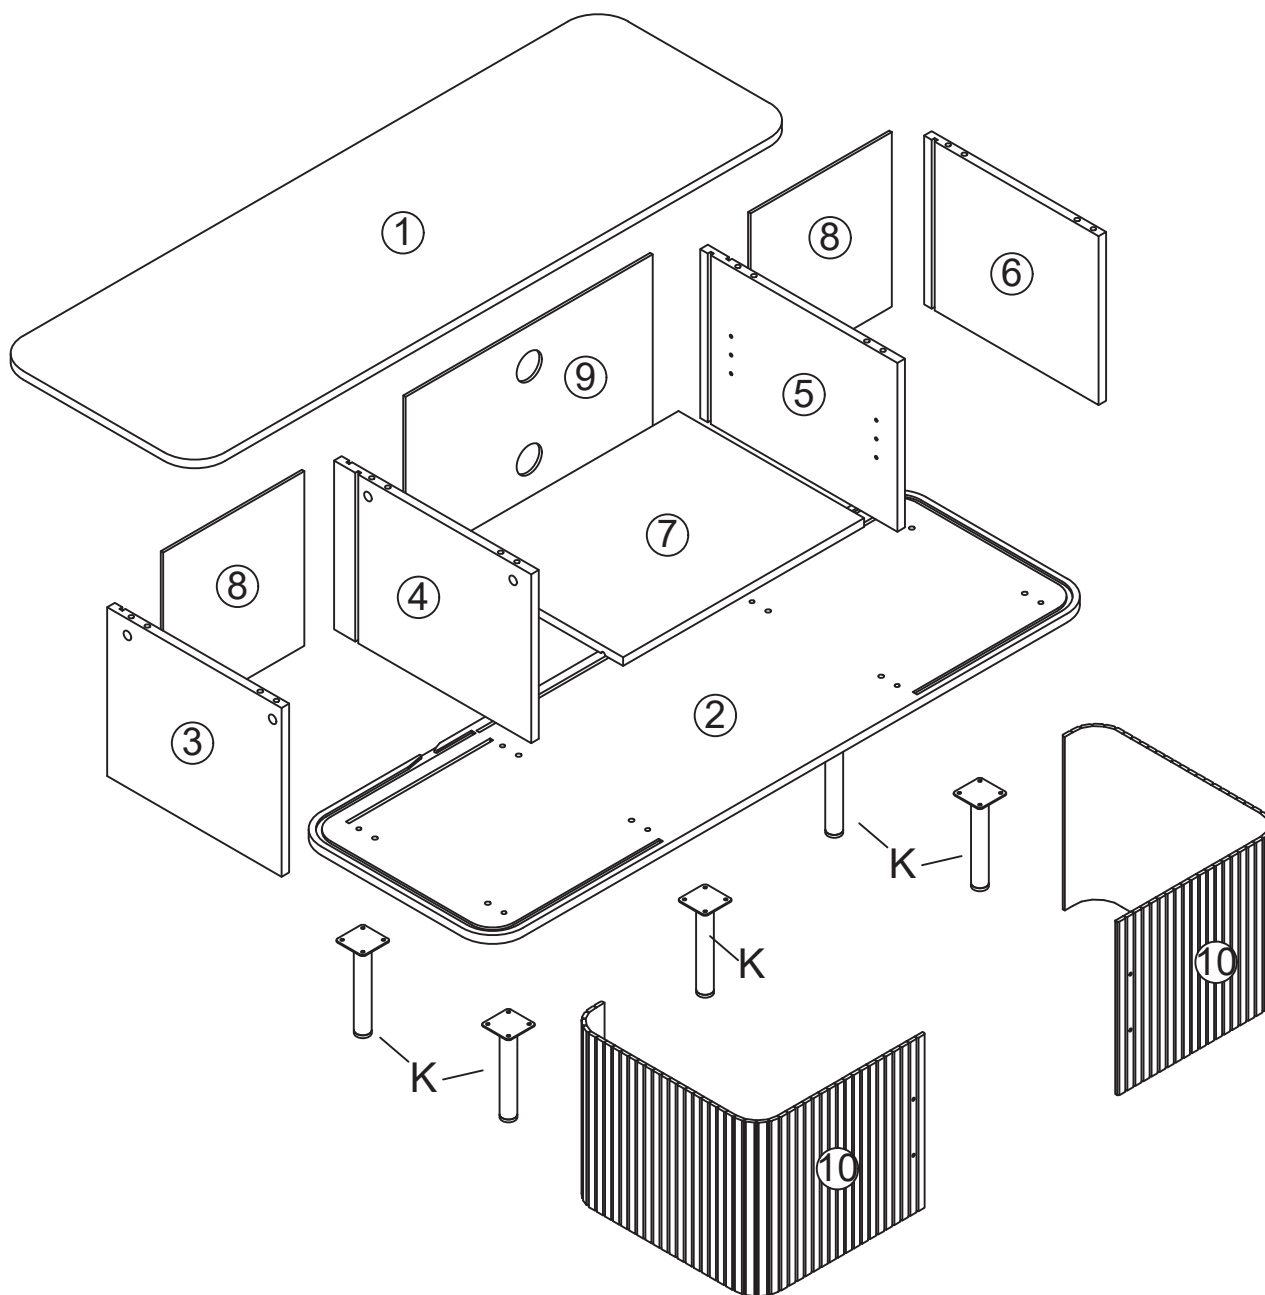


Package Contents: Hardware


Please count and verify all parts before assembly.

A × 8+1	B × 8+1	C × 16+2	D × 8+1	E × 20+2	F × 4+1	G × 2	H × 4	I × 12+2
								
Ø15X9.5mm	Ø6.5X35mm	Ø8X30mm	Ø6.3X50mm	M4X12mm	Ø4X9mm	115X11X17mm	Ø5X16mm	Ø3X14mm
J × 8+1	K × 5	L × 1	M × 1					
								
Ø21mm								

1

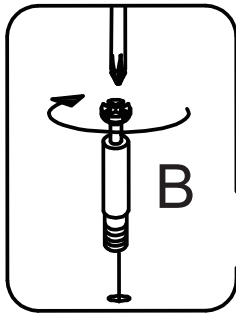

Make sure to screw the bolt in vertically.

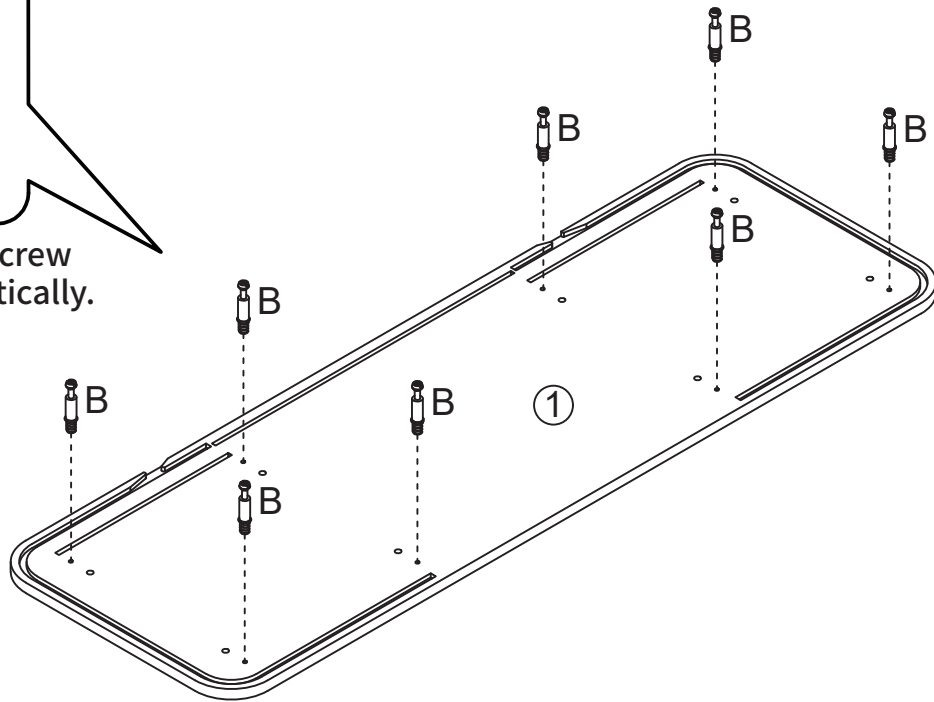


B × 8

M × 1



Twist Bolts (B) into Board (1).

2

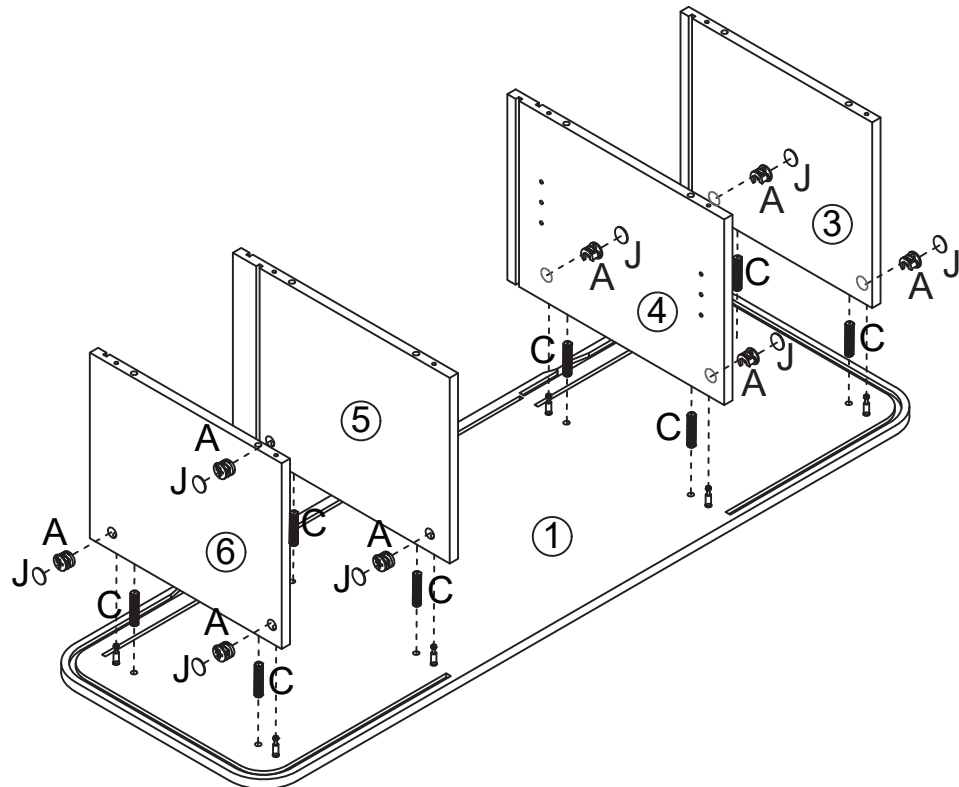

M × 1



A × 8


C × 8

J × 8




Insert Dowels (C) into the holes in Board (1).
Attach Boards (3) (4) (5) (6) to Board (1).
Twist Cam Locks (A) into the holes as shown to secure.
Attach (J) to cover (A).

3

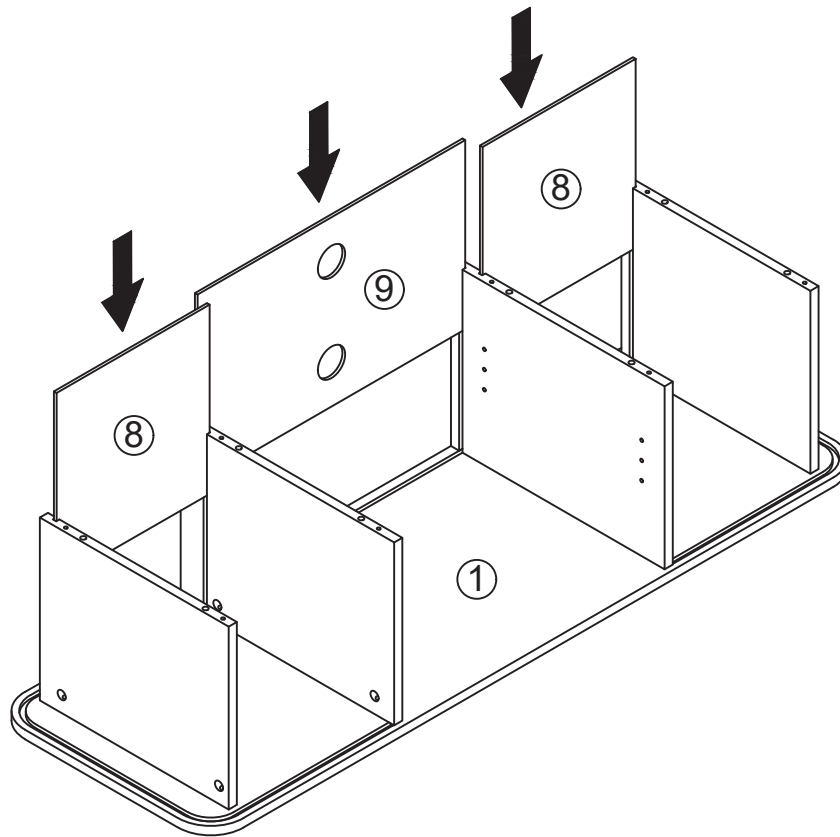

Insert Boards (8) (9) into the grooves in Boards (1) (3) (4) (5) (6).

4

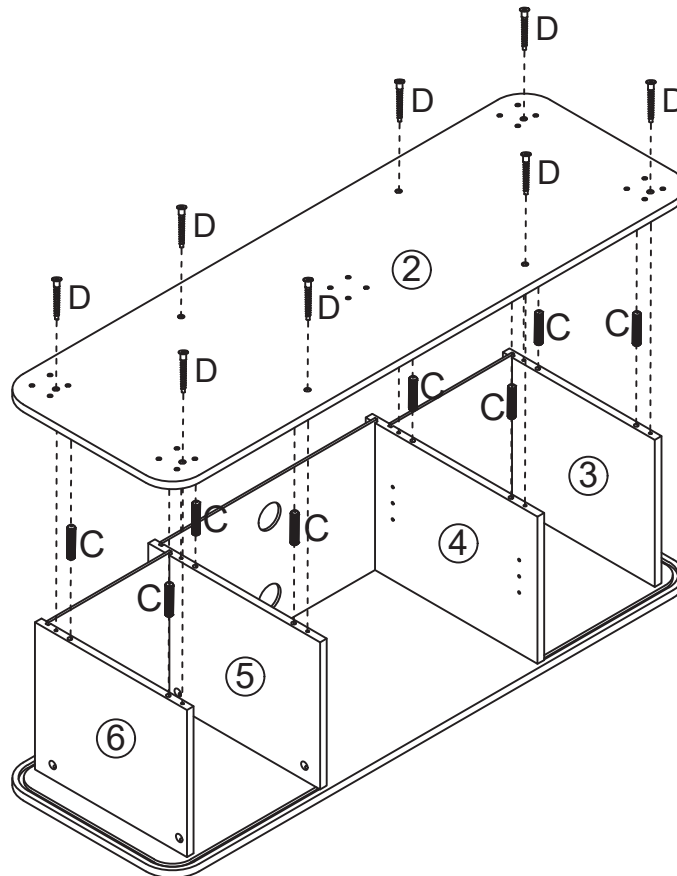

Insert Dowels (C) into the holes in Boards (3) (4) (5) (6).
Attach these boards to Board (2).
Twist Screws (D) as shown to secure Board (2).


D × 8

C × 8

L × 1



5

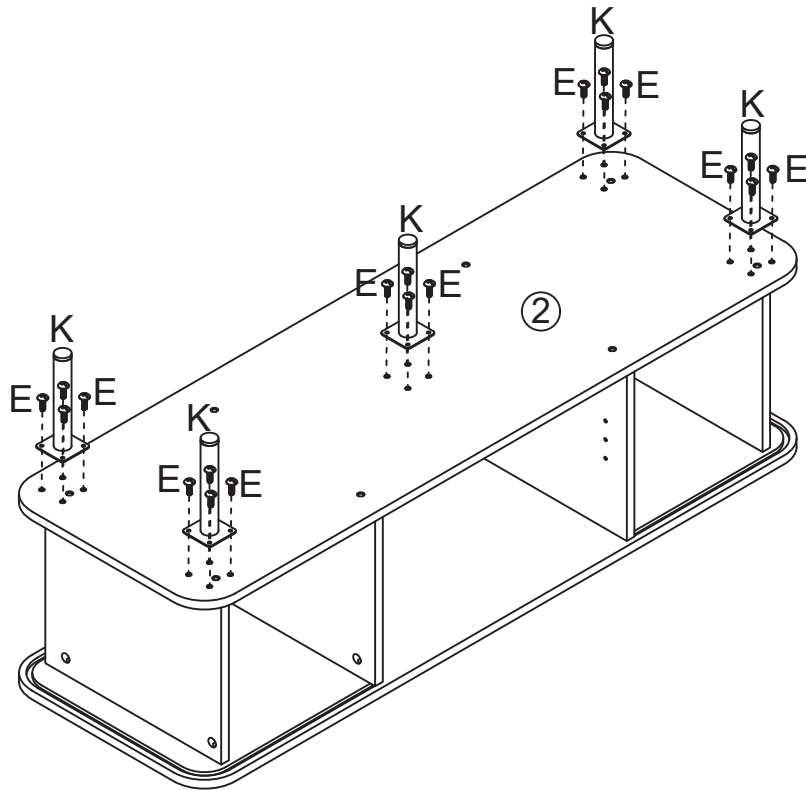

M × 1



E × 20


K × 5



Twist Screws (E) to connect Legs (K) and Board (2).

Note: The adjustable foot pads allow height adjustment on uneven floors.

6

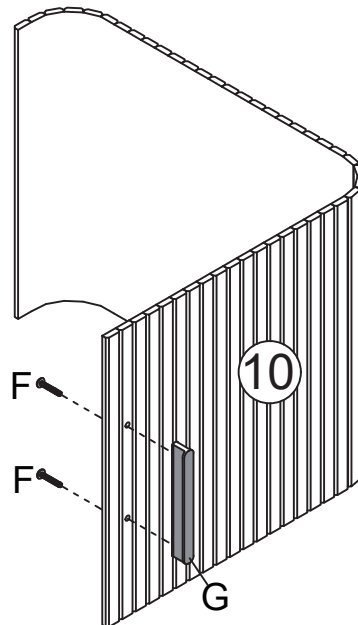

X2


F × 4

G × 2




Twist Screws (F) to connect Handle (G) to Board (10).

7

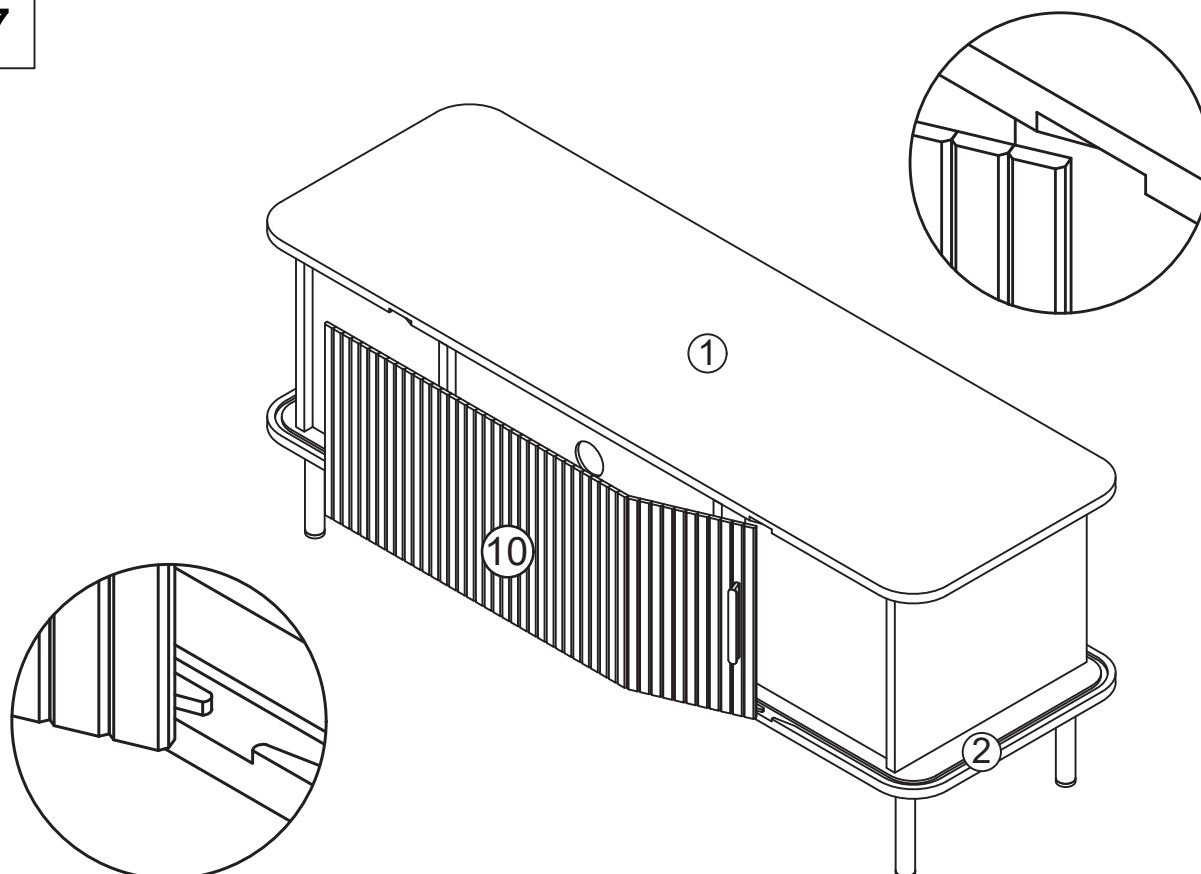


Insert Board (10) into the tracks in Boards (1) (2).
Slide Board (10) from left to right.

8

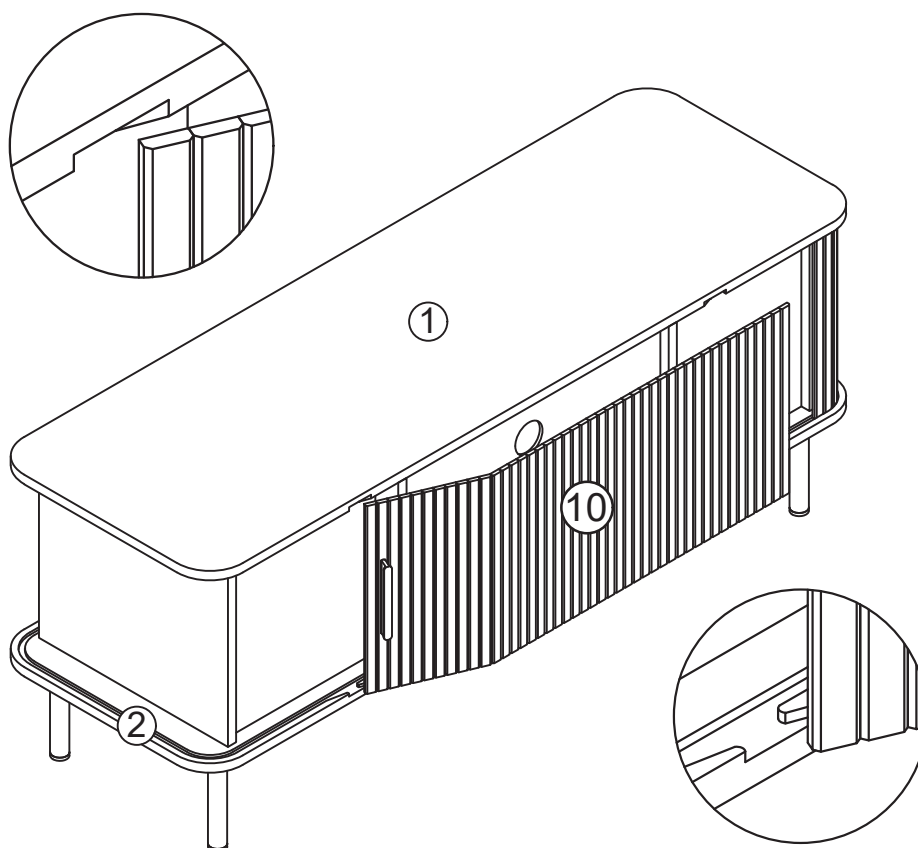

Insert Board (10) into the tracks in Boards (1) (2).
Slide Board (10) from right to left.

9

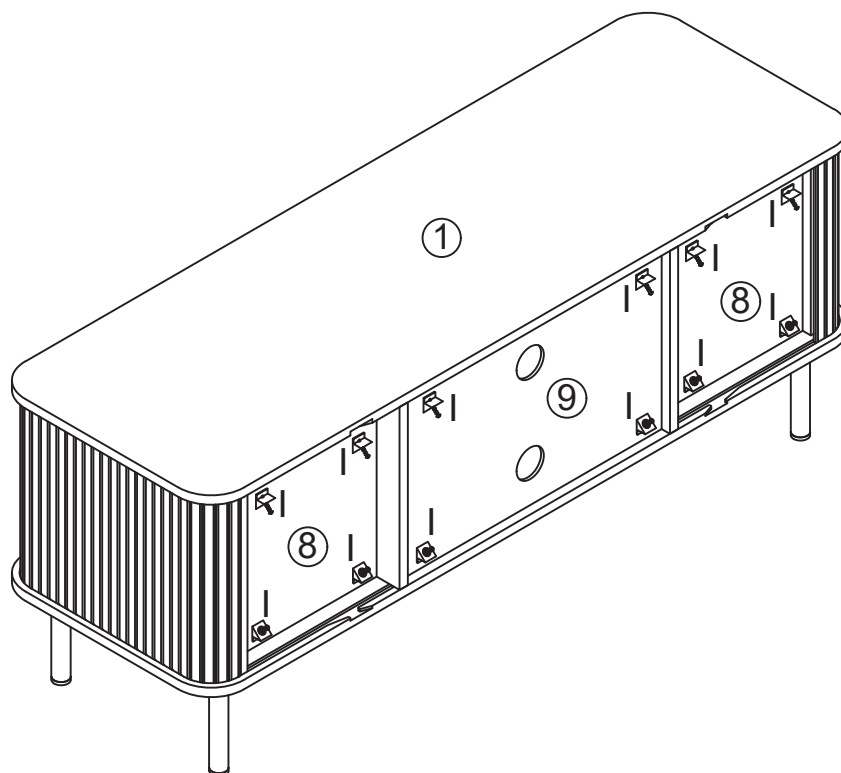


I × 12

M × 1



Insert Fastener (I) into the back of the stand,
then twist Screws of Fastener (I) to secure.

10

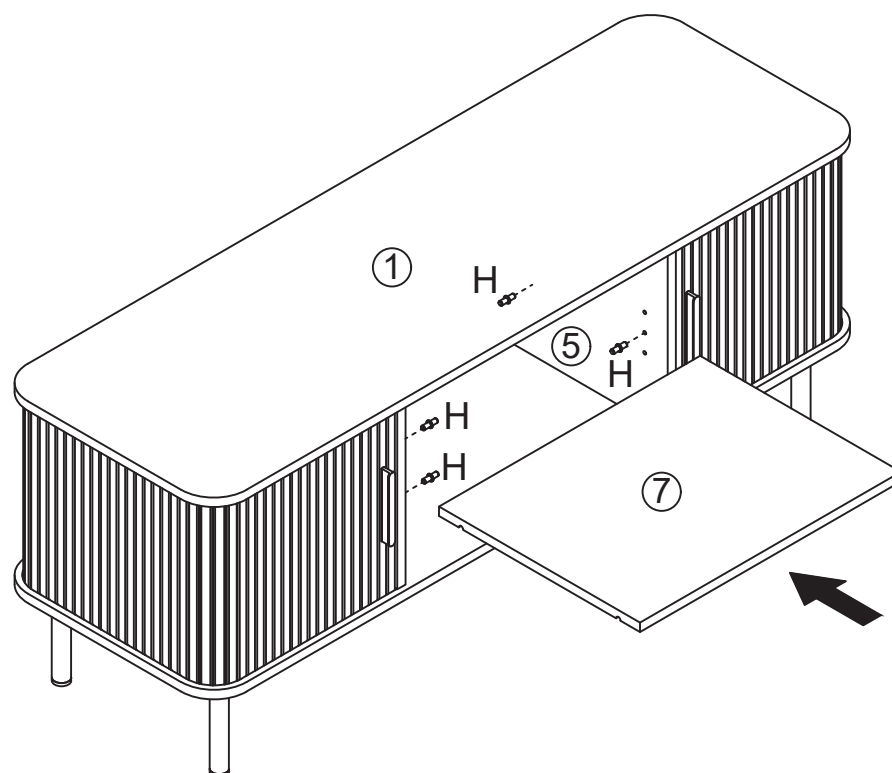

H × 4



Insert (H) into the holes in Boards (4) (5).
Place Board (7) on top of (H).