
Assembly Instruction 3 Pcs. Breakfast Set


LIST OF WOODEN PARTS


No.	Description	Q'ty
T1	Table Top	1
T2	Side Panel	2
T3	Top Crossbar	2
T4	Bottom Crossbar	1

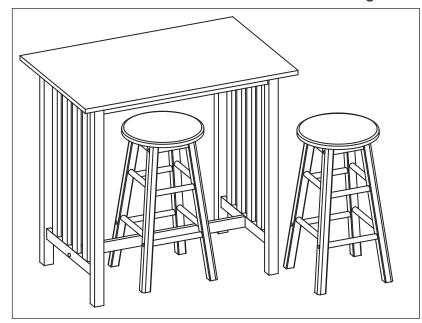

LIST OF HARDWARE

Screw F6 x 1 1/4"	6
Screw JCA 1/4" x 38	2
Screw JCA 1/4" x 50	4
Wood Plug	6
Allen Key	1

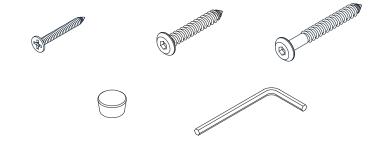

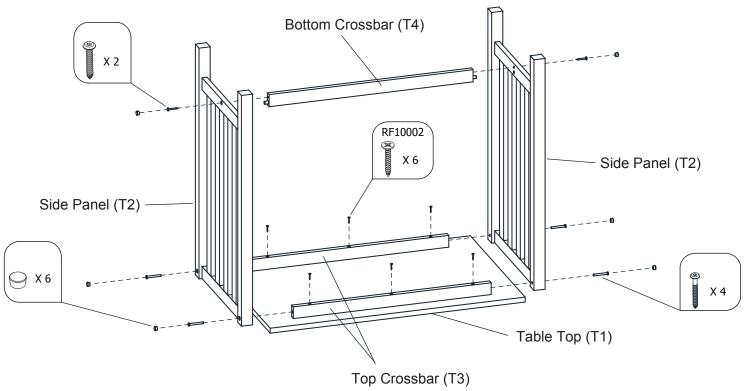


Assembly Table

1. Invert Table Top (T1) on a soft surface.

Attach 2 Top Crossbar (T3) into the Table Top (T1) using 6 Screw.

2. Attach 2 Side Panel (T2) and Bottom Crossbar(T4) and Top Crossbar (T3) together using 4 Screw and 2 Screw and cover screw holes with Wood Plug (40001)as shown in diagram.

2 Barstools

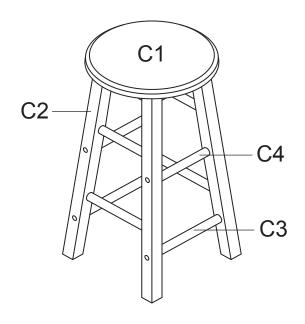

LIST OF WOODEN PARTS


No.	Description	Q'ty
C1	Seat	2
C2	Side Panel	4
C3	Long Round Wood	4
C4	Short Round Wood	4

LIST OF HARDWARE

Screw JCA 1/4" x 32	8
Screw JCA 1/4" x 38	8
Wood Plug	16





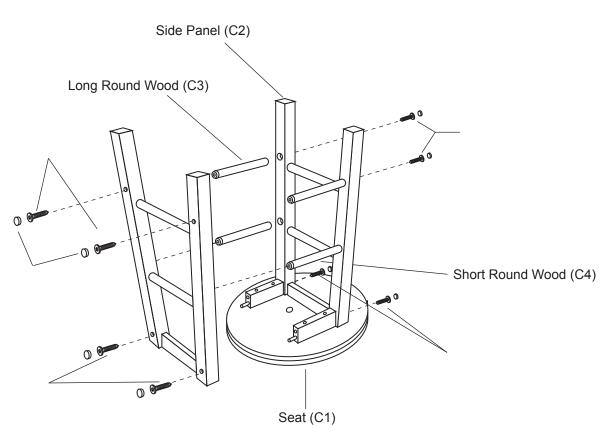

Assembly Stool

- 1. Lay seat (C1) on floor and insert one side panel(C2).
- 2. Insert and fasten short (C3) and long (C4) round wood per diagram, using screws provided.

CAUTION: DO NOT TIGHTEN SCREWS UNTIL UNIT IS COMPLETELY ASSEMBLED.

- 3. Attach other side panel and fasten screws.
- 4. Tighten screws by using Allen Key provided.
- 5. Insert wood plugs.