


Kitchen Island Carts

Assembly Instructions - Please keep for future reference

SKU: N707P396287/N707P396288

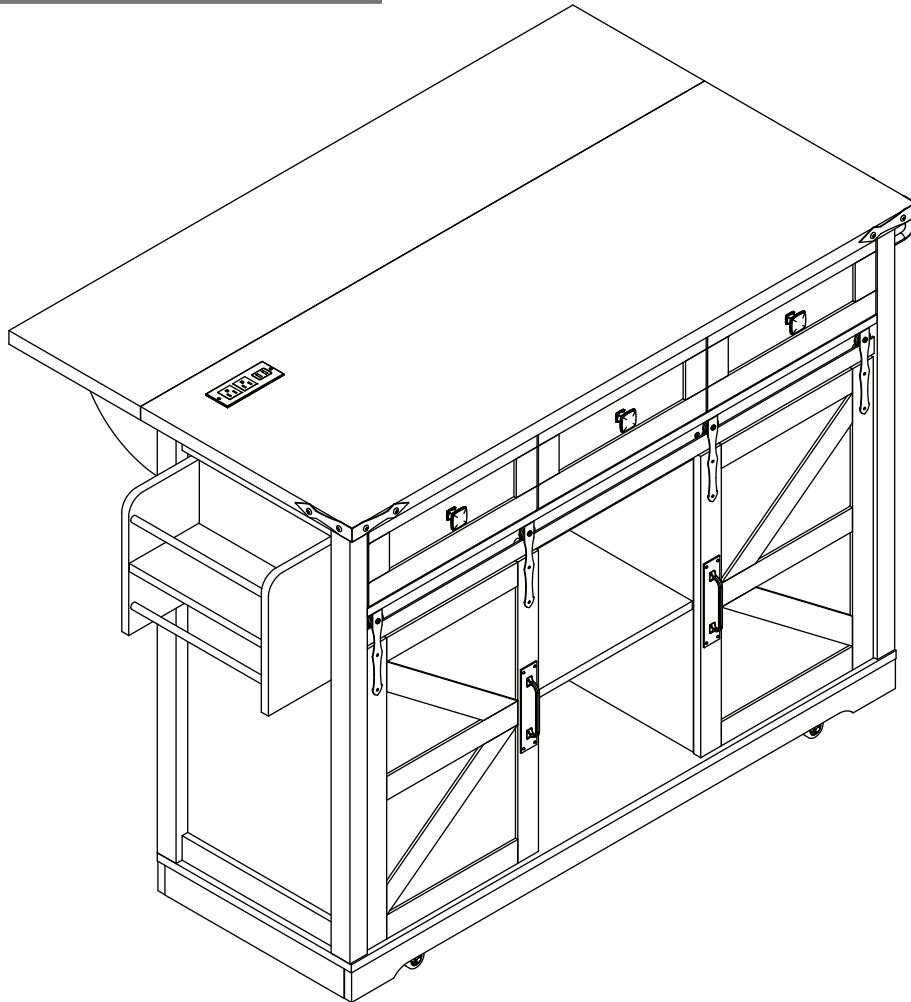

Dimensions

Width-47.2inch

Depth-17.7inch+11inch

Height-36.2inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

















Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type


Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

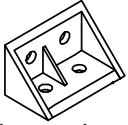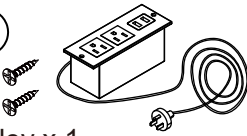(A)  Cam Bolt x 42	(B)  Cam lock x 42	(C)  6*40mm Dowel x 34	(D)  3.5*30mm Screw x 18
(E)  3*12mm Screw x 91	(F)  Hold hands + 4*22mm Screw x 2	(G)  7x40mm Screw x 12	(H)  6*50mm Screw x 2
(I)  6*25mm Screw x 23	(J)  Iron bar x 1	(K)  Caster x 3	(L)  Locking caster x 2
(N)  hinge x 7	(O)  Pivot x 10	(P)  Angle iron x 4	(Q)  Hold hands x 3 4*16mm Screw x 3
(R)  Pulley x 4	(S)  Pulley x 1	(T)  Screwdriver x 1	(Y)  Y2 x2 Y1
(W)  3*16mm Screw x 12	(X)  Allen Wrench x 1	 x1	
(CR)  Runner 300mm x 3	(CL)  Runner 300mm x 3	(DR)  Runner 300mm x 3	(DL)  Runner 300mm x 3

Ruler - Use this ruler to help correctly identify the screws

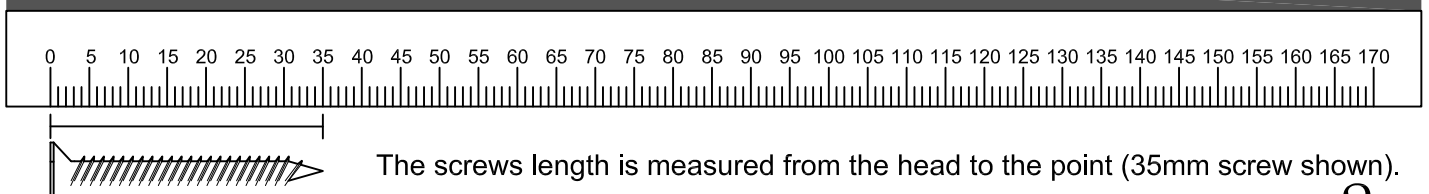


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

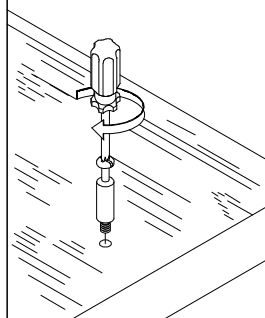

Step 2

Push the male camlock into the entry hole.

2

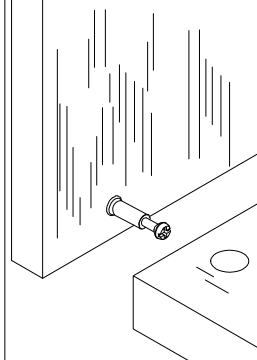


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

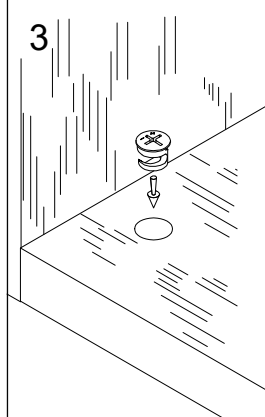


Step 4

Turn the female camlock clockwise with a screwdriver.





You should feel a click when the camlock is locked in place.

The joint is now secure.

4

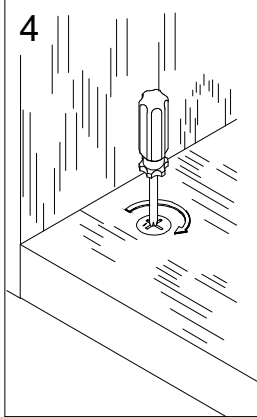


Tools required

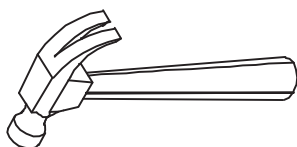













Phillips screwdriver
(medium & large)

Assembly Instructions






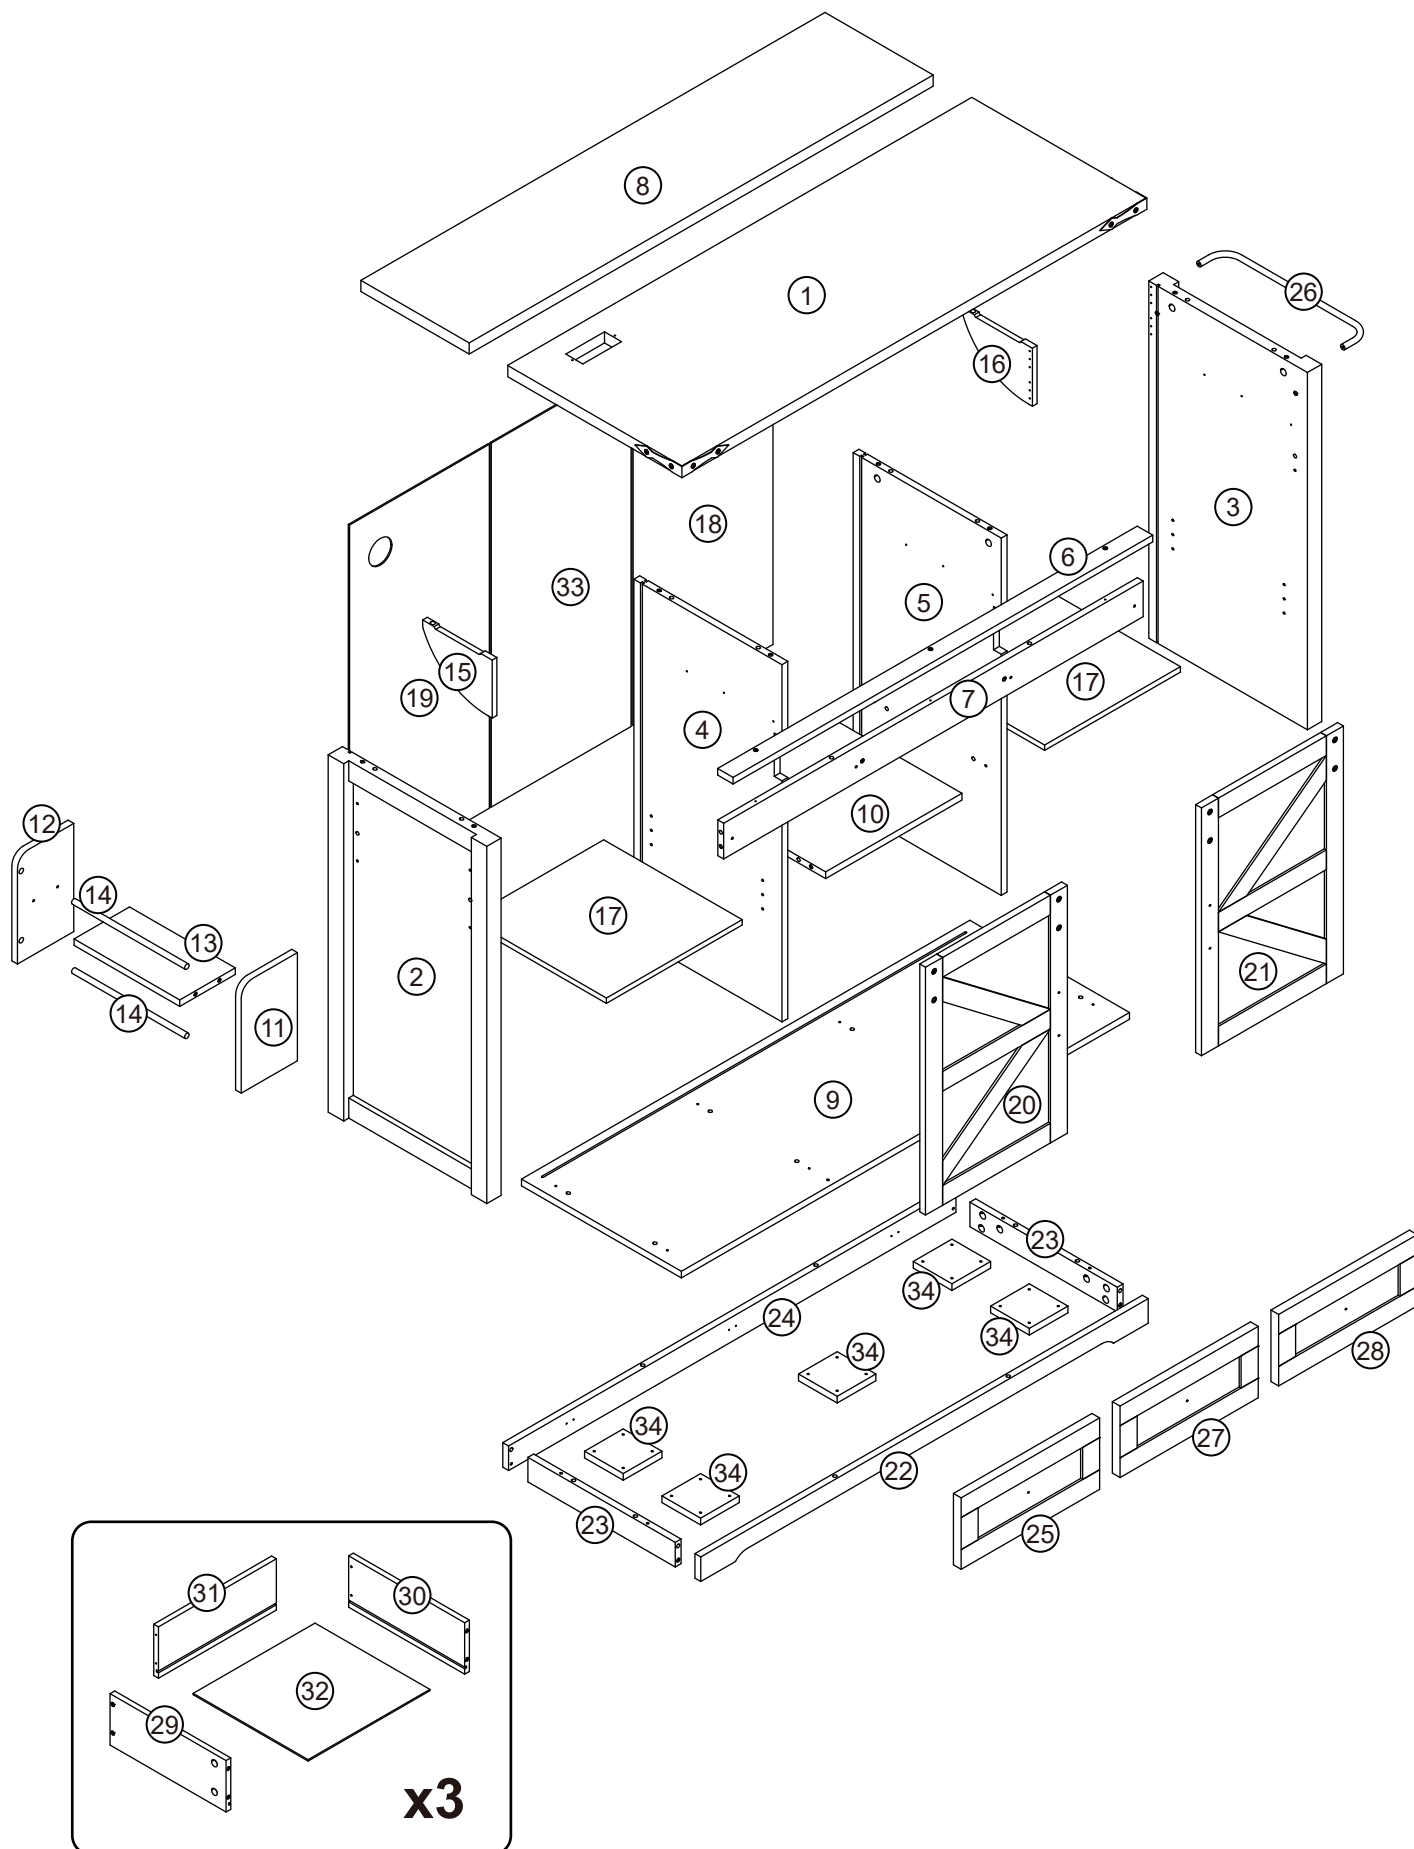


Assembly Instructions





BOX A - N707P396287

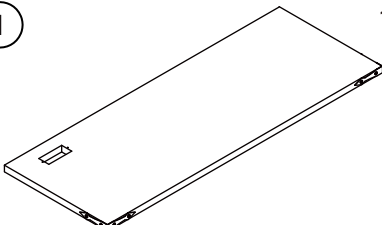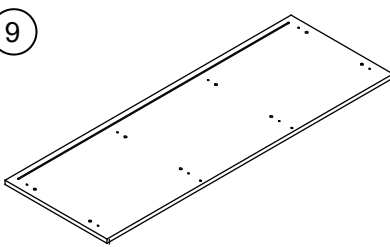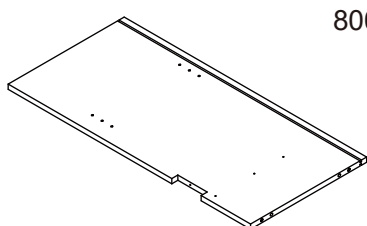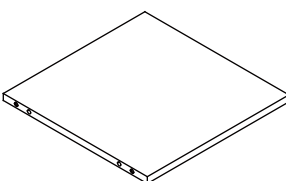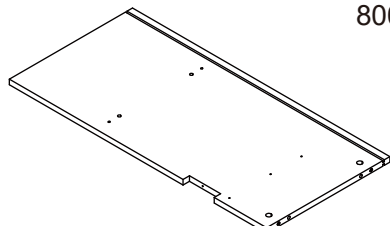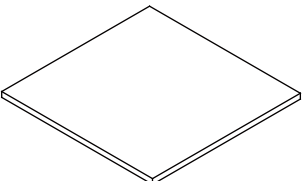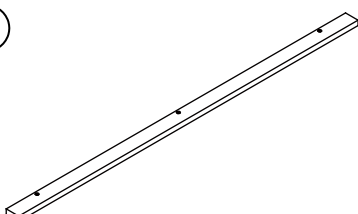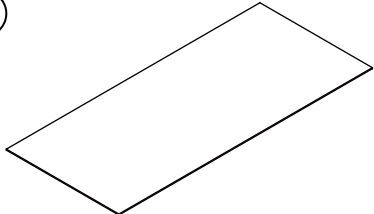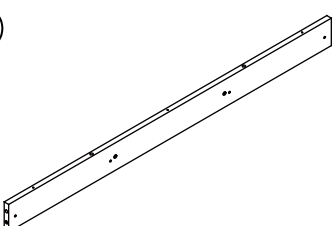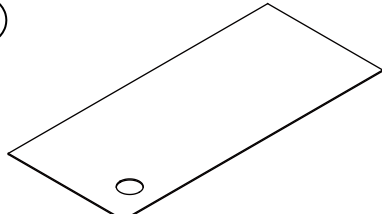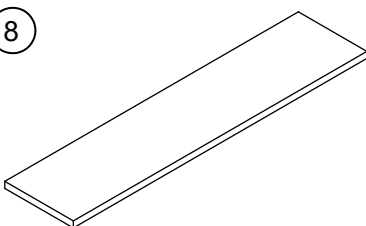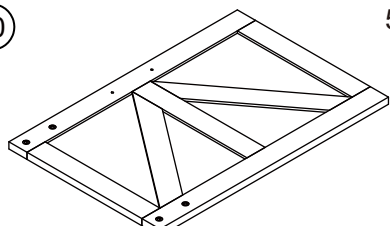①  1200 x 450 x 24 mm 1	⑨  1158 x 416 x 15 mm 1
④  800 x 384 x 15 mm 1	⑩  350 x 358 x 15 mm 1
⑤  800 x 384 x 15 mm 1	⑰  349 x 349 x 12 mm 2
⑥  1080 x 40 x 15 mm 1	⑱  808 x 358 x 4 mm 1
⑦  1080 x 80 x 15 mm 1	⑲  808 x 358 x 4 mm 1
⑧  1200 x 280 x 24 mm 1	⑳  556 x 366 x 15 mm 1














Assembly Instructions

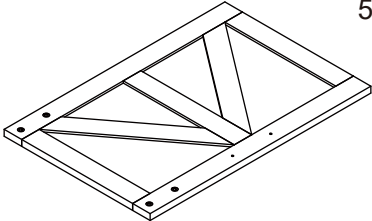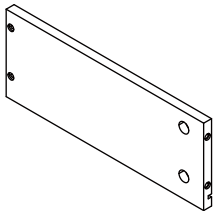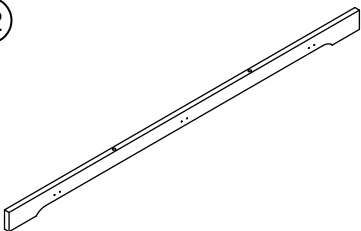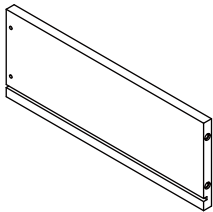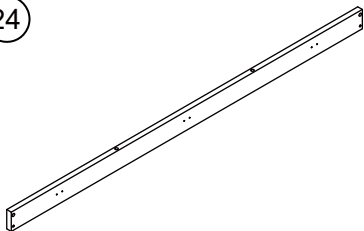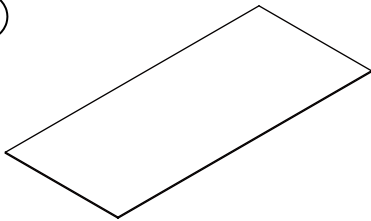(21)  556 x 366 x 15 mm 1	(29)  301 x 114 x 12 mm 3
(22)  1156 x 56 x 15 mm 1	(30)  301 x 114 x 12 mm 3
(24)  1156 x 56 x 15 mm 1	(33)  808 x 358 x 4 mm 1

BOX B - N707P396288

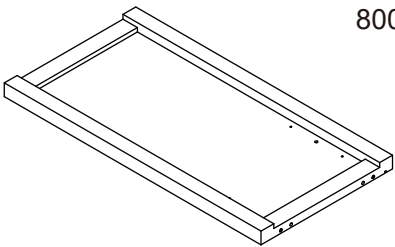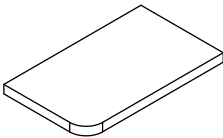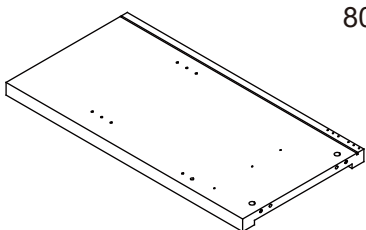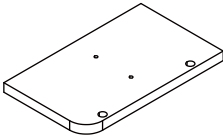
(2)  800 x 412 x 37 mm 1	(11)  250 x 150 x 15 mm 1
(3)  800 x 412 x 37 mm 1	(12)  250 x 150 x 15 mm 1


Assembly Instructions

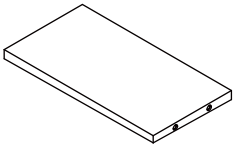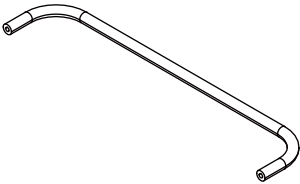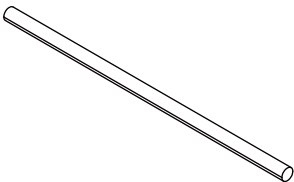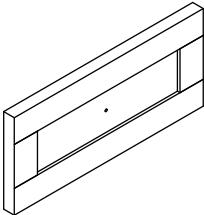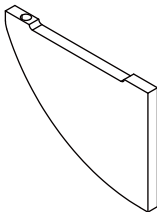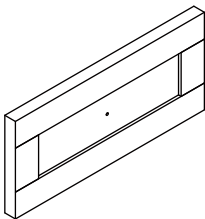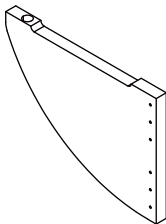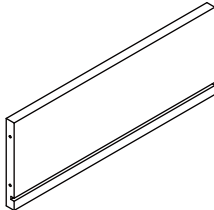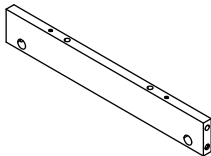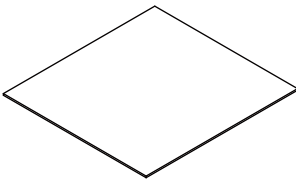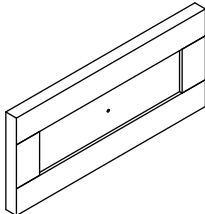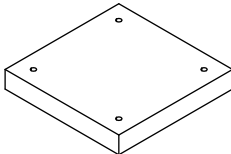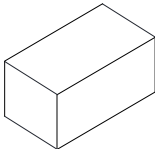(13) 288 x 148 x 15 mm  1	(26) 379 x 80 x 13 mm  1
(14) 308 x 16 mm  2	(27) 357 x 160 x 16 mm  1
(15) 180 x 134 x 15 mm  1	(28) 357 x 160 x 26 mm  1
(16) 180 x 134 x 15 mm  1	(31) 301 x 114 x 12 mm  3
(23) 384 x 56 x 15 mm  2	(32) 308 x 295 x 4 mm  3
(25) 358 x 160 x 20 mm  1	(34) 100 x 100 x 15 mm  5
Hardware kid x1  1	


Assembly Instructions


Step 1

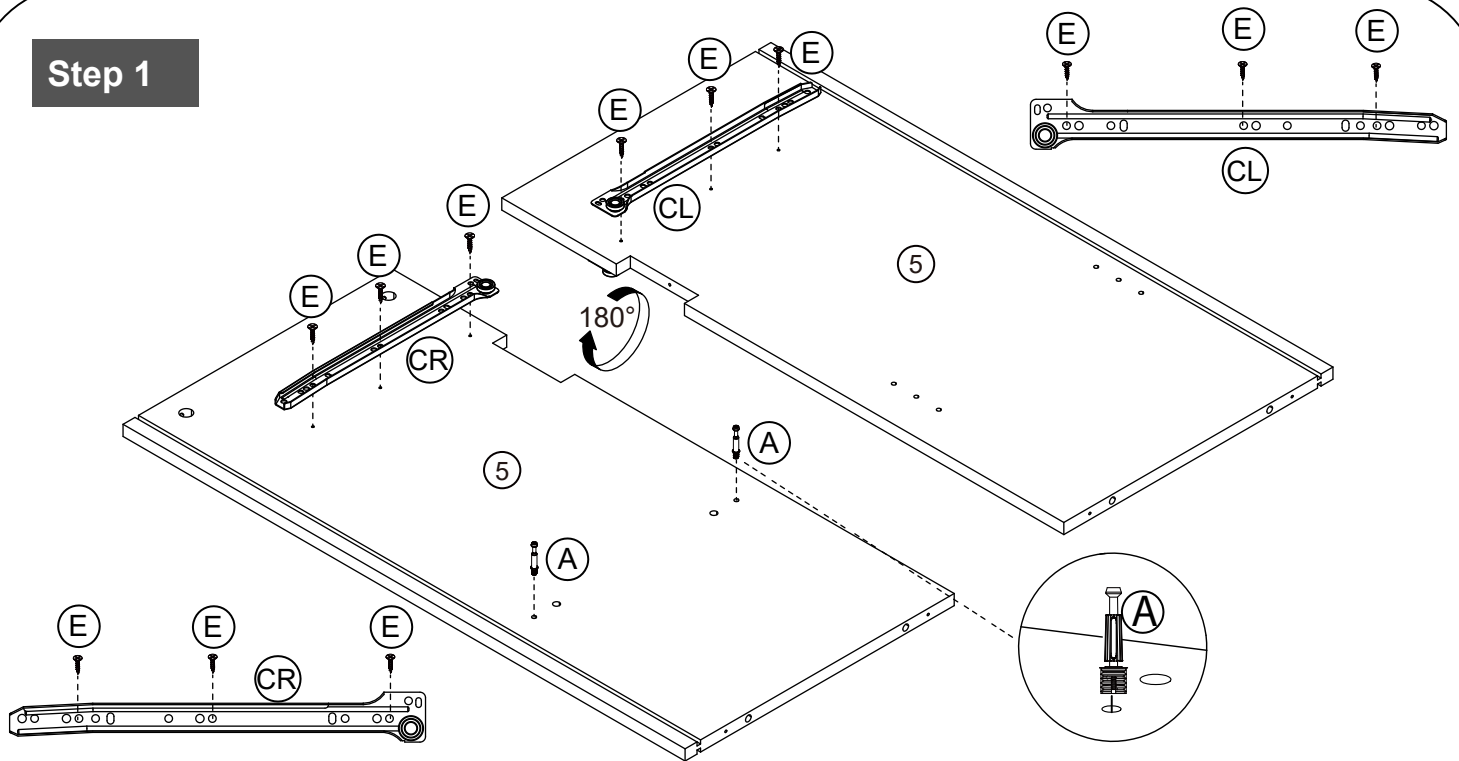

 Cam Bolt x 2	 3*12mm Screw x 6	 Runner 300mm x 1	 Runner 300mm x 1
---	---	--	---


Step 2

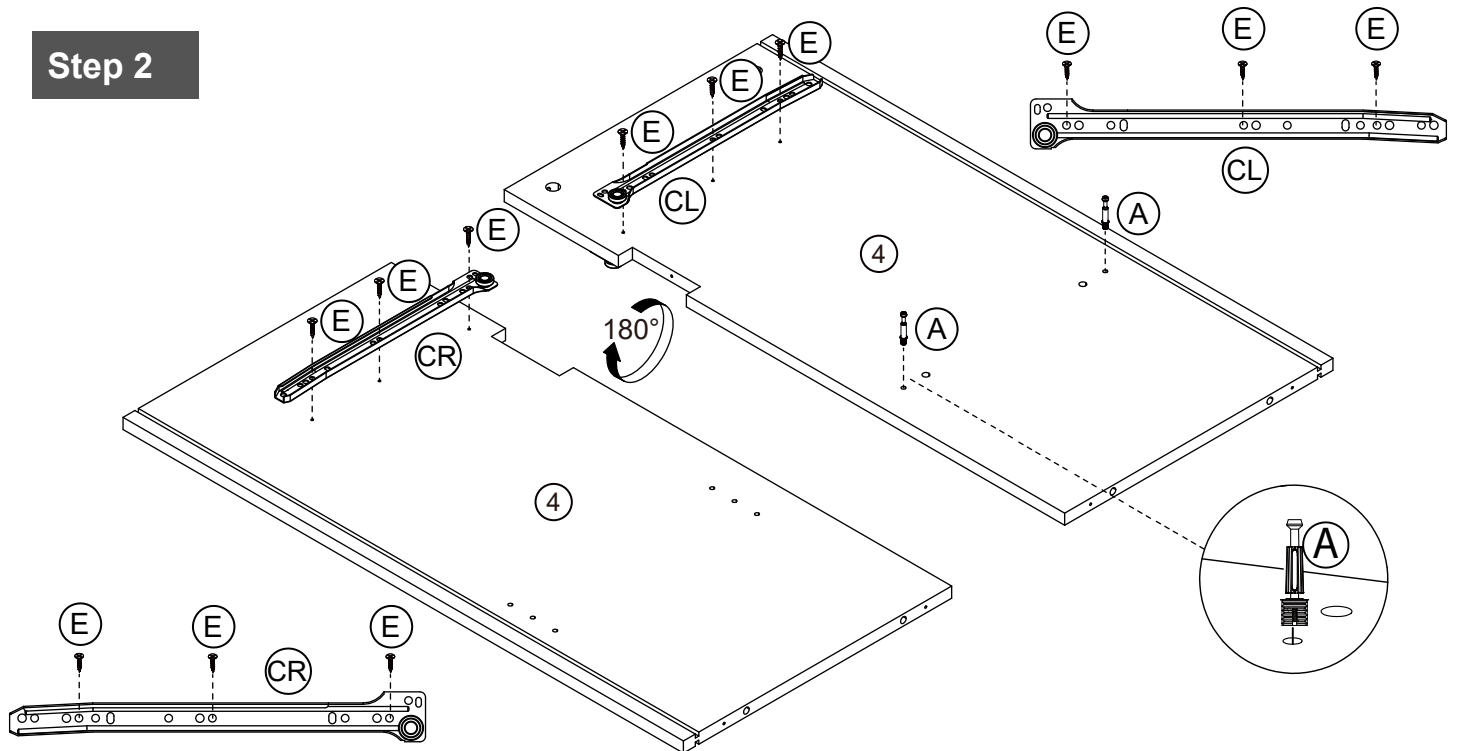

 Cam Bolt x 2	 3*12mm Screw x 6	 Runner 300mm x 1	 Runner 300mm x 1
---	---	--	---

Assembly Instructions

Step 3

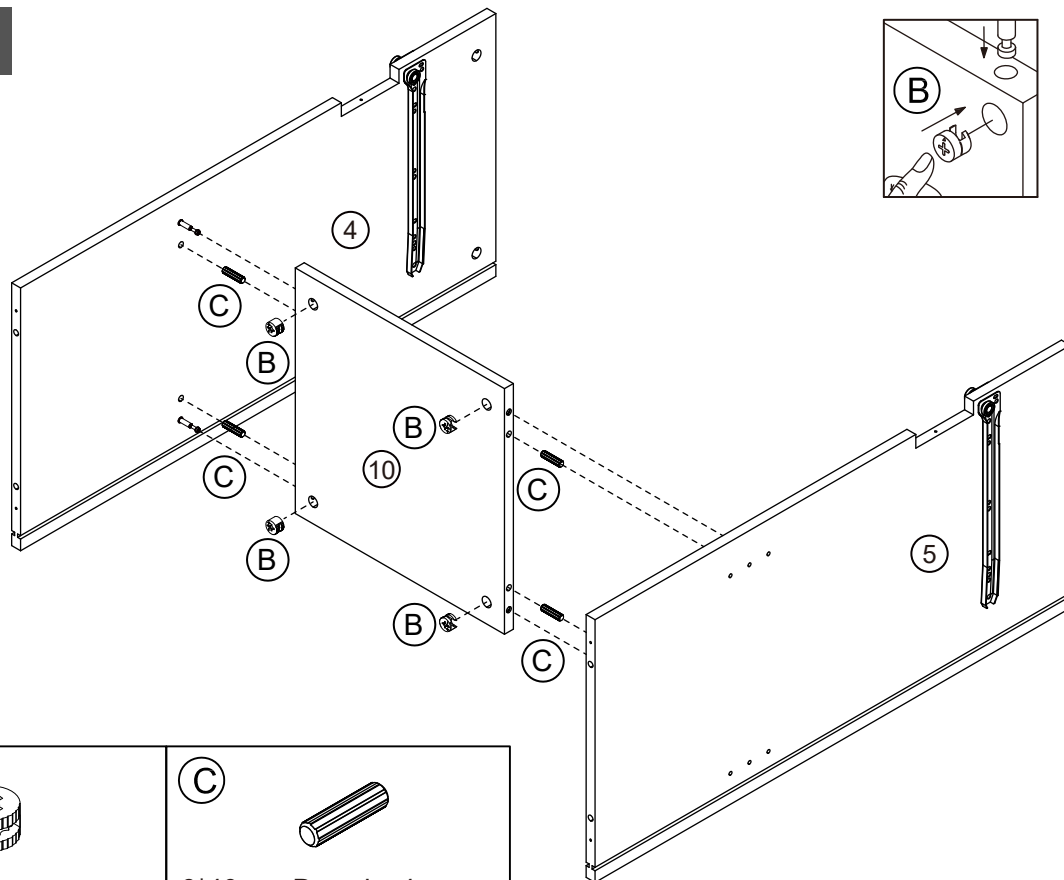

(B)




Cam lock x 4

(C)



6*40mm Dowel x 4

Step 4

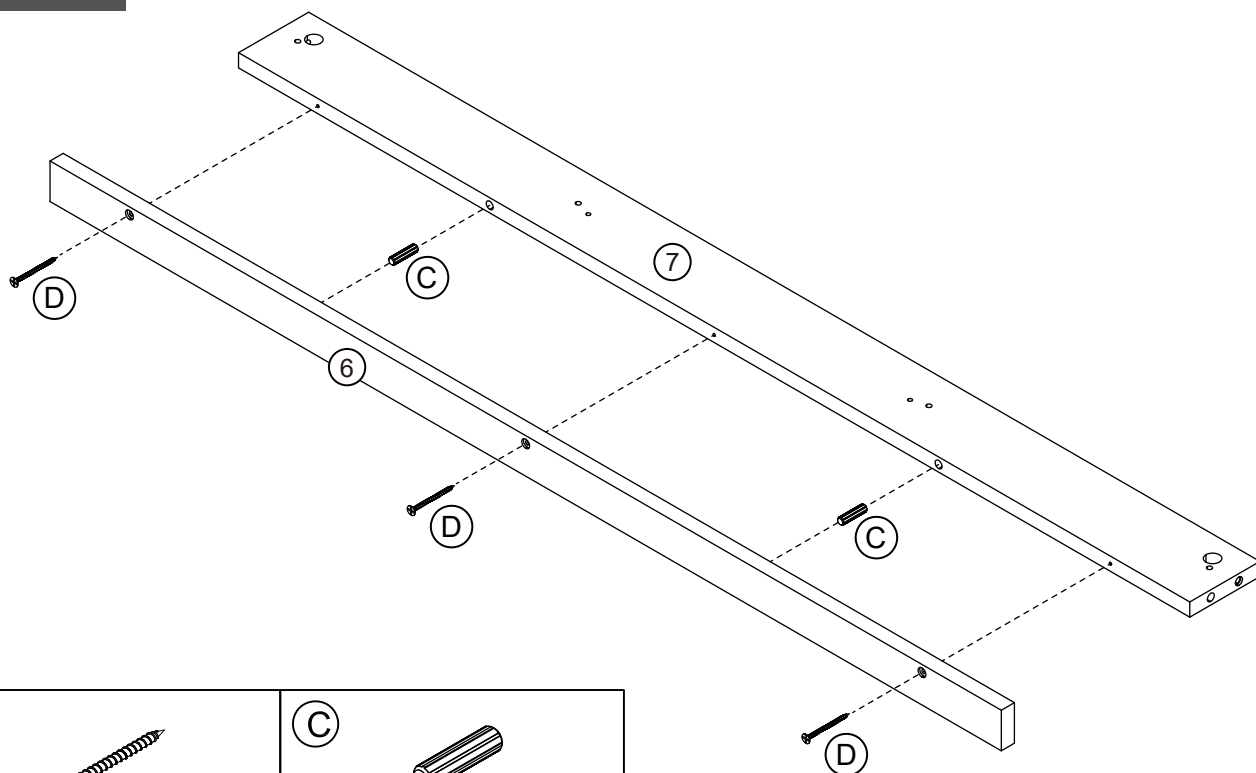

(D)



3.5*30mm Screw x 3


(C)



6*40mm Dowel x 2

Assembly Instructions

Step 5

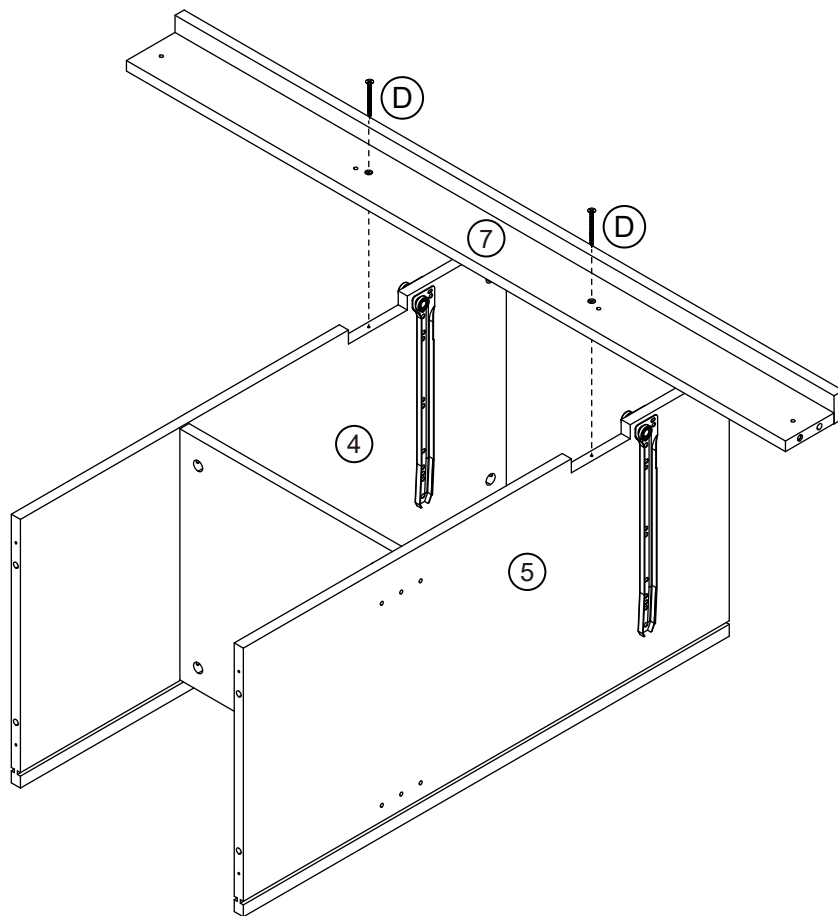


(D)




3.5*30mm Screw x 2

Step 6

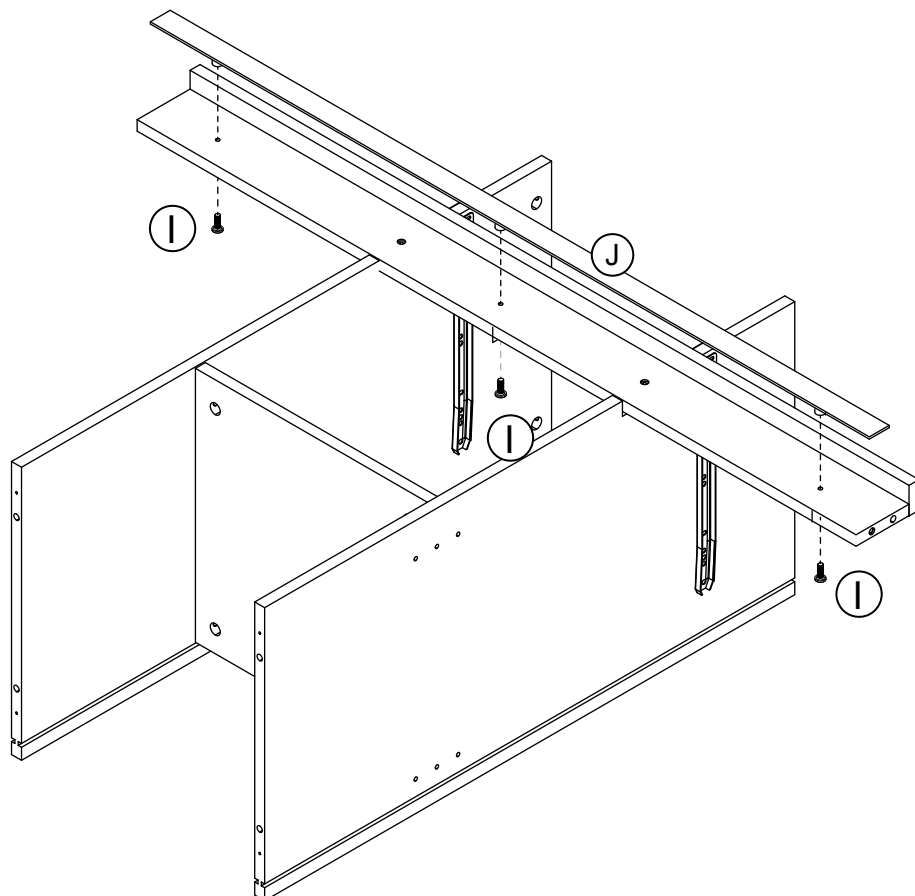

(J)



Iron bar x 1


(I)




6*20mm Screw x 3


Assembly Instructions


Step 7

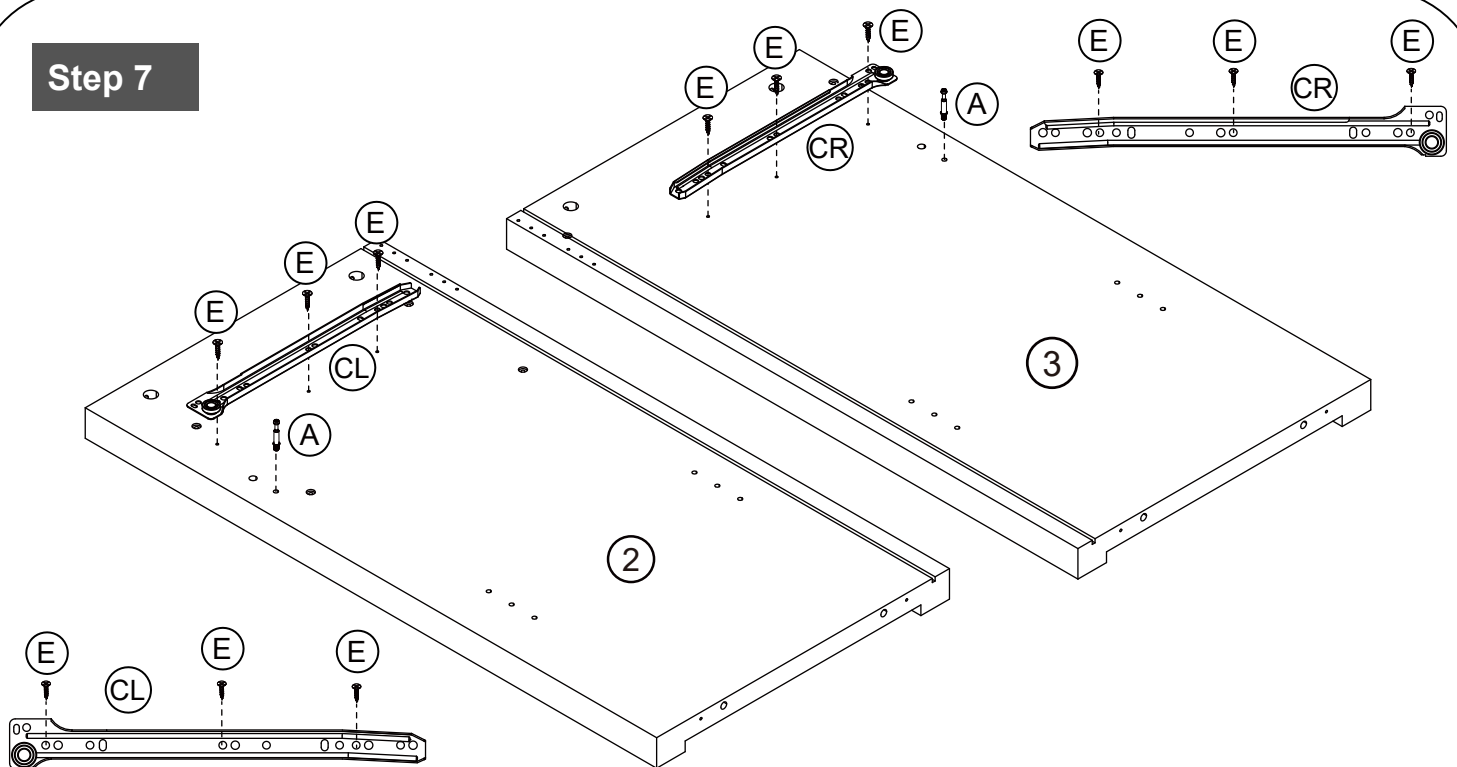

(A)  Cam Bolt x 2	(E)  3*12mm Screw x 6	(CL)  Runner 300mm x 1	(CR)  Runner 300mm x 1
--	--	--	---


Step 8

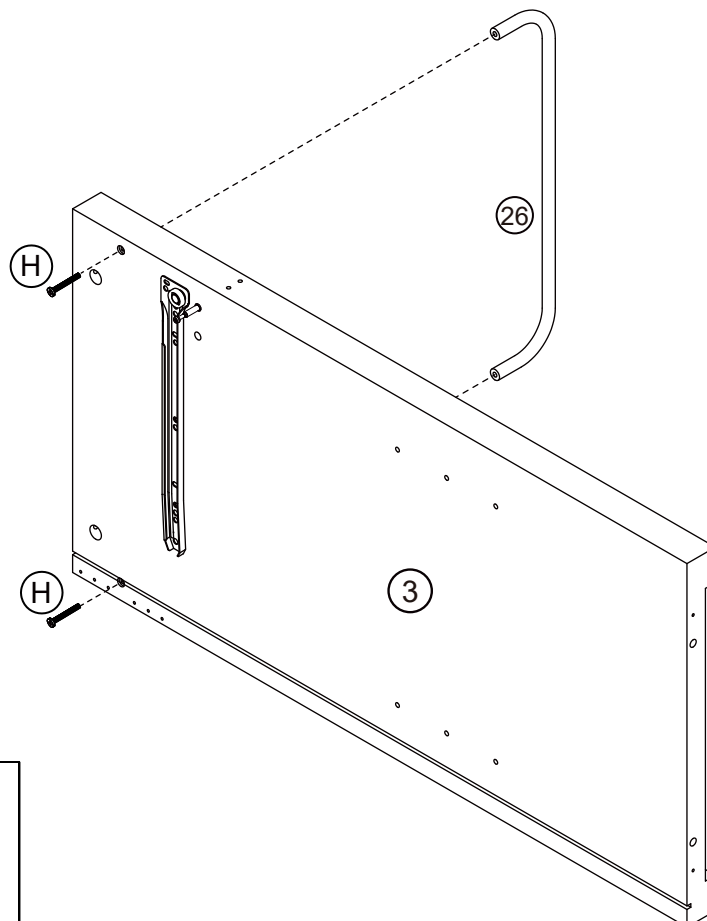

(H)  6*50mm Screw x 2
--

Assembly Instructions

Step 9

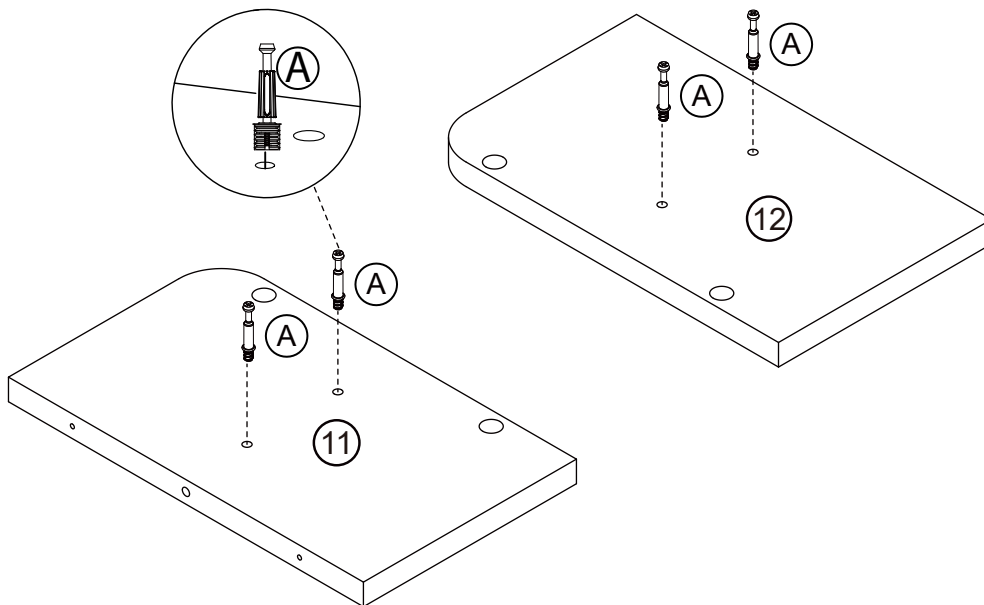


(A)



Cam Bolt x 4

Step 10

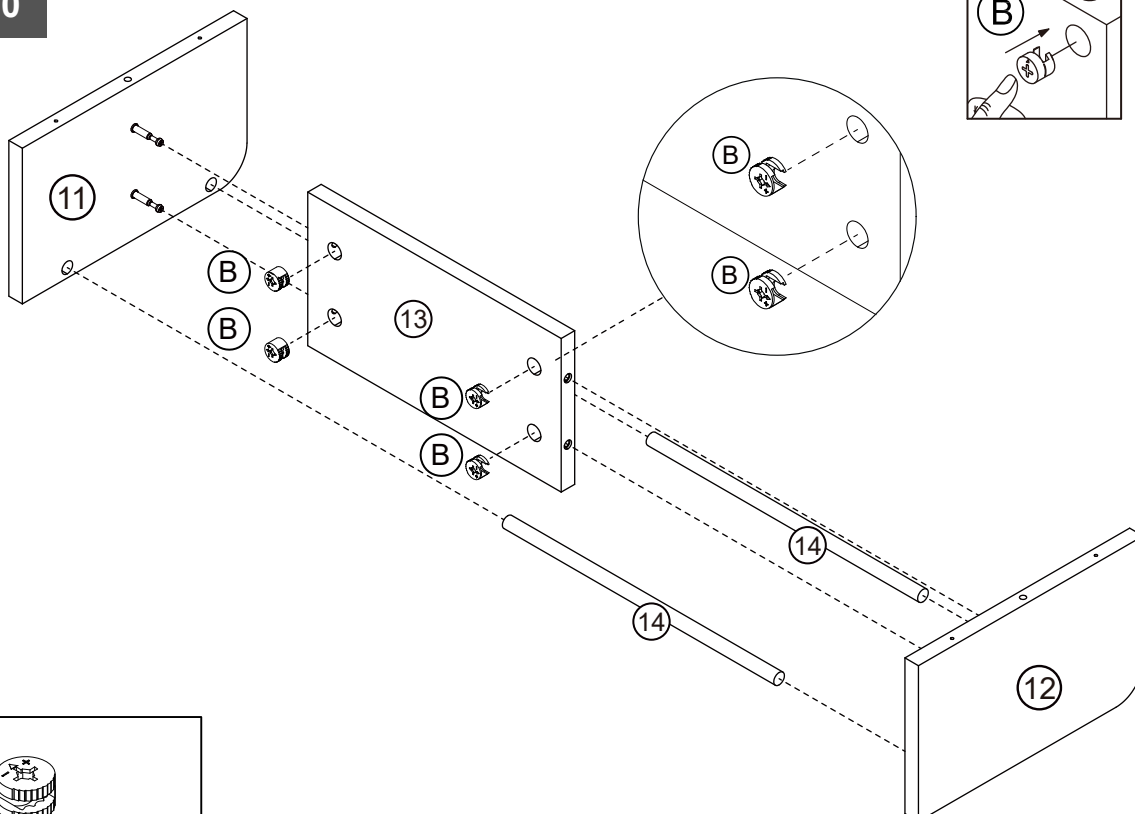


(B)




Cam lock x 4

Assembly Instructions

Step 11

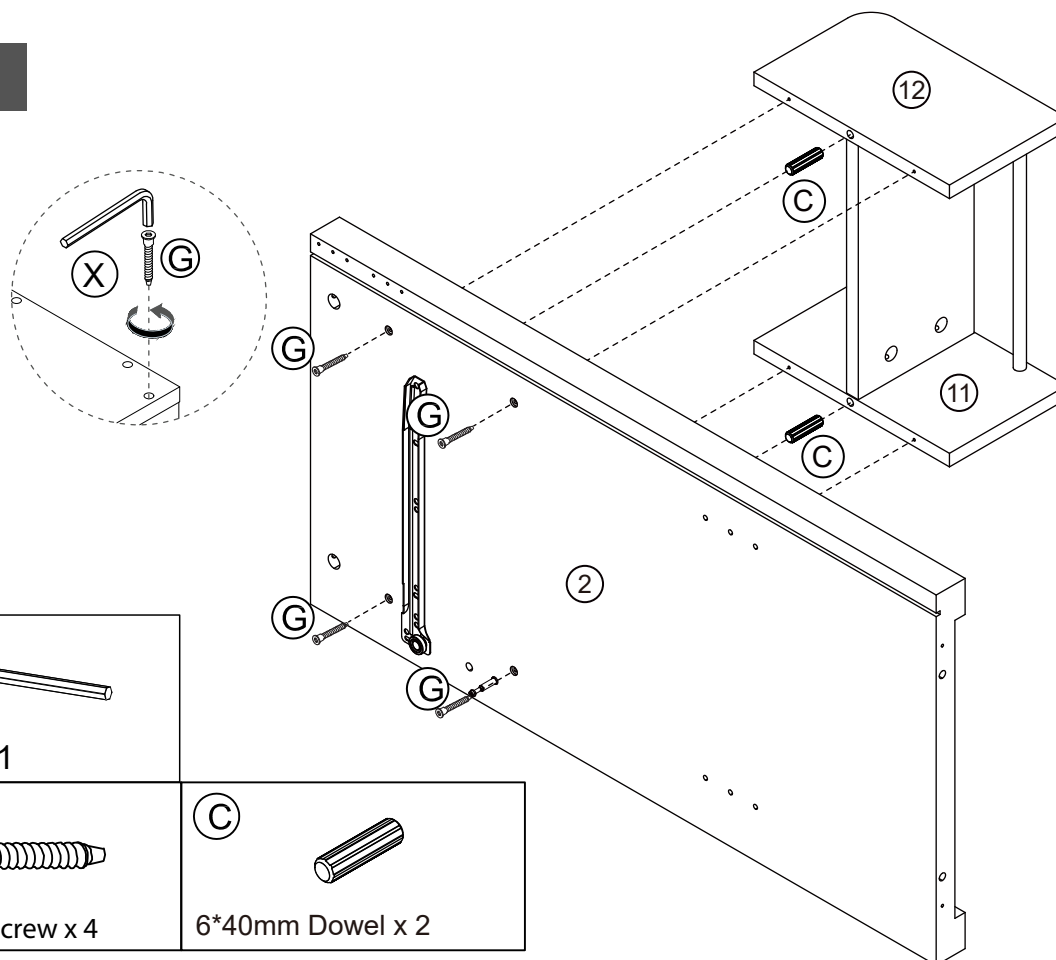


Step 12

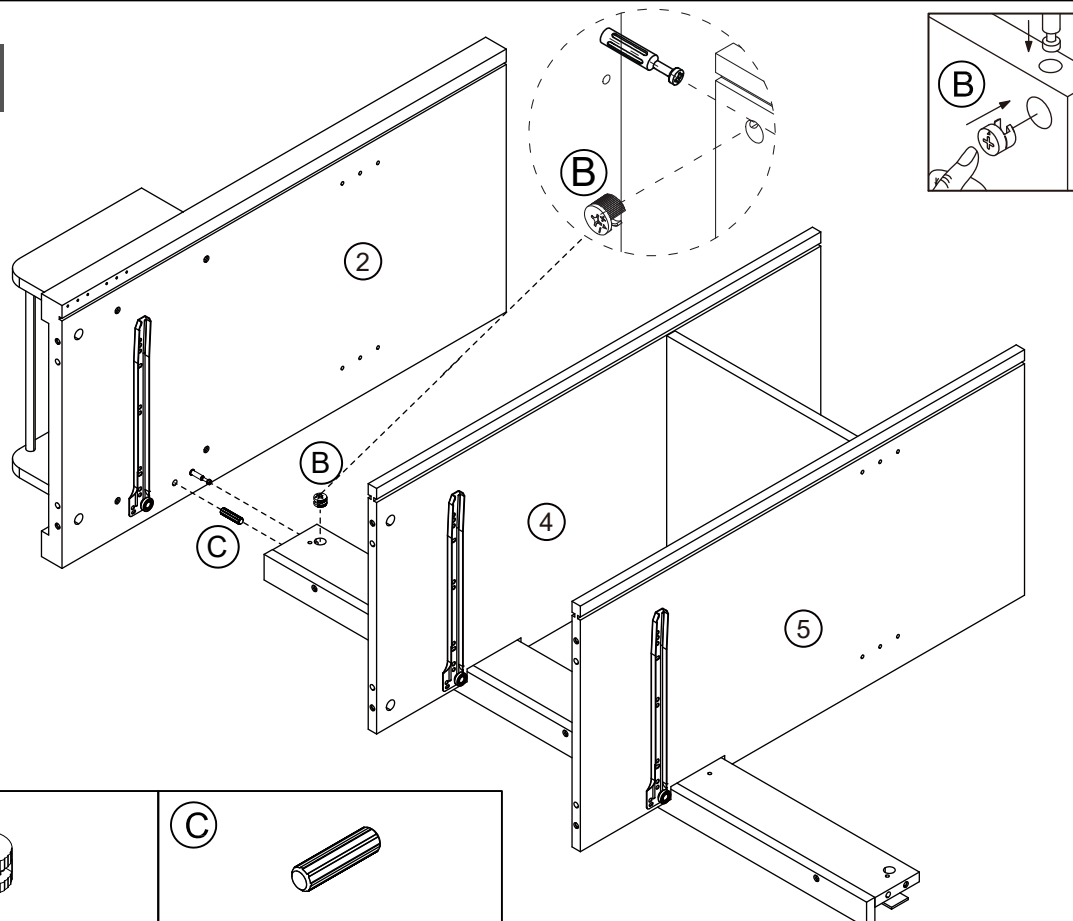

Assembly Instructions

Step 13

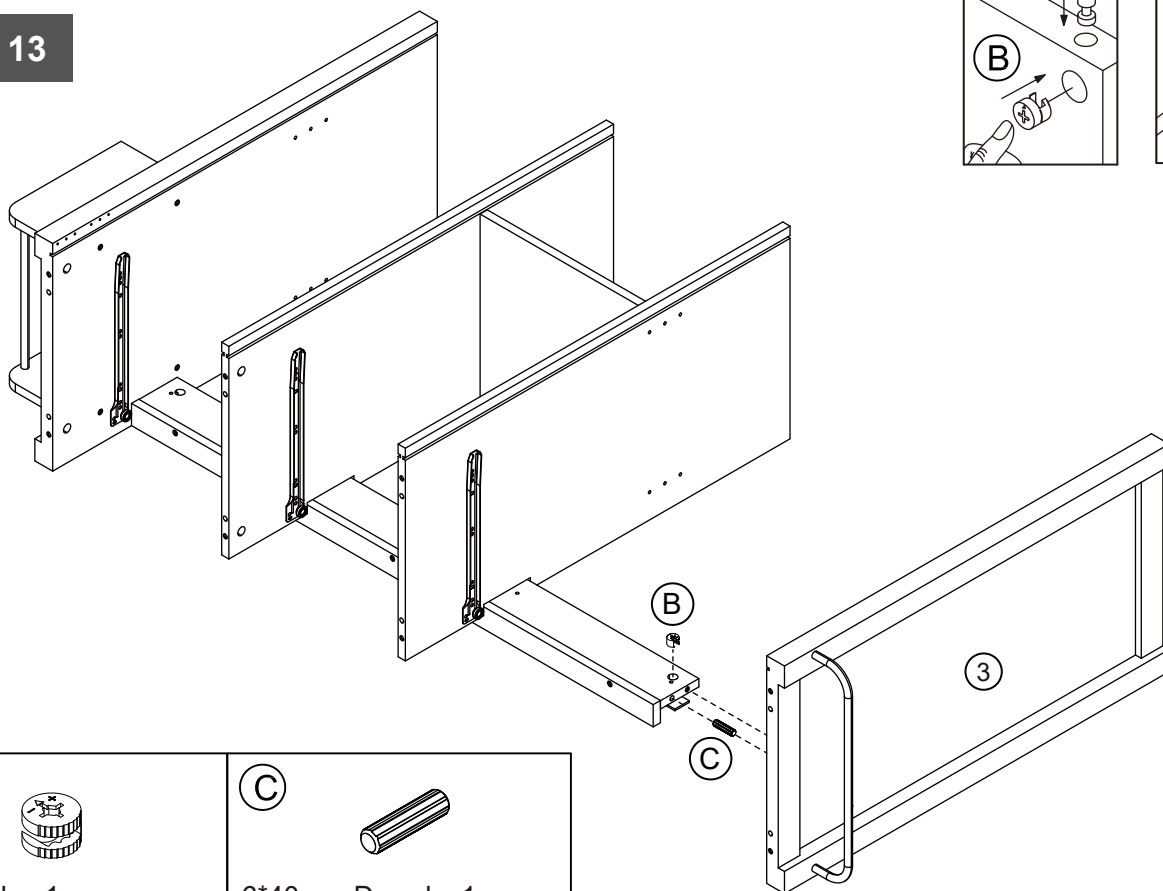

(B)




Cam lock x 1

(C)



6*40mm Dowel x 1

Step 14

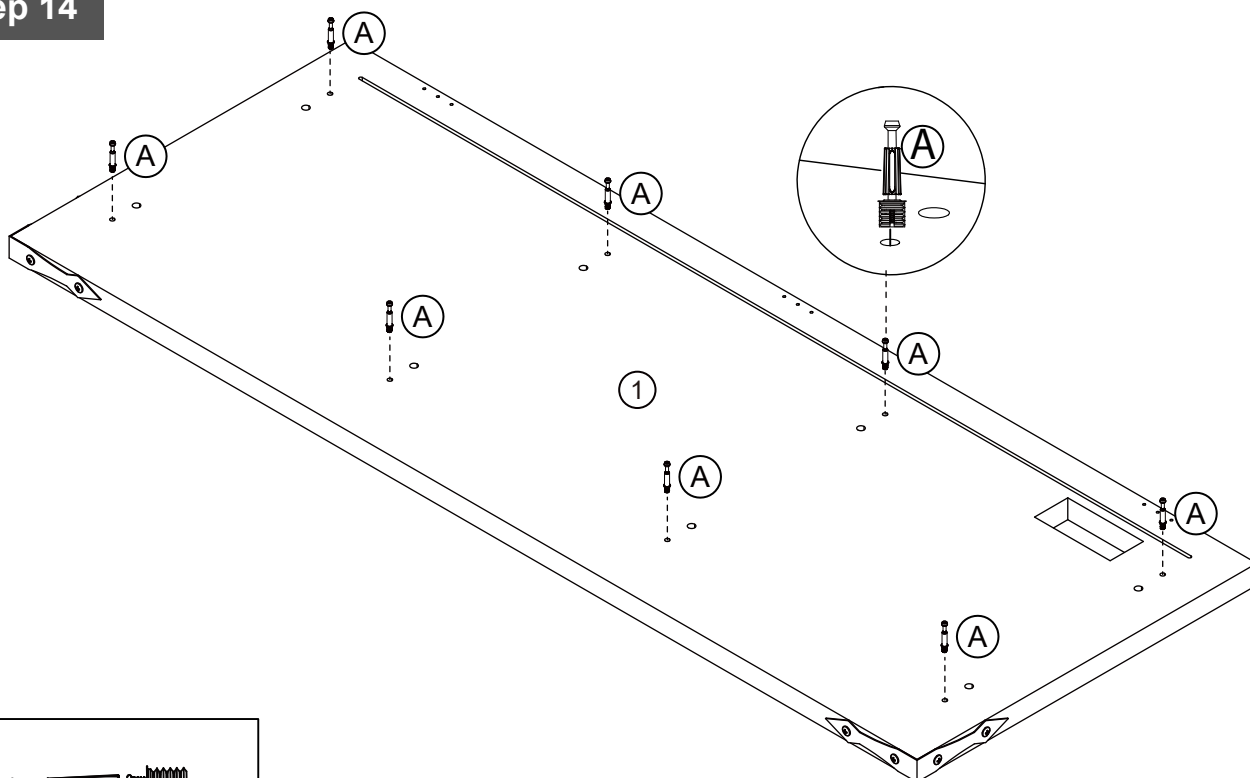



(A)



Cam Bolt x 8

Assembly Instructions

Step 15

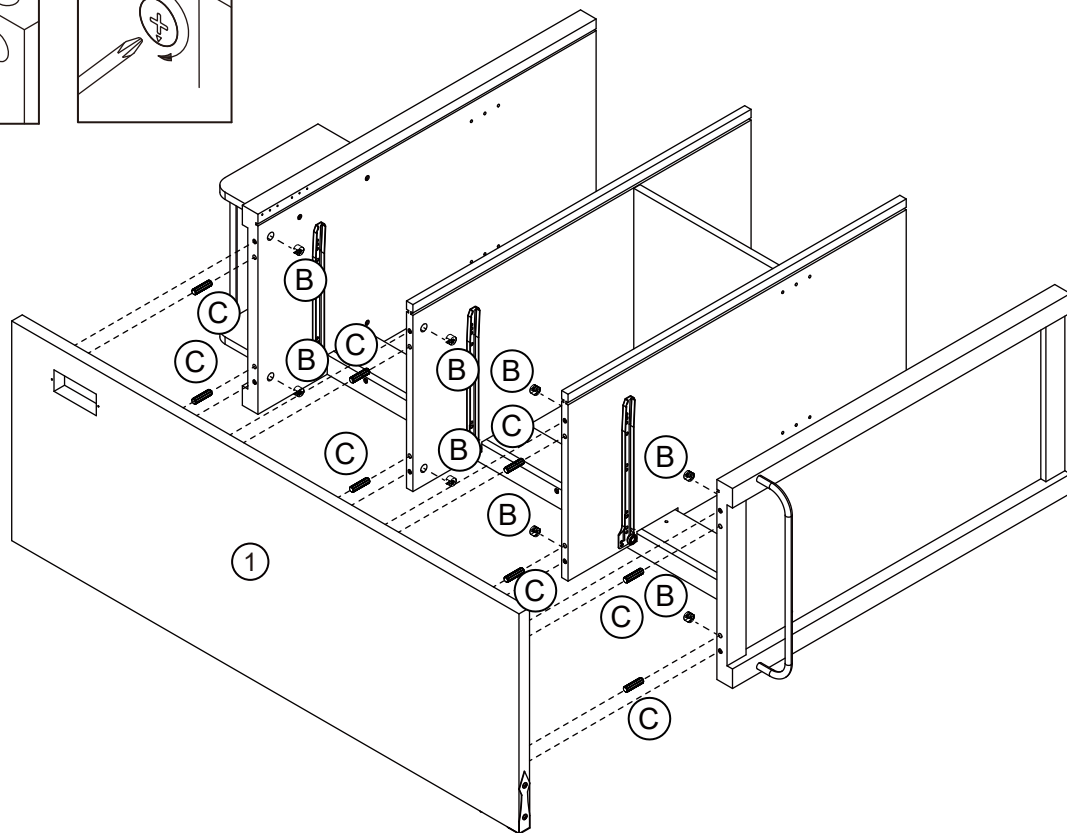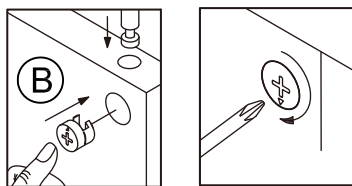

(B)




Cam lock x 8

(C)





6*40mm Dowel x 8

Step 16

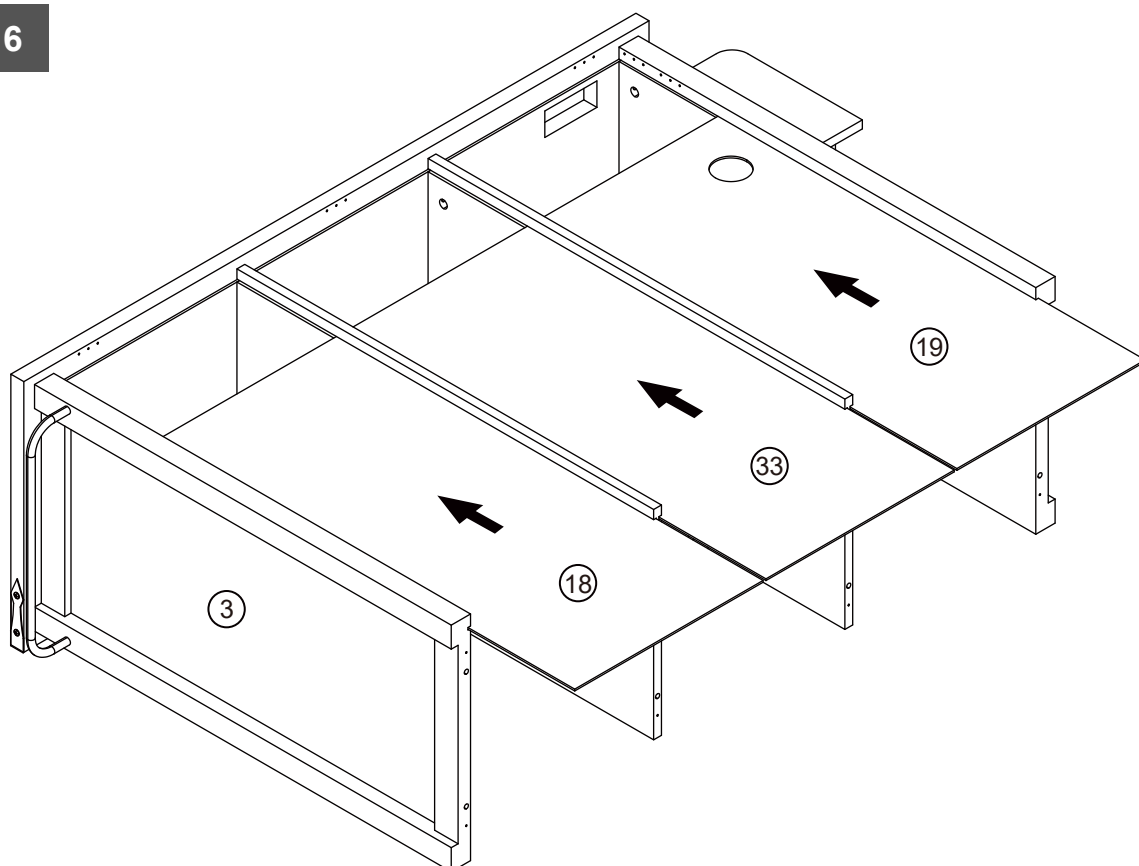



Assembly Instructions

Step 17

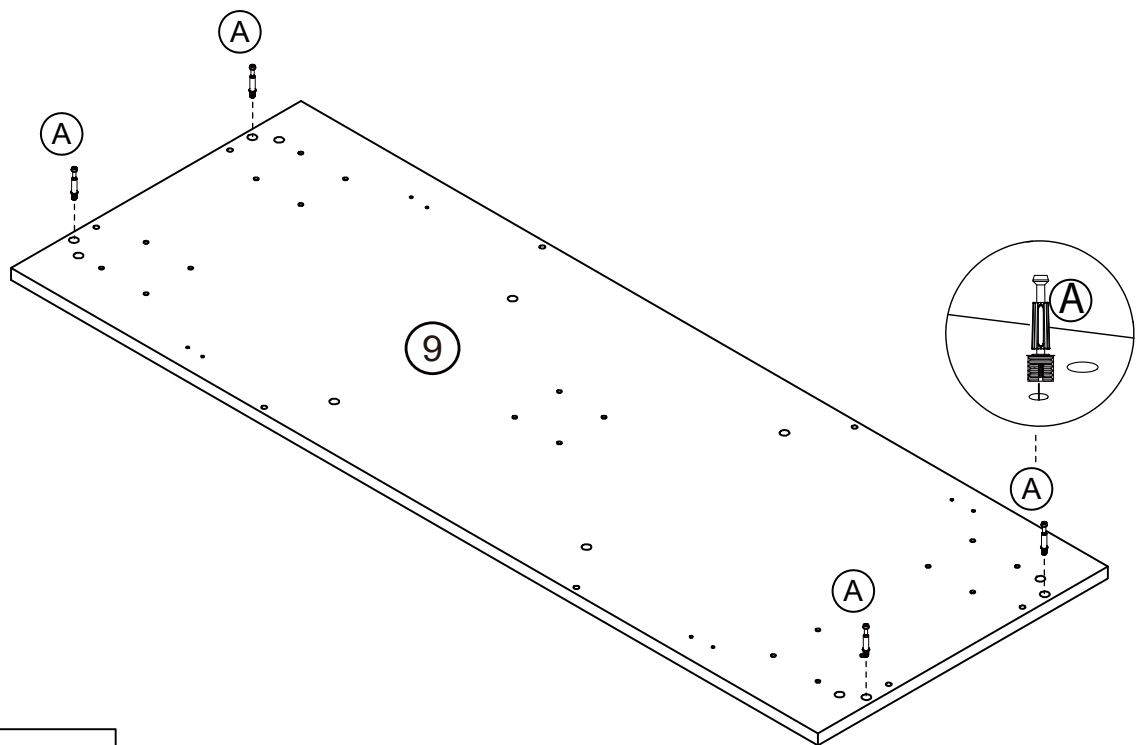


Cam Bolt x 4


Step 18

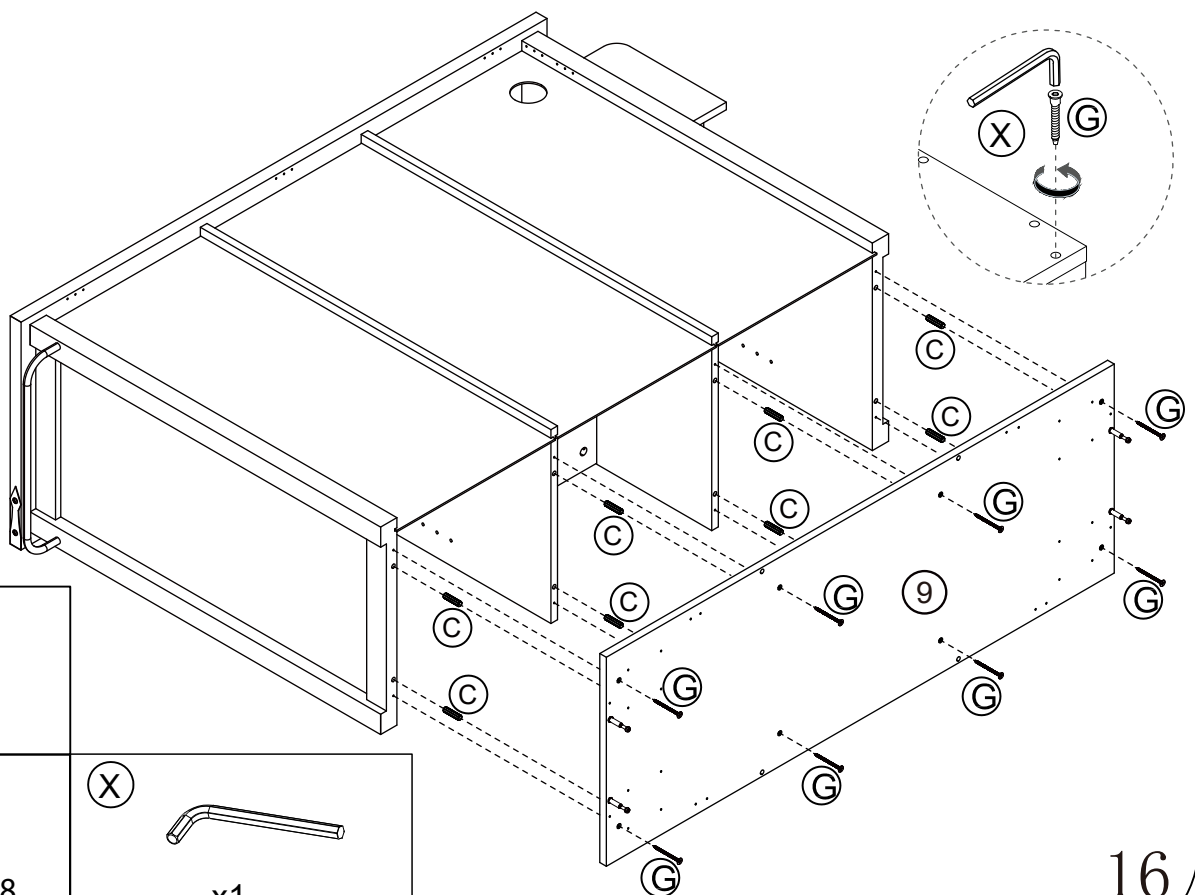

6*40mm Dowel x 8





7x40mm Screw x 8






x1

Assembly Instructions


Step 19

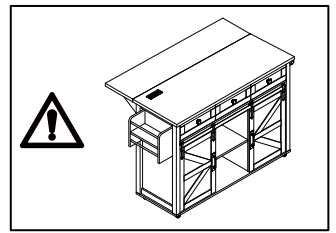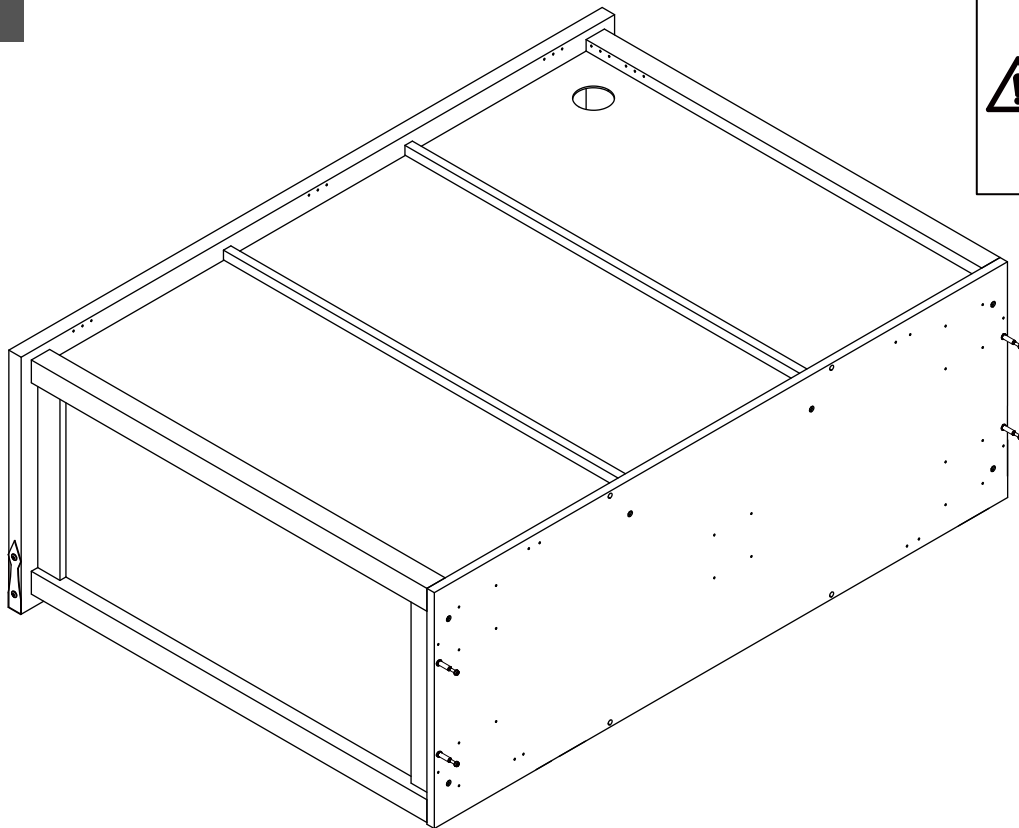

Step 20

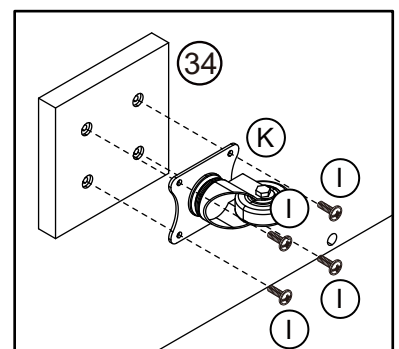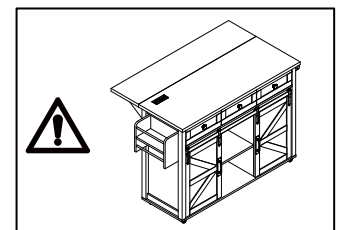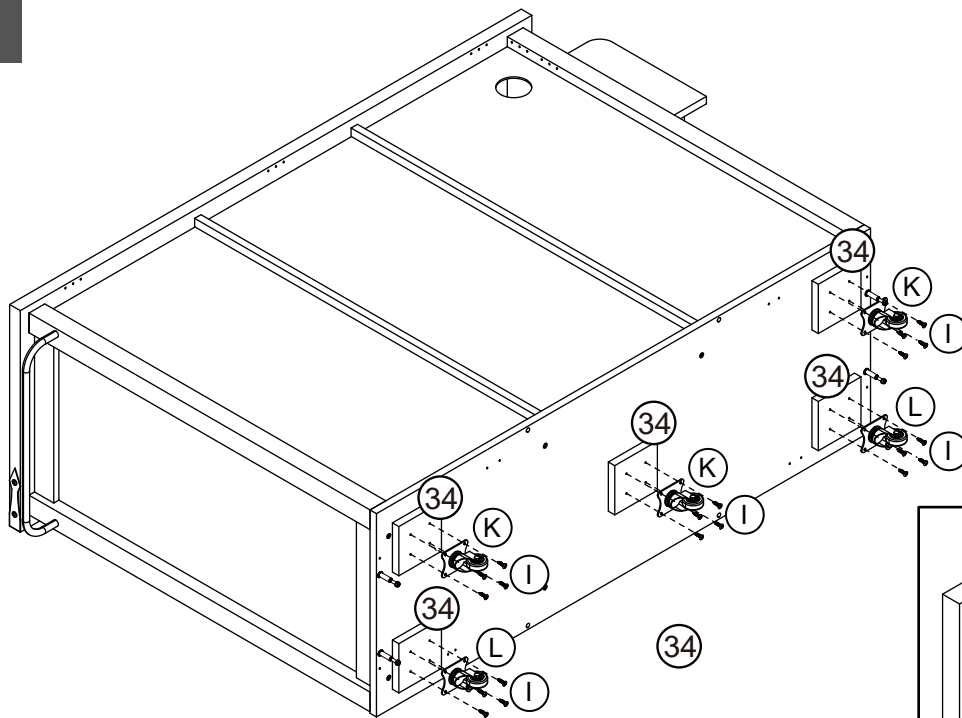


(K)



Caster x 3

(L)



Locking caster x 2



(I)



6*25mm Screw x 20


Assembly Instructions

Step 21

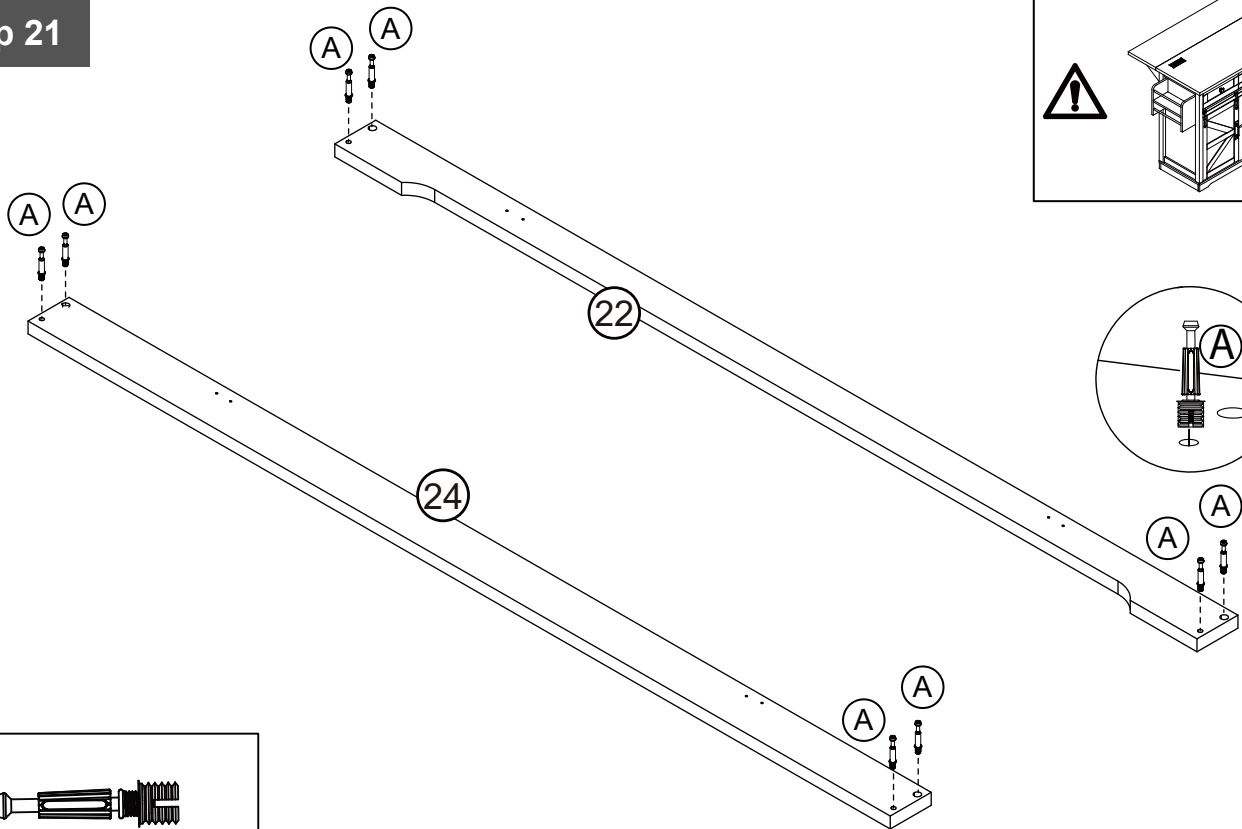


Cam Bolt x 8



Step 22

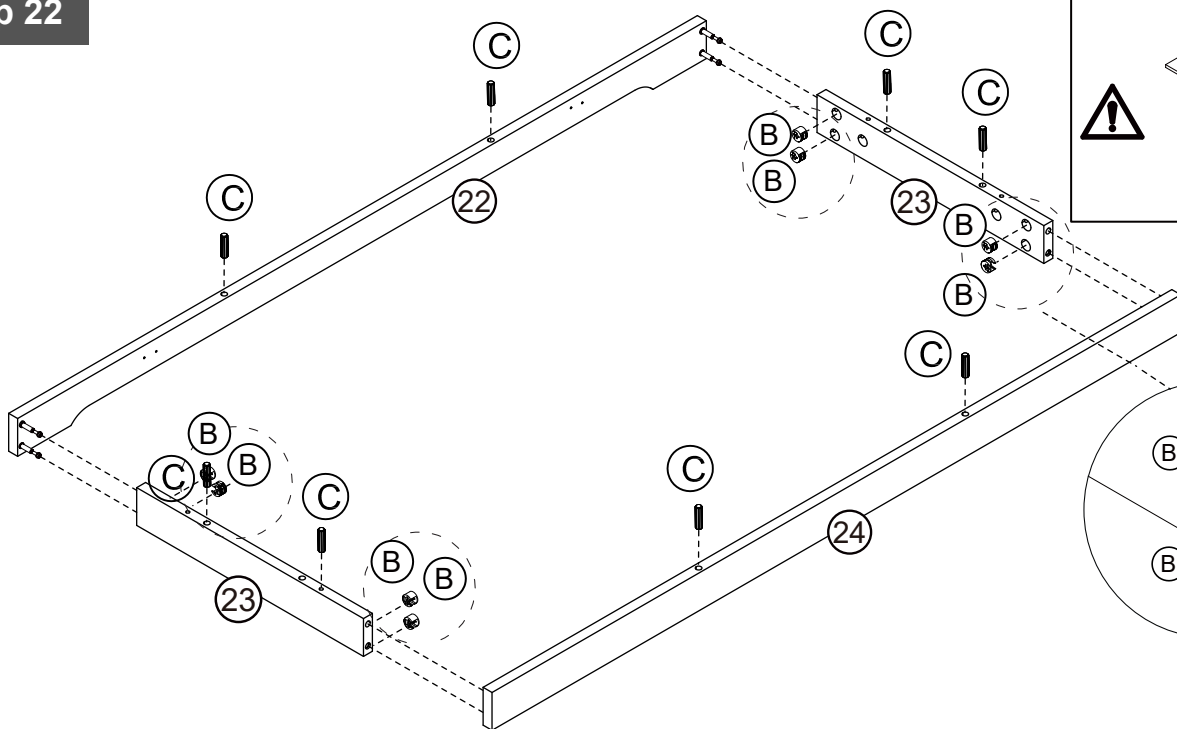

Cam lock x 8








6*40mm Dowel x 8

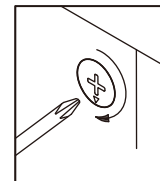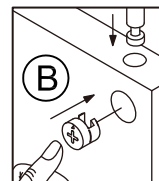

Assembly Instructions

Step 23

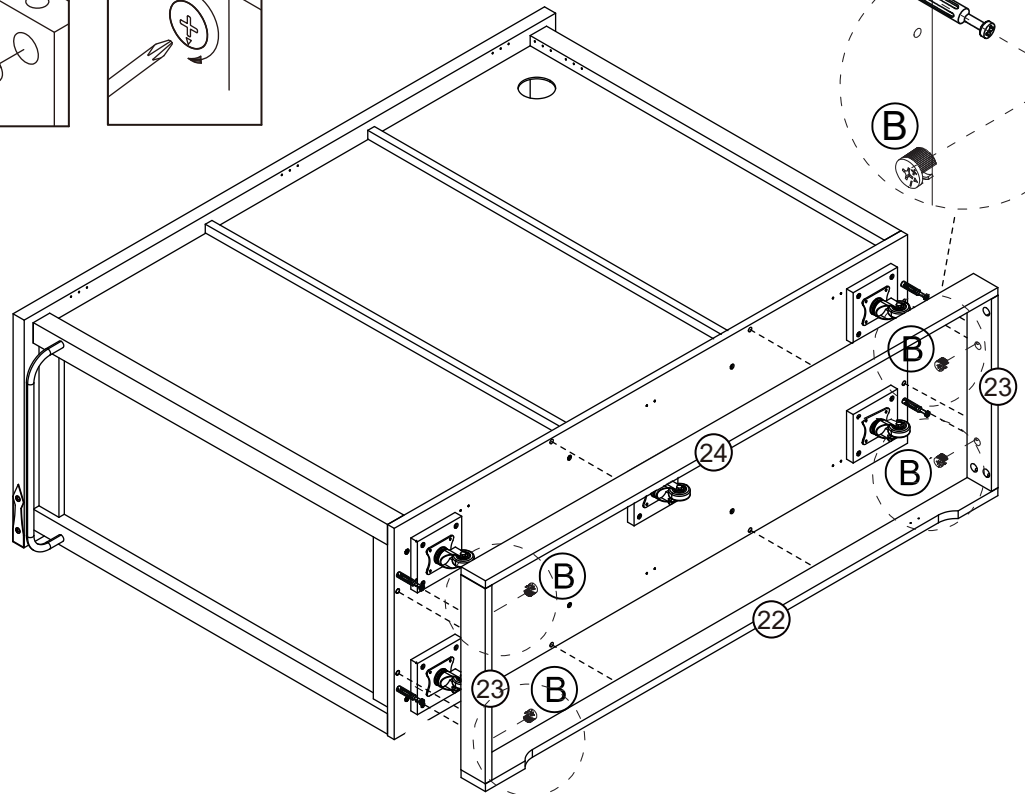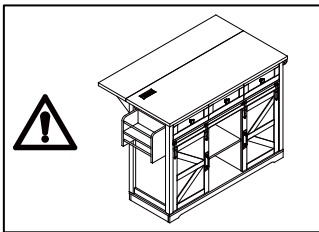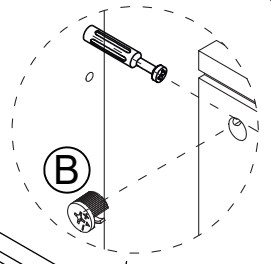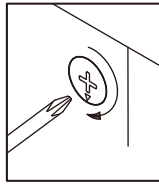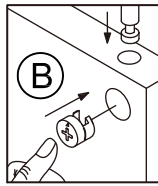


(B)




Cam lock x 4

Step 24

(P)

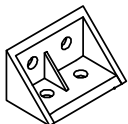


Angle iron x 4

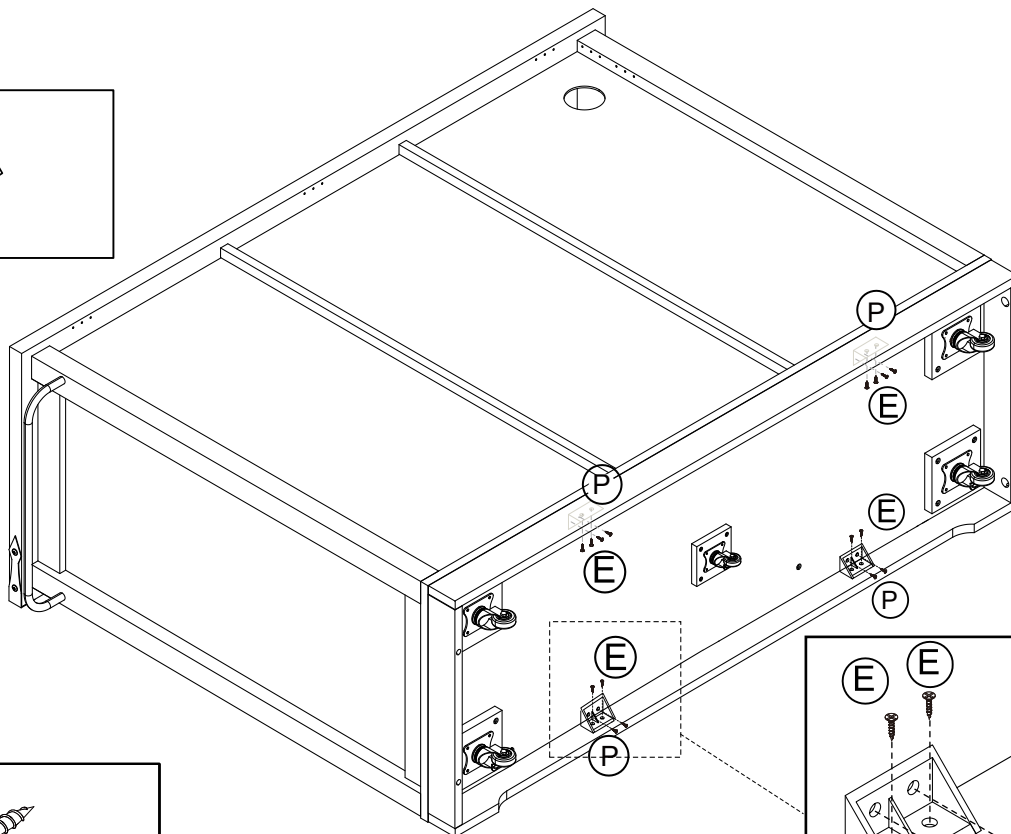

(E)




3*12mm Screw x 16

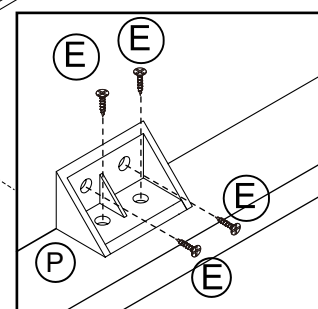

Assembly Instructions

Step 25

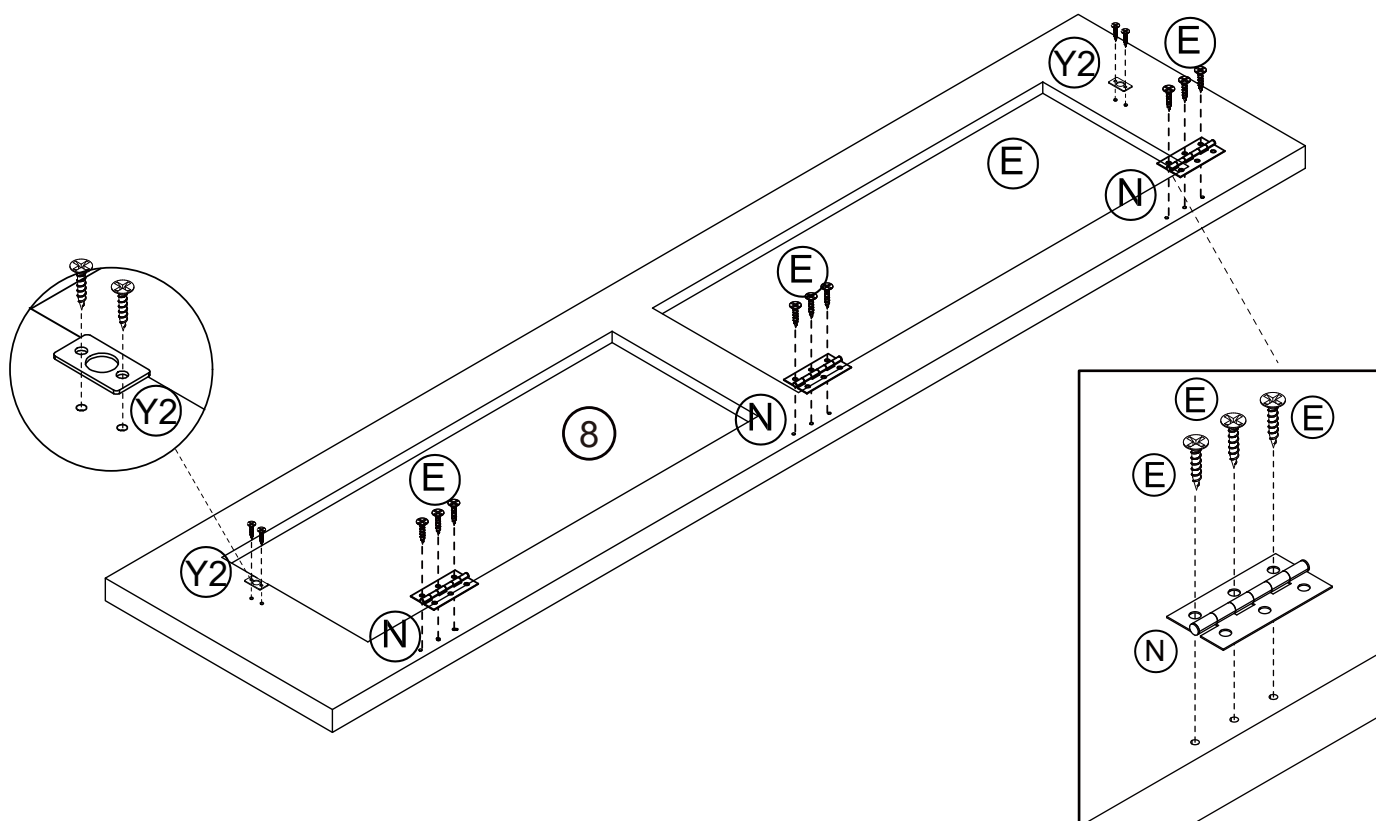


(E)




3*12mm Screw x 9

(N)



hinge x 3


(Y2)

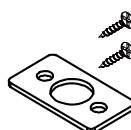

x 2

Assembly Instructions

Step 26

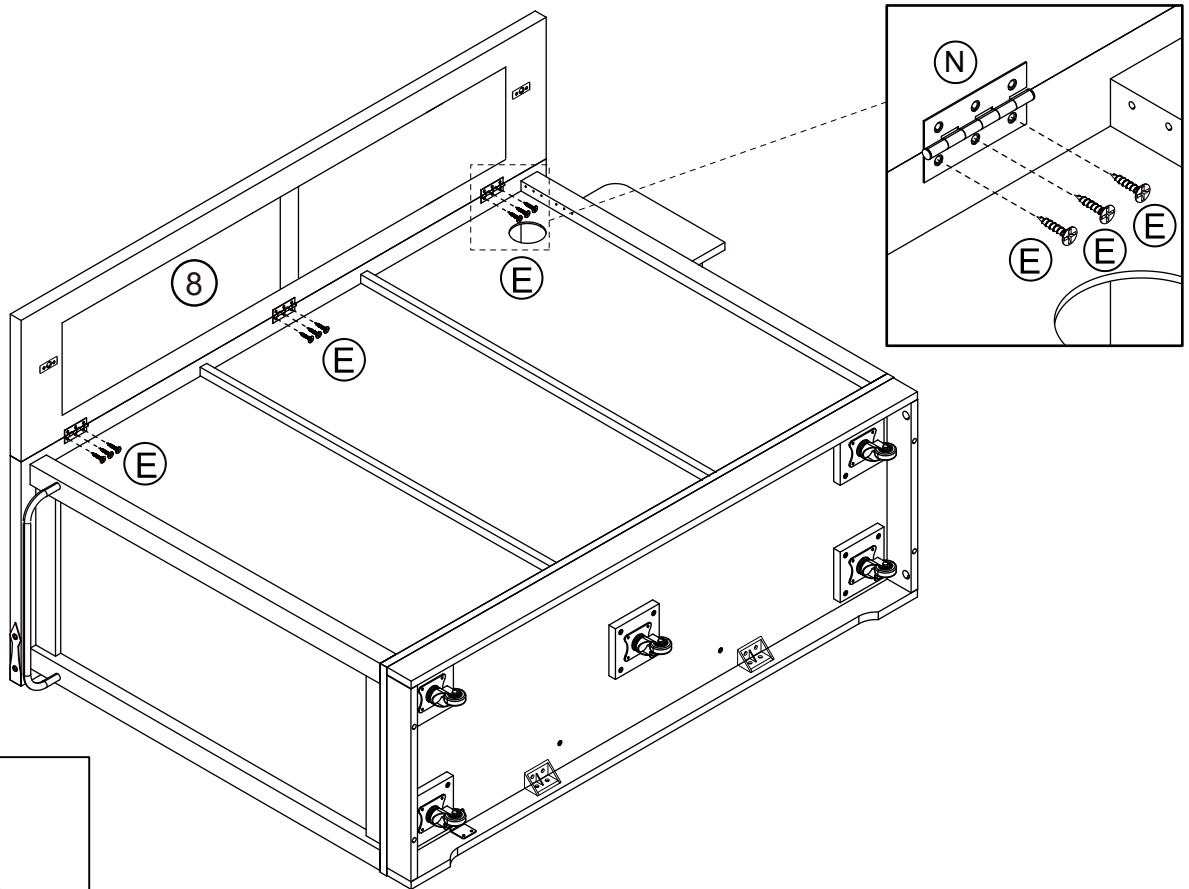


(E)



3*12mm Screw x 9

Step 27

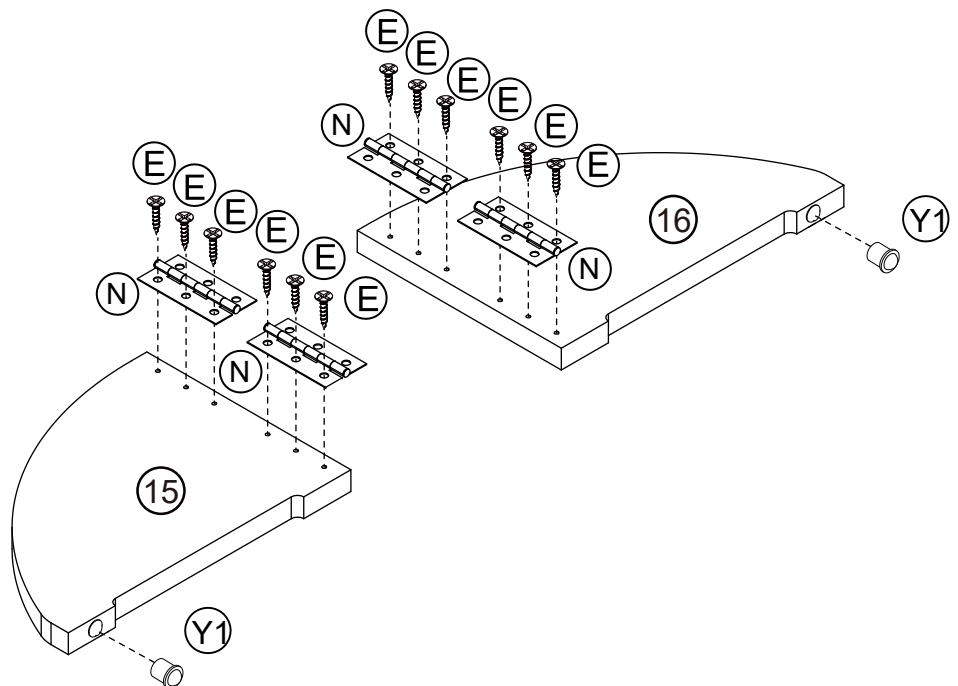


(E)



3.5*12mm Screw x 12

(N)



hinge x 4


(Y1)



x 2

Assembly Instructions

Step 28

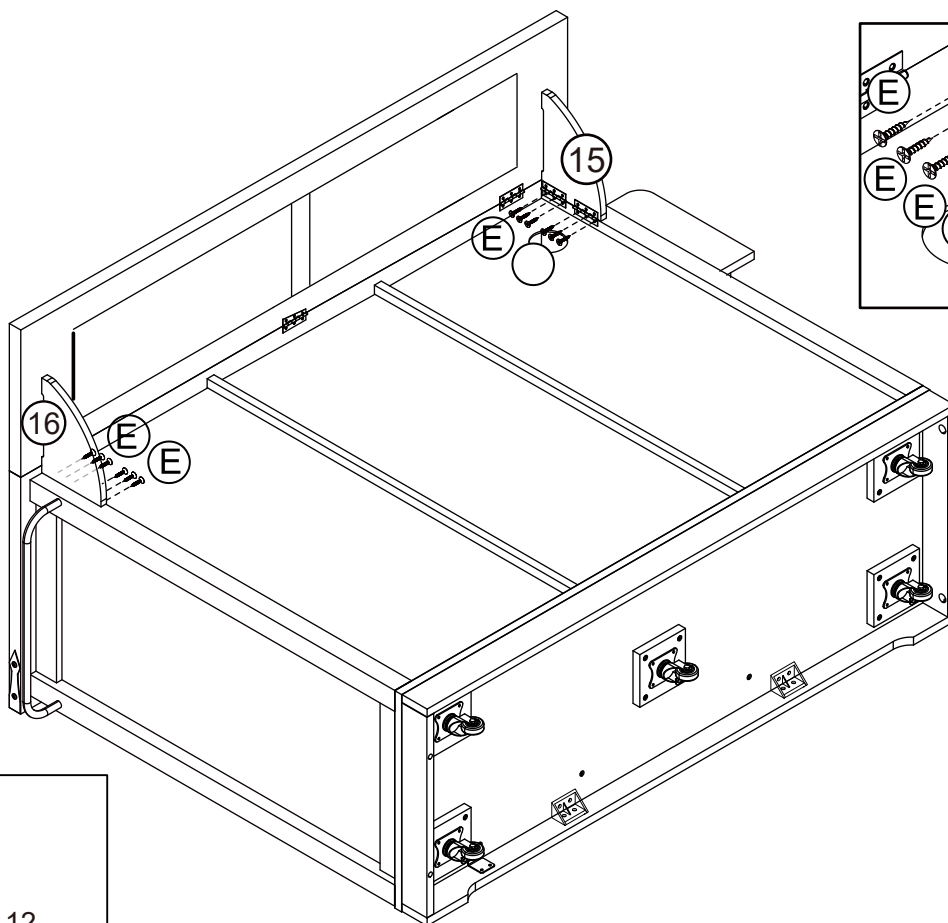


(E)



3*12mm Screw x 12

Step 29

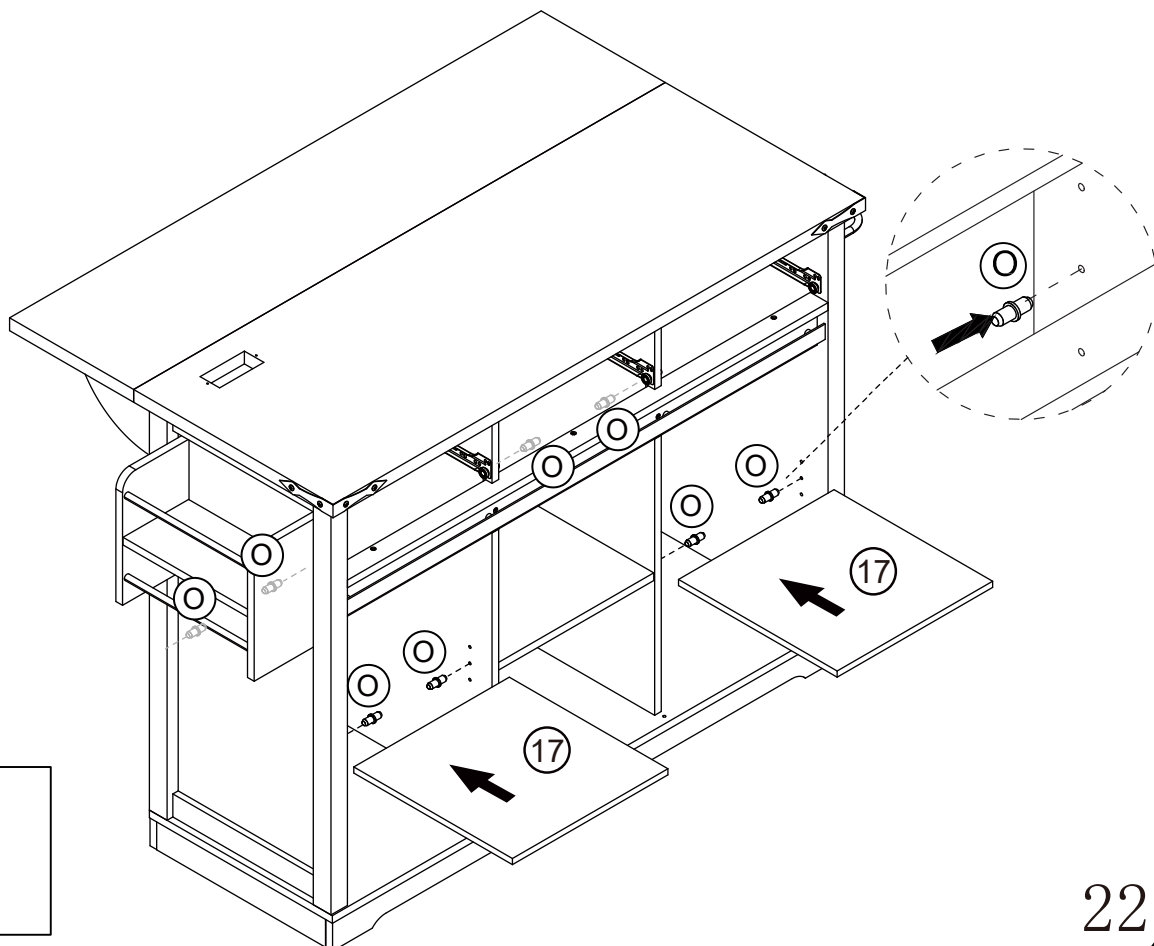




(O)



Pivot x 8


Assembly Instructions

Step 30

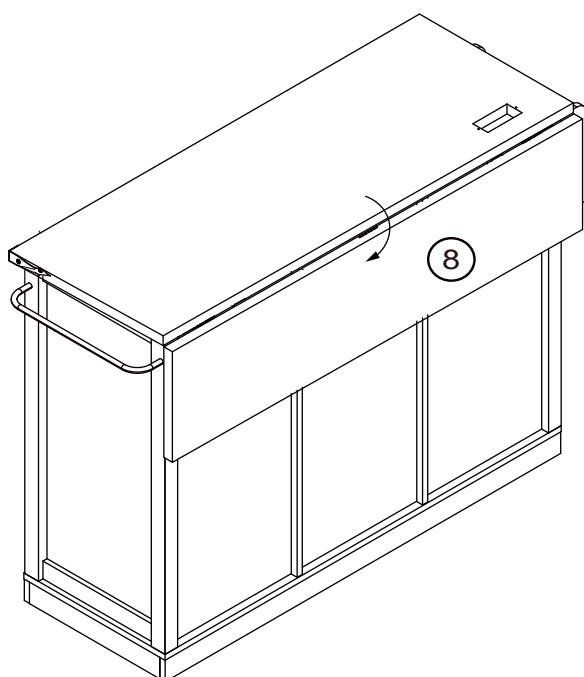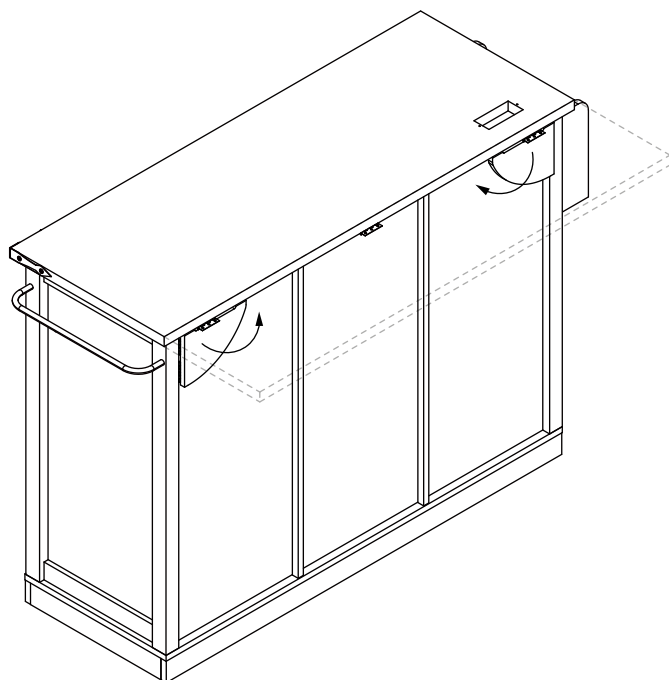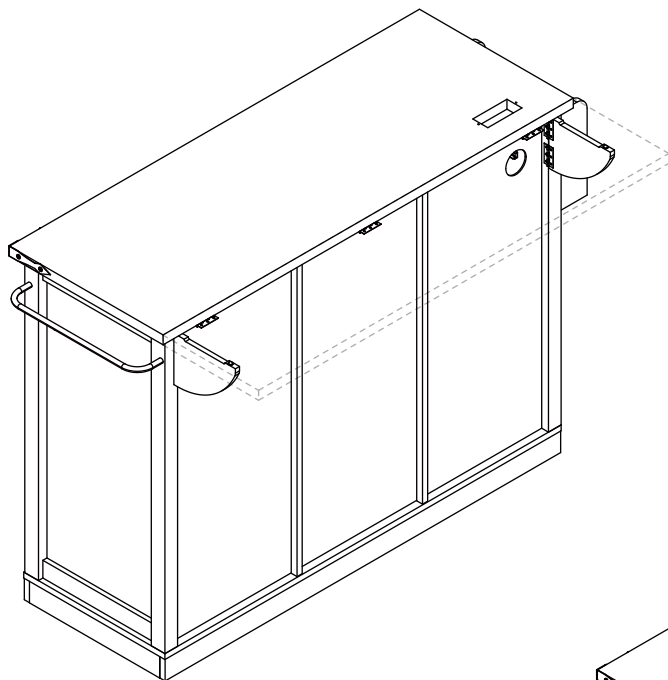


Assembly Instructions

Step 31

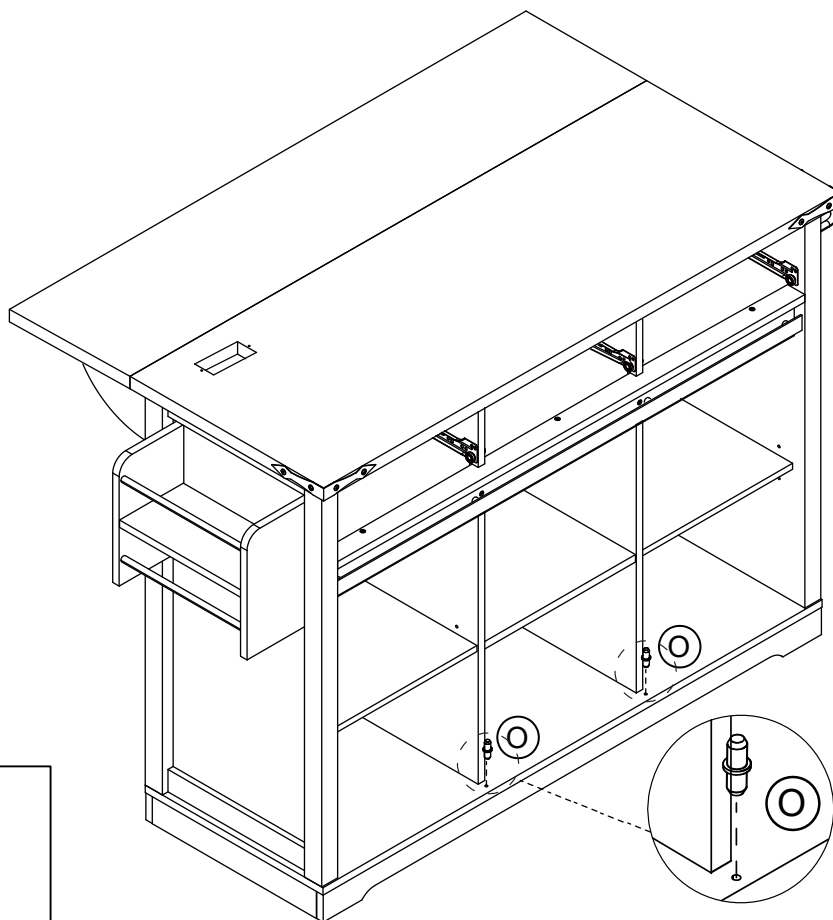


O




Pivot x 2

Step 32

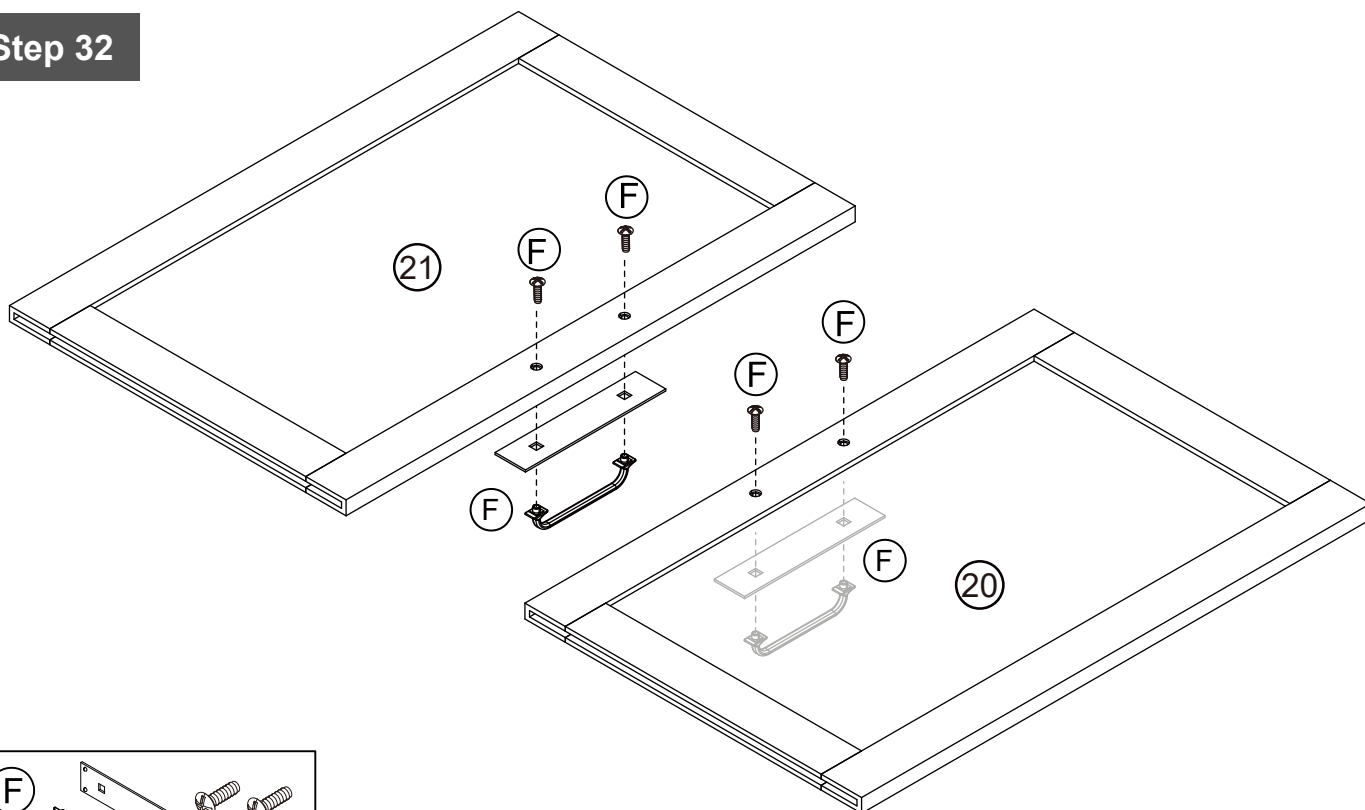


F





Hold hands +
4*22mm Screw x 2

Assembly Instructions

Step 33

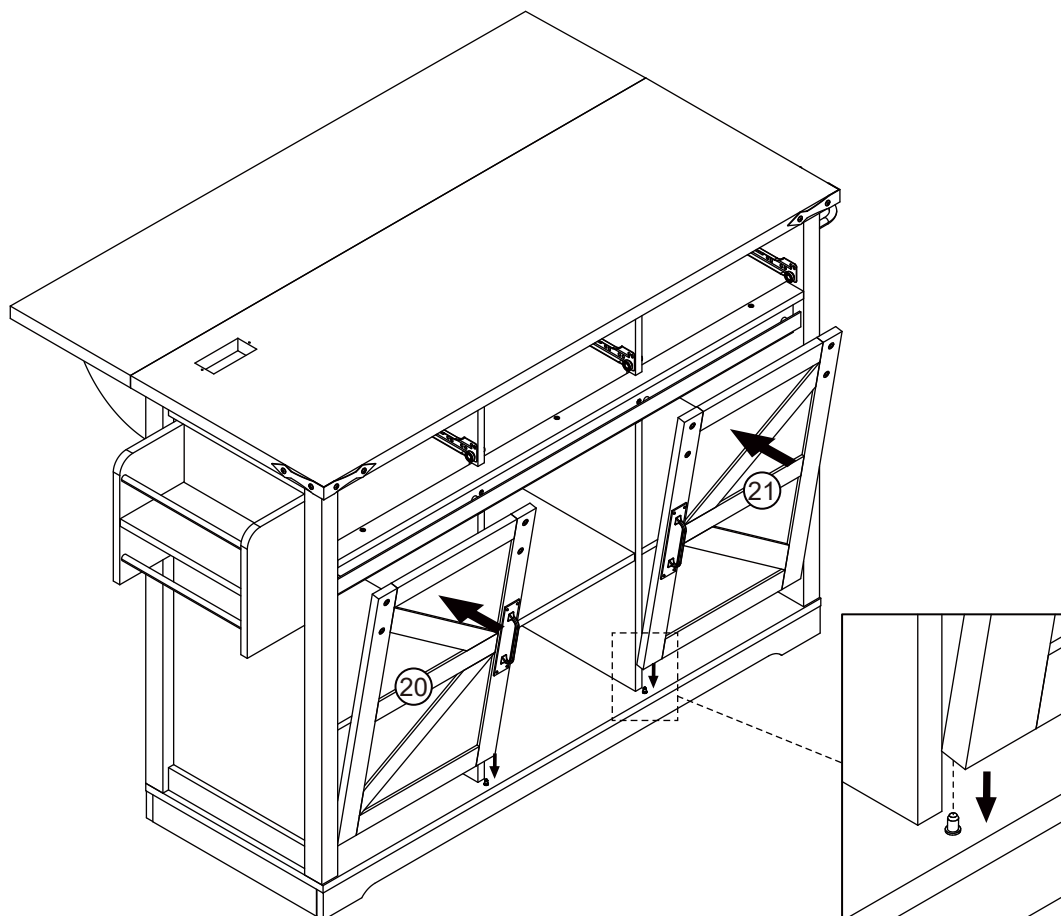


Step 34

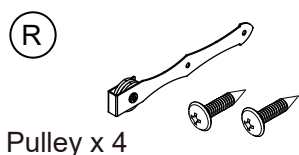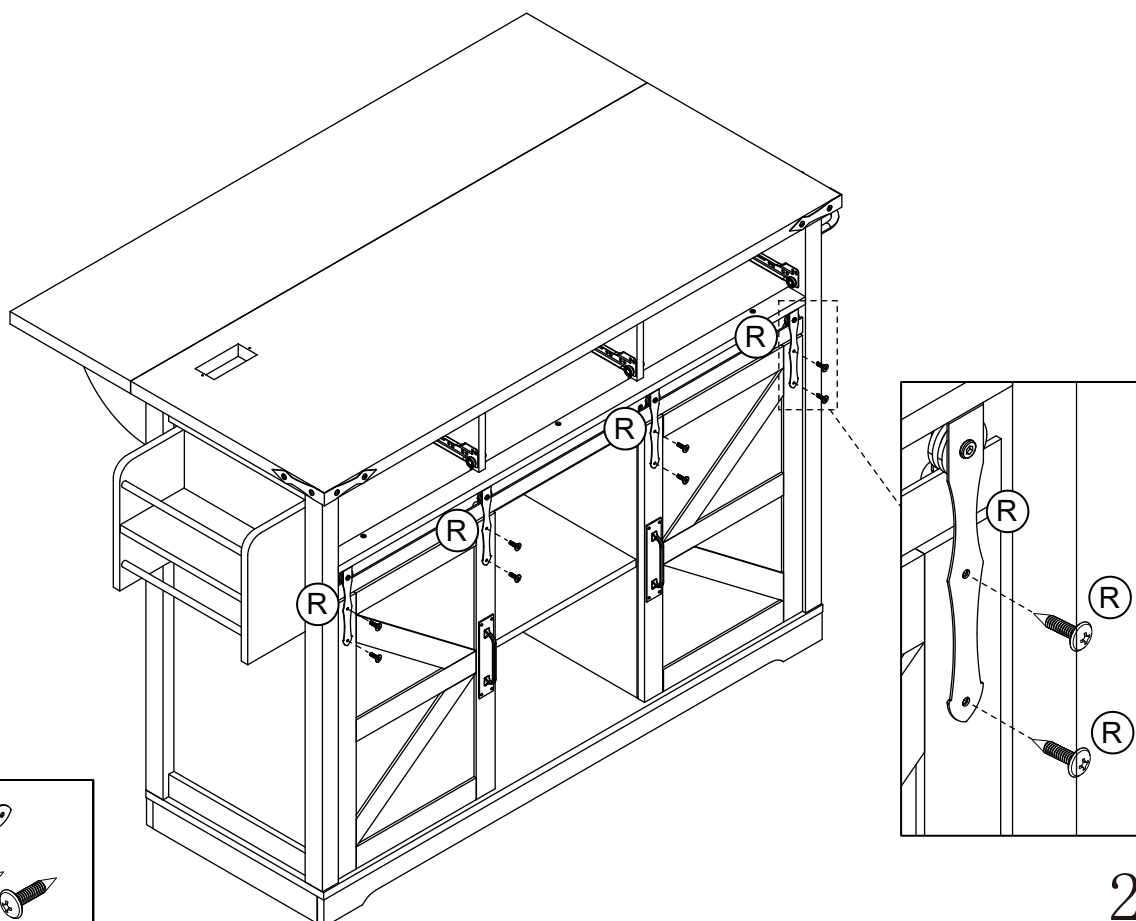

Assembly Instructions

Step 35

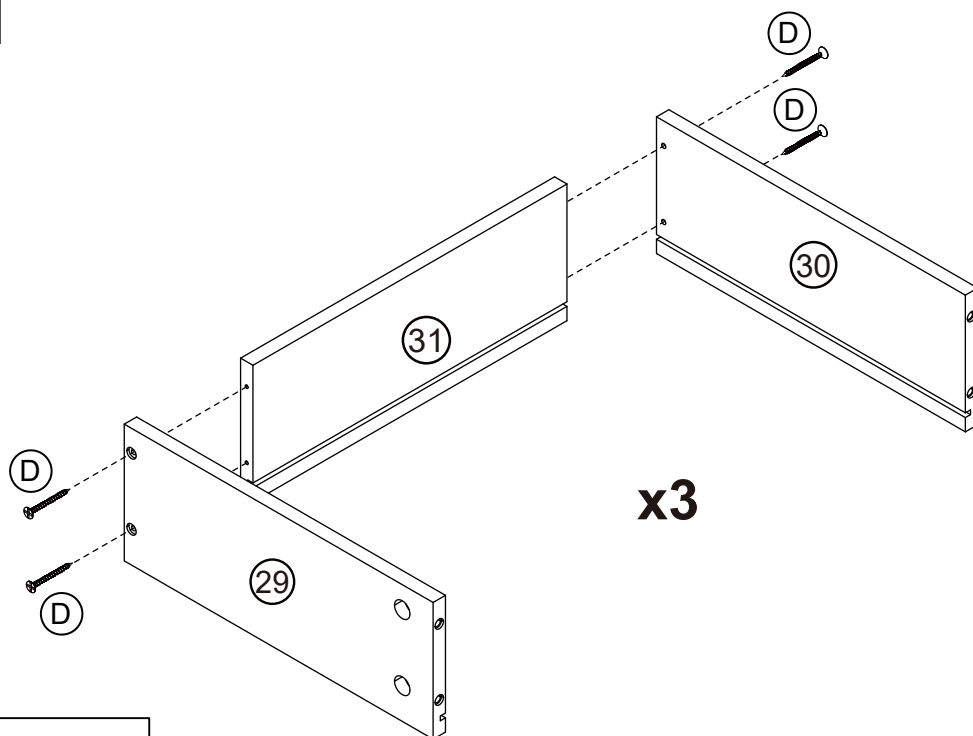


(D)





3.5*30mm Screw x 12

Step 36

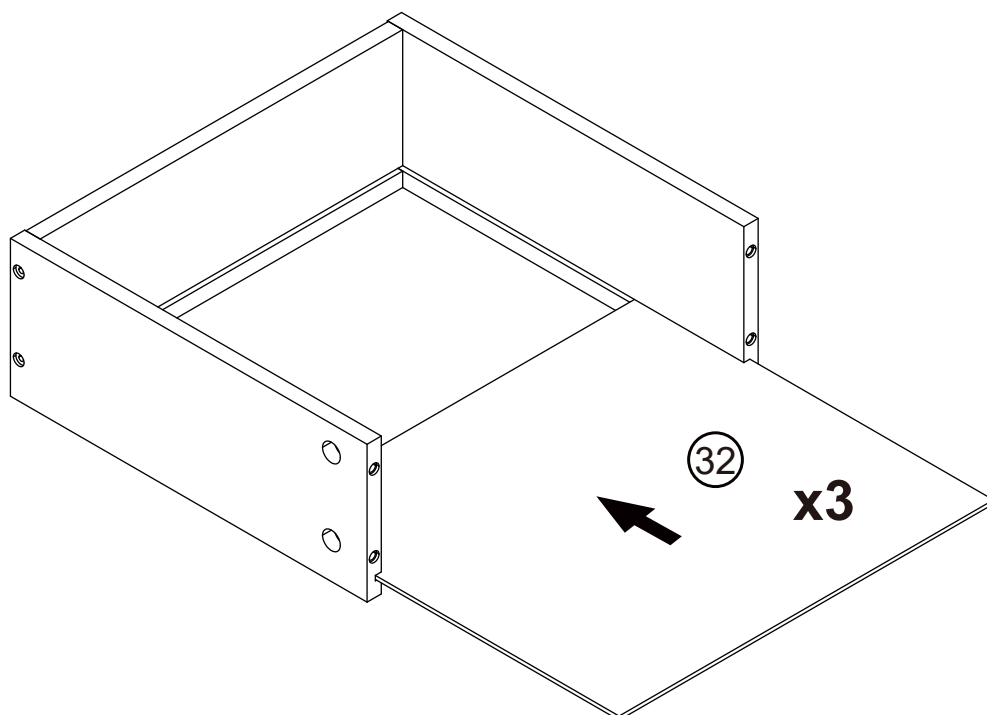



Assembly Instructions

Step 37

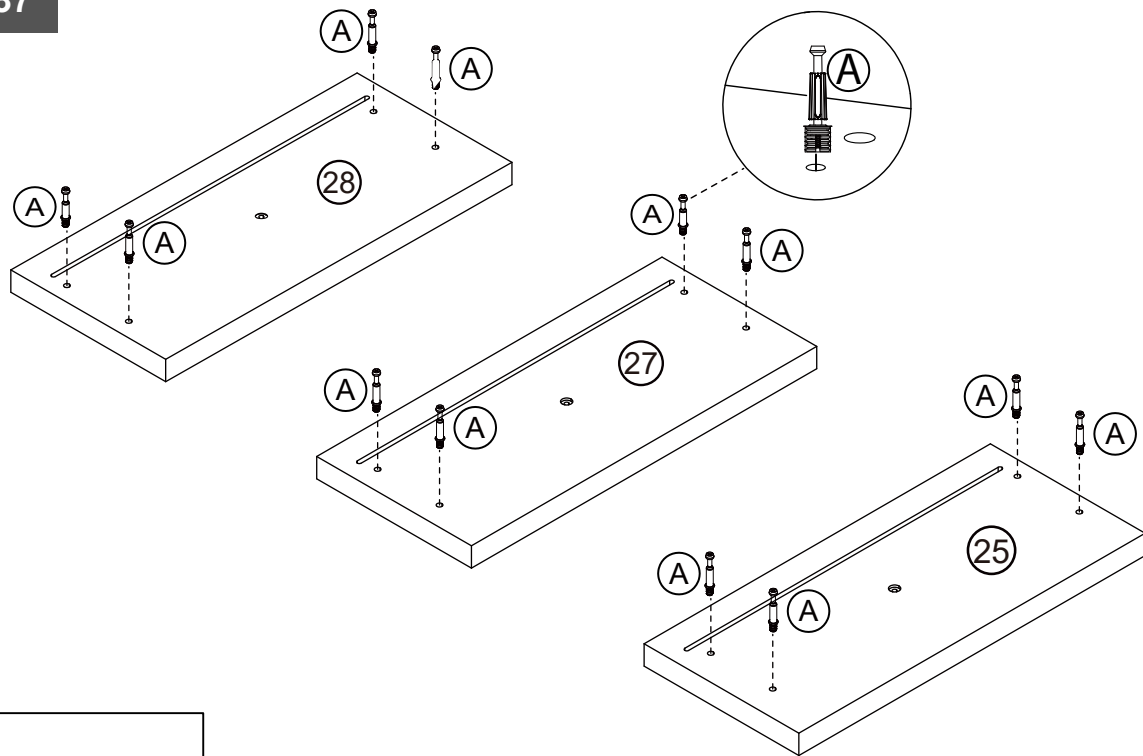

Cam Bolt x 12

Step 38

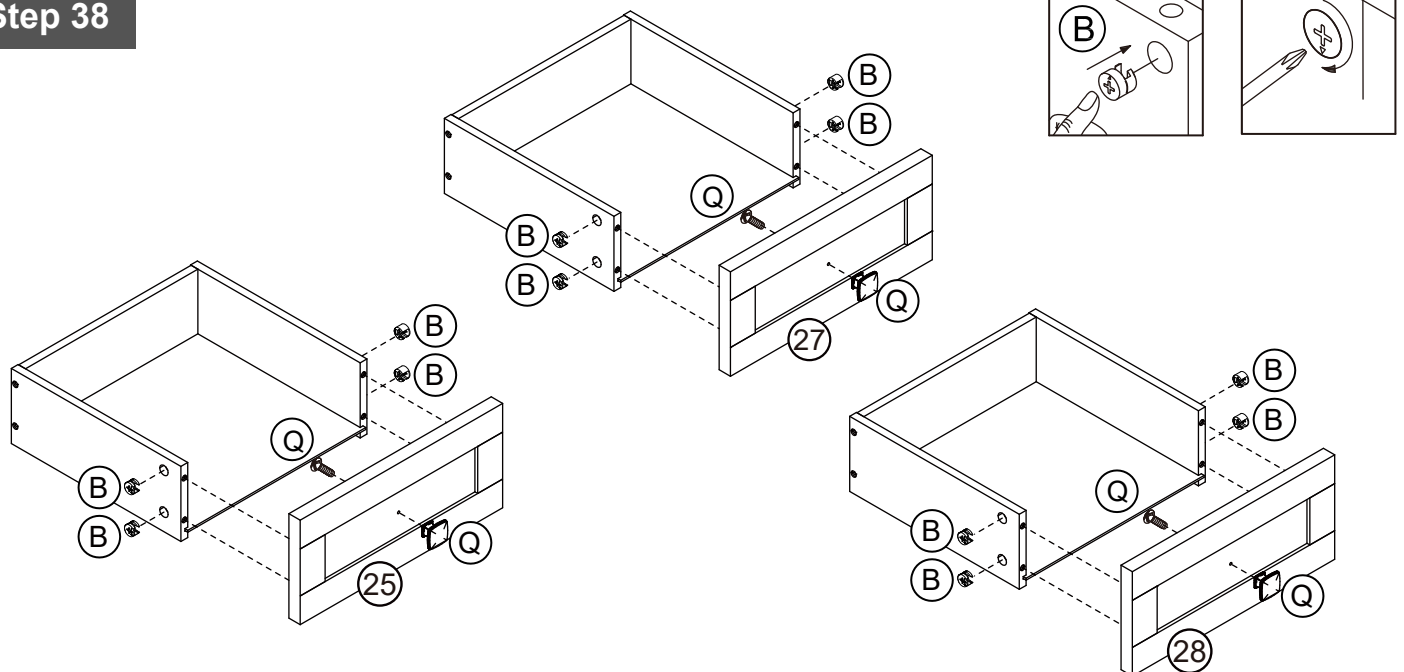


Cam lock x 12



Hold hands x 3
4*16mm Screw x 3

Assembly Instructions

Step 39

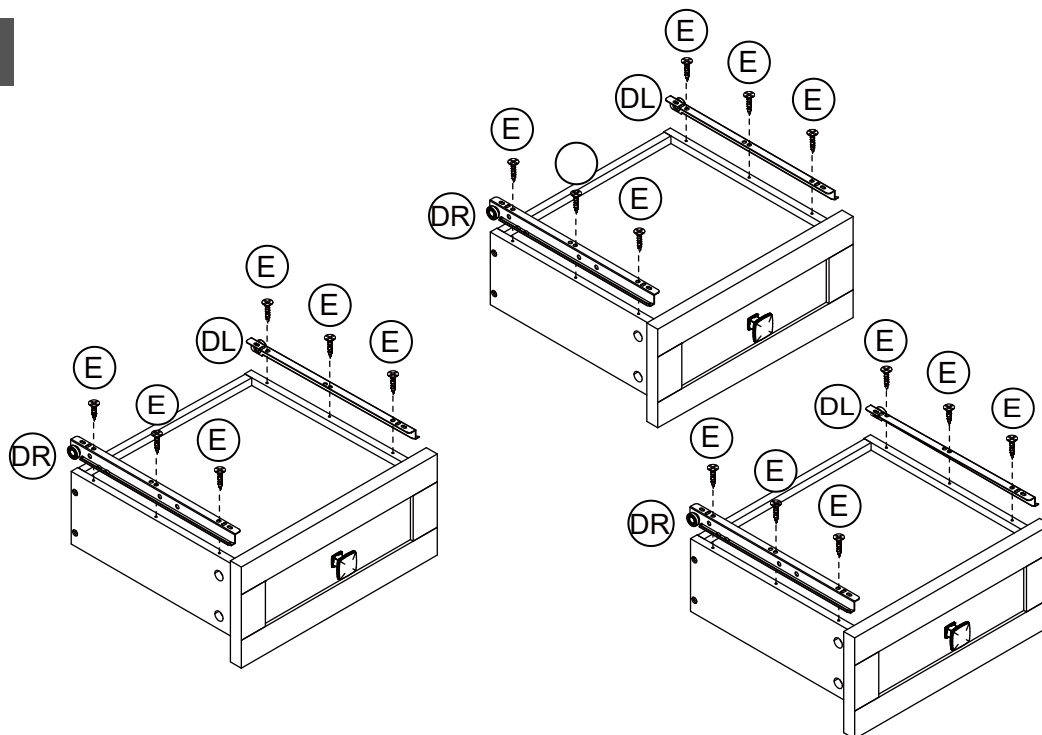


(E)




3*12mm Screw x 18

(DL)




Runner 300mm x 3

(DR)





Runner 300mm x 3

Step 40


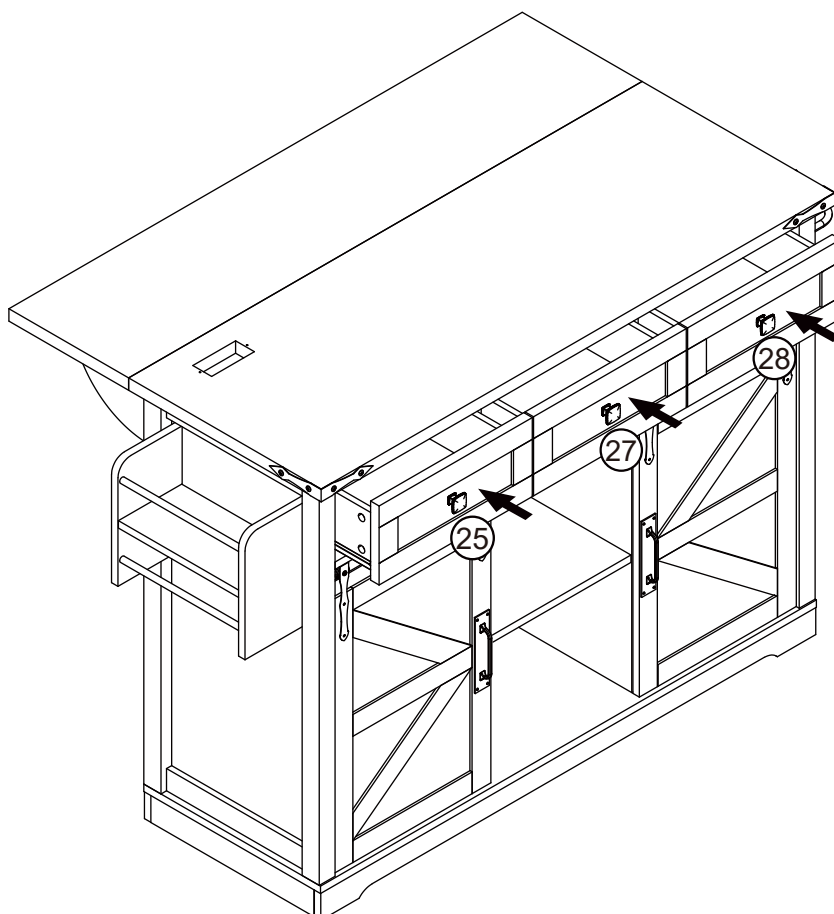


Assembly Instructions

Step 41

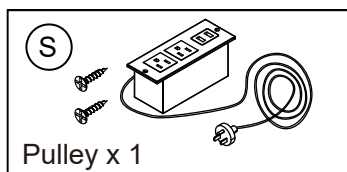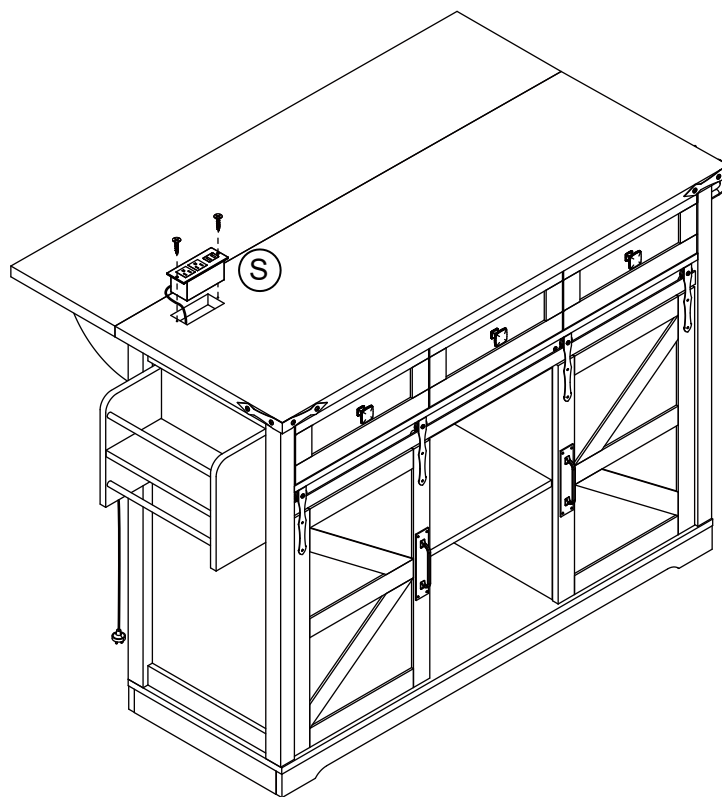

Step 42

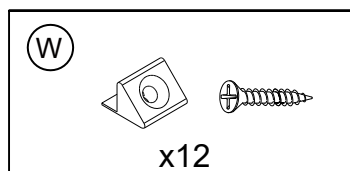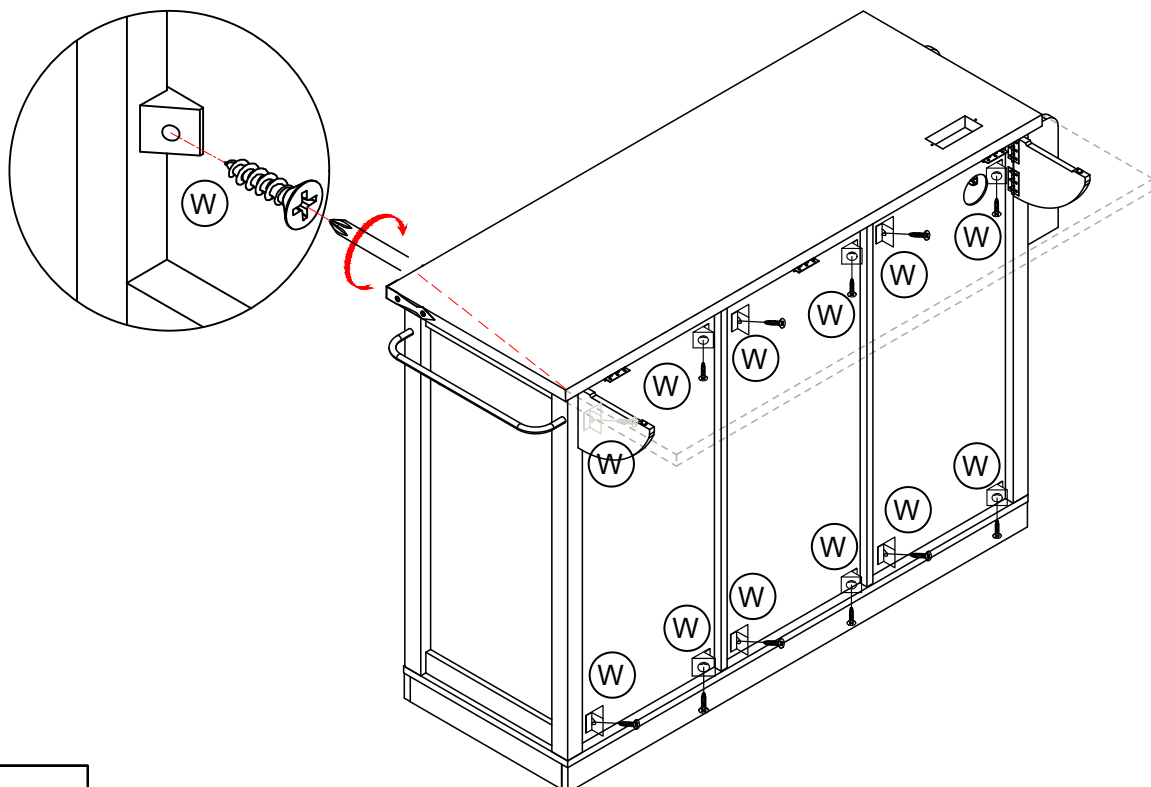

Assembly Instructions

Step 43

