


Bed Frame

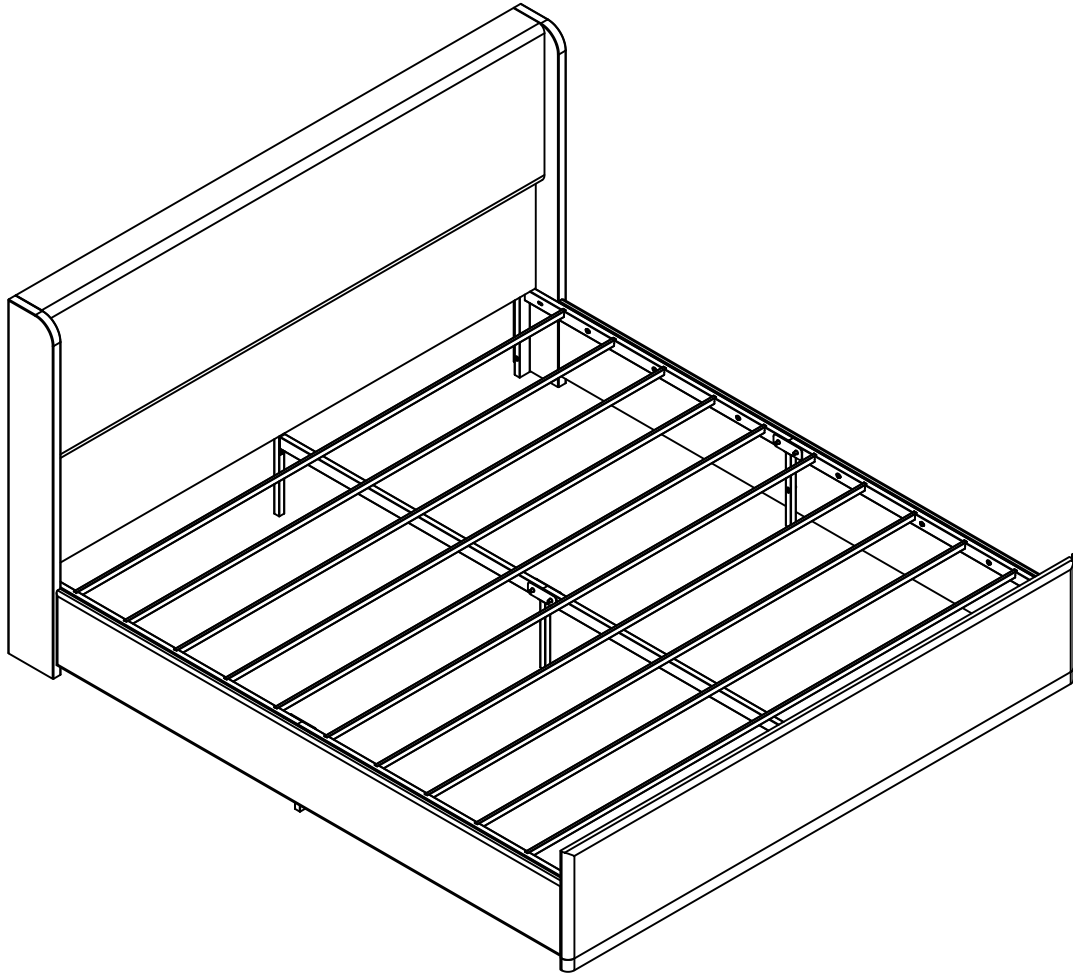


Model:C366-K-WH


PRODUCT GUIDE AND INSTALLATION MANUAL




Parts List:

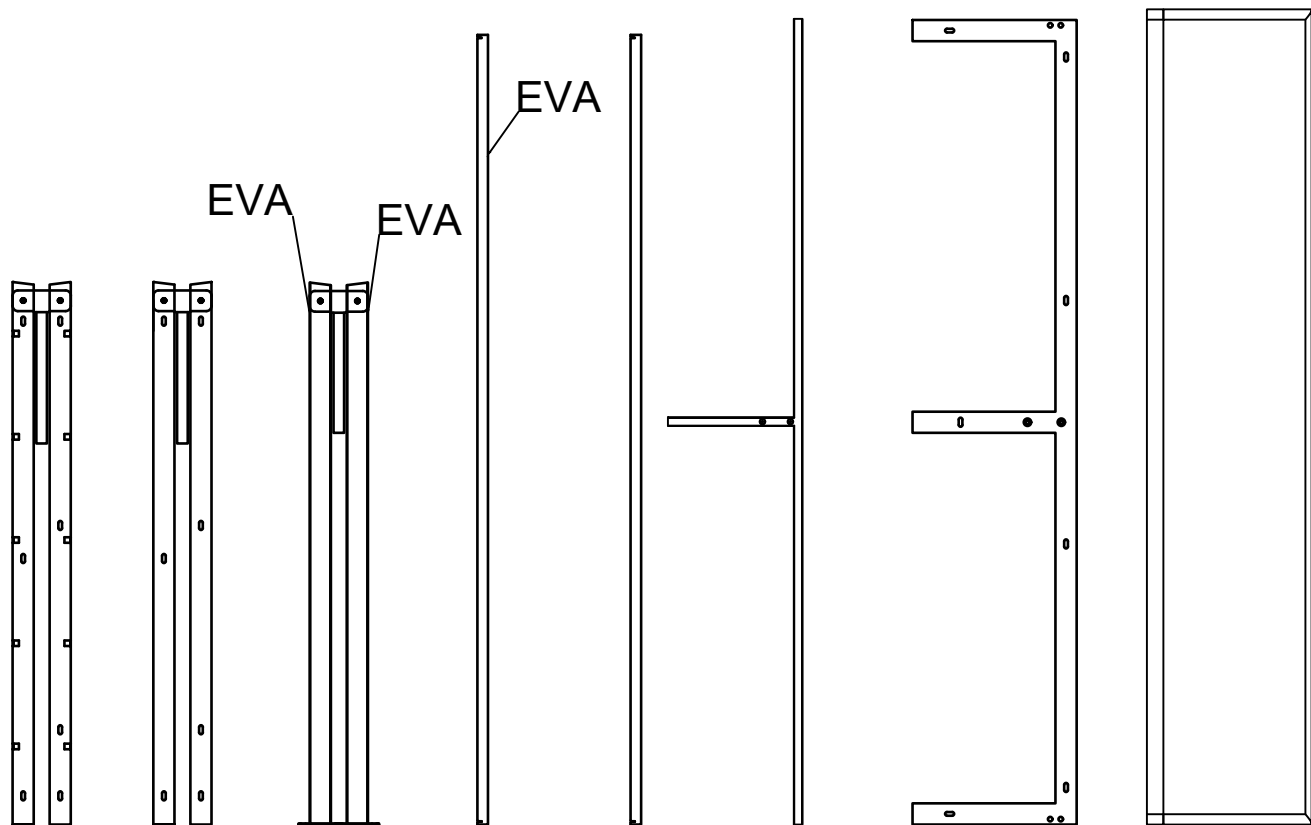


A	B	C	D1	D2	E	F	G
1pcs	1pcs	1pcs	4pcs	6pcs	1pcs	1pcs	1pcs

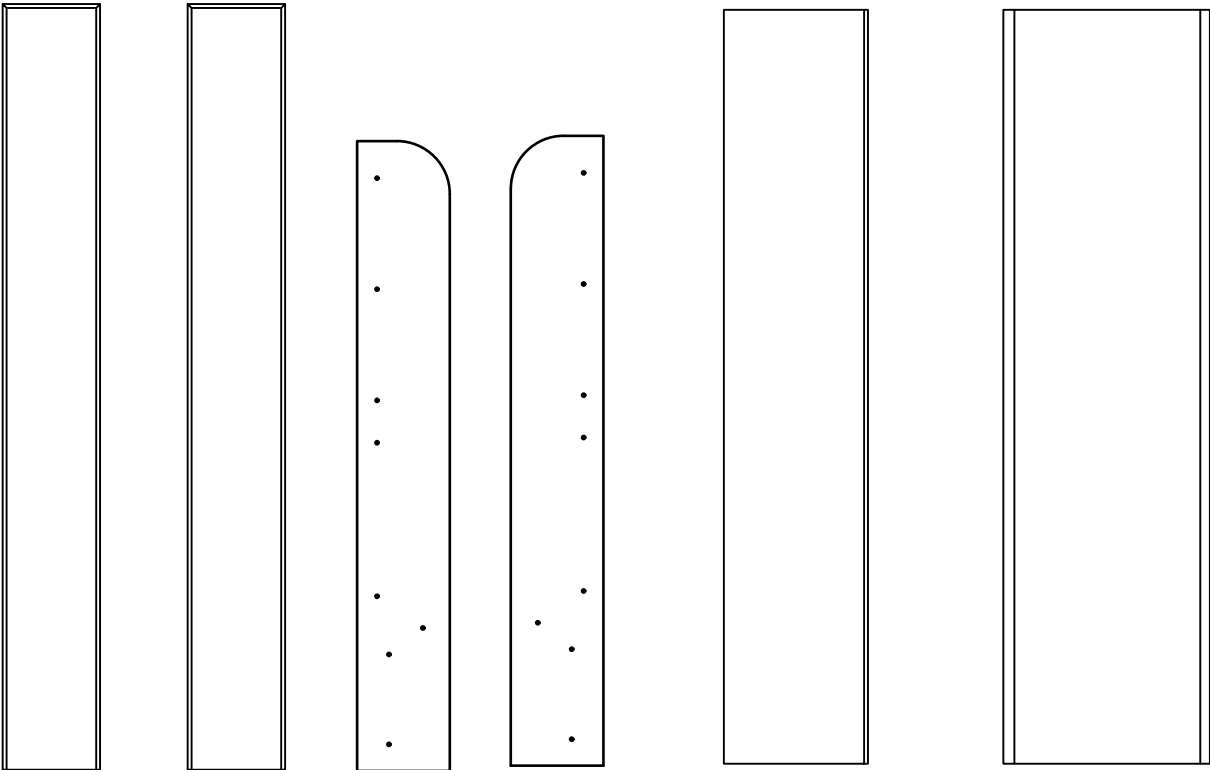

H1	H2	J1	J2	L	M
1pcs	1pcs	1pcs	1pcs	1pcs	1pcs

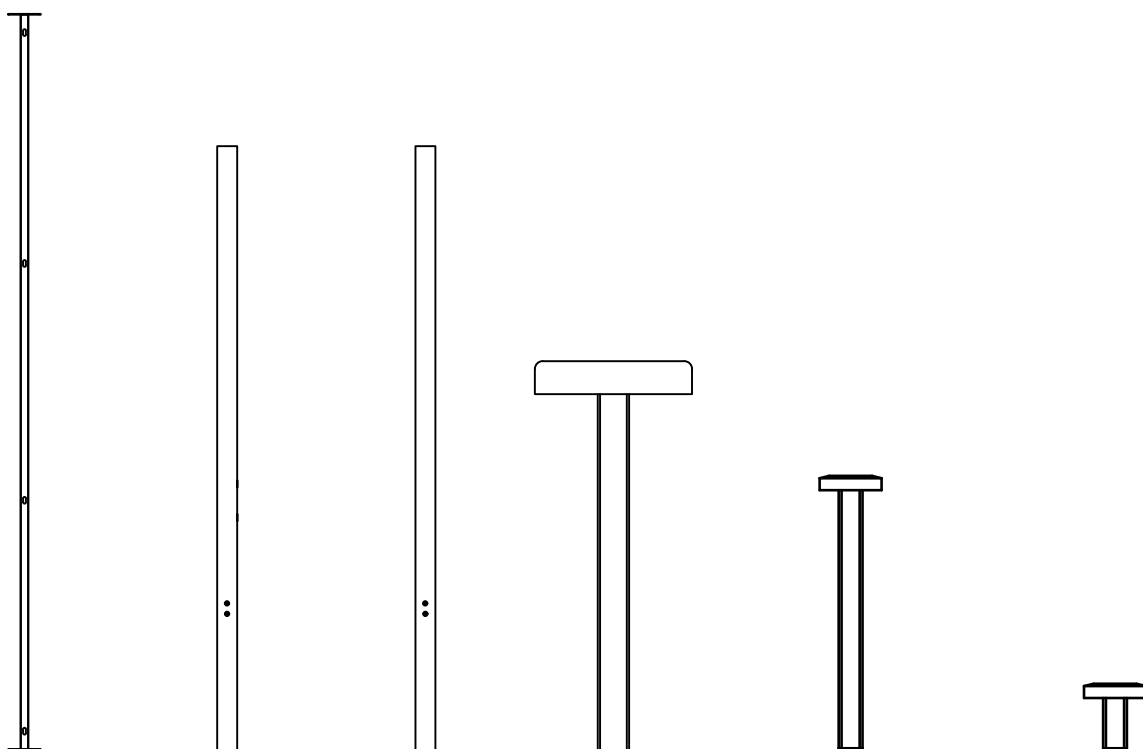


O	K1	K2	E1	S1	S2
1pcs	1pcs	1pcs	2pcs	10pcs	4pcs
				M6x55mm	M6x15mm

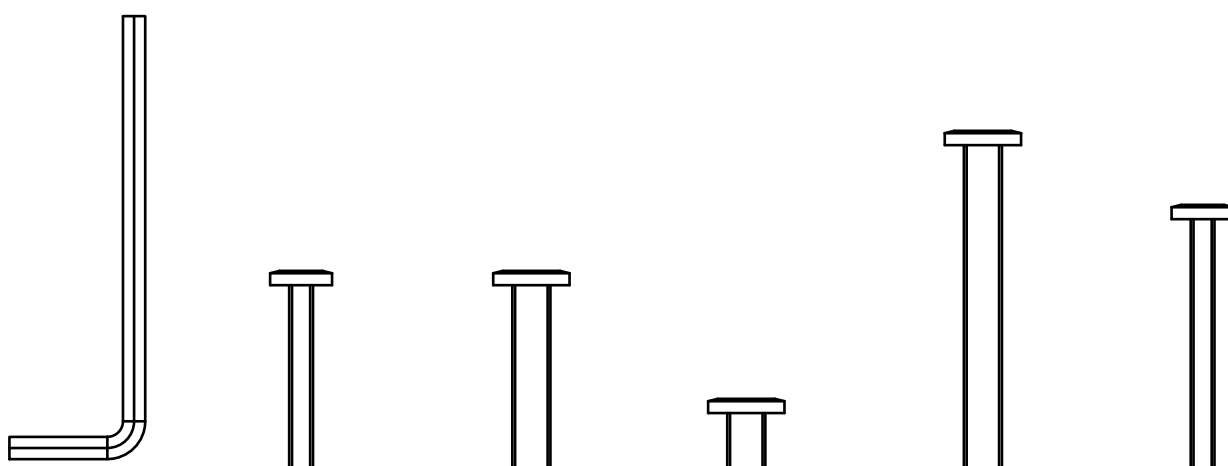


R	S3	T1	T2	T3	S4
1pcs	27pcs	8pcs	4pcs	4pcs	8pcs
	M6x35mm	M8x35mm	M8x15mm	M8x50mm	M6x45mm

ASSEMBLY


STEP 1

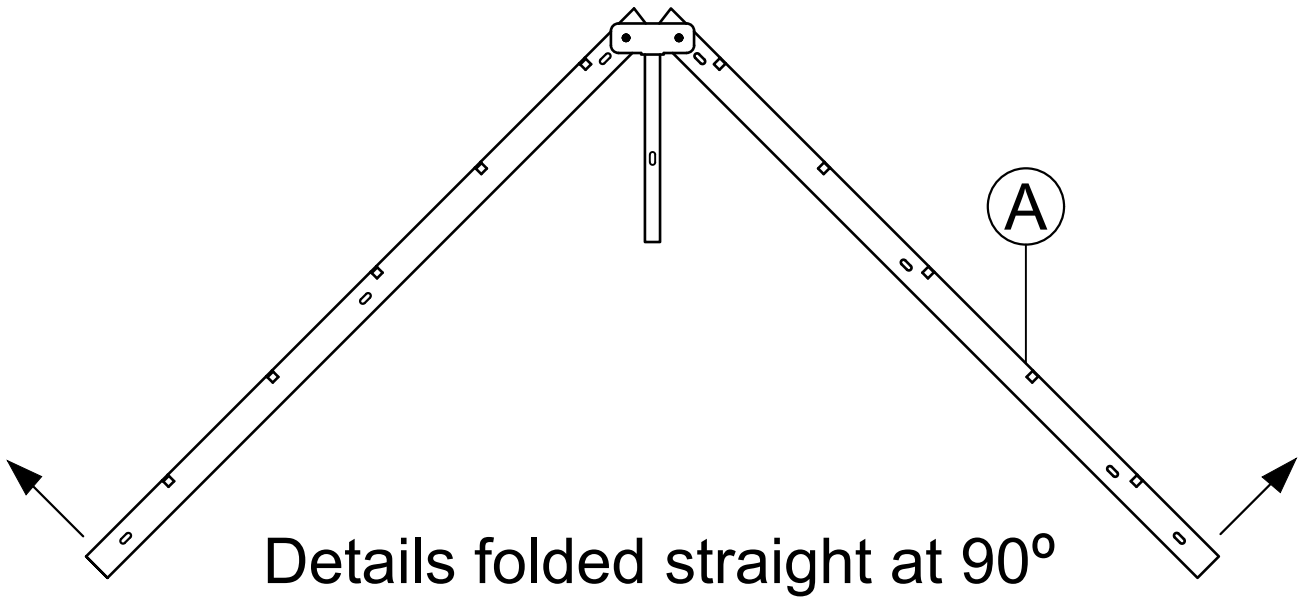


STEP 2

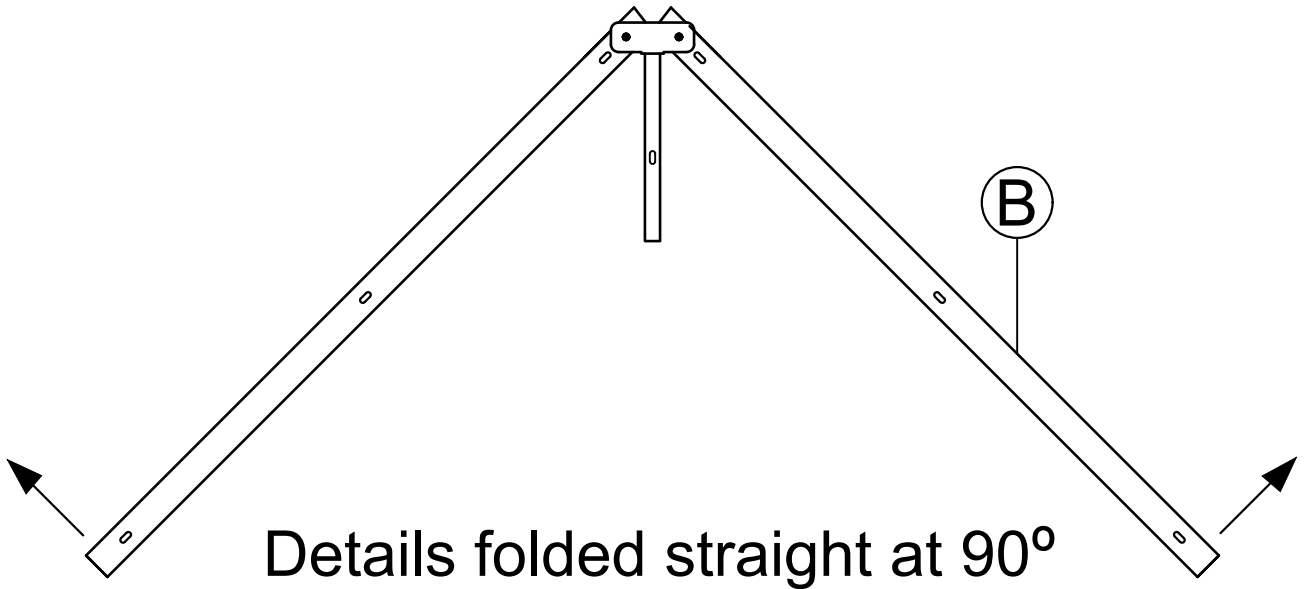

STEP 3

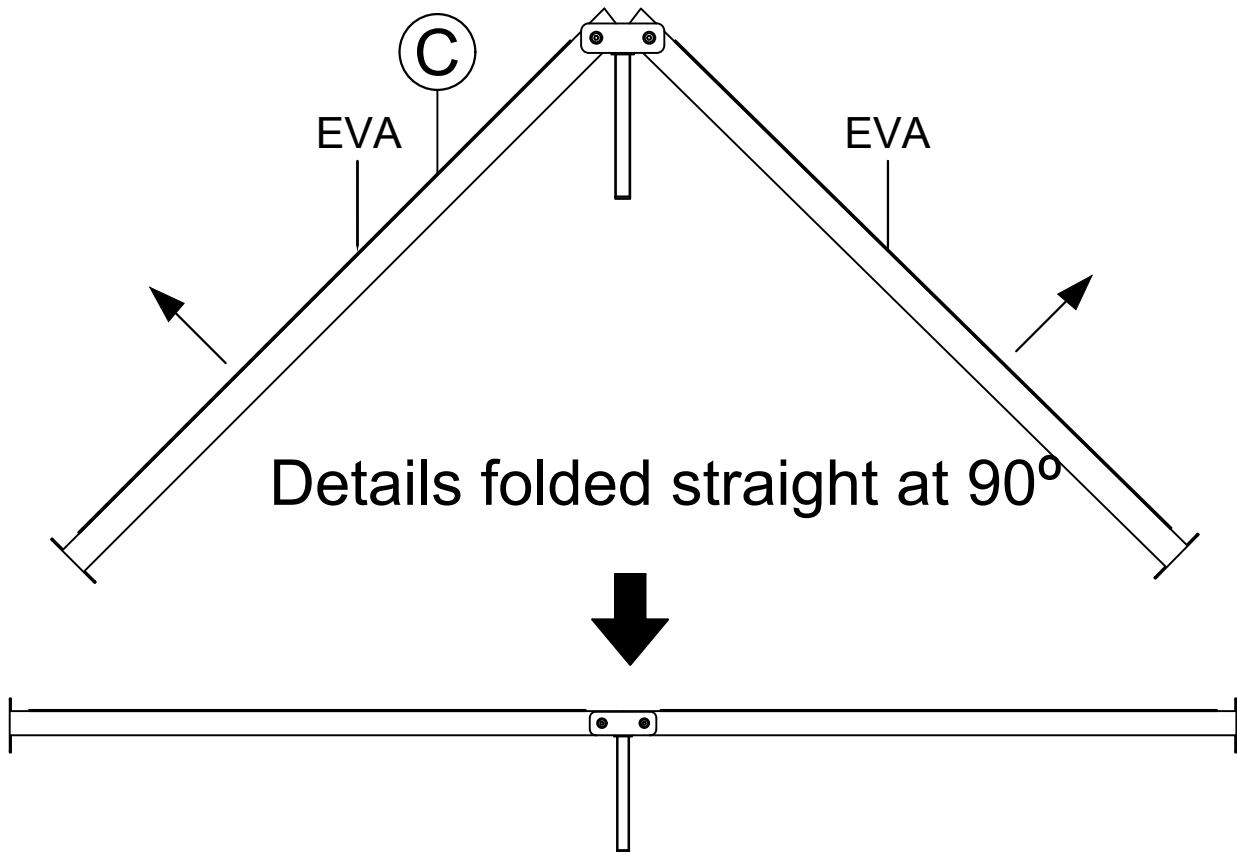


STEP 4

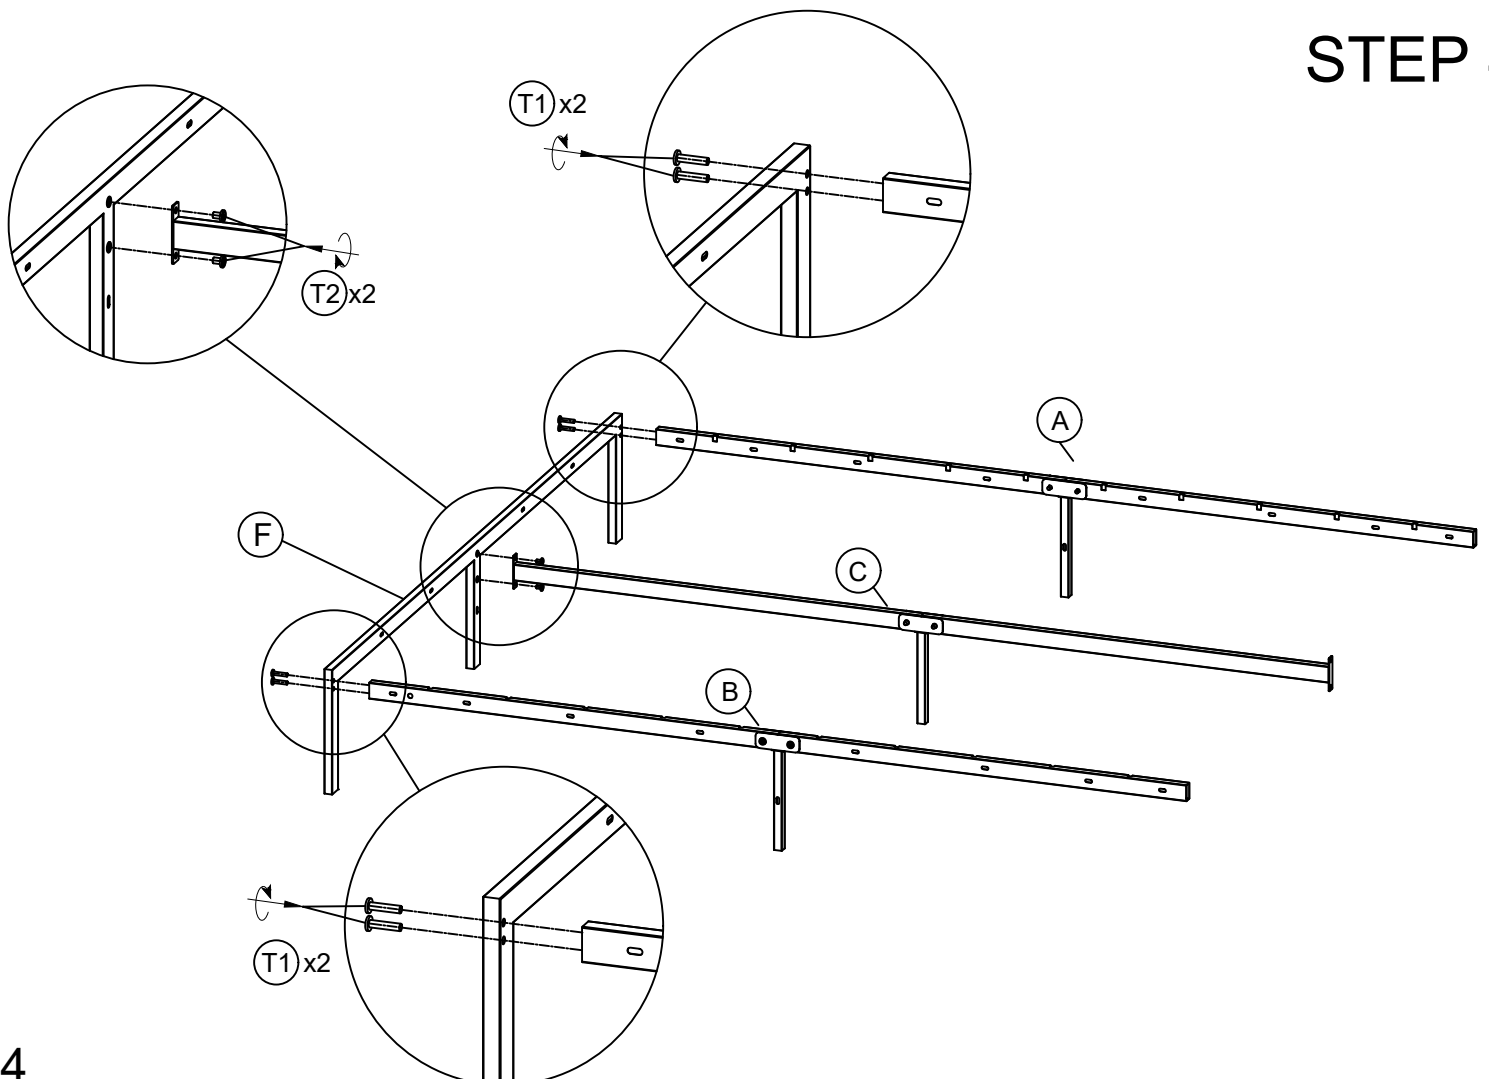


STEP 5


Footboard side

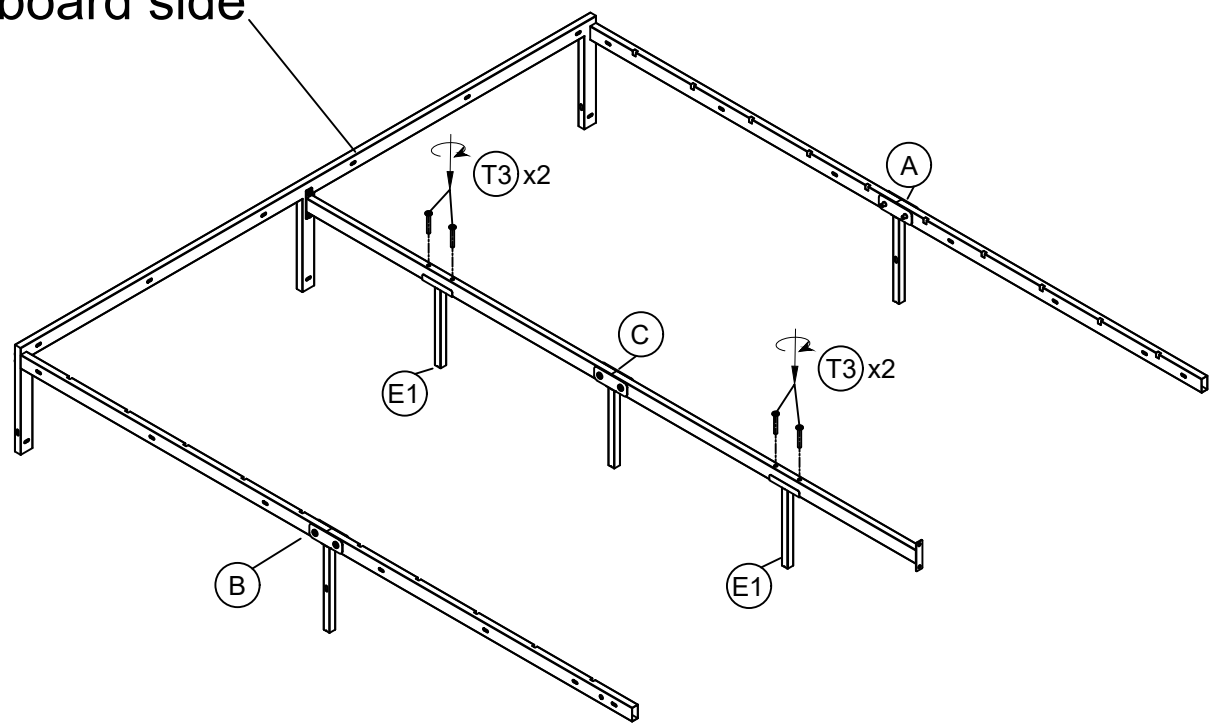


STEP 6

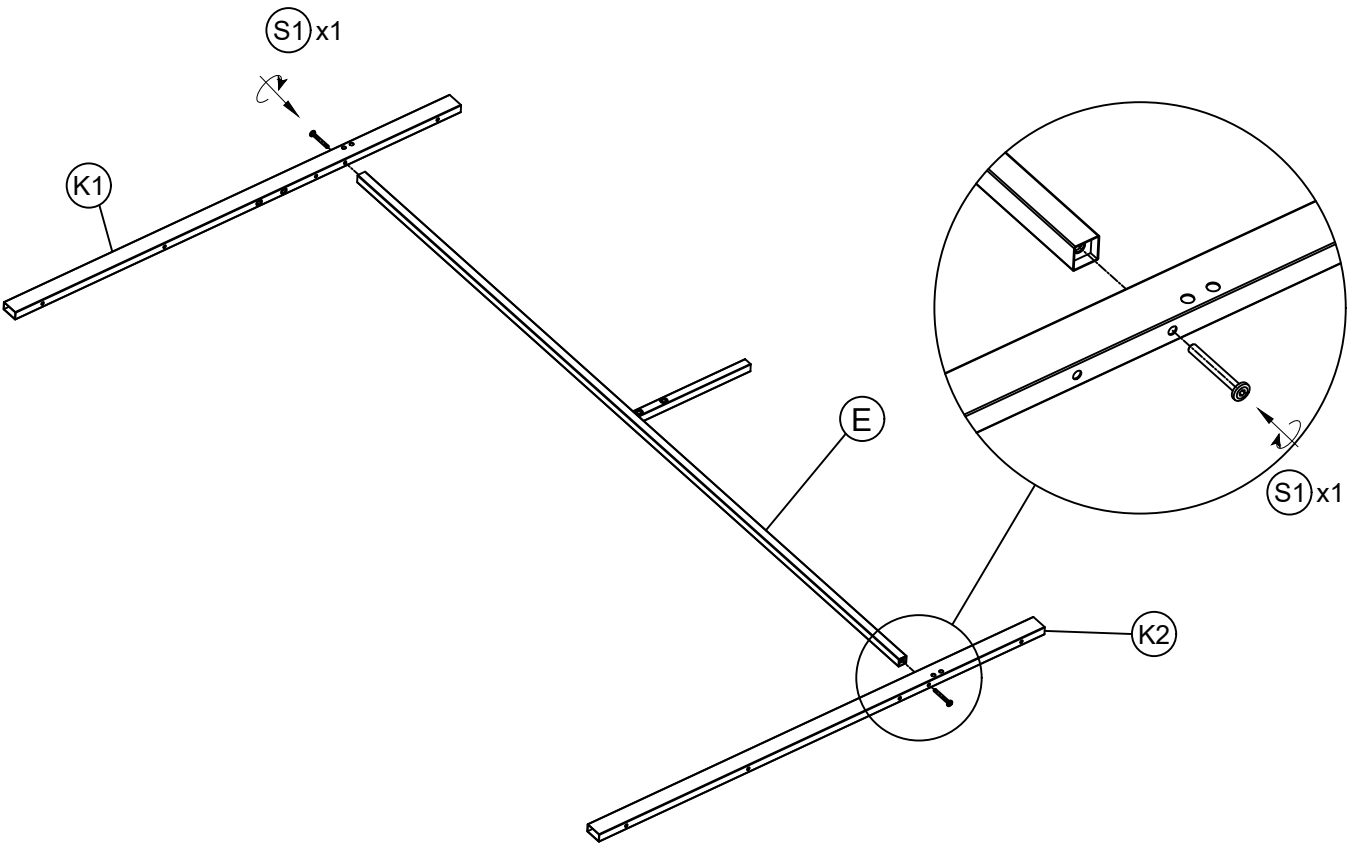


STEP 7

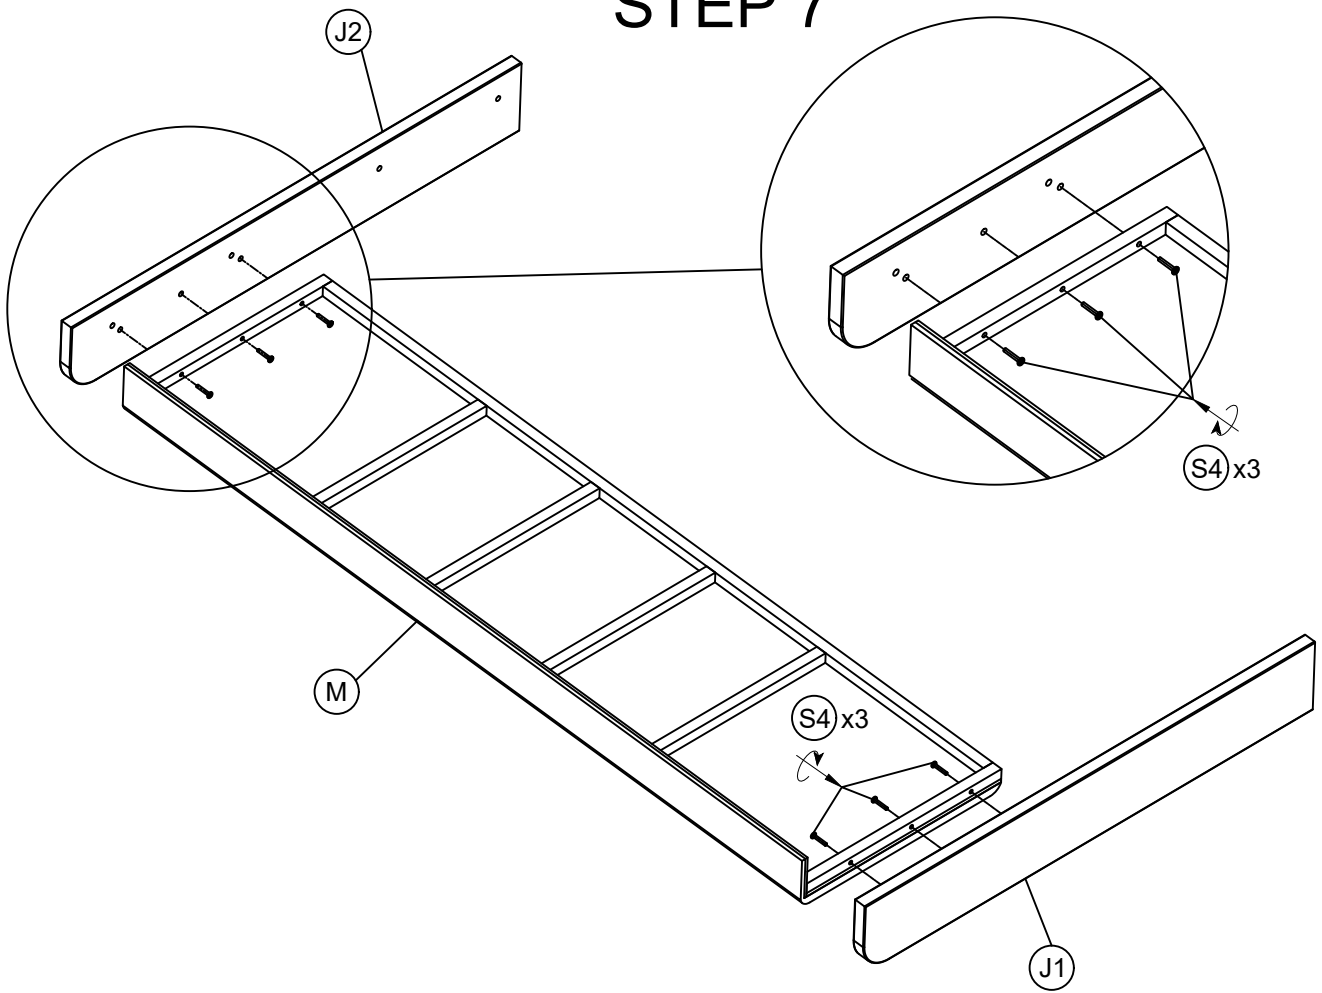


STEP 8

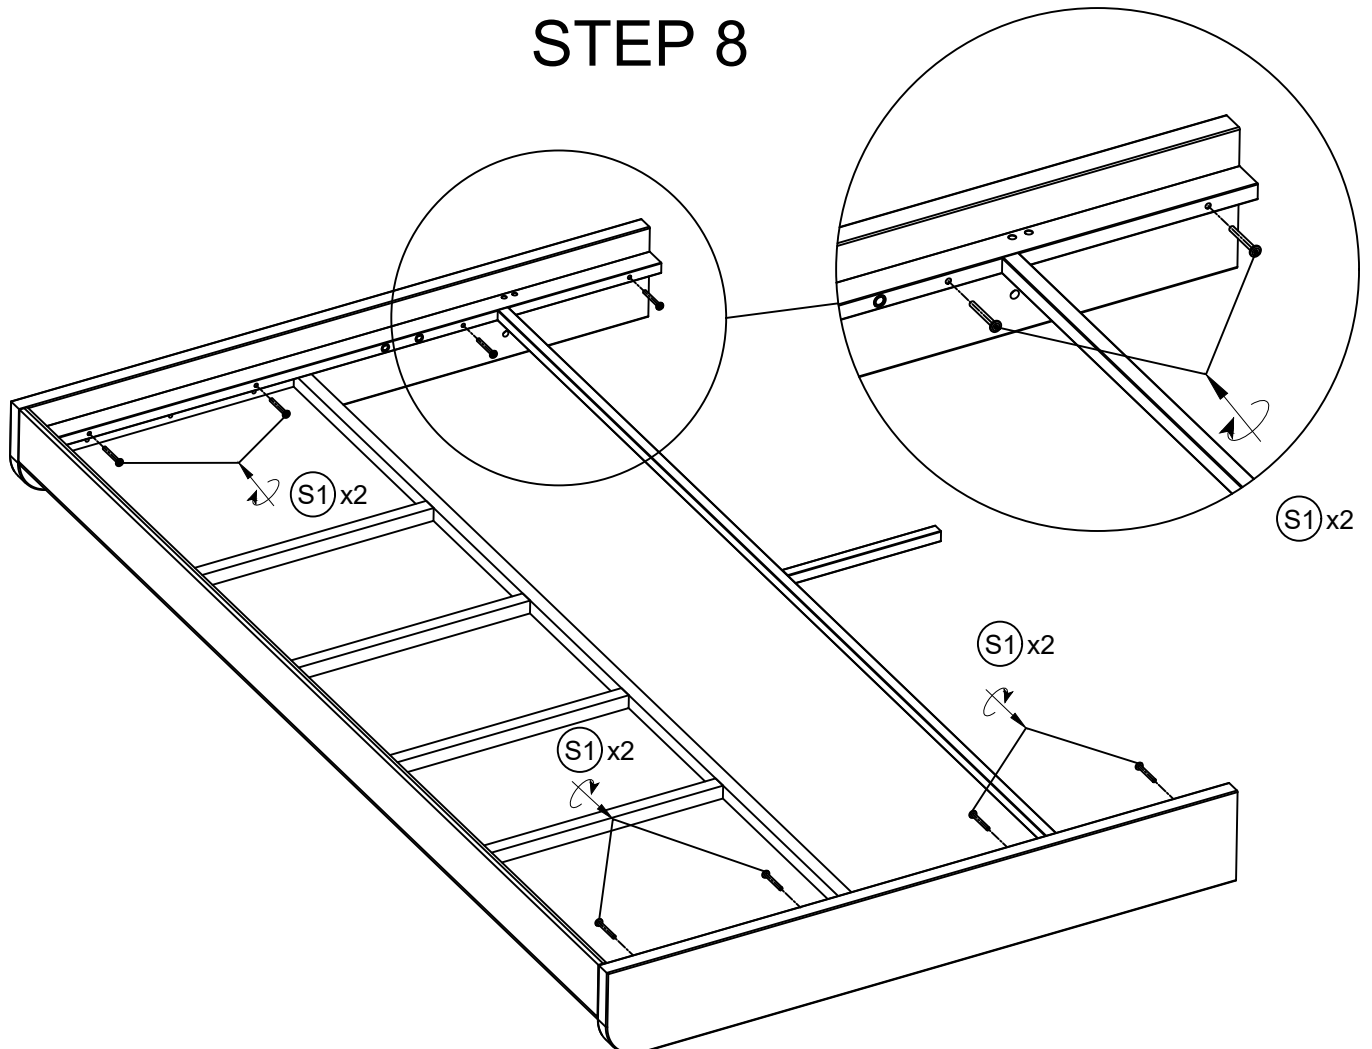

STEP 9

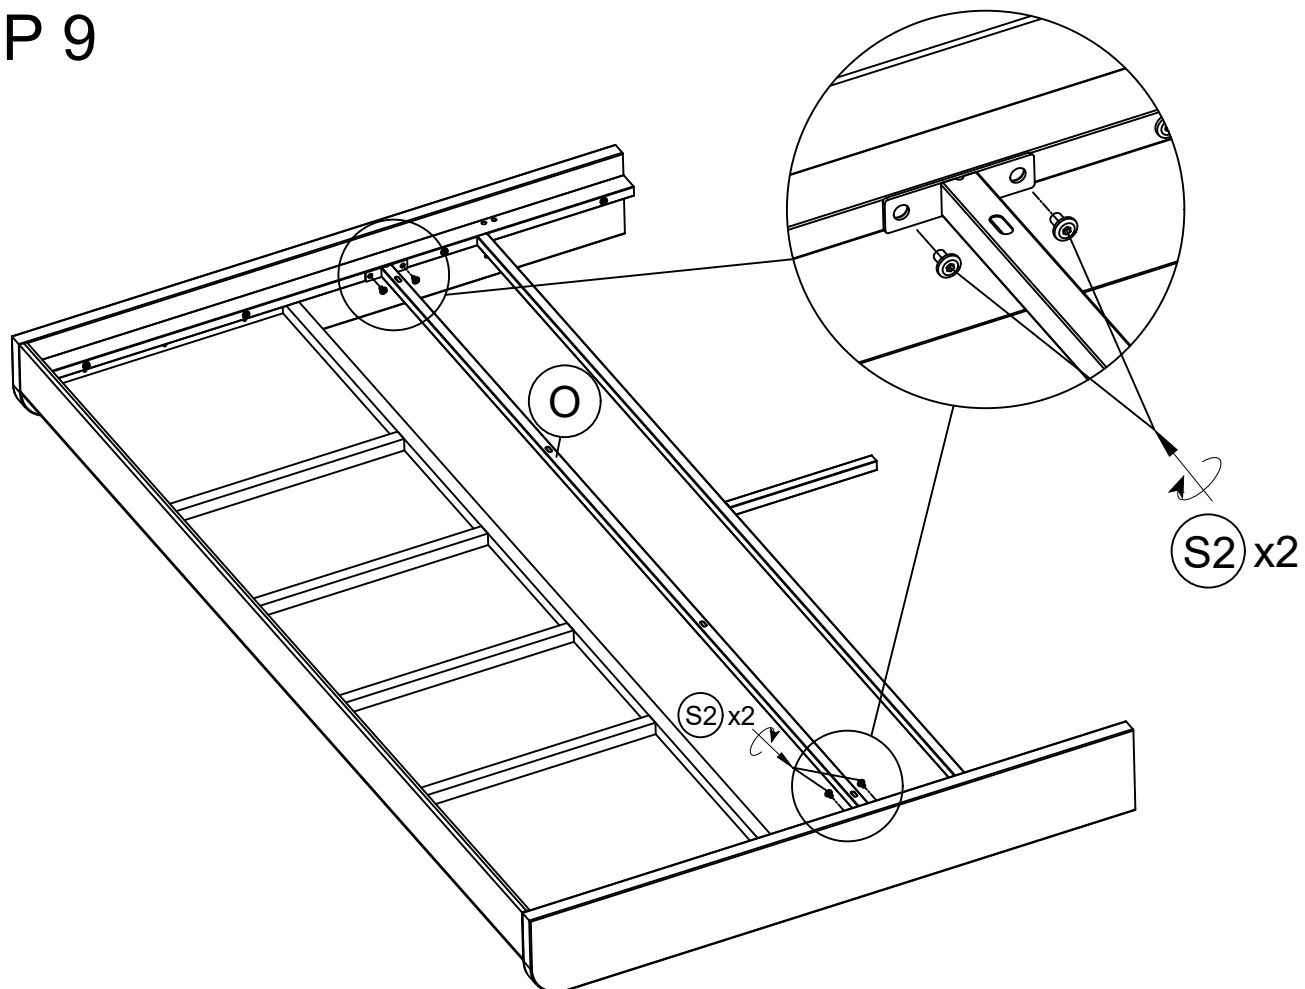


STEP 10

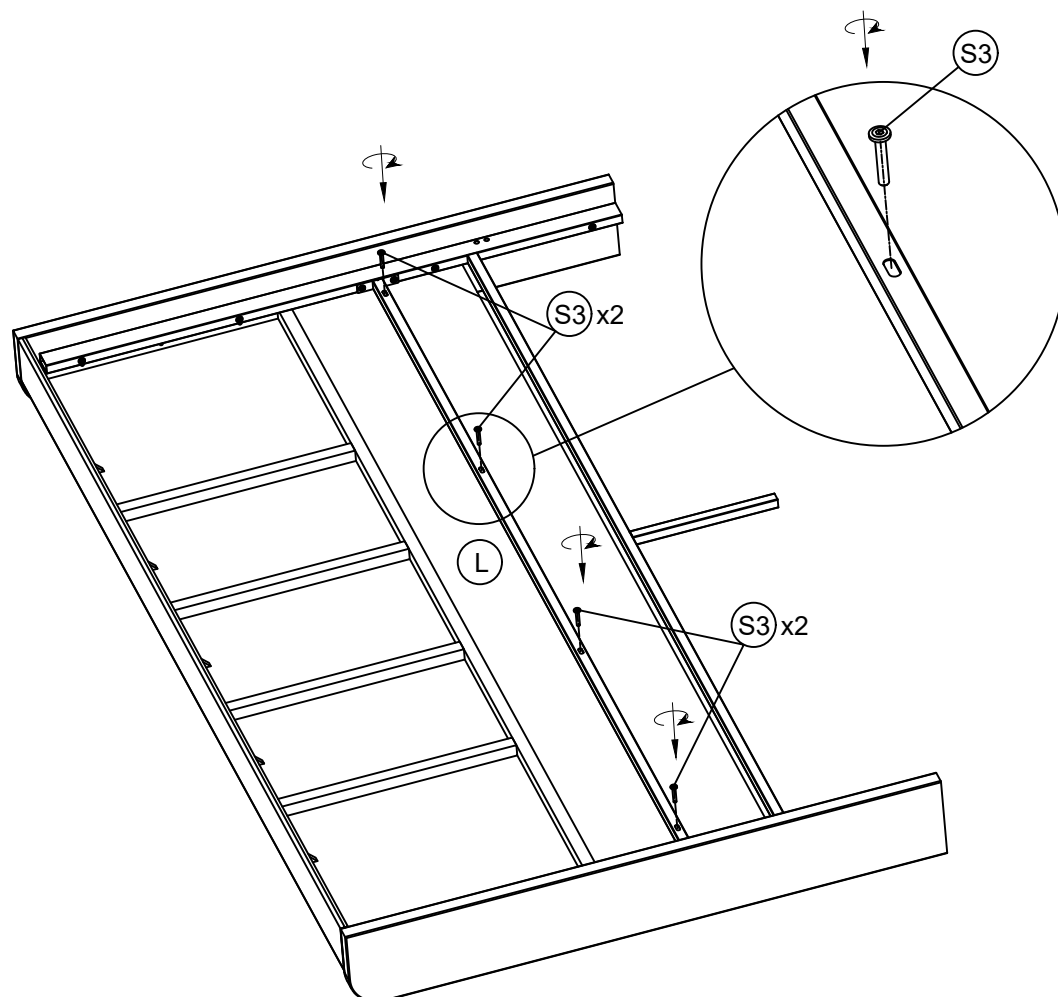


STEP 11


Put it up

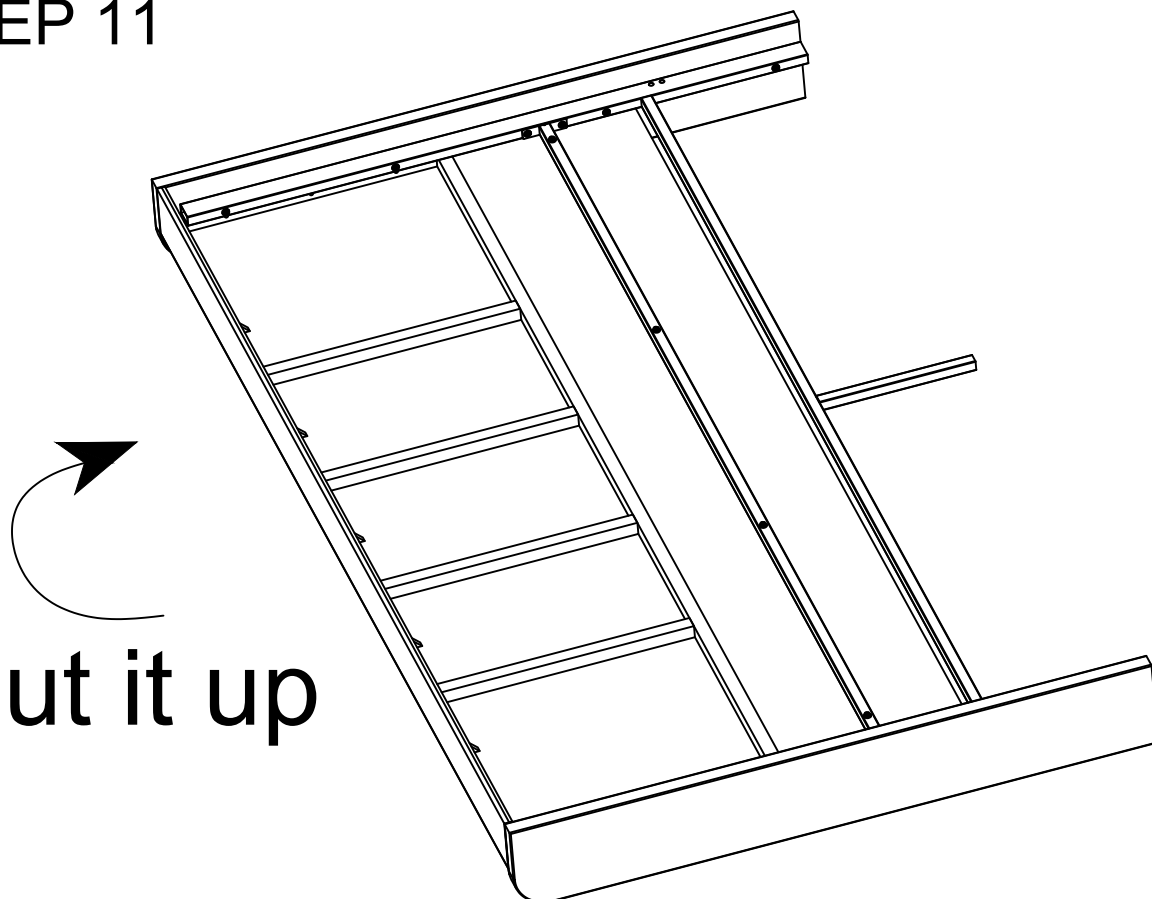


STEP 12

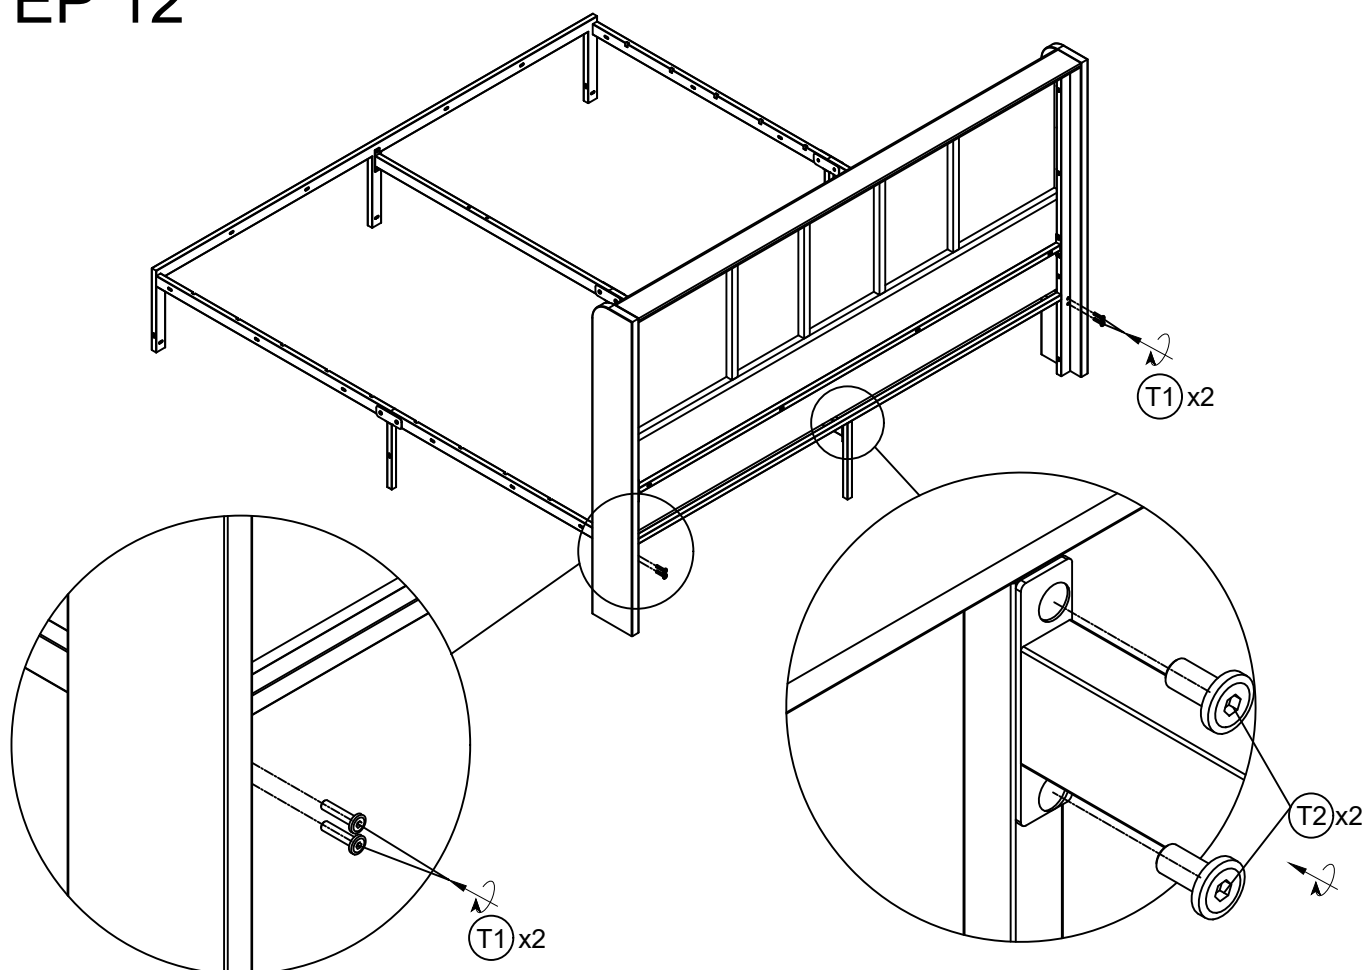


STEP 13

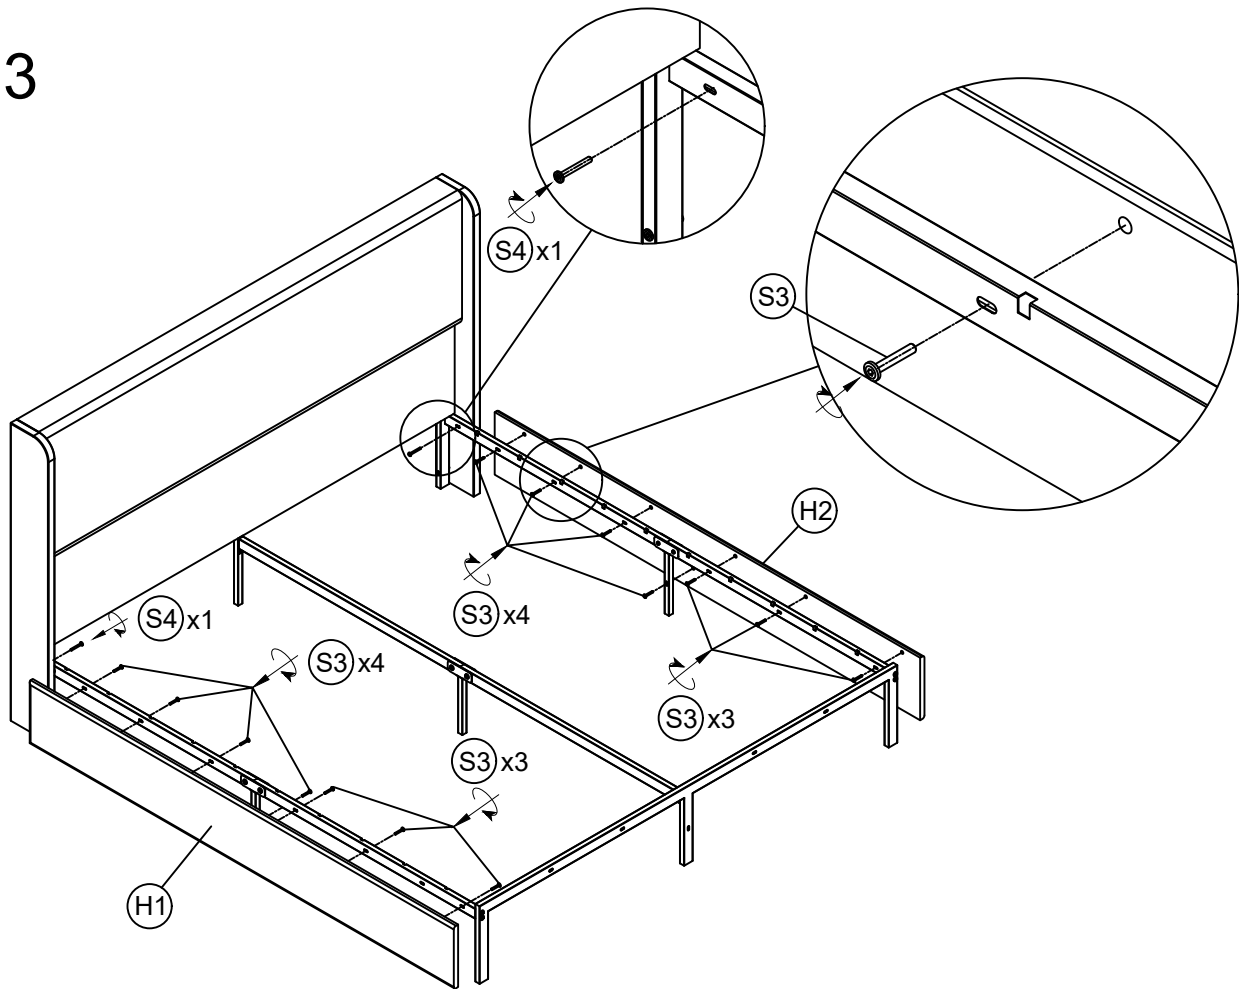

STEP 14

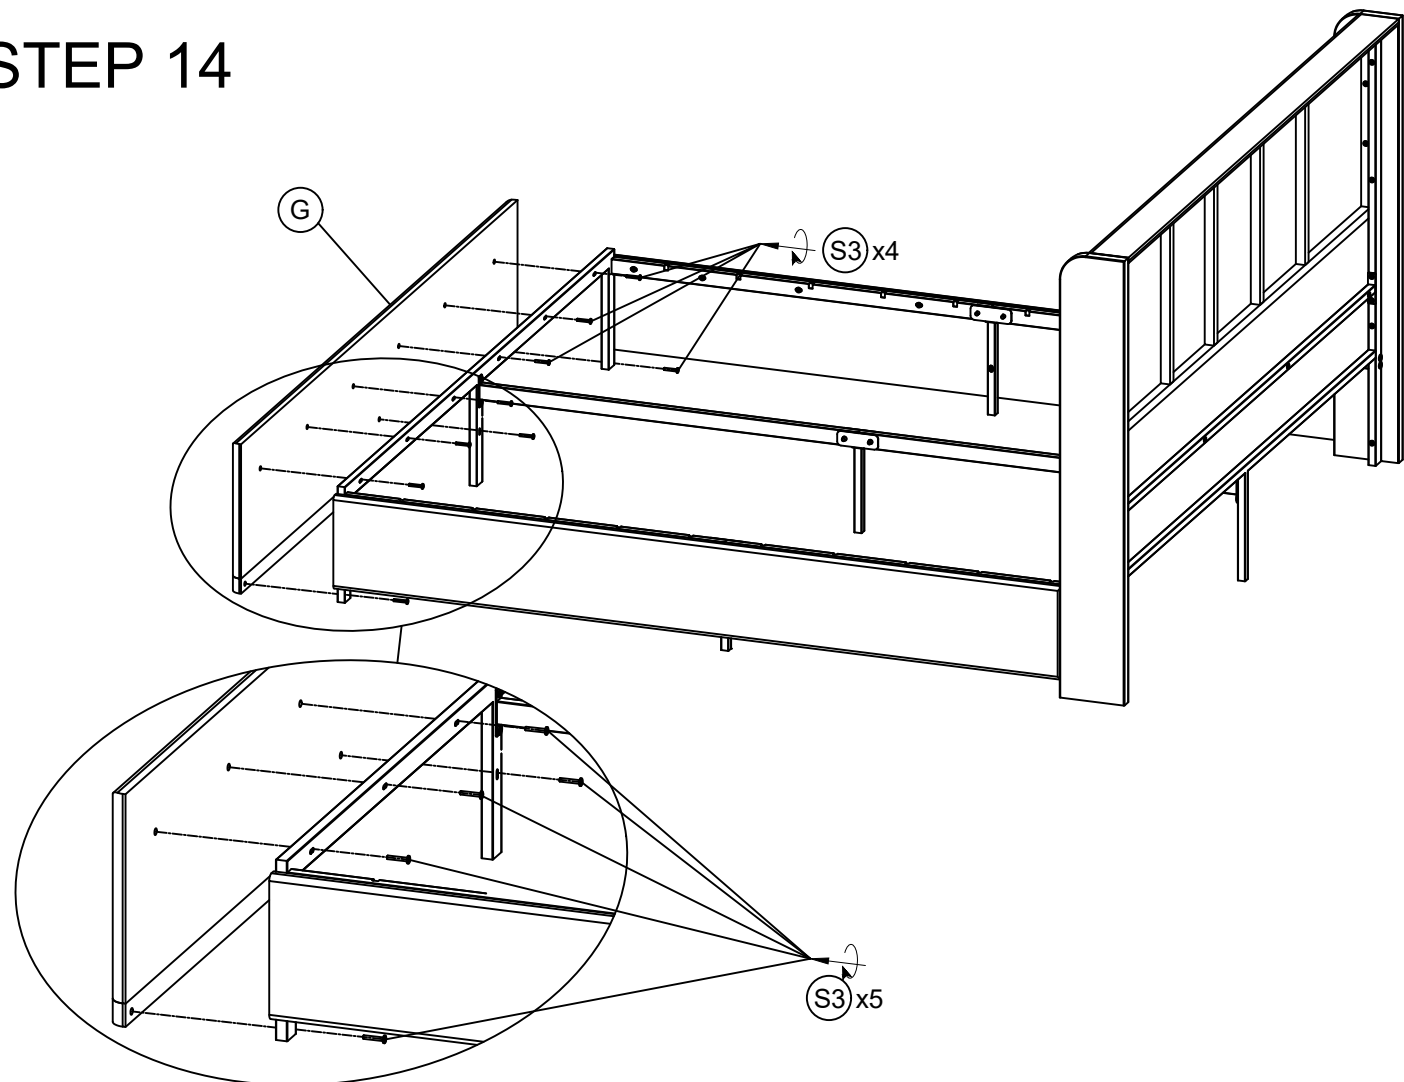

STEP 15

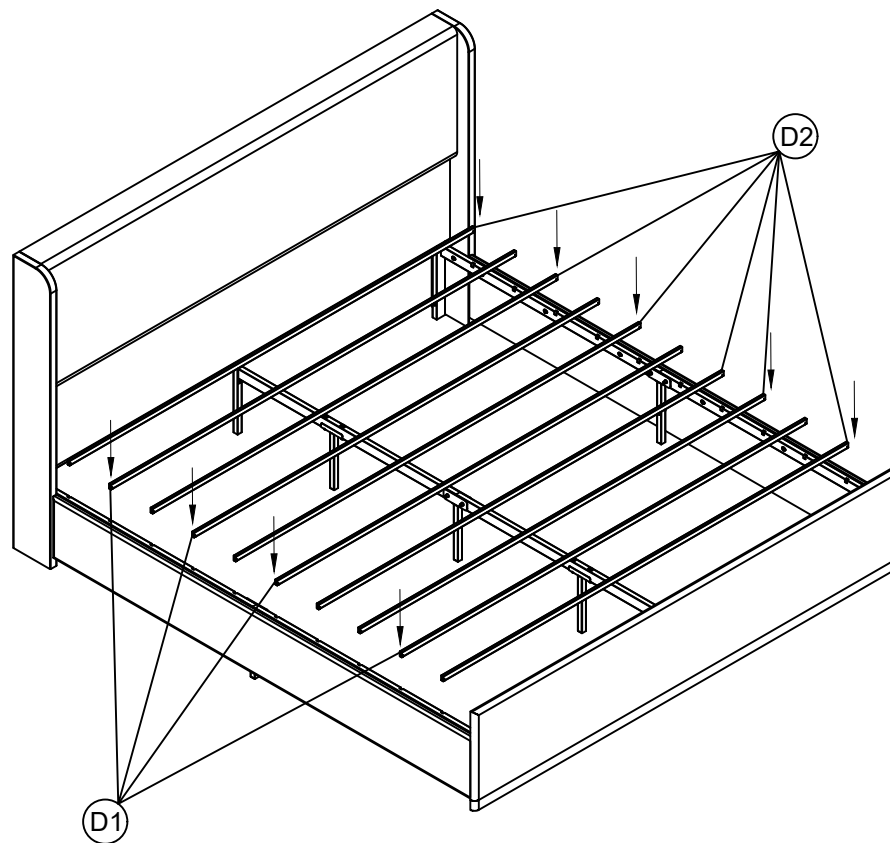

Tear off the double-sided adhesive tape before place the mattress.

