


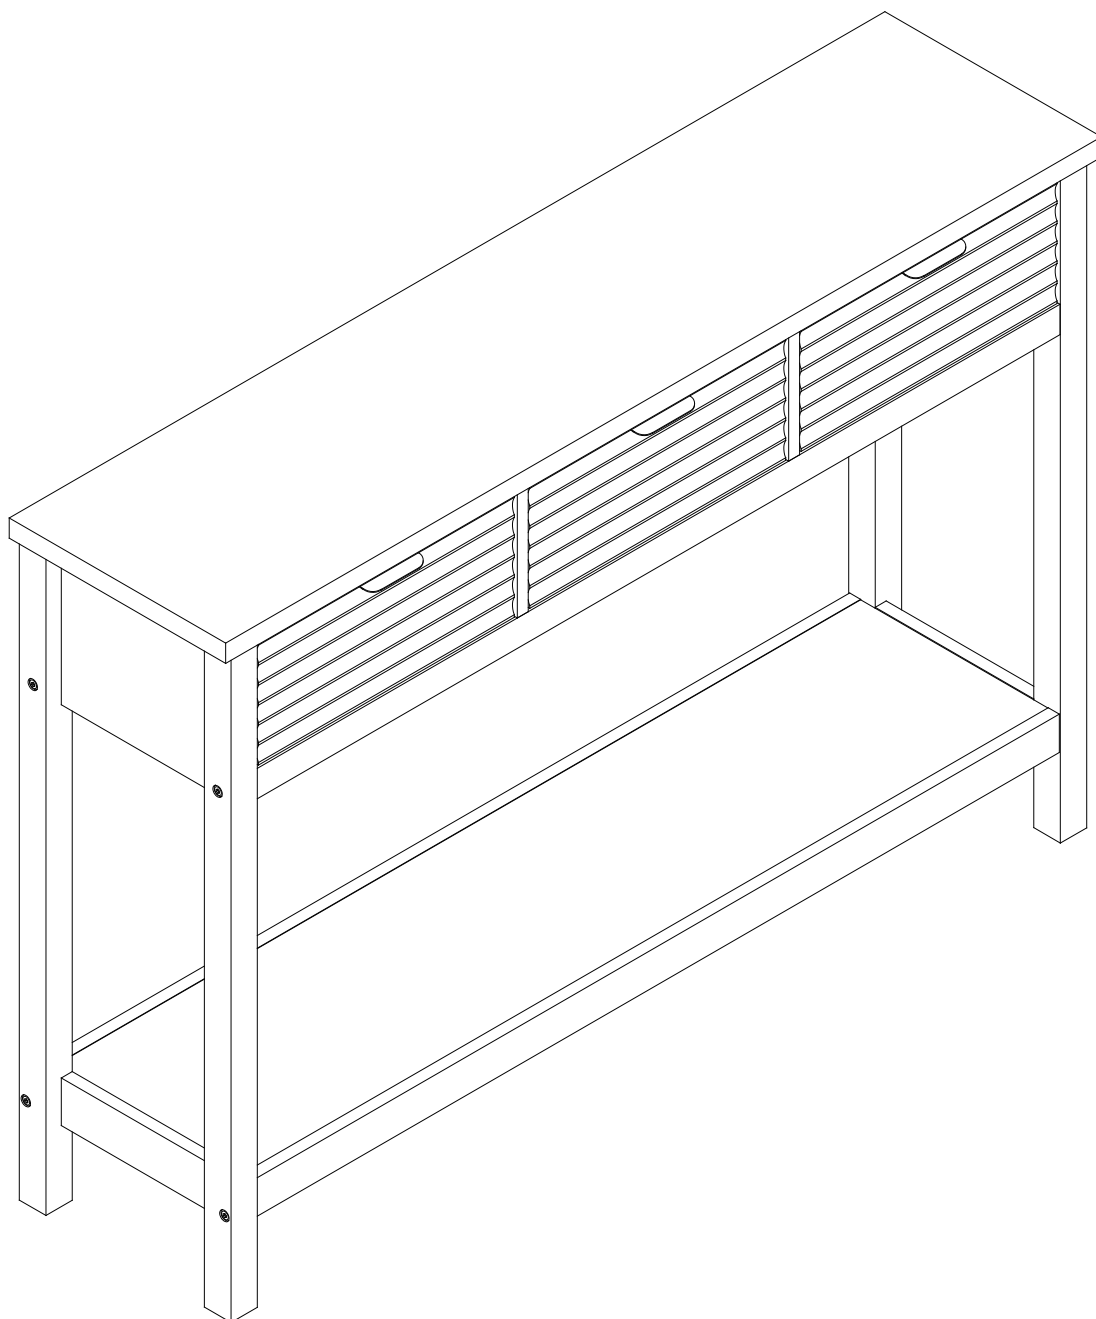

ATTENTION


If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.


Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.




PART LIST

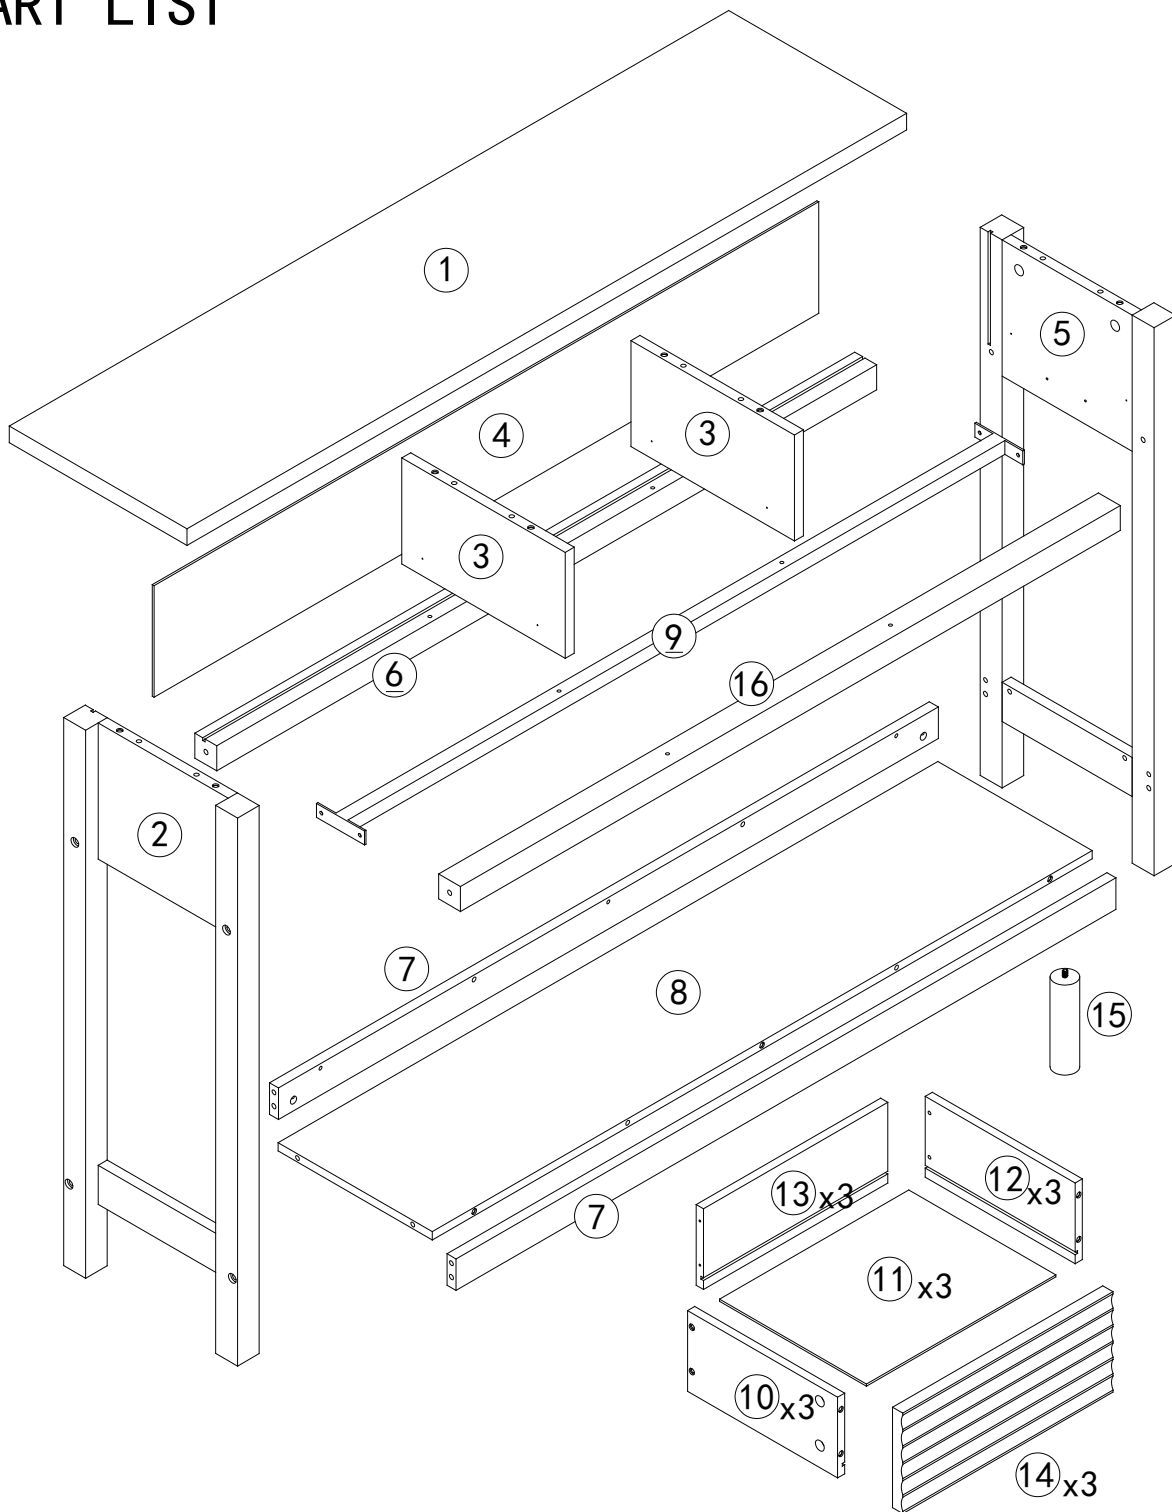


 $\varnothing 6 \times 35 \text{mm}$
Ax26+2


 $\varnothing 15 \times 10 \text{mm}$
Bx26+2



 $\varnothing 6 \times 30 \text{mm}$
Cx20+2



 $\text{M}4 \times 40 \text{mm}$ $\text{M}4 \times 12 \text{mm}$
Dx2


 $\text{M}3 \times 12 \text{mm}$
Ex30+2



 $\text{M}4 \times 12 \text{mm}$
Fx4


 $\text{M}4 \times 35 \text{mm}$
Gx2


 $\text{M}4 \times 35 \text{mm}$
Hx12+1



 $\text{M}6 \times 65 \text{mm}$
Ix8


 $\varnothing 6 \times 10 \times 10 \text{mm}$
Jx8



 64mm
Kx3



 $\text{M}4$
Lx1



 $\varnothing 21 \times 20 \text{mm}$
Mx1


 $\text{M}4 \times 55 \text{mm}$
Nx4















 $\text{M}3 \times 16 \text{mm}$
Ox8


 $35 \times 35 \text{mm}$
Px4


 CL CR DR DL
 250mm
x3




 $\varnothing 21 \times 100 \text{mm}$
x1

PART LIST

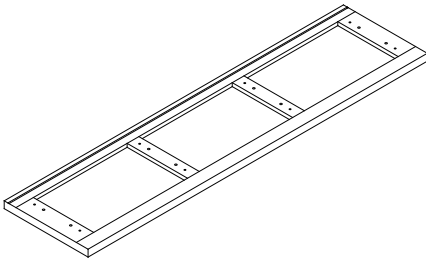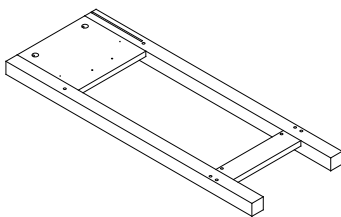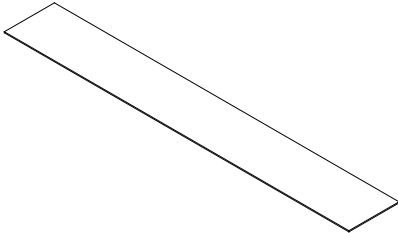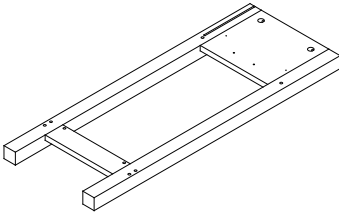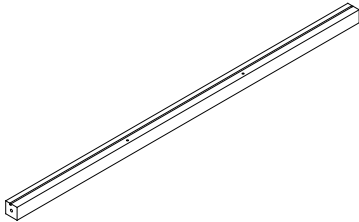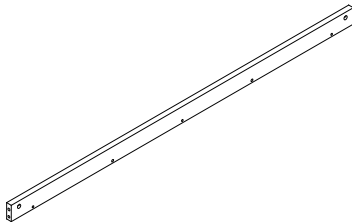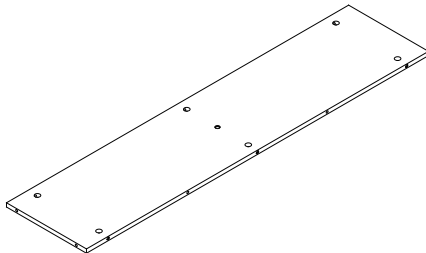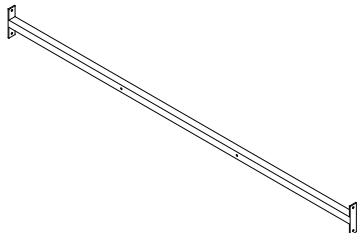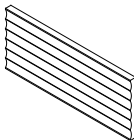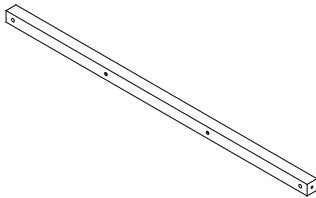
1x1	2x1	3x2	
			
4x1	5x1	6x1	
			
7x2	8x1	9x1	
			
10x3	11x3	12x3	
			
13x3	14x3	15x1	16x1
			




X 3SET




CL



CR




DL




DR



D =




1



2




3

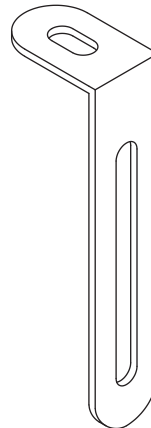

4


STEP1

Pay attention to the hole position.

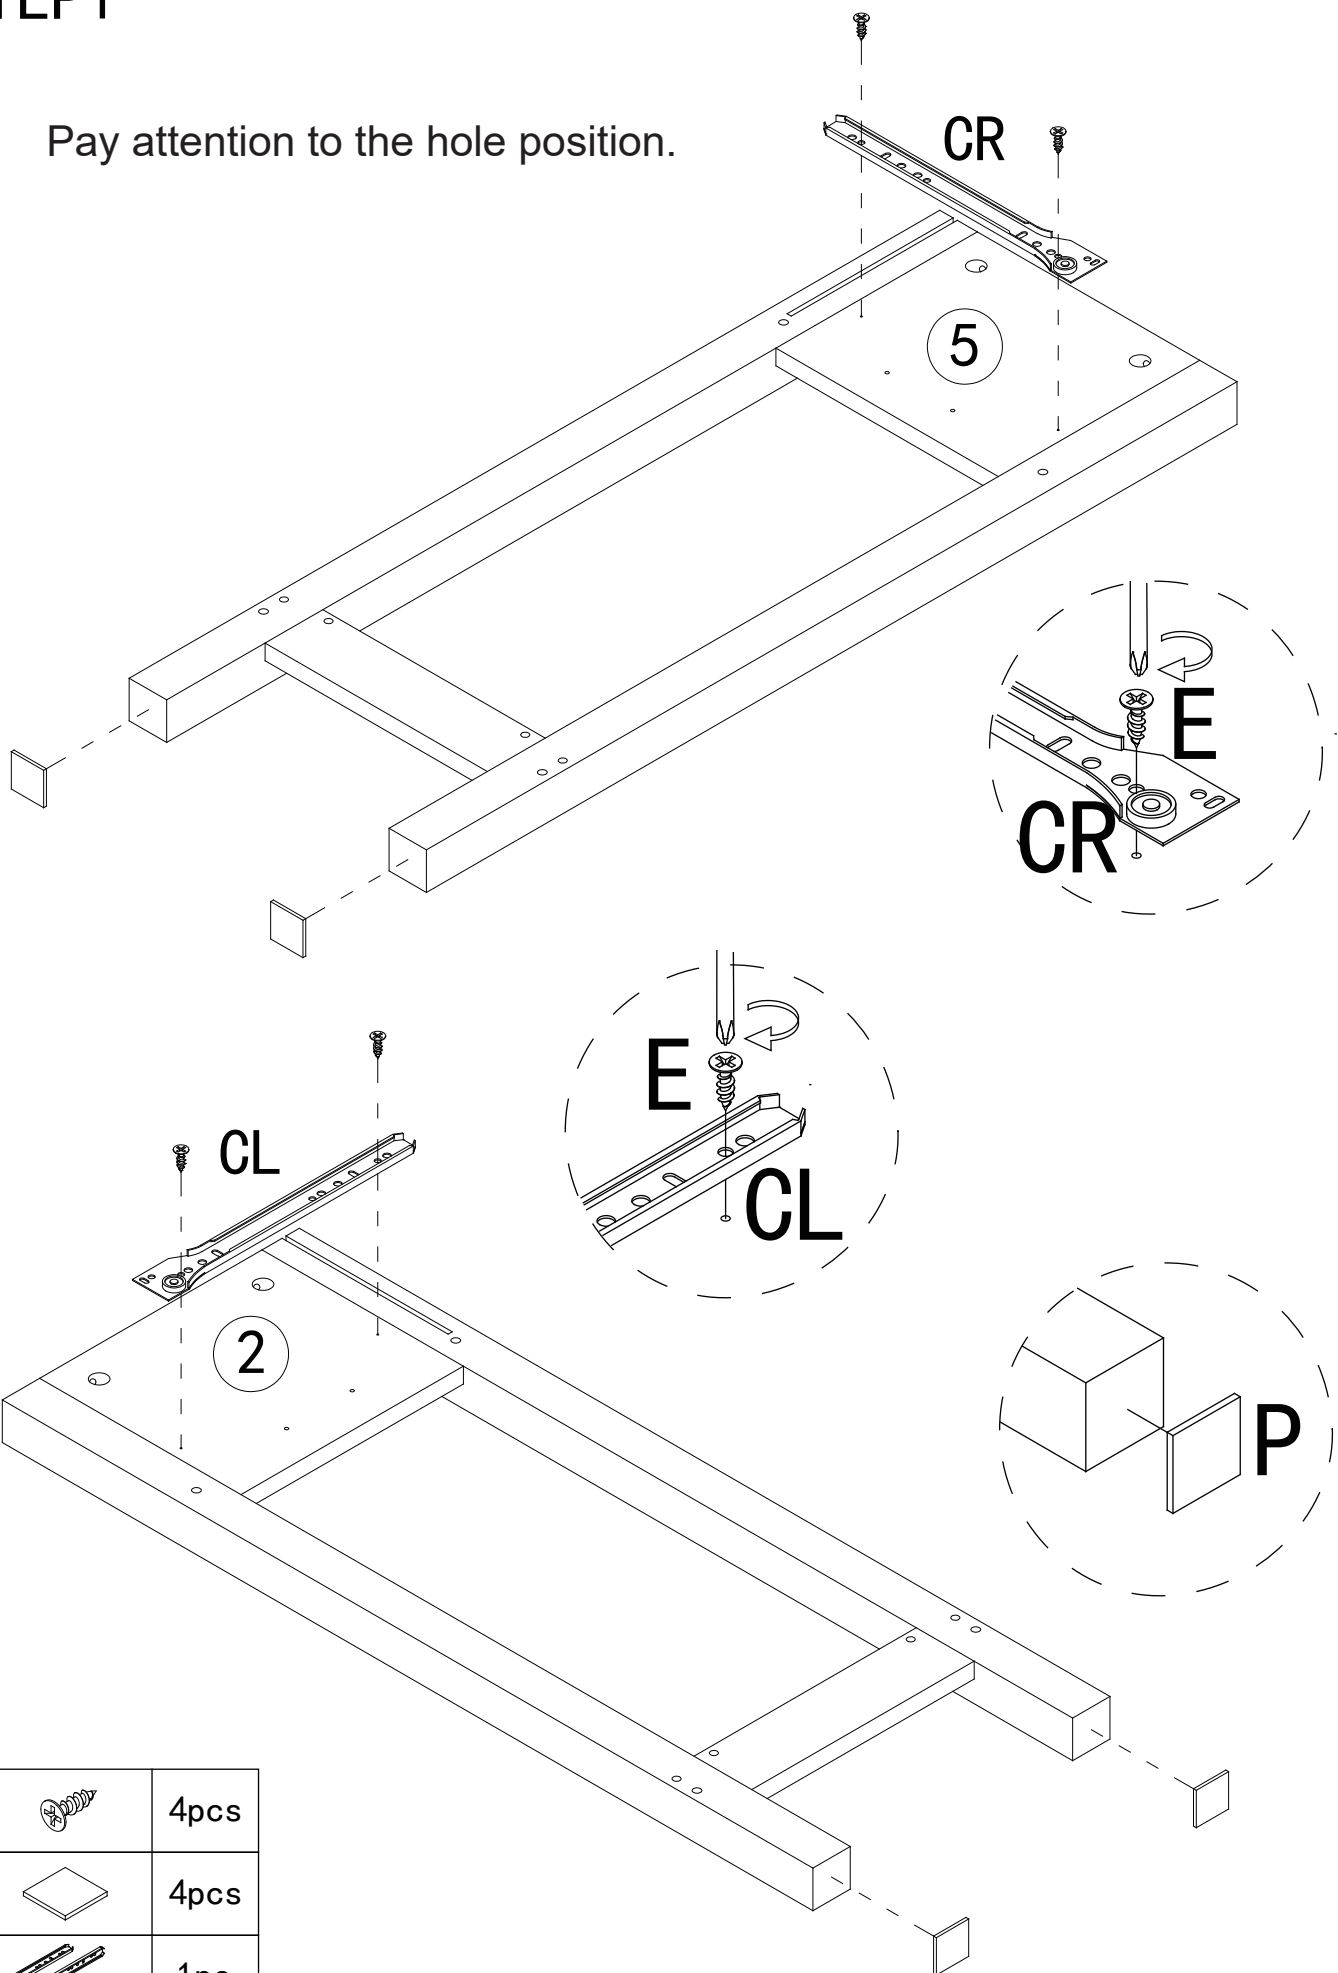

STEP2

Pay attention to the hole position.

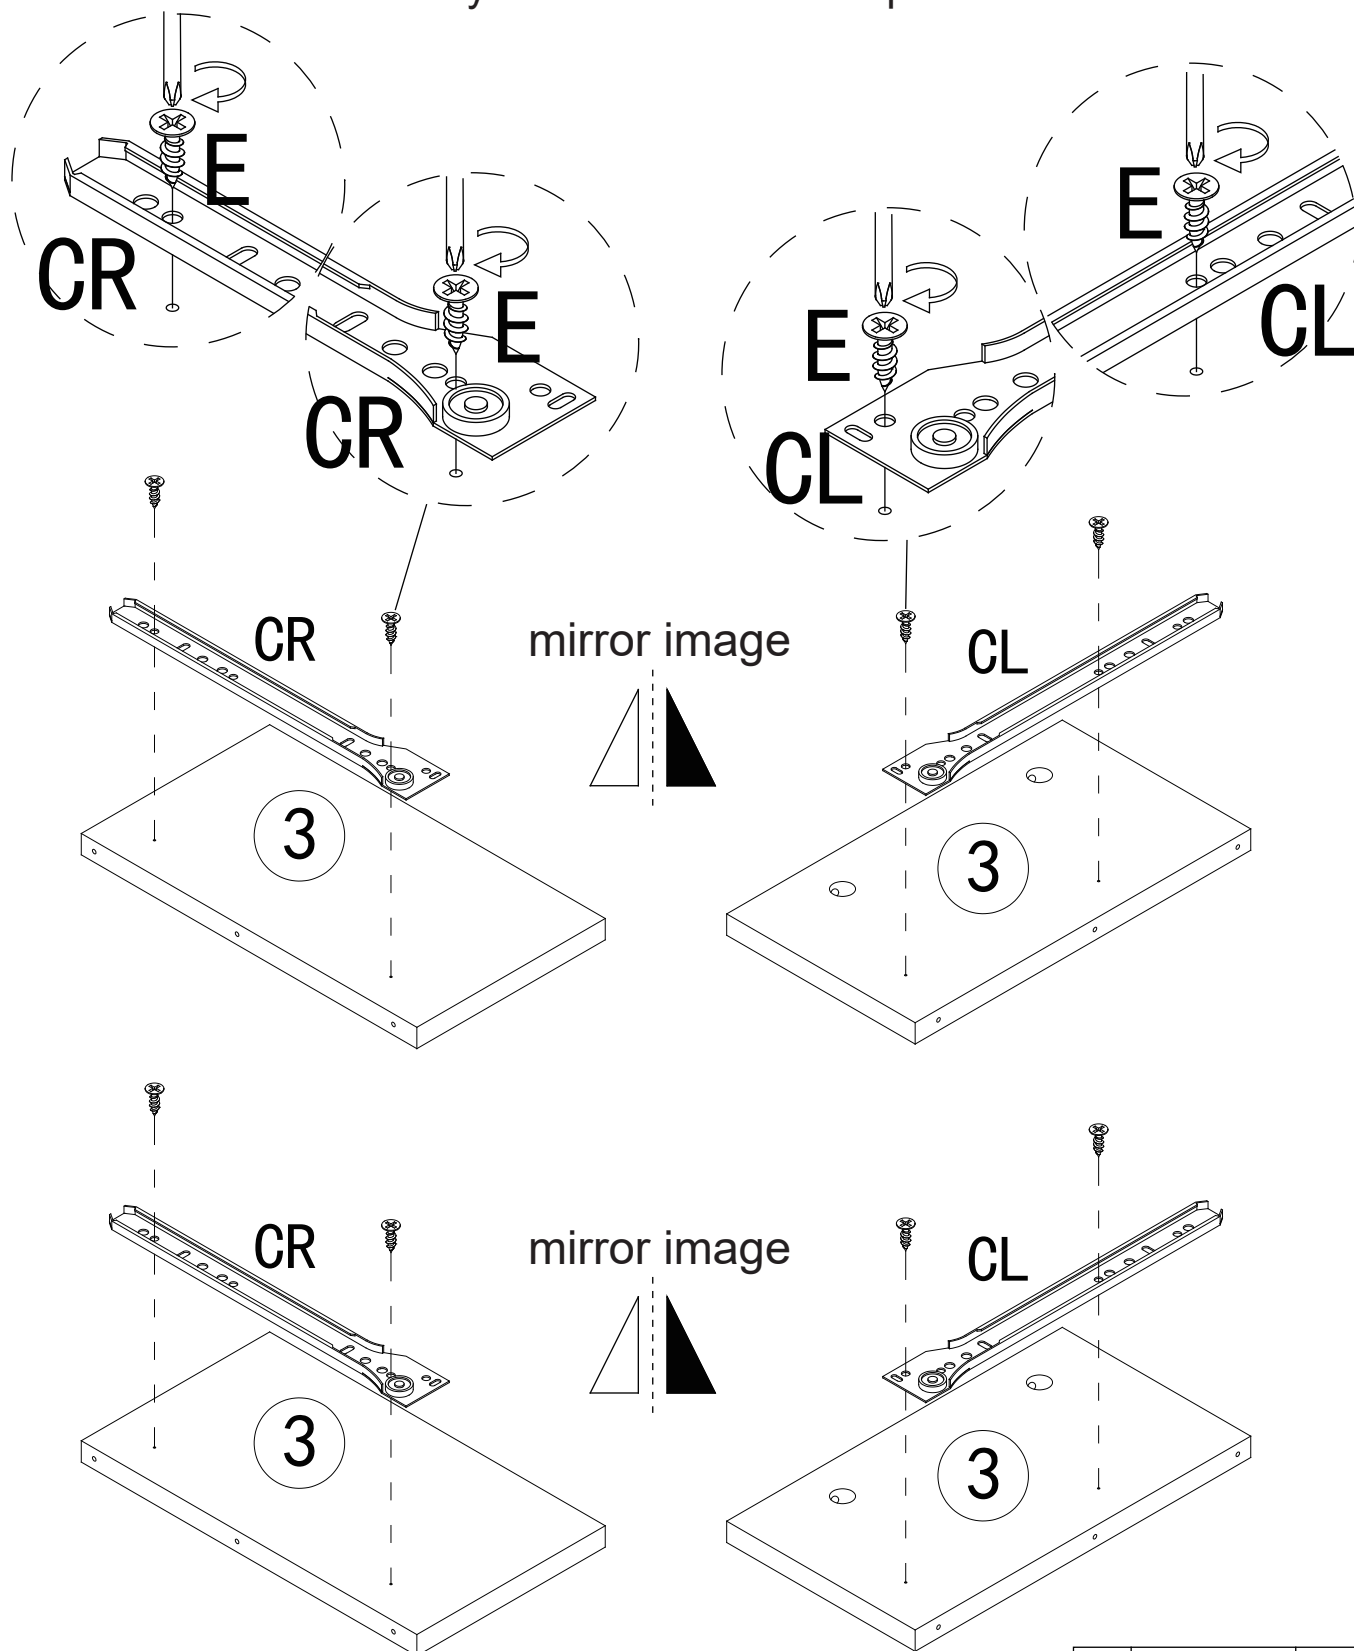





E		8pcs
CL		2pcs
CR		

STEP3


Note: Place the anti-tilt device D4 on board 6, near the back, and secure it with screw D3.

Take care to distinguish between H and N.

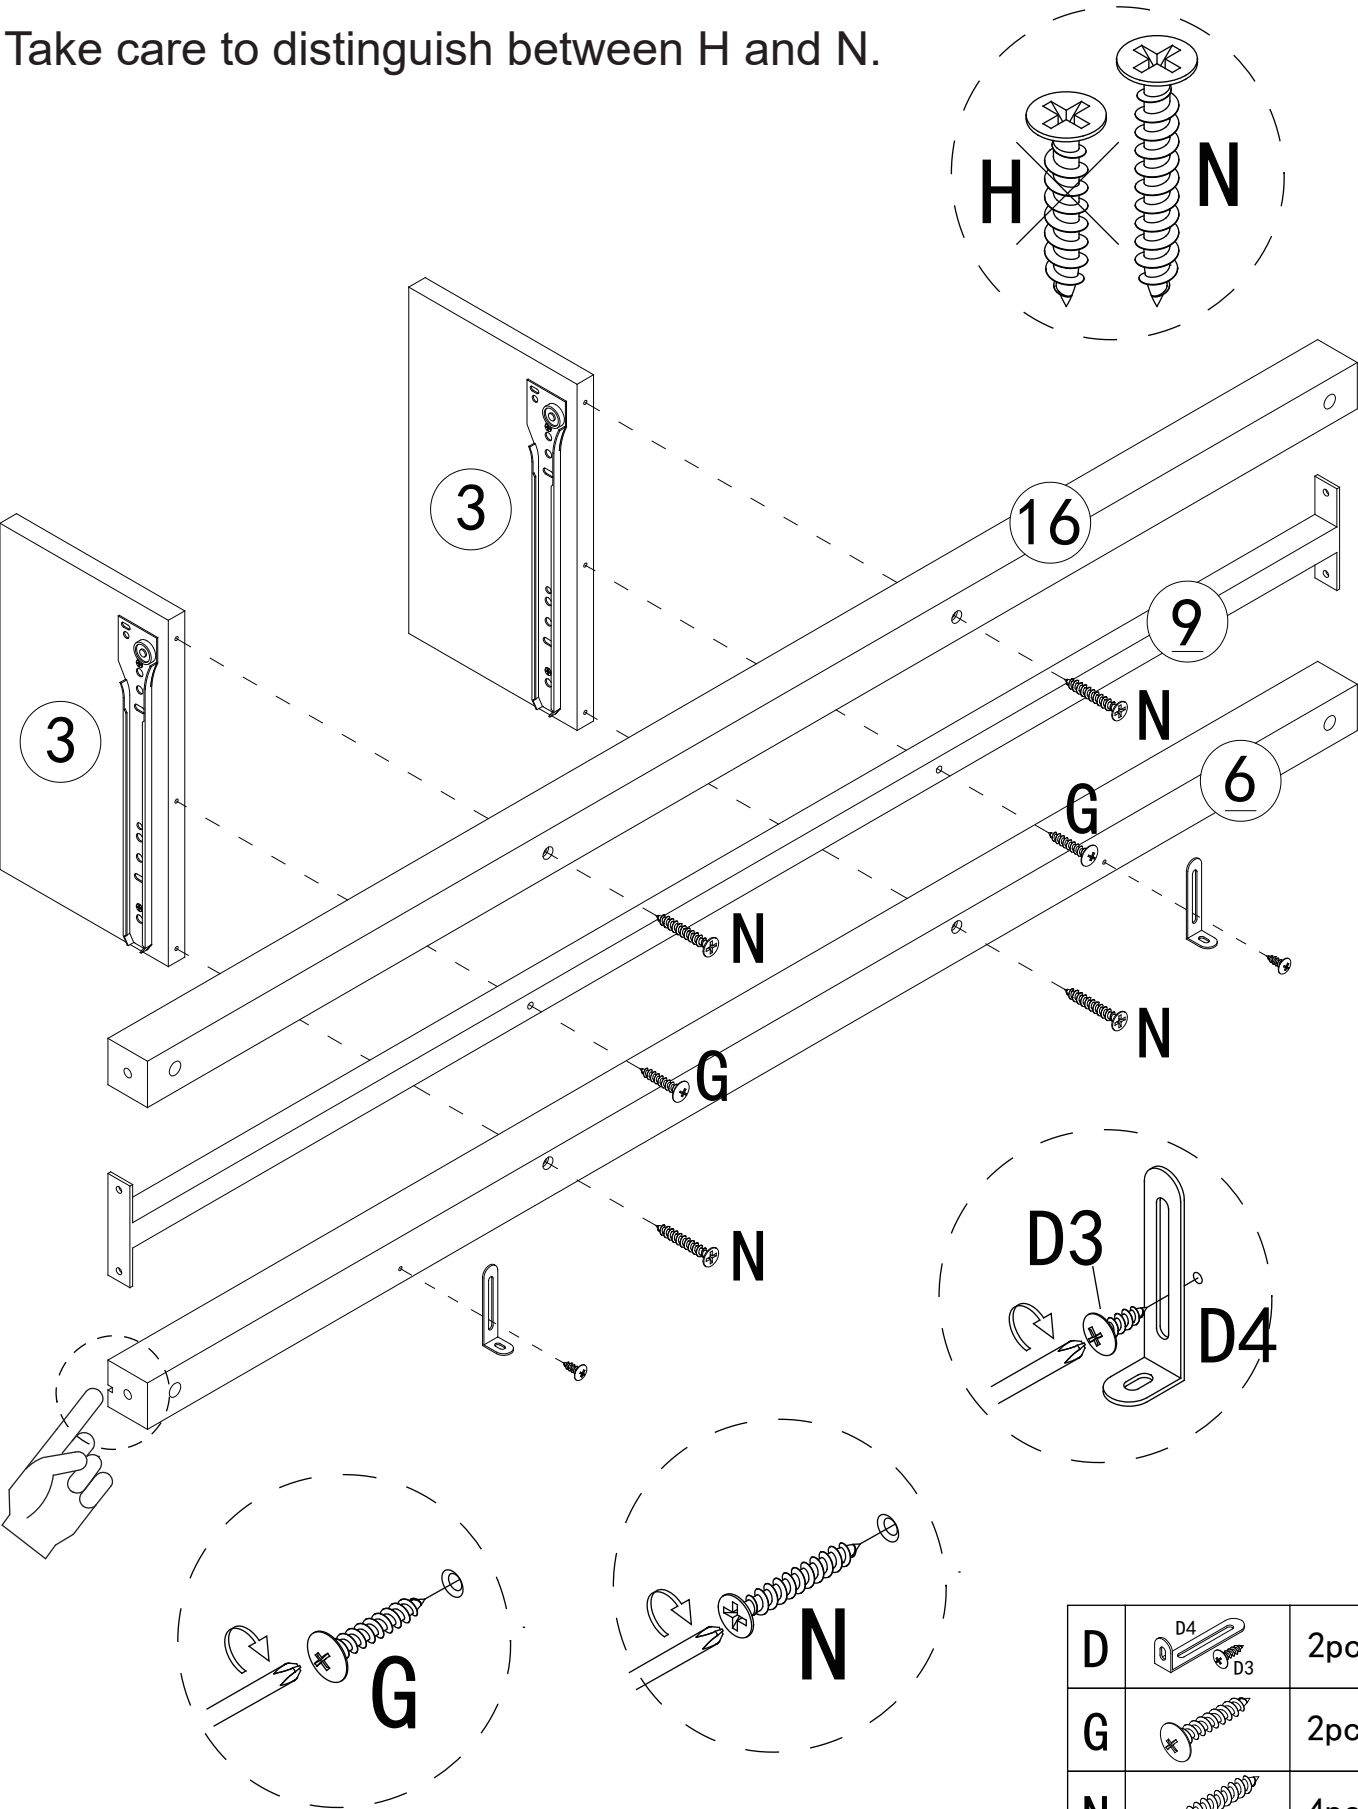



D		2pcs
G		2pcs
N		4pcs

STEP4

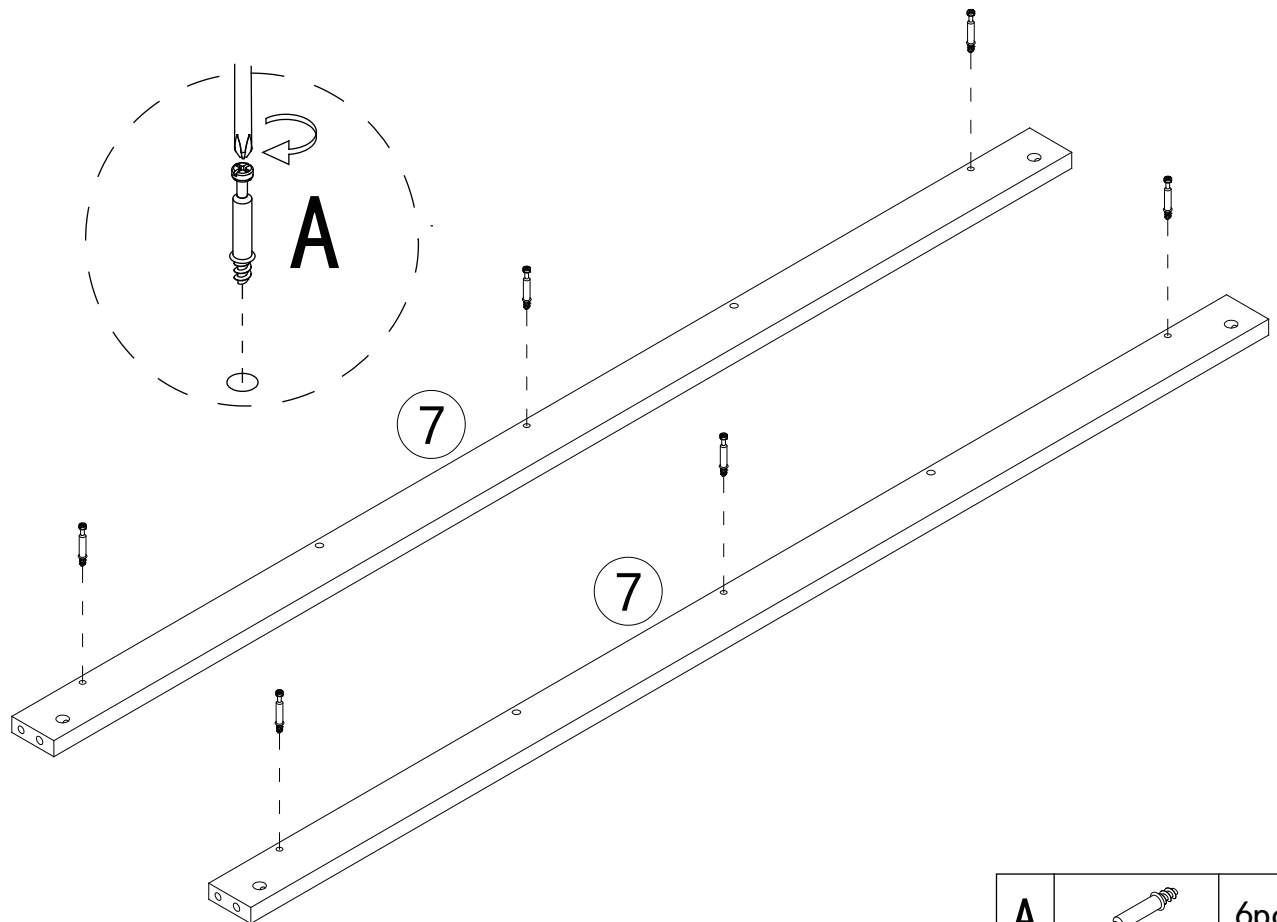


A		6pcs
---	---	------

STEP5

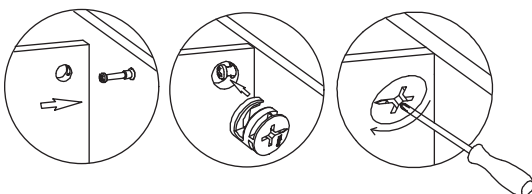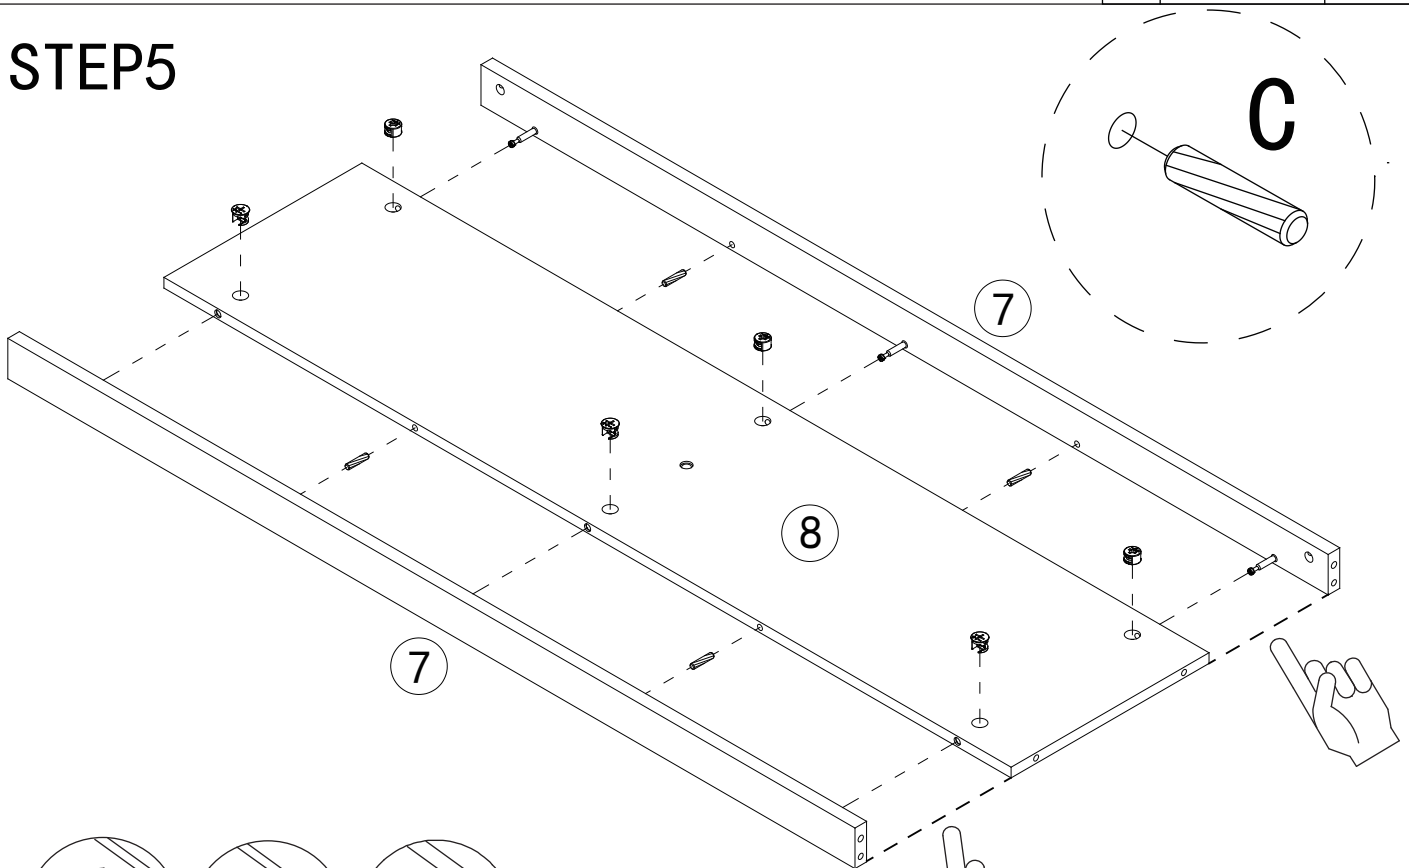


B		6pcs
C		4pcs

STEP6



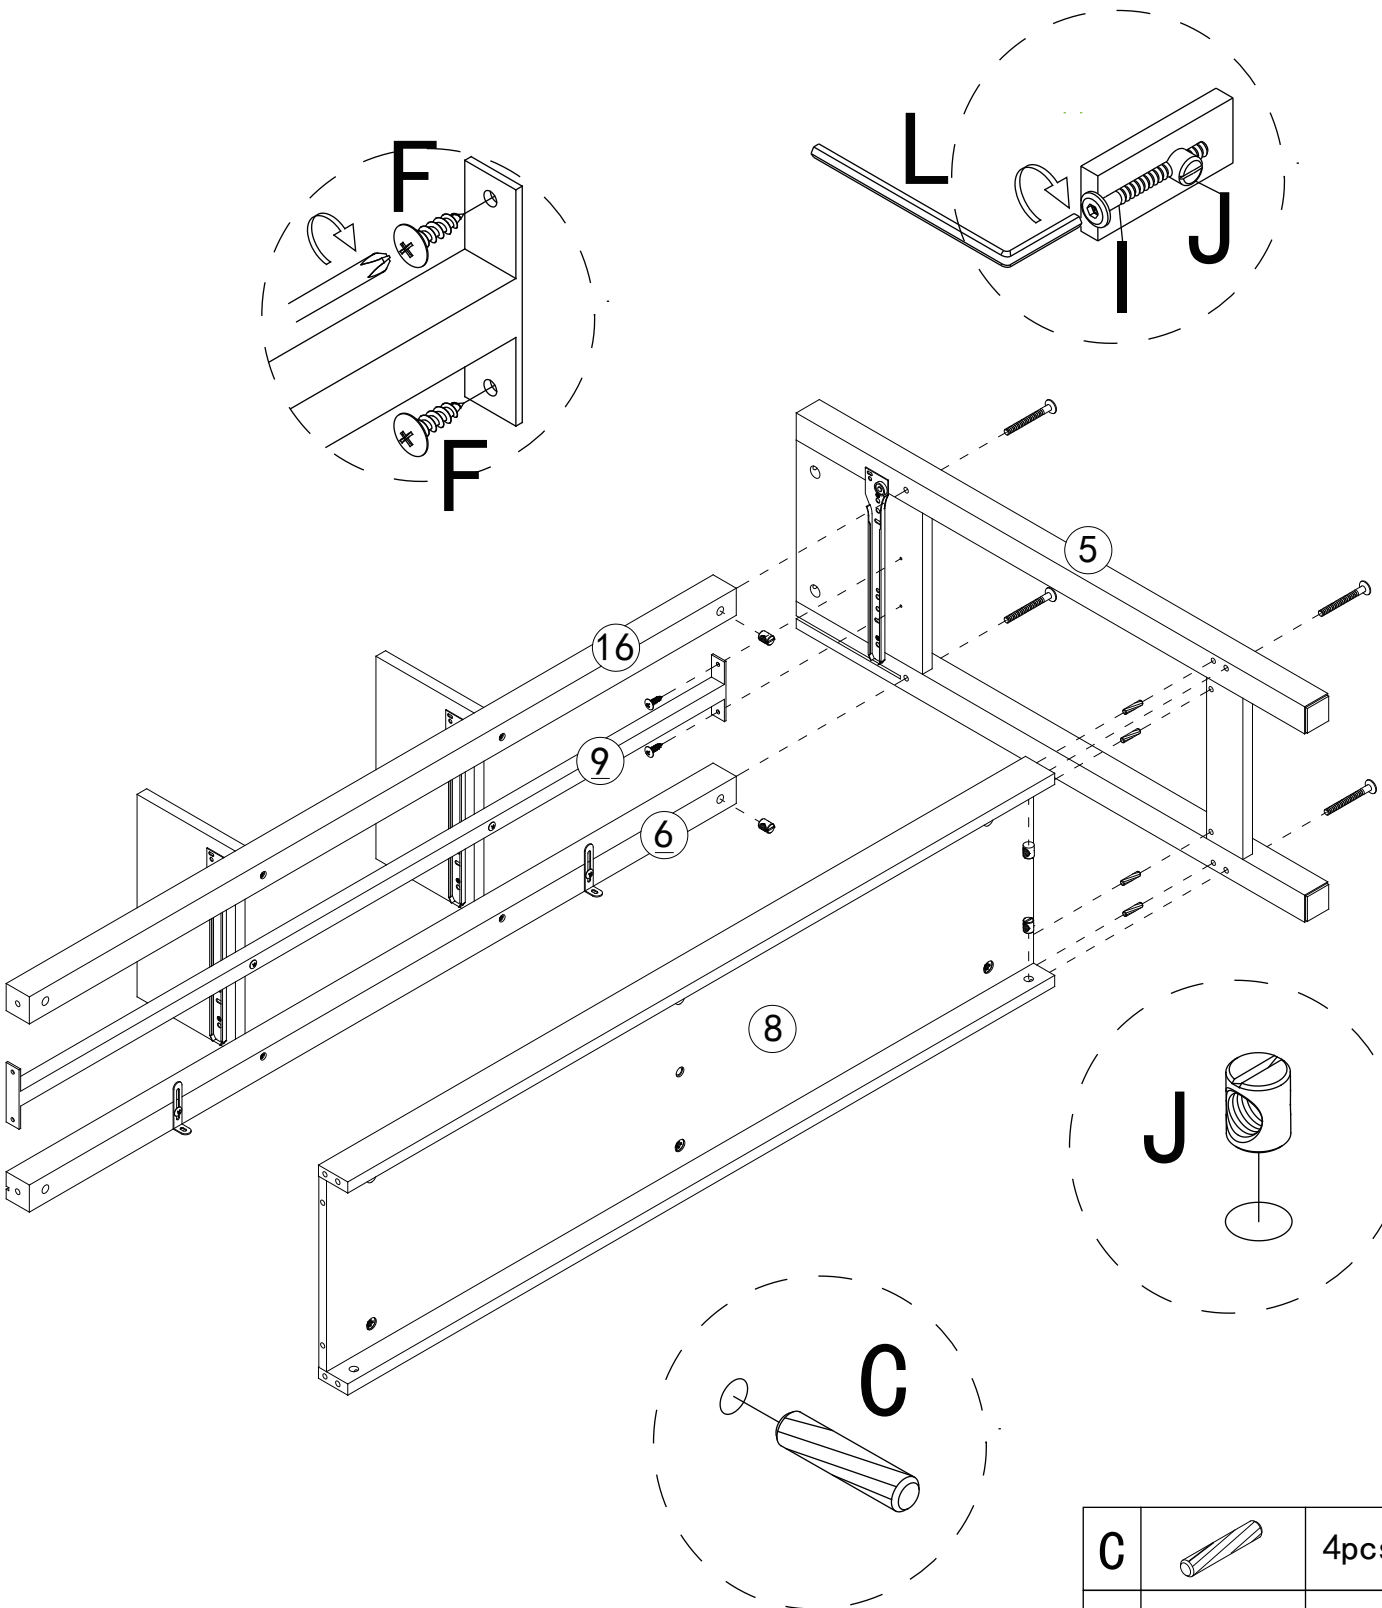


C		4pcs
F		2pcs
I		4pcs
J		4pcs
L		1pc

STEP7

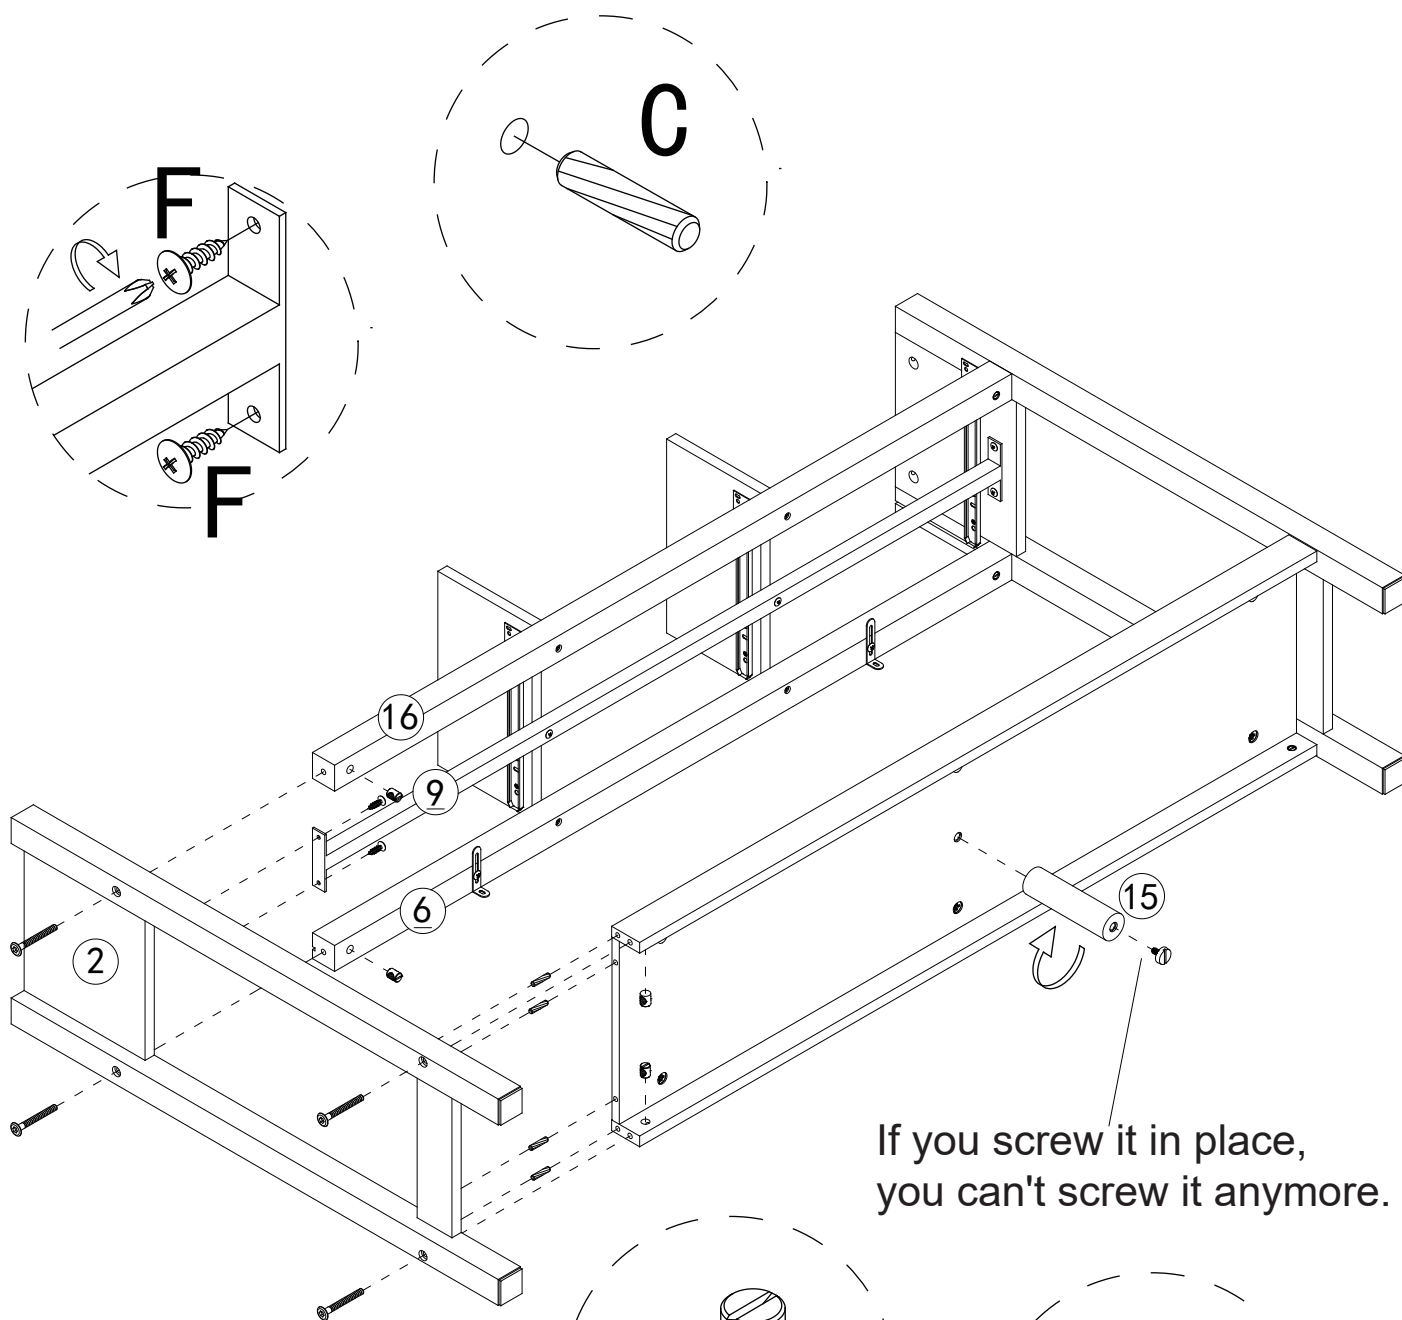


If you screw it in place,
you can't screw it anymore.

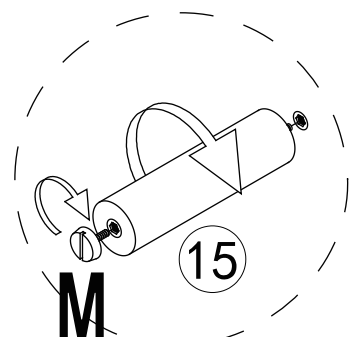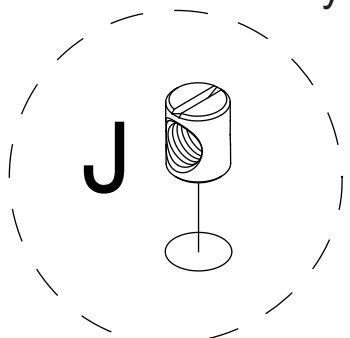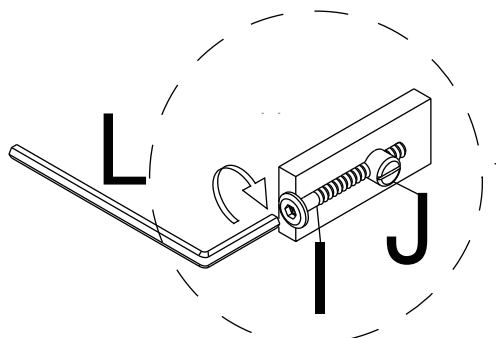


I		4pcs	C		4pcs
J		4pcs	F		2pcs
M		1pc	L		1pc

STEP8

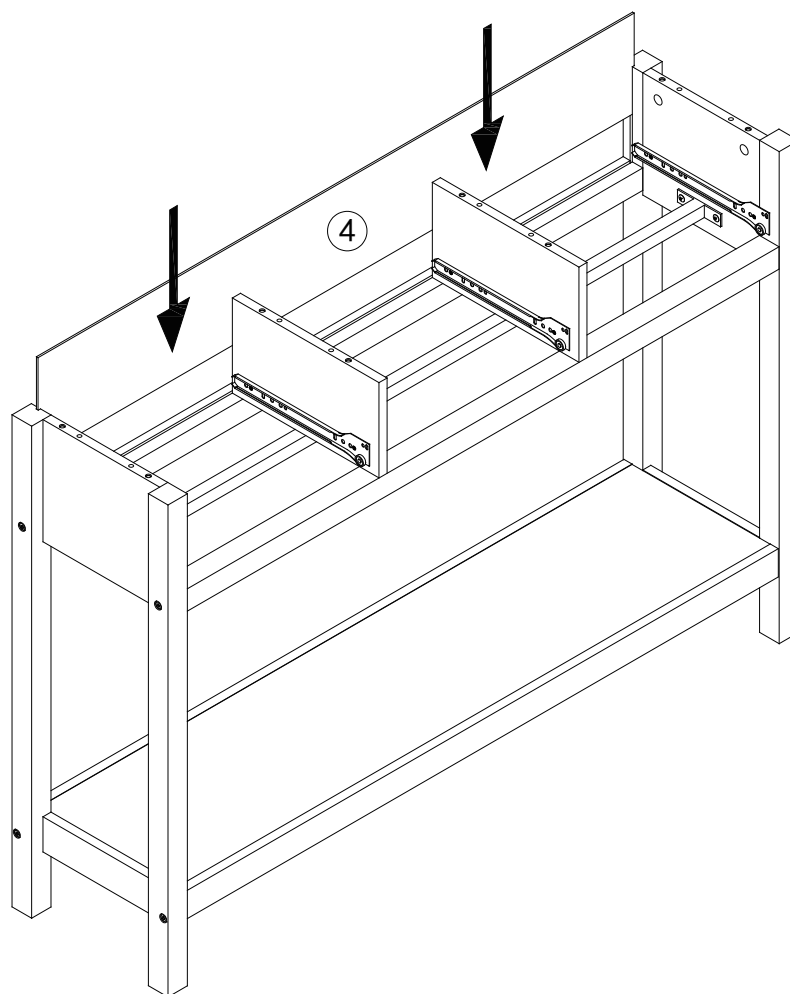

STEP9




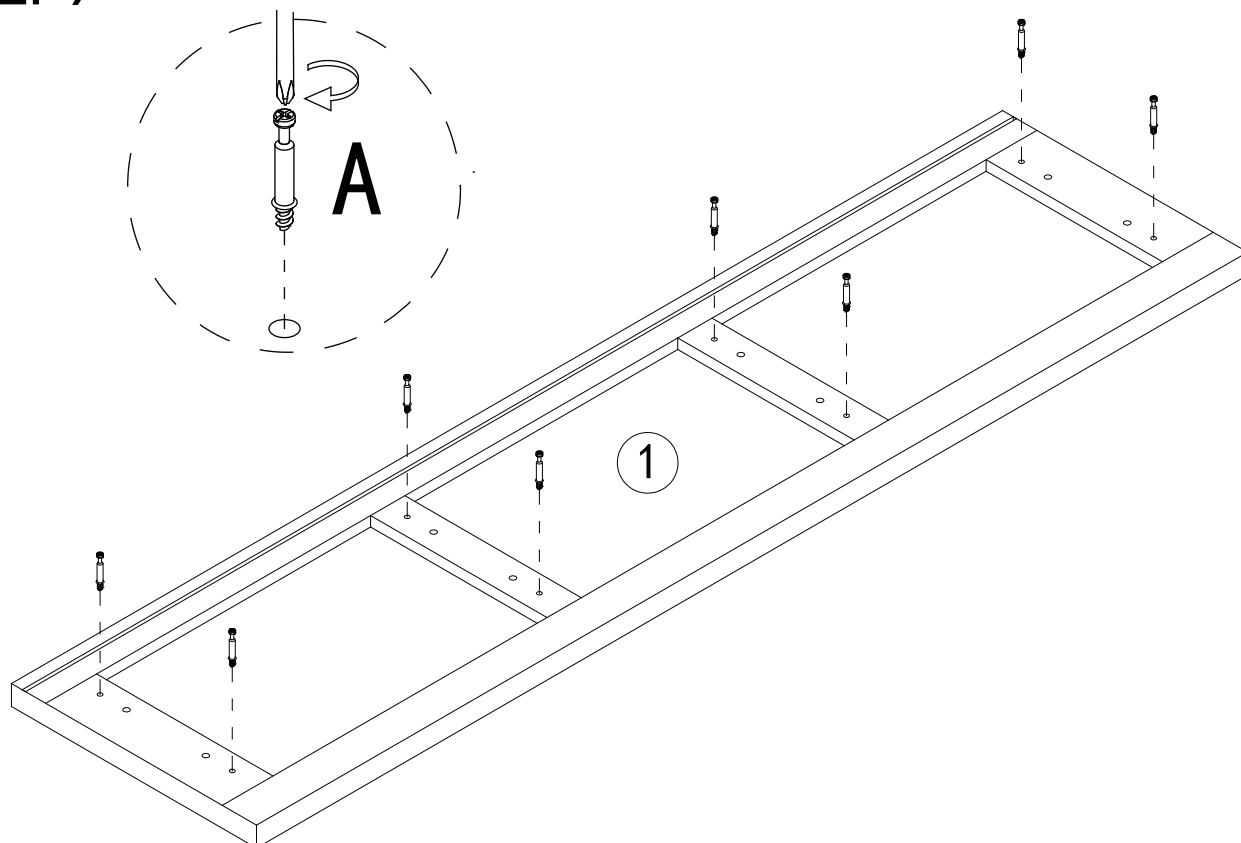


A



8pcs


STEP10

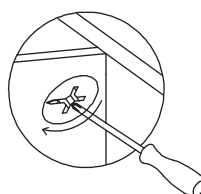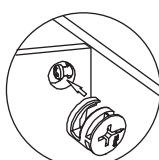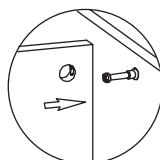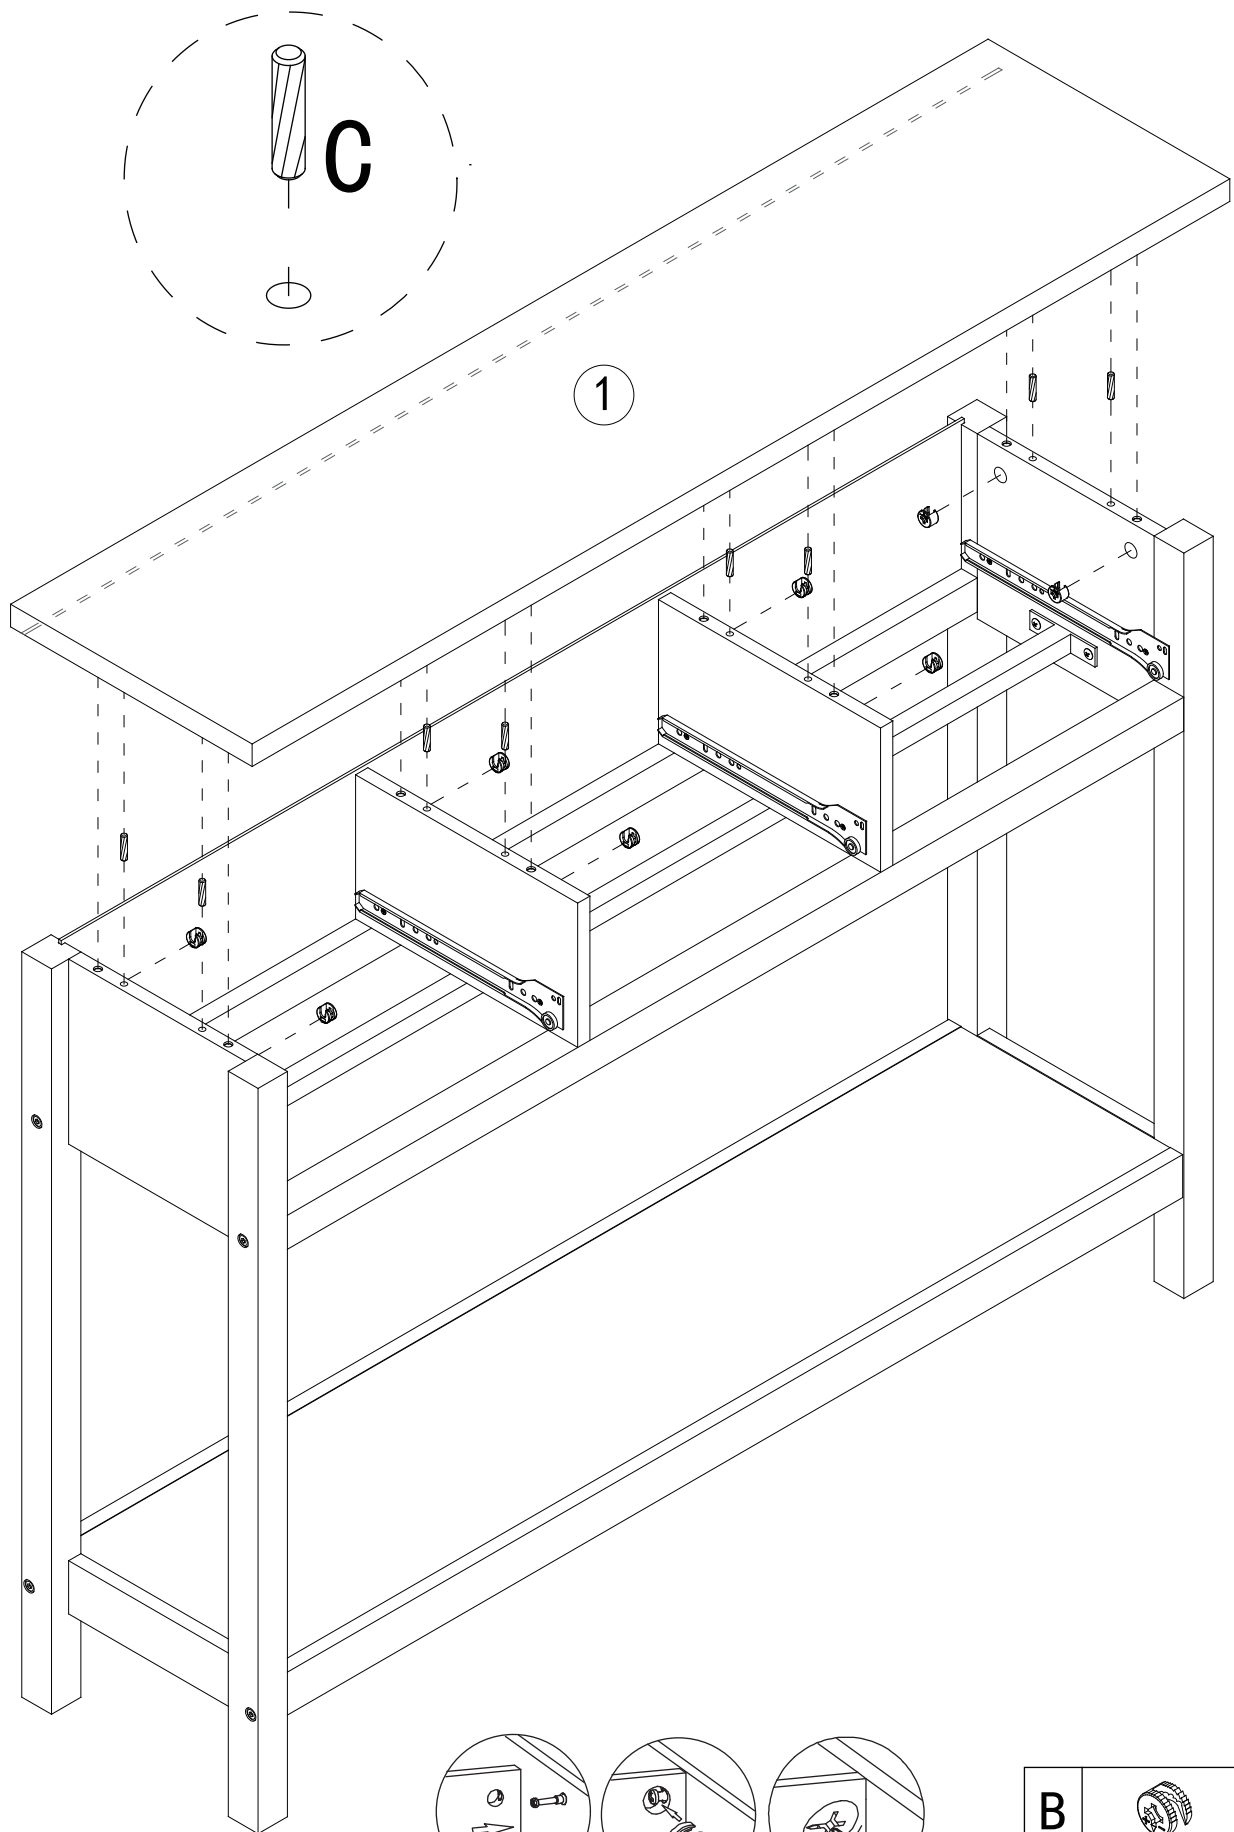

B		8pcs
C		8pcs

STEP11


The side panels are flush with the bottom panel.

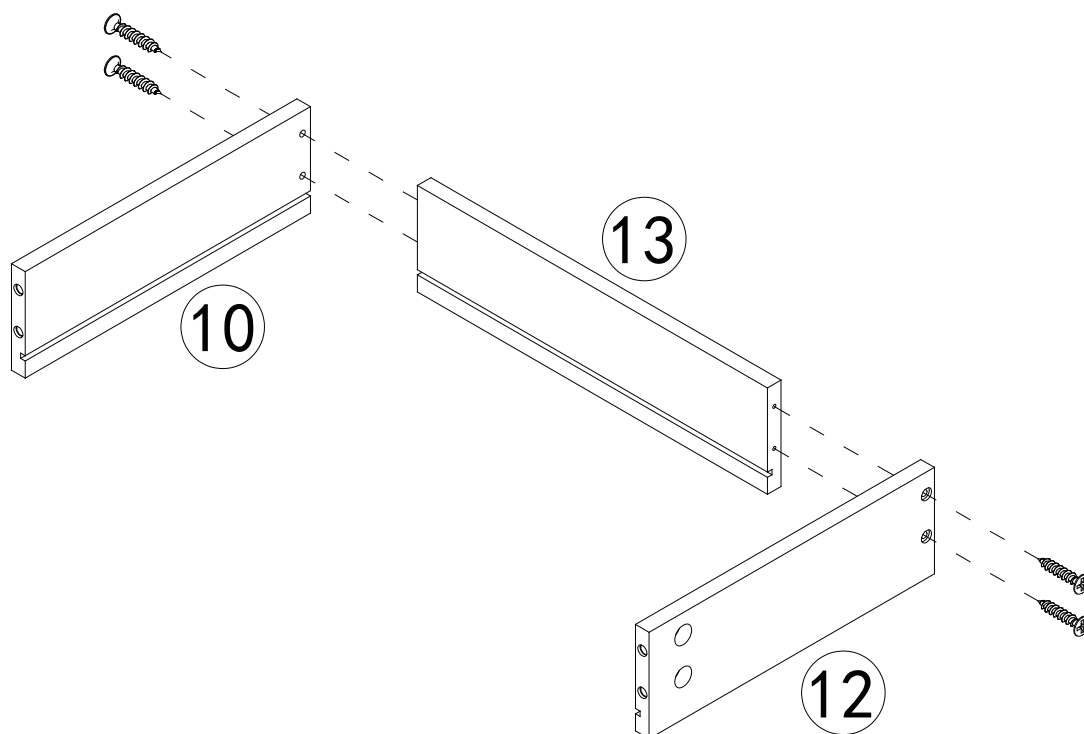

x3


H		12pcs
---	---	-------

STEP12

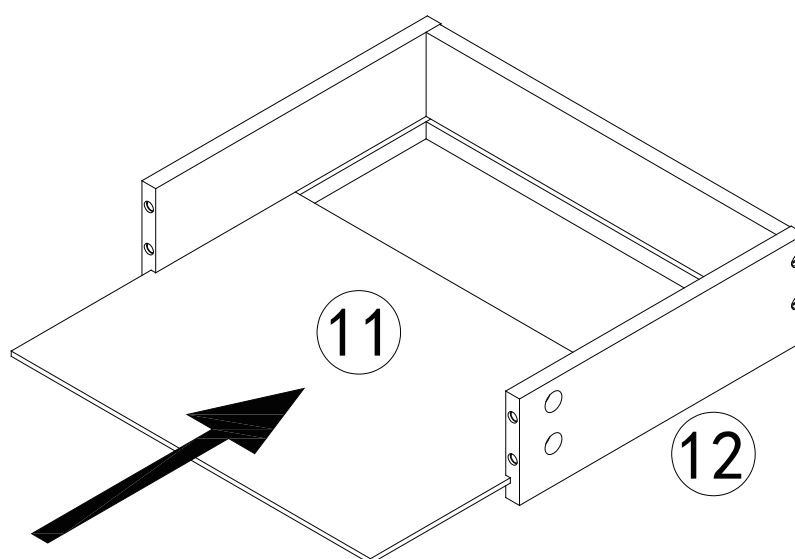


x3

STEP13

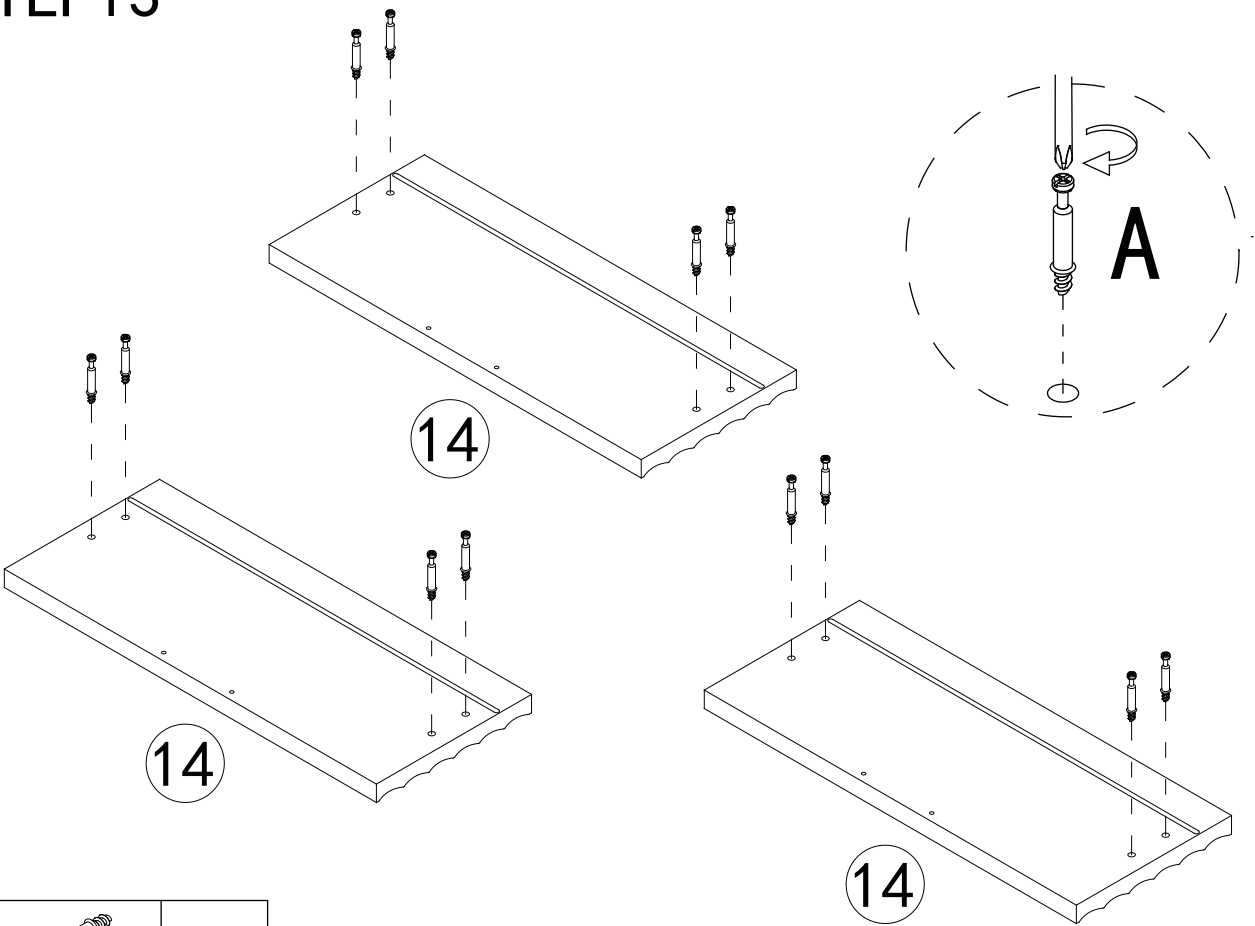


A		12pcs
---	---	-------

STEP14

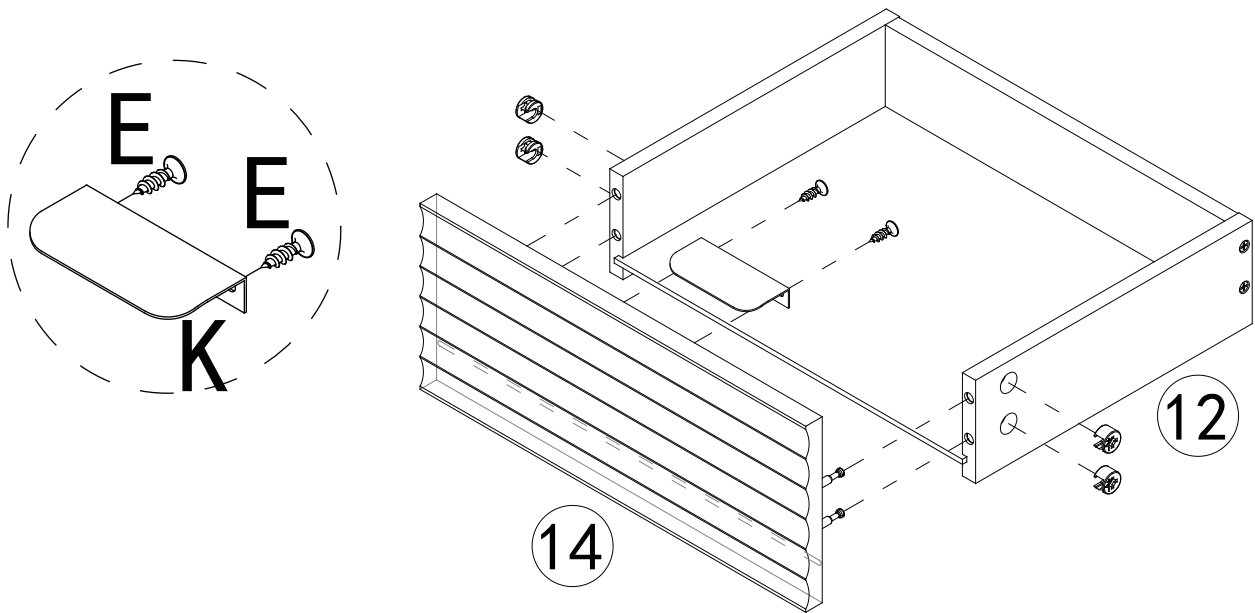


B		12pcs
E		6pcs
K		3pcs

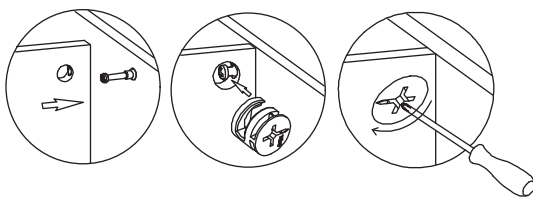



x3

STEP15

Pay attention to the hole position.


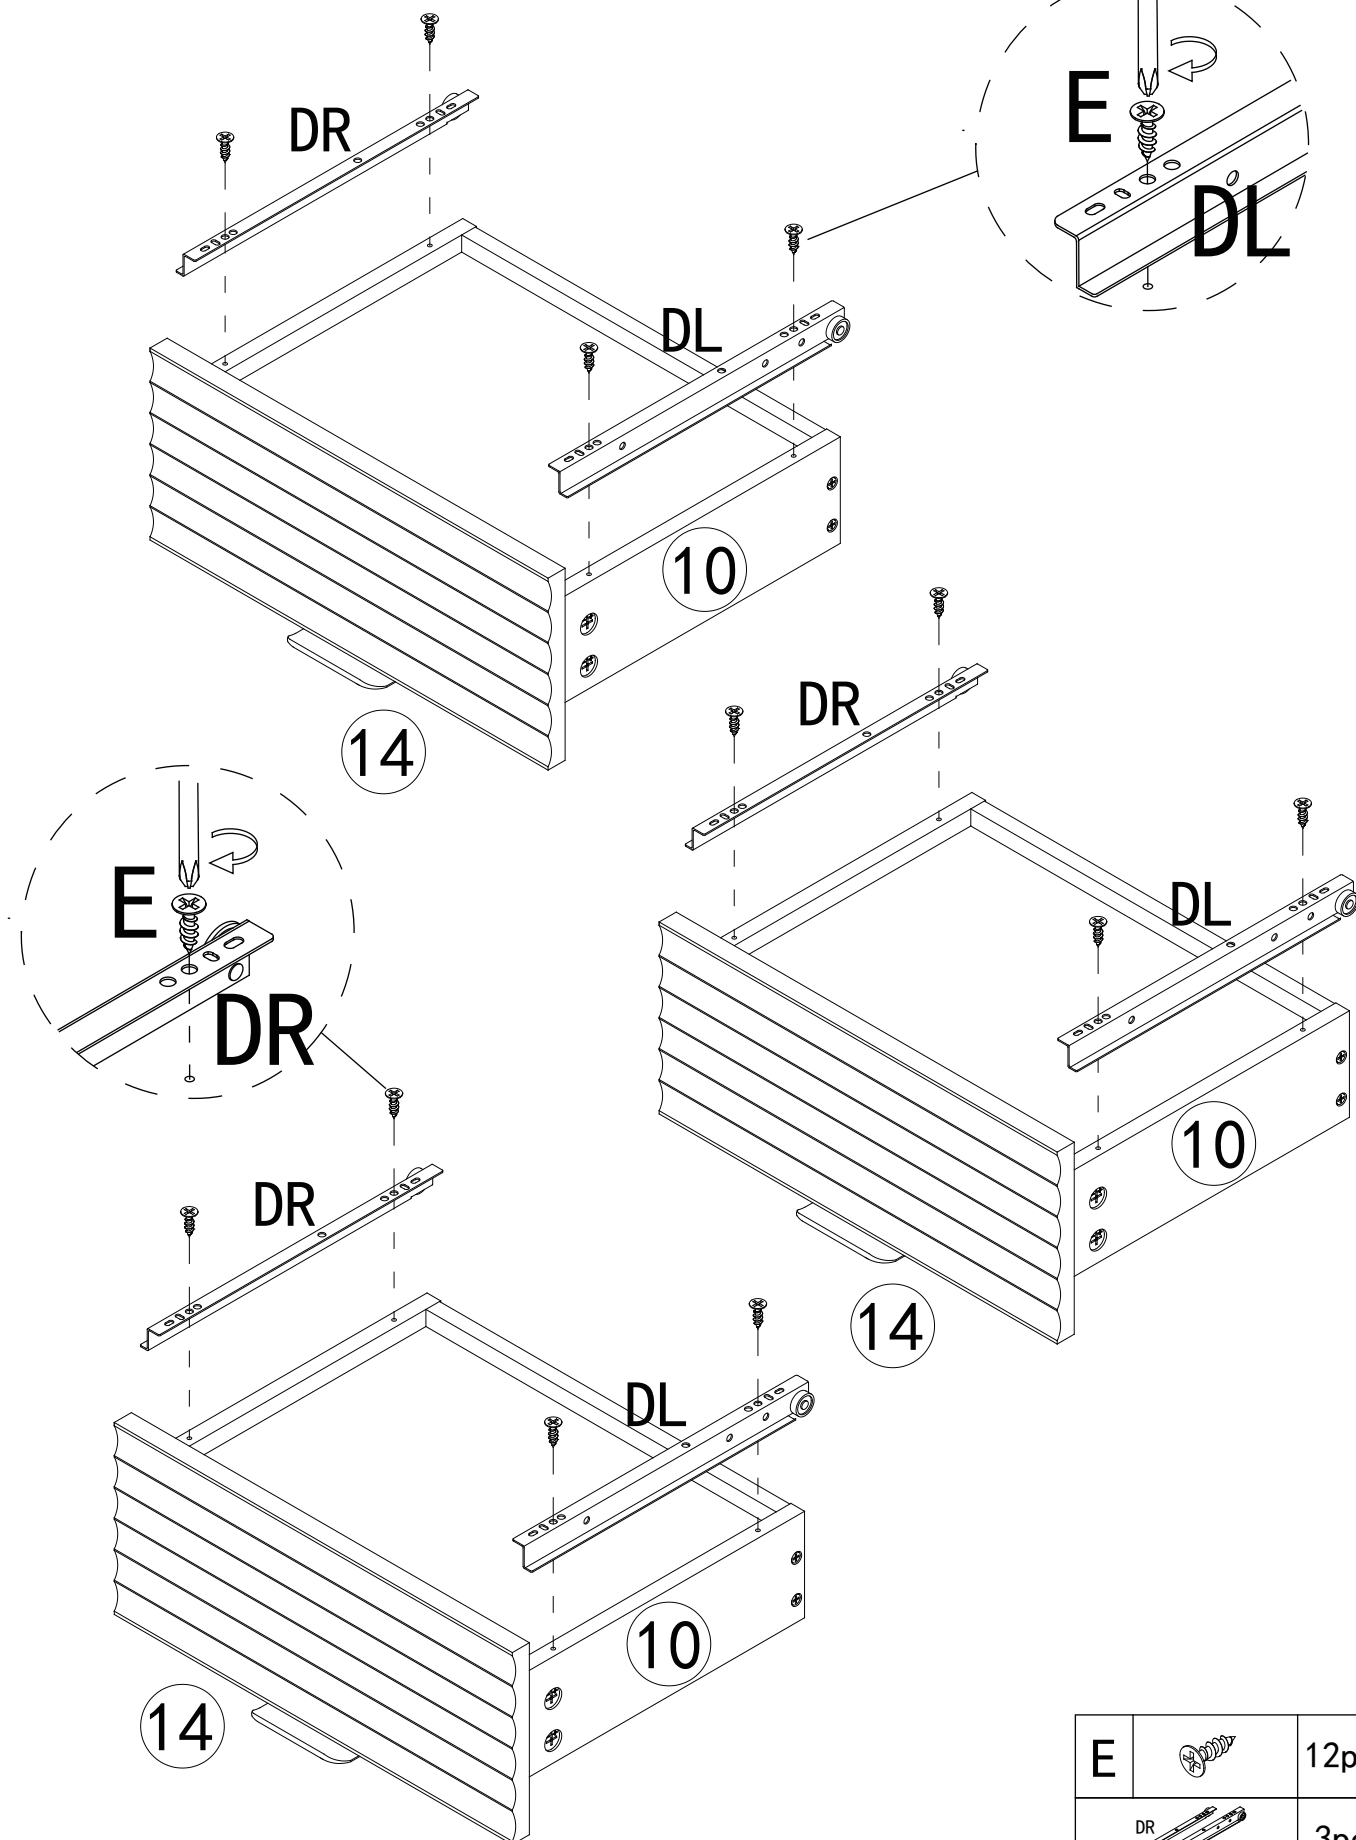


STEP16

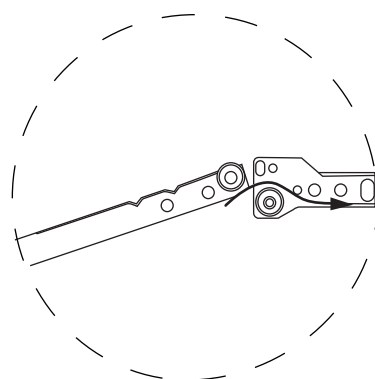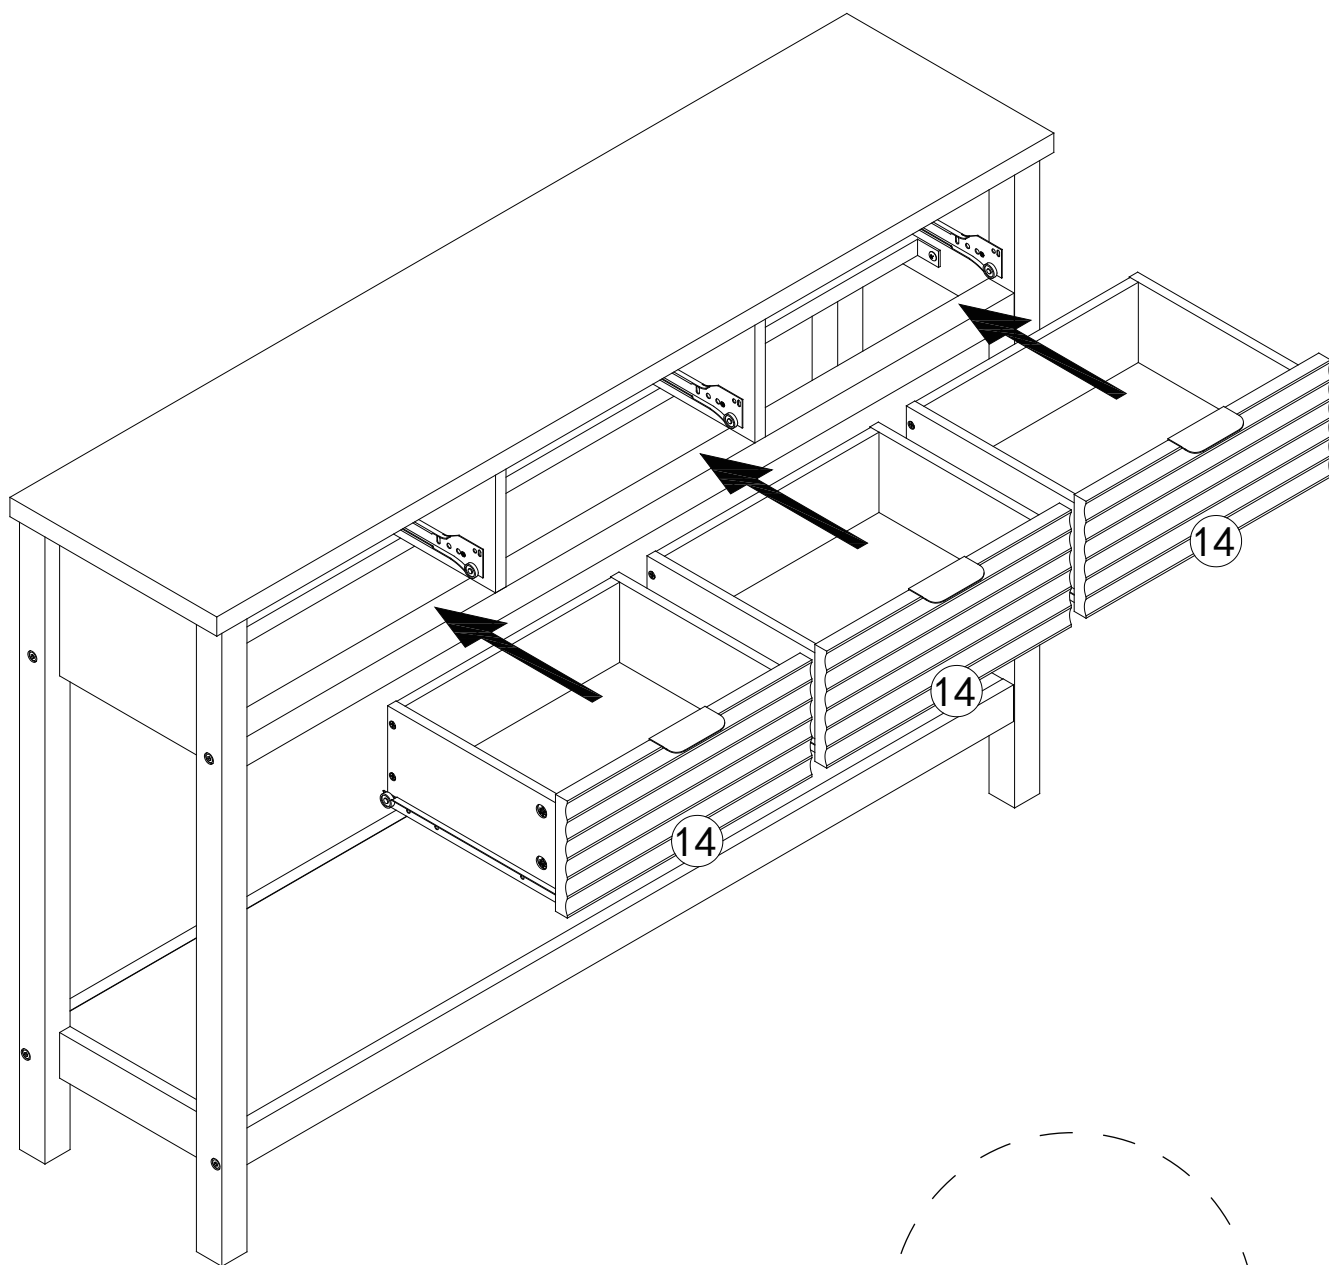



STEP17

Be sure to install back plate buckle to prevent the cabinet from shaking.

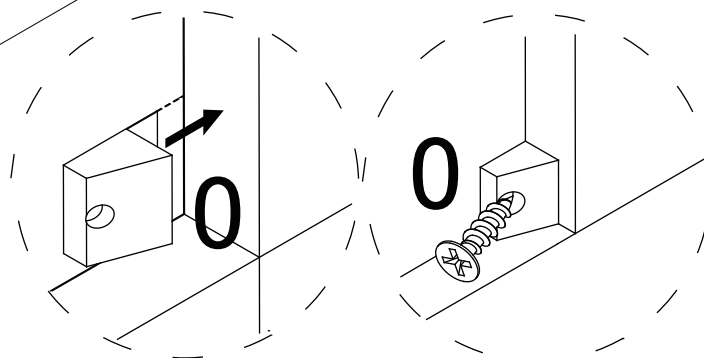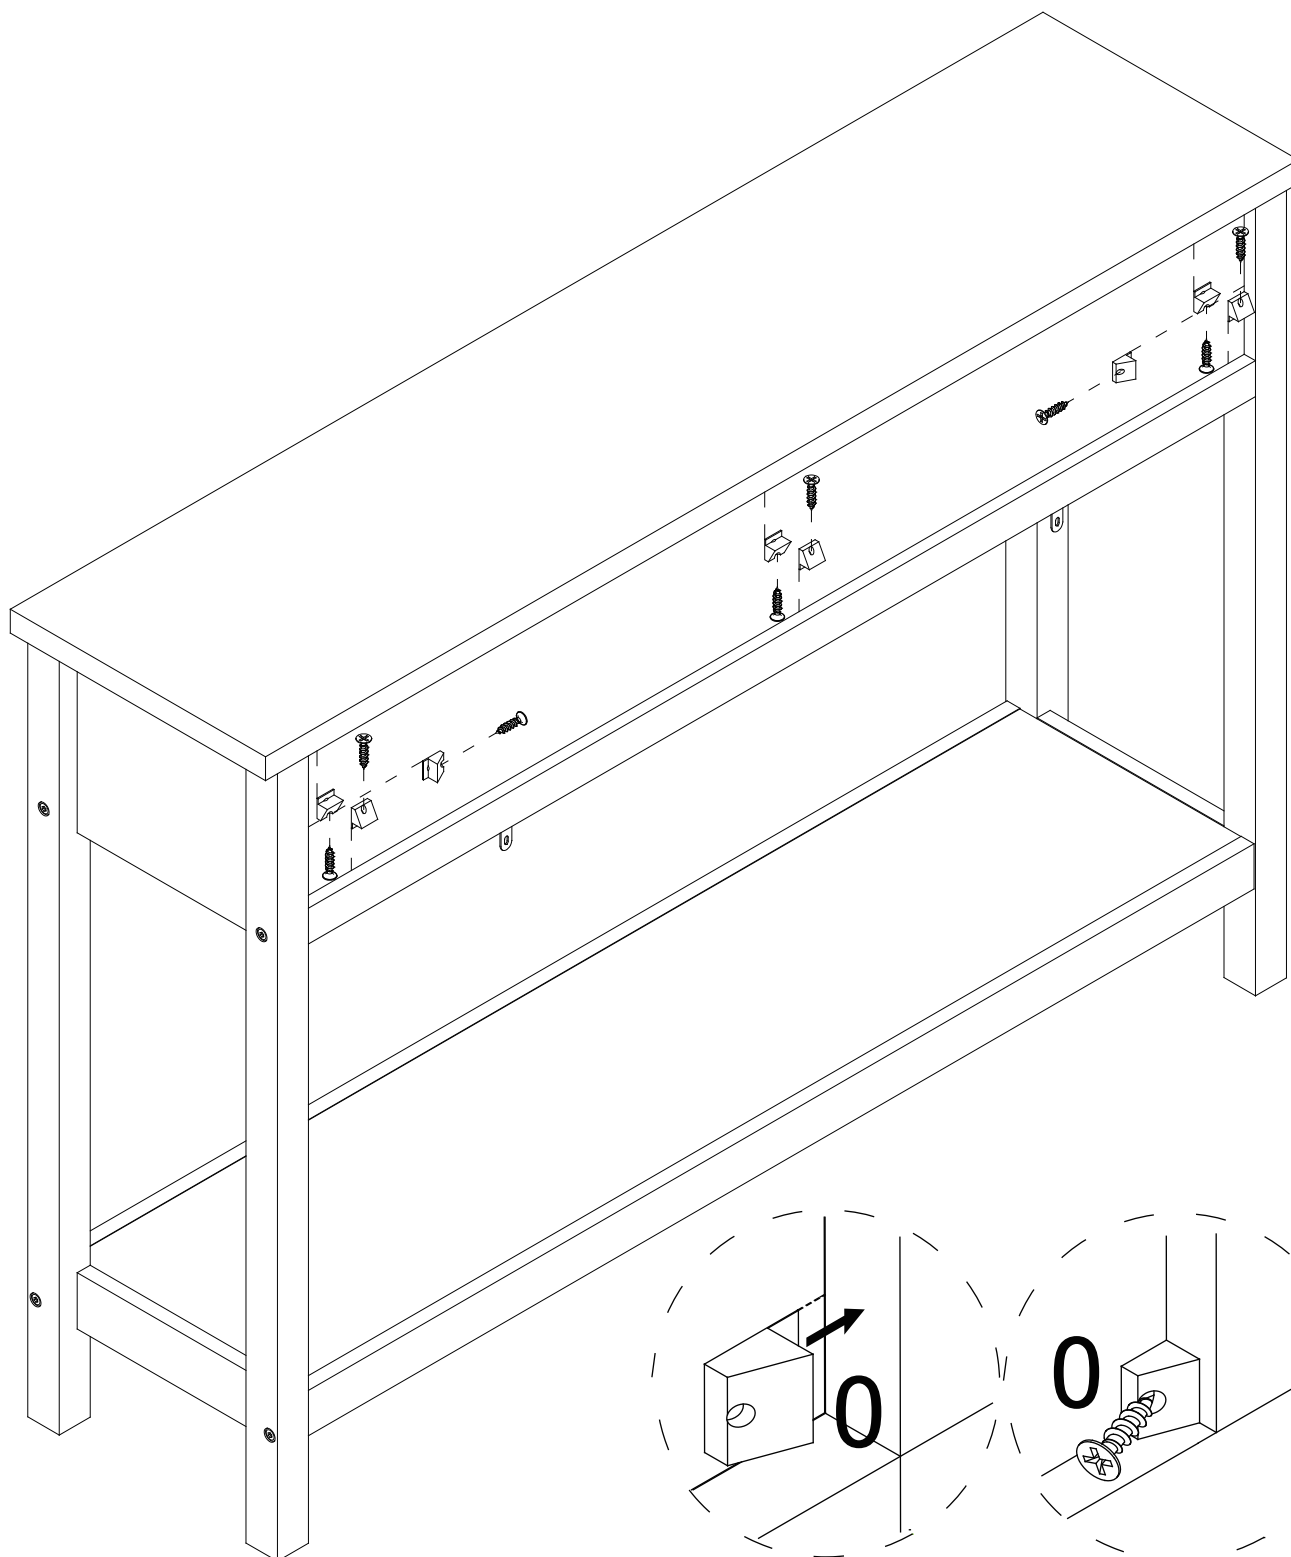

0		8pcs
---	--	------

STEP18

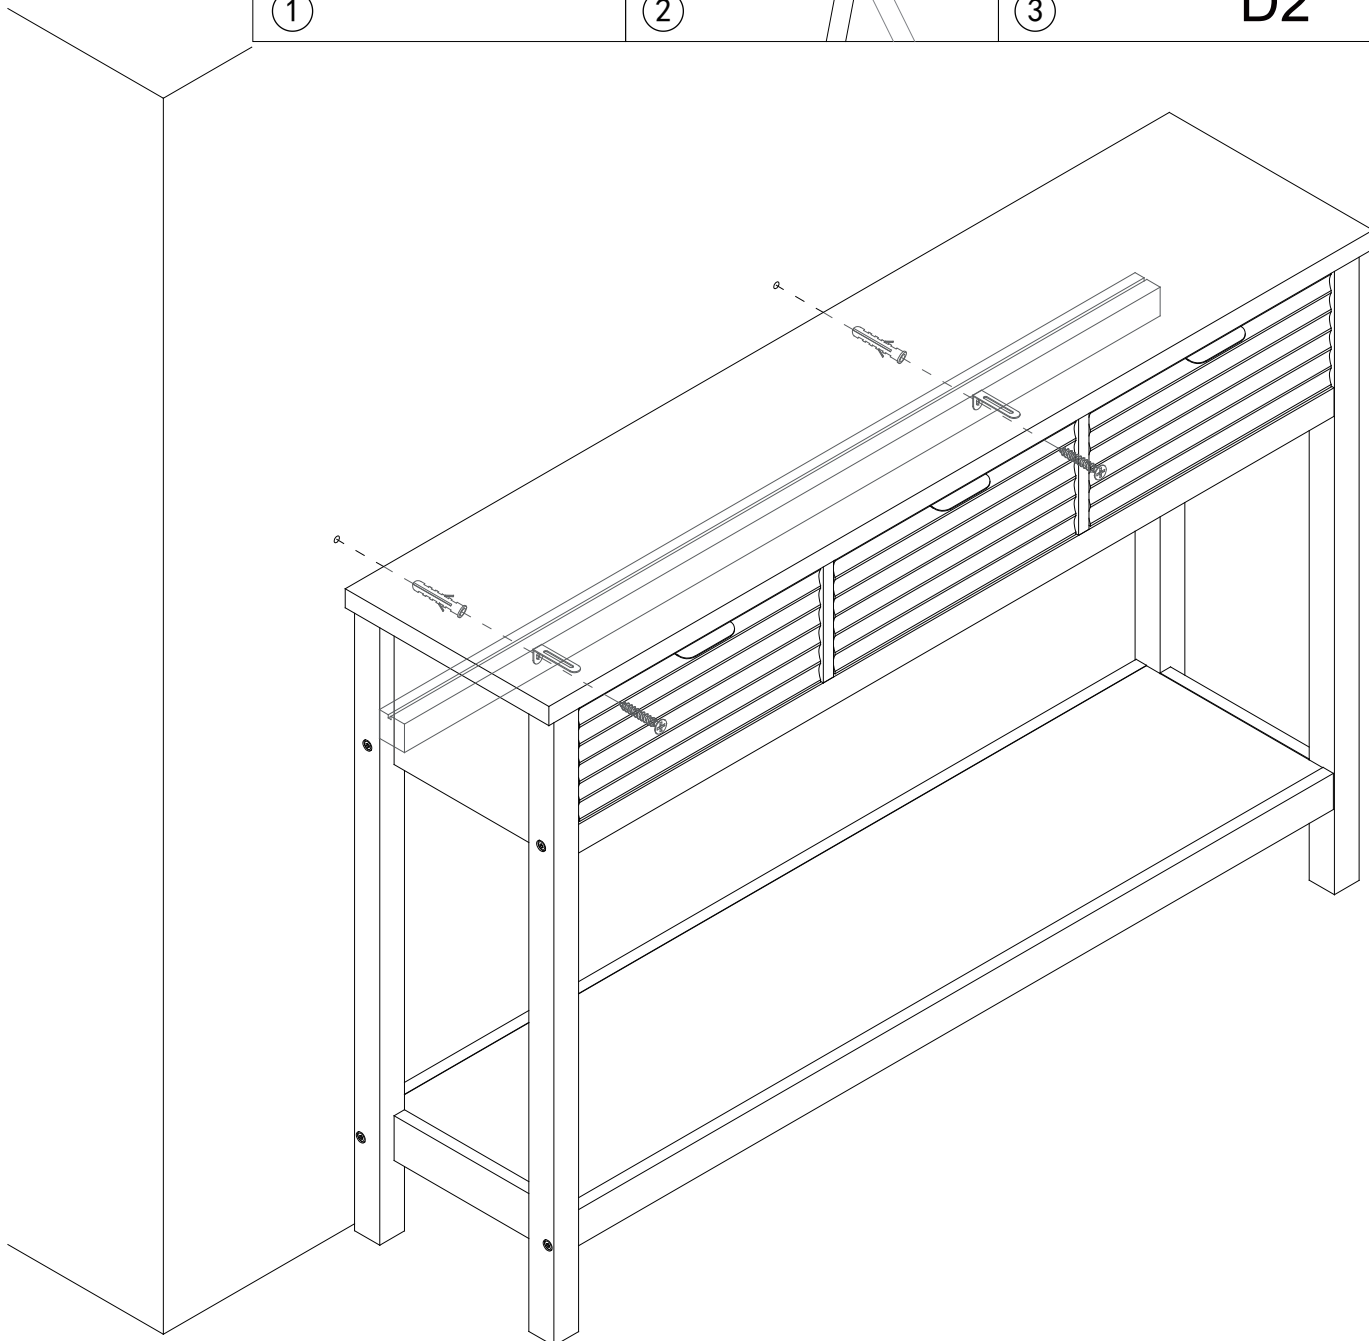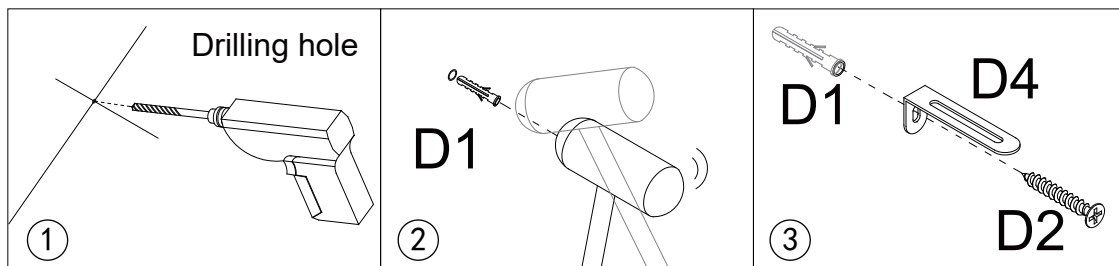

Drill a hole in the wall, then hammer the D1 into the wall with a hammer.

Note: Follow step

link D4 and D1 with a D2 using a screwdriver, and assembly it tightly.

Instructions for use: The cabinet legs should be designed to avoid lateral stress. When moving, please lift vertically off the ground.

Dragging may cause loose connectors, affecting stability and service life.

D



2pcs