


SIDEBOARD ASSEMBLY INSTRUCTION

Three Person Assembly Required



1. Lay Top[partT] On The Smooth Surface Or Use Card Board Packing To Protect It From Getting Scrated.As Shown In Above Image.

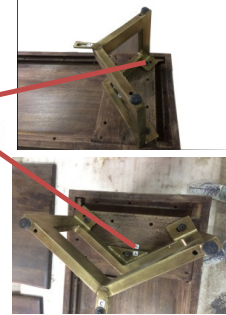

2. Align Pre Drilled Holes From Top[partT] With Pre Drilled Holes From Leg[partL] Matching "A" with "A" And "B" with "B".Then Secure The Leg[partL] With Top Using Allen Bolt[part H1] And Washer[part H2].Finger Tighten Allen Bolts Clockwise Direction And Do Not Fully Tighten Until Stretcher Is Assembled.



3. Align Holes On Stretcher And Leg Part As Shown In Above Image.Secure Stretcher With Leg Matching "C" With "C" And "D" With "D".Then Secure The Stretcher[partS] With Leg Using Allen Bolt[part H1] And Washer[part H2].Finger Tighten Allen Bolts Clockwise Direction Now Fully Tighten All Bolts Of Leg And Stretcher With The Help Of Allen Key[part H3] Provided.



4.Turn The SideBoard Upright. Your SideBoard Is Ready To Be Used Now

HARDWARE INCLUDES



TOP[PART T] x1



WASHER[PART H2] x8



LEG[PART L] x2



STRETCHER[PART S] x1



ALLEN BOLT[PART H1] x8



ALLEN KEY[PART H3] x1