







Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product is designed for residential use only.


### HARDWARE LIST

- A (6) Medium Allen Bolts
- B (4) Long Allen Bolts
- C (10) Spring Washers
- D (14) Flat Washers
- E (4) Hex Nuts
- F (1) Allen Wrench

PART	QTY	HARDWARE	PART	QTY	HARDWARE
A	6		B	4	
C	10		D	14	
E	4		F	1	

### PARTS LIST

- G (1) Headboard Panel
- H (1) Wooden Leg - Left
- I (1) Wooden Leg - Right

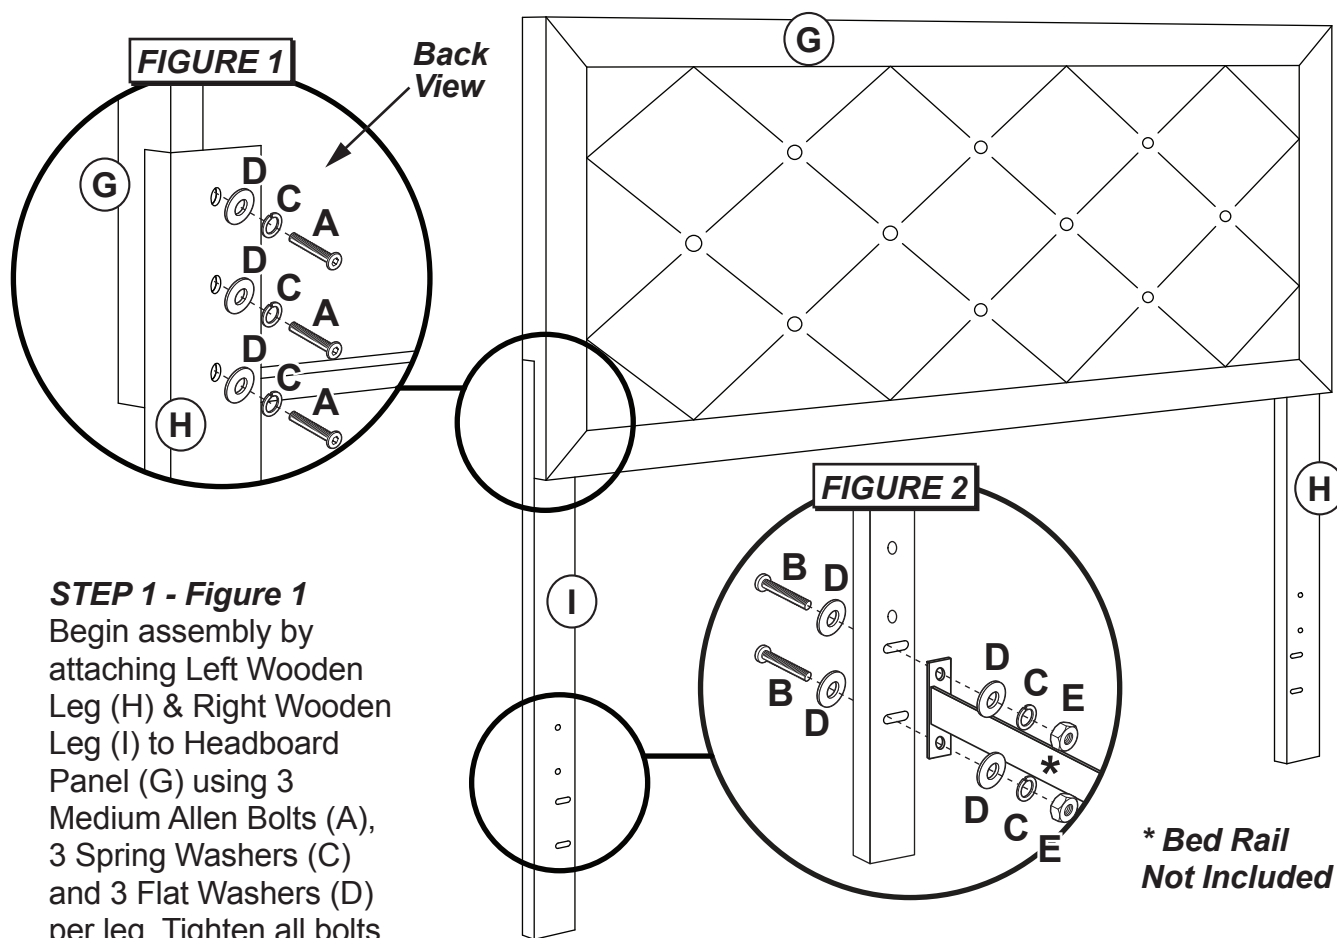

**STEP 1 - Figure 1**  
Begin assembly by attaching Left Wooden Leg (H) & Right Wooden Leg (I) to Headboard Panel (G) using 3 Medium Allen Bolts (A), 3 Spring Washers (C) and 3 Flat Washers (D) per leg. Tighten all bolts with Allen Wrench (F) provided.

Make sure to note the lower horizontal holes are closer to the inside of the headboard when placed correctly.

**\* Bed Rail Not Included**

**STEP 2 - Figure 2**  
Attach side rails (\*Not Included) to Left and Right Wooden Legs (H & I) using 2 Long Allen Bolts (B) and 2 Flat Washers (D) from the back and 2 Flat Washers (D), 2 Spring Washers (C) and 2 Hex Nuts (E) from the front. Tighten all bolts with Allen Wrench (F) provided.

**CARE & MAINTENANCE:** The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all hardware is securely tightened.