
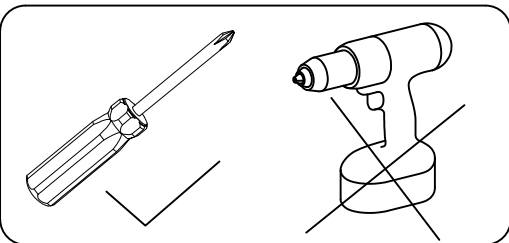
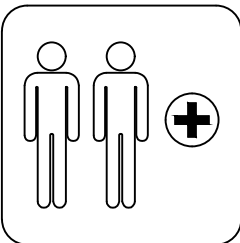



Kitchen Island Card

SKU N707P254872


Assembly instructions-Please keep for future rerence

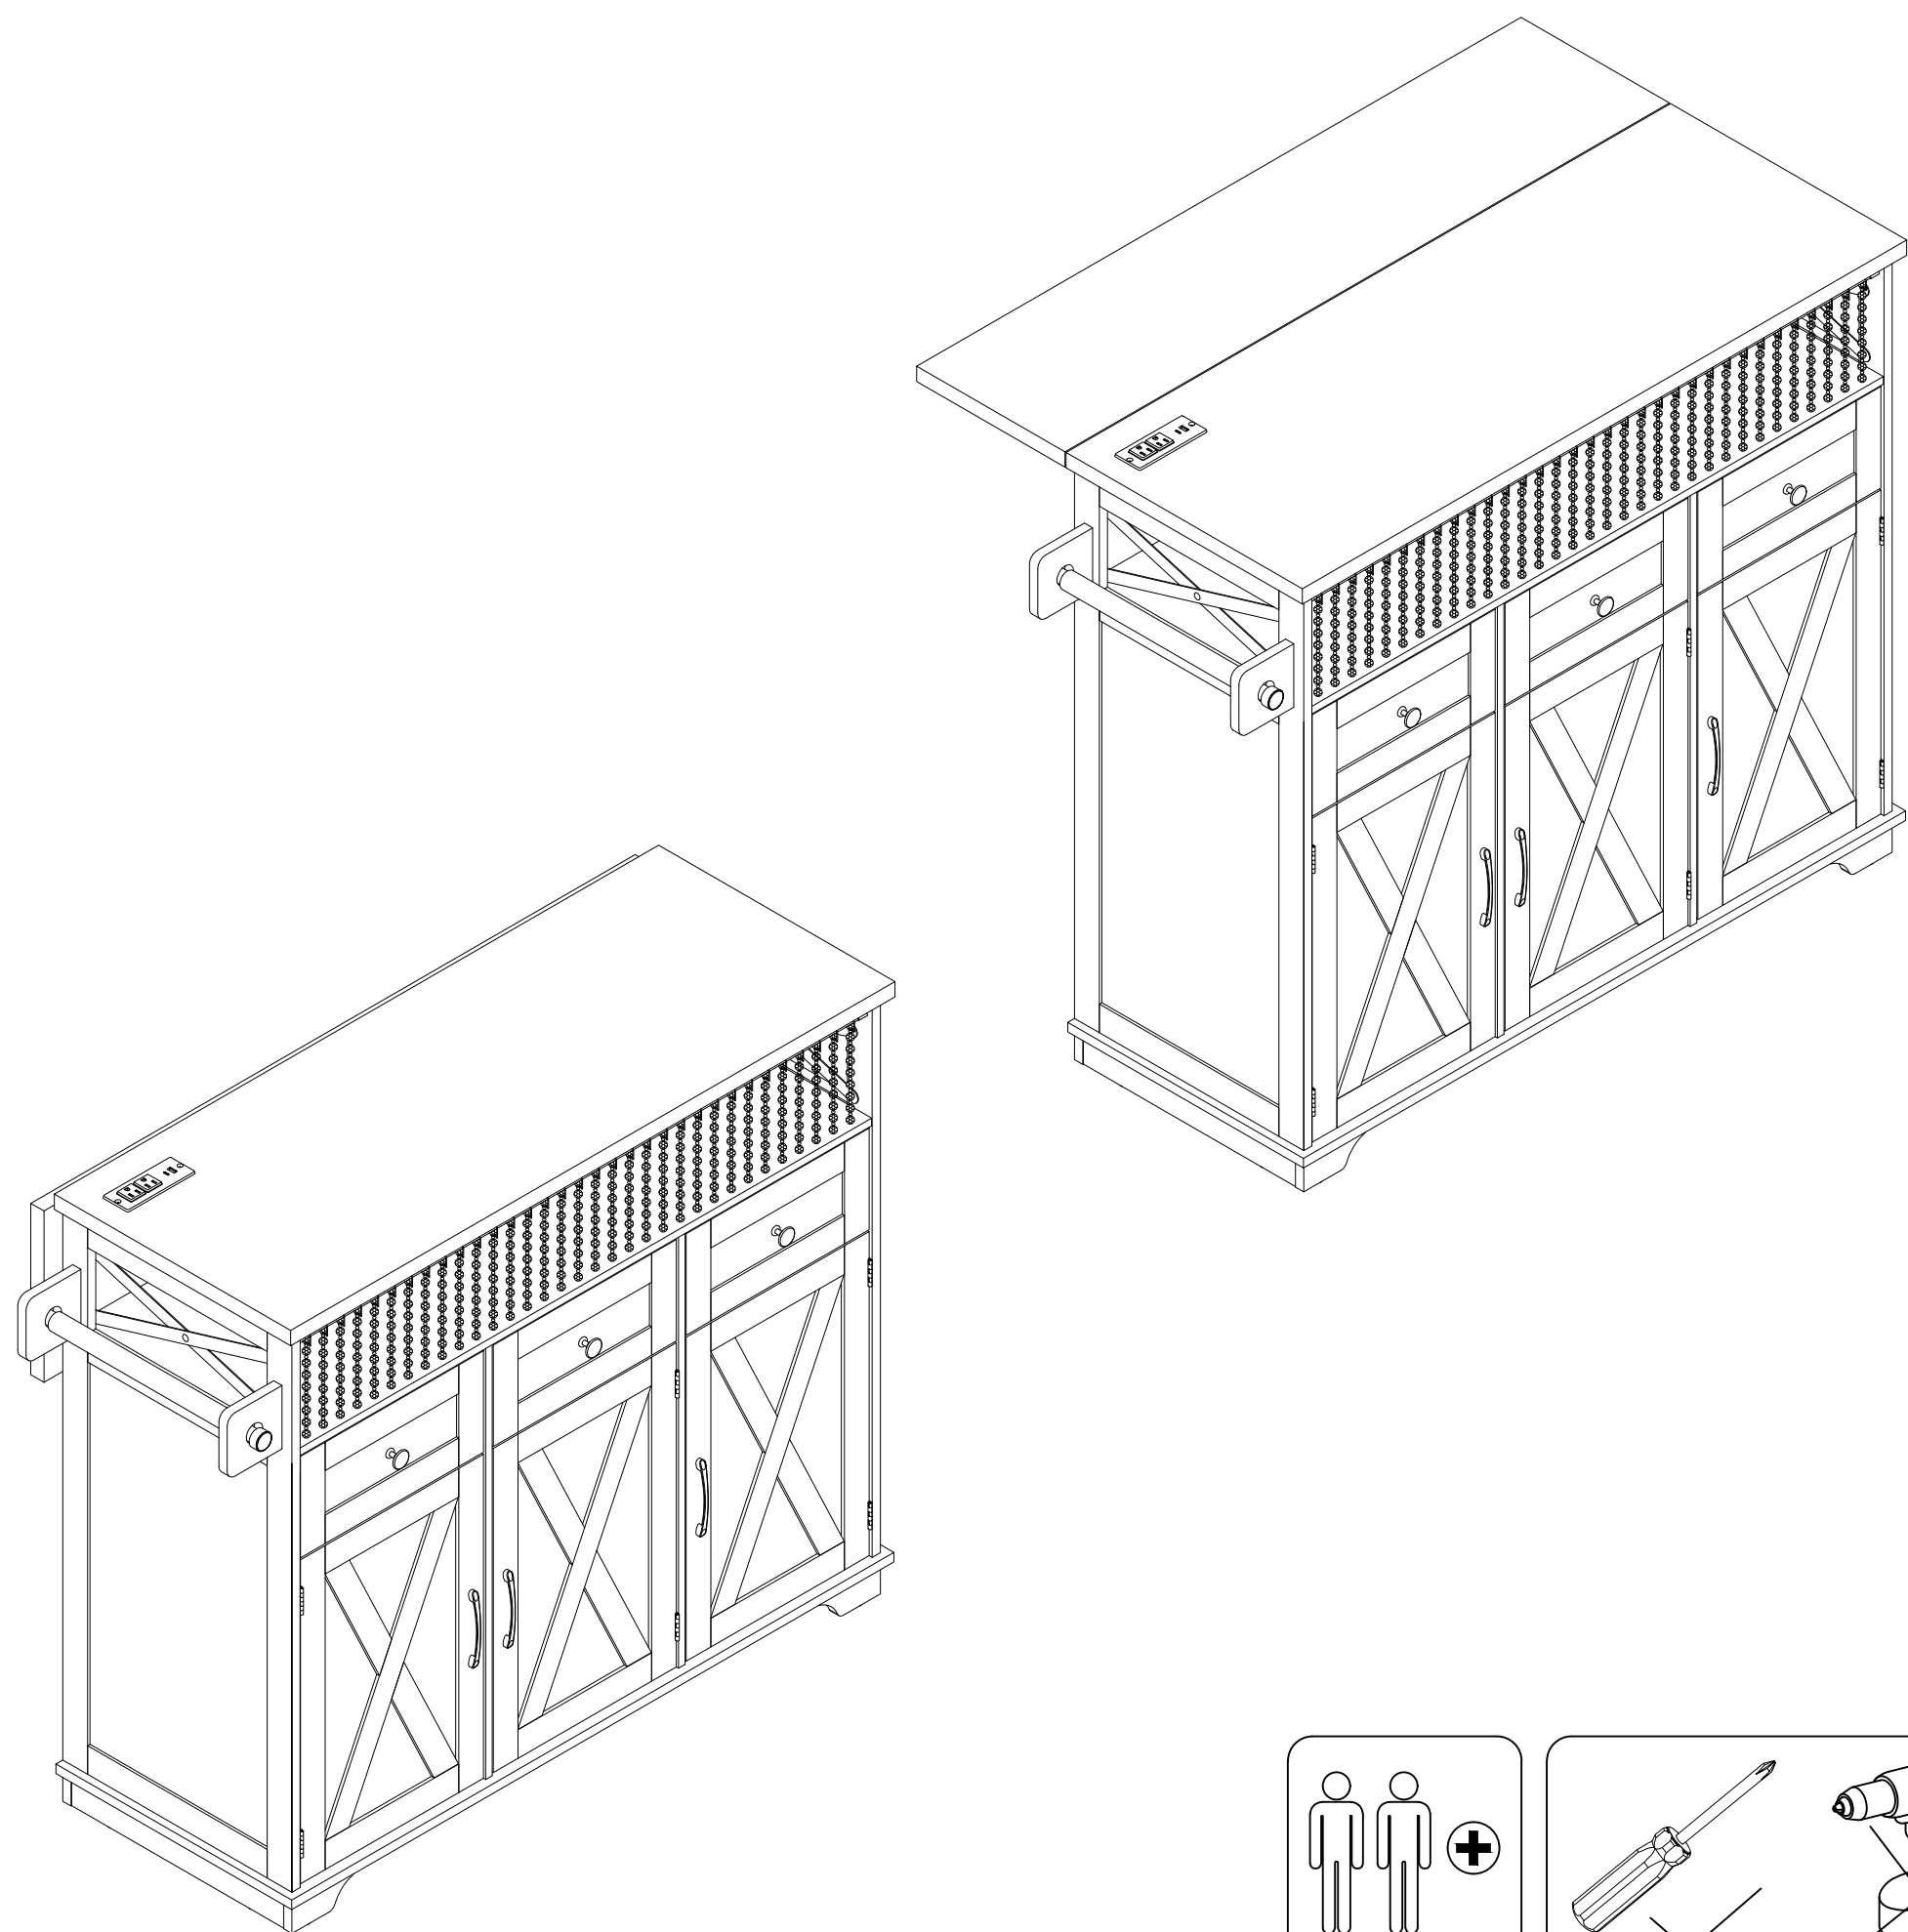


Important-Please read these instructions fully before starting assembly

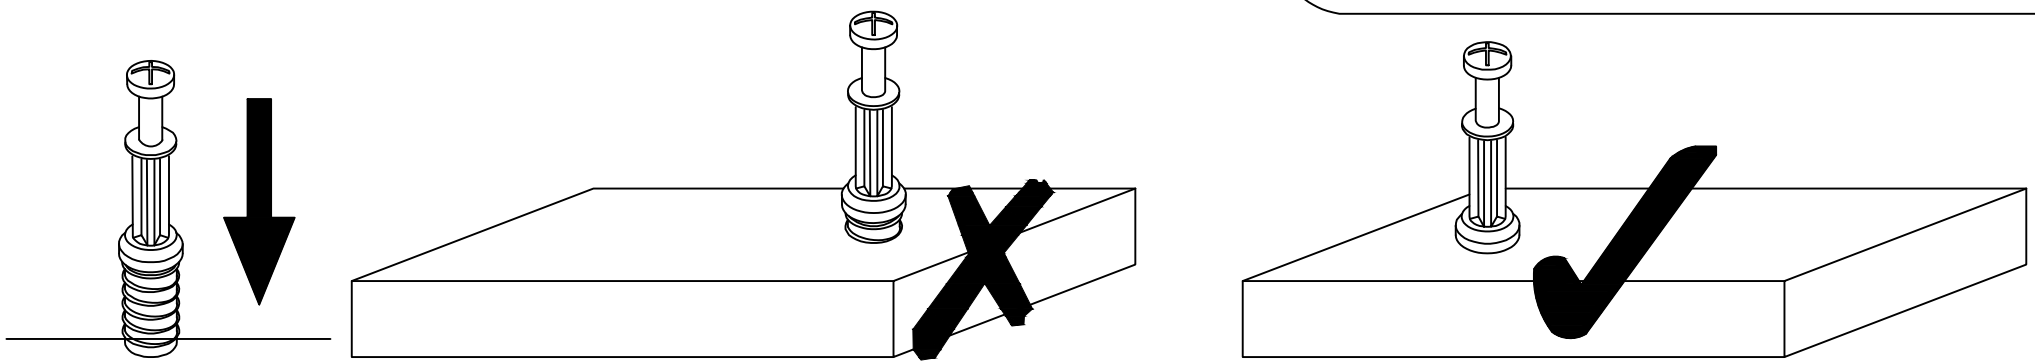


QUICKFIT: Tighten quickfit until shoulder is flush with panel.
Do not overtighten or undertighten.

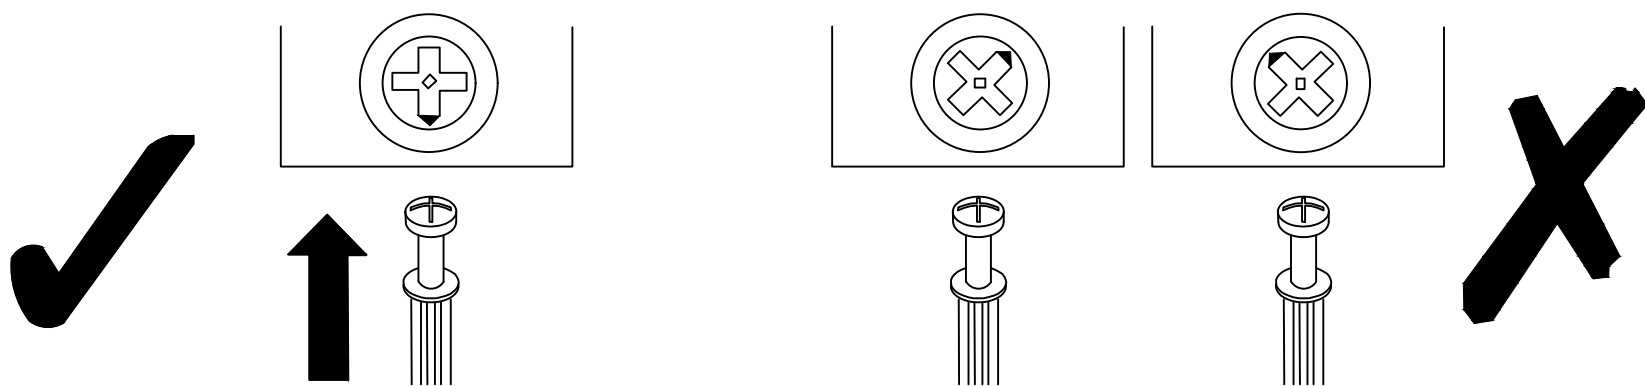

LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

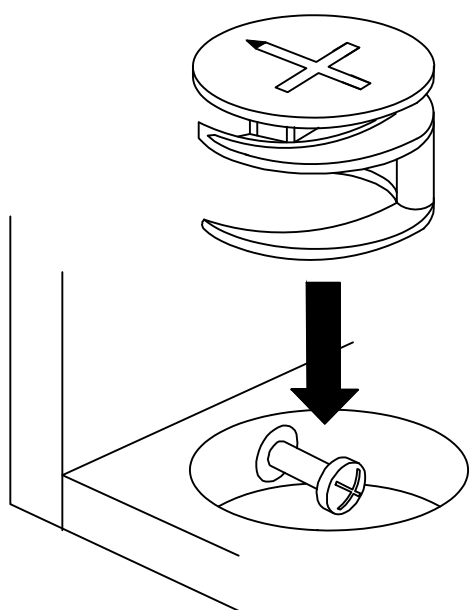

Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

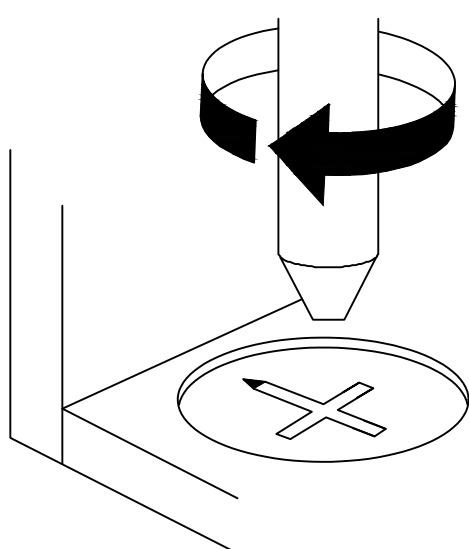

Turn cam lock clockwise to tighten.

Assembly Instructions

