


edishinē

Pendant Light

SKU: HHPL26A
[Instruction Manual]



Please pay attention to the warning signs
Read the instructions with caution before operating
and keep it properly

Warning:

Risk of fire. Min 167°F/75°C supply conductors. Consult a qualified electrician to ensure correct installation. Before installation, please turn off the main power of the circuit breaker to prevent possible electric shock.

Installation Instructions

FIG.1. Turn the wall switch to the "OFF" position. Depending on which type of fuse box in your home:

FIG.2. Either turn the main (Master) switch to the "OFF" position to cut off the power supply of the entire home, or turn off the individual switch that supplies power to where the fixture will be installed.

OR

FIG.3. Either turn the main (Master) switch to the "OFF" position to cut off the power supply of the entire home, or unscrew the fuse that supplies power to where the fixture will be installed.

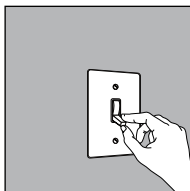


FIG.1 WALL SWITCH

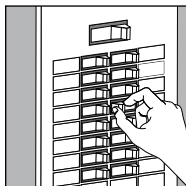


FIG.2 BREAKER PANEL


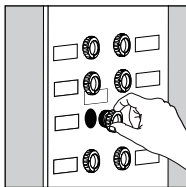


FIG.3 FUSE BOX

PACKING LIST





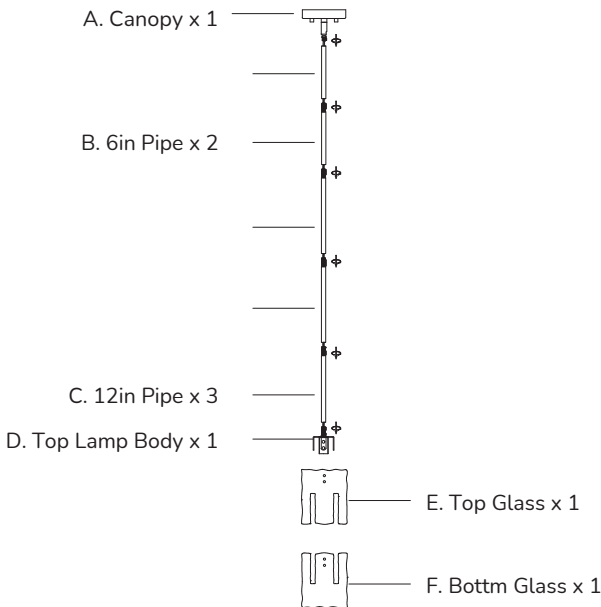




1. Pass the power cord of the Top Lamp Body (D) through Pipe (B/C) and Canopy (A) as shown in the picture and tighten it.

2. Turn Screw 12in Pipe (C) onto the connection of Top Lamp Body (D), then insert 6in Pipe (B) into the teeth of 12in Pipe (C), and screw Canopy (A) into the teeth of 6in Pipe (B) tighten it.


Note: At least one Pipe (B/C) is required to connect canopy (A).

INSTALLATION KIT

AA  x1 Mounting Bracket	BB  x2 Mounting Bracket Screw	CC  x2 Outlet Box Screw
DD  x3 Wire Nut	EE  x16 Silicon Washer	FF  x2 Knurled Nut
GG  x8 M4 Screw		

- 1.Silicon Washer (EE) have some extra pieces for back-up.
- 2.Mounting Bracket Screw (BB) ,Knurled Nut (FF) have been pre-installed on Mounting Bracket (AA).

INSTALLATION

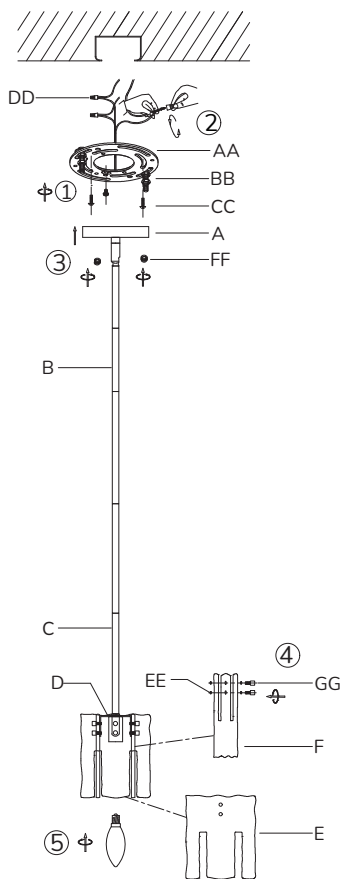

Step 1:

1. Loosen the Knurled Nut (FF) from Canopy (A), and take out the Mounting Bracket (AA).
2. Take off the screws from the outlet box, and secure the Mounting Bracket (AA) onto the box with the screws taken off or Outlet Box Screw (CC).

Step 2:

1. Wrap the ground wire from the outlet box around the Ground Screw on the Mounting Bracket (AA), and then connect the ground wire from the fixture to the ground wire from the outlet box.
2. Connect the wires from the fixture to the house supply wires, neutral wire (white) to neutral wire, and hot wire (black) to hot wire.
3. Spread apart the wires so that the hot wires are on one side of the outlet box and the neutral wires are on the other side.

Step 3:

1. Fix the Canopy (A) onto the Mounting Bracket (AA) with the Knurled Nut (FF).

Step 4:

1. Use M4 screws (GG) to secure the glass to the iron sheet, and insert washers on both sides of the glass (make sure the screws are slightly loosened)
2. As shown in the figure, the order of the Top Glass (E) and Bottom Glass (F) .

Step 5:

1. Install the E12 x1 bulbs (not included).

Tips:

For your convenience during installation, you can install the light source first and then the glass lampshade.

Specifications

- Input Voltage: 120VAC 60Hz
- Max.Load Power: incandescent Bulb 40W
- Socket Type: Standard Medium E12

One Year Limited Warranty

Supported by our professional R&D team and QC team, we provide One Year Warranty for materials and workmanship from the purchase date. Please note that the warranty does not cover damage caused by personal misuse or improper installation. Please attach your Order ID and Name so that our dedicated customer service team can help you better.



Made in China