


Loft Bed With Shelf

WF199212AAB

WF199212AAK

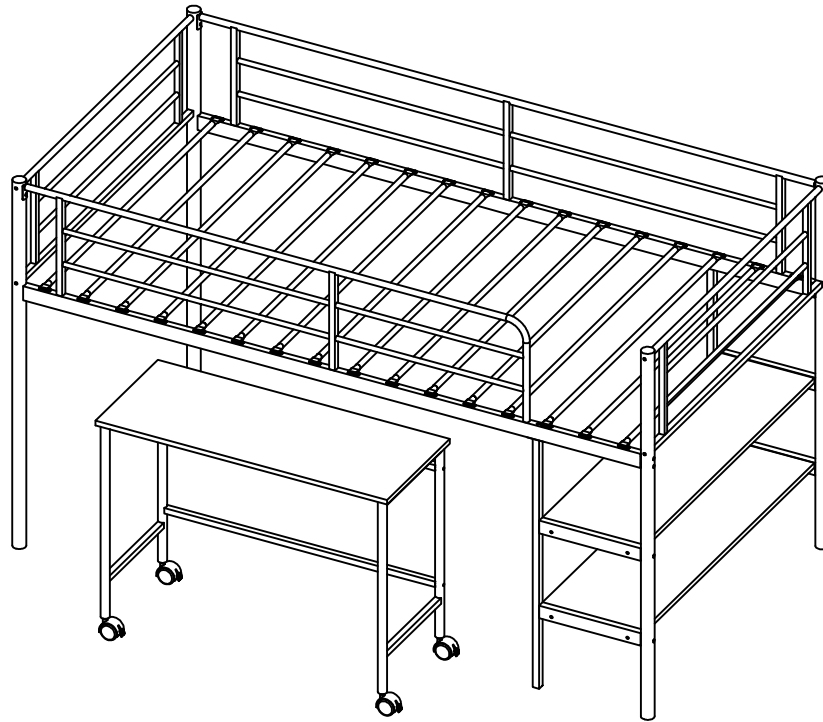

PLEASE DO NOT RETURN PRODUCT TO THE STORE



If you have any problem or concerns, please feel free to contact our customer service department. We will reply you as soon as possible.

E-Mail: wmcsr@comptree.net





Tel: 626-912-8886 Ext.100


Product size: 77.48"x41.65"x46.14"


Mattress size: 38.98"x74.8"

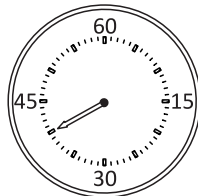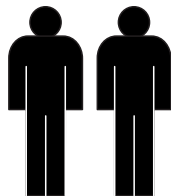

40mins

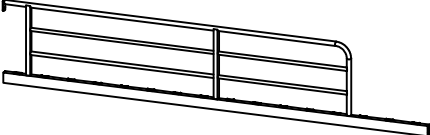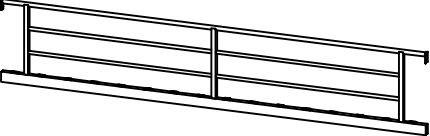	2Pcs	①
	1Pc	②
	1Pc	③
	2Pcs	④
	1Pc	⑤
	1Pc	⑥
	2Pcs	⑦
	4Pcs	⑧
	4Pcs	⑨
	2Pcs	⑩
	16Pcs	⑪
	1Pc	⑫
	2Pcs	⑬
	2Pcs	⑭
	4Pcs	⑮

	M6x16mm	3Pcs	A
	M6x32mm	12Pcs	B
	M6x39mm	12Pcs	C
	M6x59mm	10Pcs	D
	M8x35mm	4Pcs	E
	M8x60mm	12Pcs	F
	Ø17	12Pcs	G
	Ø16	8Pcs	H
	Ø16	8Pcs	I
	(S4)	1Pc	J
	(S5)	1Pc	K
	(S14)	1Pc	L

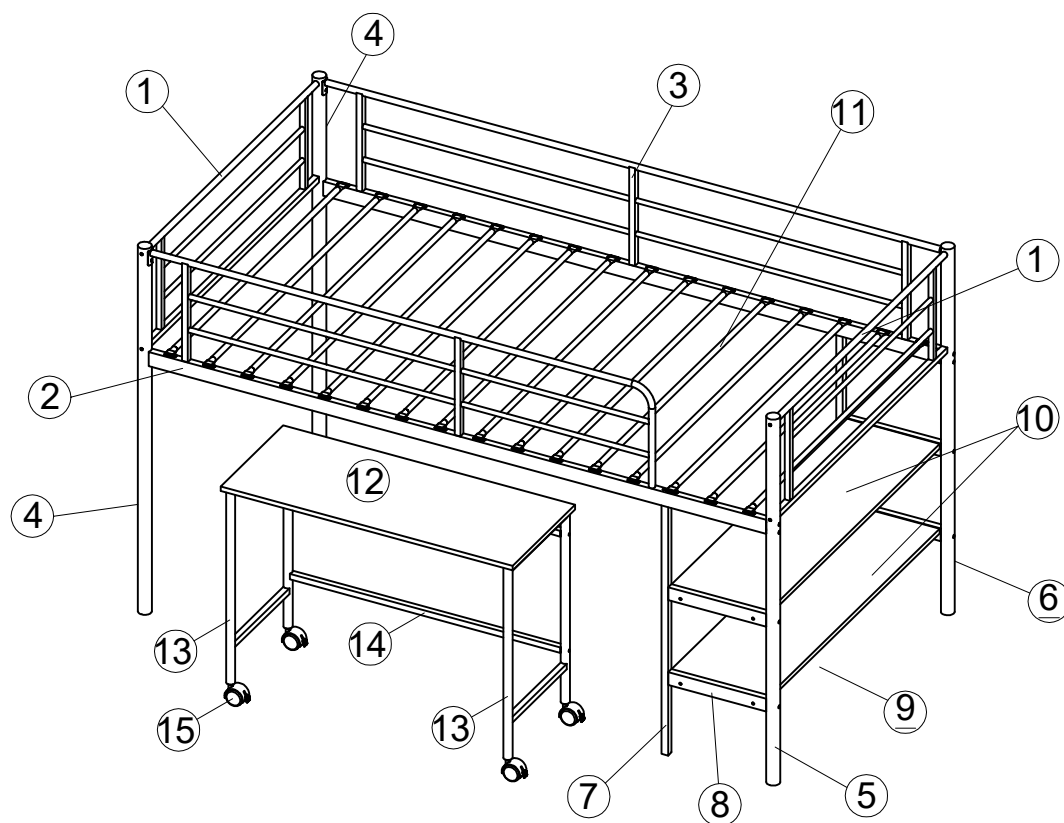


Check all the components & screws before assembly. Please don't hesitate to contact us, if the package you received is missing parts or screws.


Recommendation: **ONLY** clean the bed frame with a dry tissue.

Step 1


Please don't tighten all screws too much.

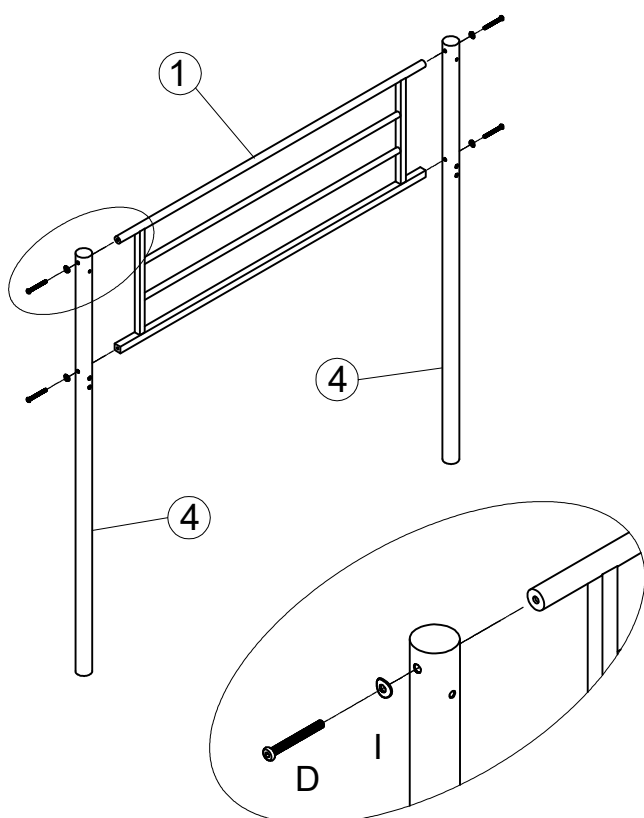


Step 2

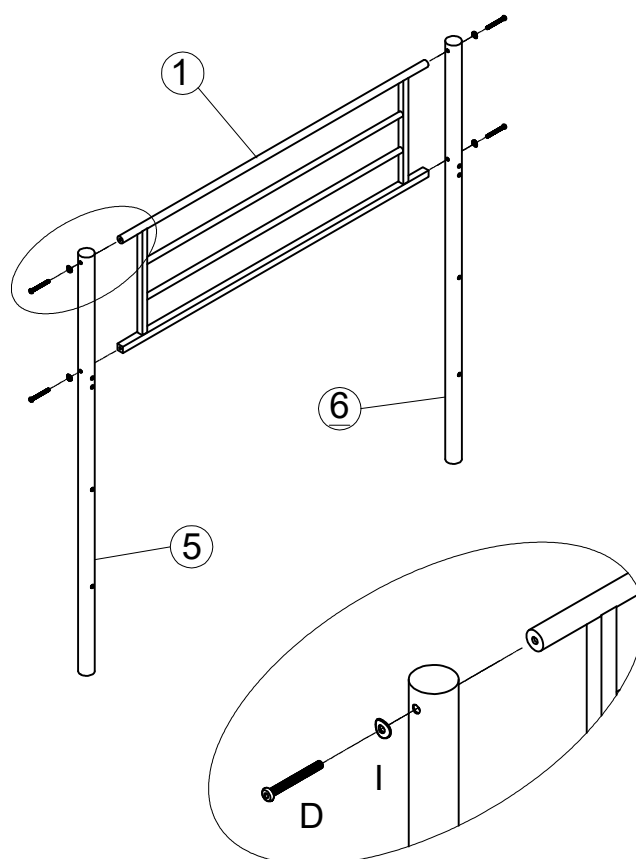


Step 3

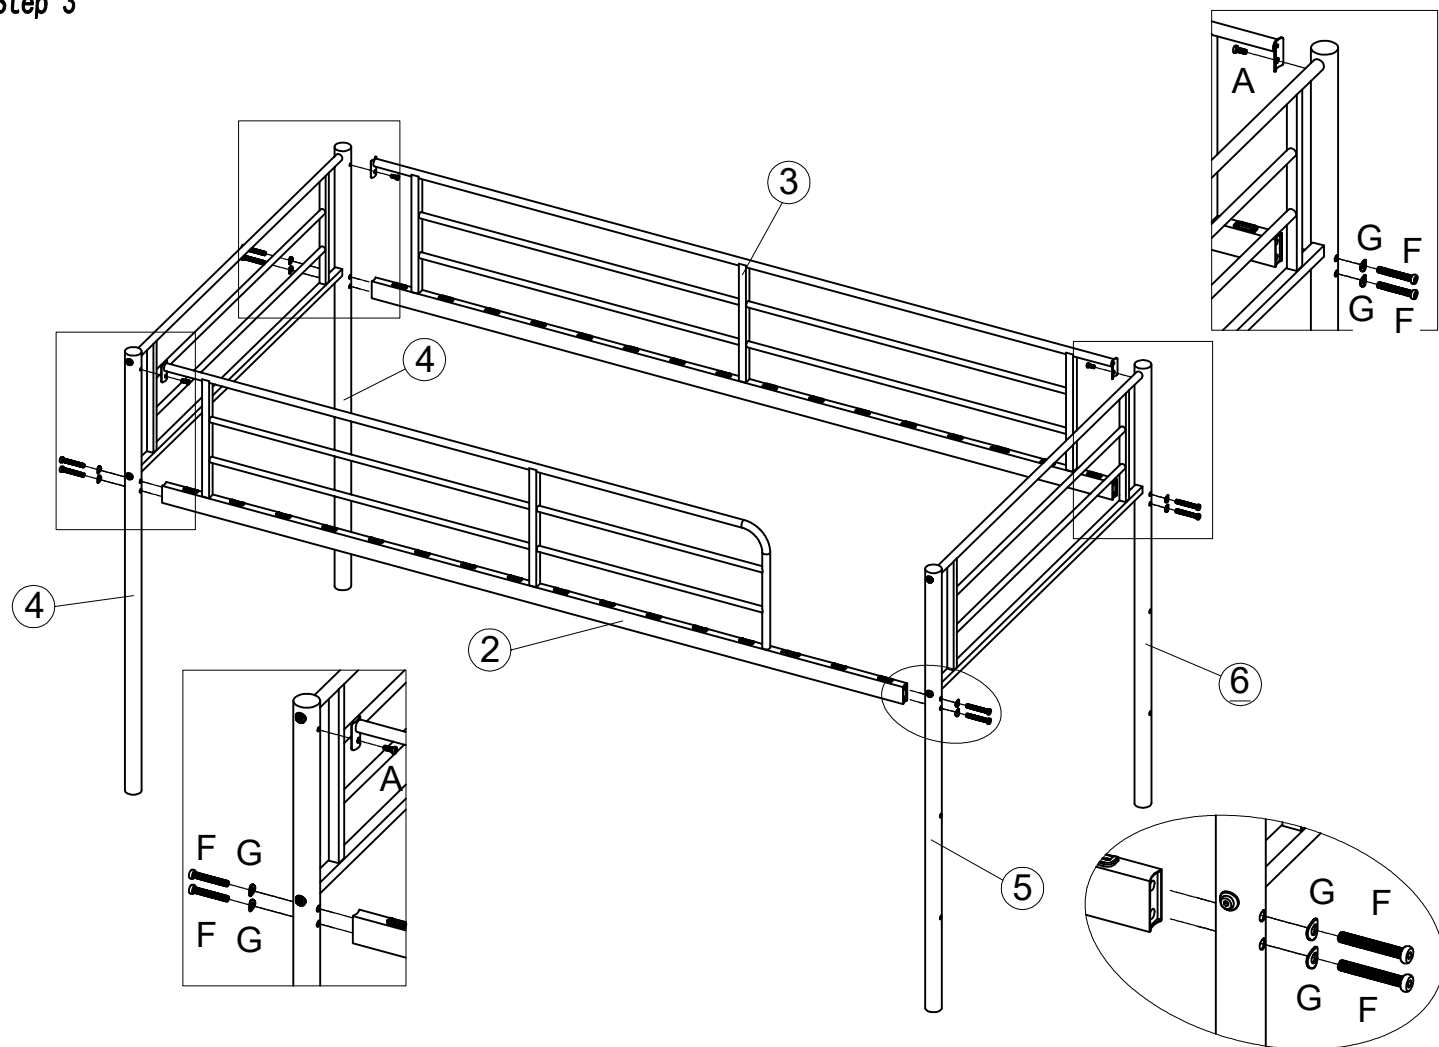

Step 4

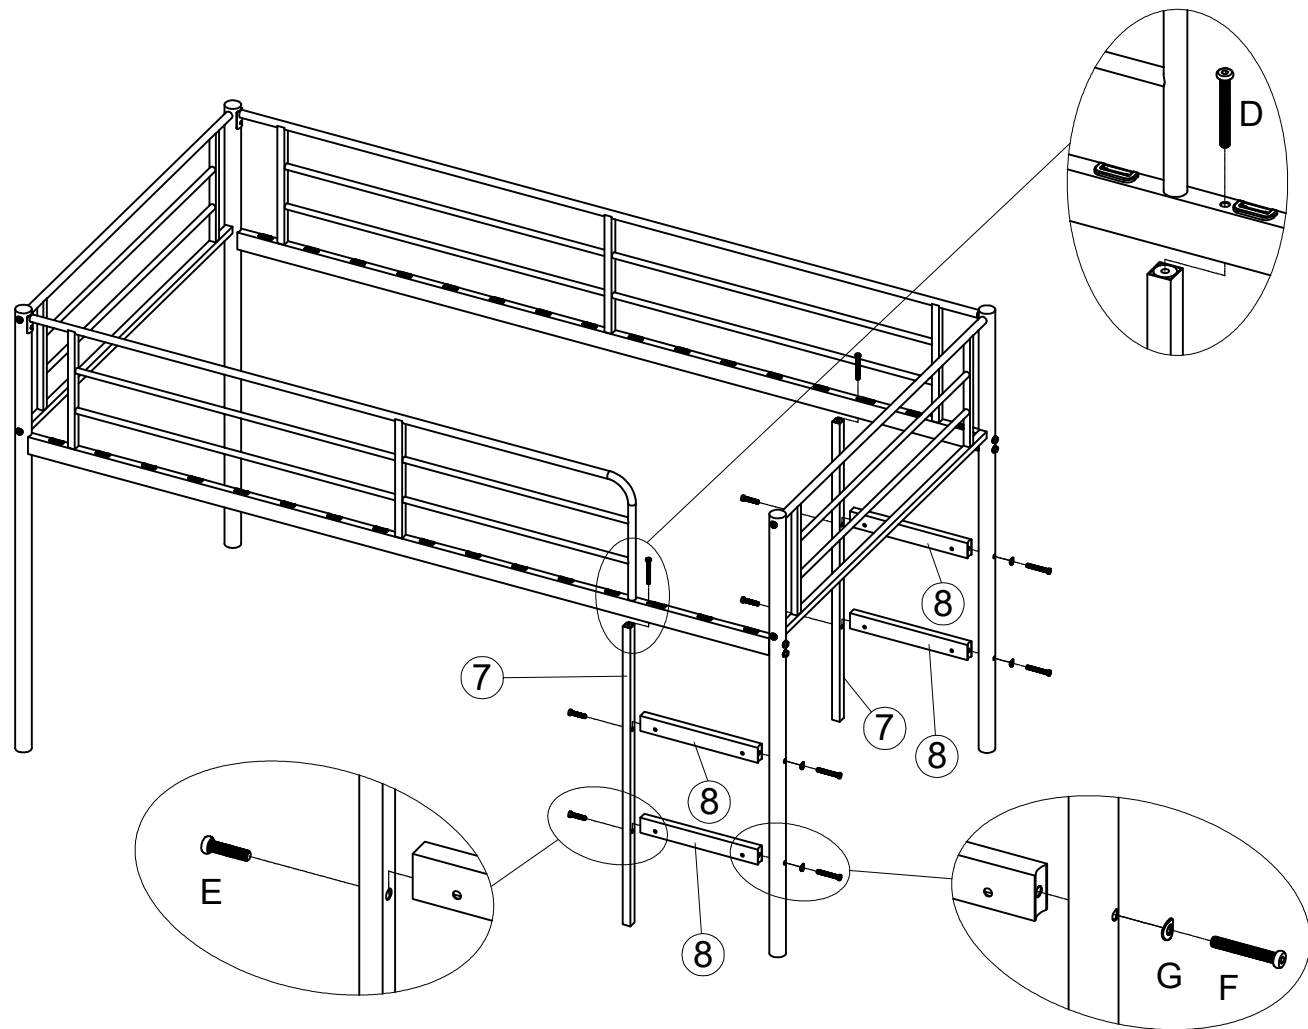


Step 5

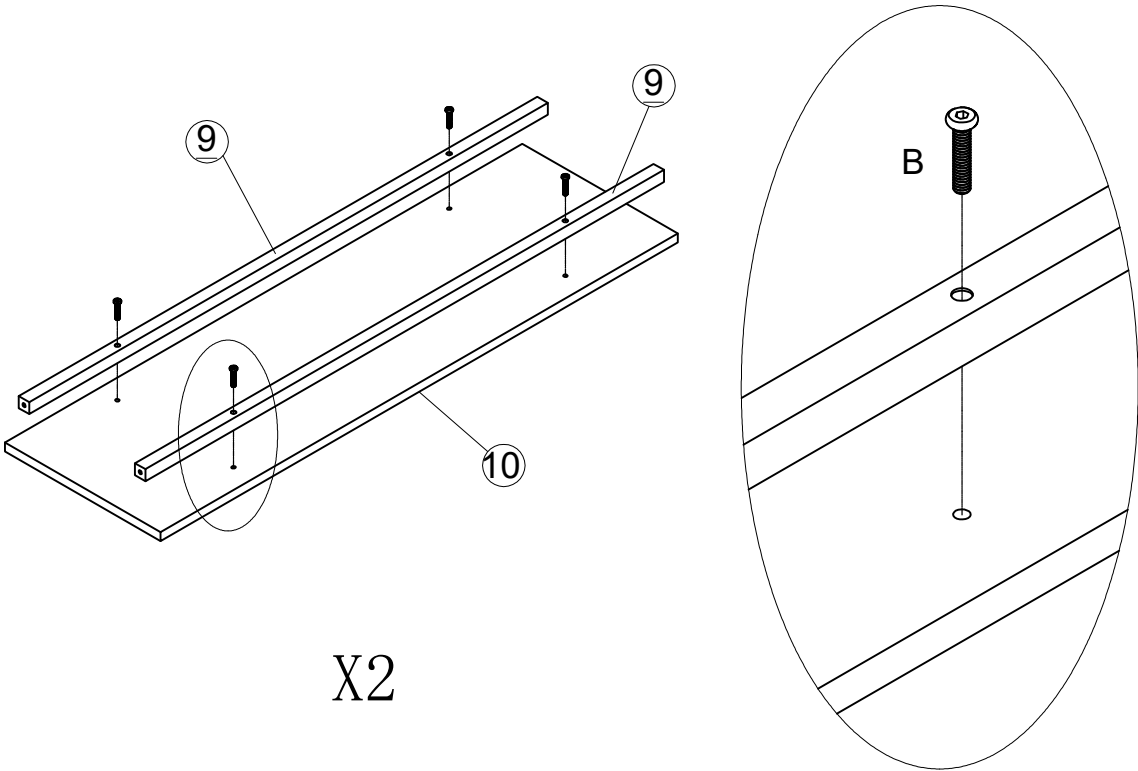


X2


Step 6

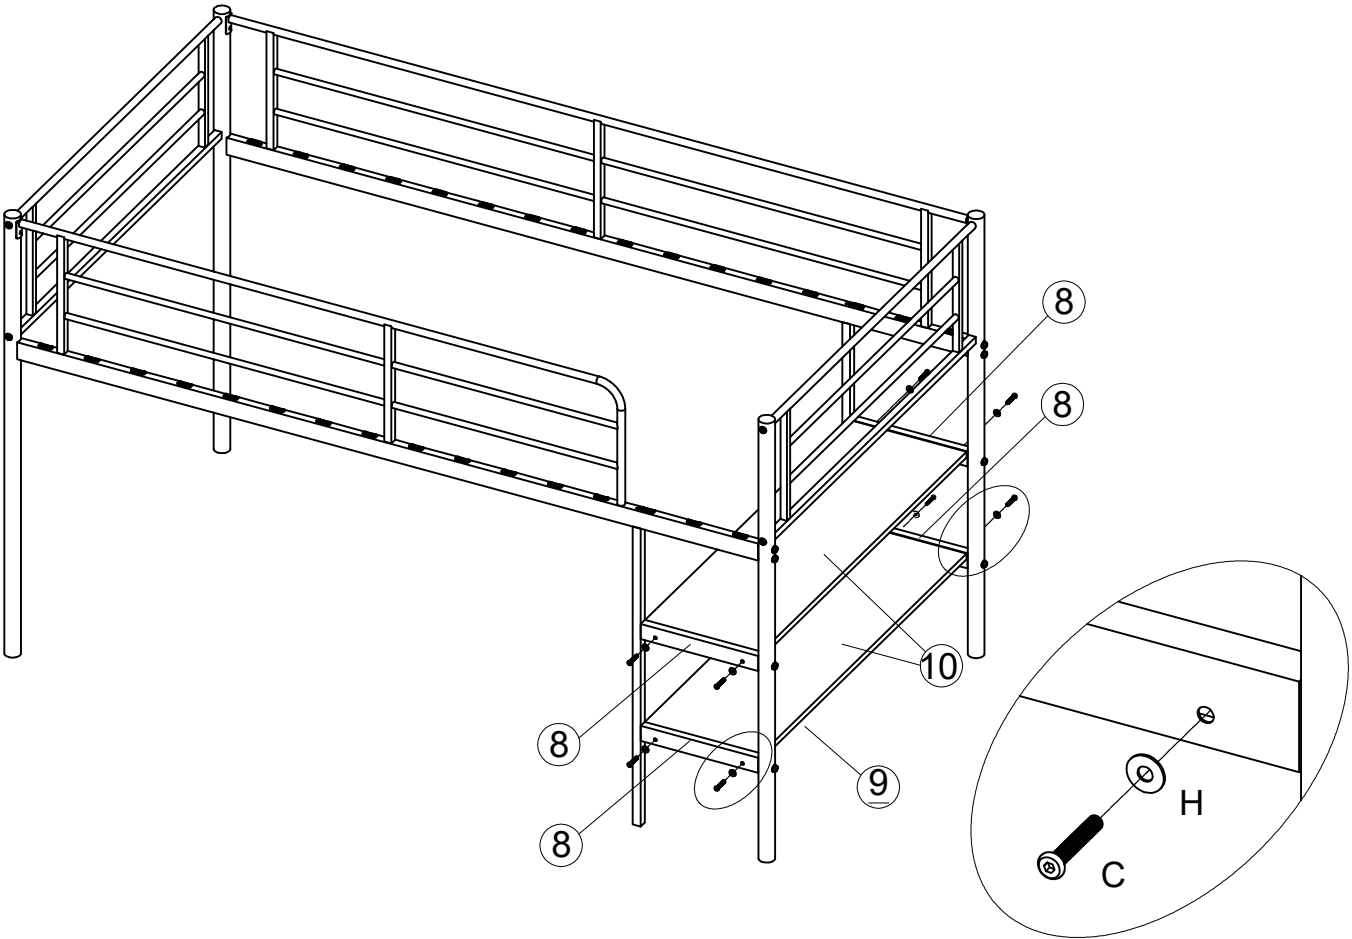


Step 7

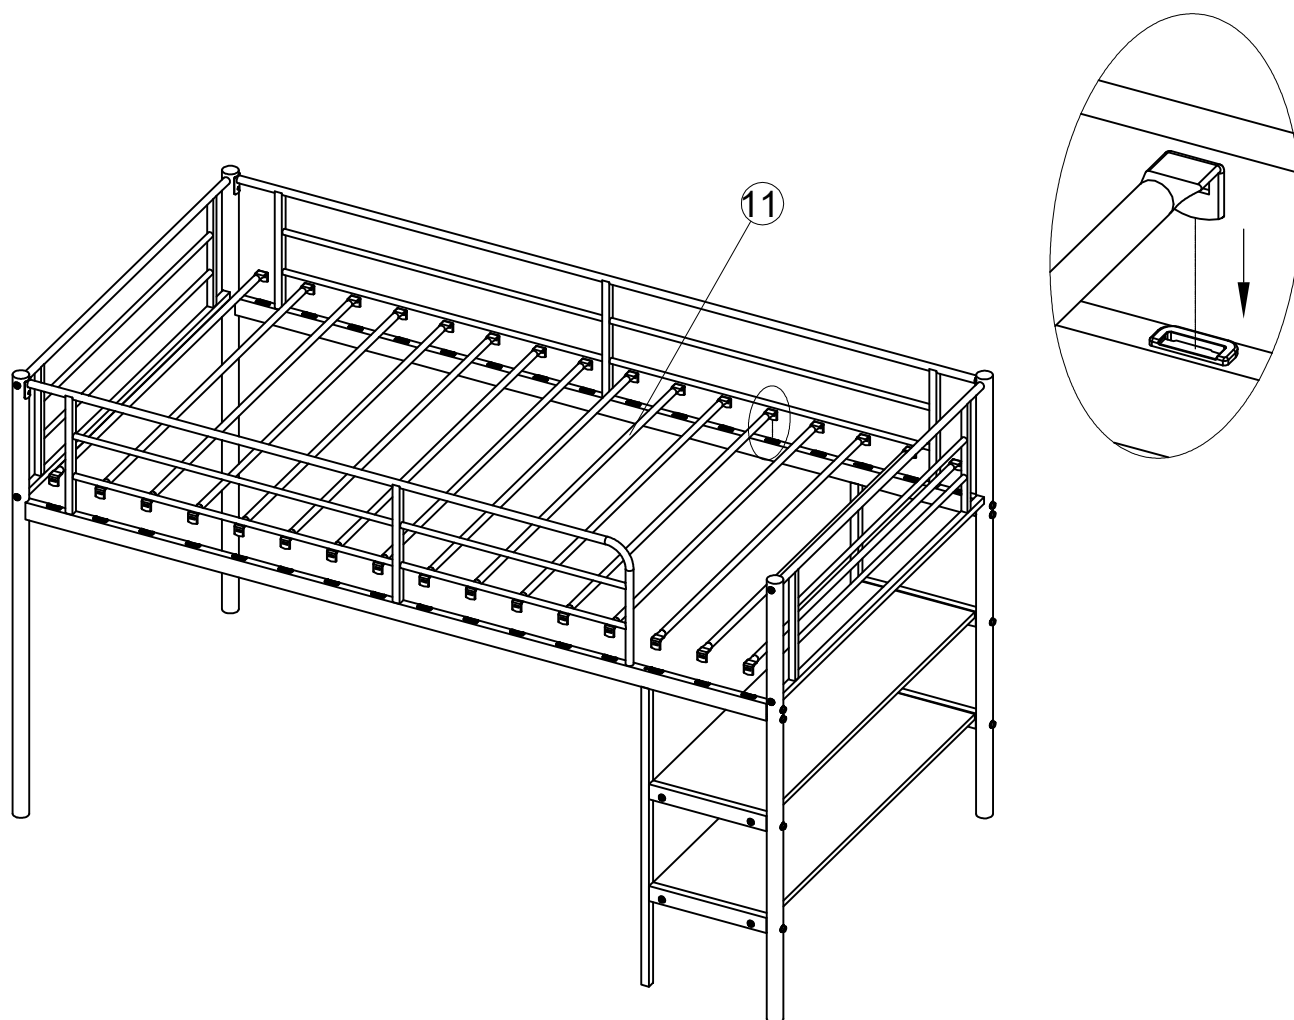


Step 8

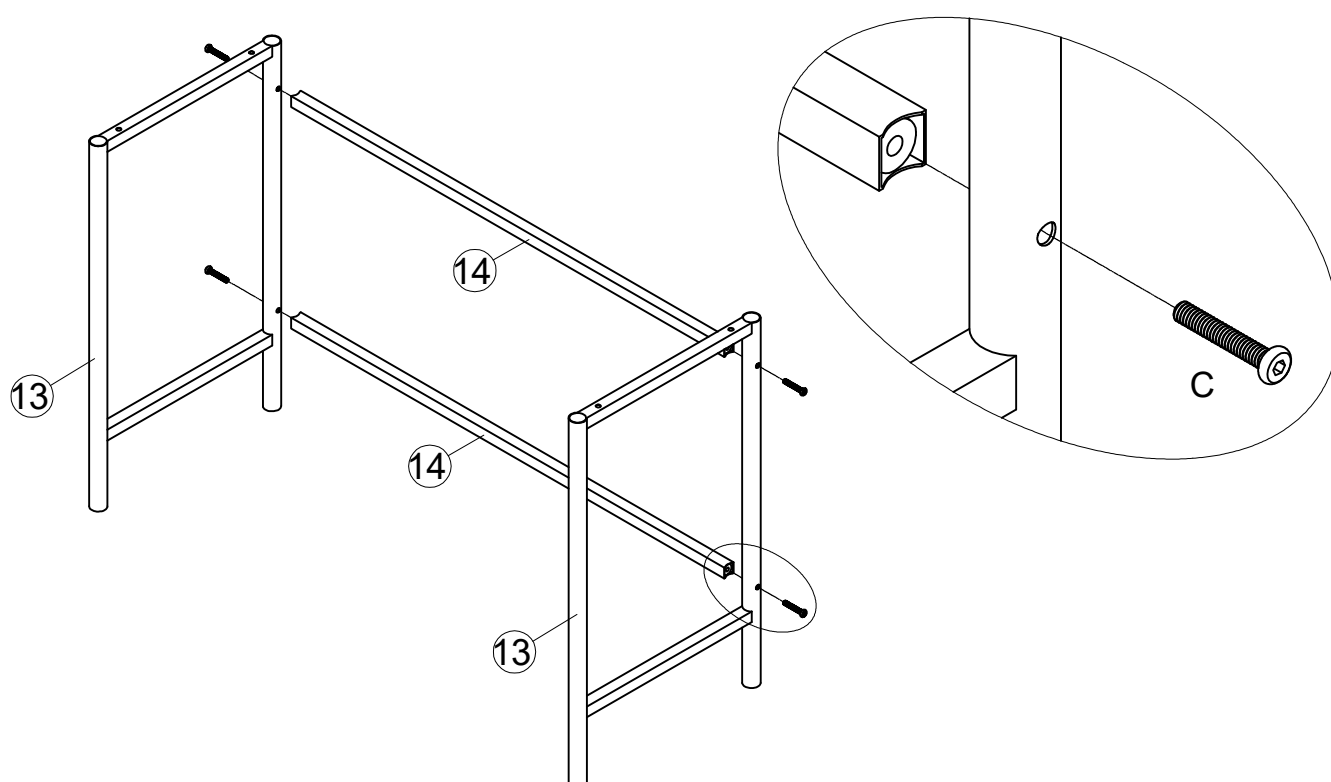

Step 9

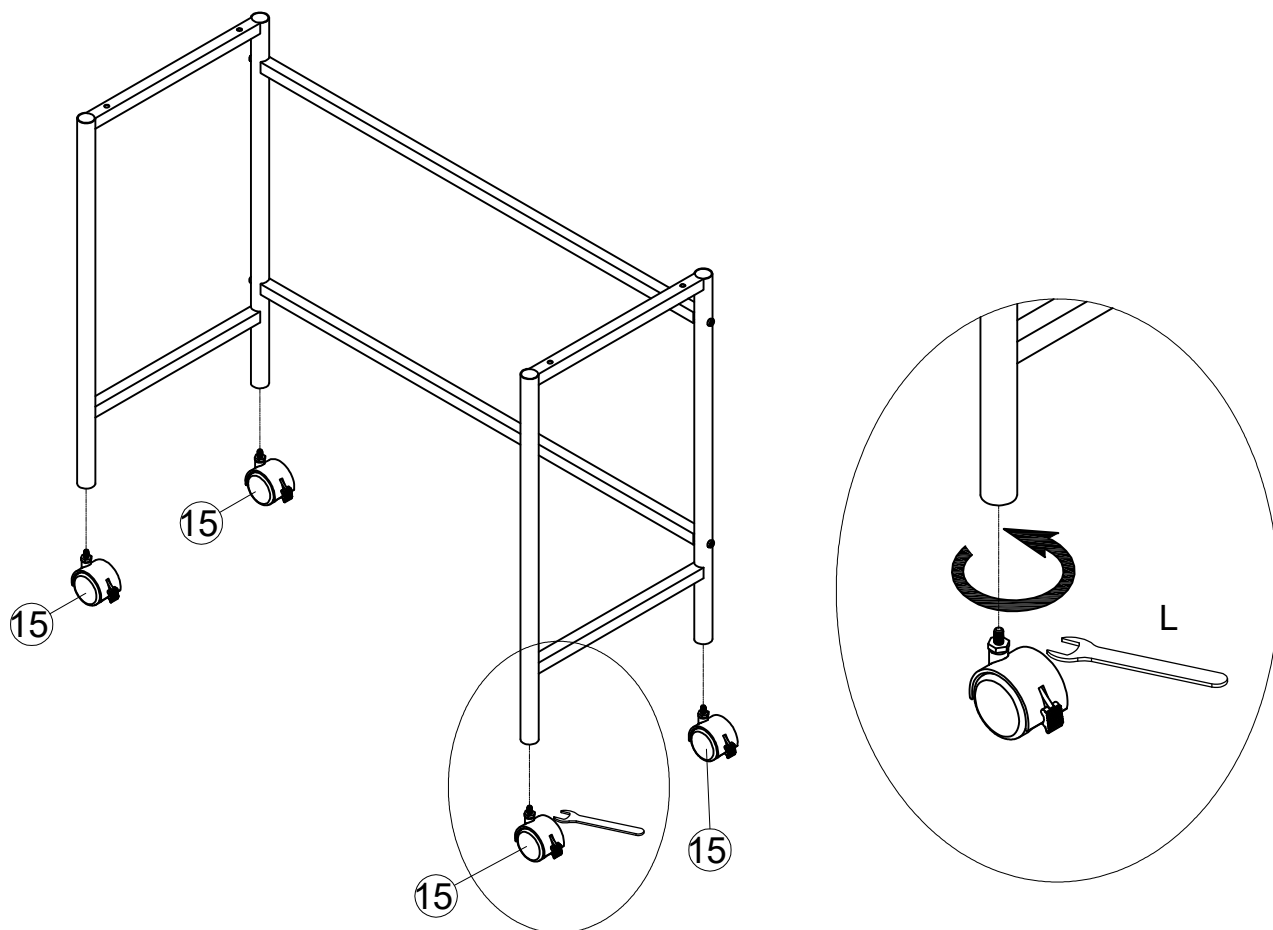

Step 10

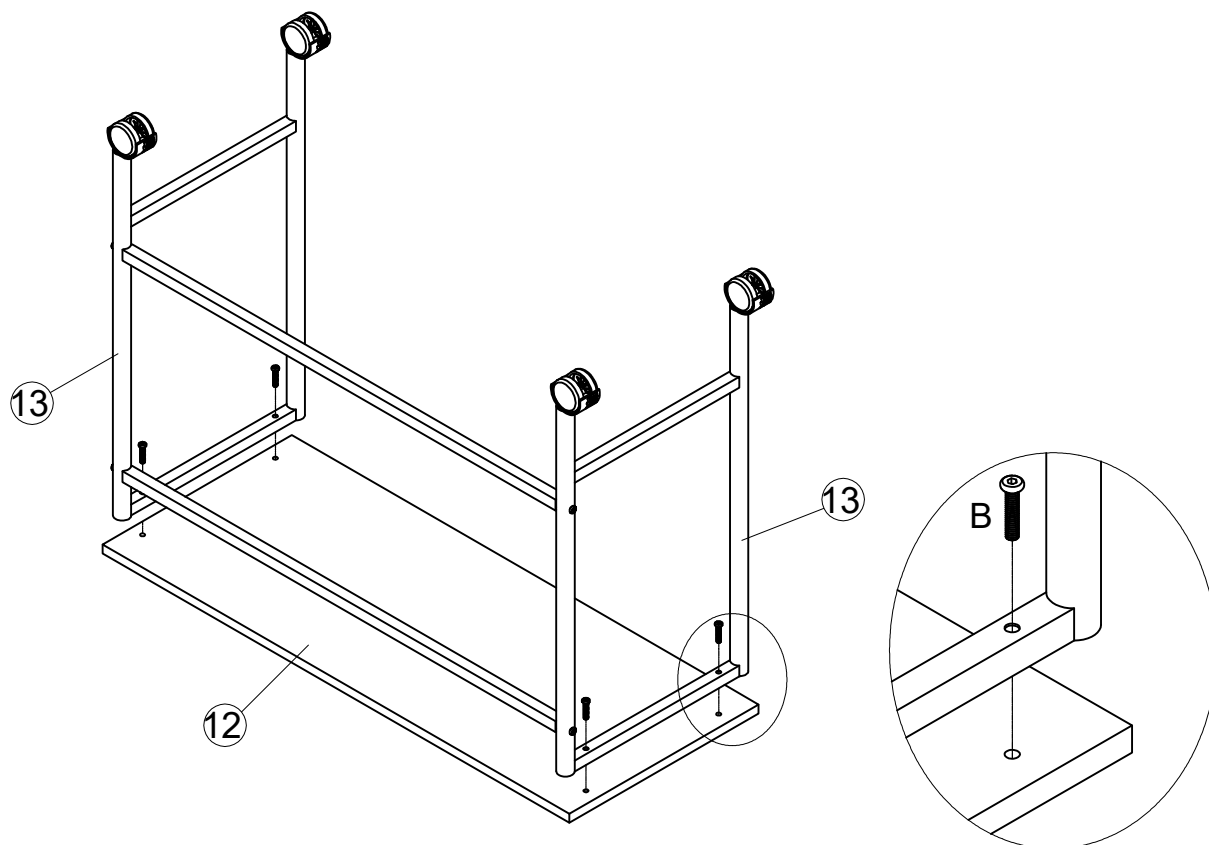

After the assembly test is completely finished, tighten them one by one please.