
ModernMate

ASSEMBLY INSTRUCTIONS

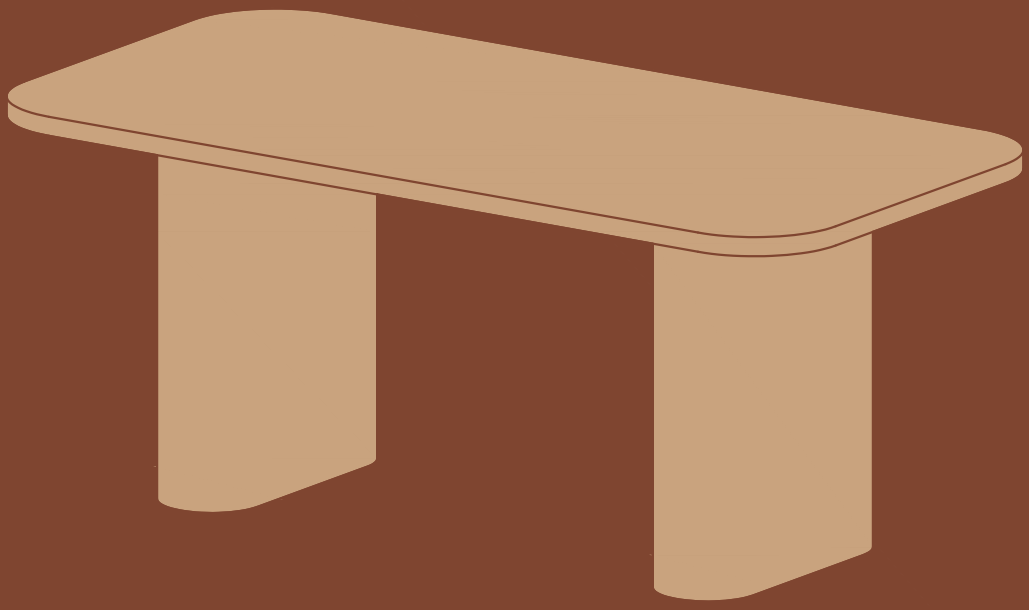

Dining Table

CONTENTS

Safety Precautions 01-02

Parts List 03

Hardware List 04

Tools Required 05

Assembly Instructions 06-09

INTRODUCTION

Thank you for your purchase. Please read all instructions carefully prior to assembly and retain this manual for future reference. If you require assistance, please contact our Customer Support team.

IMPORTANT SAFETY GUIDELINES

1. This package contains multiple components and hardware. Verify all items against the Parts List prior to beginning assembly.
WARNING: Choking hazard. Keep small parts away from children.

2. **NOTICE:** Assemble the unit on a clean, non-abrasive surface (such as carpet or flattened cardboard) to prevent scratching the finish.

3. **CAUTION:** Heavy components. Two-person assembly is highly recommended to prevent injury or product damage.

4. **WARNING:** Tip-over hazard. The unit may be unstable during assembly. Do not move or use the product until assembly is complete and all fasteners are securely tightened.

5. Should you encounter issues during assembly, contact our Customer Support team for immediate assistance.

WARNING: Failure to strictly follow these assembly instructions may result in product damage or serious personal injury.

For further assistance, please contact Customer Support.
Hotline: (800) 661-5928.

ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present priorstart of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

⚠ Warning !

1. Don't attempt to repair or modify parts that are broken or defective.
Please contact the store immediately.


2. This product is for home use only and not intended for commercial establishment.

IMPORTANT NOTE :


* Place all wooden parts on a clean and smooth such as a rug or carpet to avoid the parts from being scratched.

* Before you begin, Kindly follow the assembly instructions step by step.

Parts List


ID	Description	QTY
1		1
2		2
3		1

Hardware List


ID	Description	QTY
A	 M6x40mm	8
B	 Ø6mm	8
C	 Ø6mm	8
D	 M4	1

Tools Provided


Screw driver (not included) is required for the assembly of this product.




Tools Required (Not Included)

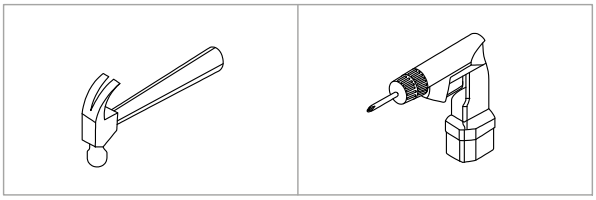


NOTICE: These tools are required for wall mounting only.

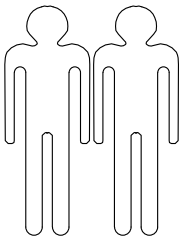

Multi-person installation

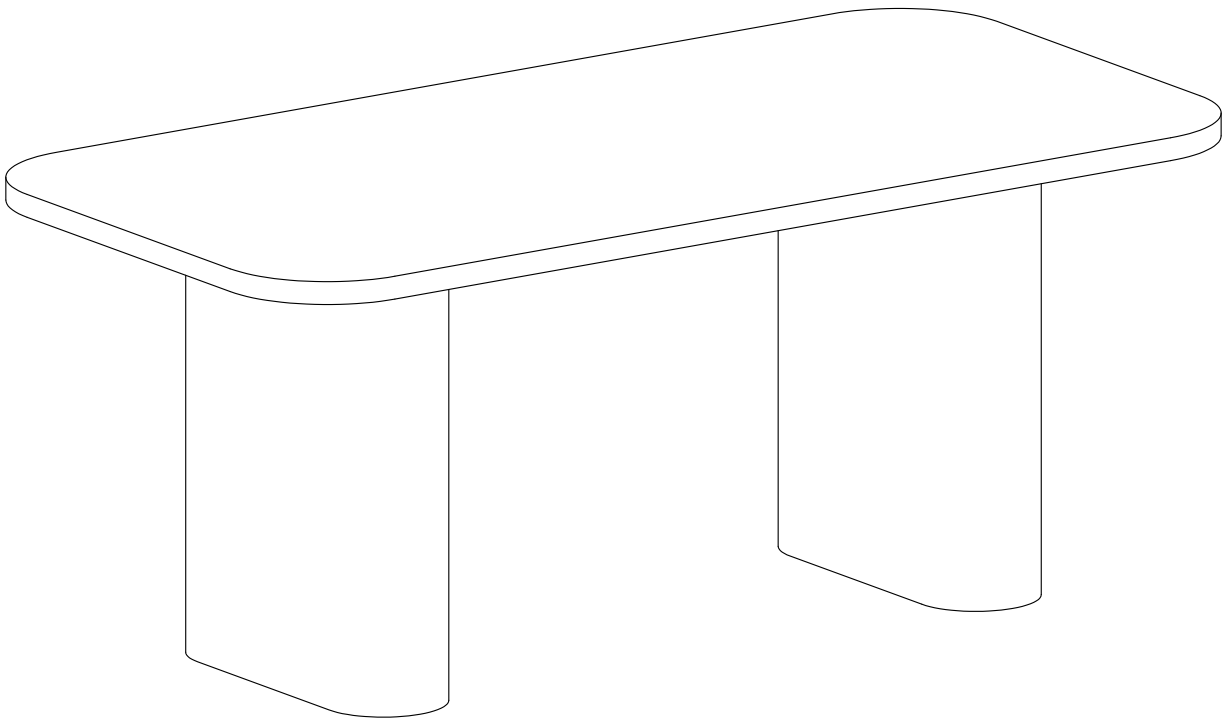


STEP 1

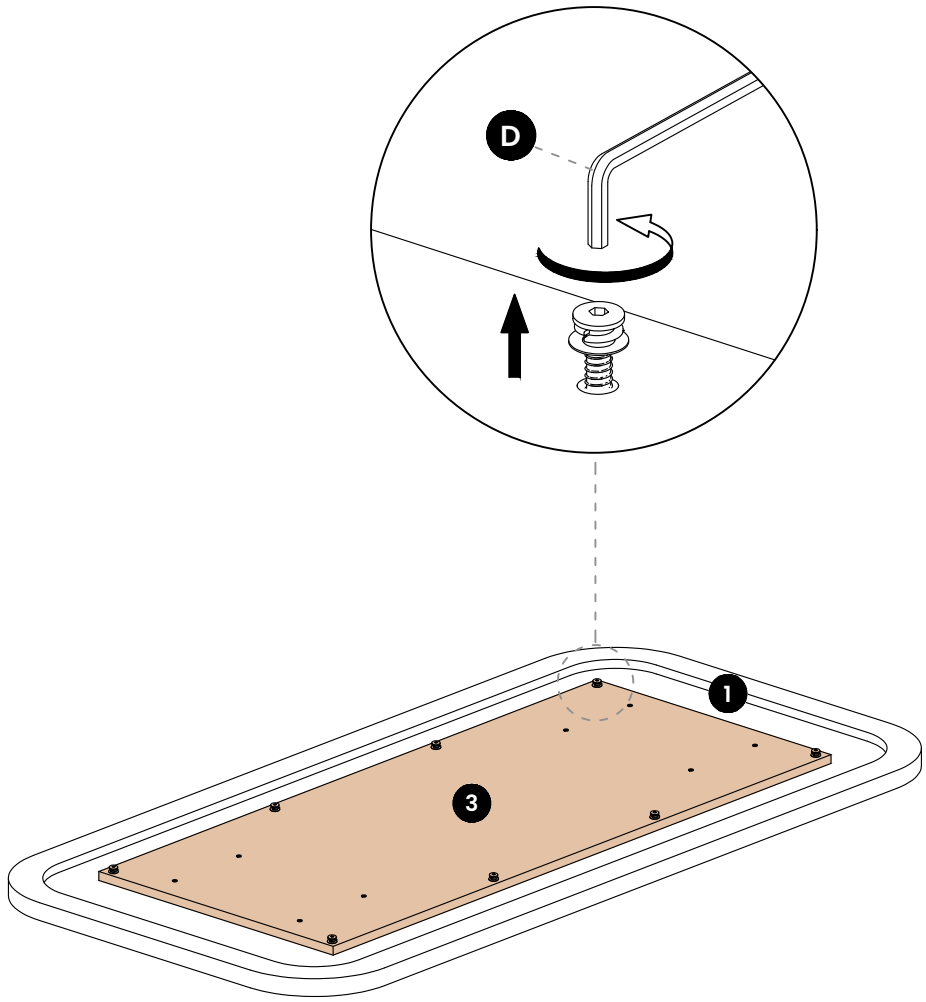


⚠ Remove the bolts and set them aside

STEP 2

	A X8
	B X8
	C X8

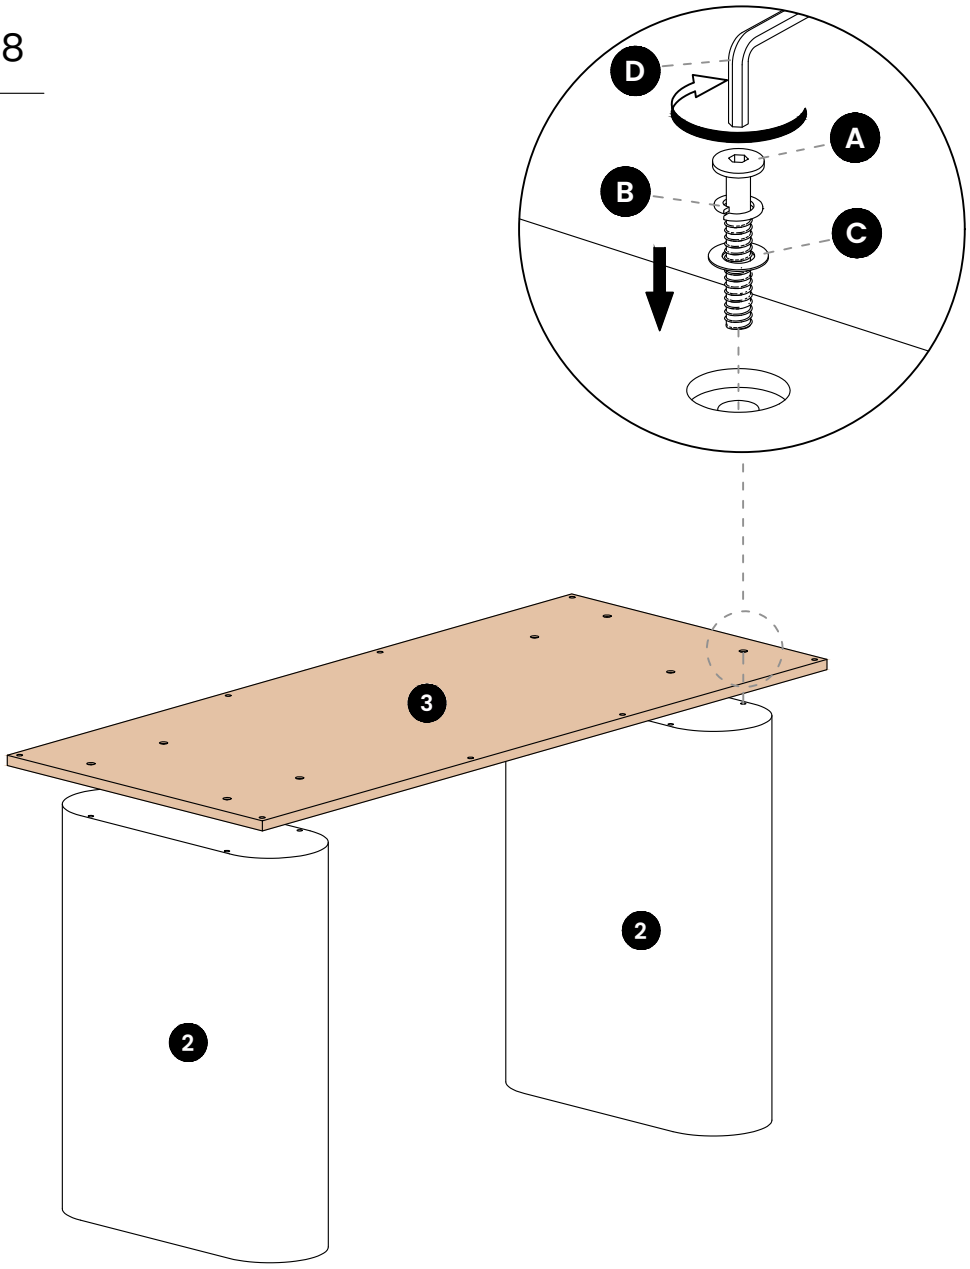

STEP 3

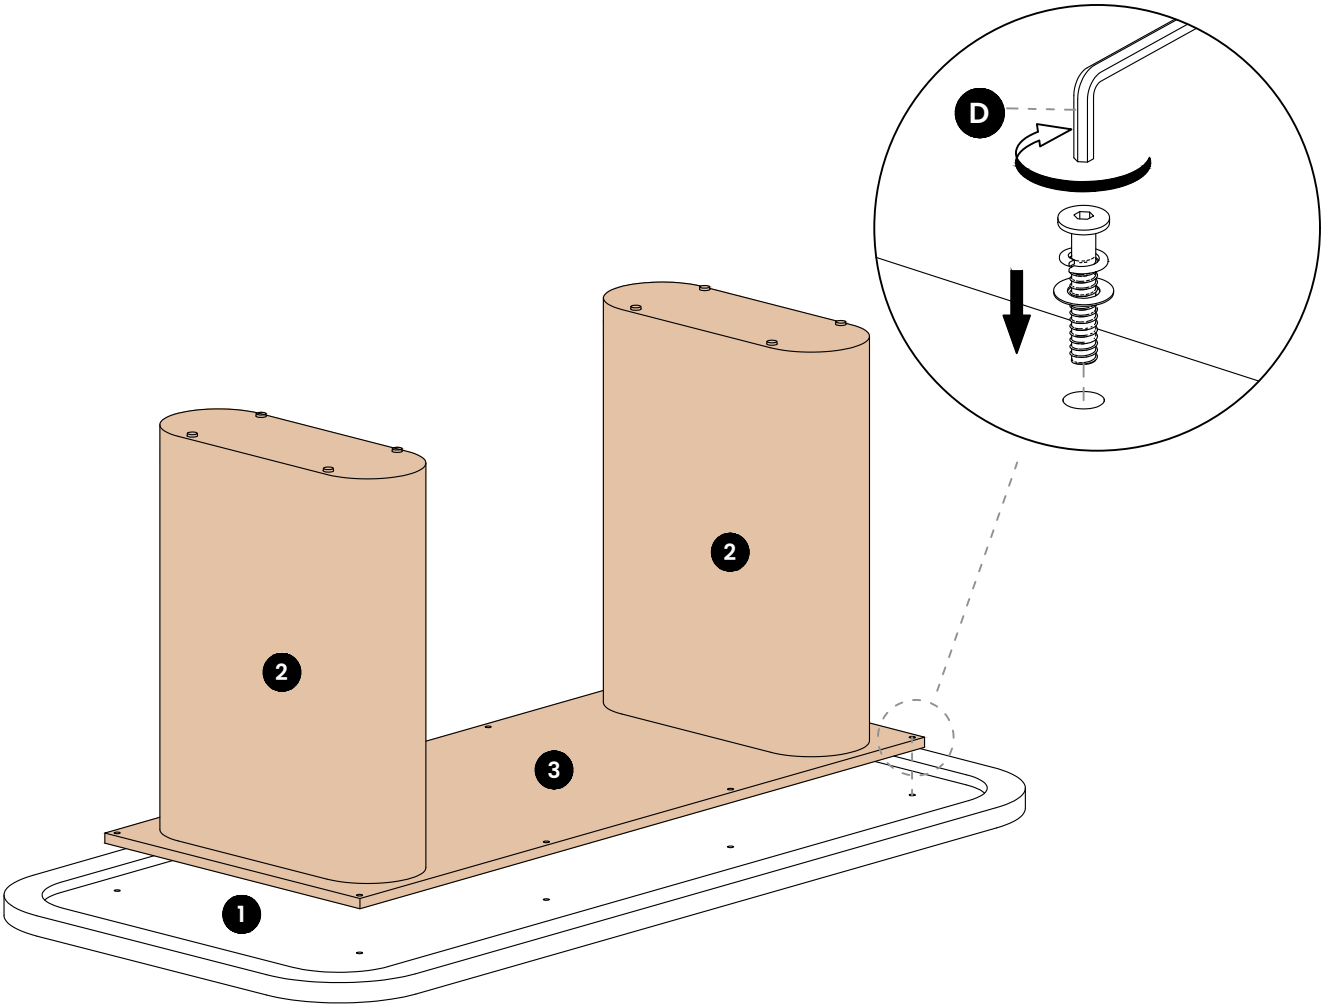

⚠ Use the bolts that were removed for installation

ModernMate

After-Sales Service Hotline: (800) 661-5928
Support Hours: Mon-Fri, 9:00 am-5:00 pm PST/PDT