Assembly Instructions

Caution : You must read this before you proceed



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.




- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in CABINET SINK for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.





CABINET SINK : N765P514065 + KLD-9047S(36")







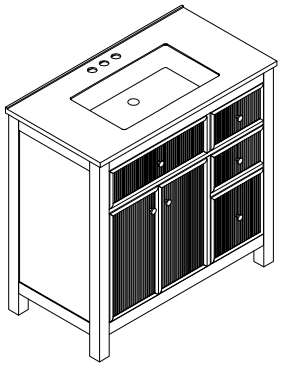









Parts List

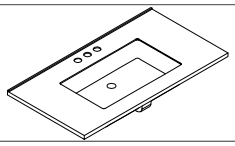Label	Picture	Description	QTY
KLD-9047S(36")			
A		Sink	1


Parts List

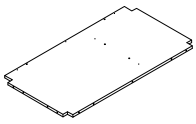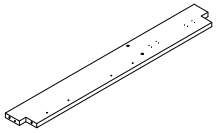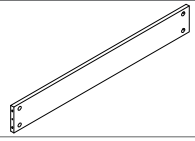Label	Picture	Description	QTY
N765P514065			
B		Bottom Panel	1
C		Left Door Panel	1
D		Right Door Panel	1
E		Middle Front Rail	1
F		Middle Vertical Panel	1
G		Lower Rear Rail	1

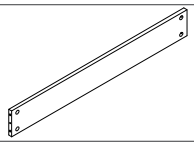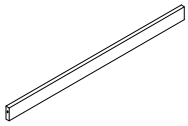
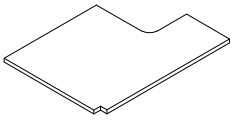

Parts List			
Label	Picture	Description	QTY
N765P514065			
H		Upper Rear Rail	1
I		Lower Front Rail	1
J		Upper Front Rail	1
K		Upper Drawer Front Panel	1
L		Left Side Panel	1
M		Right Side Panel	1
N		Adjustable Shelf	1
O		Middle Drawer Front Panel	1
P		Middle Drawer Left Side	1
Q		Middle Drawer Right Side	1
R		Middle Drawer Back Panel	1
S		Middle Drawer Bottom Panel	1

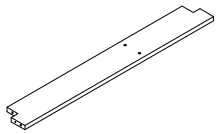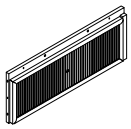
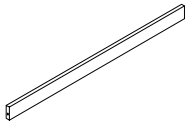




Parts List			
Label	Picture	Description	QTY
N765P514065			
T		Upper Drawer Right Side	1
U		Upper Drawer Left Side	1
V		Upper Drawer Back Panel	1
W		Upper Drawer Bottom Panel	1
X		Front Rail Support	1
Y		Middle Rear Rail	1
Z		Upper Front Baffle	1
AA		Front Bottom Support	1
BB		Lower Drawer Front Panel	1
CC		Lower Drawer Left Side	1
DD		Lower Drawer Right Side	1
EE		Lower Drawer Back Panel	1

Parts List

Label	Picture	Description	QTY
N765P514065			
FF		Lower Drawer Bottom Panel	1


Hardware


Label	Picture	Description	QTY
N765P514065			
①		Knob	6
②		Bolt (Ø5/32" x 16mm)	6 Extra 1
③		Hinge	6
④		Door Stop	1
⑤		Shelf Pin	3
⑥		Screw (Ø3 x 12mm)	36 Extra 2
⑦		Screw (Ø3 x 12mm)	5 Extra 1
⑧		Screw (Ø3.5 x 12mm)	24 Extra 2
⑨		Cam bolt (Ø6 x 33mm)	45 Extra 2

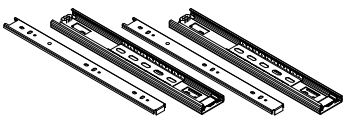Hardware			
Label	Picture	Description	QTY
N765P514065			
⑩		Cam lock (Ø15 x 10mm)	45 Extra 2
⑪		Wooden dowel (Ø6 x 30mm)	32 Extra 2
⑫		Wooden dowel (Ø8 x 20mm)	4 Extra 1
⑬		Screw (Ø4 x 20mm)	4 Extra 1
⑭		Screw (Ø4 x 38mm)	23 Extra 2
⑮		Anti-Tip	2set
⑯		Slider (10")	1set
⑰		Slider (12")	1set
		Phillips screwdriver	1

Assembly Preparation


Before Beginning Assembly:

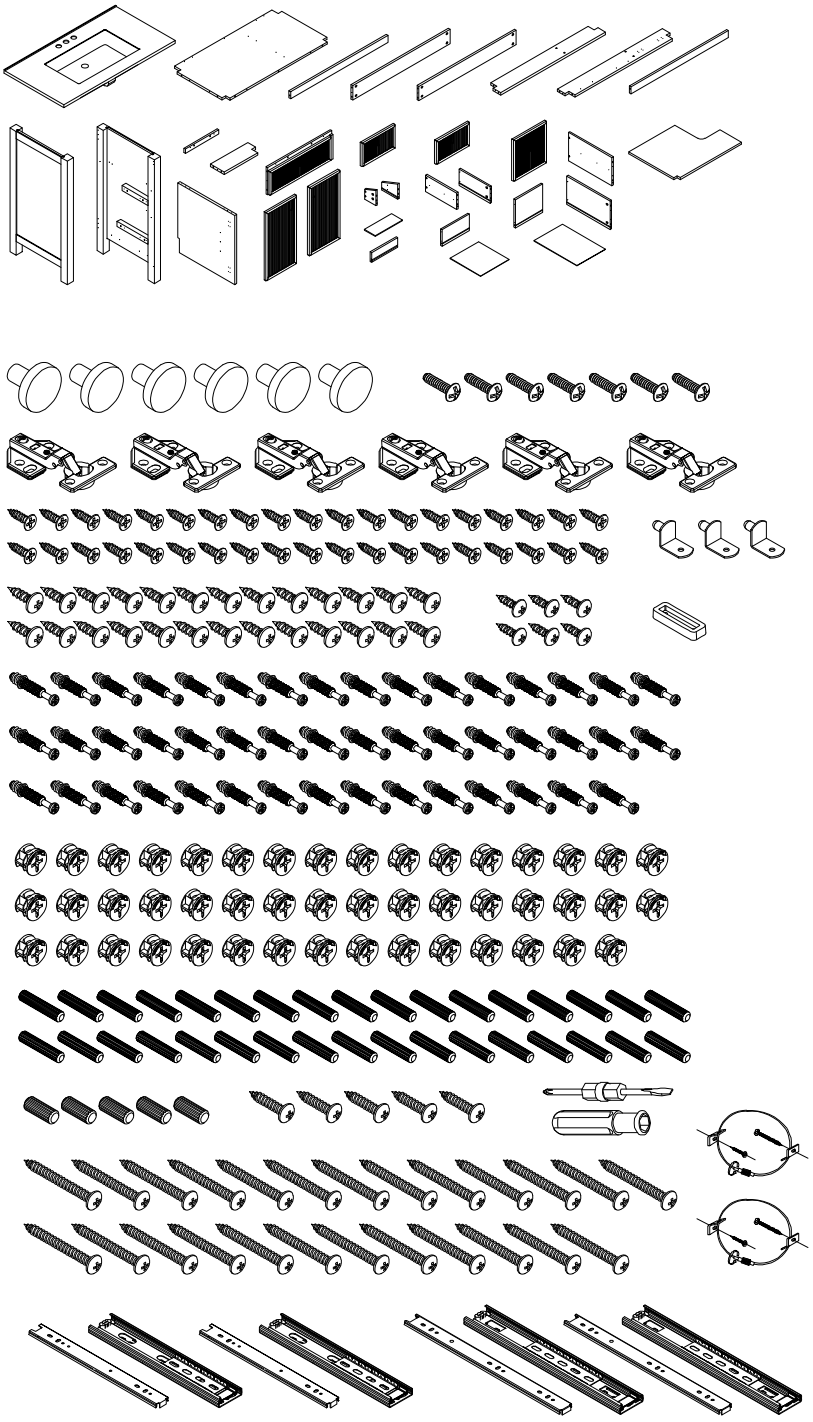

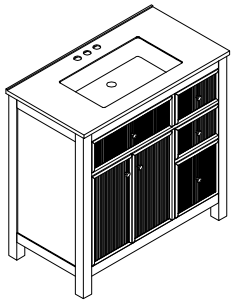


AssemblySteps

Overview

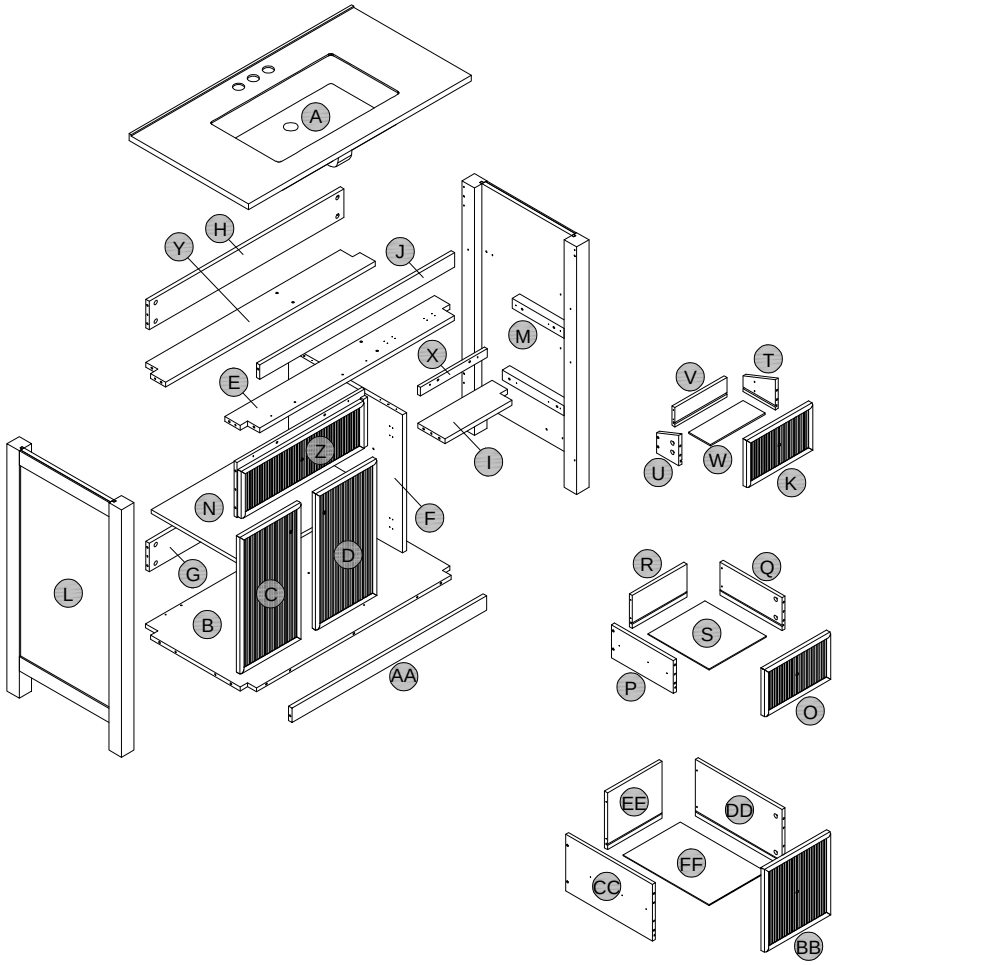

FRONT FACING

This CABINET SINK has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Lavabo 1 part, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise the parts and steps before assembly.

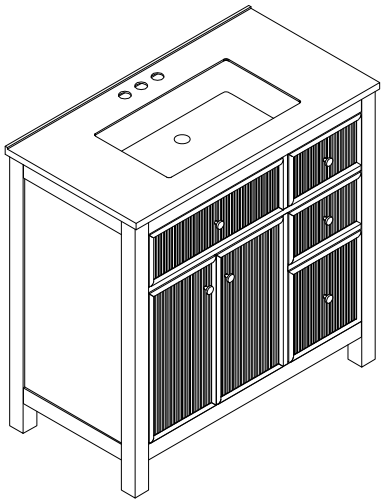Completed	

Turn the CABINET SINK right side up.

Place the CABINET SINK on a LEVEL SURFACE.

Inspect it and make sure all parts are adequately connected.

To tighten the screws at the base of the backrest, have another adult assist you.

You may be required to turn the CABINET SINK, to gain easy access to the secure points.

Turn the CABINET SINK in a synchronised manner.

CAUTION 1: When tightening these screws, tighten sequentially.

DO NOT tighten any screw fully and then towards the next one.

This would cause the frame to warp.

If there is still wobbles, loosen the screws and execute this same process.


WARNING!! IF CABINET SINK IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.

Ensure all screws are fully locked into position.


The CABINET SINK is ready to be used.

Caution 2: This CABINET SINK can only be used on a flat, level surface.


Step 1

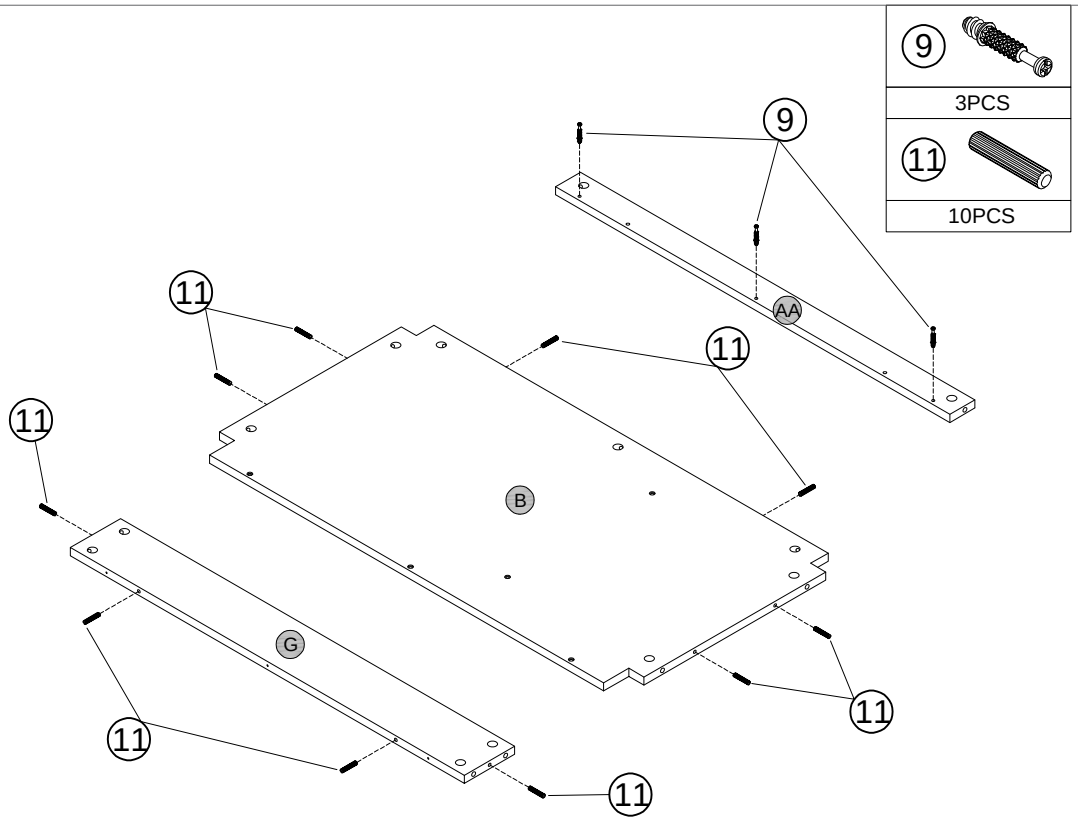
9
3PCS
11
10PCS
9
AA
11
11
B
11
G
11
11

Step 2

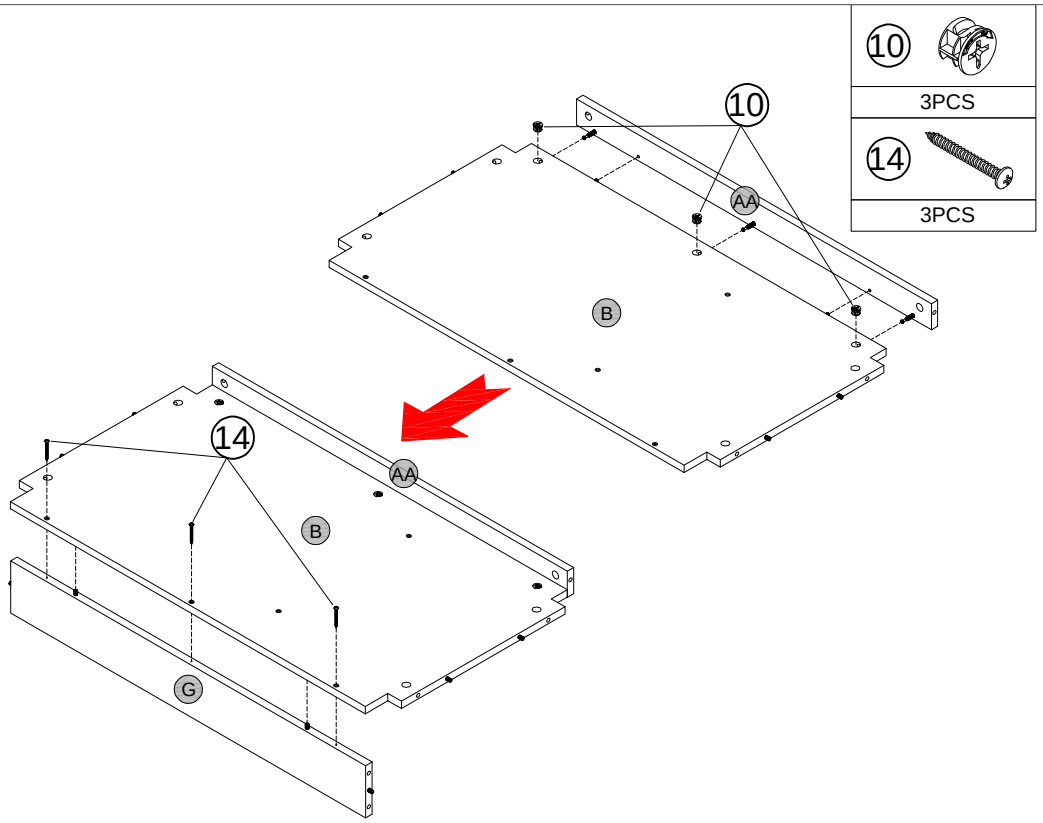

10
3PCS
14
3PCS
10
AA
B
14
AA
B
G

Step 3

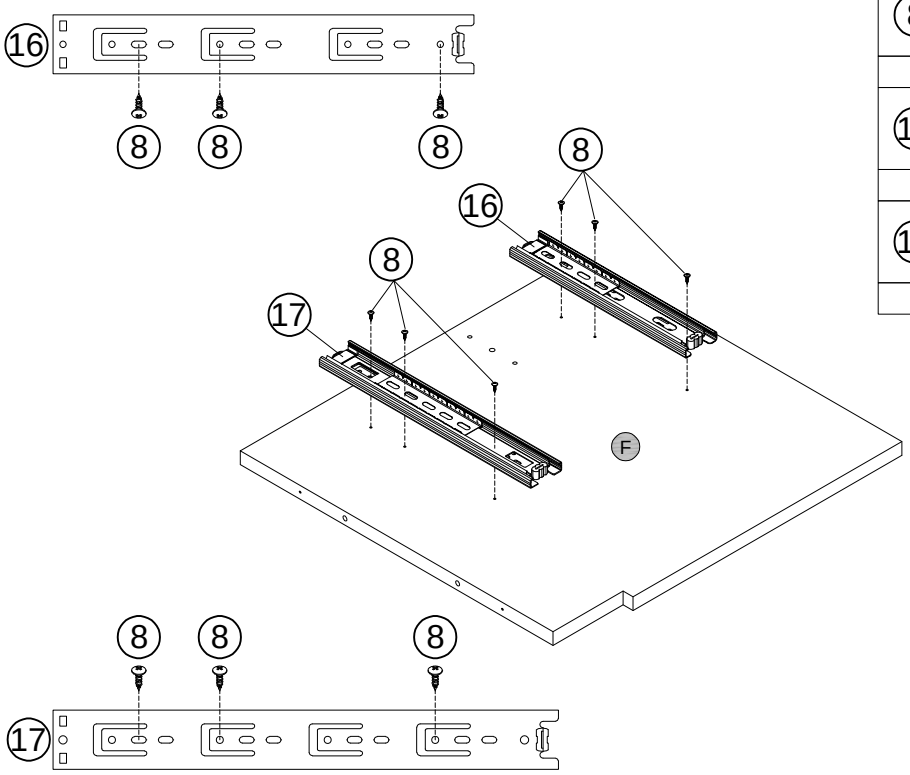


8	6PCS
16	1PC
17	1PC

Step 4

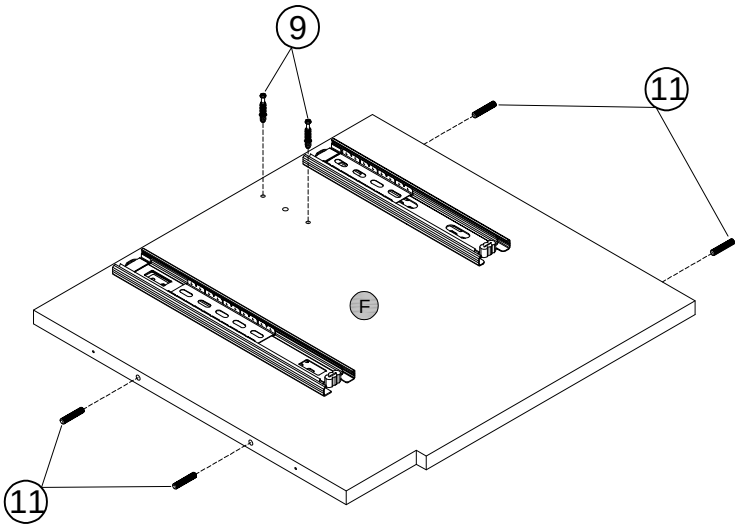


9	2PCS
11	4PCS


Step 5

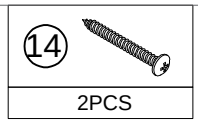


2PCS

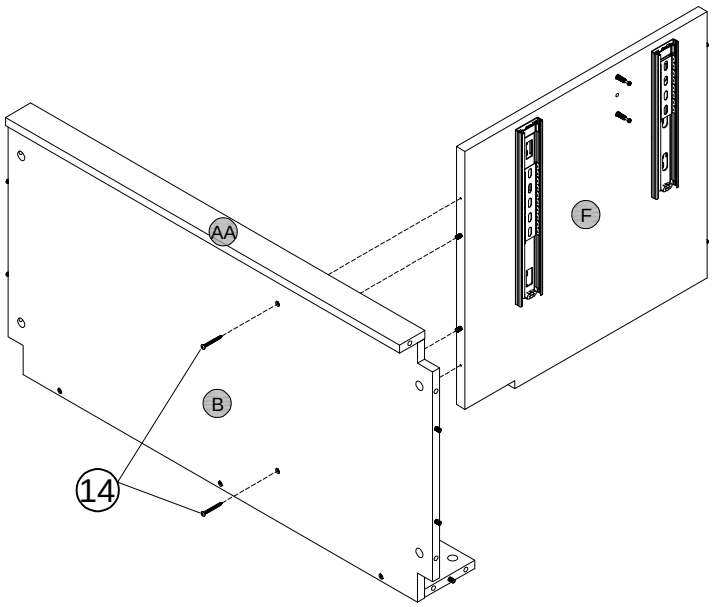


Step 6

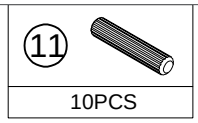


10PCS

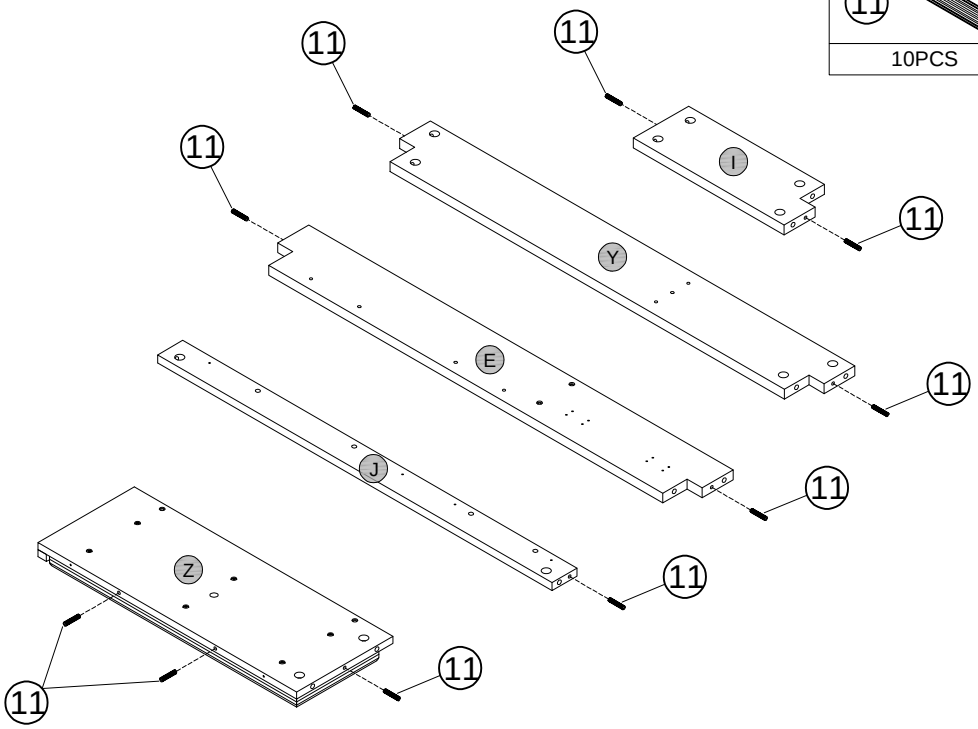


Step 7

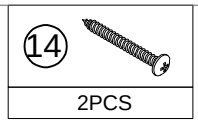


2PCS

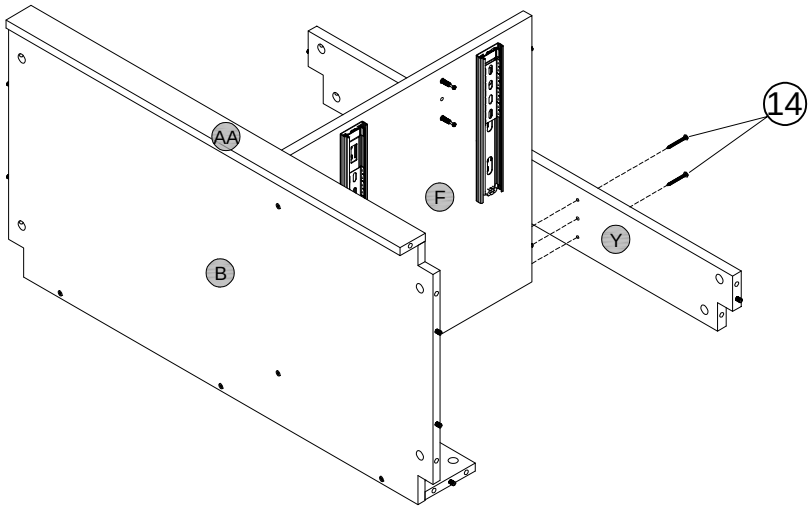


Step 8




2PCS

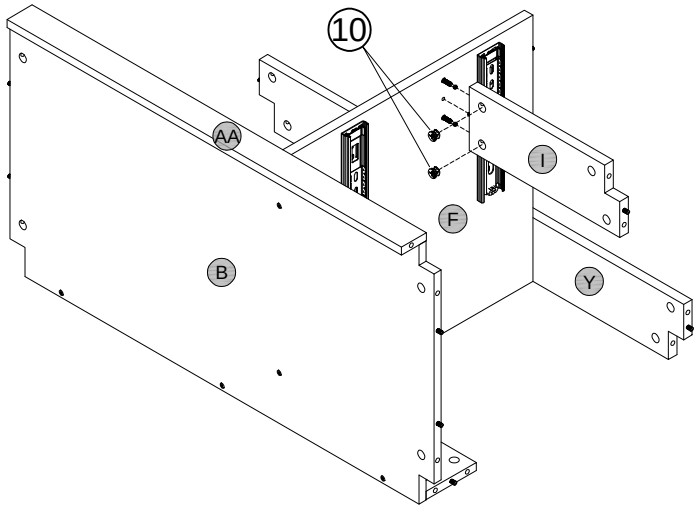


Step 9

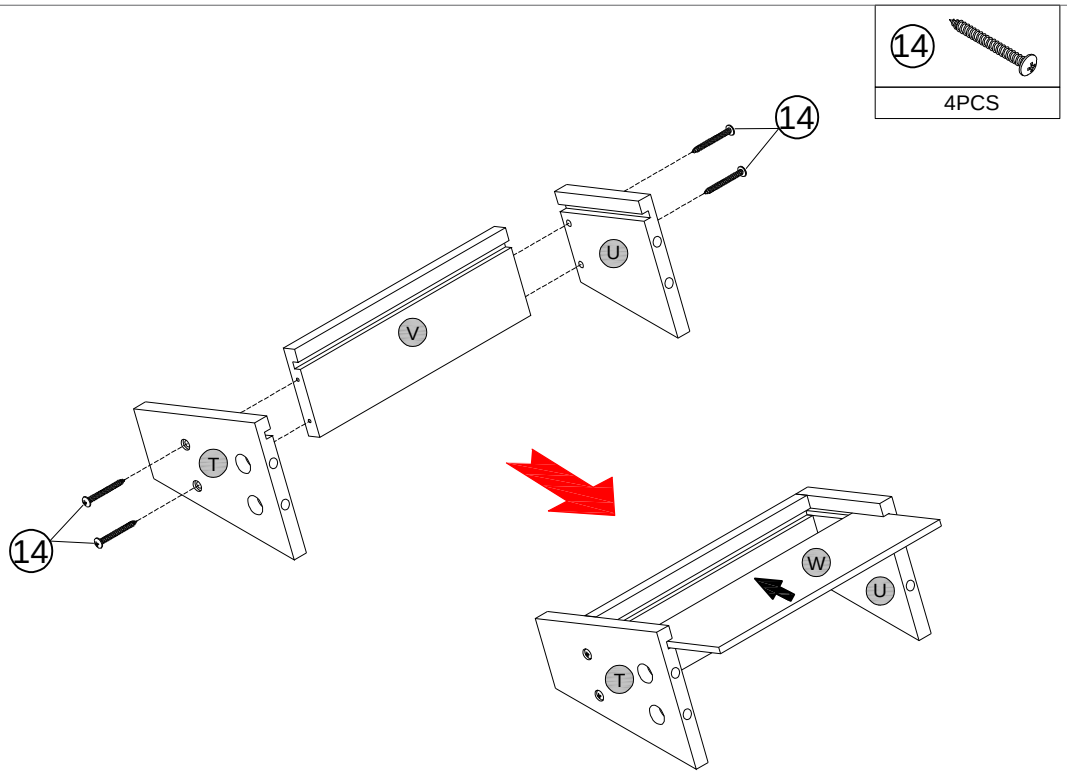

Step 10

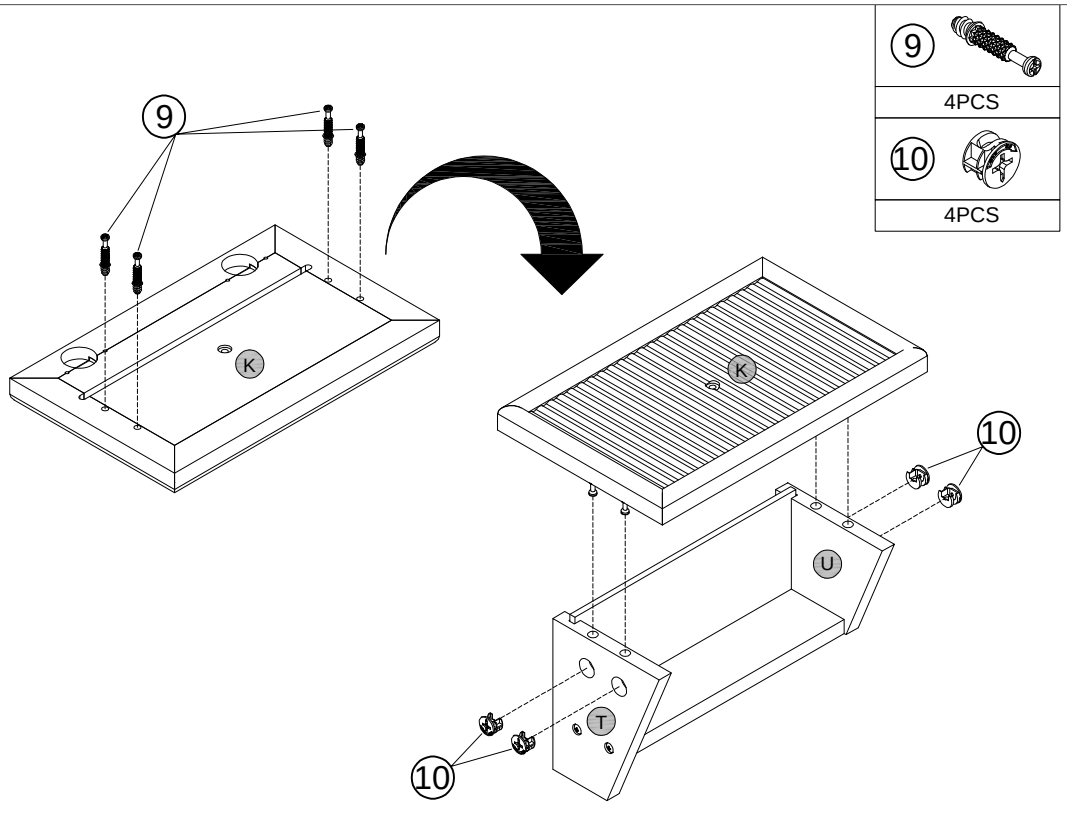


Step 11

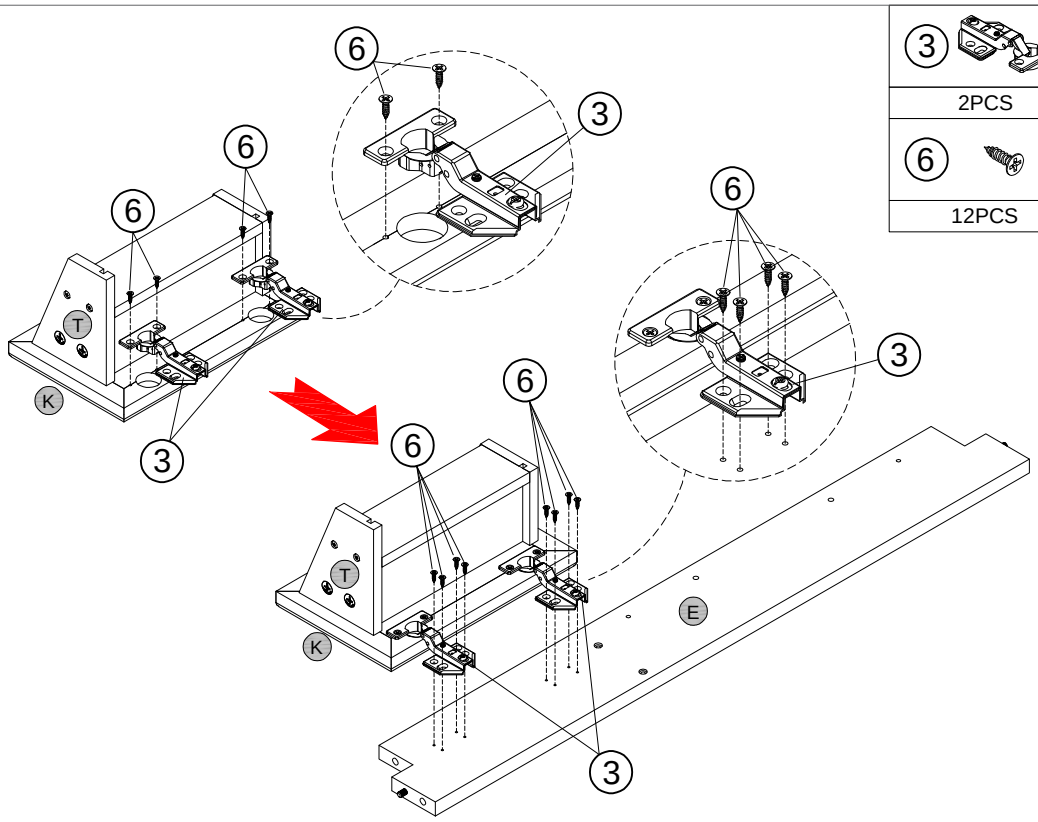


3	2PCS
6	12PCS

Step 12

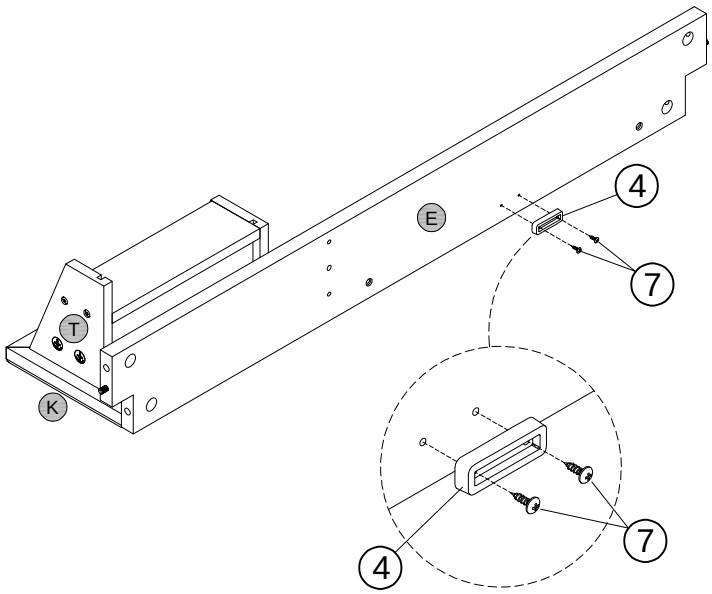


4	1PC
7	2PCS

Step 13

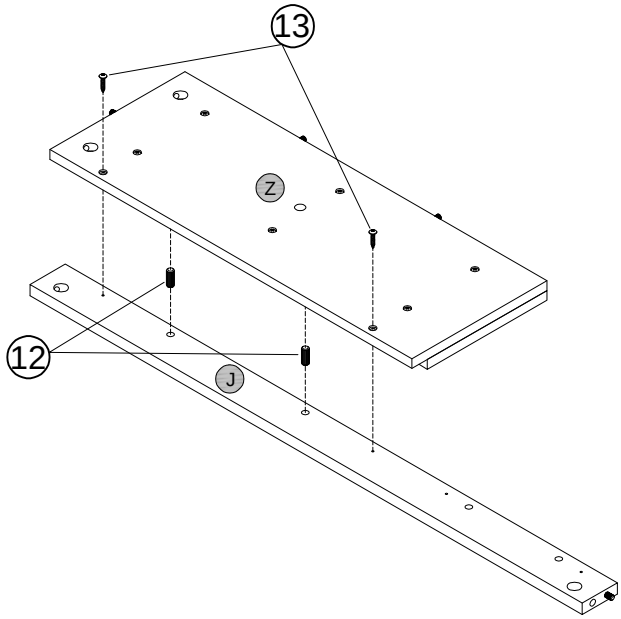


12	2PCS
13	2PCS


Step 14

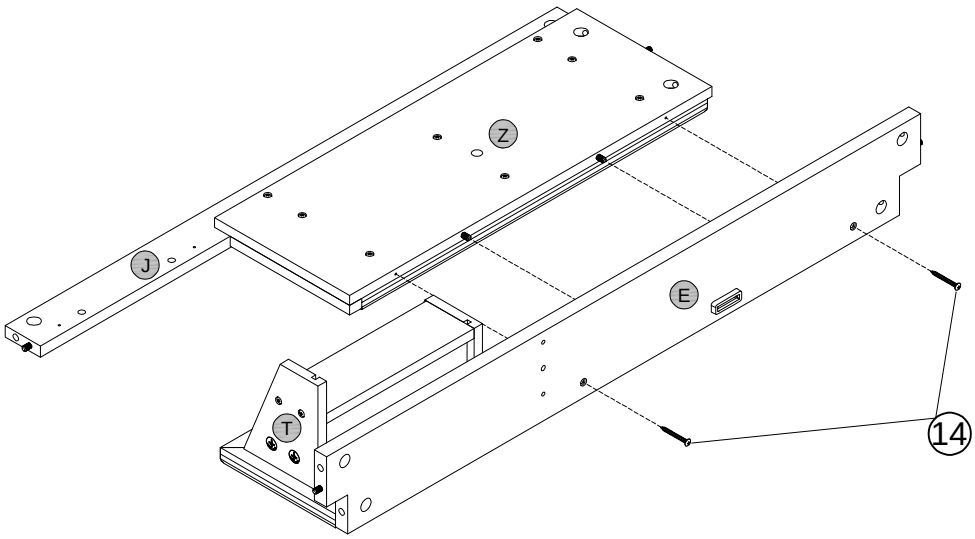


14	2PCS


Step 15

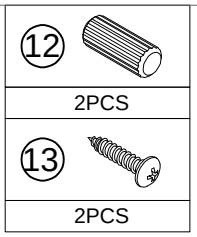

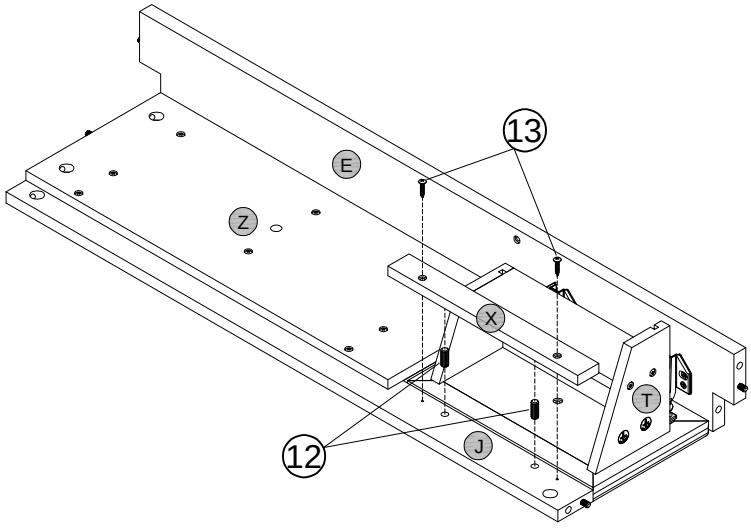


Step 16

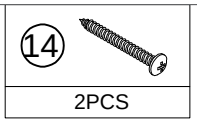

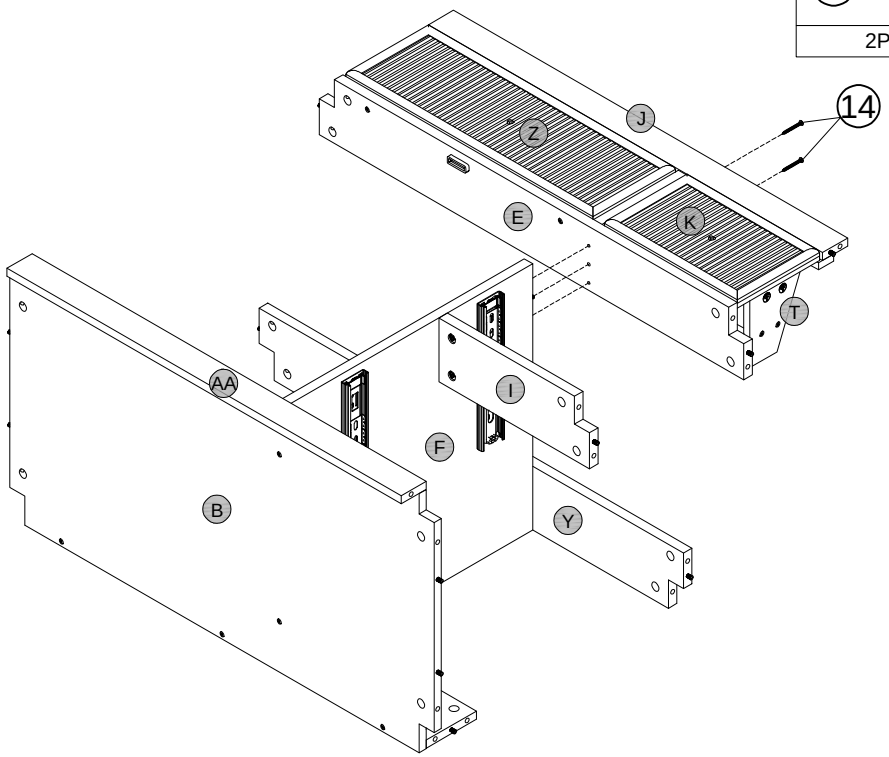


Step 17

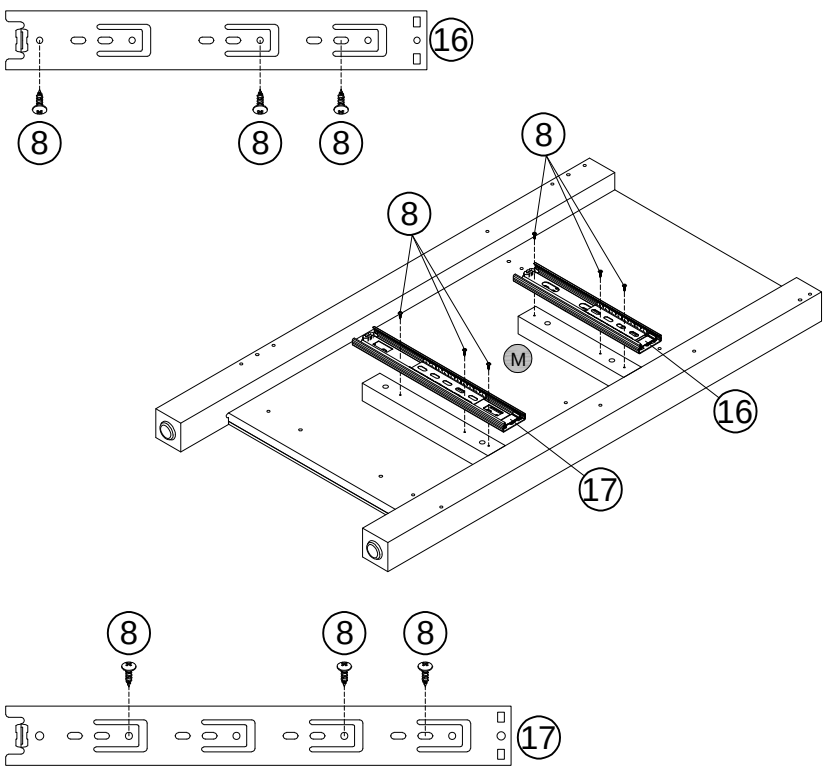


8	6PCS
16	1PC
17	1PC

Step 18

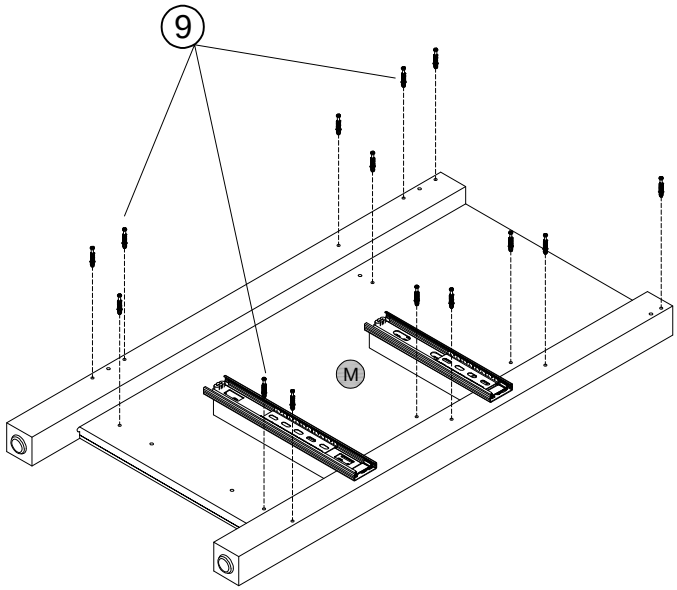


9	14PCS

Step 19

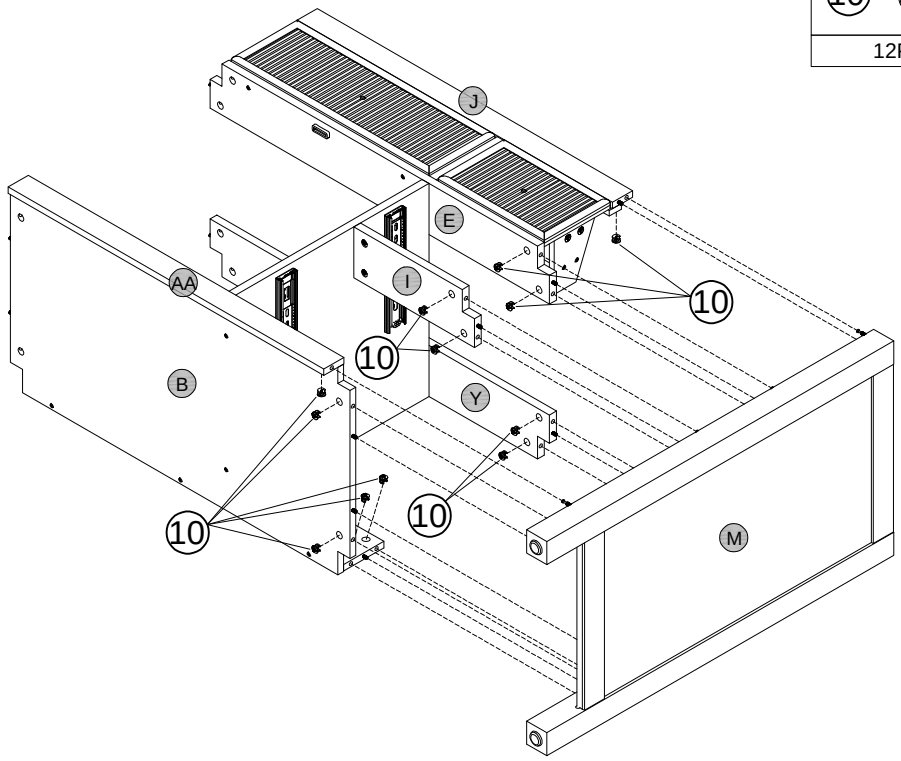

10 — 12PCS


Step 20

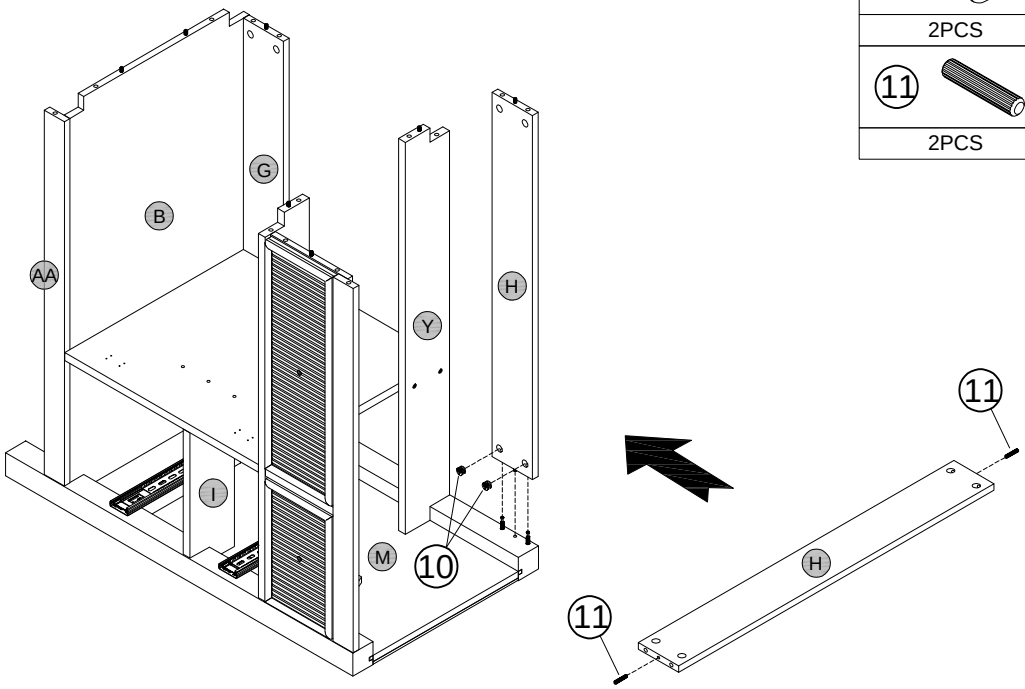


10 — 2PCS

11 — 2PCS


Step 21




14PCS

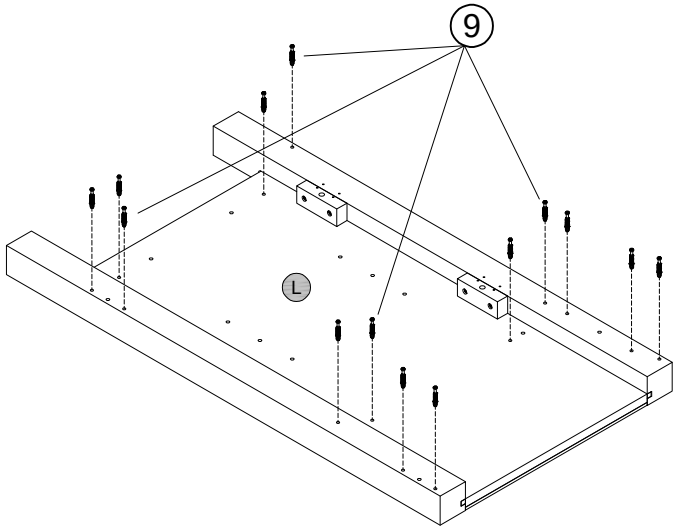

Step 22




14PCS

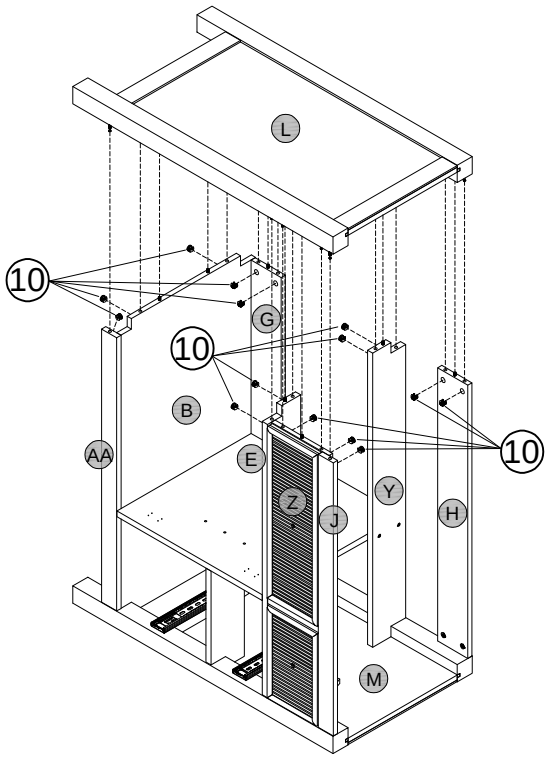


Step 23


It is recommended that two people operate the device during the flipping process.

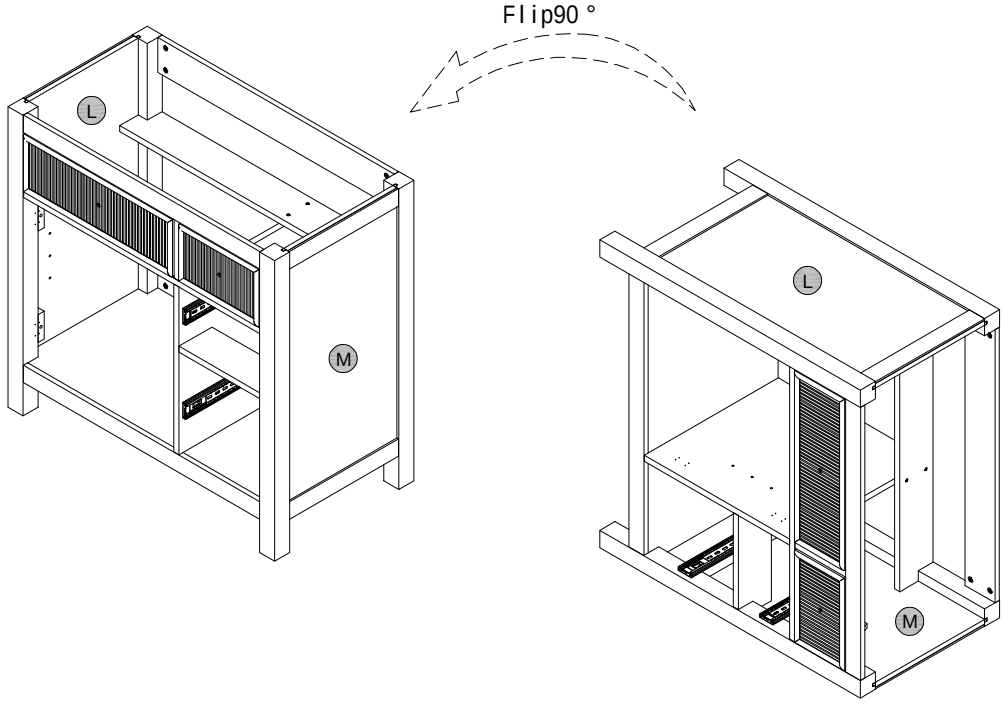


Step 24

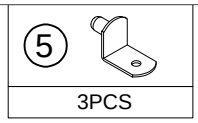


3PCS

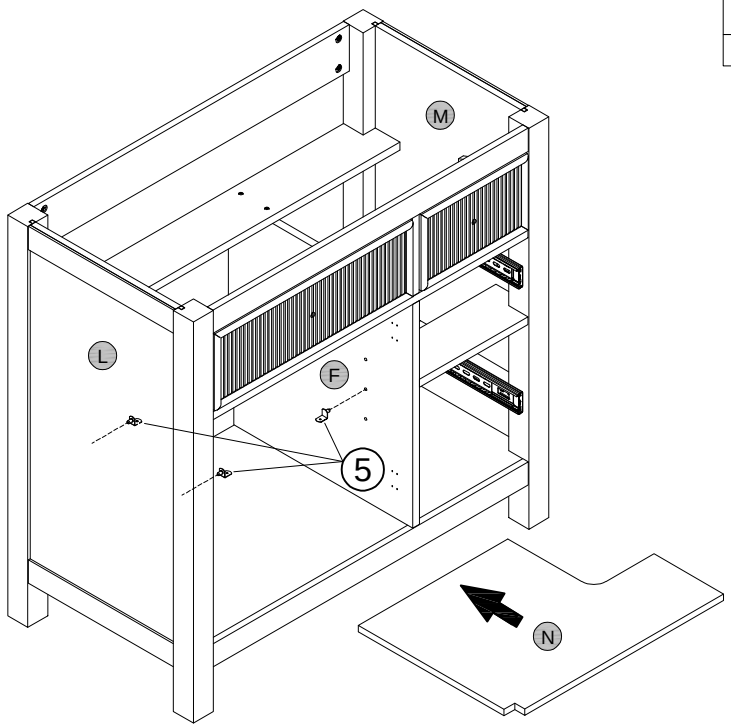


Step 25

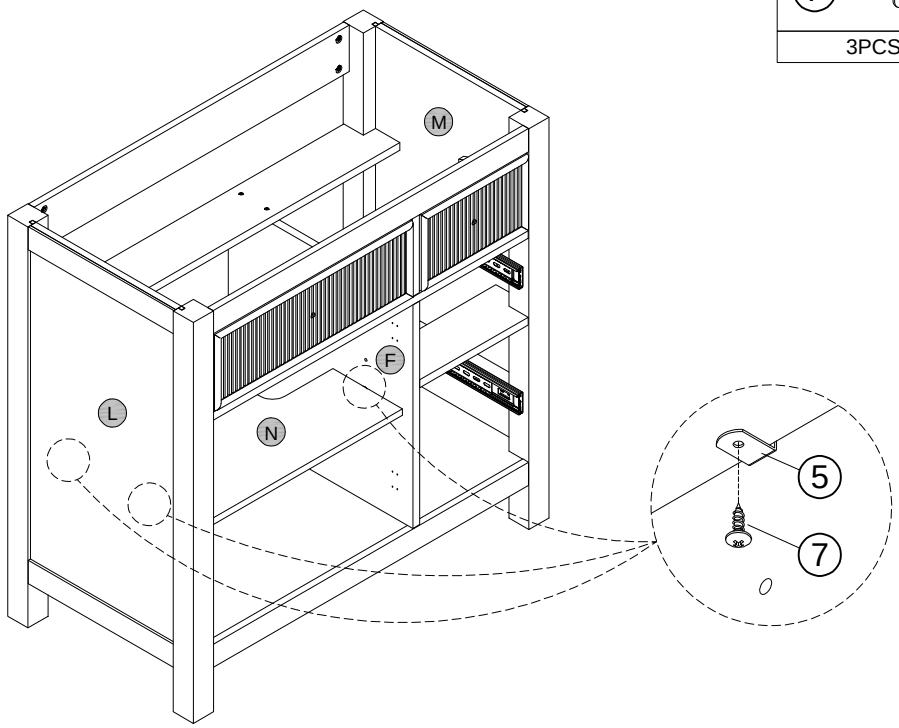

Step 26

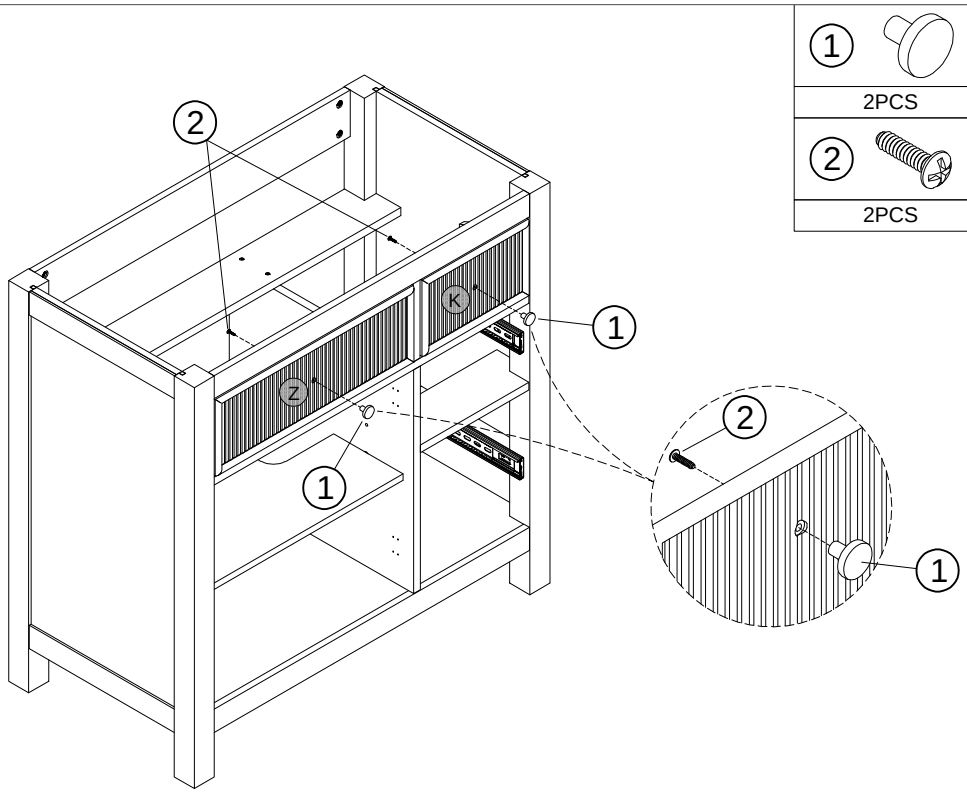


Step 27

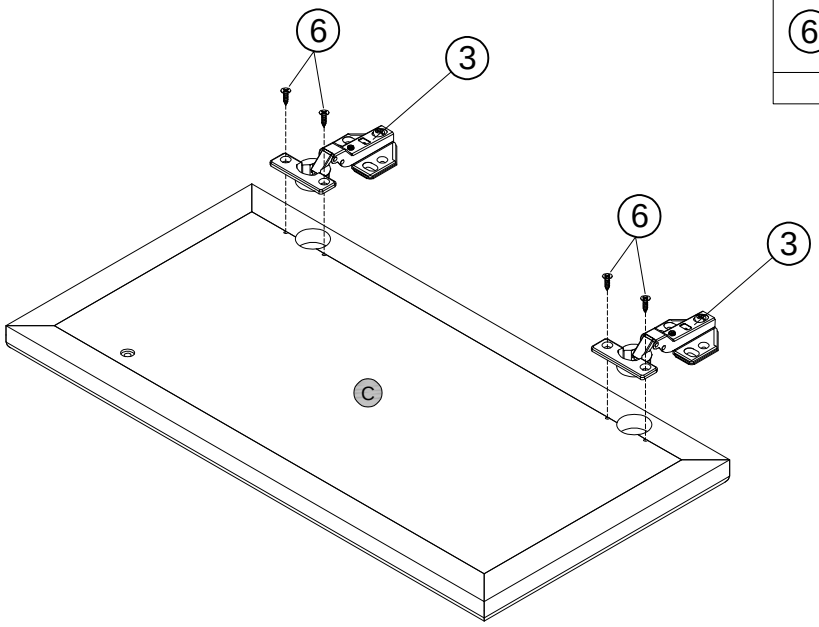


3	2PCS
6	4PCS

Step 28

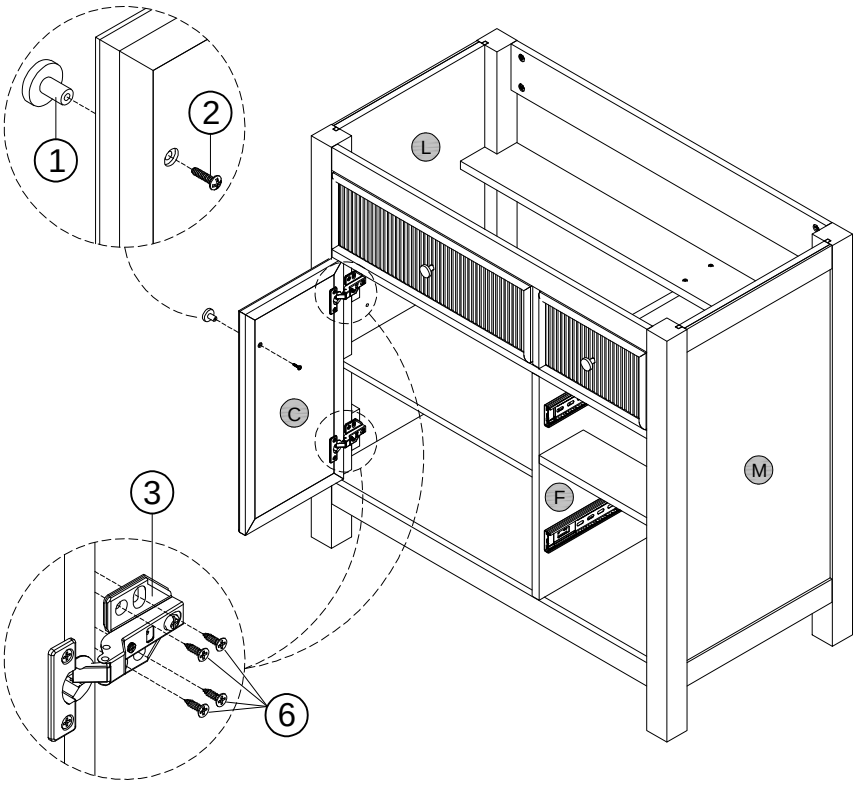


1	1PC
2	1PC
6	8PCS

Step 29

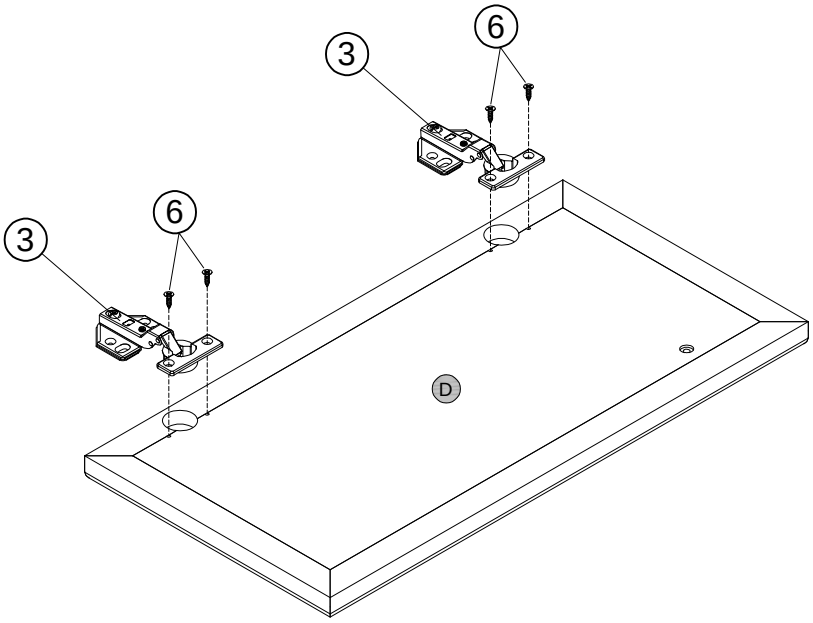


3	2PCS
6	4PCS

Step 30

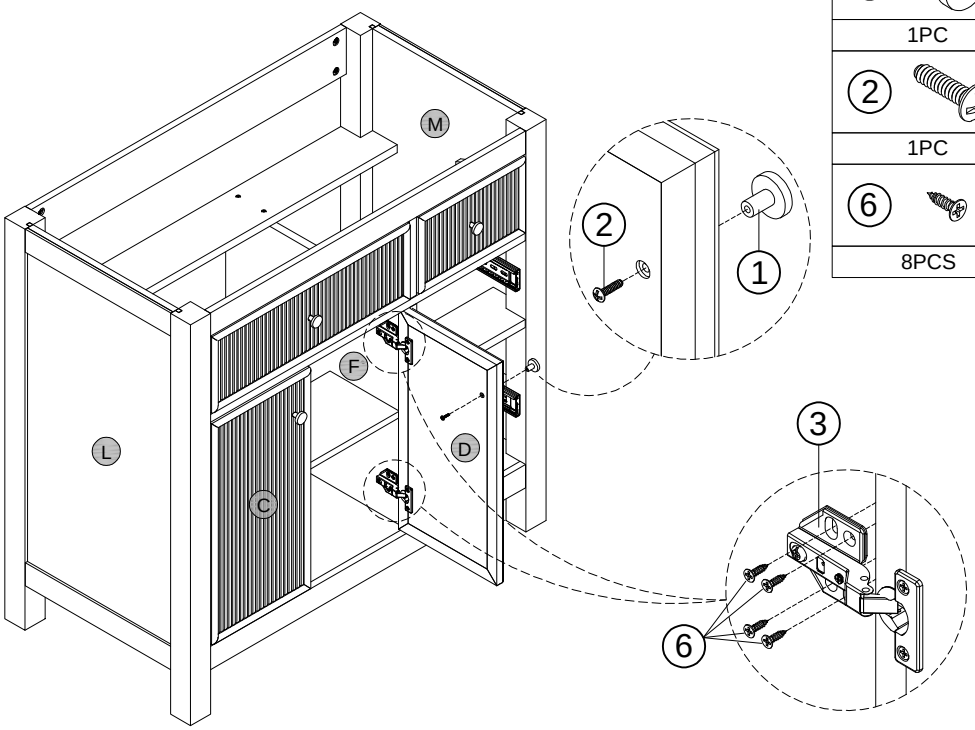


1	1PC
2	1PC
6	8PCS


Adjust Height

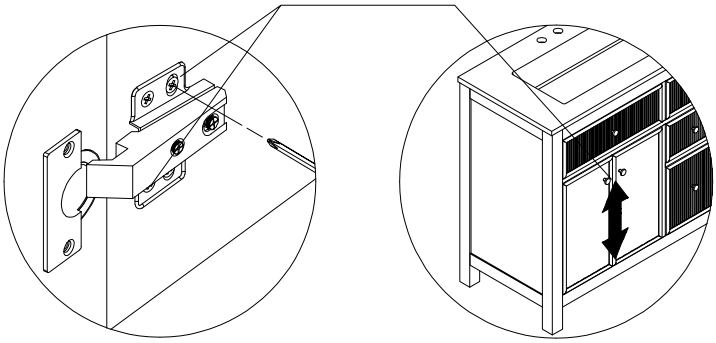


Adjust front and back

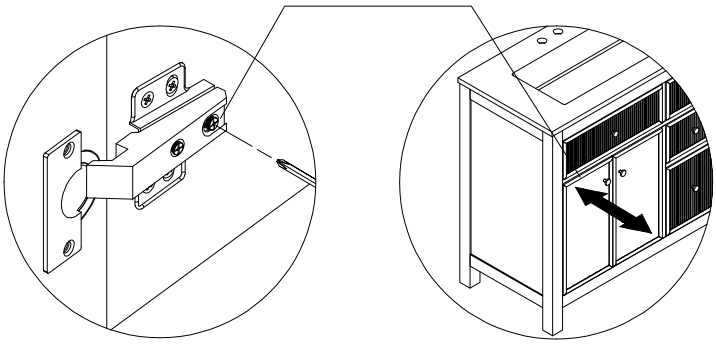



Adjust Left and right

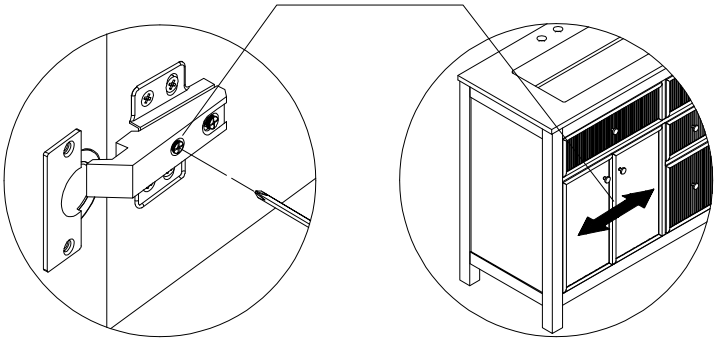


Step 31

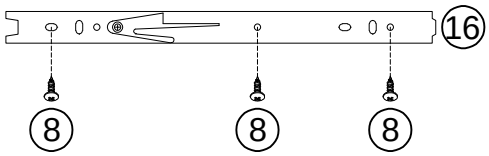


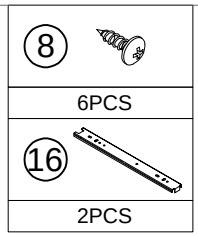


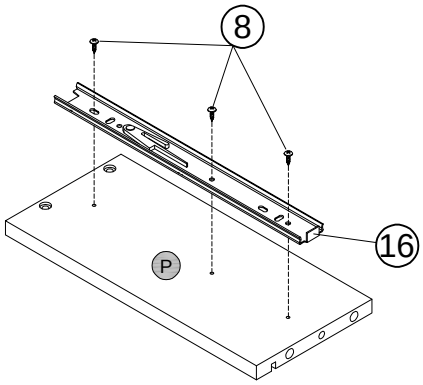

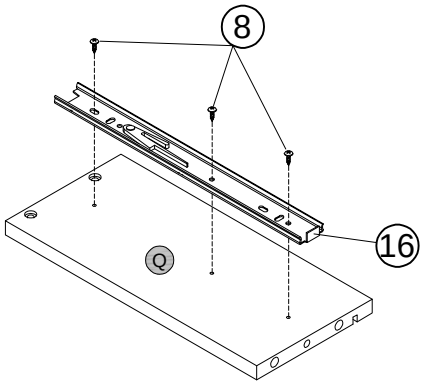


Step 32

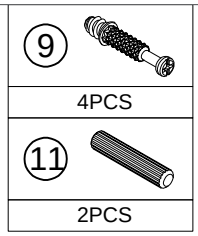


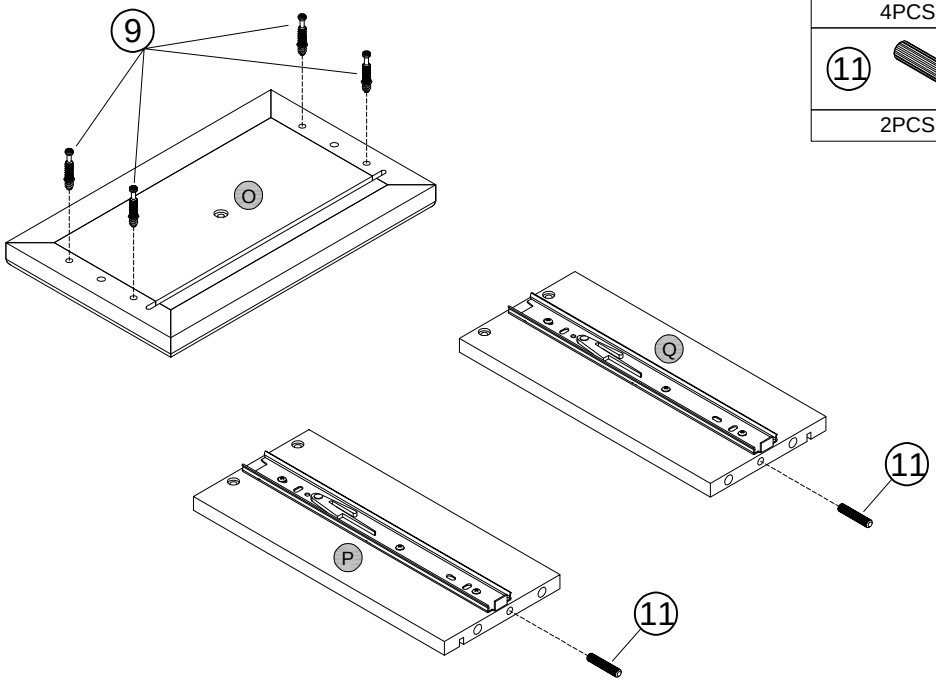

Step 33

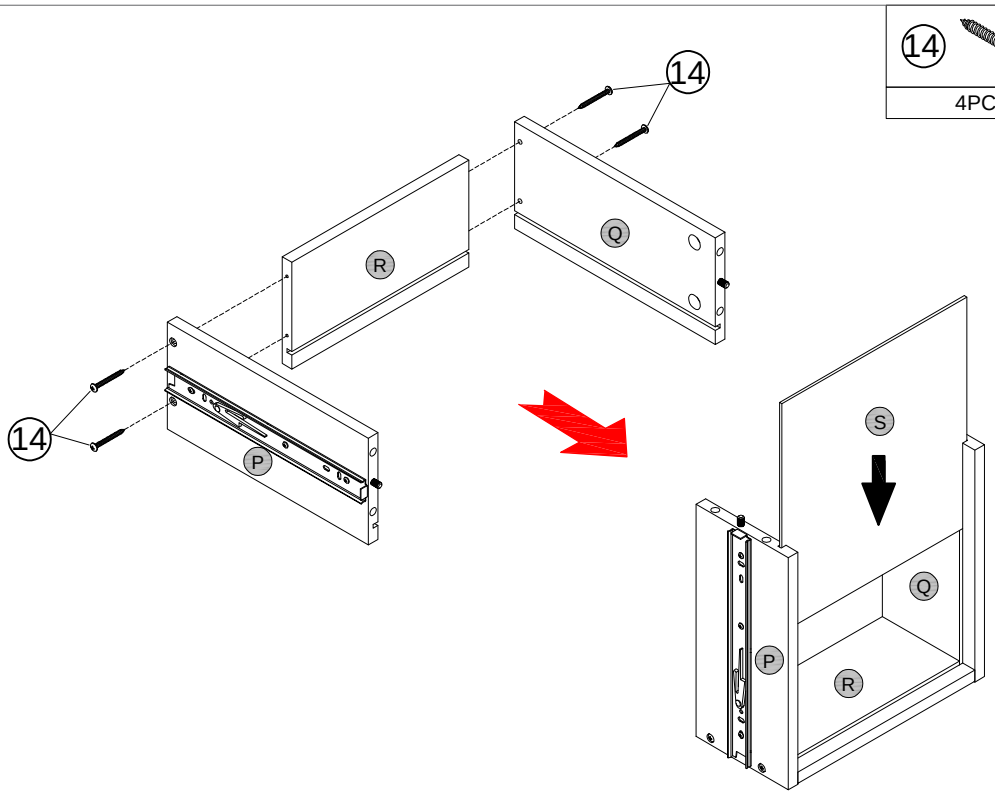


Step 34

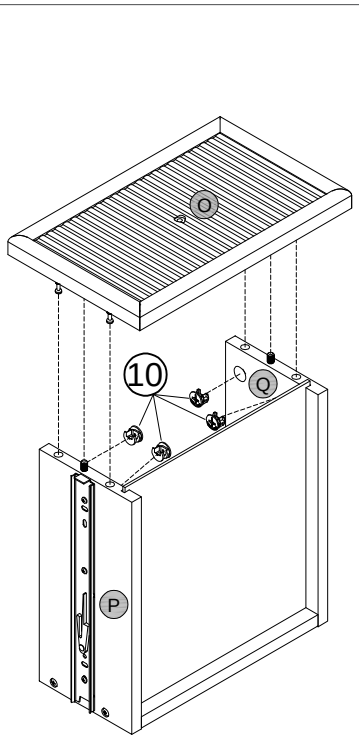


Step 35


① 	1PC
② 	1PC

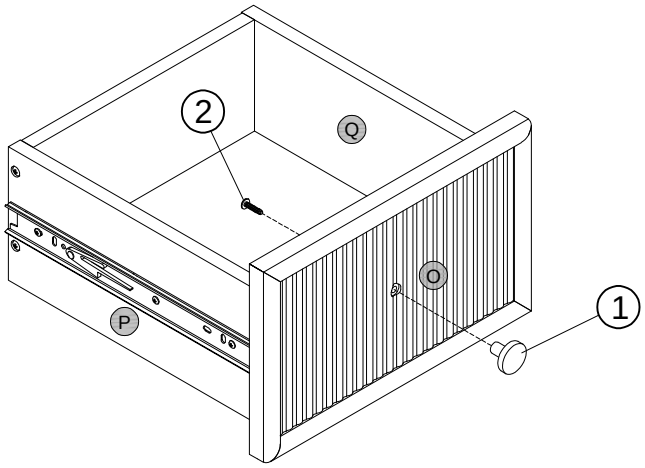


Step 36

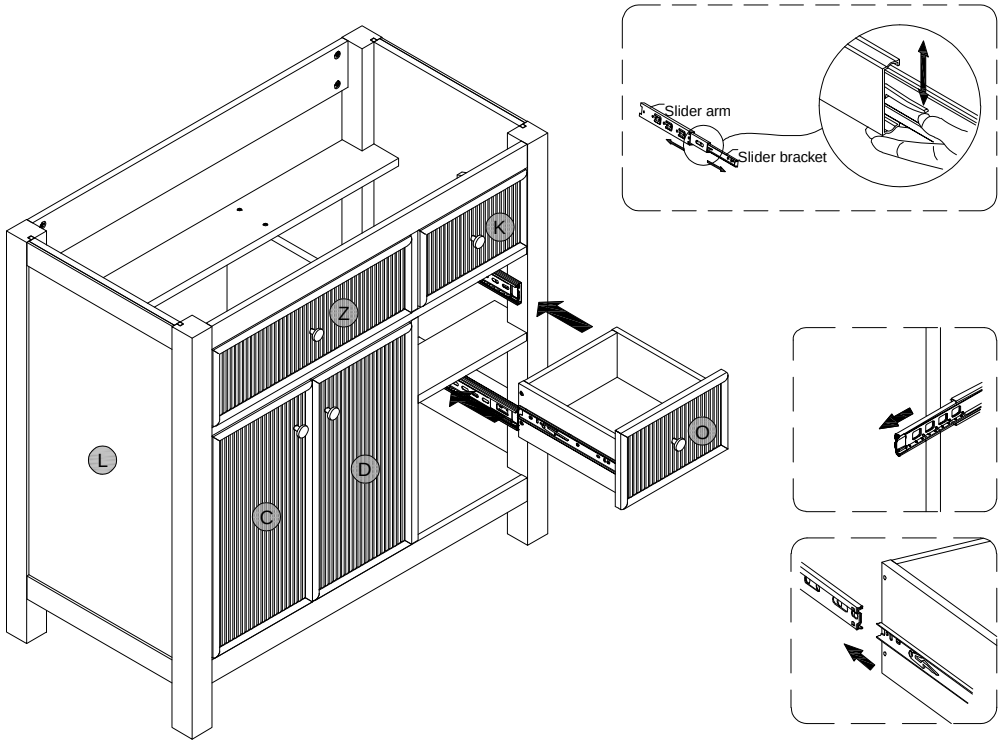


Step 37

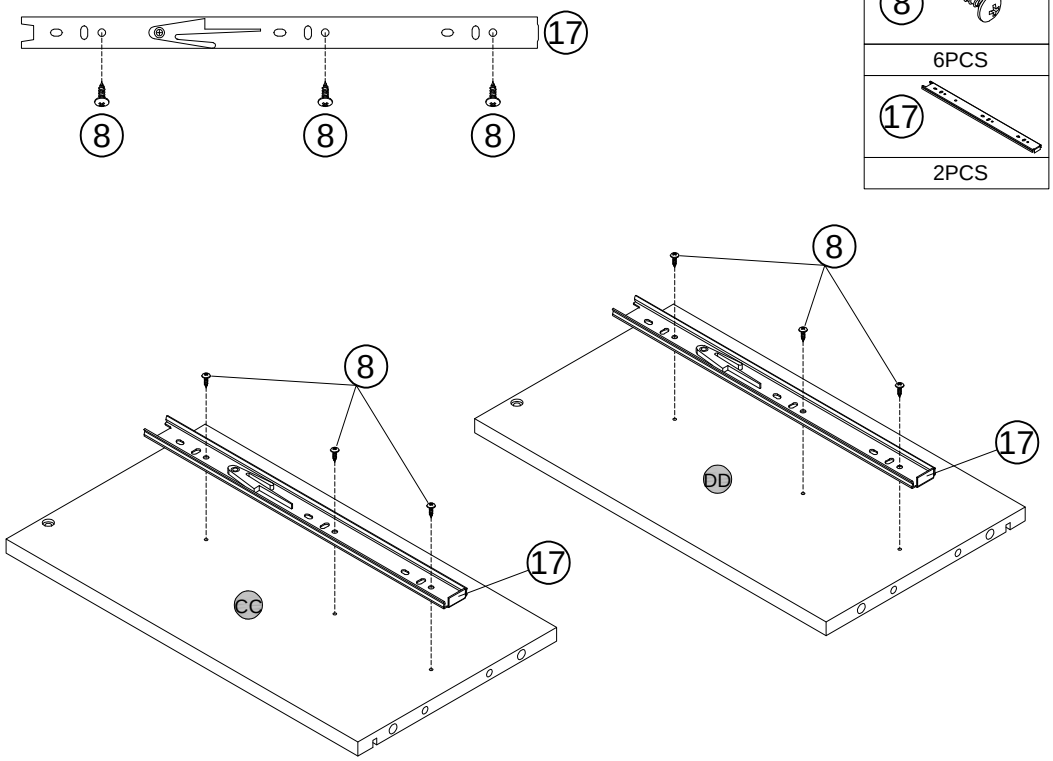


Step 38

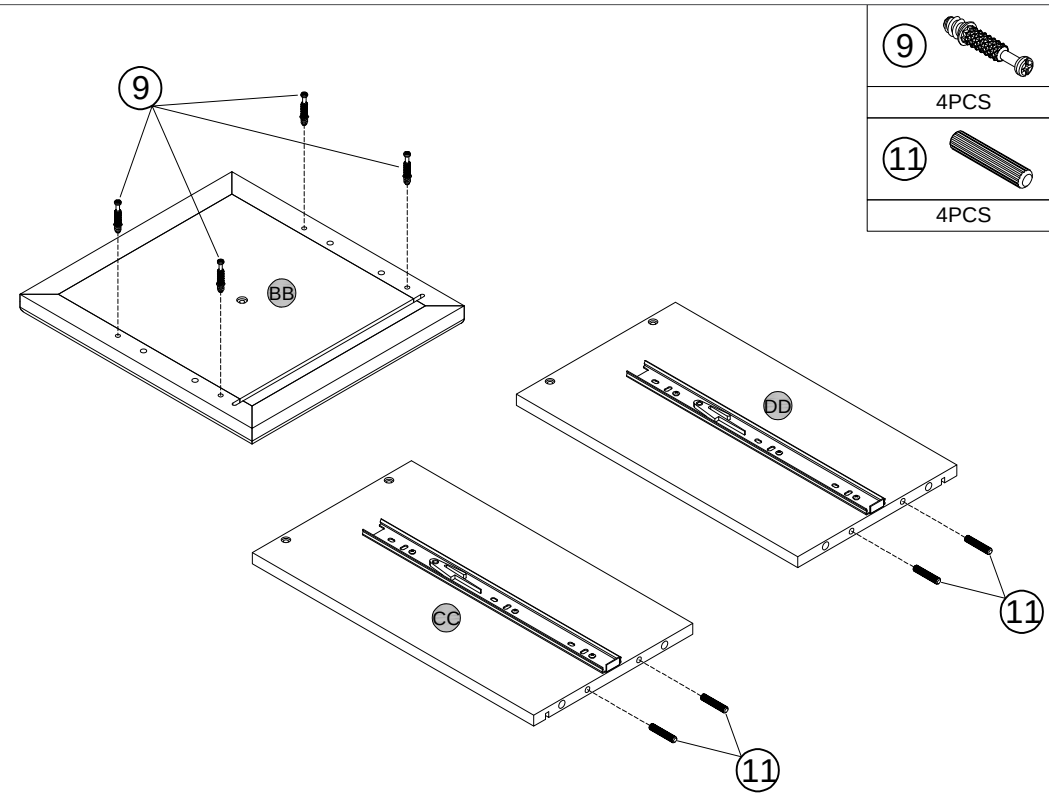


Step 39

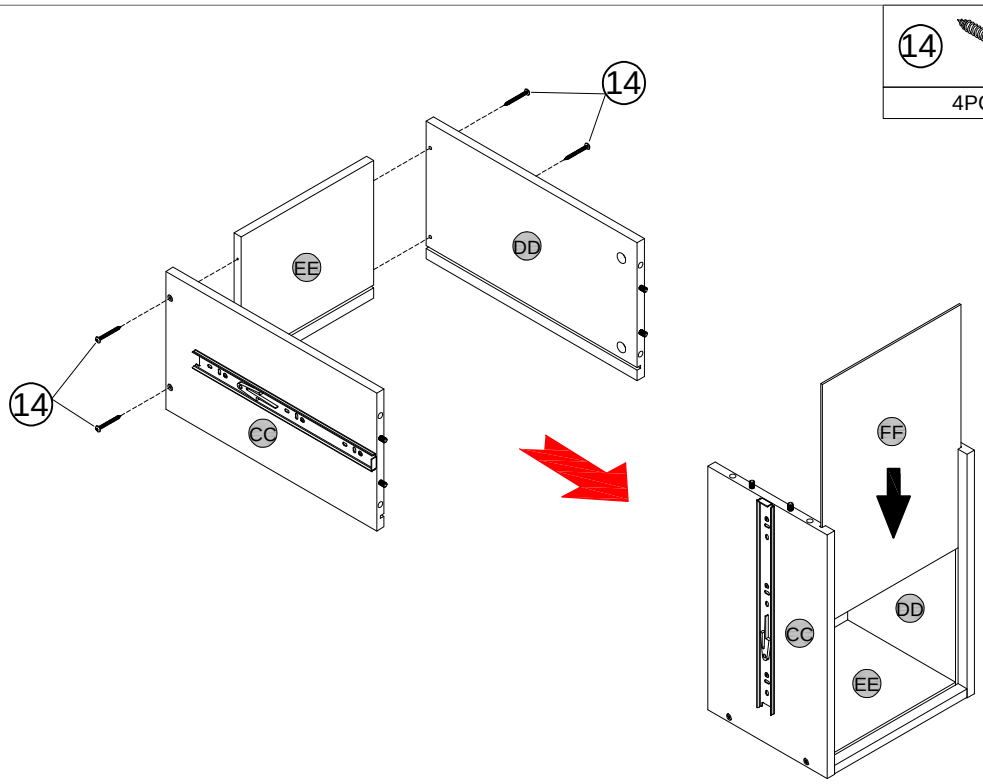


Step 40

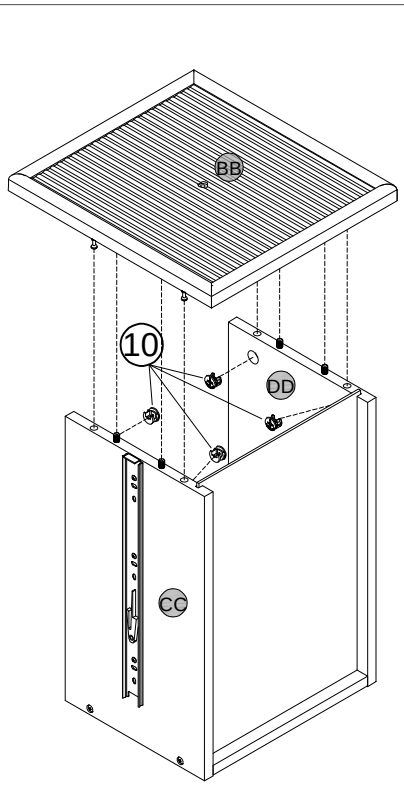



Step 41

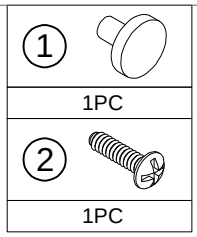


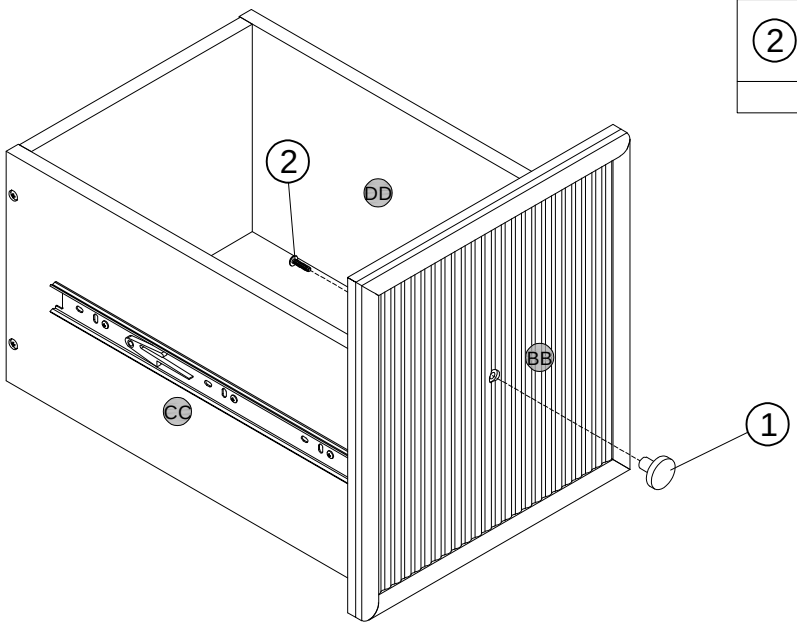


Step 42

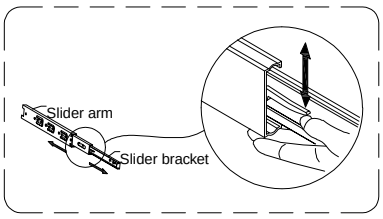


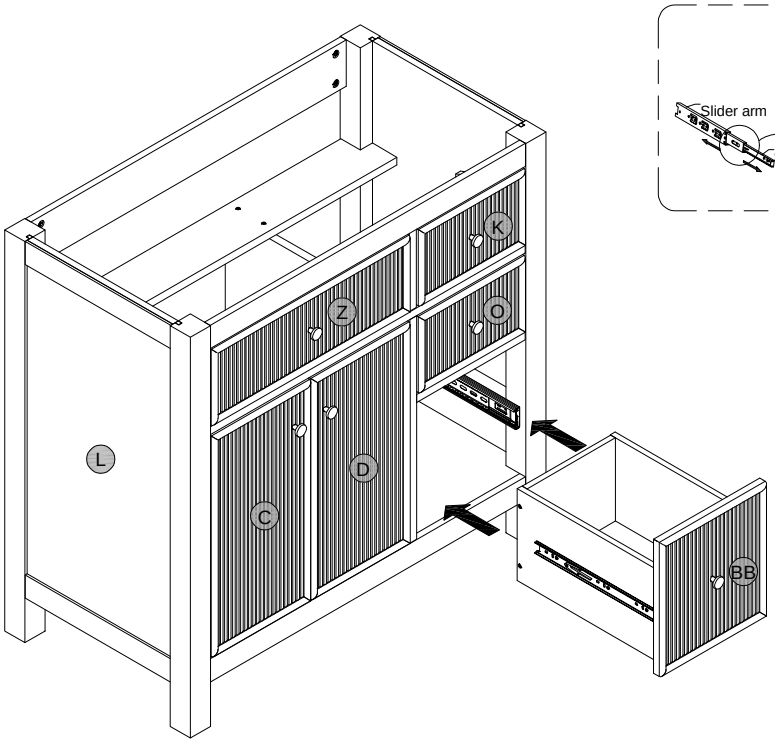

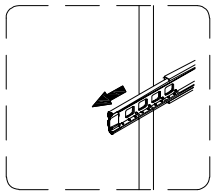


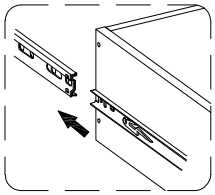

Step 43

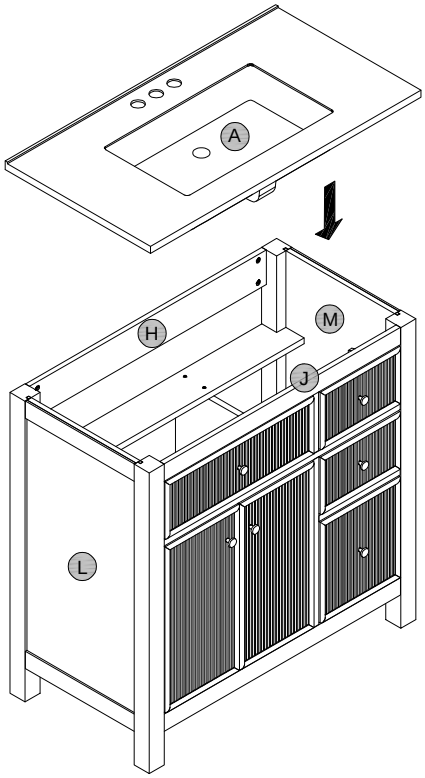

Step 44

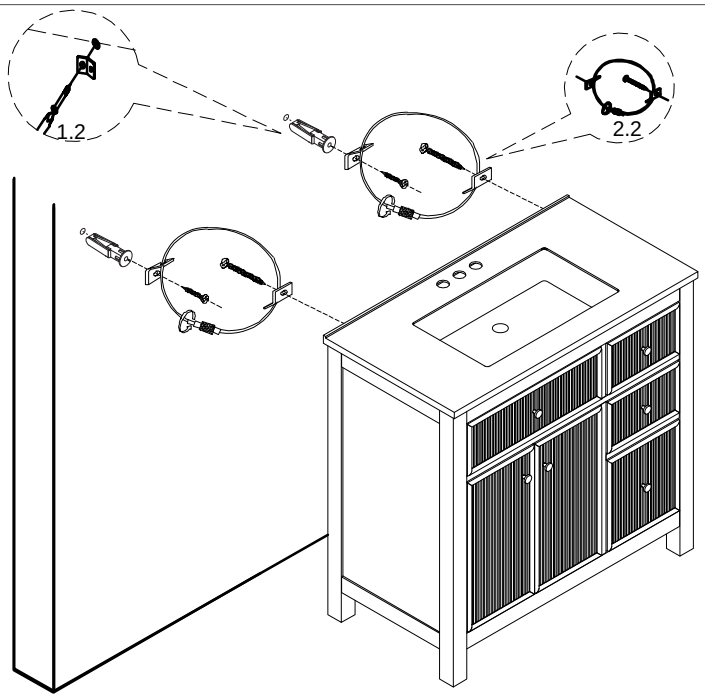

15
2SET
Cleaning Abrasive Pad
1PC

Note: Remove the PE bag covering the wash basin. Inside the bag, you will find one cleaning abrasive sponge (100 × 75 × 5 mm). If there are any stains on the wash basin, use the abrasive side of the sponge to remove them. Be sure to use the rough (abrasive) side for cleaning.

1.2 Attach the Metal Brackets,to the Wall Plugs,using Pan Head Screws and a Screwdriver
2.2 Move the Cabinet Sink against the wall. Pull the anti-tip, through the Metal Bracket, on the wall and Cabinet Sink Base respectively and tighten the lock on the anti-dumping strap