


Shoe Bench

Assembly Instructions

XD014 | 60CM

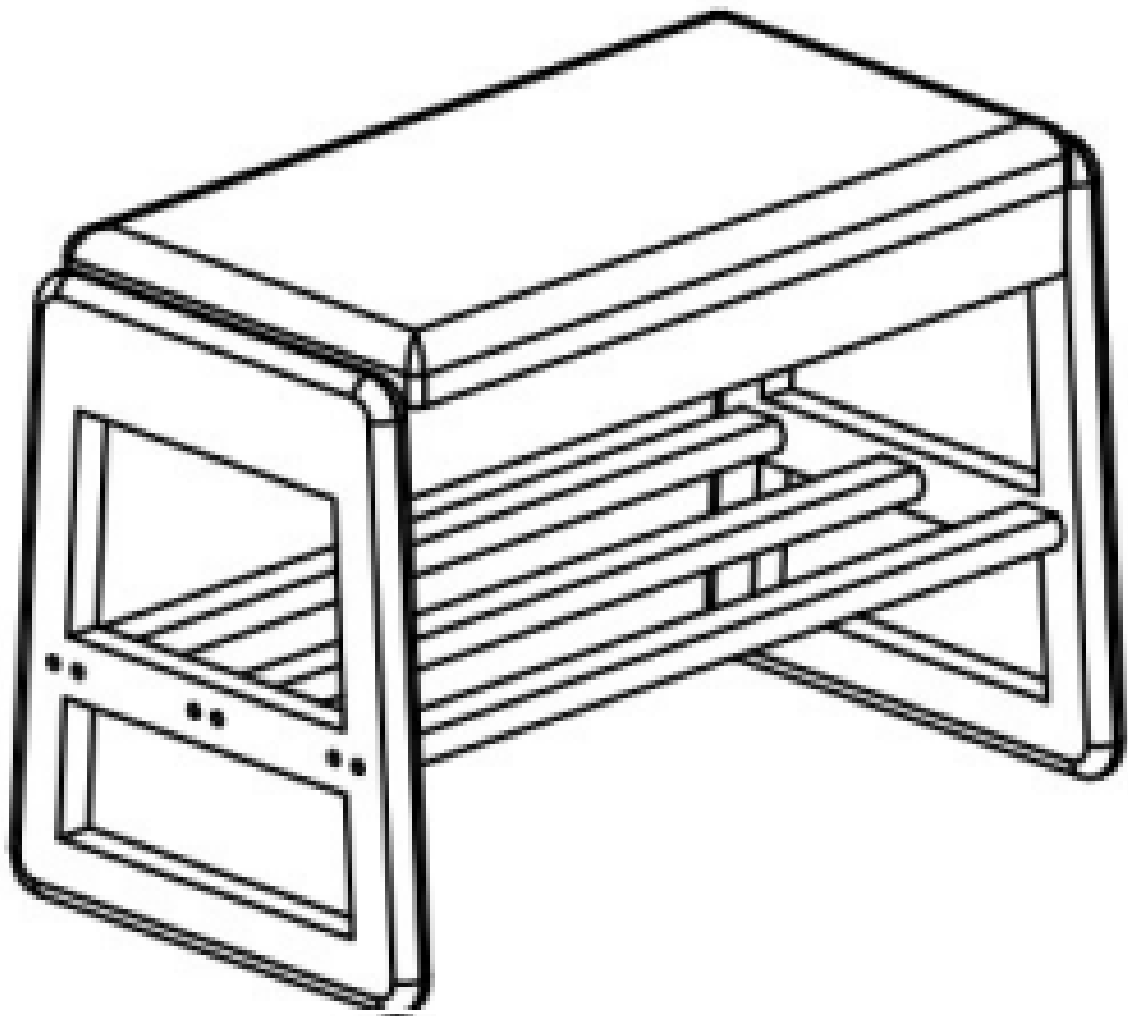

Parts List

1 Top compartment

550 × 300 × 100MM

Qty: 1



2 Side frame

400 × 343 × 25MM


Qty: 2



3 Crossbar

550 × 40 × 20MM

Qty: 3

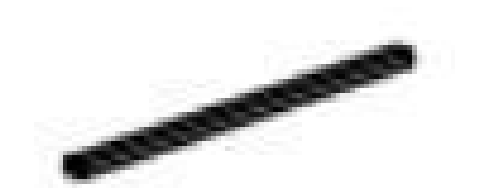

Hardware List

A Hex socket screw

M6 × 35MM

Qty: 6



B Flat washer

M6 × Ø13MM


Qty: 6



C Hex socket screw

Ø7 × 50MM

Qty: 12

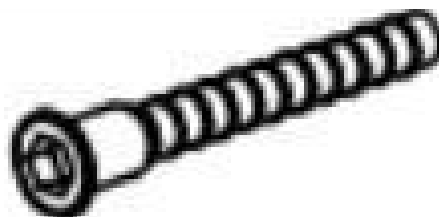

1/2

Tool and Preinstalled Hardware

Check all parts and hardware before assembly.

Preinstalled items are already fitted to the product and are not included in the hardware package.

Reuse tool D throughout assembly.

Two people are needed for assembly.

D Hex key

4 × 22 × 60MM


Qty: 1



E Hinge — preinstalled

70mm (Cleat 20, 110°)


Qty: 2 — already installed

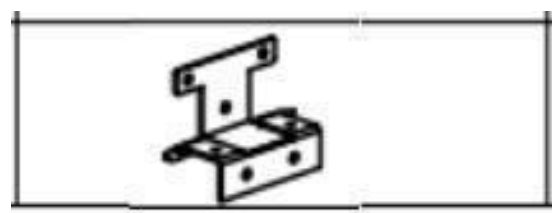

Step 1

Connect parts (1), (2) and (3) using screws A and C, washers B and hex key D, as shown. Check the parts before assembly.

Hardware: A × 6, B × 6, C × 12 Tool: D × 1

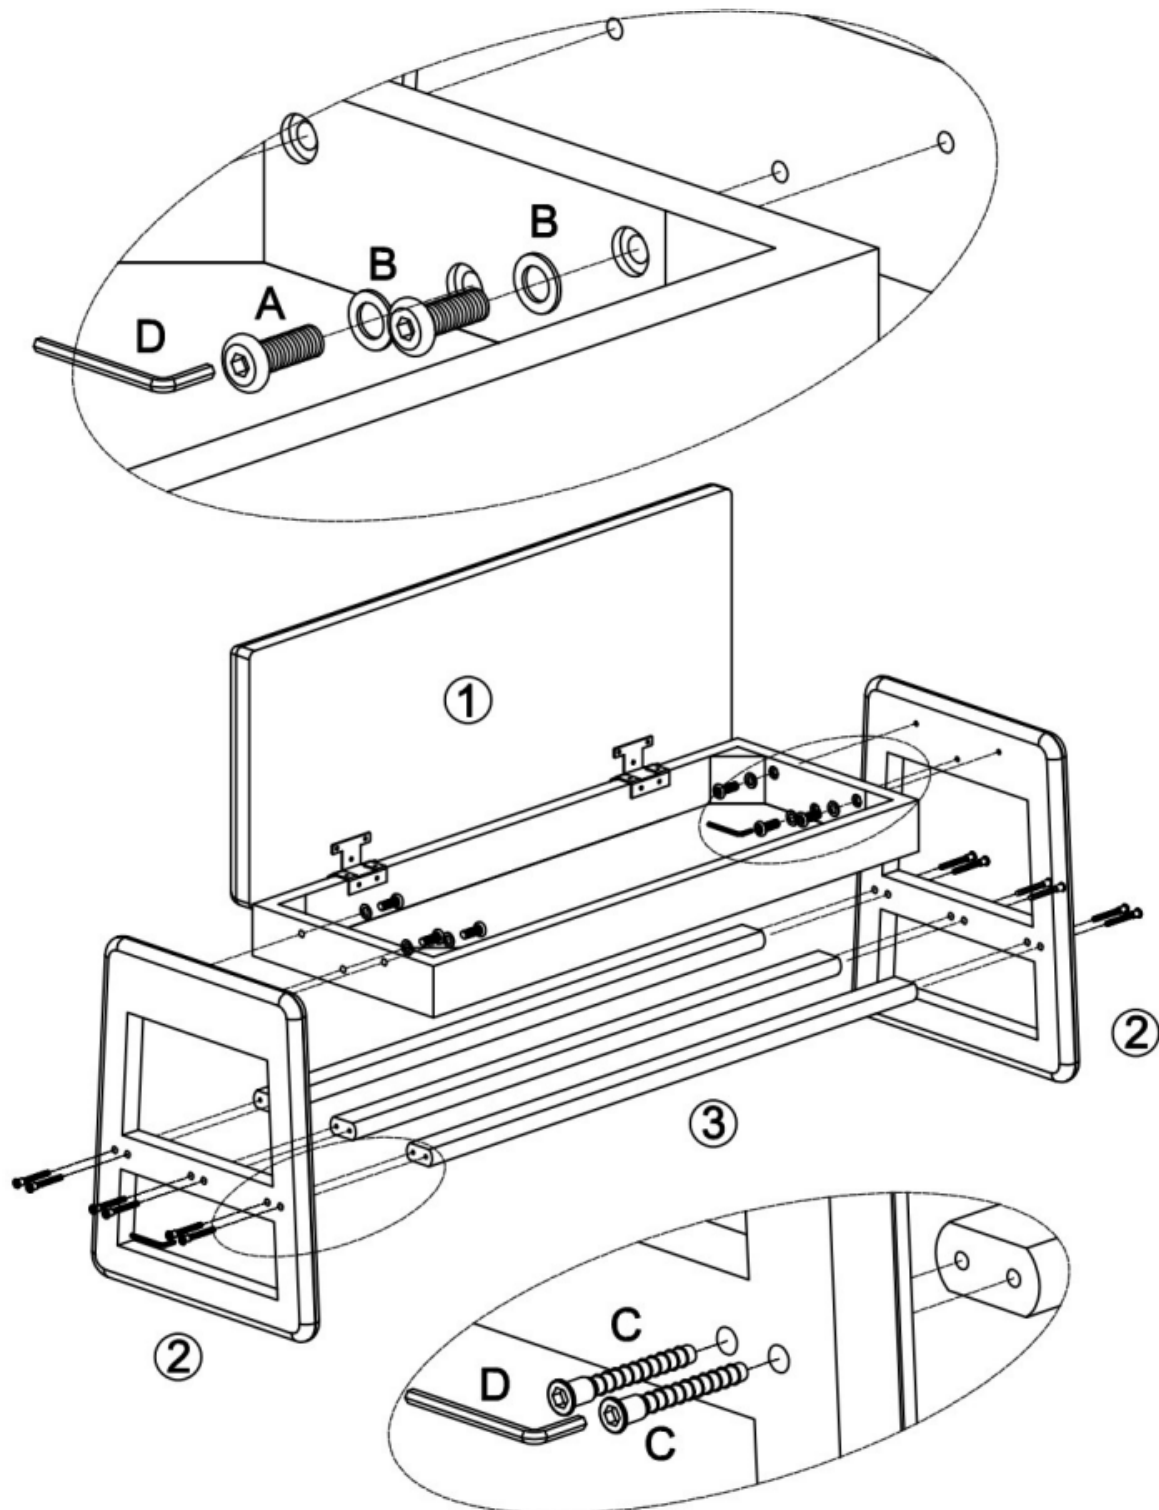

Step 2

Assembly is complete.

