


Assembly Instructions

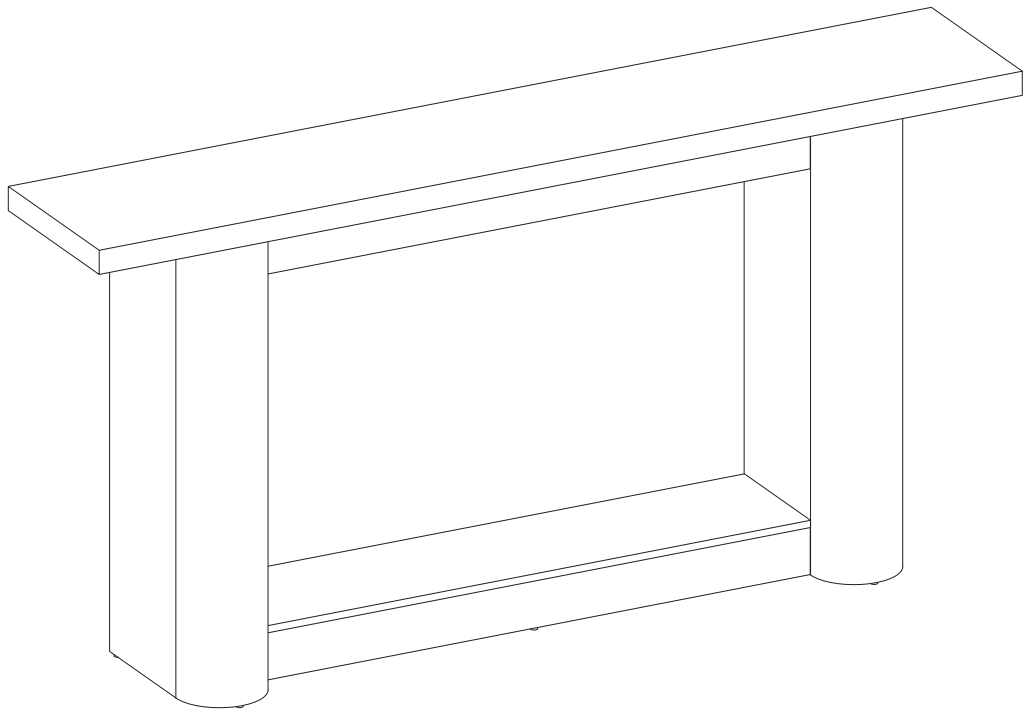

SKU:
DWL-AMG16160H160-GB
VTG-AMG16160H160-GC


If you have any questions about assembly or use, please feel free to contact us: lintreasure@hotmail.com

Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

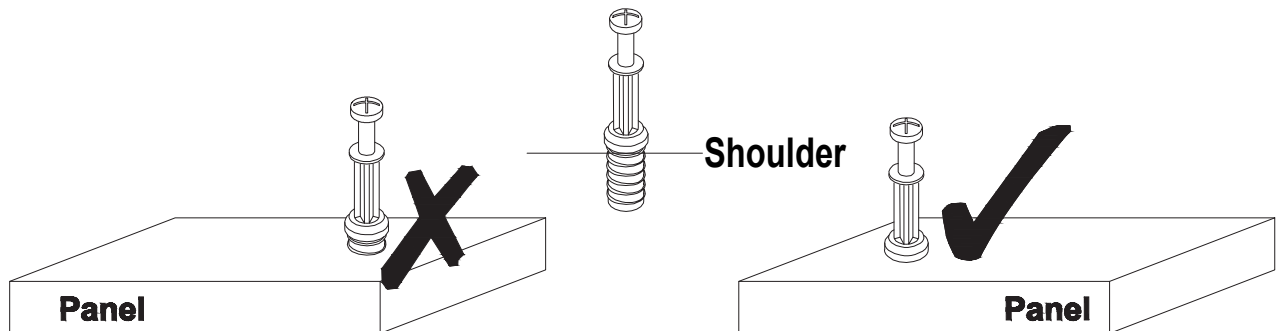

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

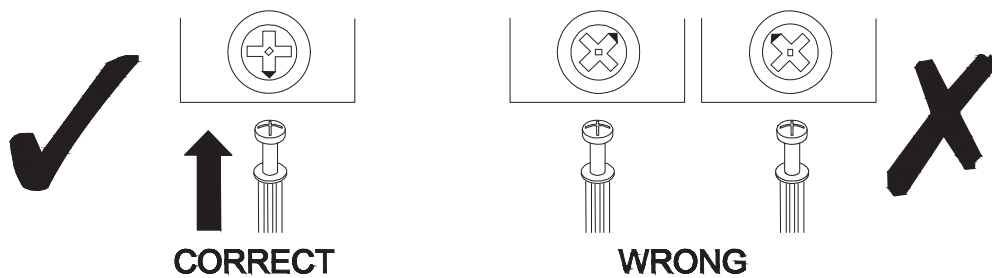

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT








Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

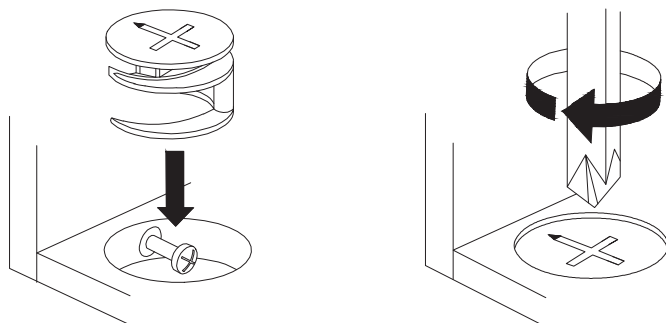


Turn cam lock clockwise to tighten.


Part List

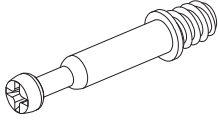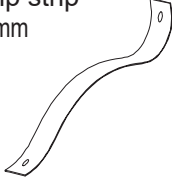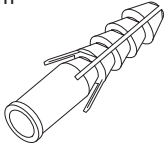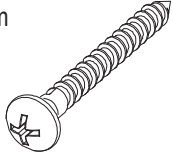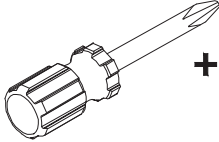No. A Quantity: 47+2 PCS Cam Bolt ø6x33.5mm 	No. B Quantity: 47+2 PCS Cam ø15x9.5mm 	No. C Quantity: 47+2 PCS Sticker ø20mm 	No. D Quantity: 38+2 PCS Dowel ø6x30mm 
No. E Quantity: 2 PCS Anti-slip strip 190x20mm 	No. F Quantity: 2 PCS Plastic Expansion ø8x40mm 	No. G Quantity: 2 PCS Screw ø4x16mm 	No. H Quantity: 2 PCS Screw ø4x38mm 
No. I Quantity: 1 PC 			


Product structure

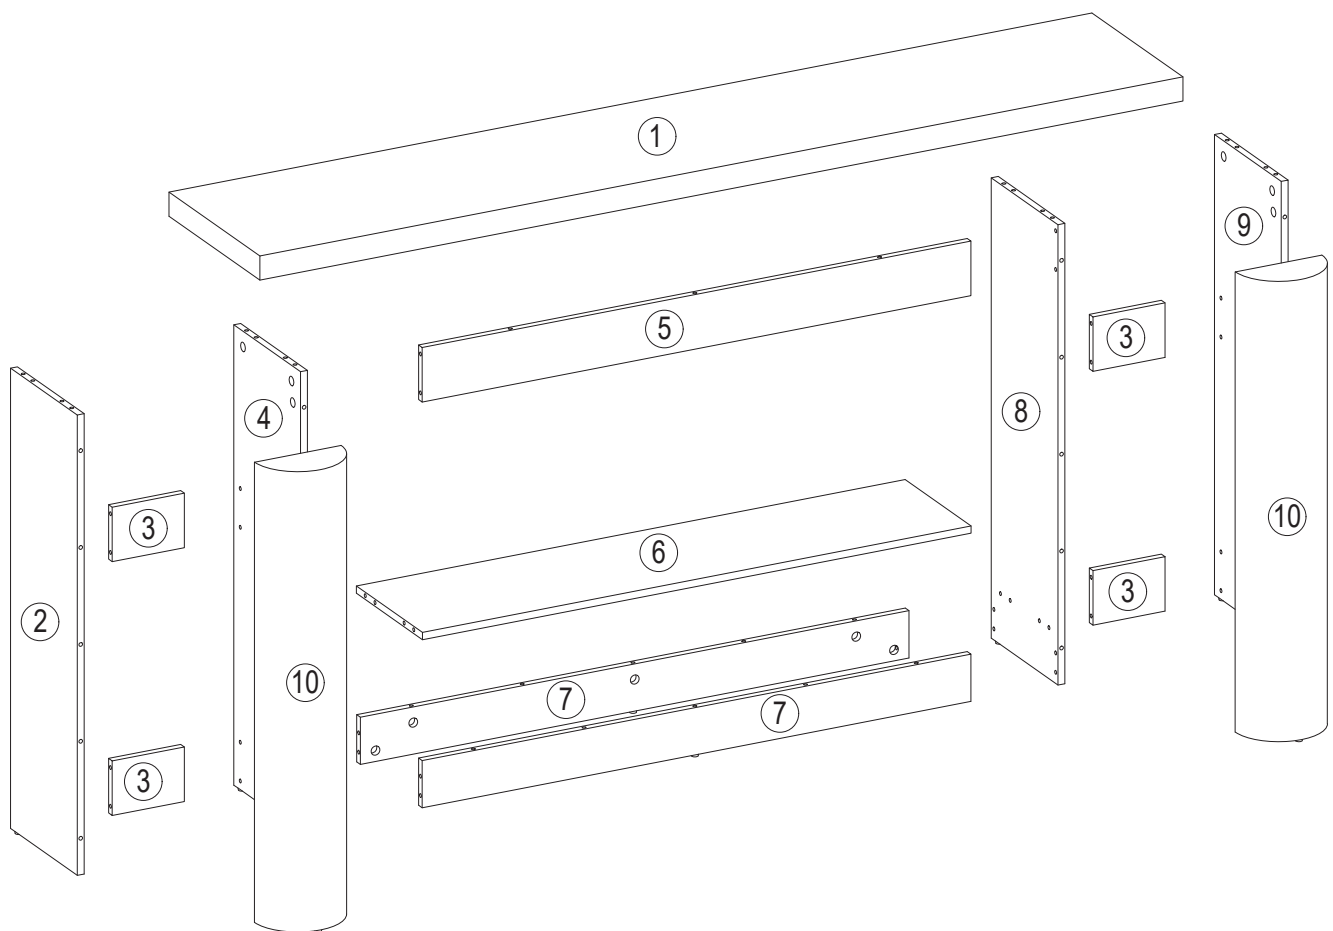


Step 1

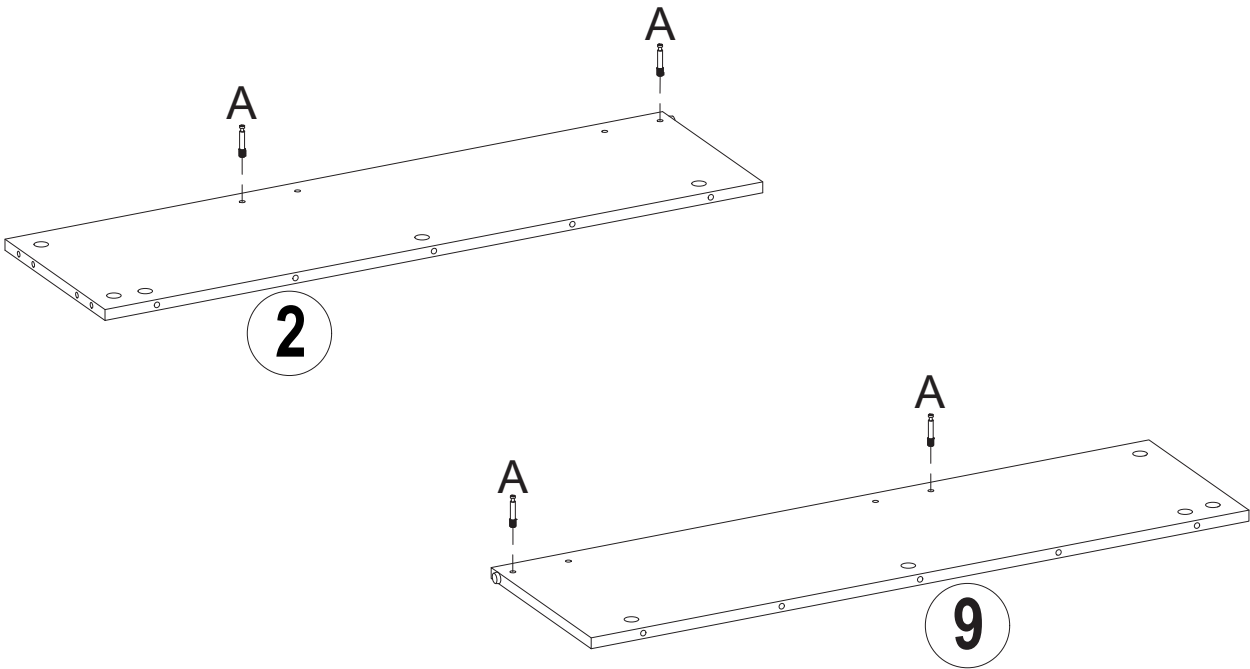


No. A
Quantity: 4 PCS
Cam Bolt
ø6x33.5mm

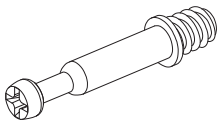


Step 2

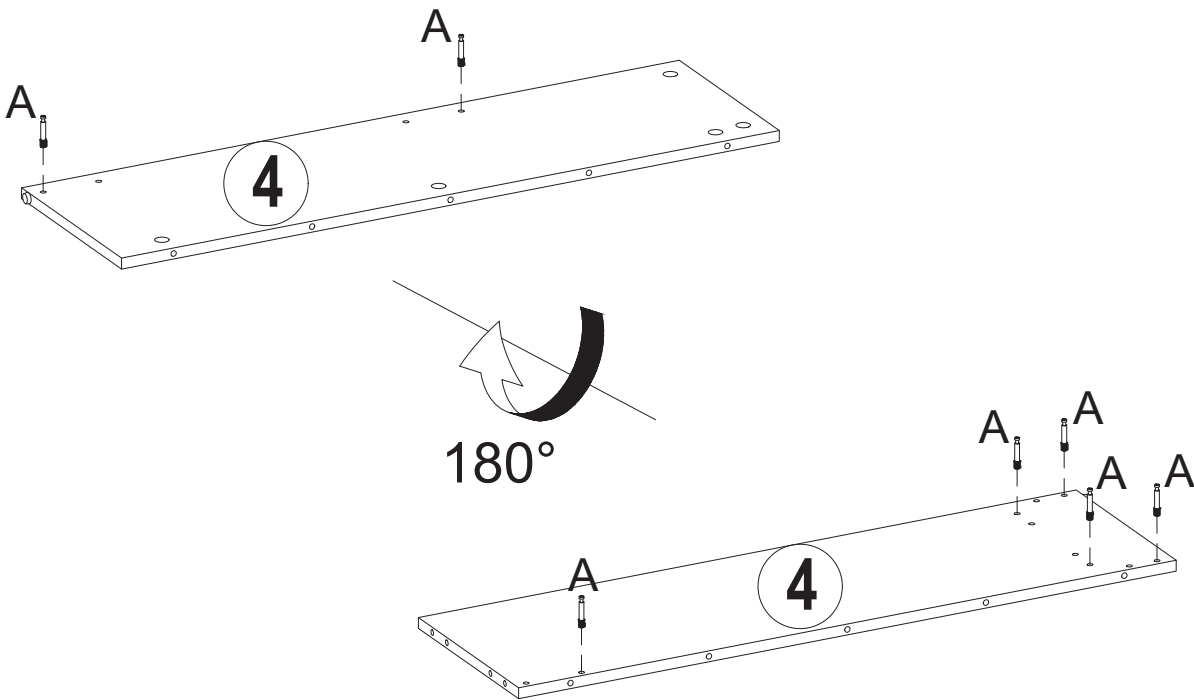


No. A
Quantity: 7 PCS
Cam Bolt
ø6x33.5mm




Step 3

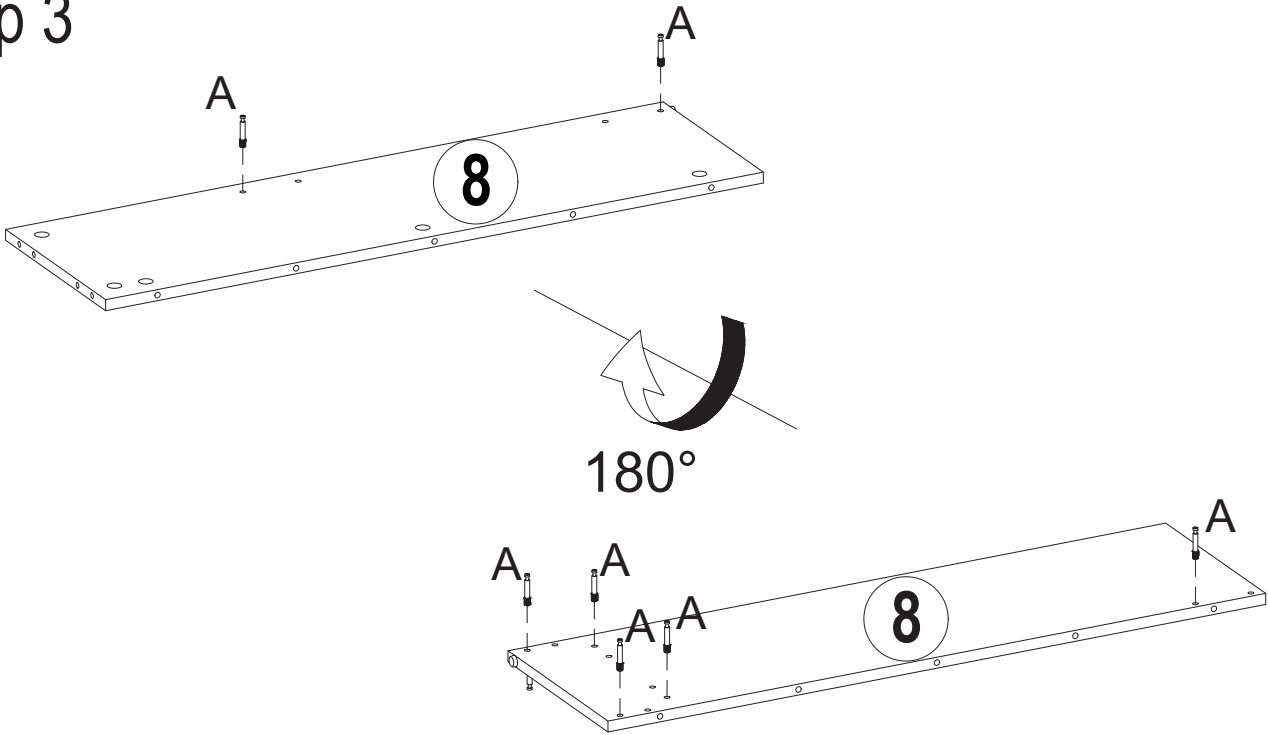

No. A
Quantity: 7 PCS
Cam Bolt
ø6x33.5mm

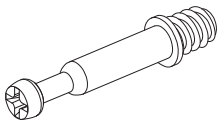



Step 4

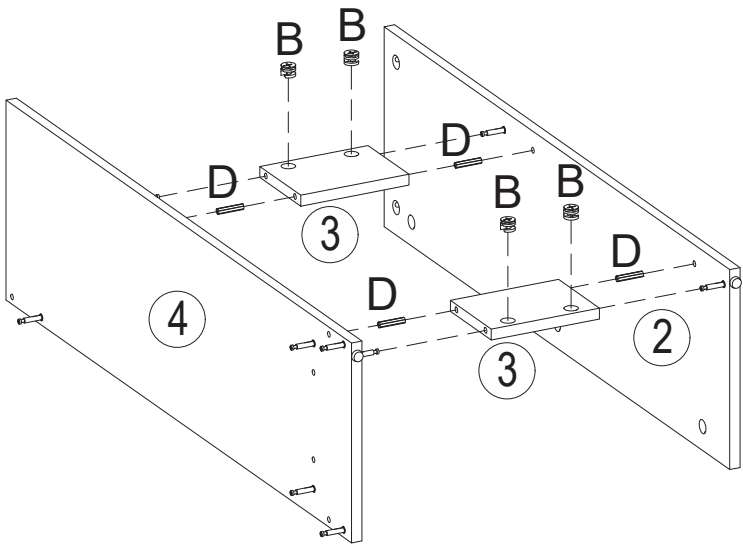


No. B
Quantity: 4 PCS
Cam
ø15x9.5mm



No. D
Quantity: 4 PCS
Dowel
ø6x30mm

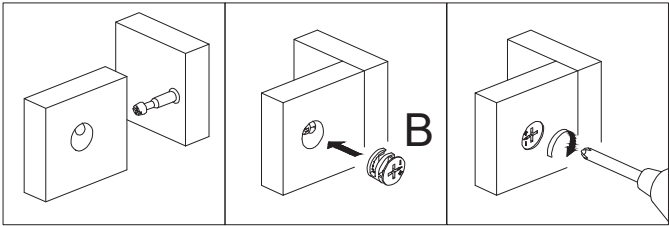


Step 5

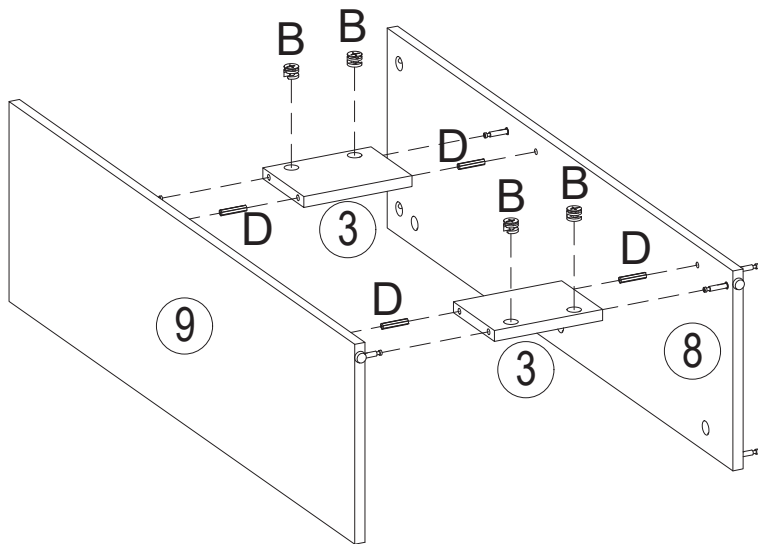




No. B
Quantity: 4 PCS
Cam
ø15x9.5mm




No. D
Quantity: 4 PCS
Dowel
ø6x30mm




Step 6

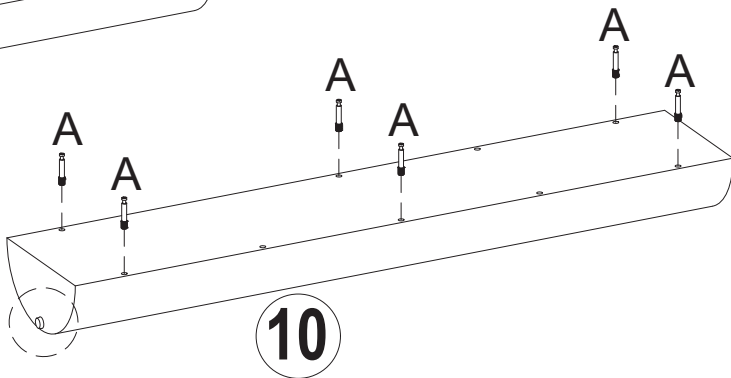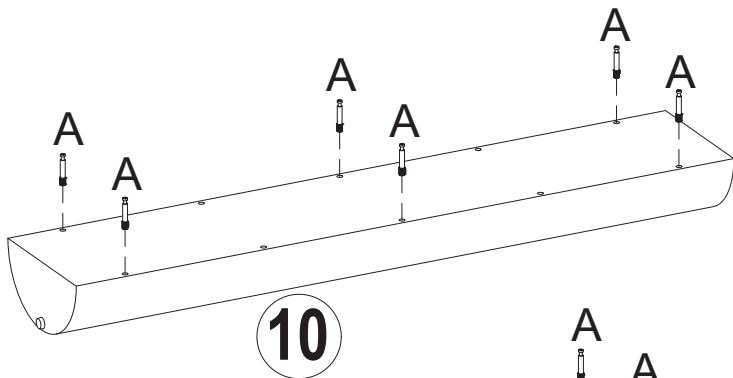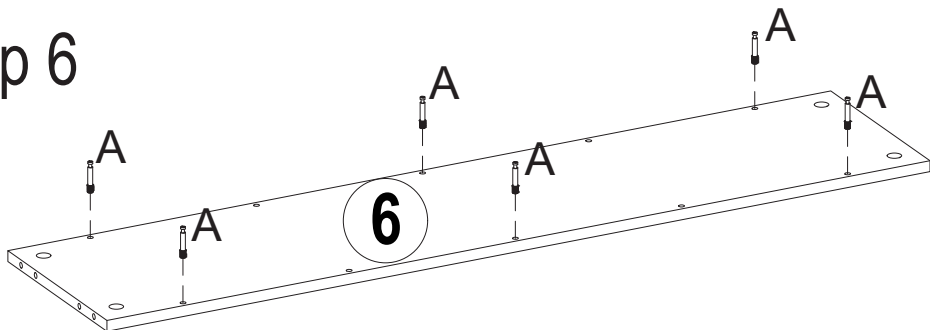

No. A
Quantity: 18 PCS
Cam Bolt
ø6x33.5mm




Step 7

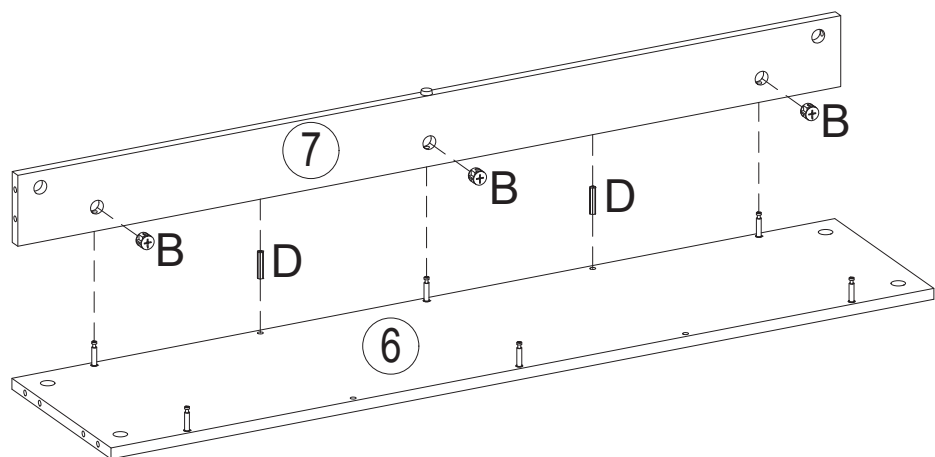


No. B
Quantity: 3 PCS
Cam
ø15x9.5mm



No. D
Quantity: 2 PCS
Dowel
ø6x30mm




Step 8

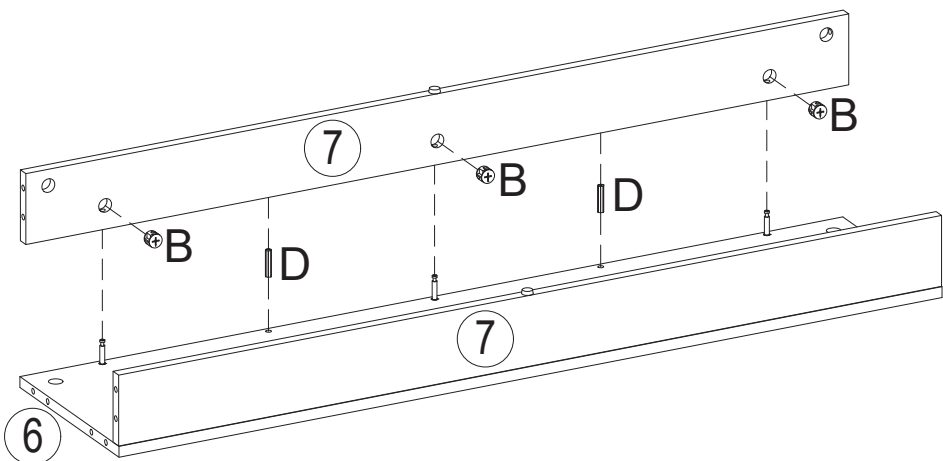


No. B
Quantity: 3 PCS
Cam
ø15x9.5mm



No. D
Quantity: 2 PCS
Dowel
ø6x30mm




Step 9

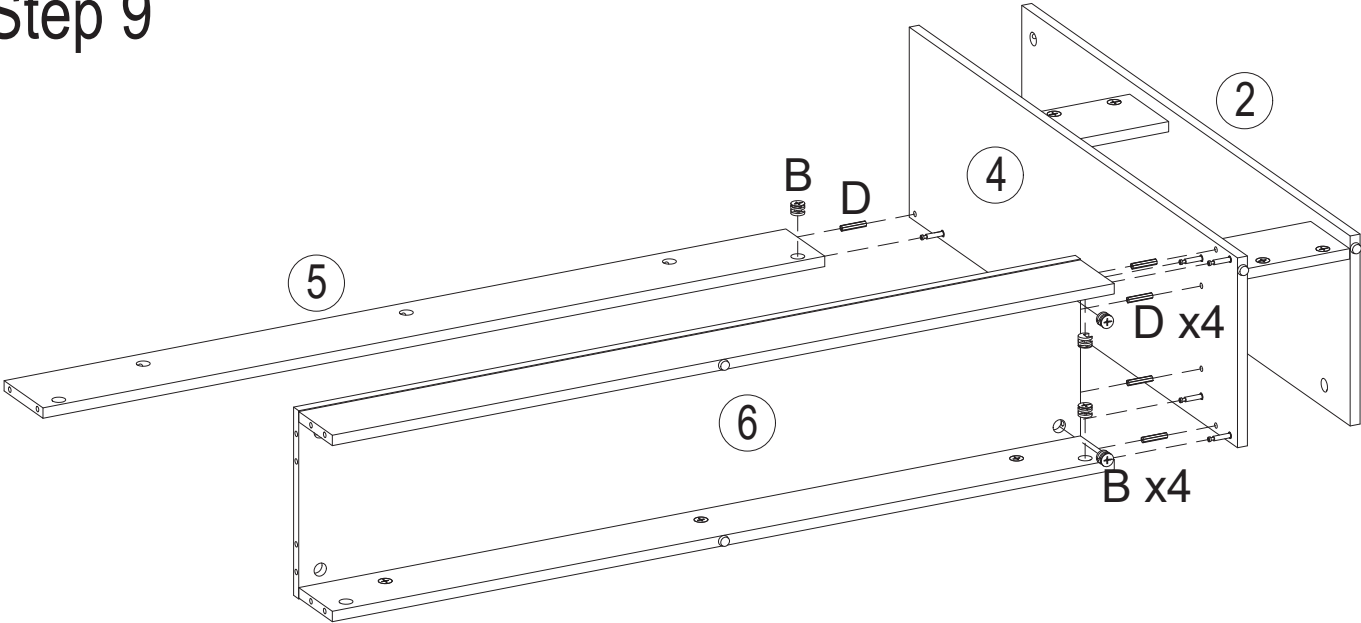


No. B
Quantity: 5 PCS
Cam
ø15x9.5mm



No. D
Quantity: 5 PCS
Dowel
ø6x30mm





Step 10

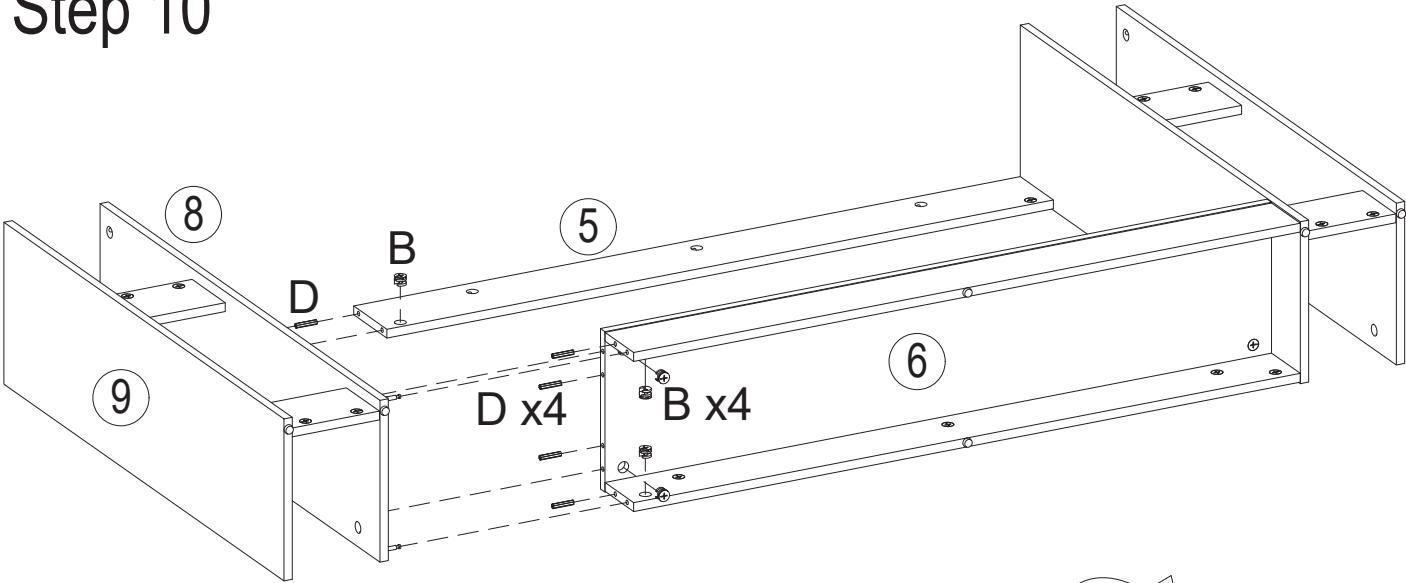


No. B
Quantity: 5 PCS
Cam
ø15x9.5mm



No. D
Quantity: 5 PCS
Dowel
ø6x30mm

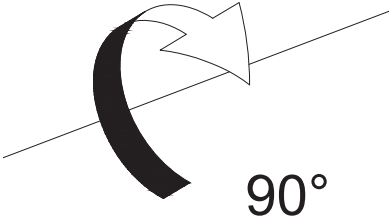


Step 11

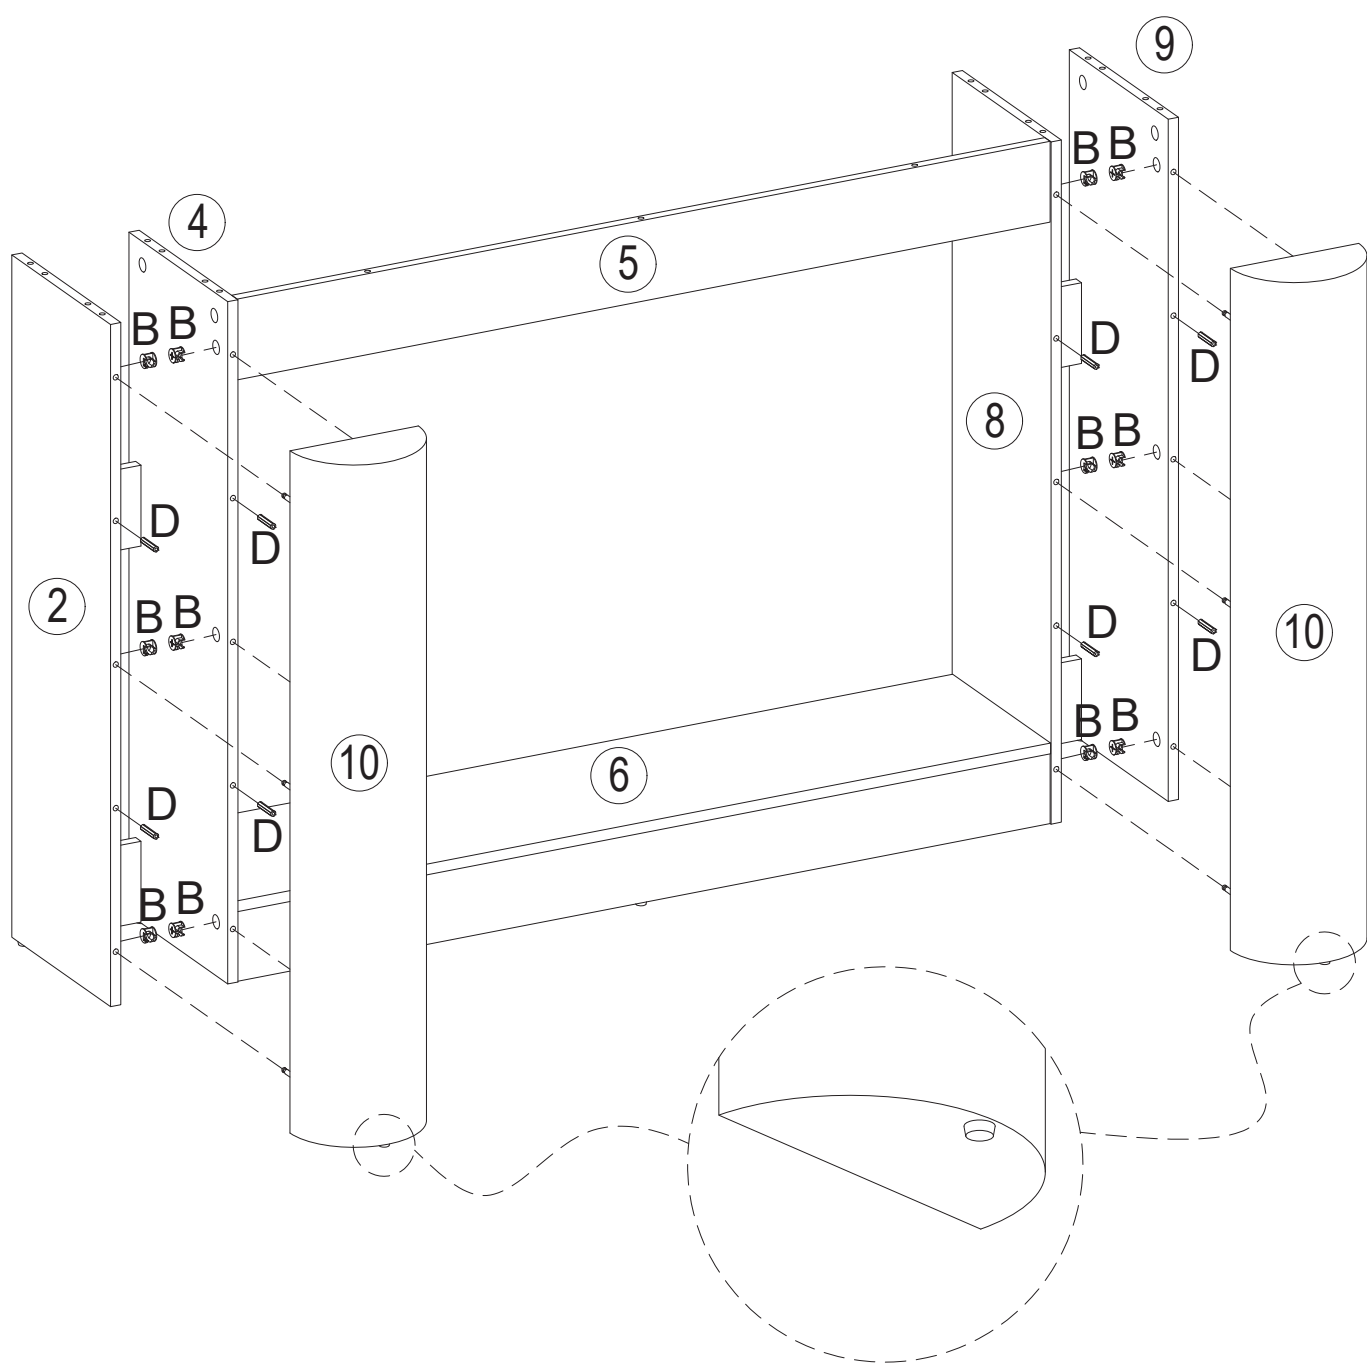


No. B
Quantity: 12 PCS
Cam
ø15x9.5mm





No. D
Quantity: 8 PCS
Dowel
ø6x30mm




No. I
Quantity: 1 PC

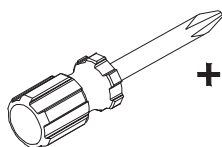

Step 12

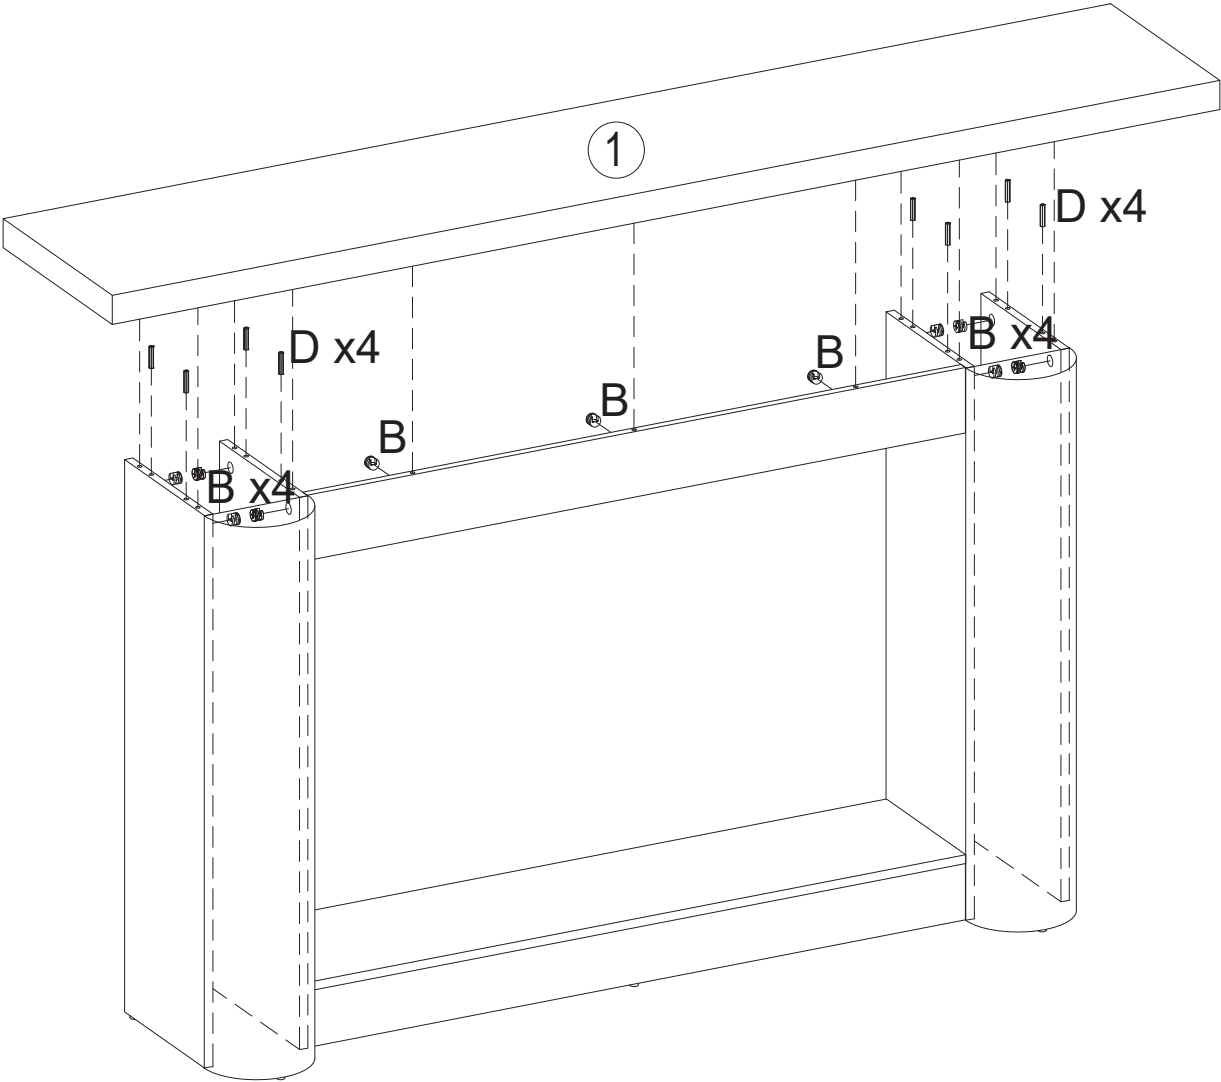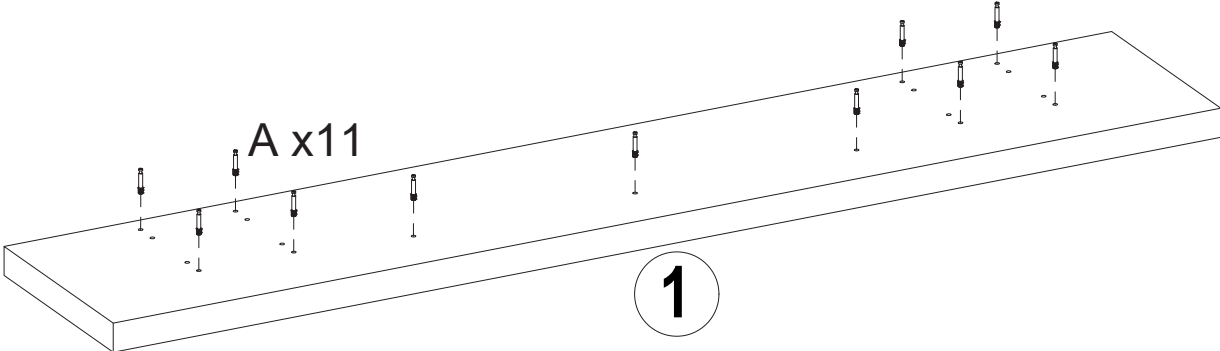


No. A
Quantity: 11 PCS
Cam Bolt
ø6x33.5mm

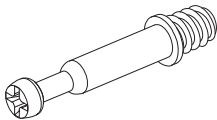


No. B
Quantity: 11 PCS
Cam
ø15x9.5mm




No. D
Quantity: 8 PCS
Dowel
ø6x30mm



Step 13

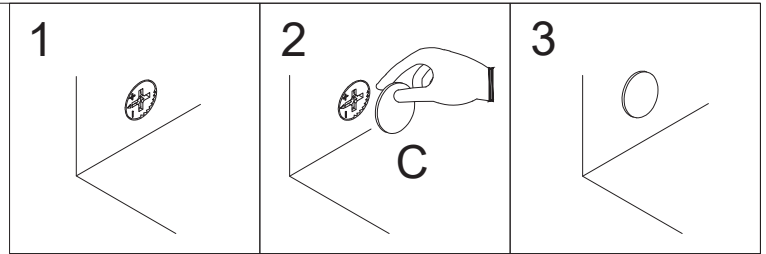


C is a cover, and B is a lock. Once B is installed, it will be very noticeable, so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

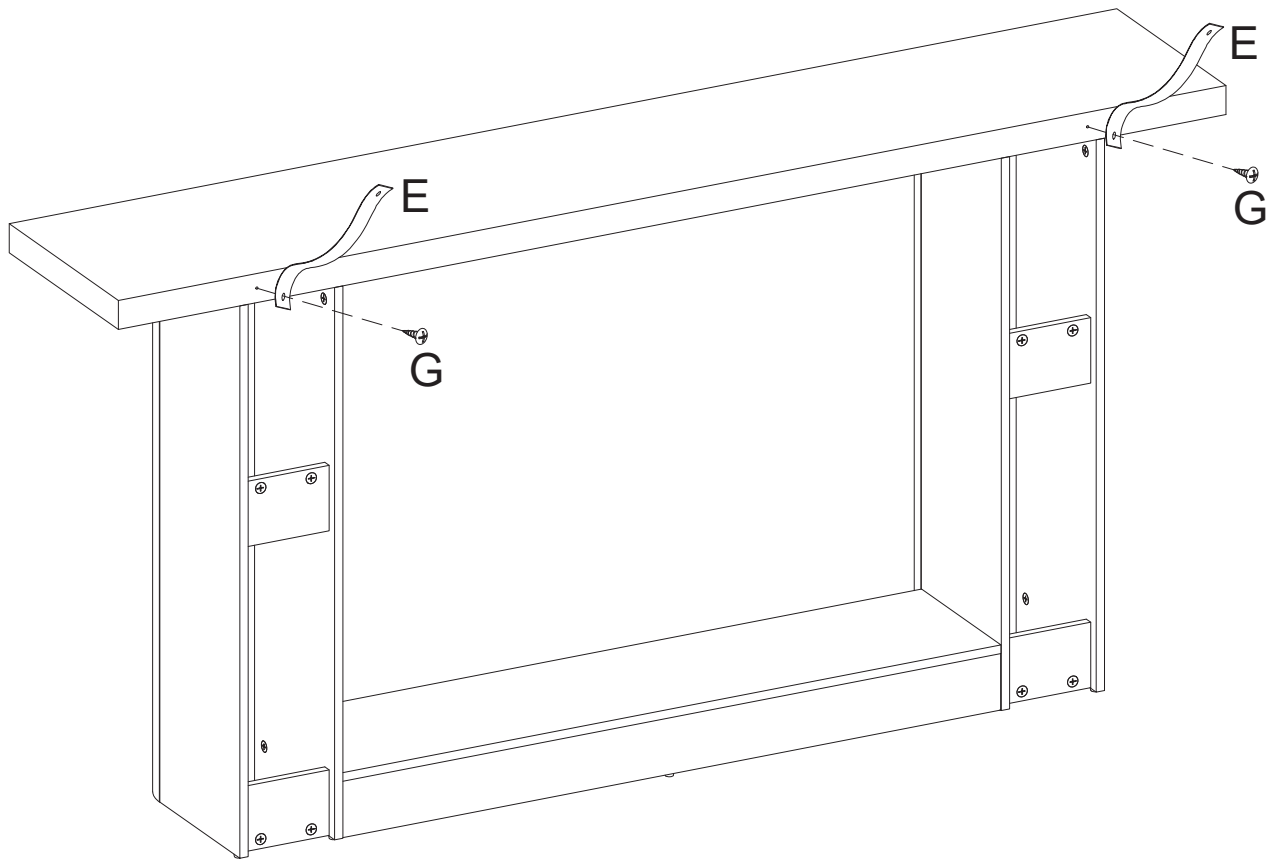


No. E

Quantity: 2 PCS
Anti-slip strip
190x20mm

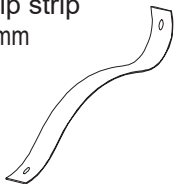

No. G

Quantity: 2 PCS
Screw
ø4x16mm




No. C


Quantity: 33 PCS
Sticker
ø20mm



Step 14

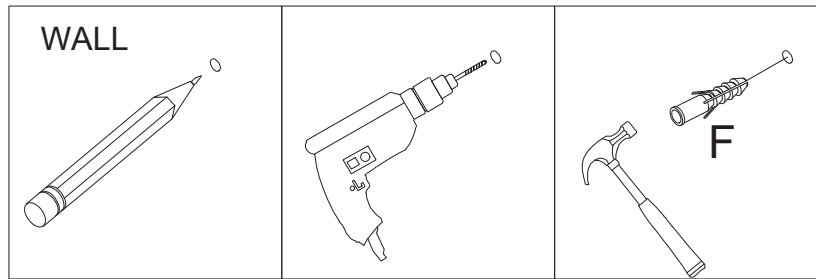


1. The customer must mark the desired mounting positions on the wall, then use their own hammer drill to drill holes into the wall surface.
2. Use a hammer to tap the two plastic expansion anchors into the wall.
3. Insert the corresponding screws into the plastic expansion anchors to complete the installation.

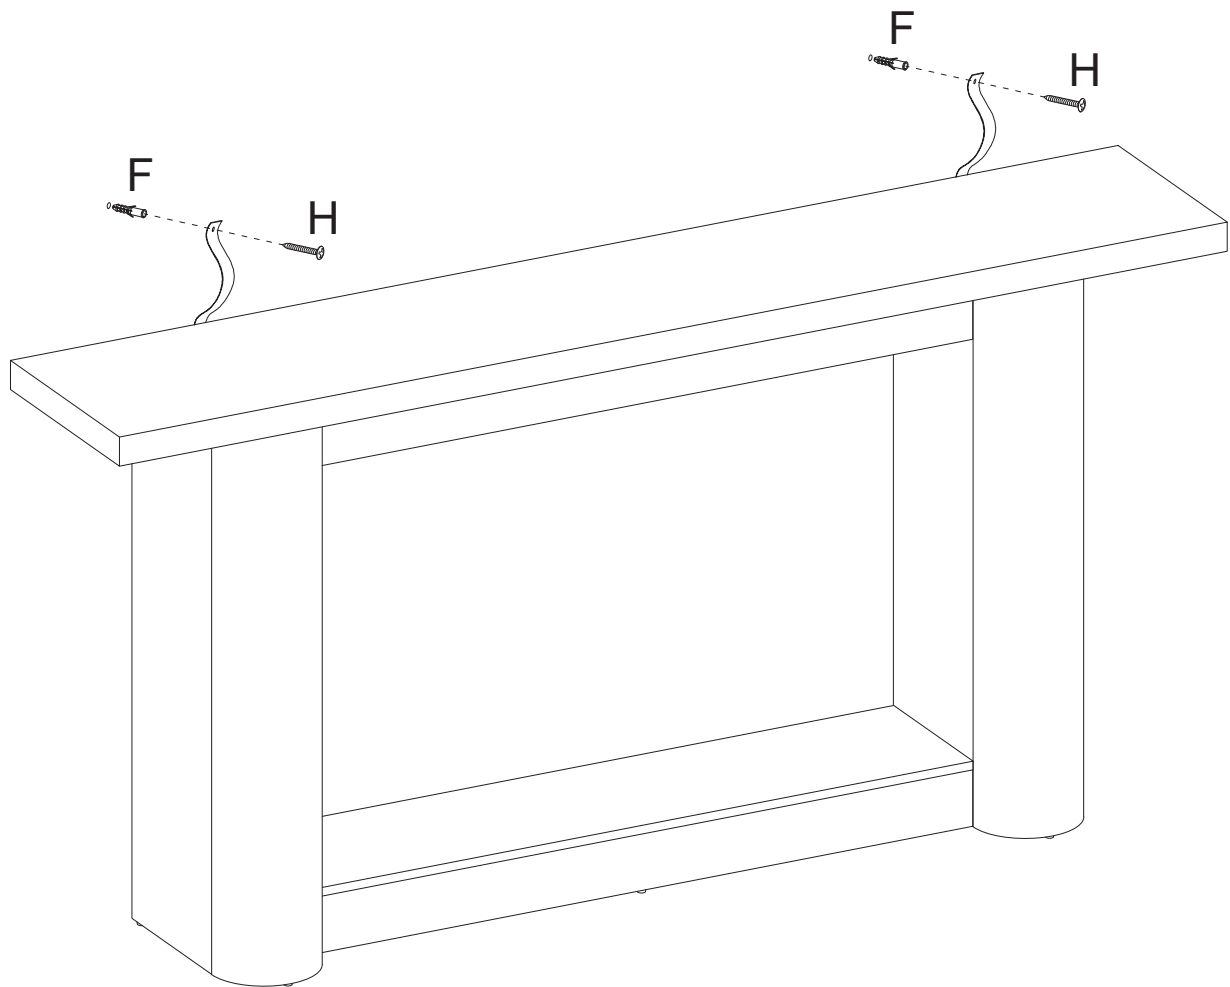


No. F

Quantity: 2 PCS
Plastic Expansion
ø8x40mm

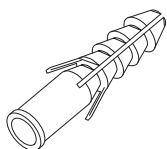

No. H

Quantity: 2 PCS
Screw
ø4x38mm

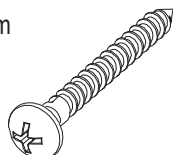

Step 15

