


Hardware List

 A
 Ø1/4"x12mm
 Bolt
 18 pcs

 B
 Ø1/4x30mm
 Bolt
 12 pcs


 C
 M4x55
 Wrench
 1 pc



Philips head screwdriver required for assembly (not included)


The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

Step 1

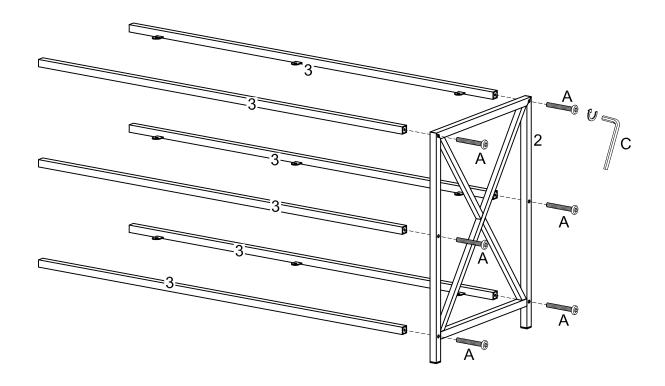


Use Wrench (C), Bolt (A) to secure the Support Bar (3) to the Side Frame (2).

Step 2

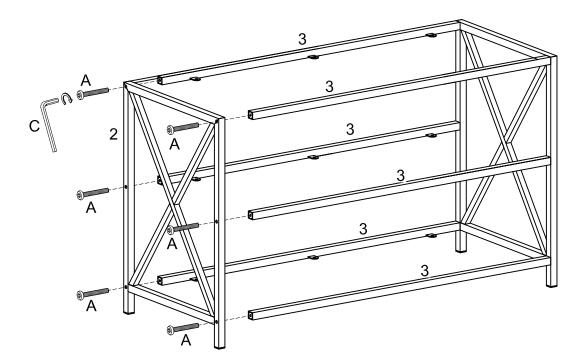


Use Wrench (C), Bolt (A) to secure the Support Bar (3) to the Side Frame (2).



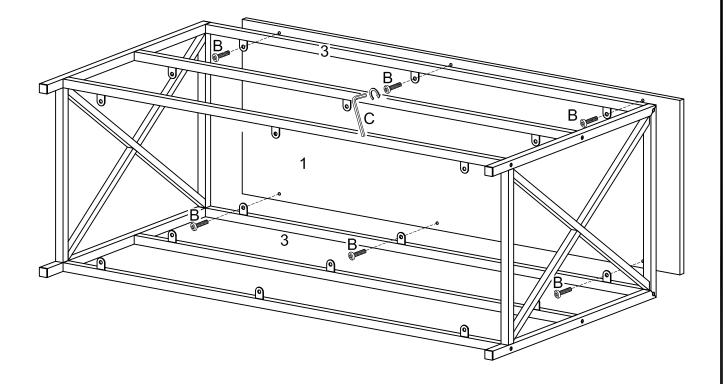


Use Wrench (C), Bolt (B) to secure the Support Bar (3) to the Top Panel (1).

Step 4

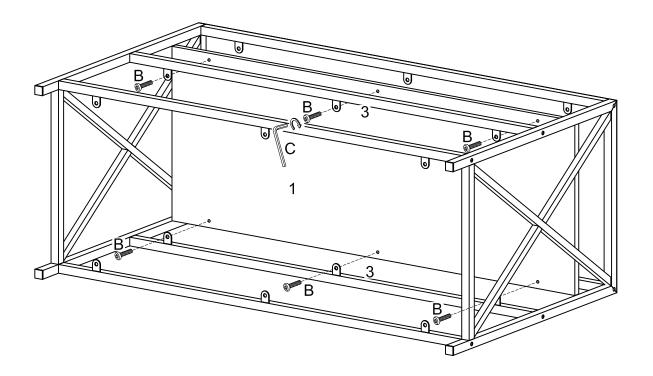

Use Wrench (C), Bolt (B) to secure the Support Bar (3) to the Shelf (1).



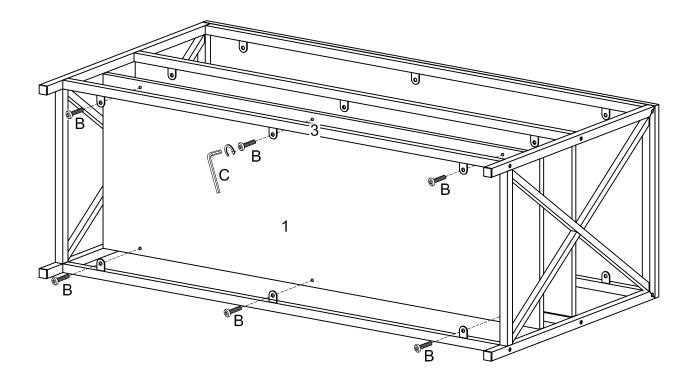

Use Wrench (C), Bolt (B) to secure the Support Bar (3) to the Bottom Panel (1).



