
SKU:H00141

THE BED
ASSEMBLY INSTRUCTIONS

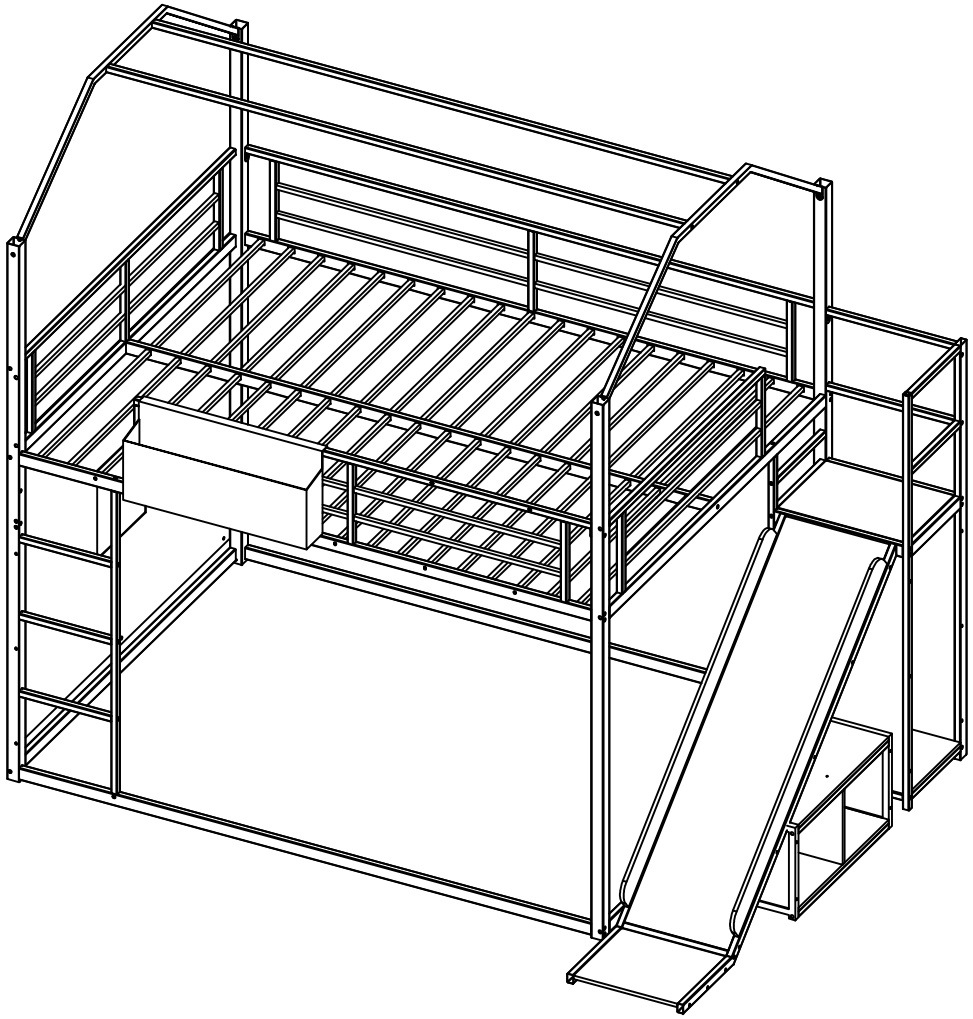

SAFETY WARNINGS AND GENERAL NOTES:


1. Follow the information on the warnings on the bunk bed end structure and on the carton. Do not remove the warning label from the bed.
2. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow children under 6 years of age to use the upper bunk.
4. Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.
5. Do not allow horseplay on or under beds.
6. Always prohibit jumping on the bed.
7. Prohibit more than one person on upper bunk.
8. Always use the ladder for entering and leaving the upper bunk.
9. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
10. Use of a night-tight may provide added safety precaution for a child using the upper bunk.
11. Always use guardrails on both long sides of the upper bunk.
12. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
The use of water or sleep flotation mattresses is prohibited.
13. **STRANGULATION HAZARD**-Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hooks, belts and jump ropes.
14. Keep these instructions for future reference.
15. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
16. Be certain all staples are out of the box before beginning assembly on the shipping carton.
17. USE ONLY MATTRESSES WHICH ARE AS THE TABLE BELOW ON UPPER AND ON LOWER BUNKS.

Up bed (bunk bed and tribed included)







Mattress size		Length	Width	Thickness
TWIN	Standard	73"-74"	38"-39"	8"

18. SURFACE OF MATTRESS MUST BE AT LEAST 5"(127MM) BELOW THE UPPER EDGE OF GUARDRAILS.
19. Replacement Parts:
Replacement Parts, including additional guardrails, may be obtained from any of our （Shenzhen Yuefeng Zhiqi Technology Co., Ltd）dealers.

Bed parts view

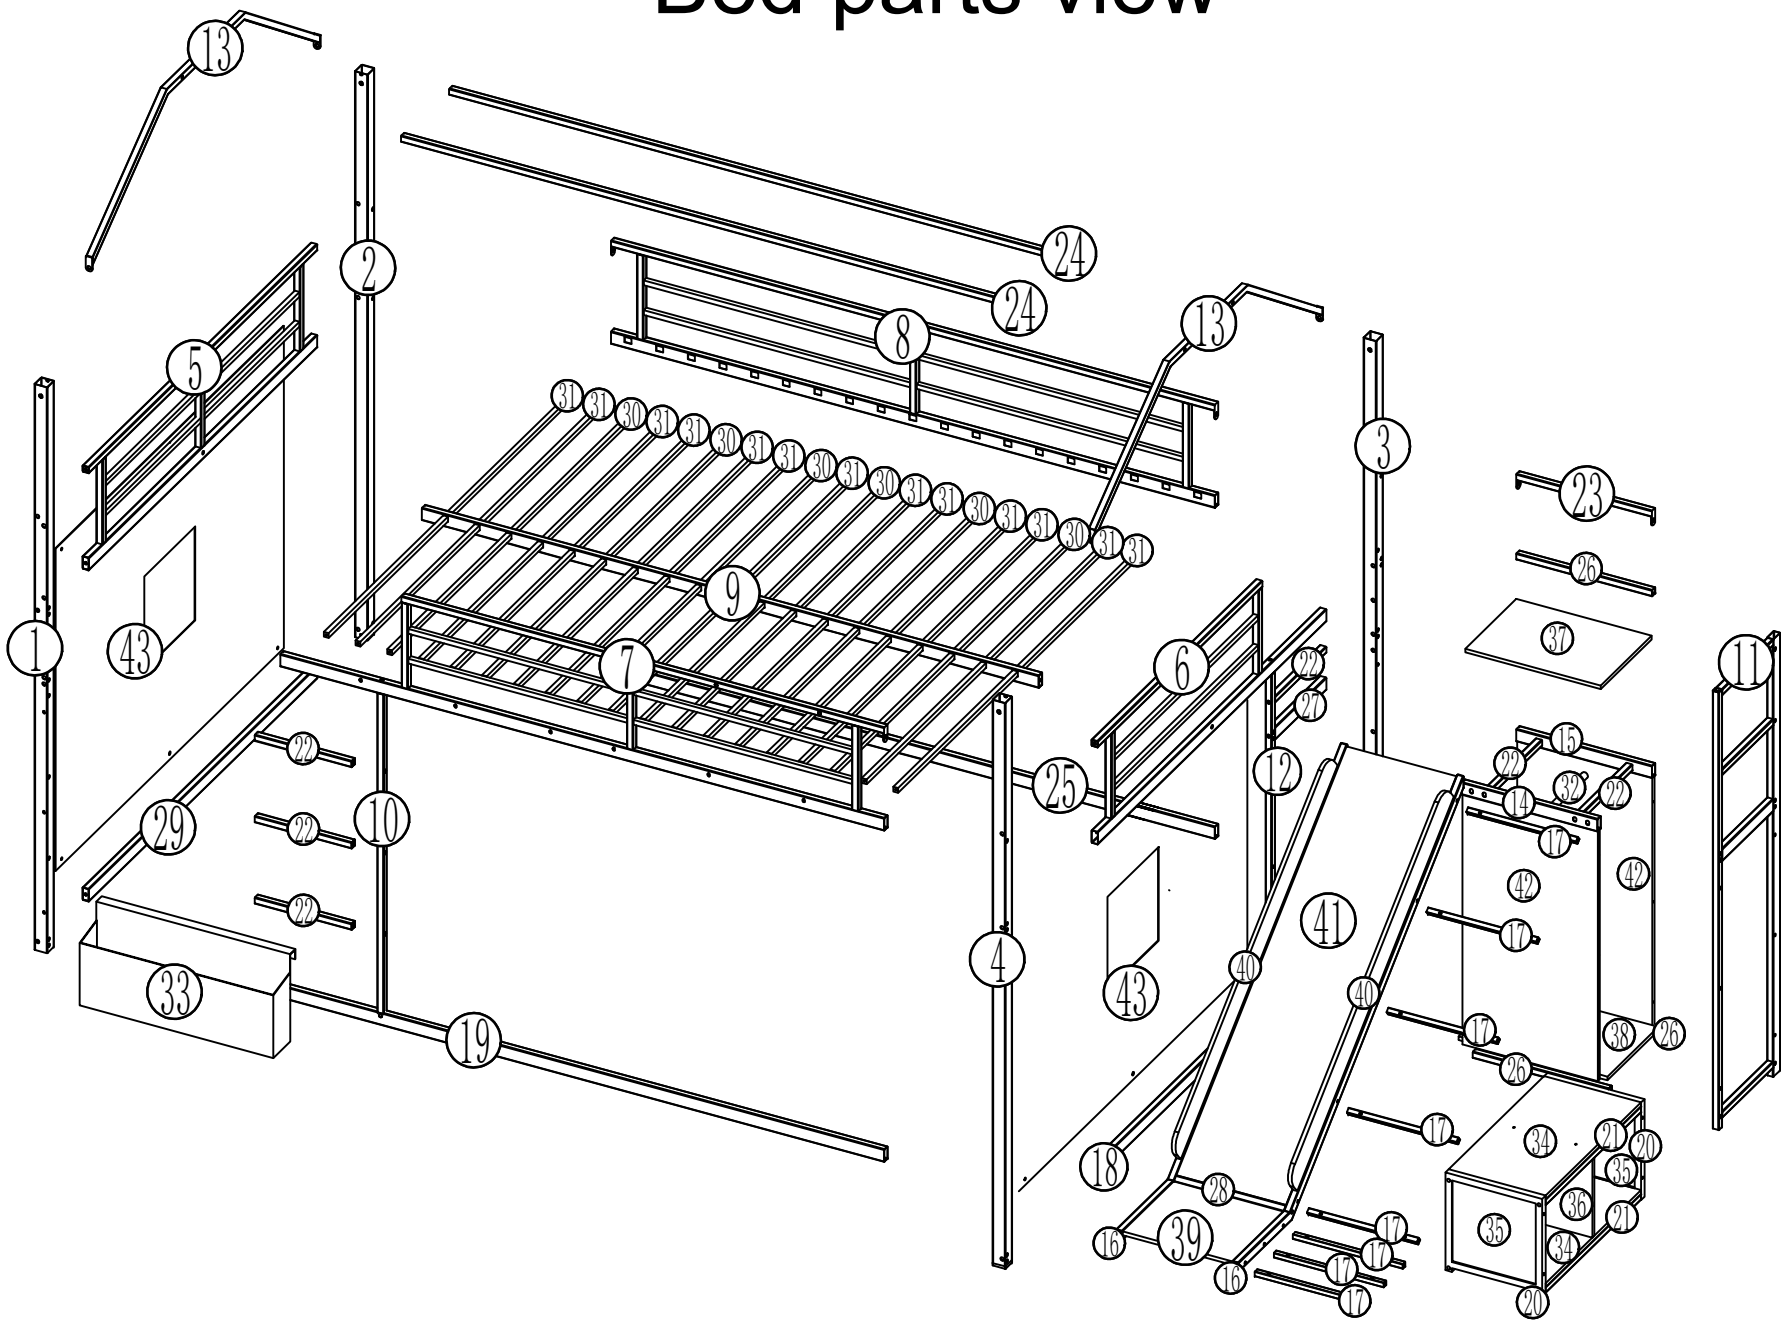

Part List

 1-1pcs	 2-1pcs	 3-1pcs	 4-1pcs	 5-1pcs	 6-1pcs	 7-1pcs
 8-1pcs	9-1pcs	 10-1pcs	 11-1pcs	 12-1pcs	 13-2pcs	 14-1pcs
 15-1pcs	 16-2pcs	 17-8pcs	18-1pcs	 19-1pcs	 20-2pcs	 21-4pcs
 22-6pcs	 23-1pcs	24-2pcs	25-1pcs	 26-3pcs	 27-1pcs	 28-1pcs
 29-1pcs	30-6pcs	31-13pcs	 32-1pcs	 33-1pcs	 34-2pcs	 35-2pcs
 36-1pcs	 37-1pcs	 38-1pcs	 39-1pcs	40-2pcs	41-1pcs	42-2pcs
43-2pcs						


Hardware List

C 8*35 49PCS	D 8*55 38PCS	E 6*25 32PCS	1pcs	Z 10pcs	F 8*18 9PCS	K 38PCS	H M4*55 13PCS	B M8*18 1PCS	G M4*35 21PCS	O 1PCS	L M8=2PCS M6=1PCS	M 1PCS	W 6*3 16PCS	R M4*25 8PCS	Y 6*30 16PCS

Step 1

Attention

Be careful of the large holes.

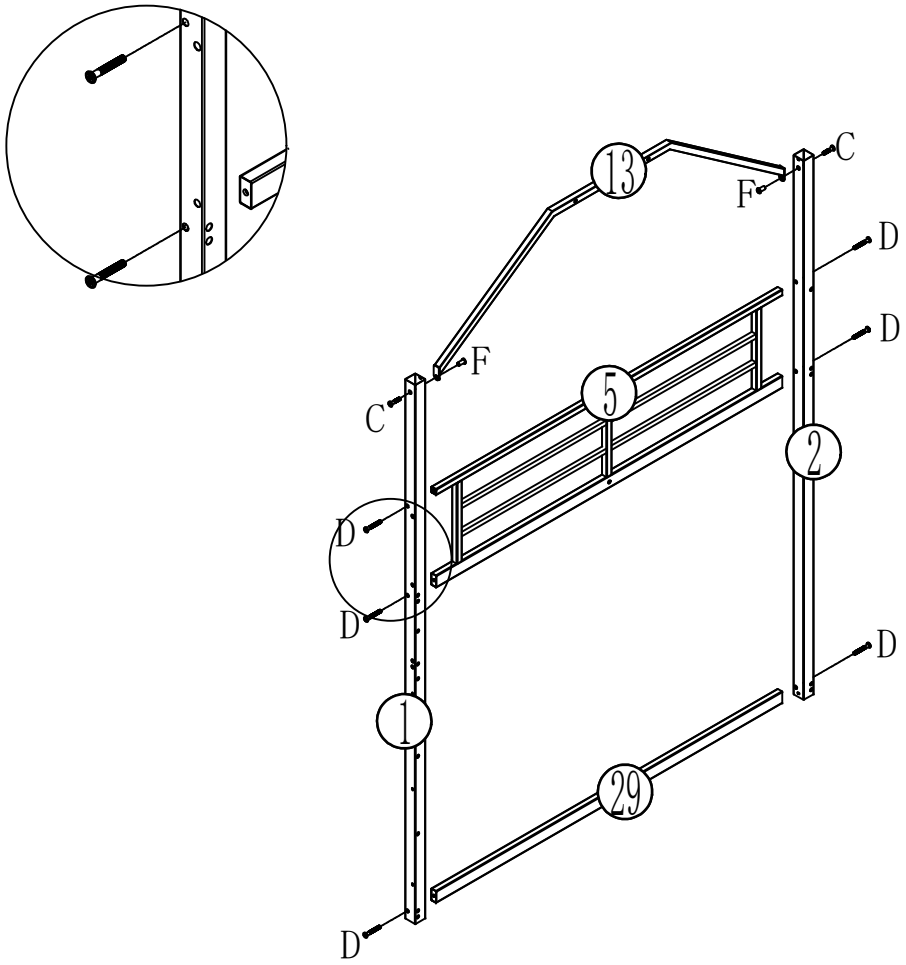


D 8*55-6PCS	C 8*35 2PCS	F 8*18-2PCS	L

Step 2


Attention

Be careful of the large holes.

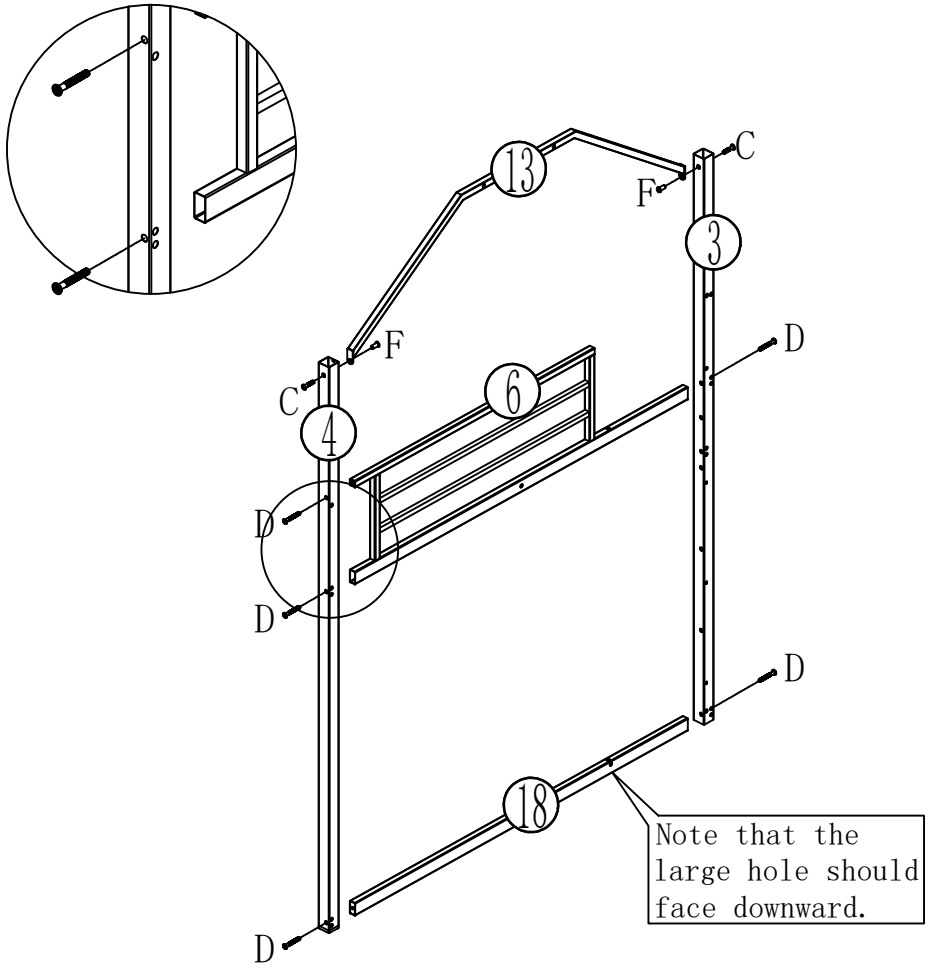


D 8*55-5PCS	C 8*35 2PCS	F 8*18-2PCS	L

Step 3

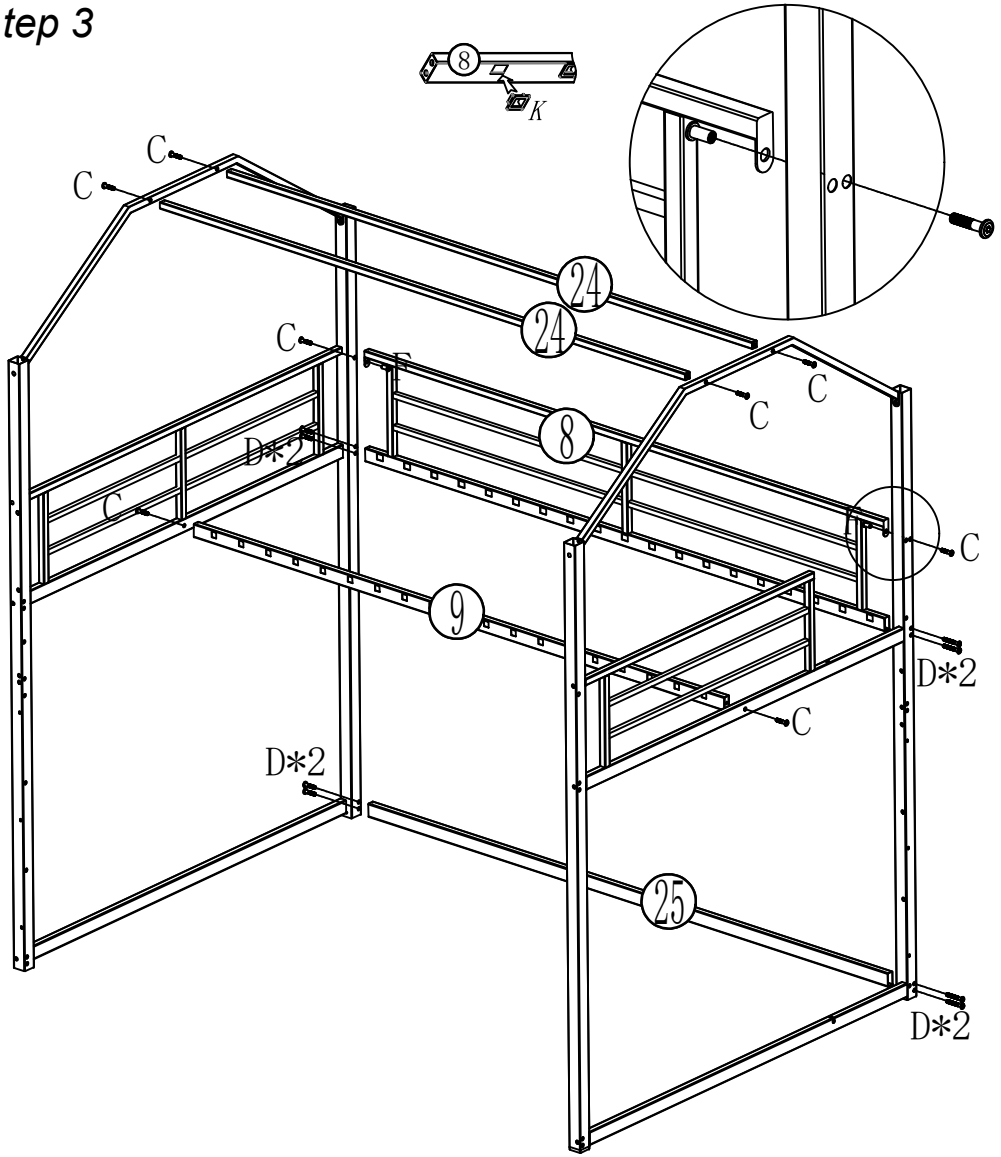


D 8*55-8PCS	C 8*35 8PCS	F 8*18-2PCS	K 19PCS	L

Step 4

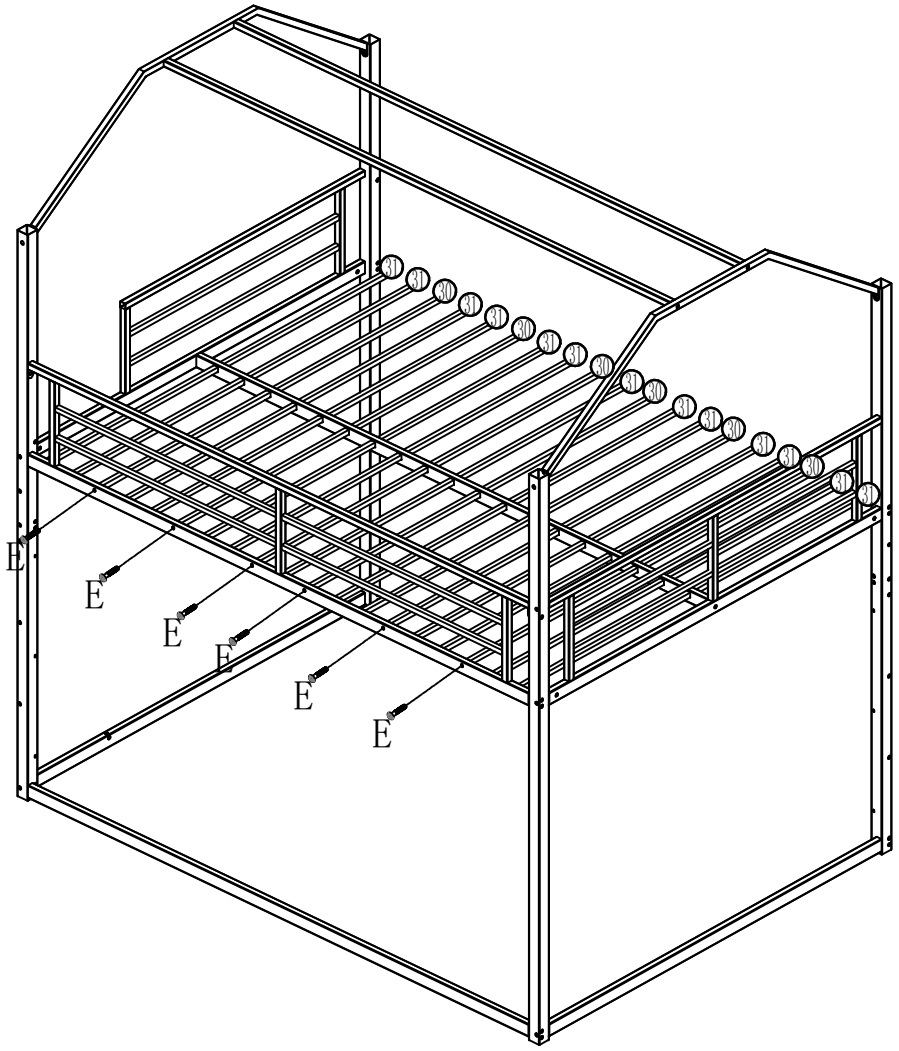

E 6*25-6PCS	L

Step 5

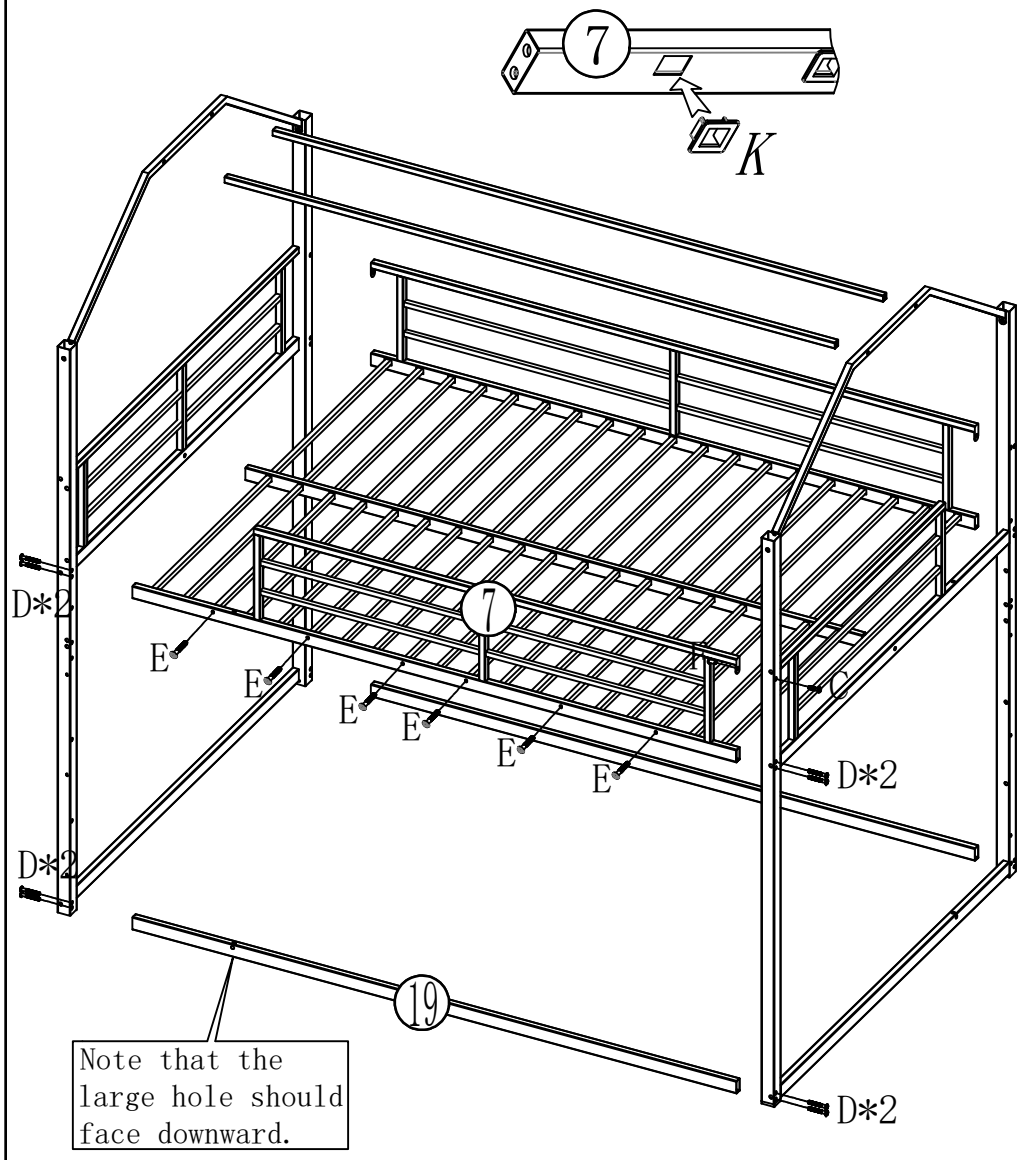


D	C	E	F	K	L
8*55-8PCS	8*35 1PCS	6*25-6PCS	8*18-1PCS	19PCS	

Step 6

First, install this step.


Pay attention to the installation direction

Attention

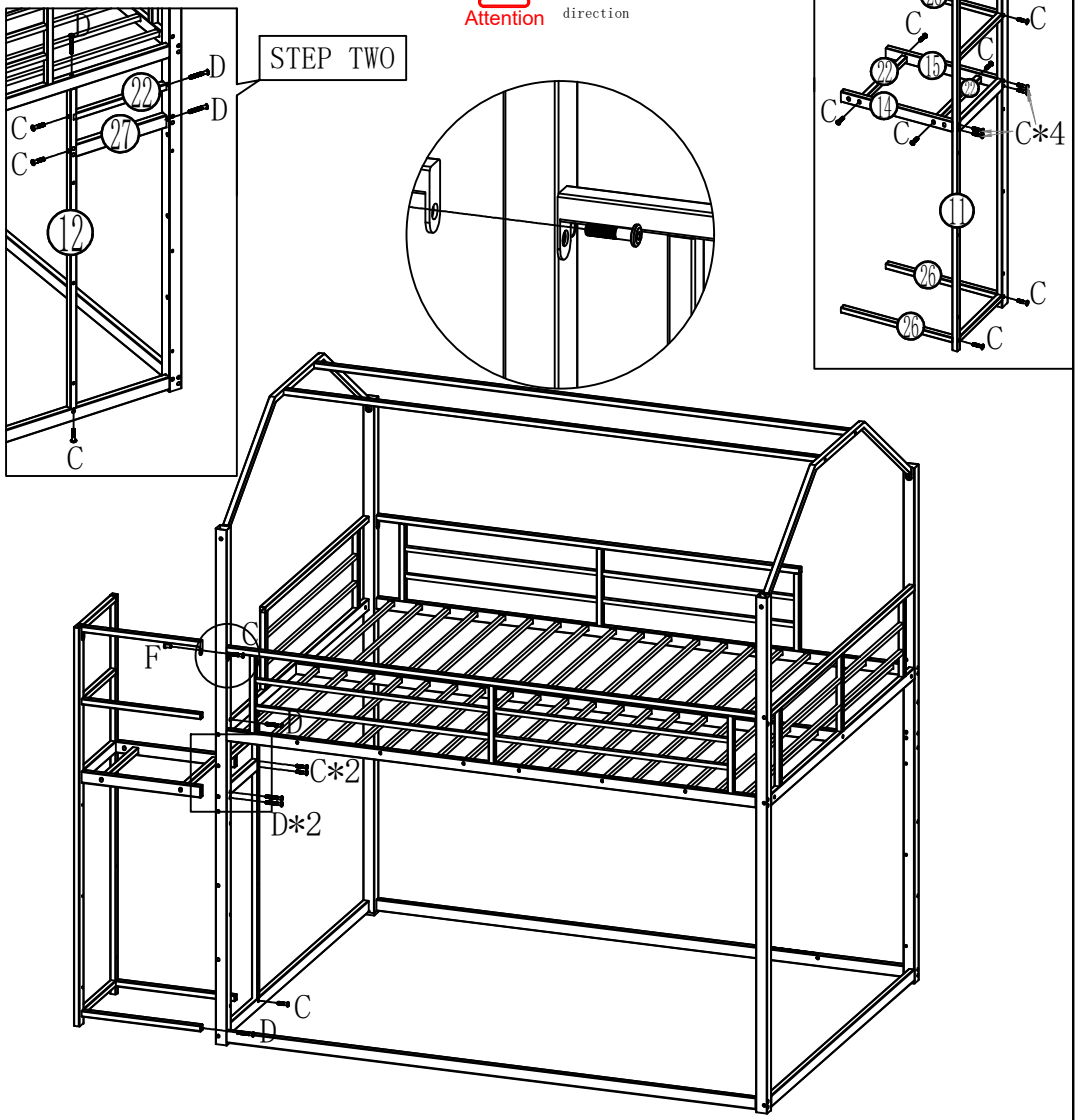


D	C	F	B	L
8*55-7PCS	8*35 18PCS	8*18-2PCS	8*18 1PCS	

Step 7

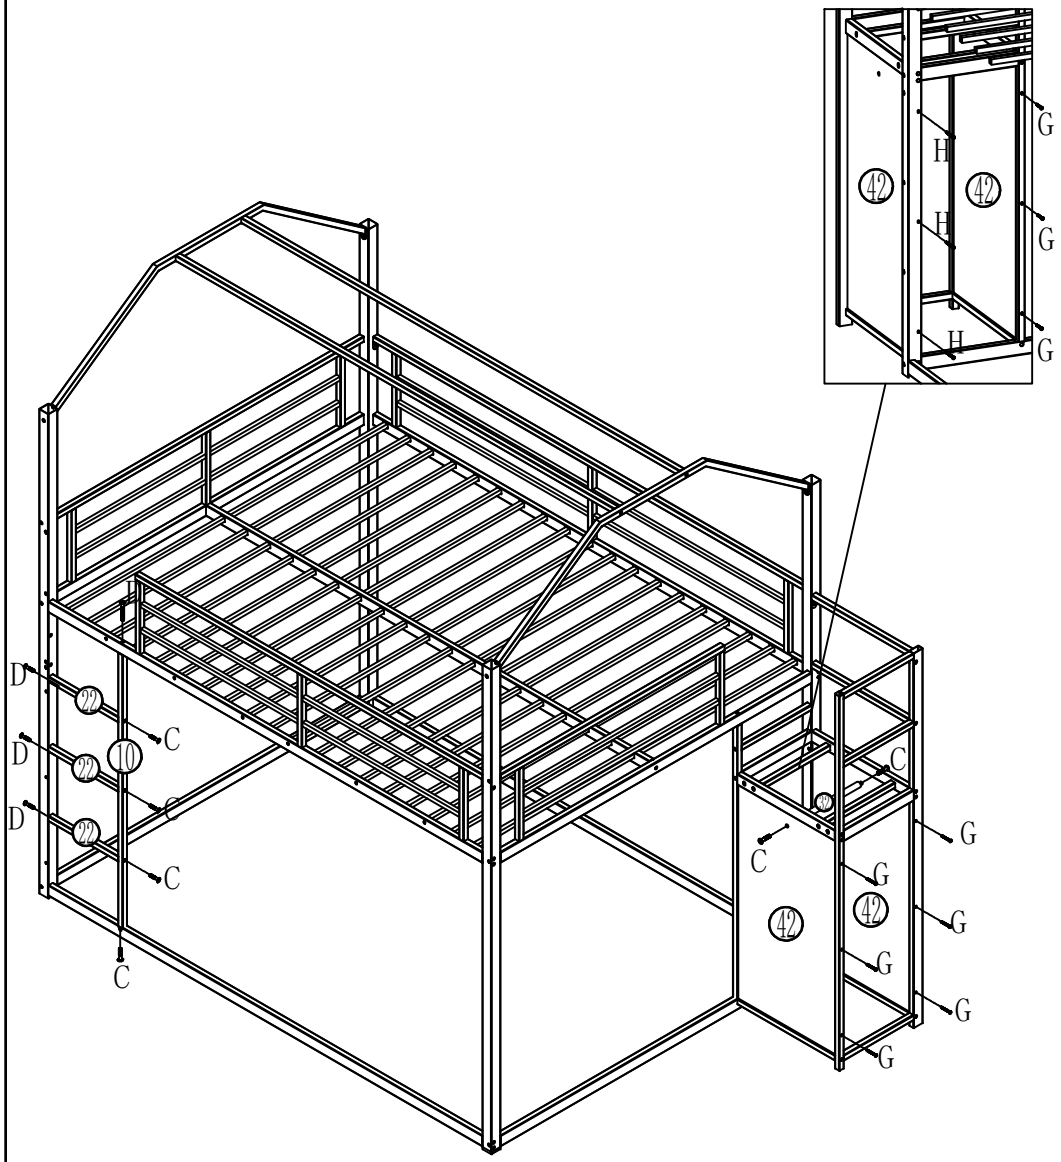


G	C	D	H	M	L
M4*35 9PCS	8*35 6PCS	8*55 4PCS	M4*50 3PCS	1PCS	

Step 8

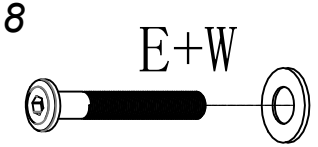


In this step, washers must be installed with the screws to prevent damage to the wooden board.

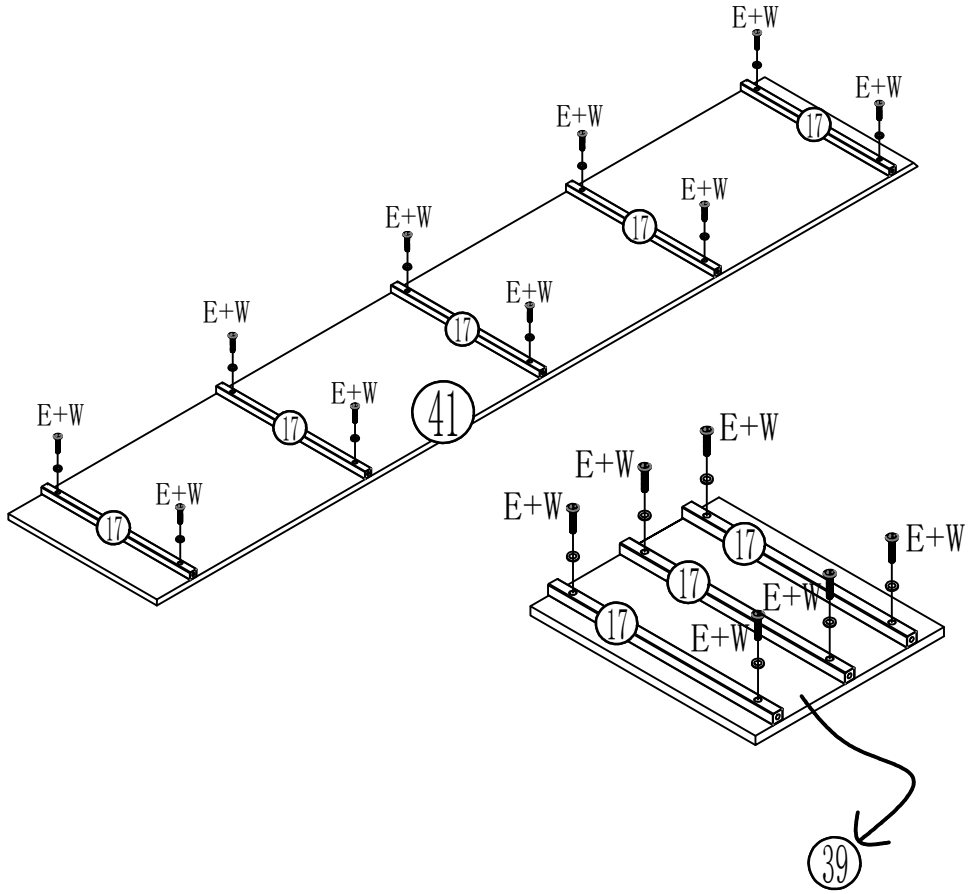


E	W	L
6*25-16PCS	6*3-16PCS	


Step 9

First, fix the handrails of the slide properil.

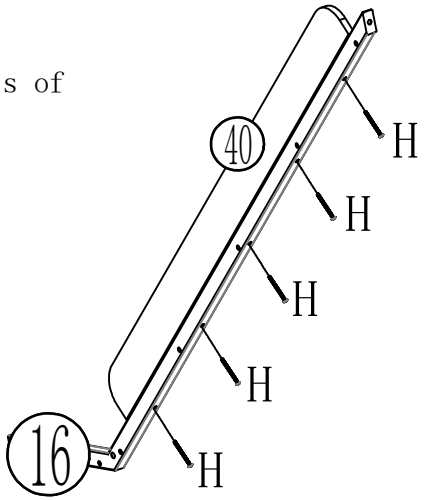


X2

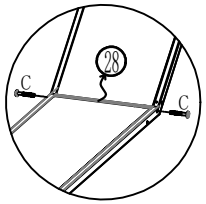

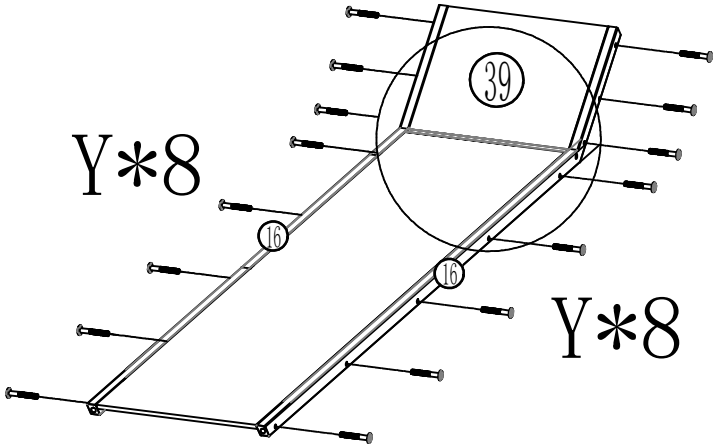


Y 6*30-16PCS	C 8*35 2PCS	H 4*55 10PCS	M	L

Step 10

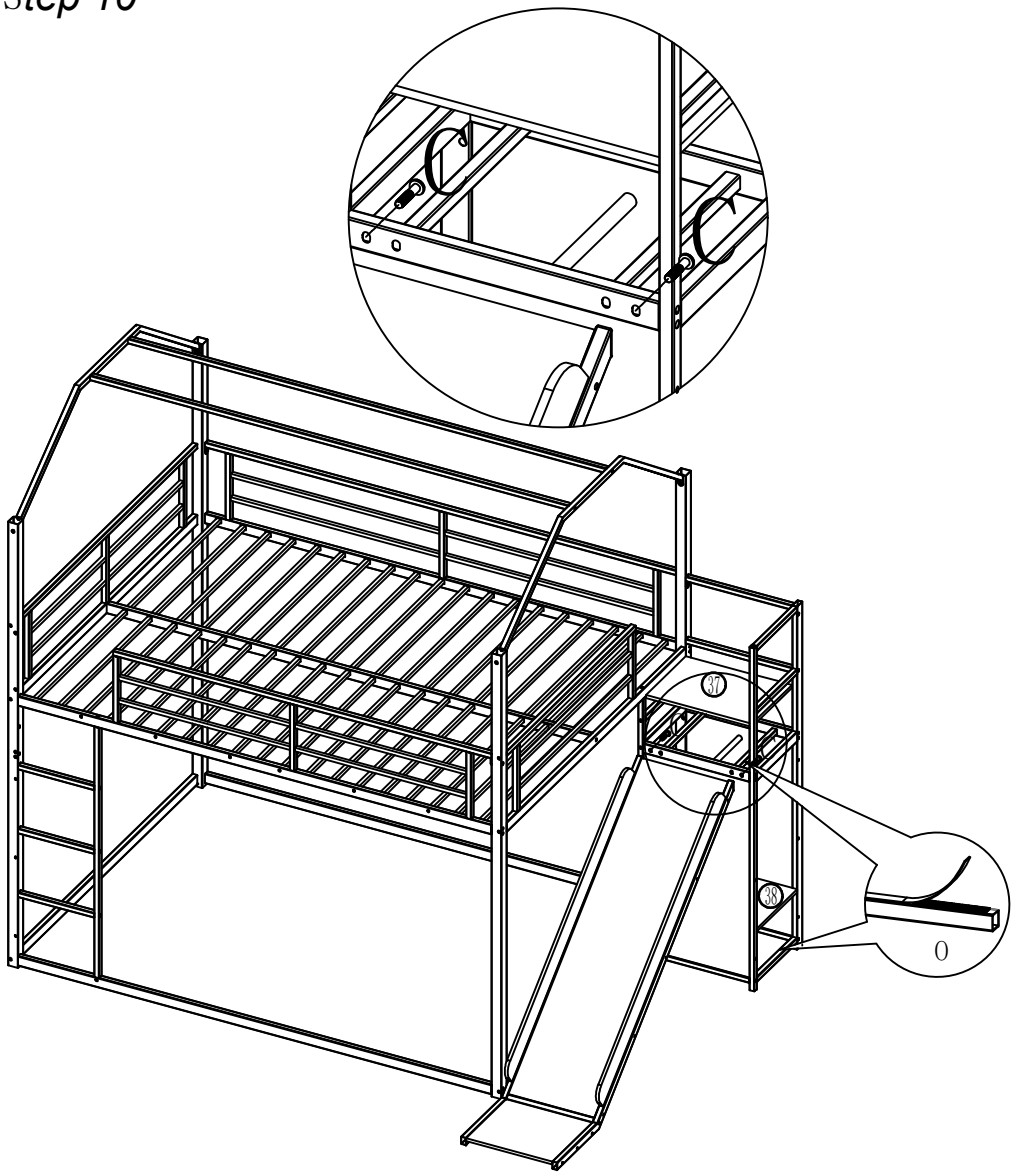

C 8*35 2PCS	O	L


Step 11

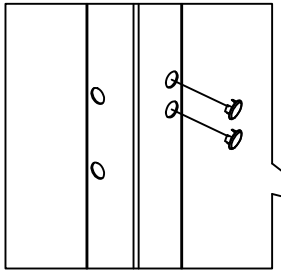

Attention

When assembling No. 43, first remove the two C screws used when assembling No. 9, and then fix No. 9 and No. 43 together onto the guardrail.


After assembly, use part Z to block the extra holes.

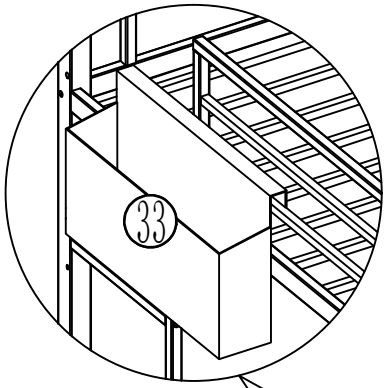

Hang #33 on the guardrail.

 S 6*10-2PCS	 Z-10pcs	 L


Step 12

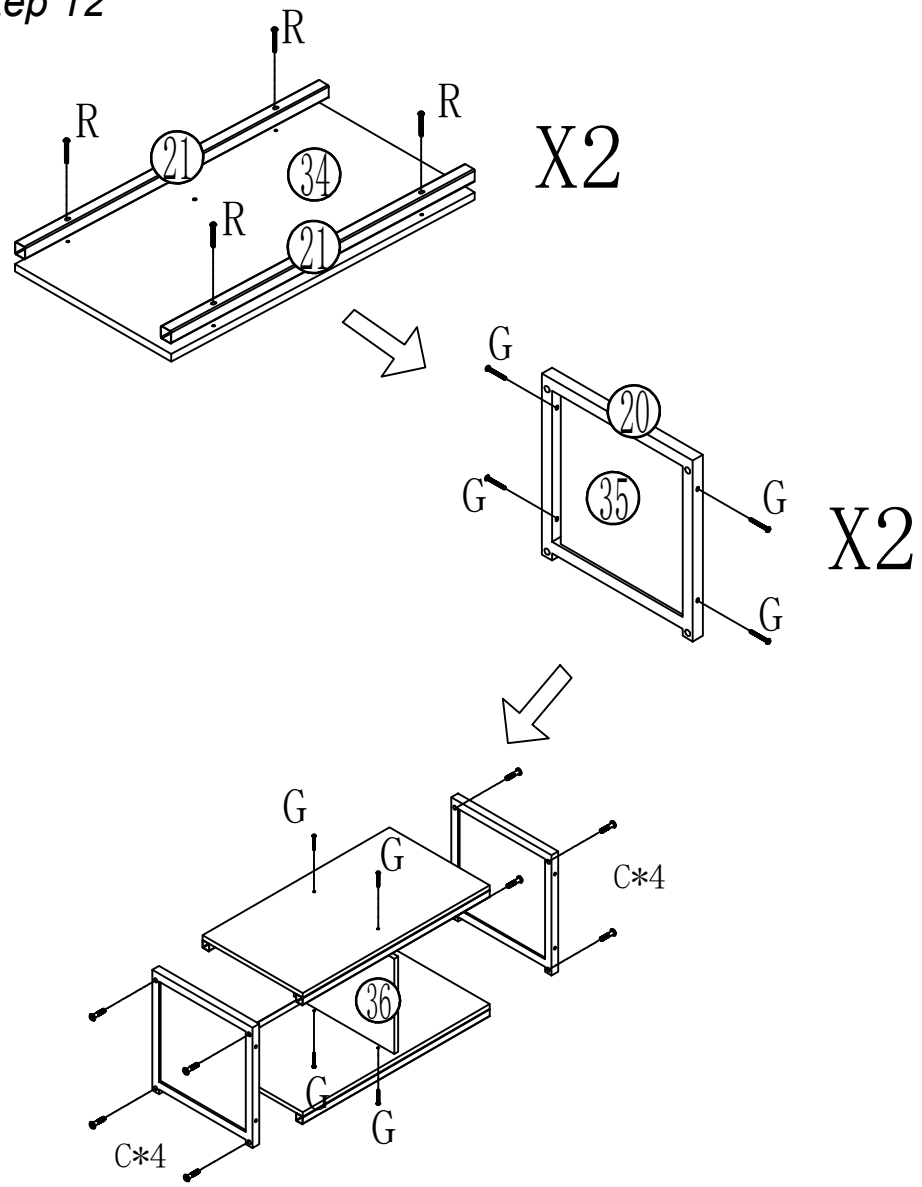

R 4*25 8PCS	G 4*35 12PCS	C 8*35 8PCS	M	L

Step 13


The light strip is stuck to the lower side of the large guardrail.

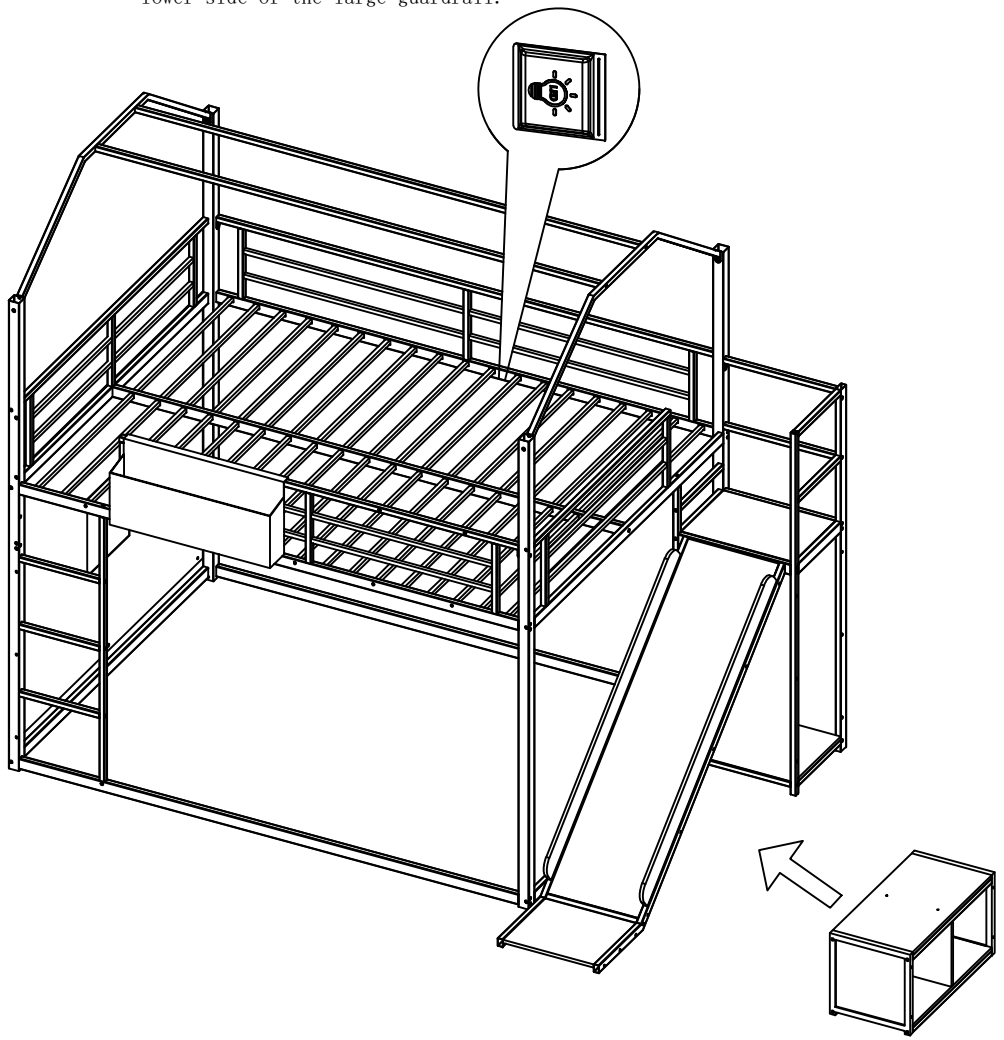

Put the assembled cabinet under the slide.



Completed loft bed

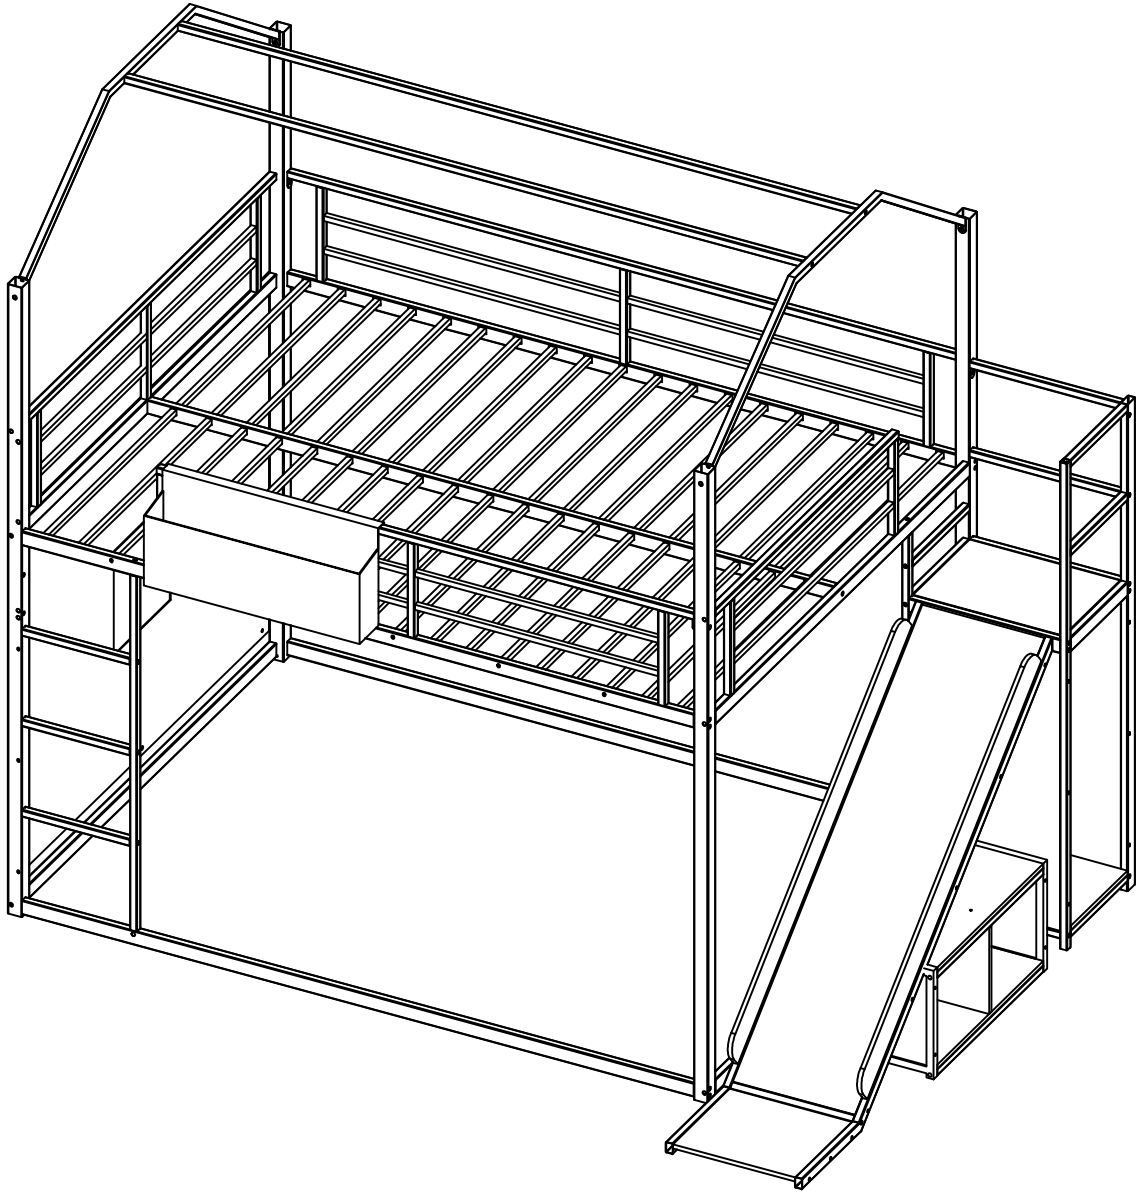

Attention

Please make sure all bolts are fastened before use, thank you.