


SUNBRELLA® STOCKED DRAPERY

MEASURE AND INSTALL GUIDE

HOW TO MEASURE AND HANG SUNBRELLA STOCKED DRAPERY

Sunbrella stocked drapery window treatments elevate any setting with fade-resistant color, long-lasting strength and timeless beauty—and it's easy to install them like a pro.

This guide will explain how to properly measure your windows before ordering your drapery and hang them properly once they arrive. To get started, all you need is a measuring tape and something to record and calculate your measurements.

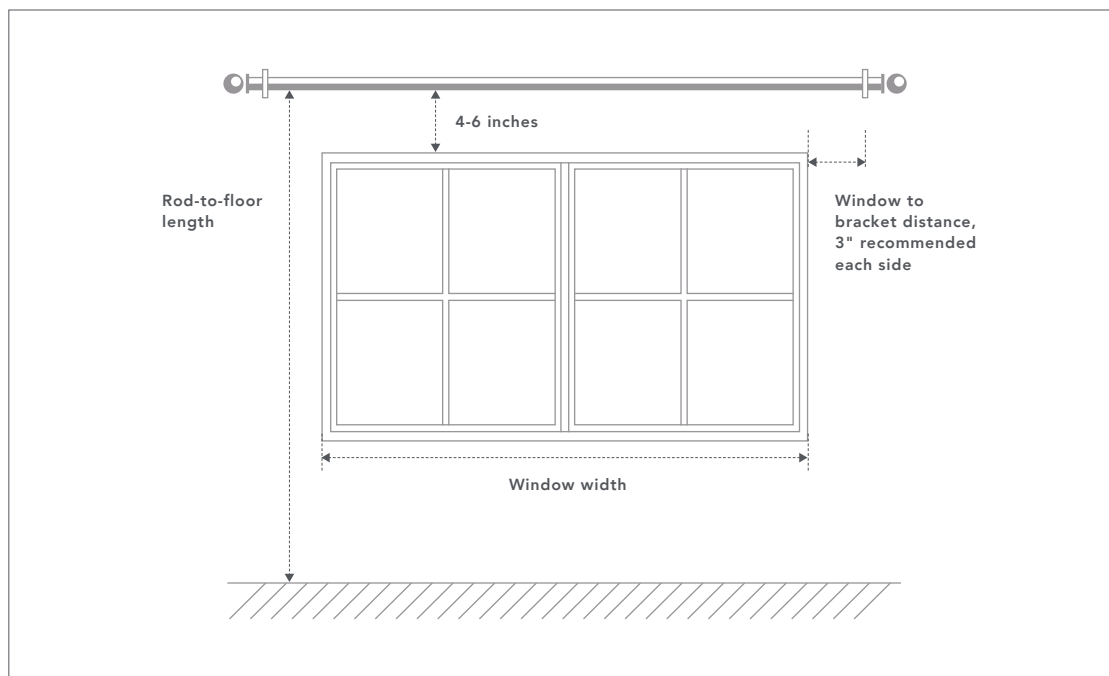

MEASURING FOR YOUR DRAPERY

You'll need to start by measuring your windows to ensure the perfect fit before you place your order.

Measuring Width

1. First, measure the width of your window. If your window has molding around it, measure from the outer edges of the molding.
2. Record the width and add 3" to each side for ideal placement of your brackets.
3. Multiply the width by two to allow for the recommended fullness and coverage.
4. Take that number, and divide it by 50, which is the width of each drapery panel.
5. Round your answer up to the nearest whole number to get your minimum panel purchase quantity.

EXAMPLE:

1. Window width = 70"
2. $70 + 6 = 76$ " including additional 3" per side for rod brackets
3. $76 \times 2 = 152$ to allow for fullness and coverage
4. $152 \div 50 = 3.04$
5. Round 3.04 up to 4

In this example, you would order 4 panels for ideal coverage and fullness.

Measuring Length

First, measure the length from your curtain rod to the floor. If you need to install a curtain rod, it should be placed 4-6" above the top of the window.

Next, choose from the available lengths for your chosen drapery style based on your rod-to-floor measurement. Choose a shorter length if you want the clean, crisp look of drapes that float just above the floor or kiss the floor, and a longer length if you want the dramatic, elegant look of drapes that puddle or pool on the floor.

CHOOSING YOUR HEADER STYLE

The header style you choose to hang your curtains can make a big difference in the overall aesthetic. Sunbrella curtains are offered in two header styles:

- A three-in-one construction that gives you options to hang from the rod pocket, back tabs or clip rings.
- A grommet style that simply slips onto your curtain rod.



If you choose to use clip rings, please note:

- Clip rings are sold separately, and you'll need to purchase seven clip rings for every 50" curtain panel you use.
- You'll need to adjust your final length measurement by hanging the rings from the rod, then subtracting the height of the rod and rings together.

HANGING YOUR CURTAINS

When your curtains arrive, you'll have them hanging up in no time. Here's how to hang each style:

Rod Pocket, Back Tab or Grommet

To hang with a rod pocket, back tabs or grommets, just slide your curtain rod through the pocket, tabs, or grommet rings, and hang the rod on the brackets.

Clip Rings

To hang with clip rings, lay the panel flat and attach a clip ring at the center of each tab, then slip the rings onto the curtain rod and hang the rod on the brackets.