
INSTRUCTION MANUAL

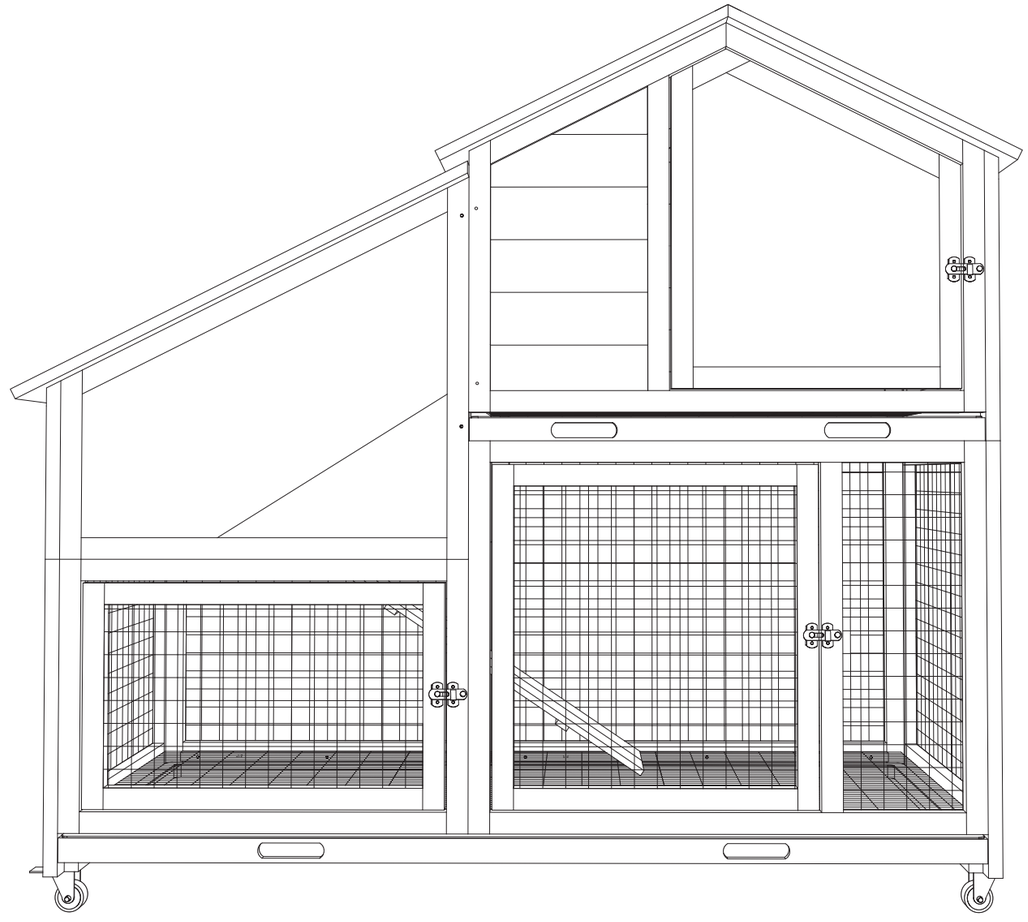

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

RABBIT HUTCH STYLE B

The product is divided into two boxes, box A and box B.

Scan the QR code to view the video tutorial

⚠ NOTICE

Please retain these instructions for future reference

1. Firmly secure all bolts,screws and knobs before use.
2. Reconfirm that all bolts,screws,and knobs are secure every 90 days.
3. Fasten screws loosely during initial assembly.
   Do not fully tighten screws until the item is completely assembled.
4. Do not use or store this item in the proximity of open flame or flammable chemicals.
5. Be aware that some parts are heavy and have sharp edges.
6. Be aware that moving parts can injure,crush and cut.
7. If any parts are missing,broken,damaged,or worn,stop using this product until repairs are made.
8. Do not use this item in a way inconsistent with the manufacturer' s instructions as this could void the product warranty.

TOOLS REQUIRED



SCREWDRIVER



DRILL




2 PERSON ASSEMBLY



APPROXIMATELY 50MIN ASSEMBLY

PARTS LIST

1

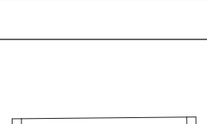

1PC


2

1PC

3


1PC

4

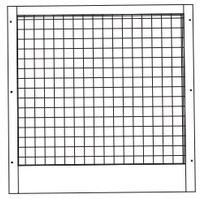


1PC

5

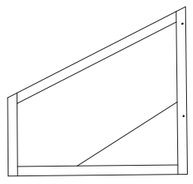


1PC

6

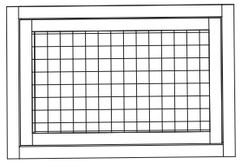


1PC

7

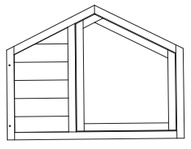


1PC

8

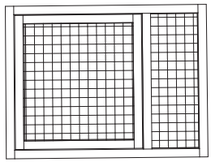


1PC

9

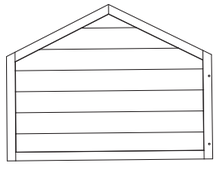


1PC

10

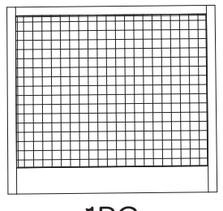


1PC

11

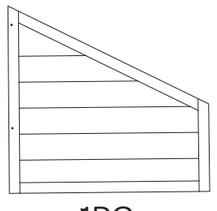

1PC

12

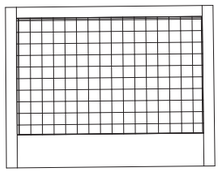



1PC

STEP 20

F ×3


D ×12

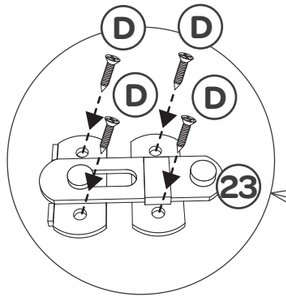

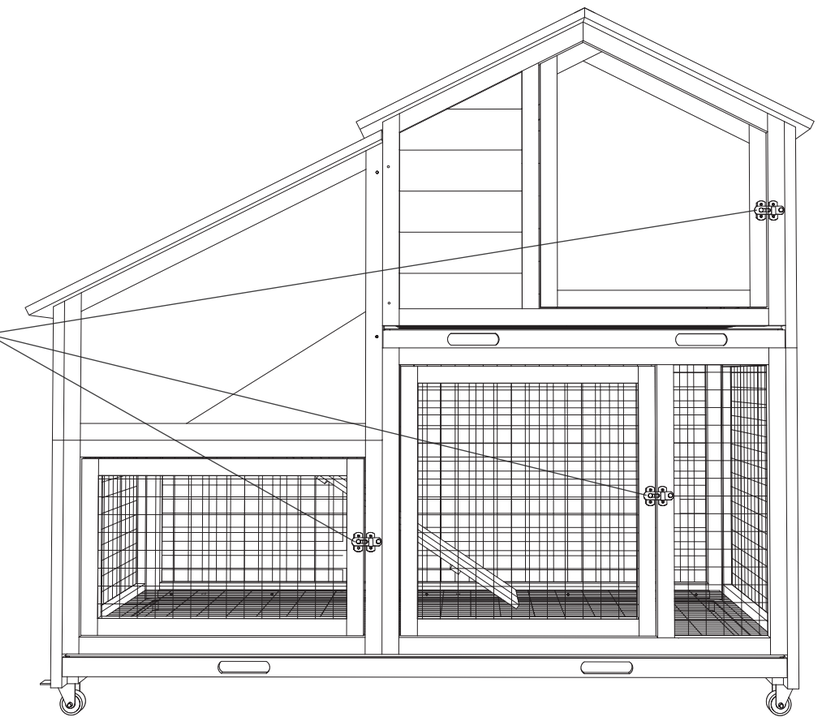

Attach 3 pcs of door latches F on the door with 12 pcs of D screws.


STEP 21

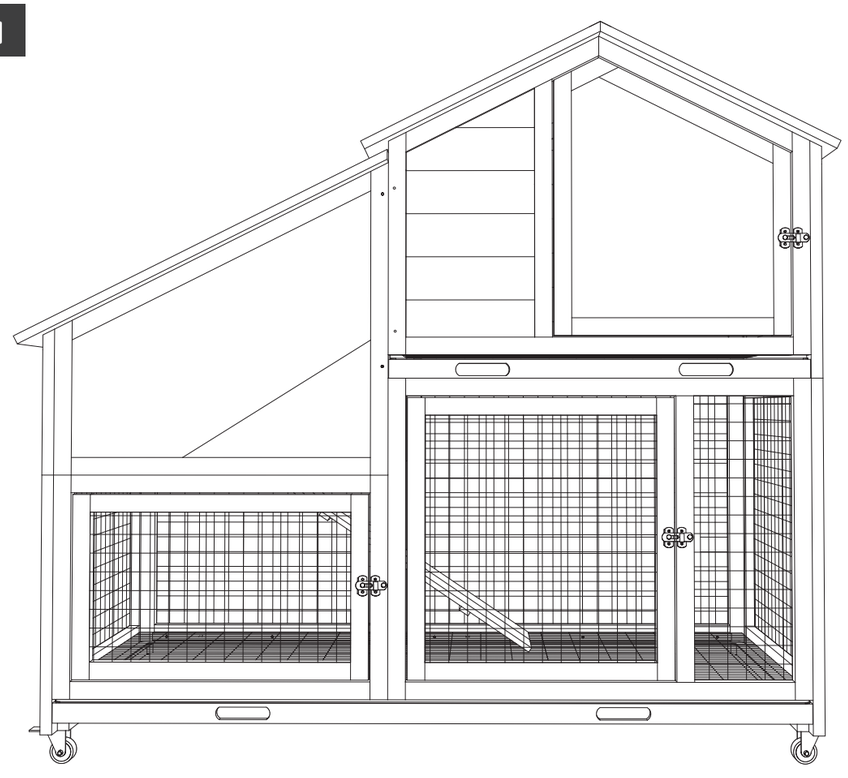

Congratulations on your completion!

STEP 18

23 ×1

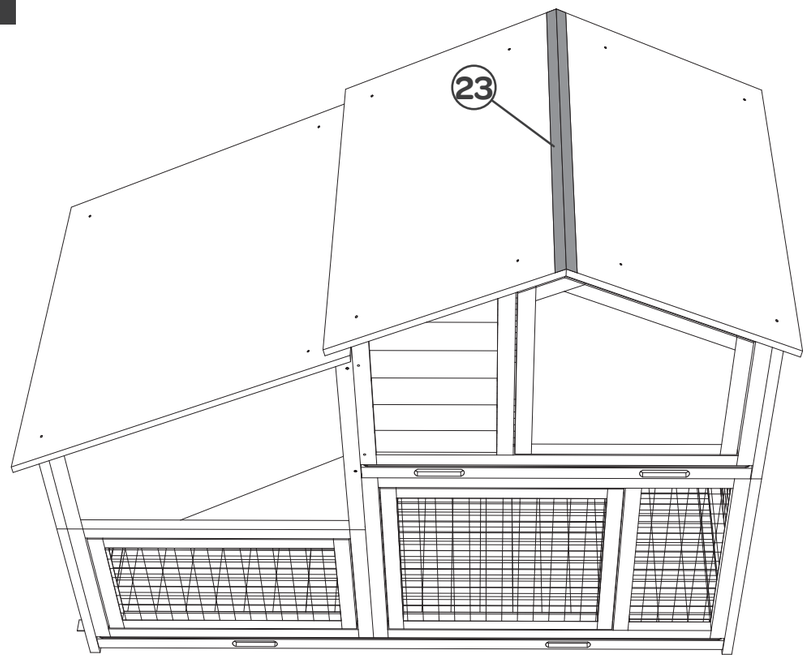


Attach a sealing strip to the sharp part of the roof, and then press it firmly to ensure a secure fit.

STEP 19

G ×2


H ×2

D ×20

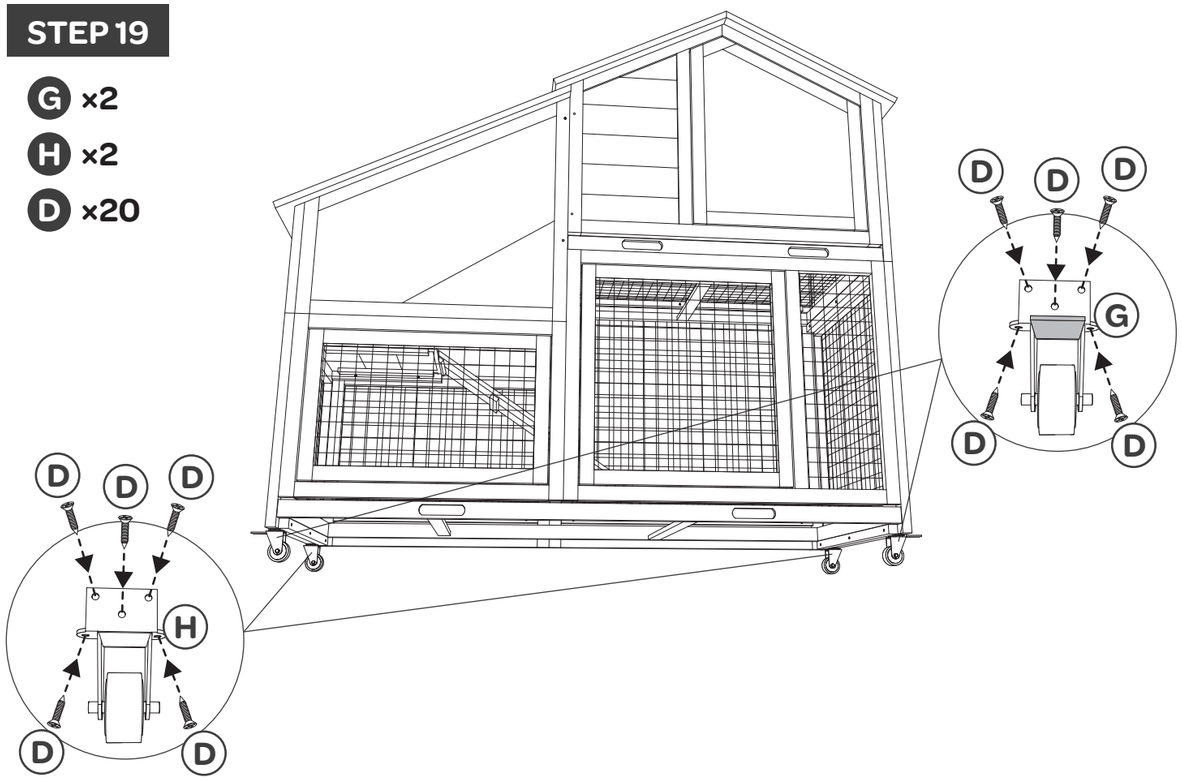


1. Attach 2 pcs of G brake casters on the bottom of the front side with 10 pcs of D screws.
2. Attach 2 pcs of H casters without brake on the bottom of the back side with 10 pcs of D screws.


13

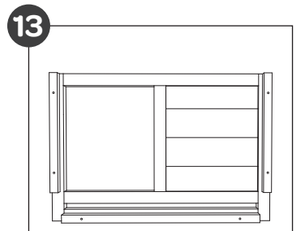
1PC


14

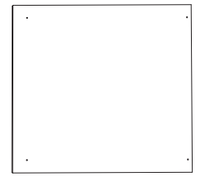
1PC


15

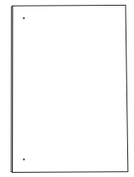
2PCS


16


1PC


17


1PC

18


1PC


19


1PC


20


1PC

21

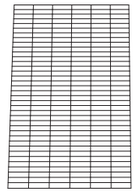
2PCS

22

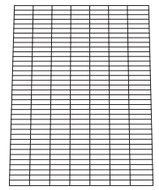
3PCS


23

1PC

HARDWARE LIST

A

M3.5*50


21PCS


B

M3.5*40


22PCS


C

M3.5*30


16PCS


D

M3.0*18



40PCS

E

M6.0*20


23PCS


F


3PCS

G


2PCS


H


2PCS

ASSEMBLY

STEP 1


1 ×1
2 ×1
A ×3

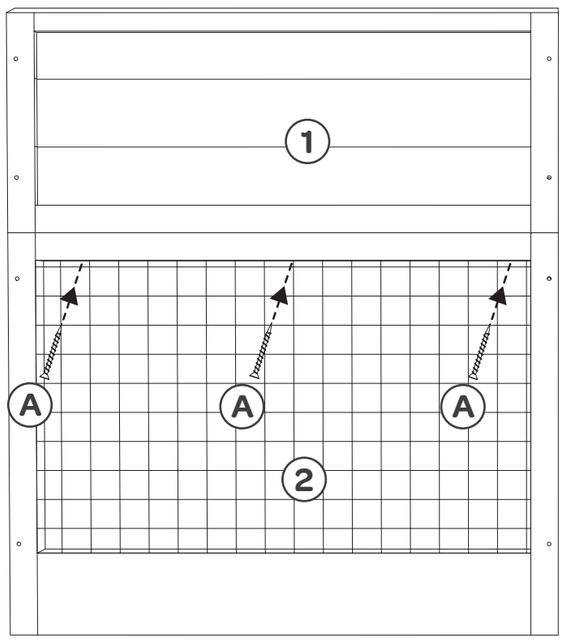

Attach the part 1 and 2 with 3 pcs of A screws.
(Note: The side of Part 1 with 4 screw holes is facing upwards.)

STEP 2


3 ×1
4 ×1
A ×3

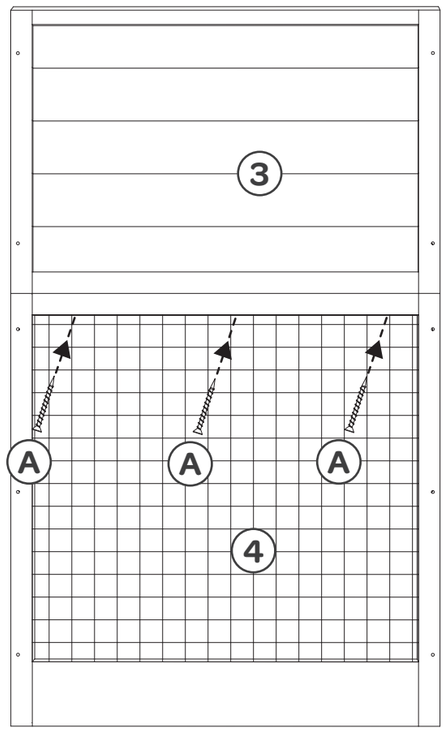


Attach the part 3 and 4 with 3 pcs of A screws.

STEP 17

14 ×1
15 ×2
C ×12

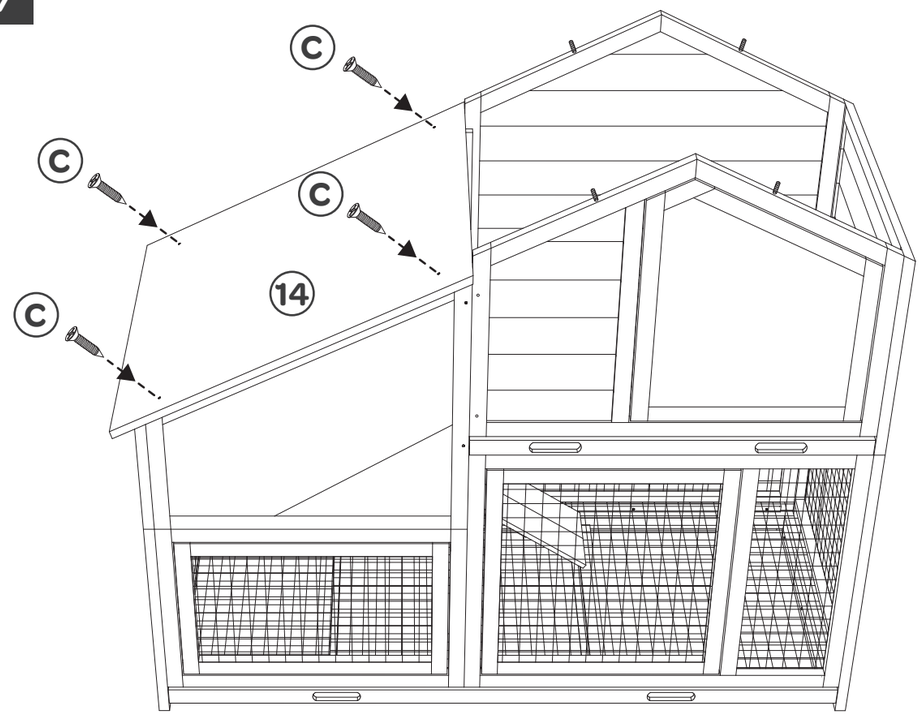


Attach roof part 14 with 4 pcs of C screws.

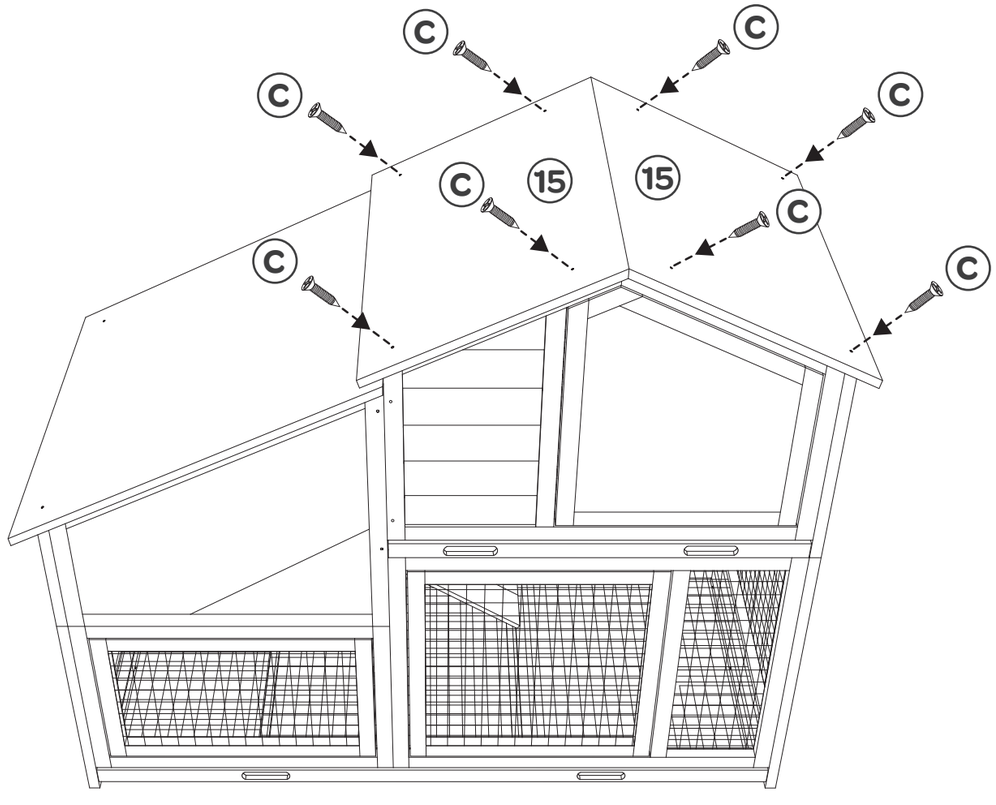

Attach roof part 15 with 8 pcs of C screws.

STEP 15


19 ×1
21 ×2
E ×6

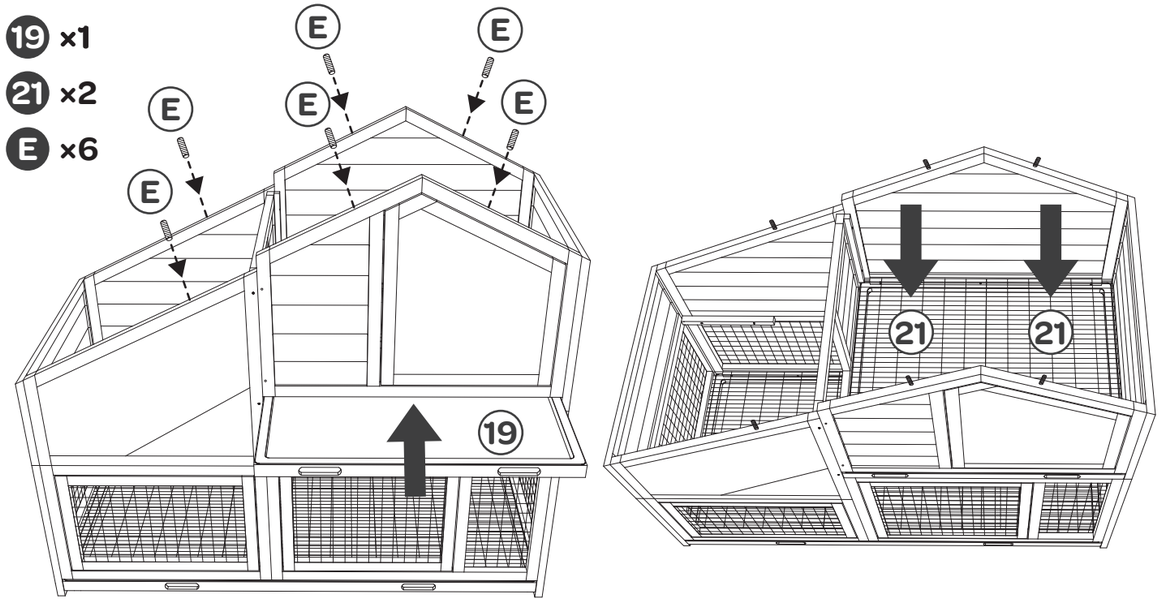

1. Slide in the tray 19.
2. Place the part 21 into the main body.

STEP 16


16 ×1
17 ×1
18 ×1
D ×8

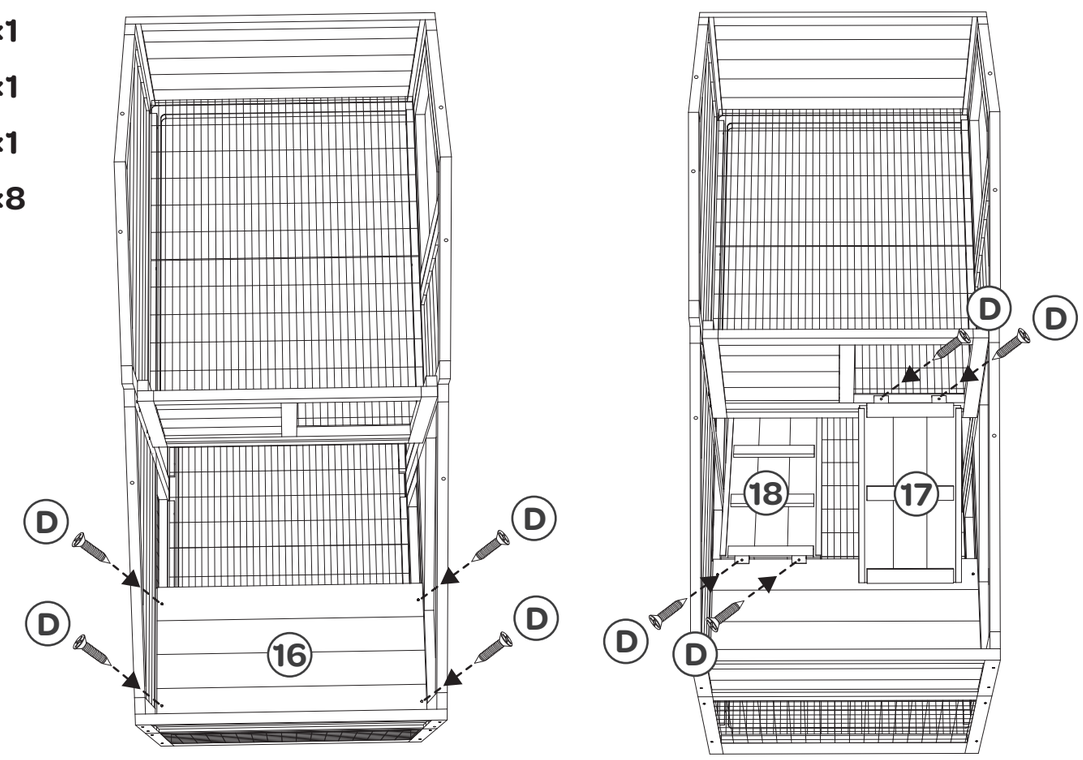

1. Attach the part 16 to the panel with 4 pcs of D screws.
2. Put the ramp 17 and 18 inside and fix with 4 pcs of D screws.

STEP 3


5 ×1
6 ×1
A ×3

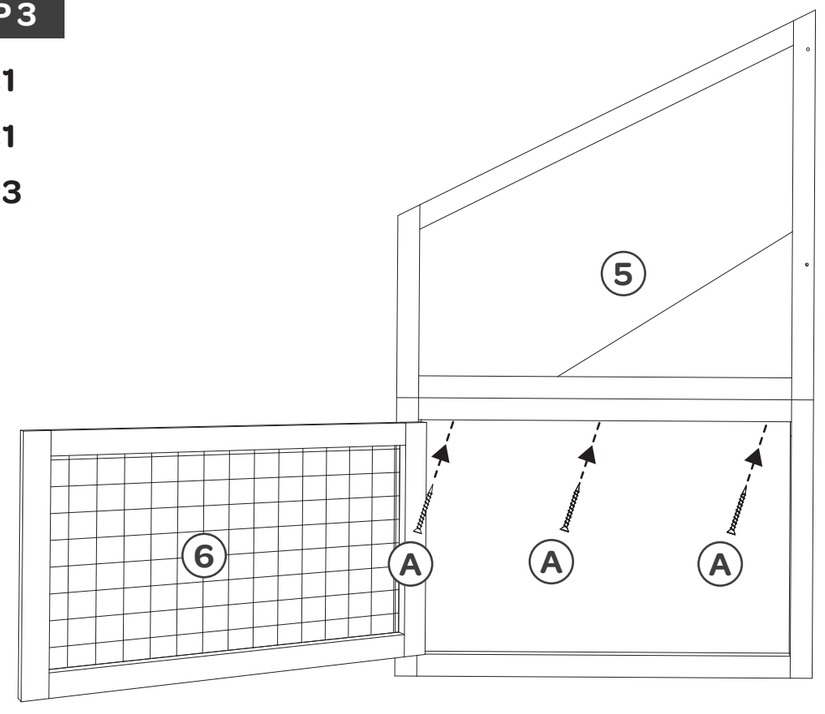

Attach the part 5 and 6 with 3 pcs of A screws.
(Note: Please remove the protective film from the part 5.)

STEP 4


8 ×1
A ×3

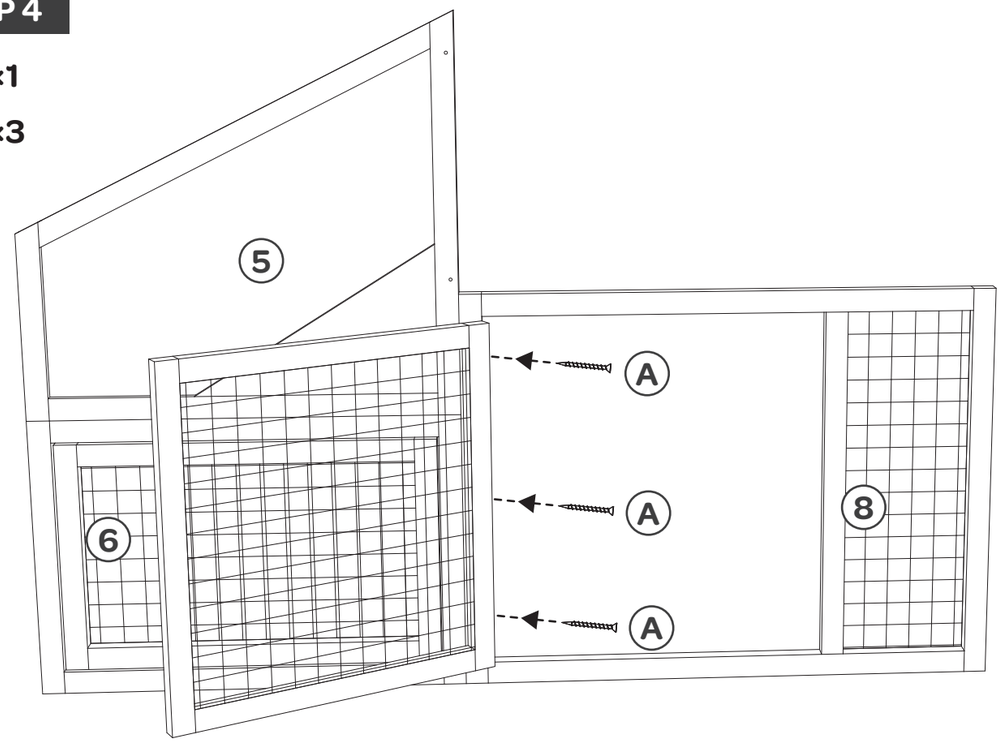

Attach the part 8 to the part 5 and 6 with 3 pcs of A screws.

STEP 5


- 11 ×1
- 12 ×1
- A ×3

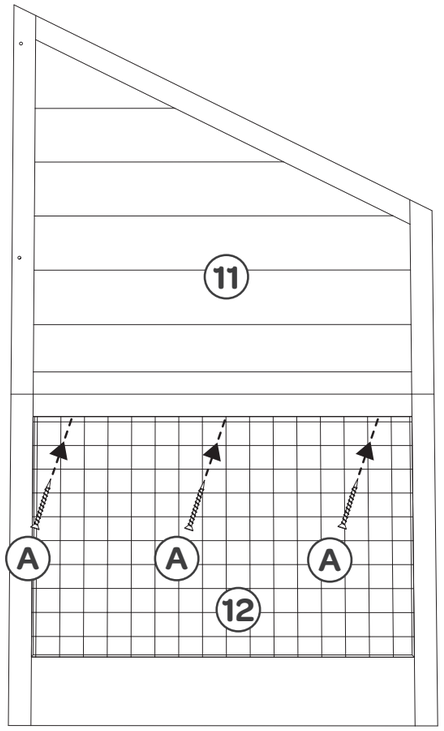

Attach the part 11 and 12 with 3 pcs of A screws.

STEP 6


- 9 ×1
- 10 ×1
- A ×3

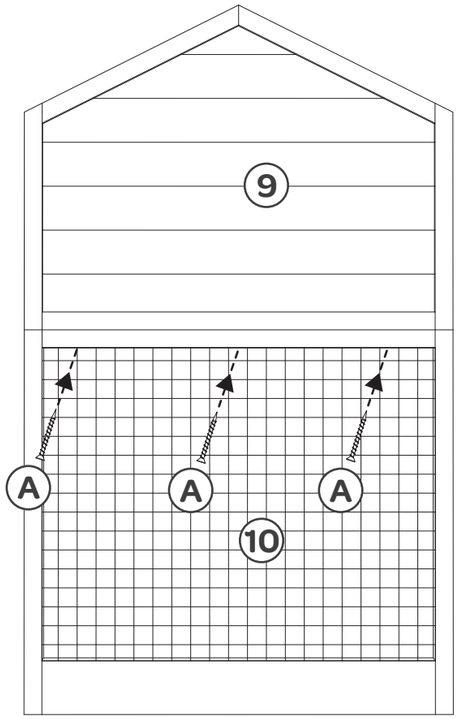


Attach the part 9 and 10 with 3 pcs of A screws.

STEP 14

- 13 ×1
- B ×4
- C ×4
- E ×4

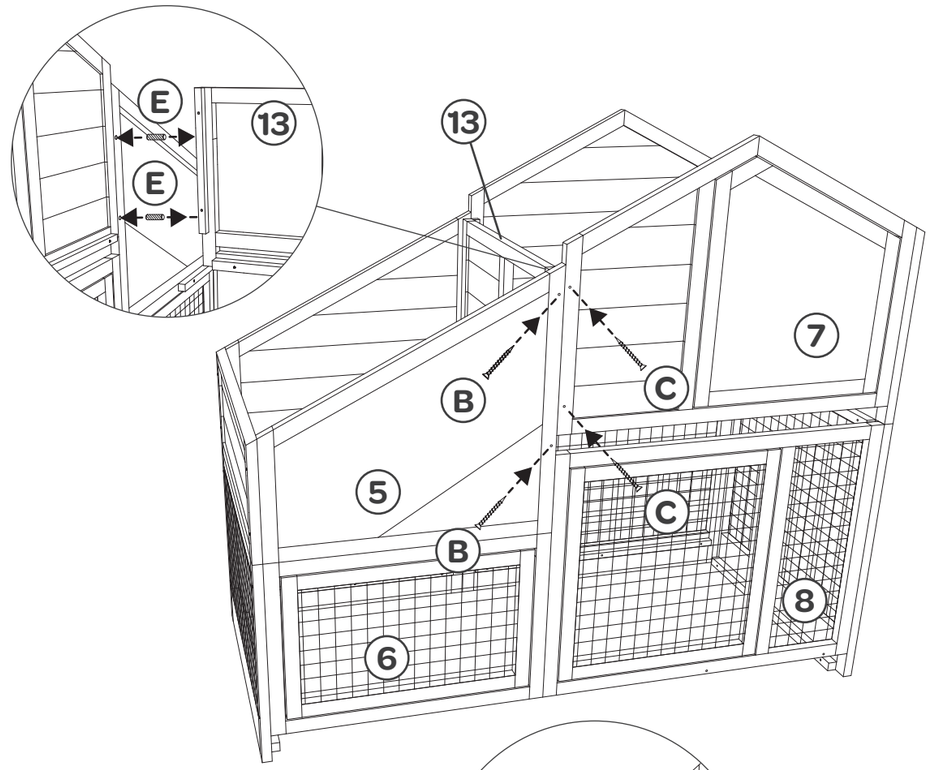


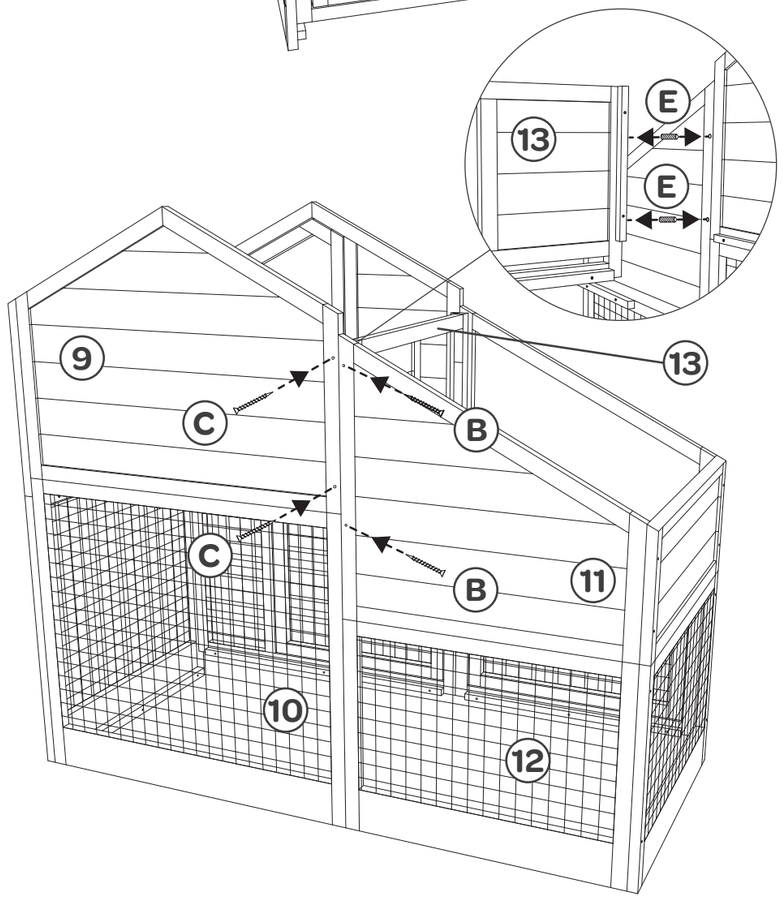

1. Insert 4 pcs of E wood cores into the side of part 13 and place the part 13 inside.
2. Attach the part 13 to the both panels with 4 pcs of B screws and 4 pcs of C screws.

STEP 12


20 ×1

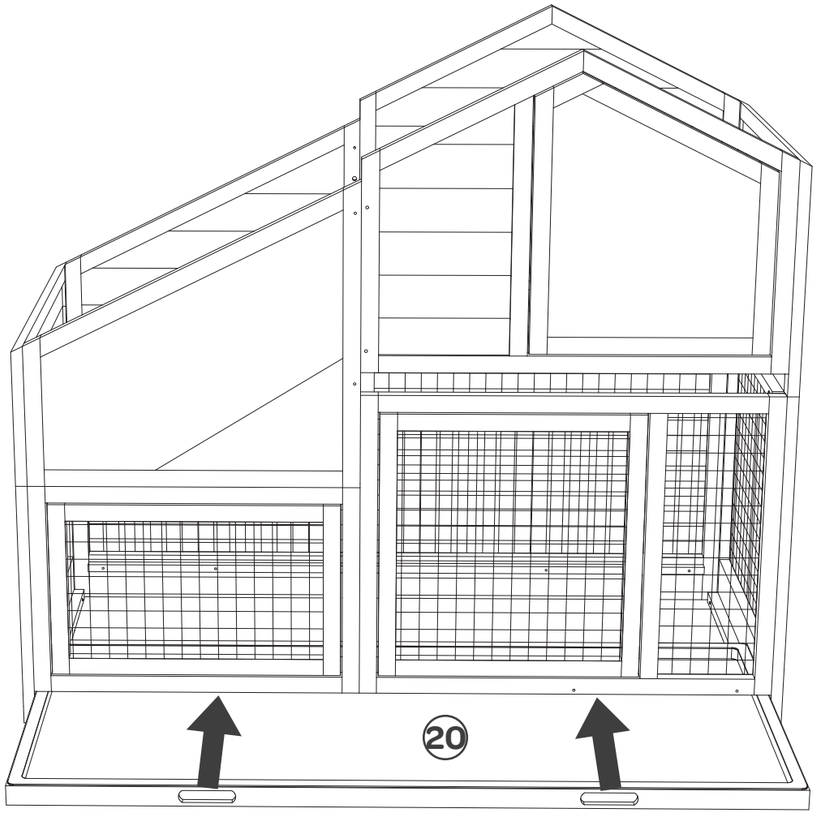

Slide in the tray 20.

STEP 13


22 ×3

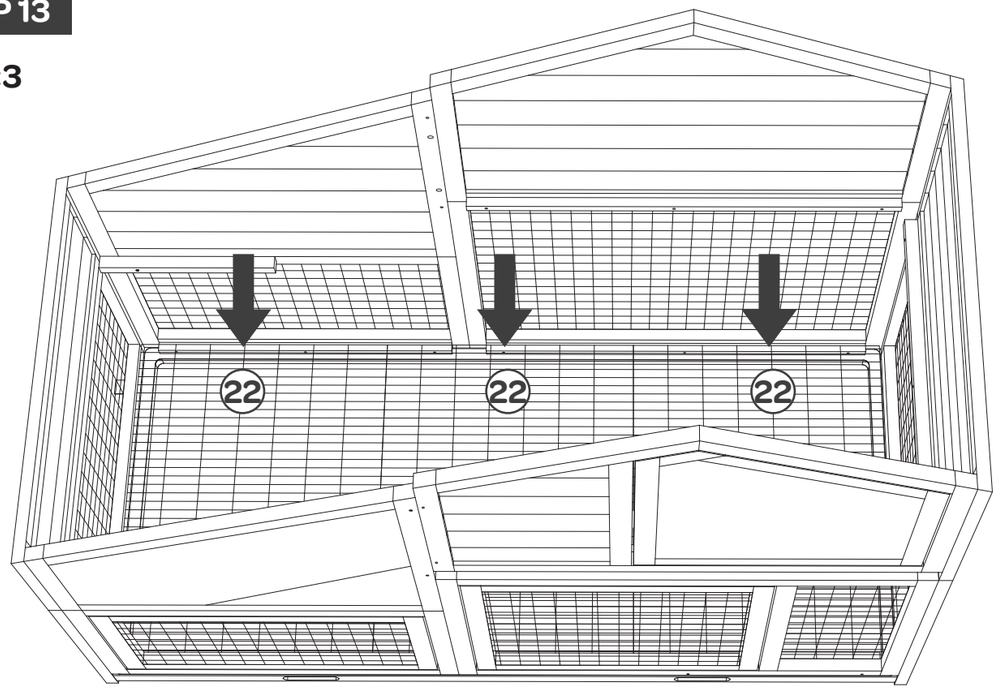

Place the part 22 into the main body.

STEP 7

A ×3

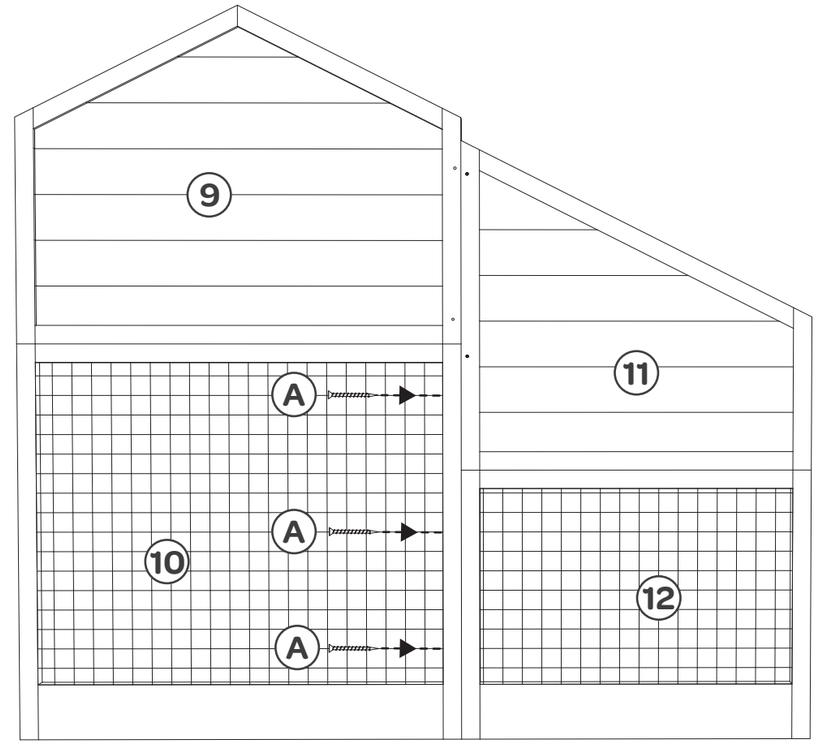


Attach the part 10 to the part 11 and 12 with 3 pcs of A screws.

STEP 8

B ×4

E ×2

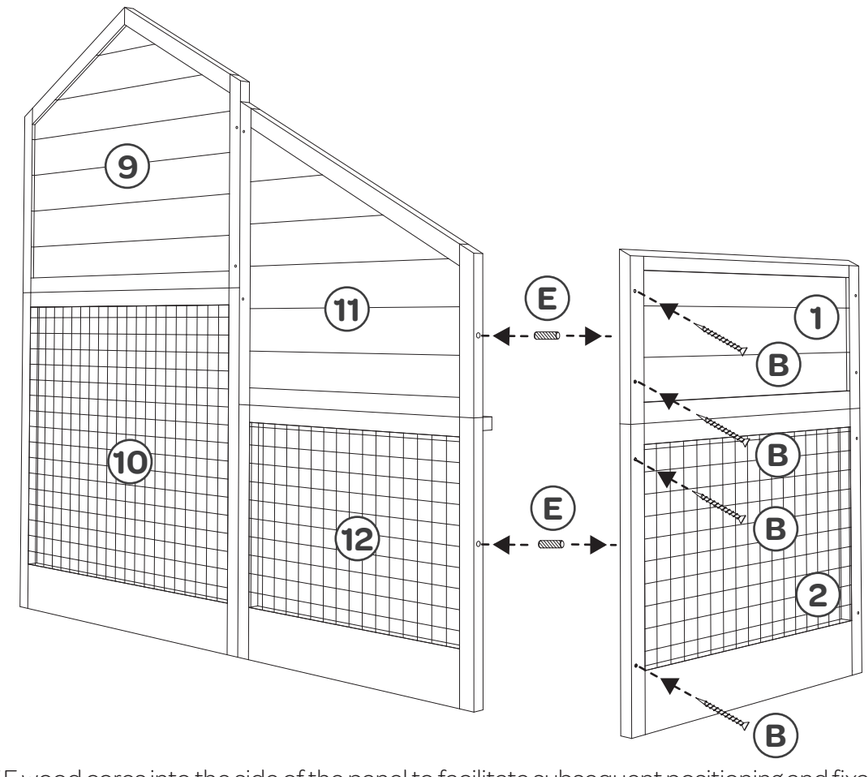


1. Insert 2 pcs of E wood cores into the side of the panel to facilitate subsequent positioning and fixation.
2. Attach the part 1 and 2 to the part 11 and 12 with 4 pcs of B screws.

STEP 9

B ×4

E ×2

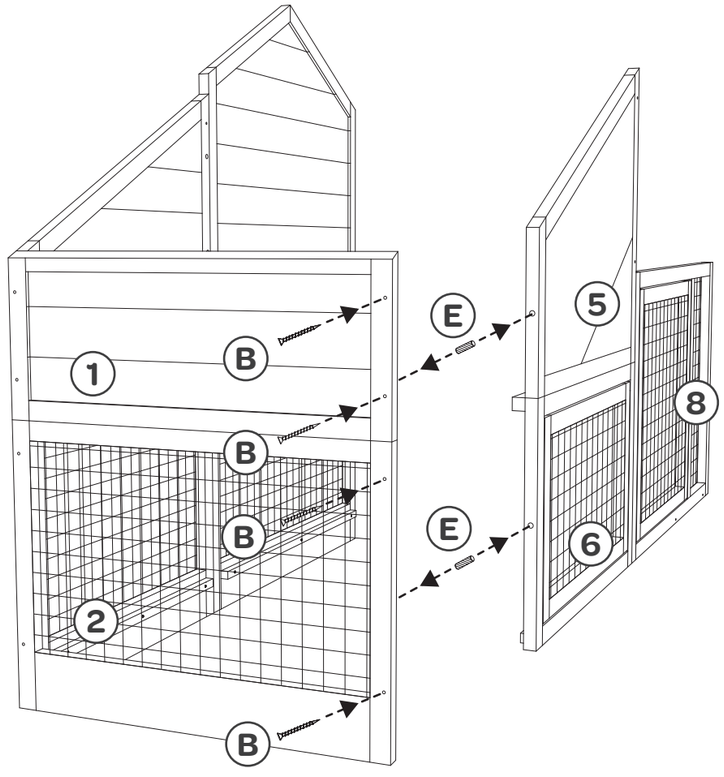


1. Insert 2 pcs of E wood cores into the side of the panel to facilitate subsequent positioning and fixation.
2. Attach the part 1 and 2 to the part 5 and 6 with 4 pcs of B screws.


STEP 10

B ×8

E ×6

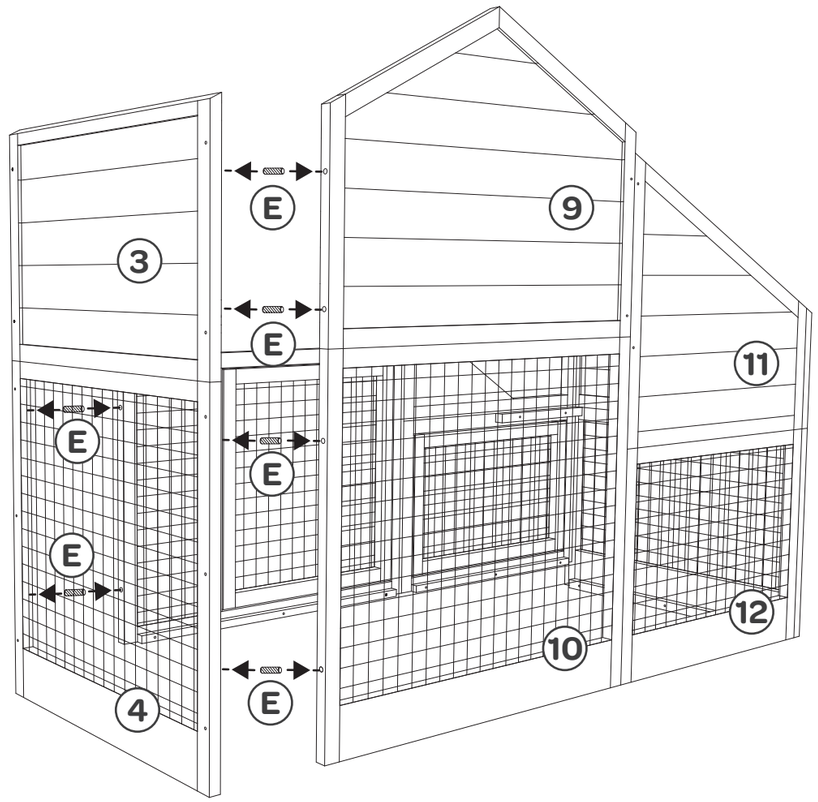

Insert 6 pcs of E wood cores into the side of the part 3 and 4.

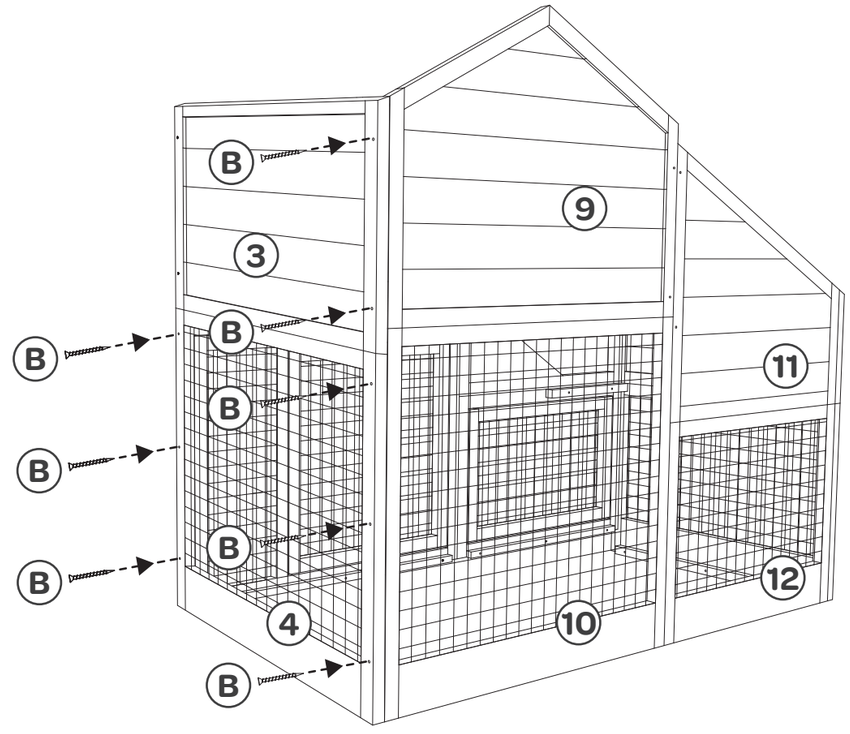


1. Attach the part 3 and 4 to the part 9 and 10 with 5 pcs of B screws.
2. Attach the part 3 and 4 to the part 8 with 3 pcs of B screws.

STEP 11

B ×2

E ×3

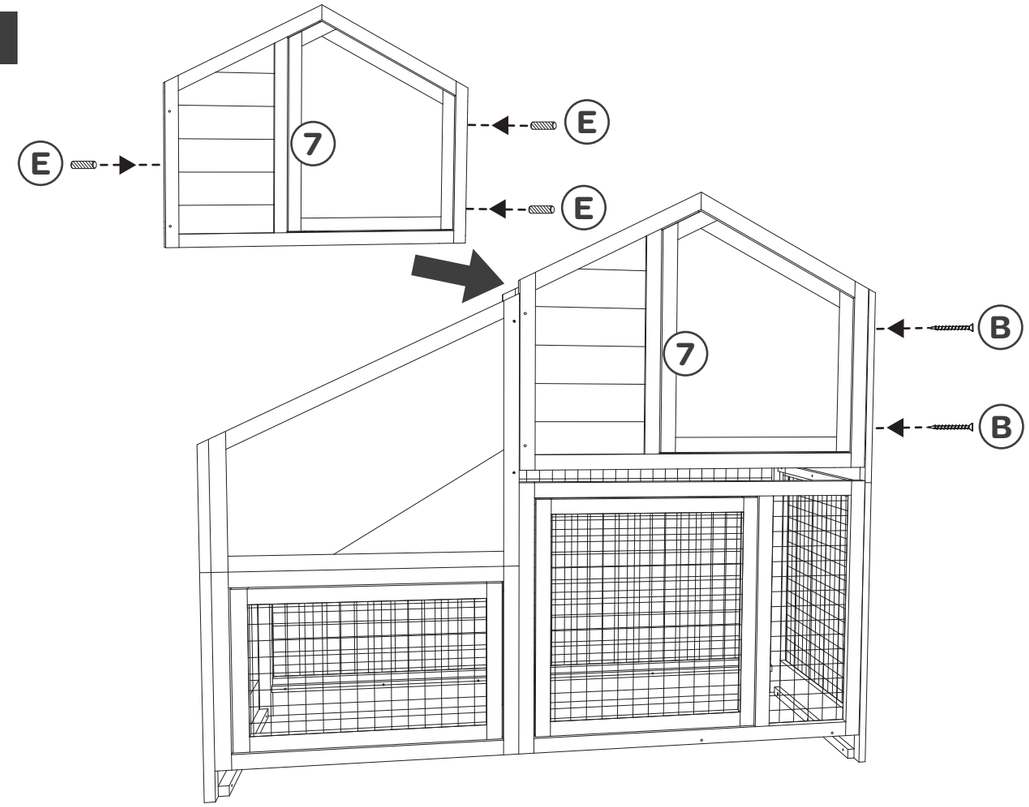

1. Insert 3 pcs of E wood cores into the side of the part 7.
2. Attach the part 3 and 4 to the part 7 with 2 pcs of B screws.

(Note: When fixing the part 7, please ensure that the screw holes are properly aligned.)