



Assembly Instruction


MB2301K

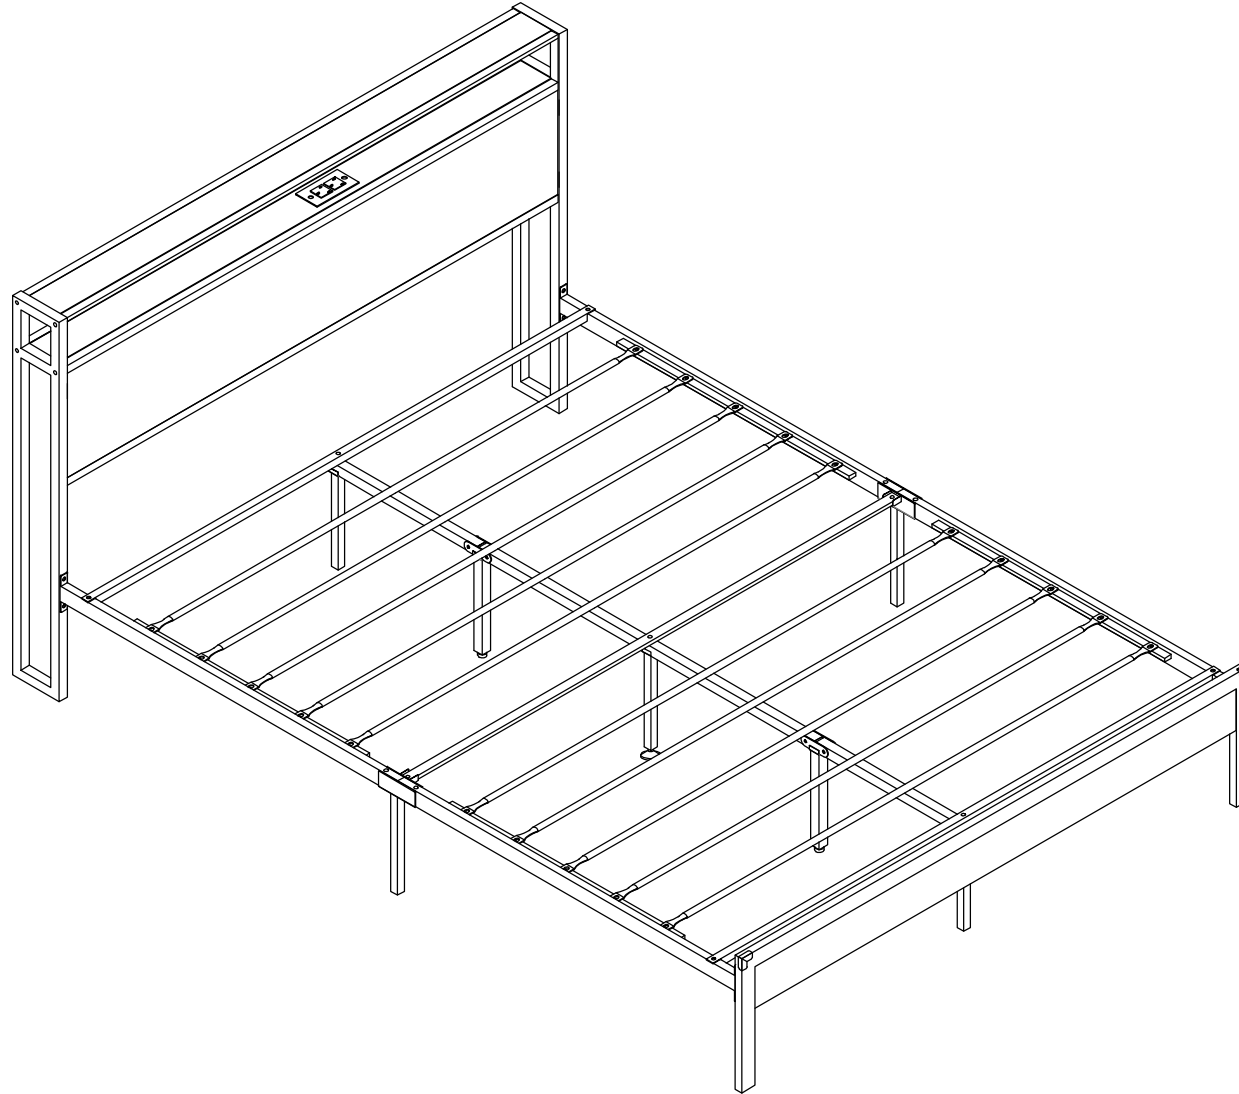

Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

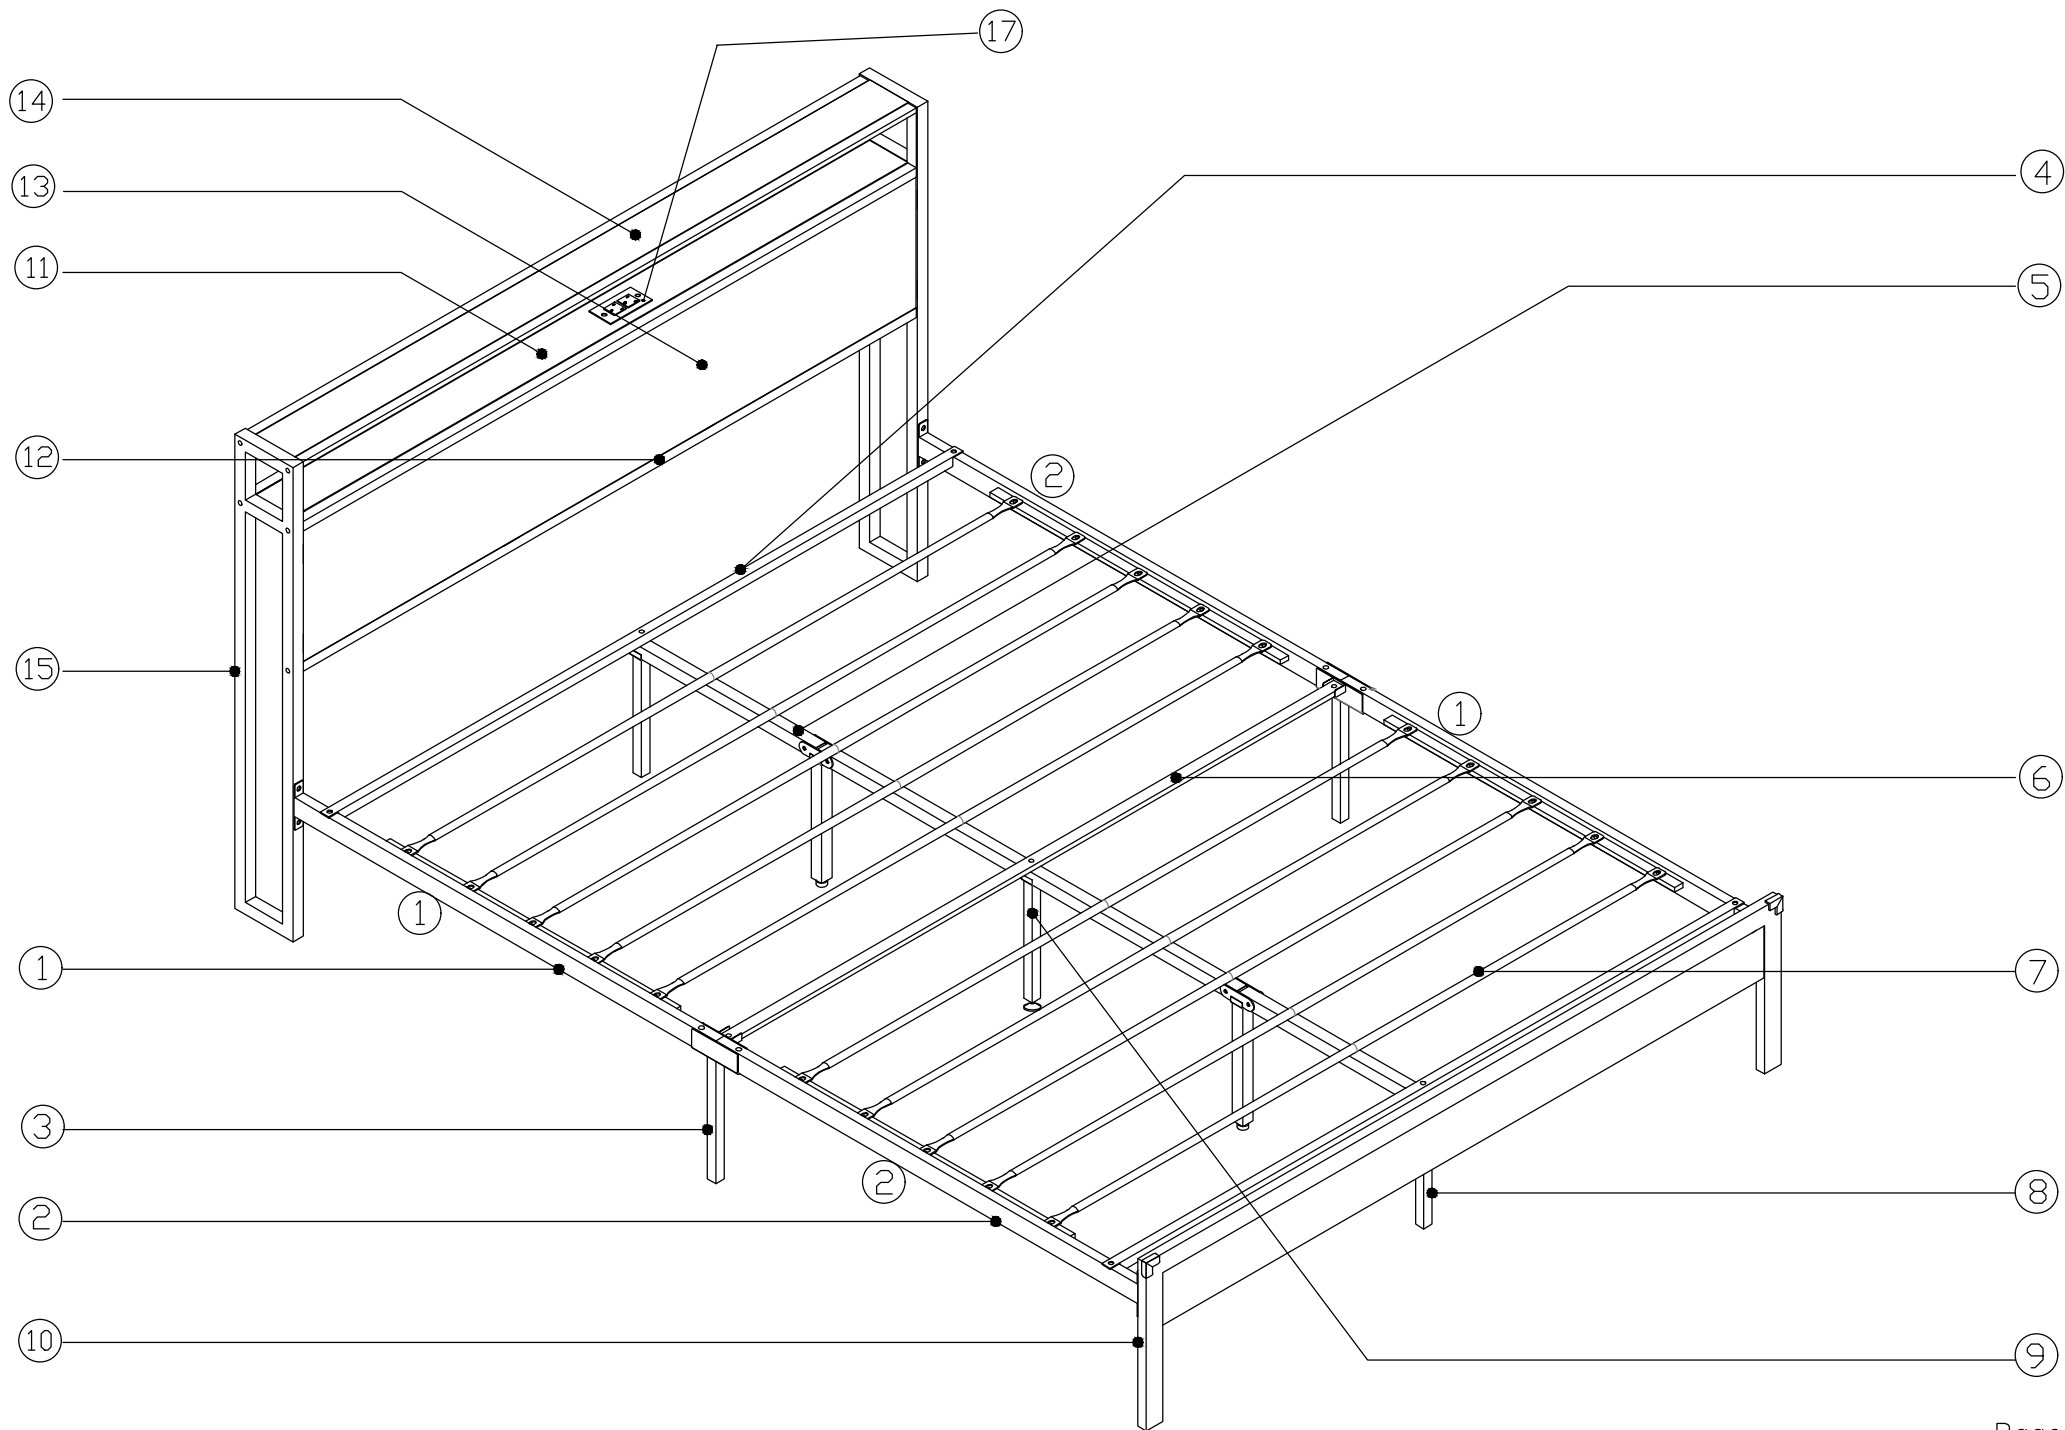

Hardware arts

							
M6*15	M6*45	M6*10	M8*20	M8*55	M4*16	4#	5#
(A) 20PCS	(B) 10PCS	(C) 8PCS	(D) 14PCS	(E) 7PCS	(F) 2PCS	(G) 1PC	(H) 1PC

Part list

① 2PCS ② 2PCS ③ 2PCS ④ 2PCS ⑤ 1 PC ⑥ 1PC ⑦ 10PCS ⑧ 2PCS ⑨ 1PC

⑩ 1PC ⑪ 1PC ⑫ 1PC ⑬ 1PC ⑭ 1PC ⑮ 2PCS ⑯ 2PCS ⑰ 1PC

Crash pads


Step: 1

M6*45 (B) X6PCS

(G) X 1PC
4#

M4*16 (F) X2PCS


(H) X 1PC
5#

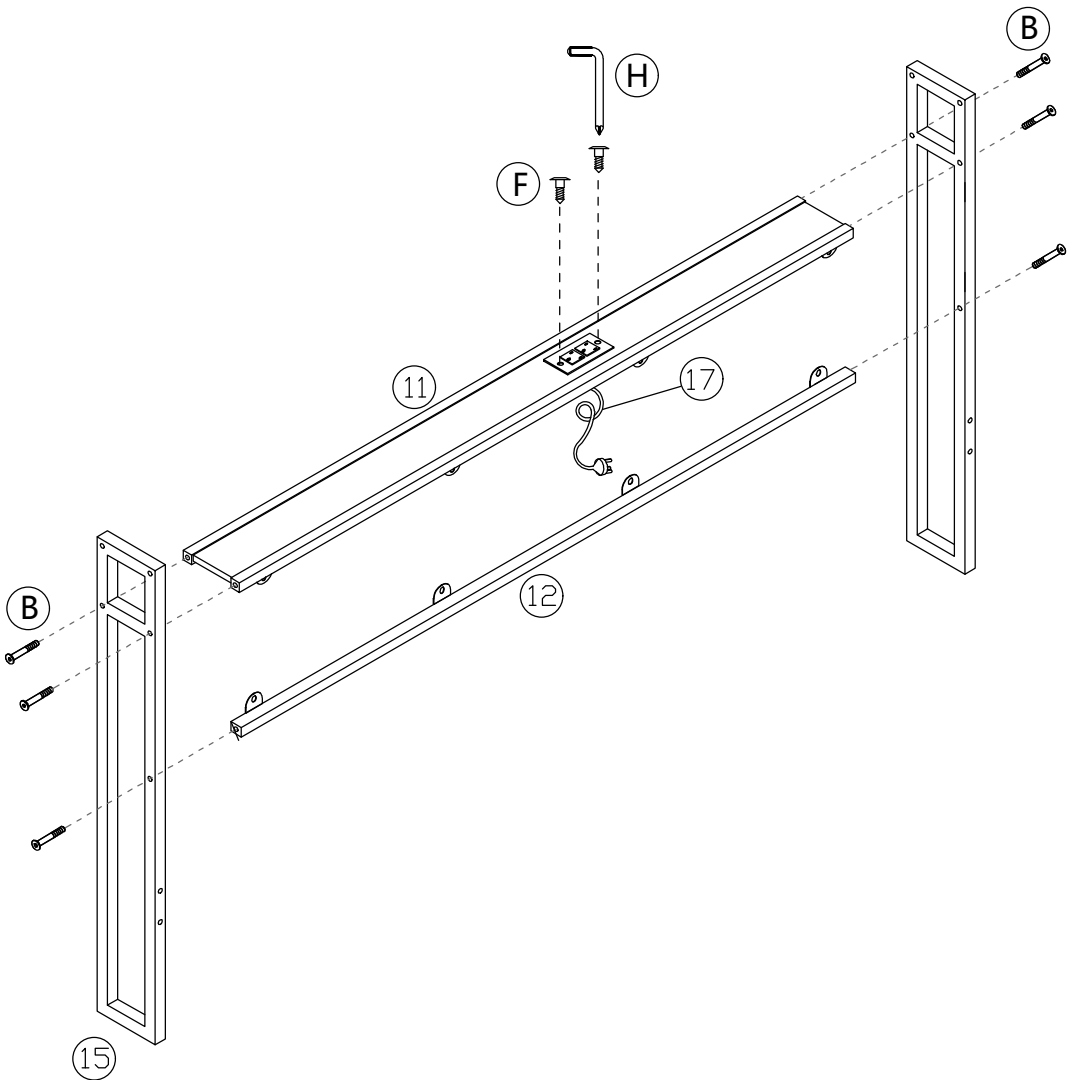


Step: 2


M6*10 (C) X 8PCS


(H) X 1PC
5#

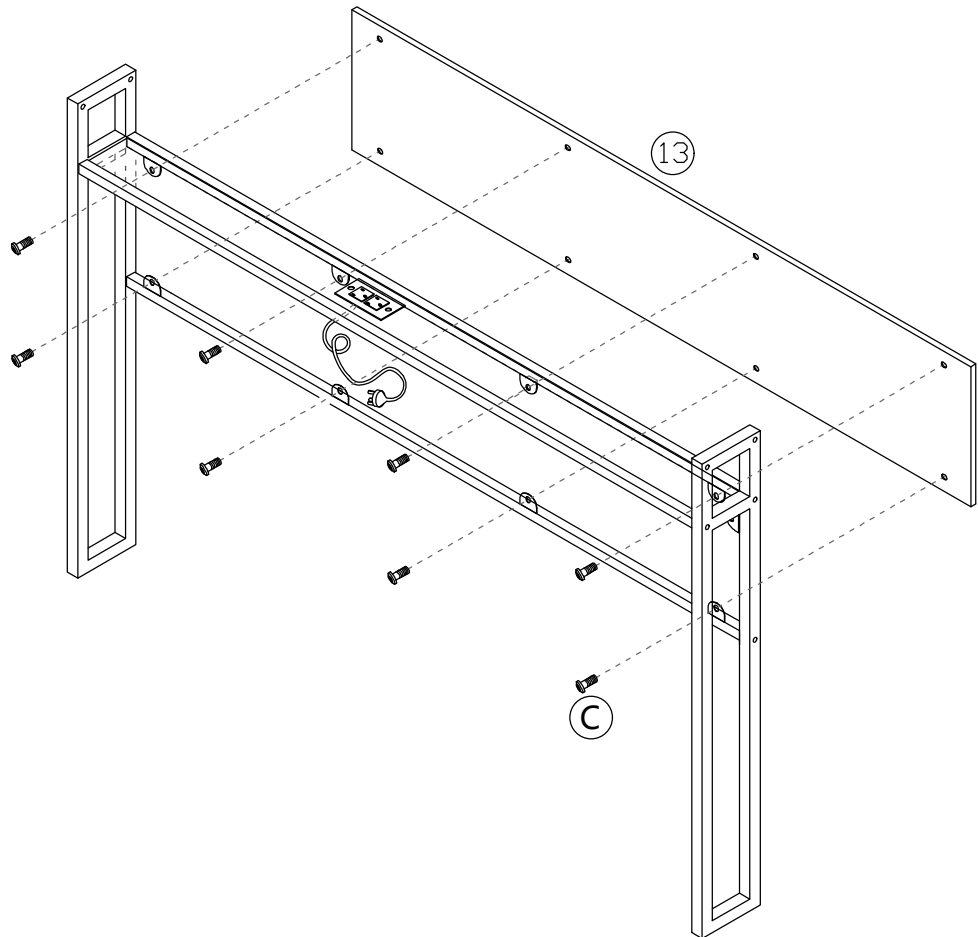


Step: 3

 **B** X4PCS
M6*45

 **G** X 1PC
4#

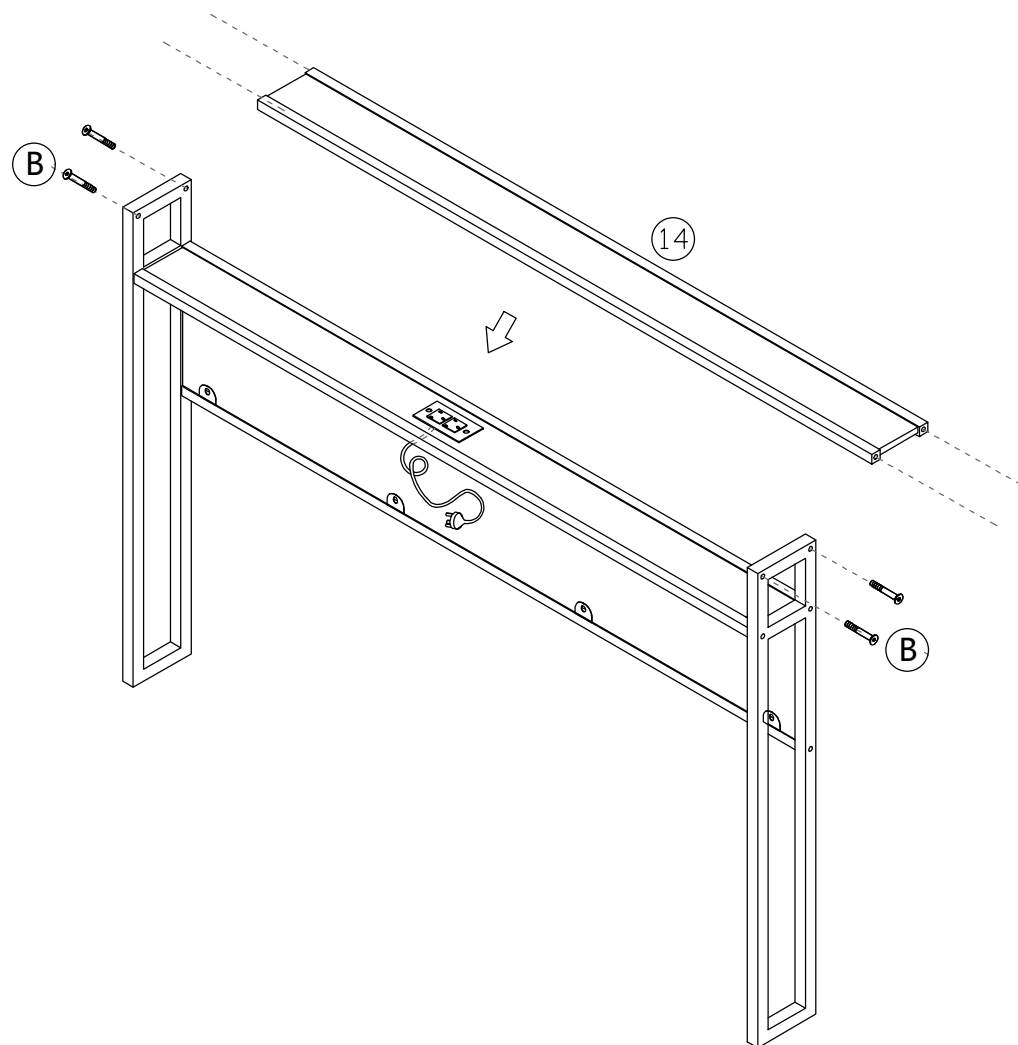


Step: 4

 **E** X 4PCS
M8*55

 **H** X 1PC
5#

Please pay attention to the direction arrow in the illustration to avoid reverse installation

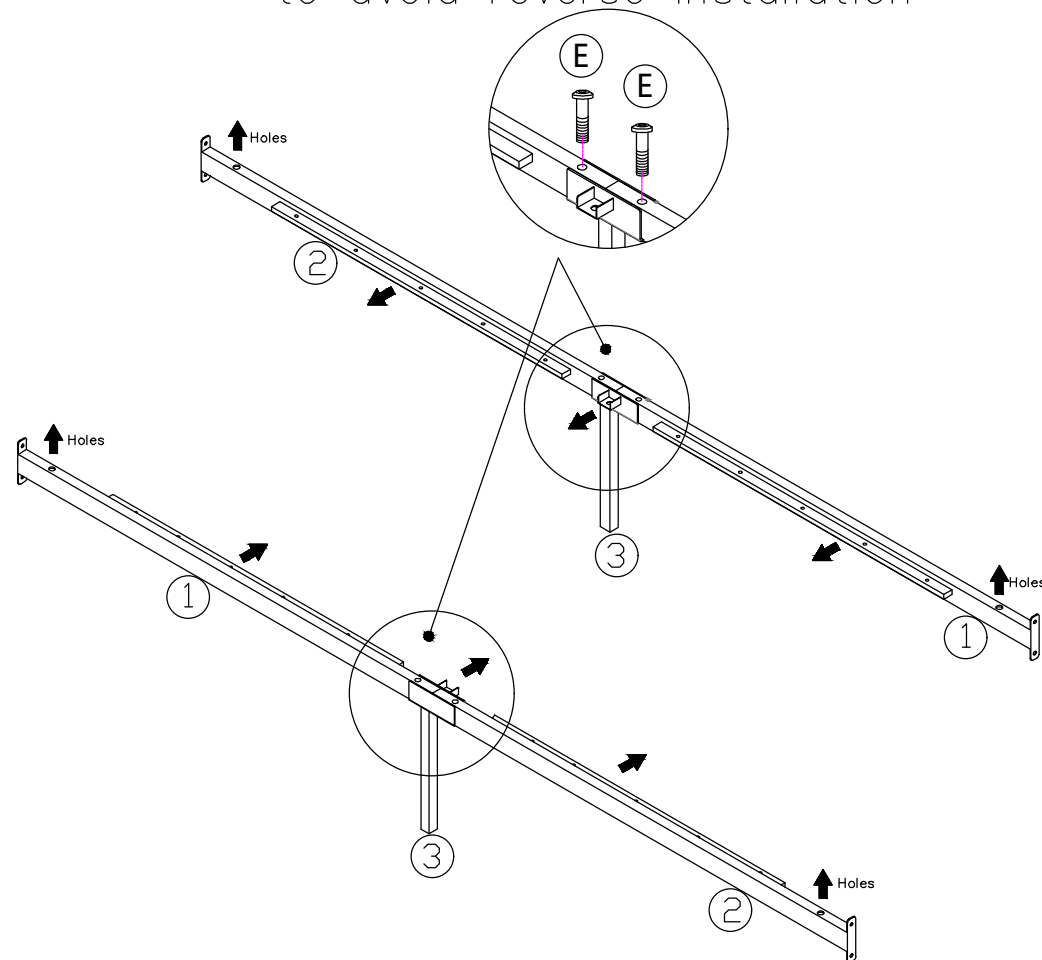

Step: 5



M8*20

D


X8PCS



5#

G

X 1PC

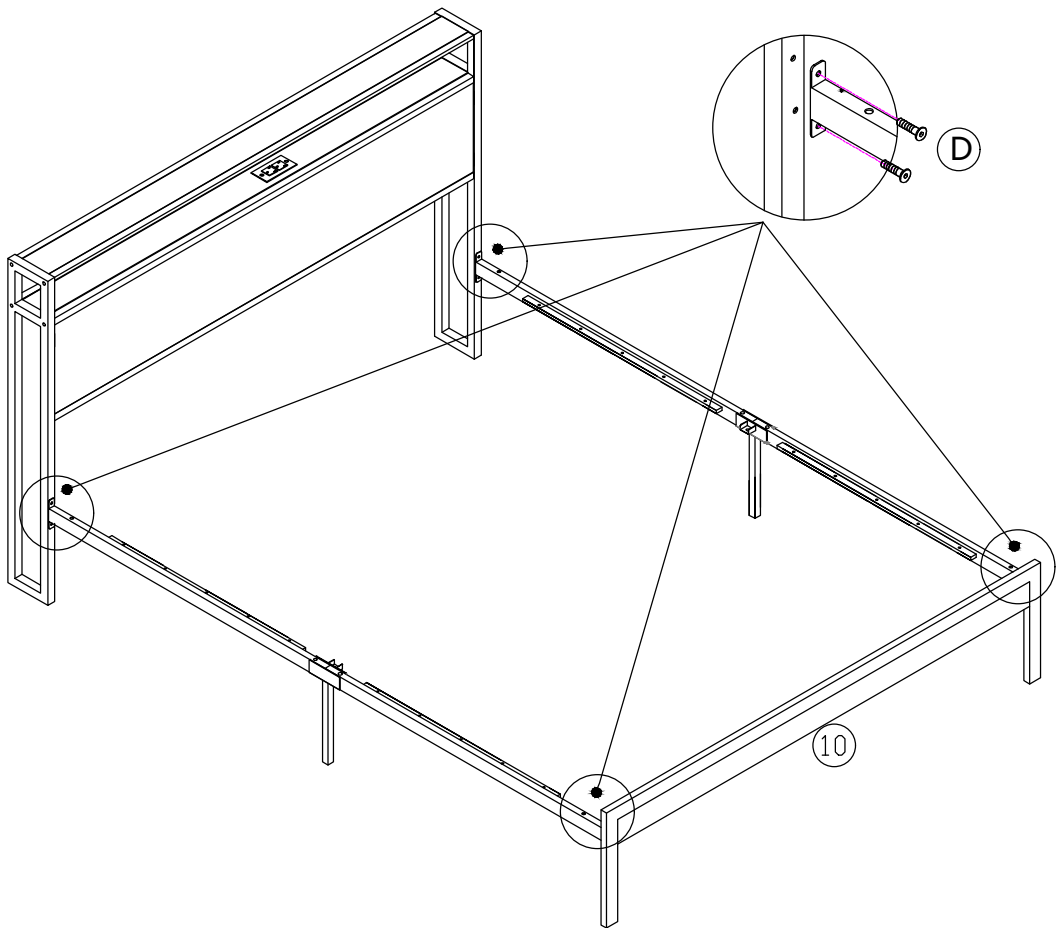

Step: 6



M8*20

D


X6PCS




5#

G


X 1PC

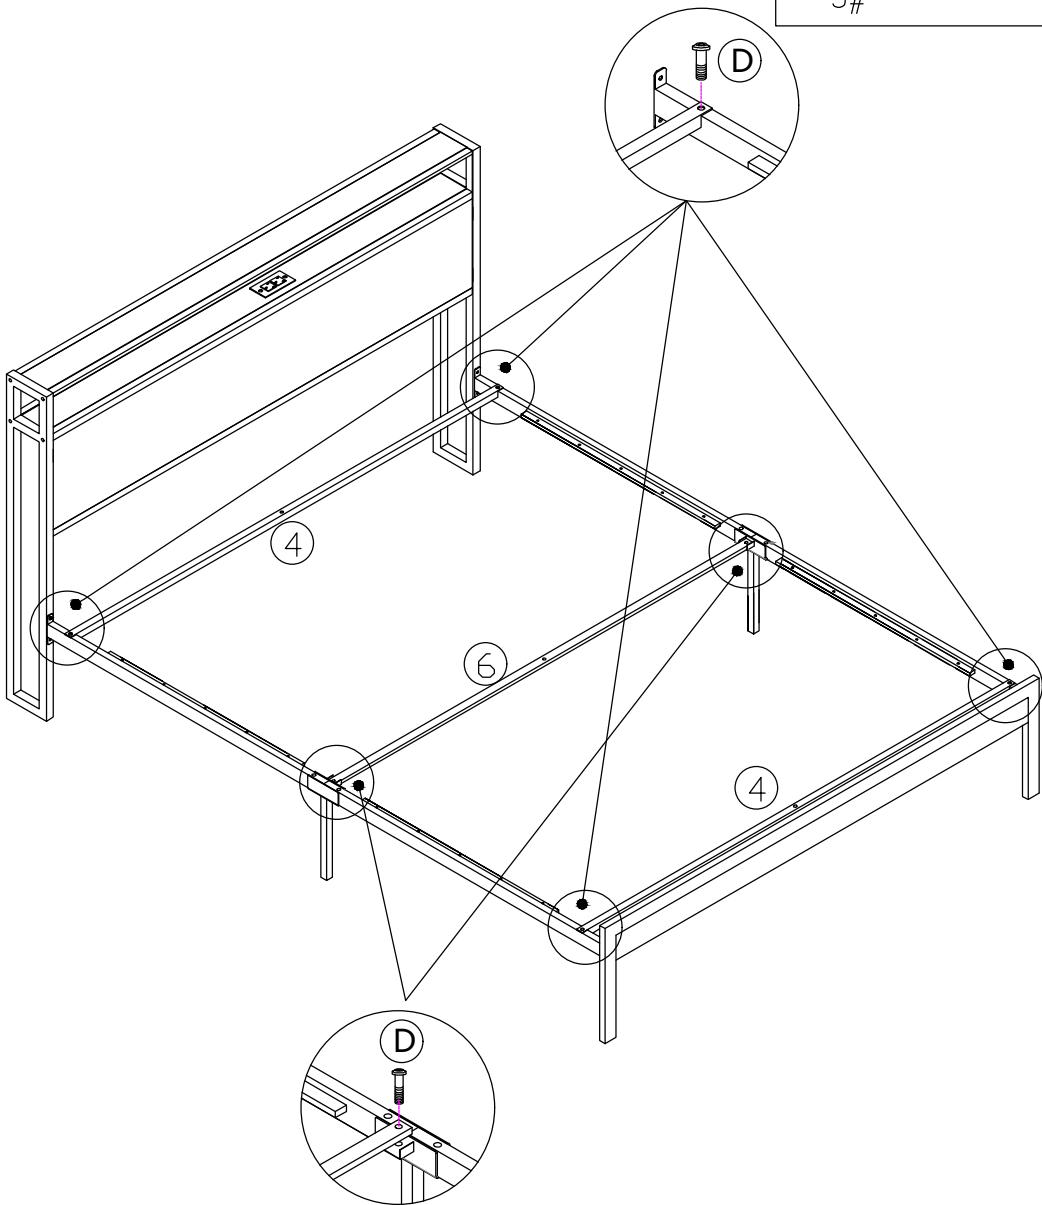

Step: 7

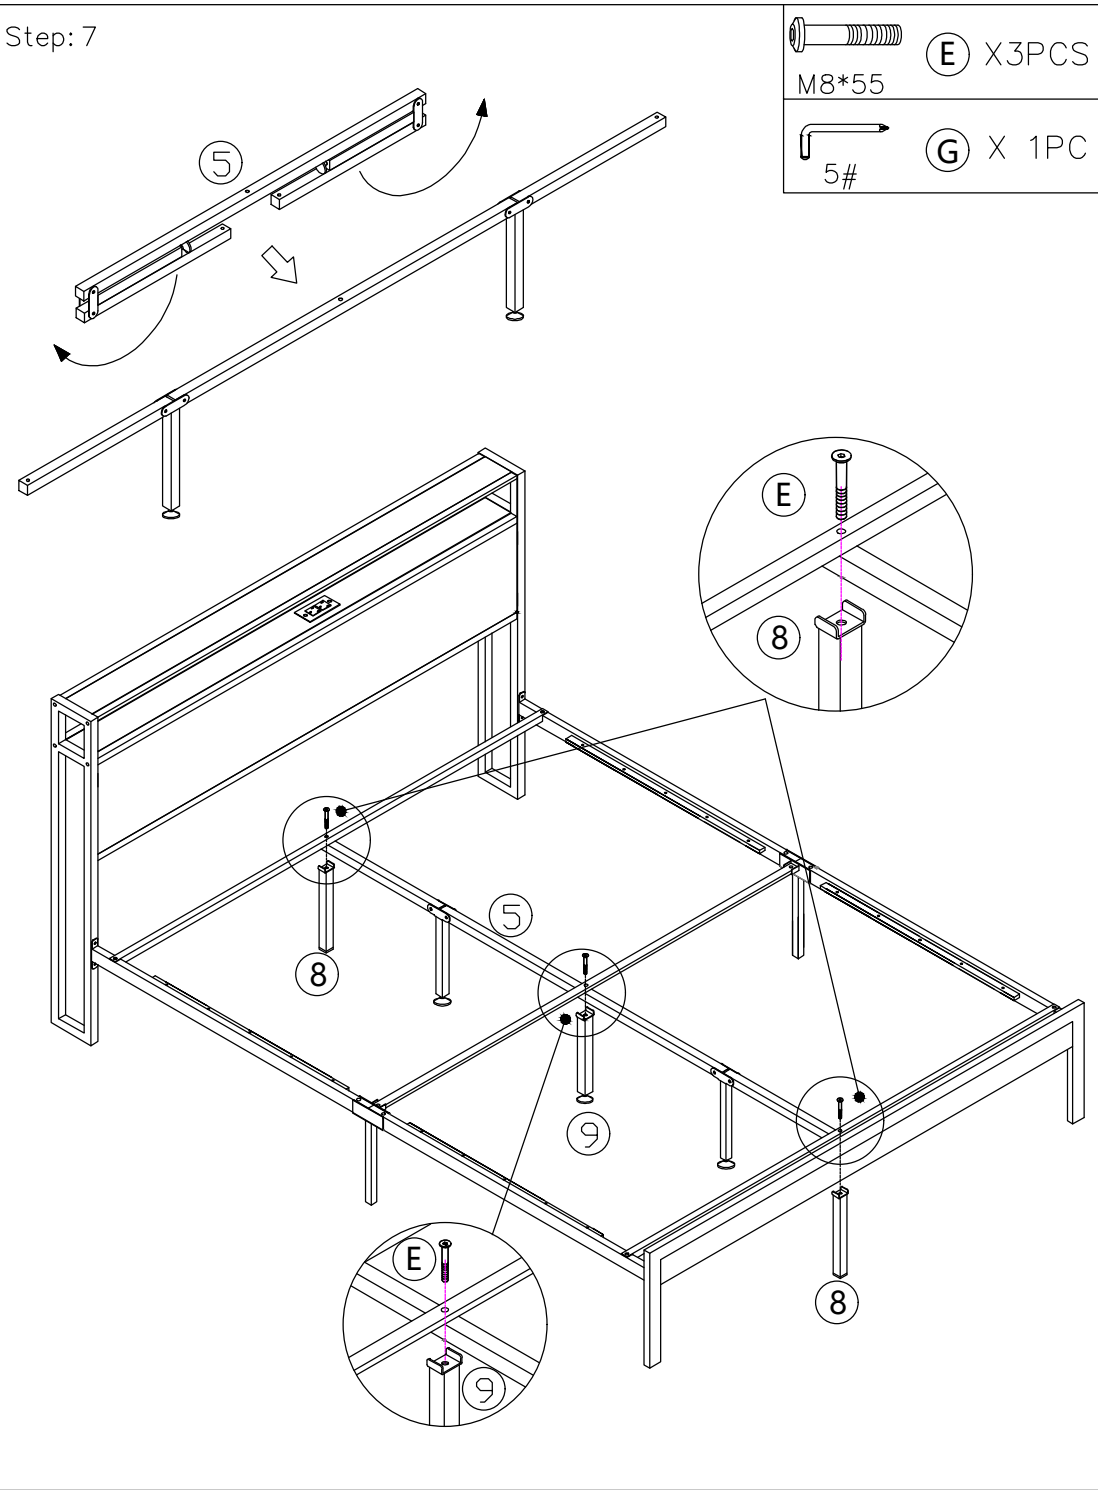


Step: 8

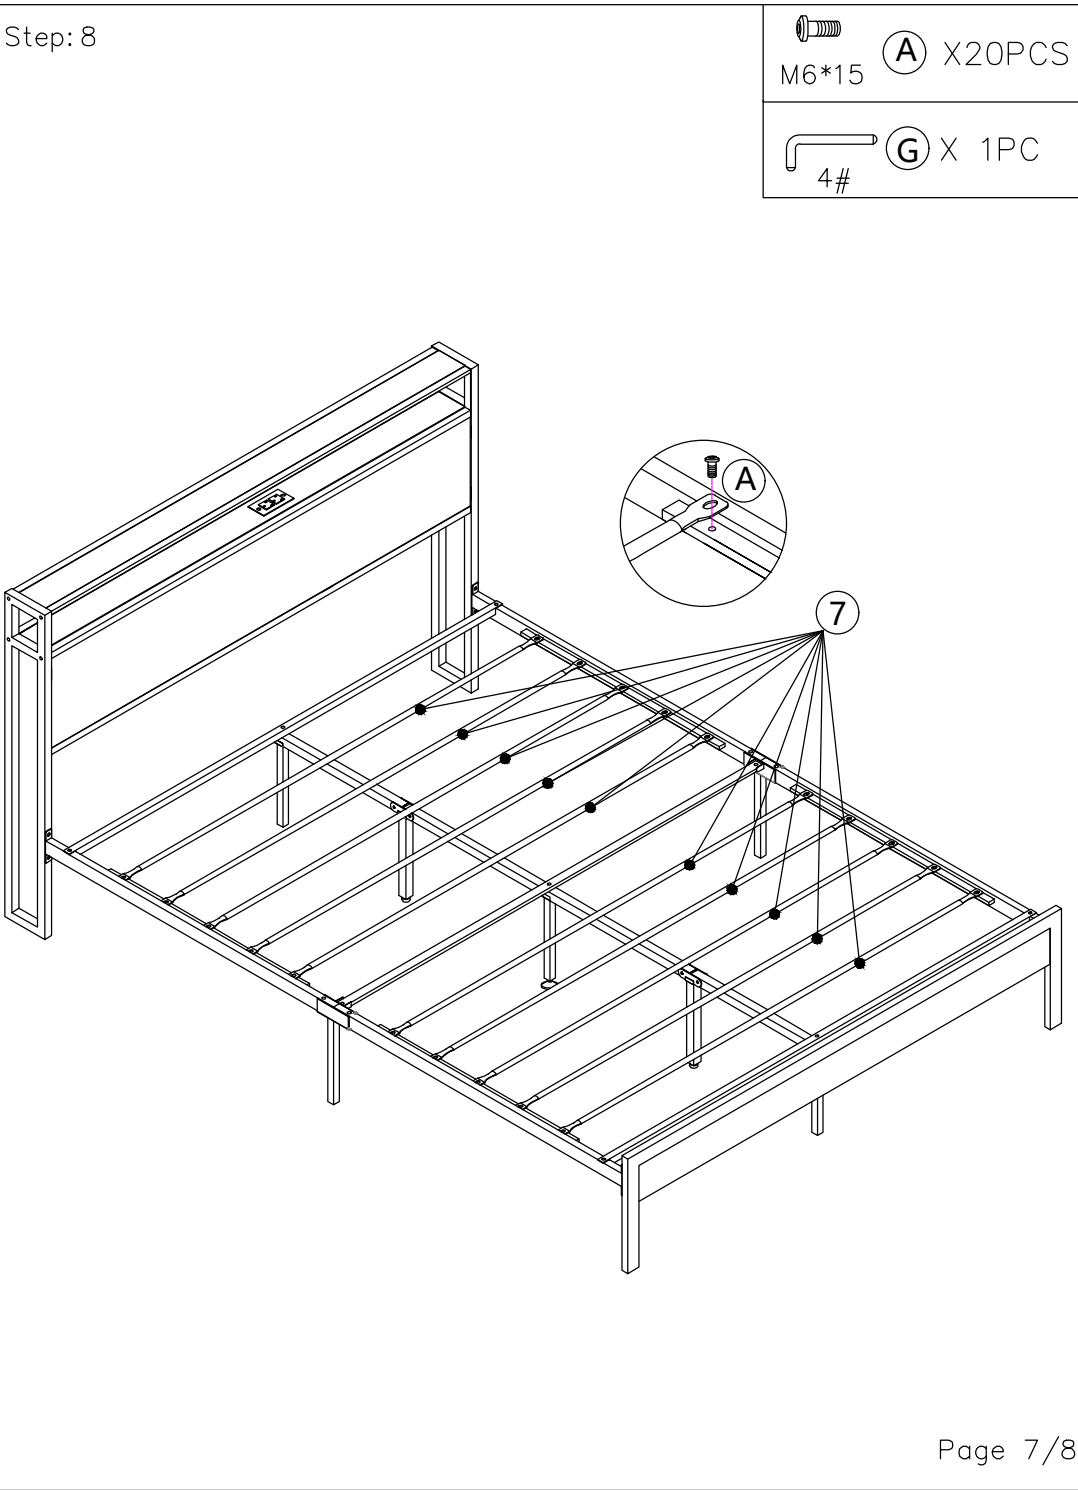


There is a small sealing pocket in the package. There are two crash pads in the sealing pocket. As shown in the figure below.

Crash pads



⑩ 2PCS

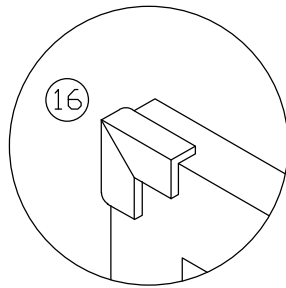

Please tear off the surface anti sticking sheet and stick the anti-collision cushion on it.

